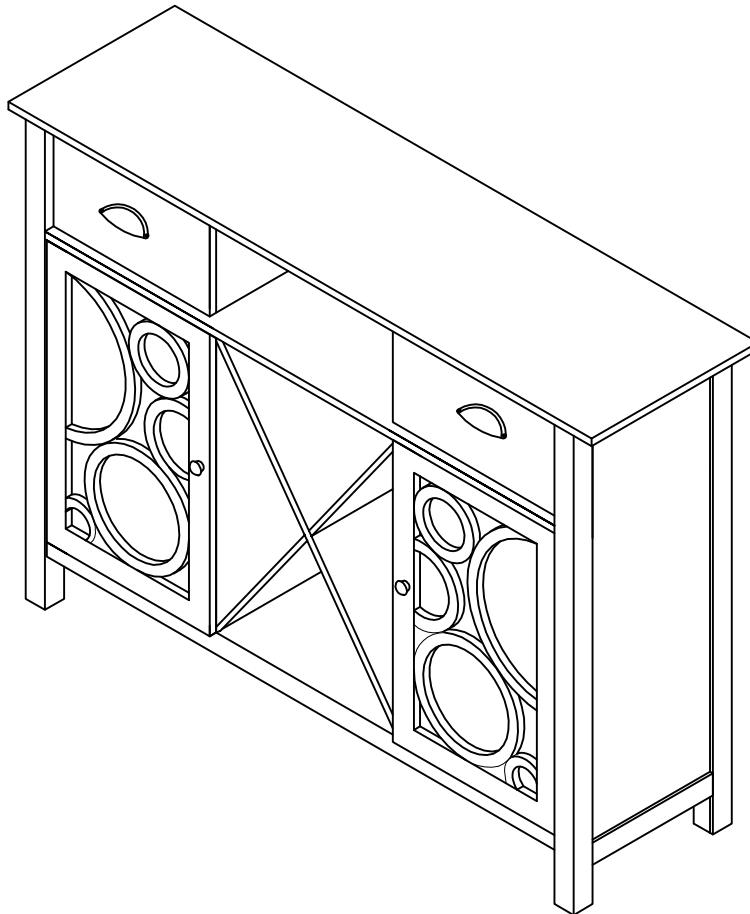


ASSEMBLY INSTRUCTIONS

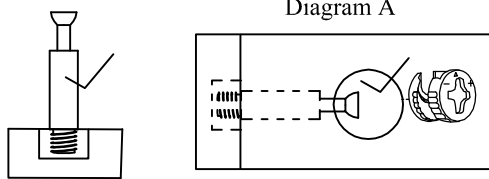
Wine Rack




NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten ,as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


To insert a cam lock: (Please read below instructions before assembling)



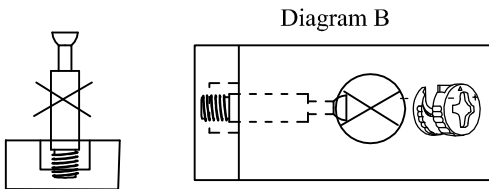
1. Insert cam screw into hole as shown in diagram A .



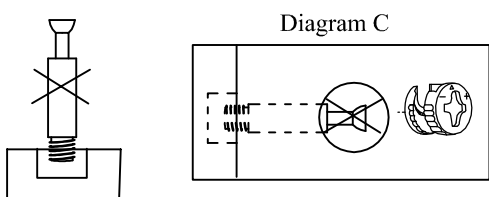
Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.



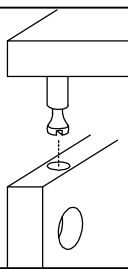
Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.



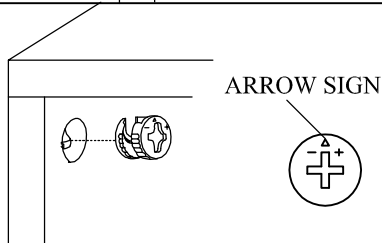2. Connect the panels together.



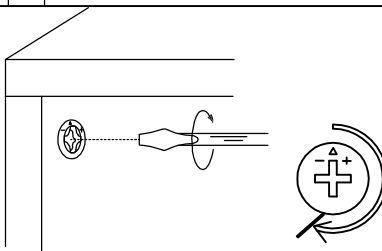3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.



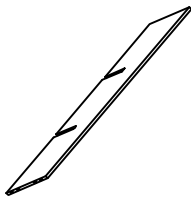
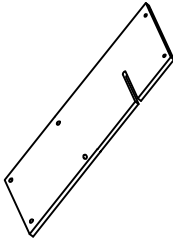
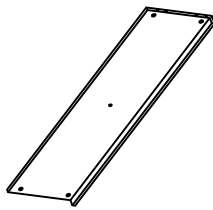
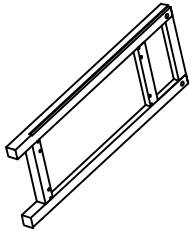
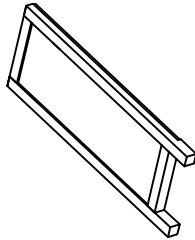
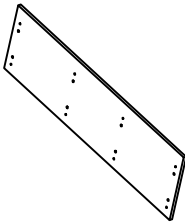
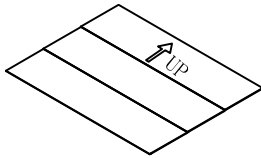
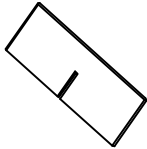









4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.








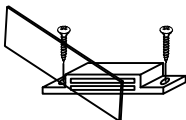




Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

Part List


<p>A1. Quantity of 1</p>  <p>Middle Shelf Panel</p>	<p>A2 (L&R). Quantity of 2</p>  <p>Middle Divider</p>	<p>A3. Quantity of 1</p>  <p>Bottom Panel</p>	<p>A4. Quantity of 1</p>  <p>Right Side Panel</p>
<p>A5. Quantity of 1</p>  <p>Left Side Panel</p>	<p>A6. Quantity of 1</p>  <p>Top Panel</p>	<p>A7. Quantity of 1</p>  <p>Back Panel</p>	<p>A8. Quantity of 2</p>  <p>Cross Shelf</p>
<p>A9. Quantity of 4</p>  <p>Drawer Side Panel</p>	<p>A10. Quantity of 2</p>  <p>Drawer Back Panel</p>	<p>A11. Quantity of 1</p>  <p>Left Drawer Front Panel</p>	<p>A12. Quantity of 1</p>  <p>Right Drawer Front Panel</p>
<p>A13. Quantity of 2</p>  <p>Drawer Bottom Panel</p>	<p>A14. Quantity of 2</p>  <p>Adjustable Shelf</p>	<p>A15. Quantity of 1</p>  <p>Left Door</p>	<p>A16. Quantity of 1</p>  <p>Right Door</p>
<p>A17. Quantity of 1</p>  <p>Support Leg</p>			

Hardware List

<p>B1</p> <p>Quantity of 20</p>  <p>Camlock</p>	<p>B2</p> <p>Quantity of 20</p>  <p>Wood Dowel</p>	<p>B3</p> <p>Quantity of 28</p>  <p>Screw</p>	<p>B4</p> <p>Quantity of 16</p>  <p>Screw</p>
<p>B5</p> <p>Quantity of 8</p>  <p>Screw</p>	<p>B6</p> <p>Quantity of 2</p>  <p>Door Knob</p>	<p>B7</p> <p>Quantity of 8</p>  <p>Shelf Support</p>	<p>B8</p> <p>Quantity of 2</p>  <p>Magnet</p>
<p>B9</p> <p>Quantity of 2</p>  <p>Drawer Knob</p>	<p>B10</p> <p>Quantity of 2</p>  <p>Stopper</p>	<p>B11.</p> <p>Quantity of 1</p>  <p>Anchor with Screw</p>	<p>B12.</p> <p>Quantity of 1</p>  <p>Anti-tip kit</p>


Step 1

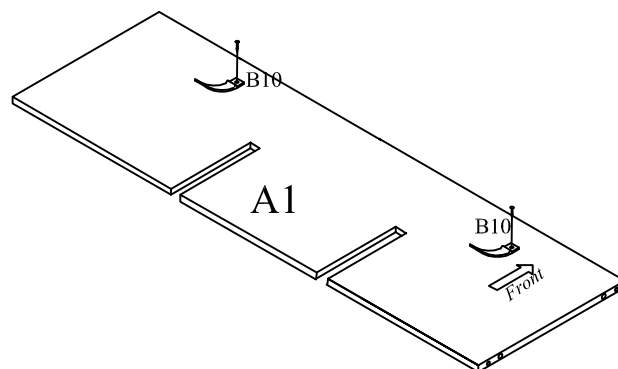B10 :   2sets




Attach Stoppers (B10) to Middle Shelf Panel (A1) using included Screws (B10).

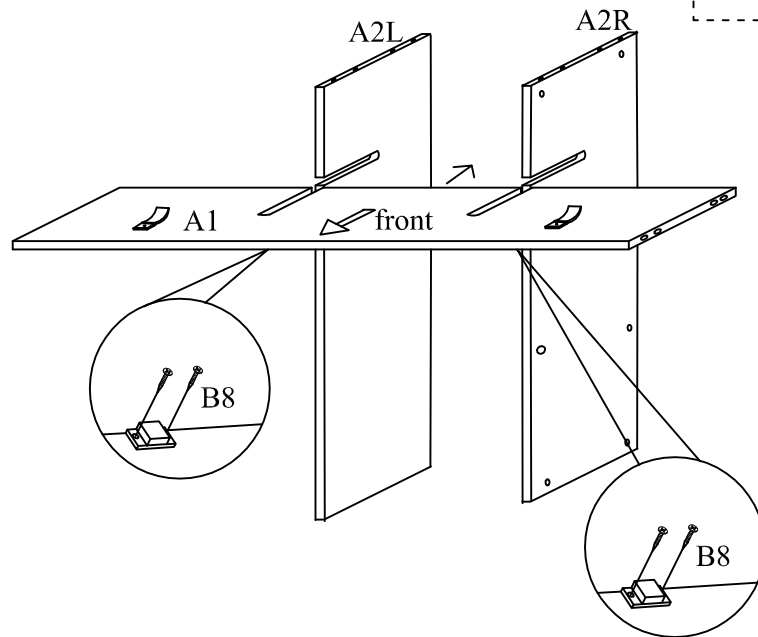Step 2





1. Attach Magnets (B8) to the bottom of Middle Shelf Panel (A1) using included Screws (B8).
2. Attach Middle Shelf Panel (A1) to Middle Divider A2(L&R) as shown above.

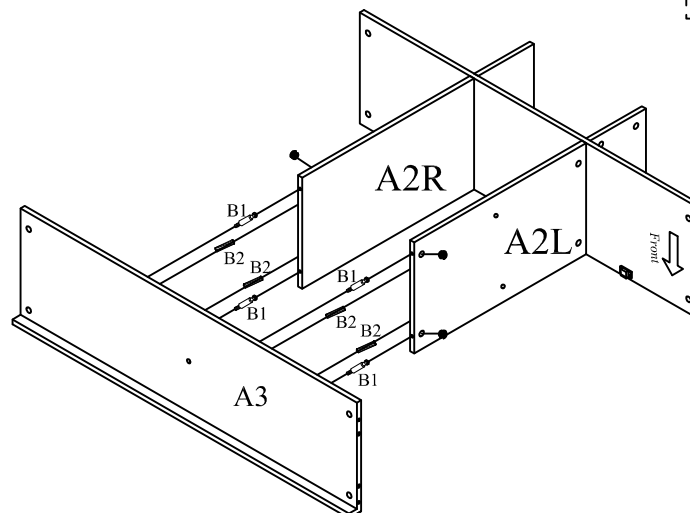Step 3





Assemble Middle Dividers A2(L&R) to Bottom Panel (A3) using Camlocks (B1) and Wood Dowels (B2).

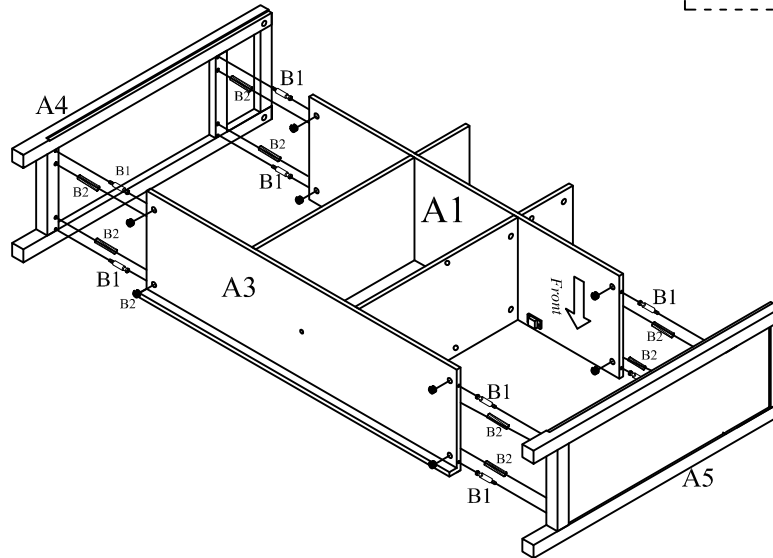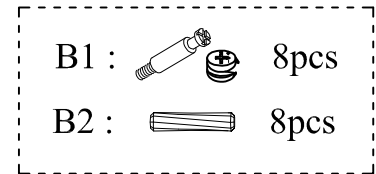Step 4




Assemble Middle Shelf Panel (A1) and Bottom Panel (A3) to Side Panels (A4&A5) using Camlocks (B1) and Wood Dowels (B2).

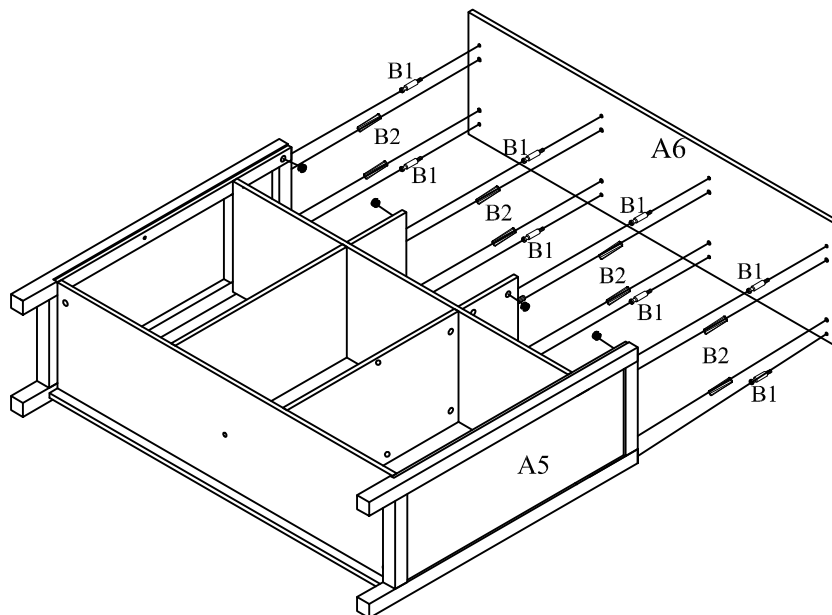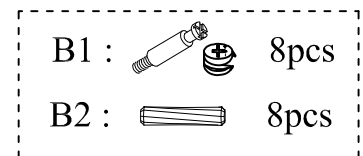
Step 5



Assemble Top Panel (A6) to Middle Dividers A2(L&R) and Side Panels (A4&A5) using Camlocks (B1) and Wood Dowels (B2).


Step 6

B3 :  28pcs

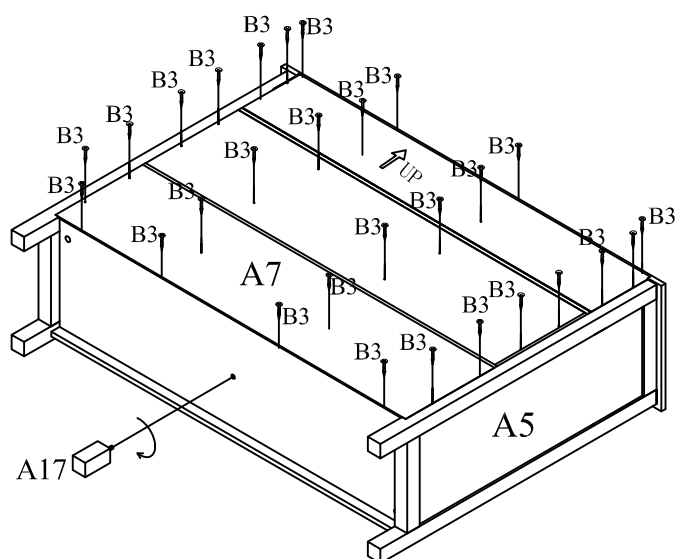

1. Attach Support Leg (A17) to the bottom of bottom Panel (A3).
2. Attach Back Panel A7 to the back of this unit using Screws (B3).

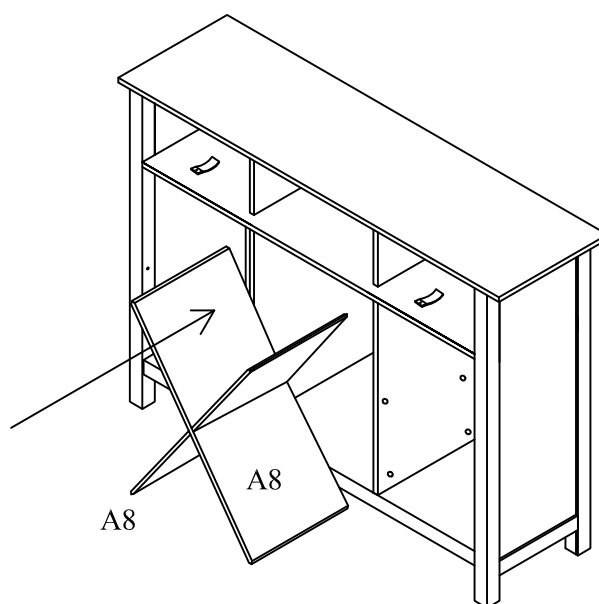
Step 7



Insert Cross Panel A8 into the center of this wine rack as shown above.


Step 8

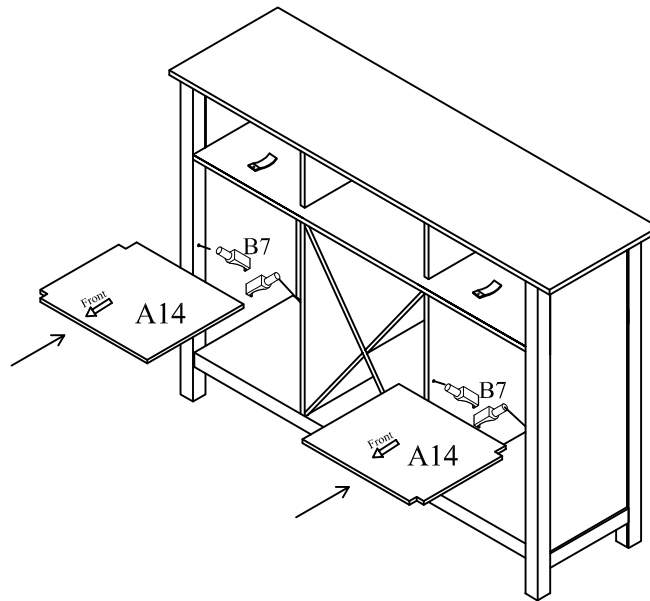B7 :  8pcs




1. Insert Shelf Supports B7 into the holes of Side Panels (A4 & A5) and Middle Divider A2(L&R).
2. Put Adjustable Shelves (A14) onto Shelf Supports (B7).

Step 9


B4 :  16pcs

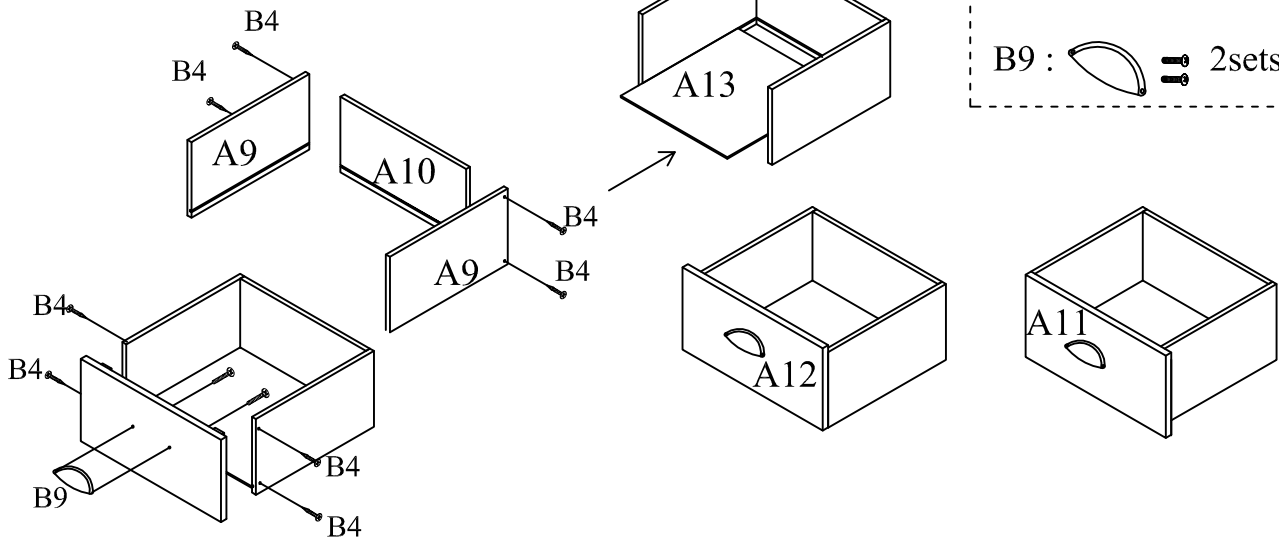


B9 :  2sets



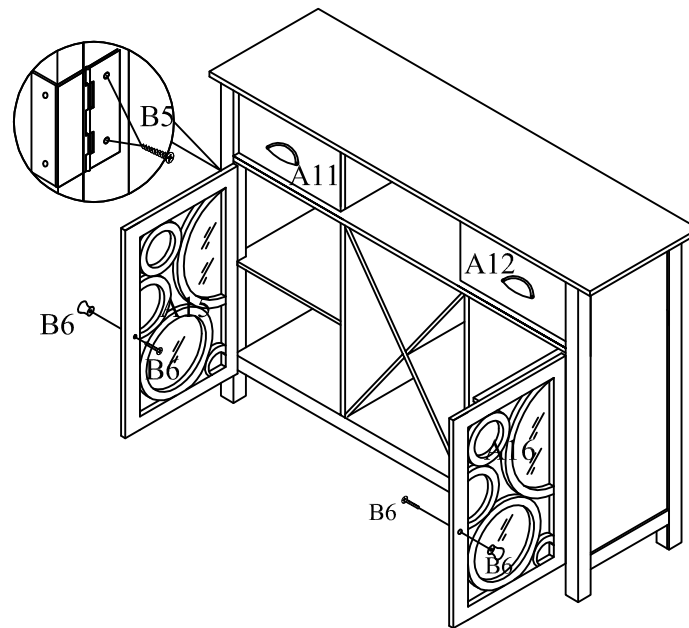1. Assemble Drawer Side Panels (A9) to Drawer Back Panel (A10) using Screws (B4).
2. Insert Drawer Bottom Panel (A13) into the grooves on Side Panels (A9).
3. Assemble Drawer Front Panel (A11/A12) to Side Panels (A9) using Screws (B4).
4. Assemble Handle (B9) to Drawer Front Panel (A11&A12) using included Bolts (B9).











Step 10






B5 :		8pcs
B6 :	 	2sets

1. Assemble Doors (A15&A16) to Side panel (A4 &A5) using Screws (B5).
2. Assemble Handle (B6) to Doors (A15&A16) using included Bolts (B6).
3. Insert the drawers as shown above.

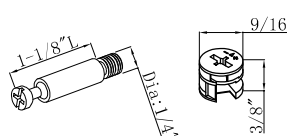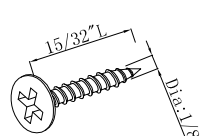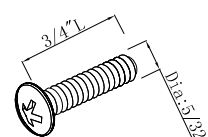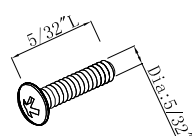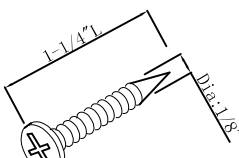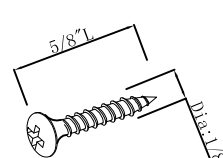APPENDIX: Dimension of Hardwares in this AI.

<p>B1.</p>  <p>Cam-bolt -Lock</p>	<p>B2.</p>  <p>Wood Dowel</p>	<p>B3</p>  <p>Screw</p>	<p>B4.</p>  <p>Screw</p>
<p>B5&B10.</p>  <p>Screw</p>	<p>B6.</p>  <p>Bolt</p>	<p>B8.</p>  <p>Screw</p>	<p>B9.</p>  <p>Bolt</p>
<p>B11.</p>  <p>Screw</p>	<p>B12.</p>  <p>Screw</p>		

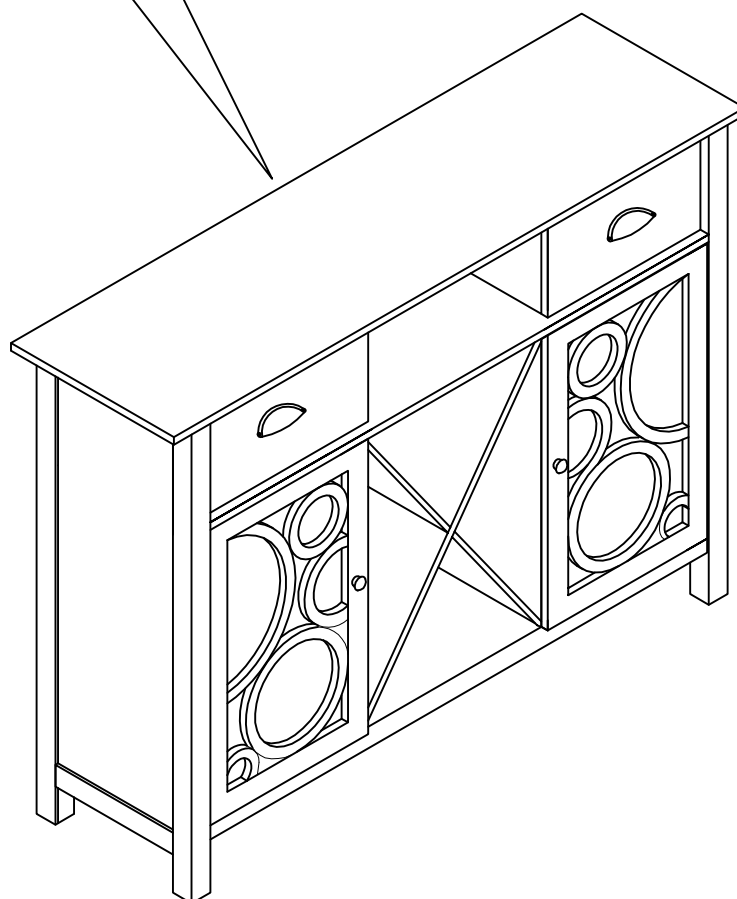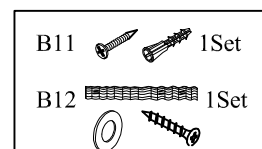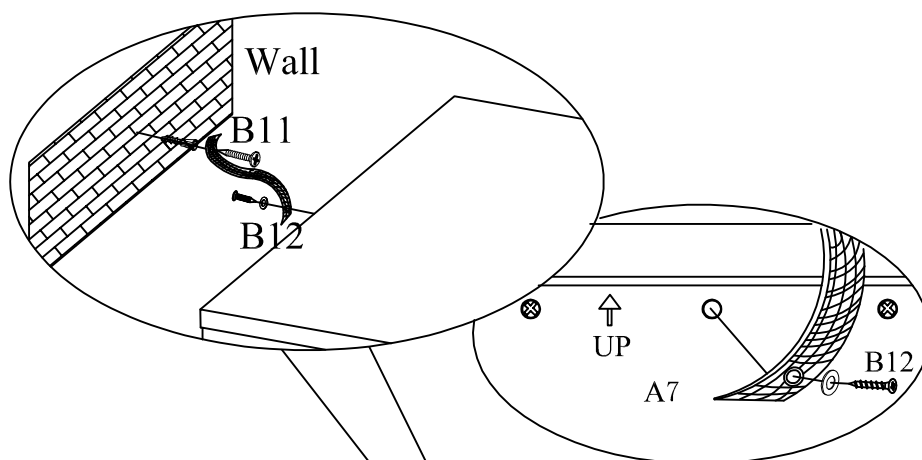

For your safety, please attached this unit to the wall by Anchor with screws B11 and Anti-tip kit B12.