


CARE AND MAINTENANCE

- * Dust the vanity regularly with soft,non-lint producing cloth or household dusting products.
- * You can clean the vanity with a gentle,non-abrasive household cleaner.
- * Make sure to dry the wood immediately with a soft cloth/towel.
- * The ceramic sink can be cleaned using standard ceramic cleaning agents available at your local supplier.
- * Small scratches and some damage happend duiring the use's period Ask your contractor for a bottle touch-up panting, you can fix it by youself.

IMPORTANT

- * Shade variations and patterns are an inherent characteristic of stone (e.g. granite,marble,engineered stone).Stone tops will vary from product to product.Use caution placing items such as soap or any fragranced material on the stone surface.Use a soap dish,coaster or similar item to protect the surface if placing any soap or fragranced products on the stone.
- *If soap or fragranced products come in contact with stone top,rinse the surface with water and dry using a soft non-abrasive cloth.
- ***WARNING:**Must use cleaning agents safe for stone.Check your cleaning agents use restrictions before using on any stone.Damage to the stone may result.Vanity manufacturer not responsible for damage caused by improper cleaning agent or soap used.Warranty will not cover damage caused by improper soap or cleaning agents.
- ***DO NOT** use products to clean the stone top that contain acetone, lemon,vinegar or other acids as these may cause damage to the stone surface
- *Periodically reseal the stone top using a appropriate stone sealer available from your local store.Follow the manufacturer's directions on How to apply.

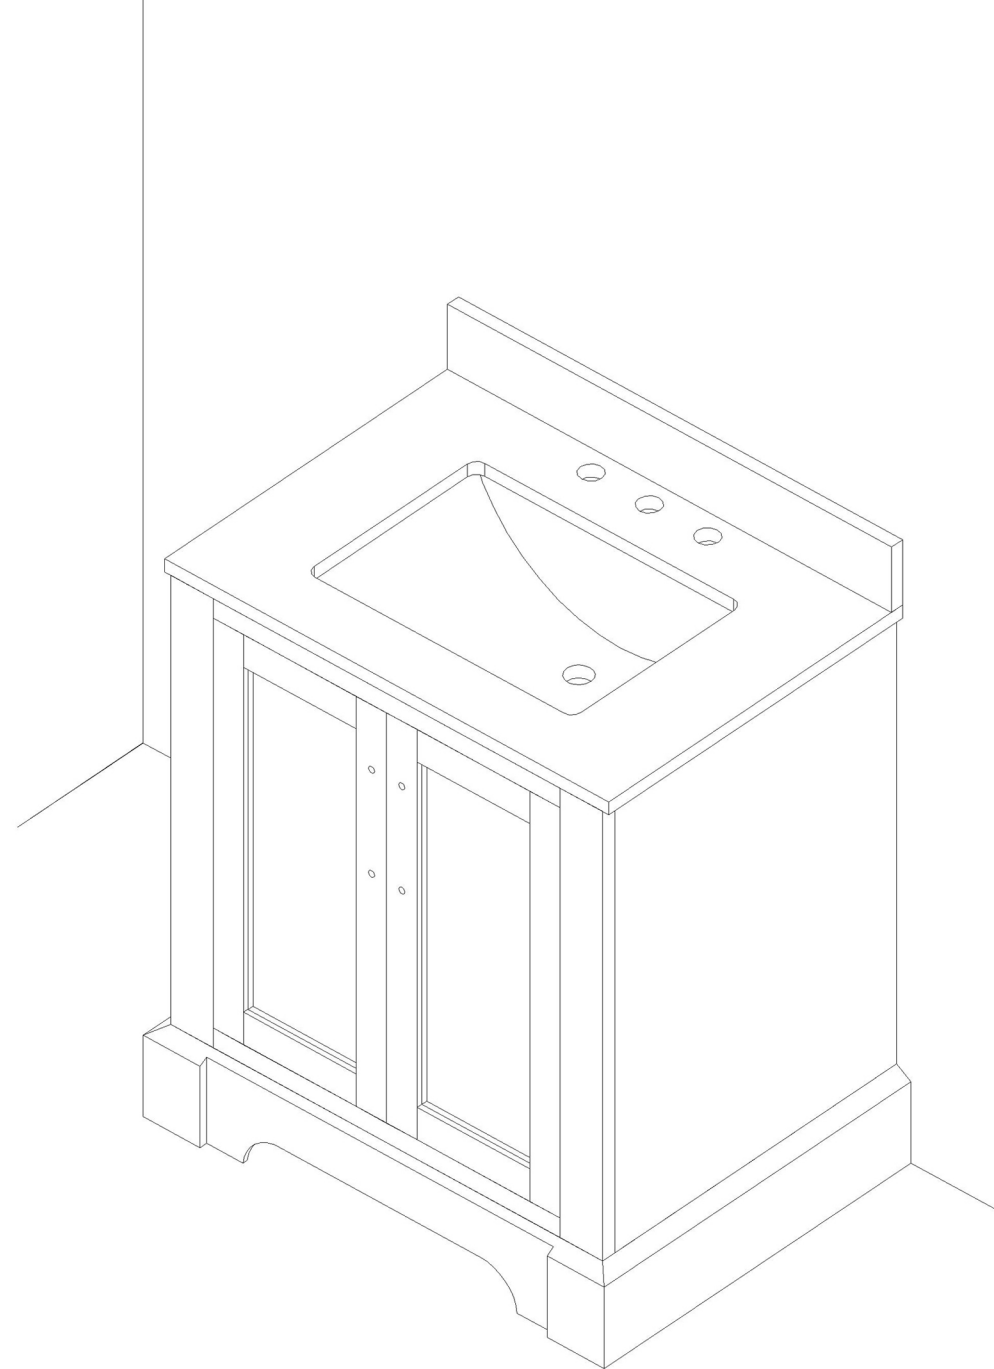

MODEL NO.:QW-FED-59-30

Bathroom Vanity Installation

Tools requested not in box



Silicone sealant




Tape measure



Spirit Level




Pencil




Philips Screwdriver

Step 1: Open the box with care, place the bathroom vanity on the right position against the wall, and level the cabinet with the leg levelers.

NOTE: THE COUNTER-TOP WITH SINK IS ATTACHED ON THE CABINET NO NEED INSTALL THE COUNTER-TOP

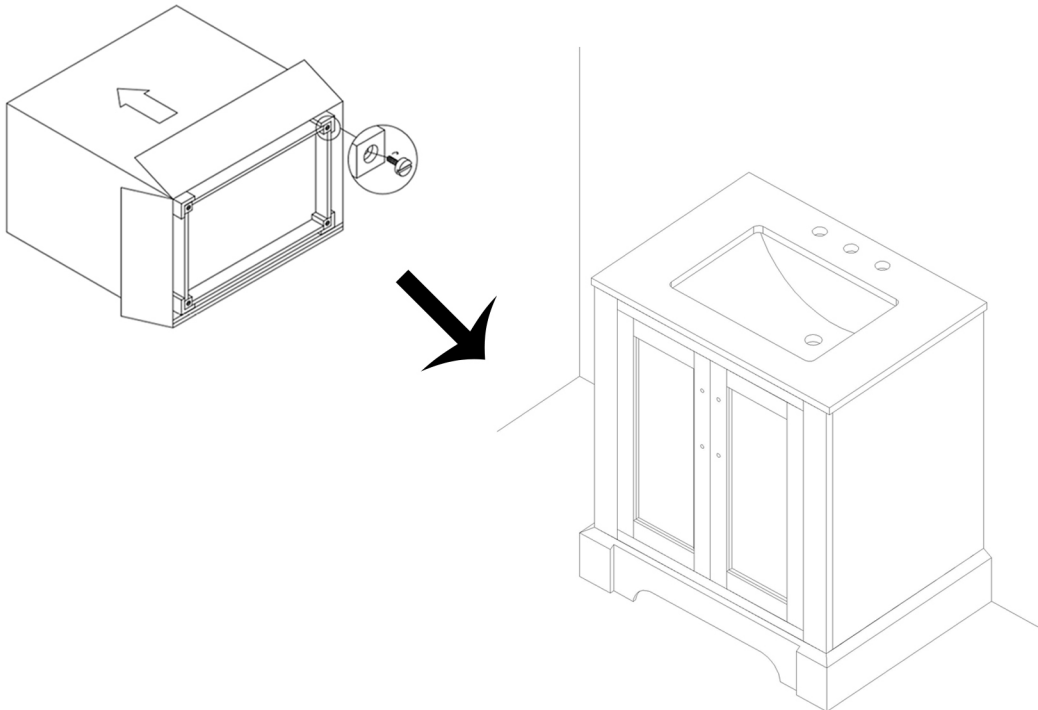


Step 2: Apply bead of quality and clear or white silicone evenly along on the bottom and back of the backsplash, then, place the backsplash onto the counter-top, and against the wall, check the alignment of back backsplash, adjust the leg levelers as needed

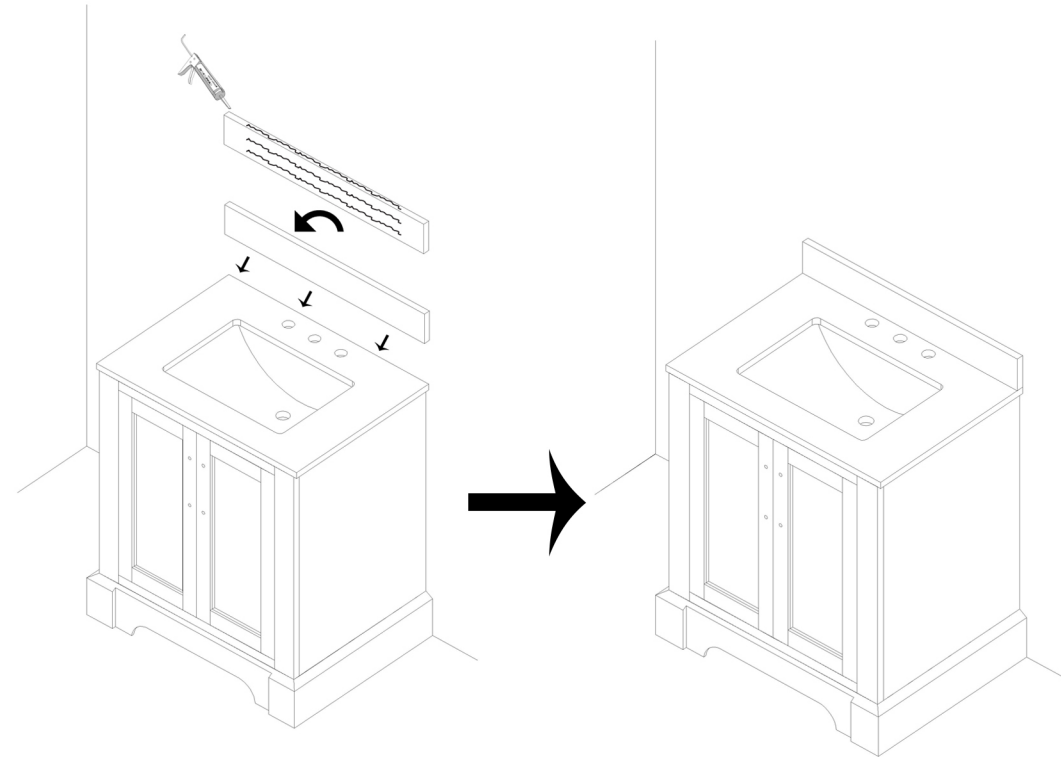


Adjustment of hinges


Adjust height

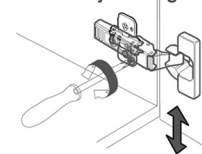

Adjust laterally

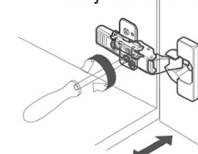

Adjust depth

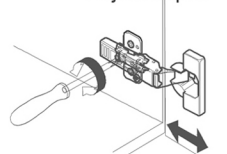

Solid Wood Construction Bathroom Vanity