






Please note: Items cannot be returned once assembled.

HLG259

Version:1.0

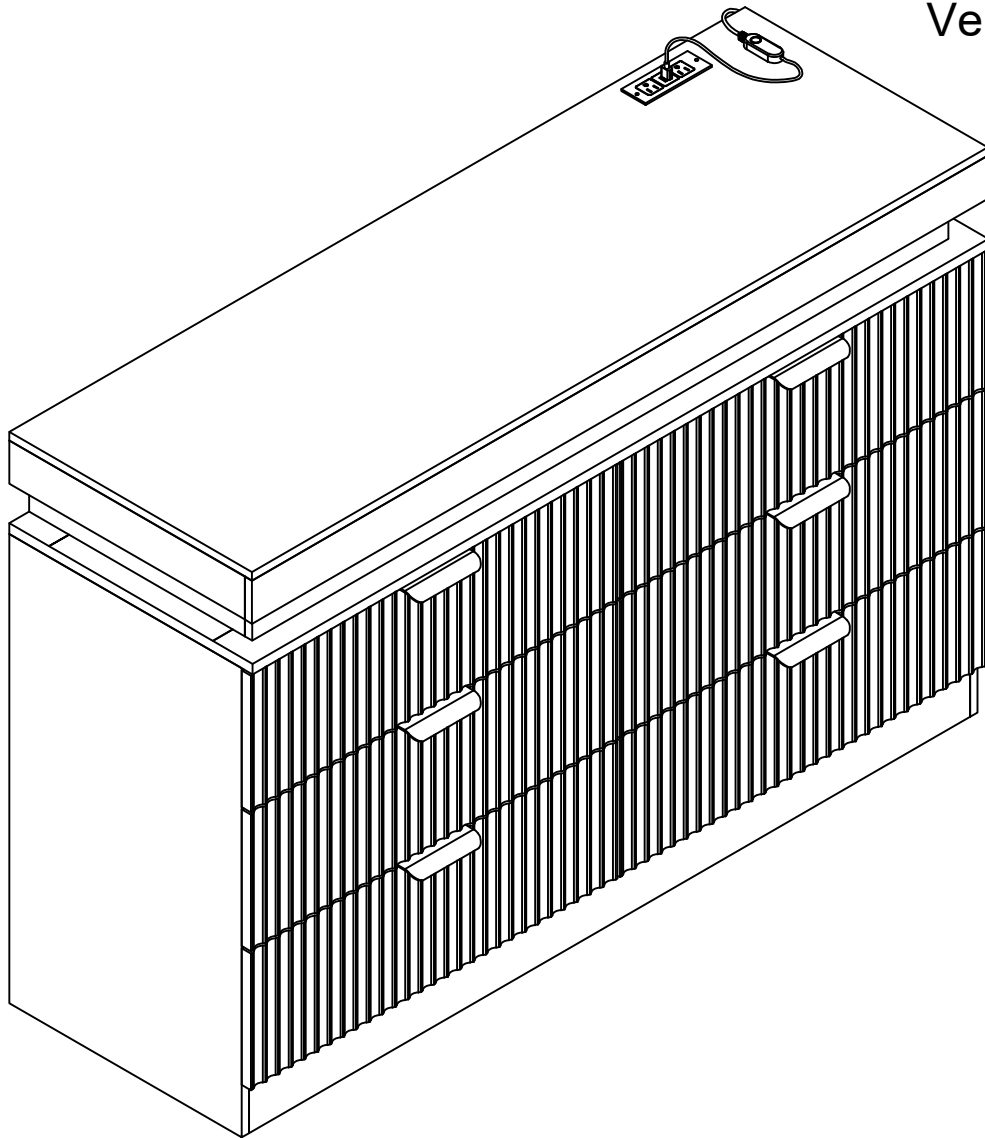


IT IS RECOMMENDED
TO USE POWER TOOLS

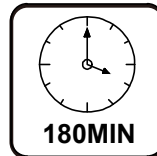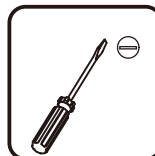


180MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

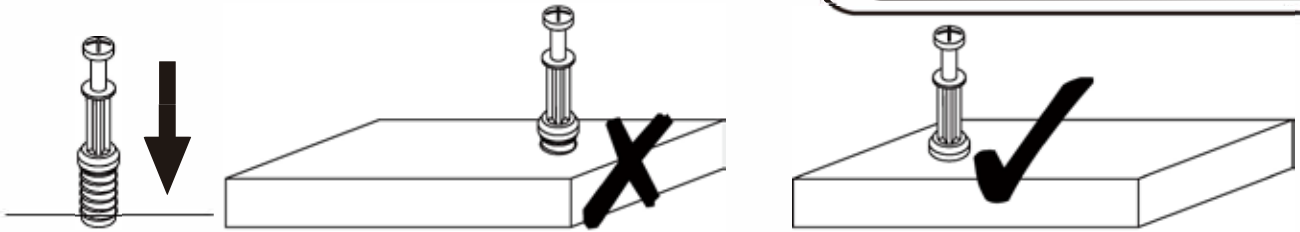


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

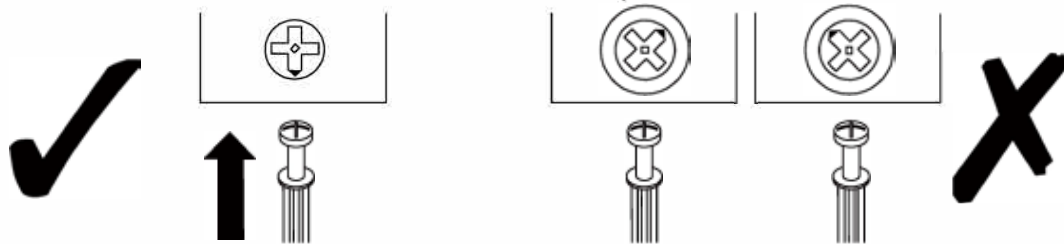











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










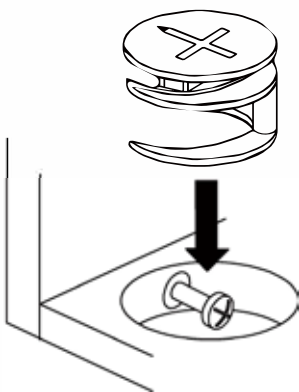







EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



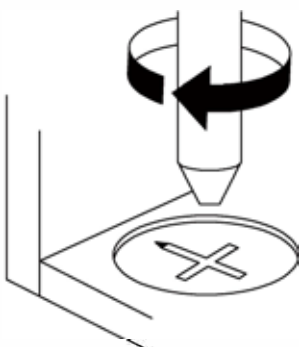


EN_Turn cam lock clockwise to tighten.

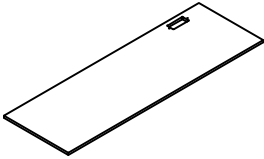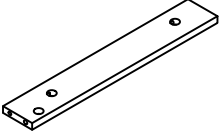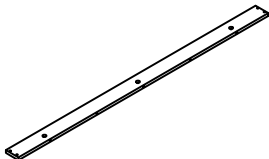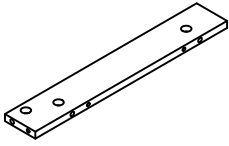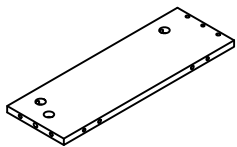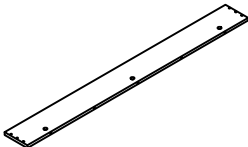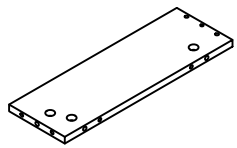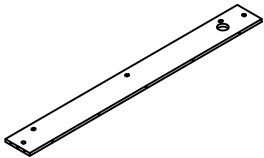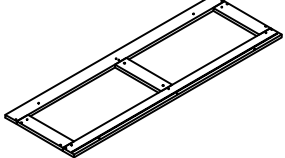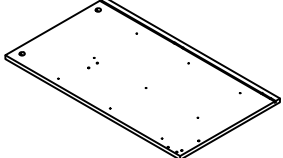
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

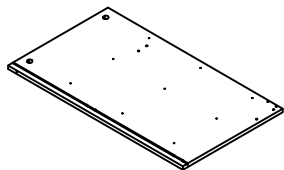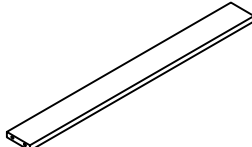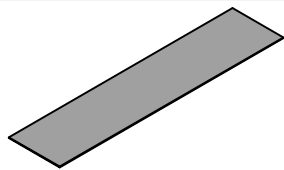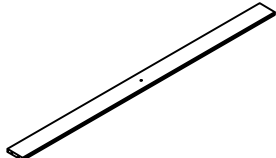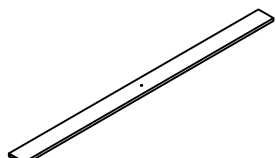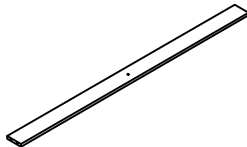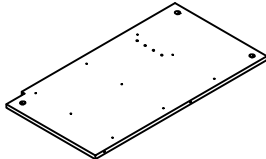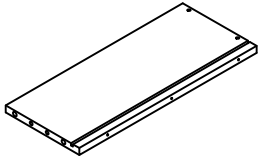
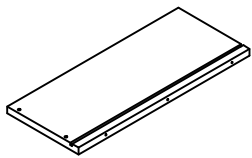
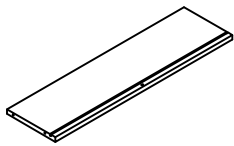
NO.		QTY	SPARE
⑪		x1	
⑫		x2	
⑬		x2	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x1	
⑱		x6	
⑲		x6	
⑳		x6	

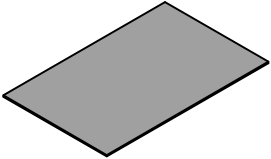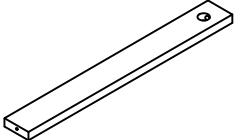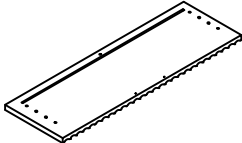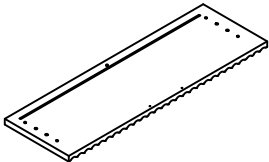NO.	PARTS	QTY	SPARE
②1		x6	
②2		x6	
②3		x3	
②4		x3	
	 Hardware Kit		

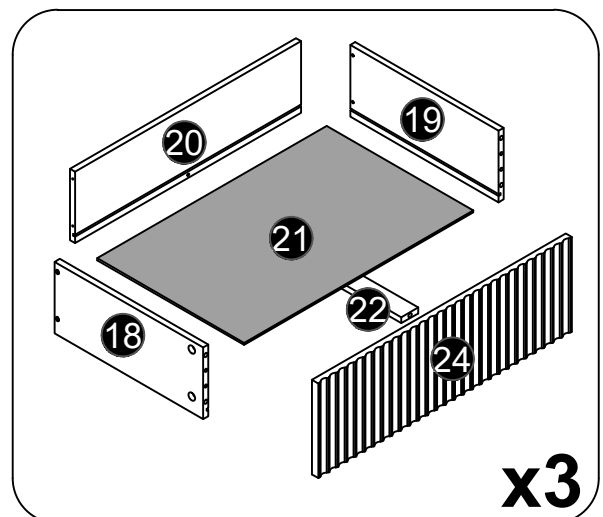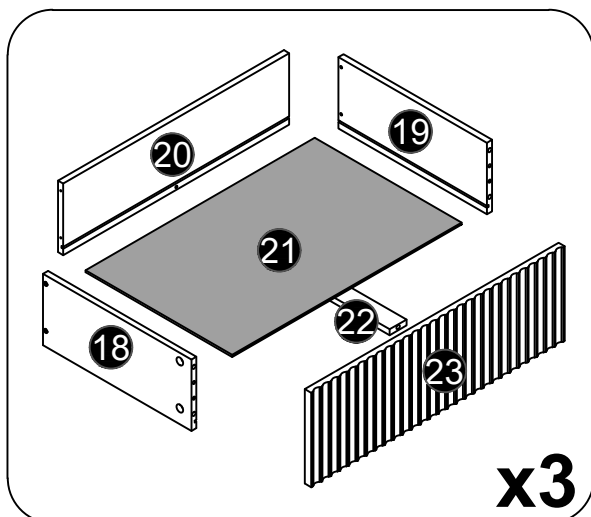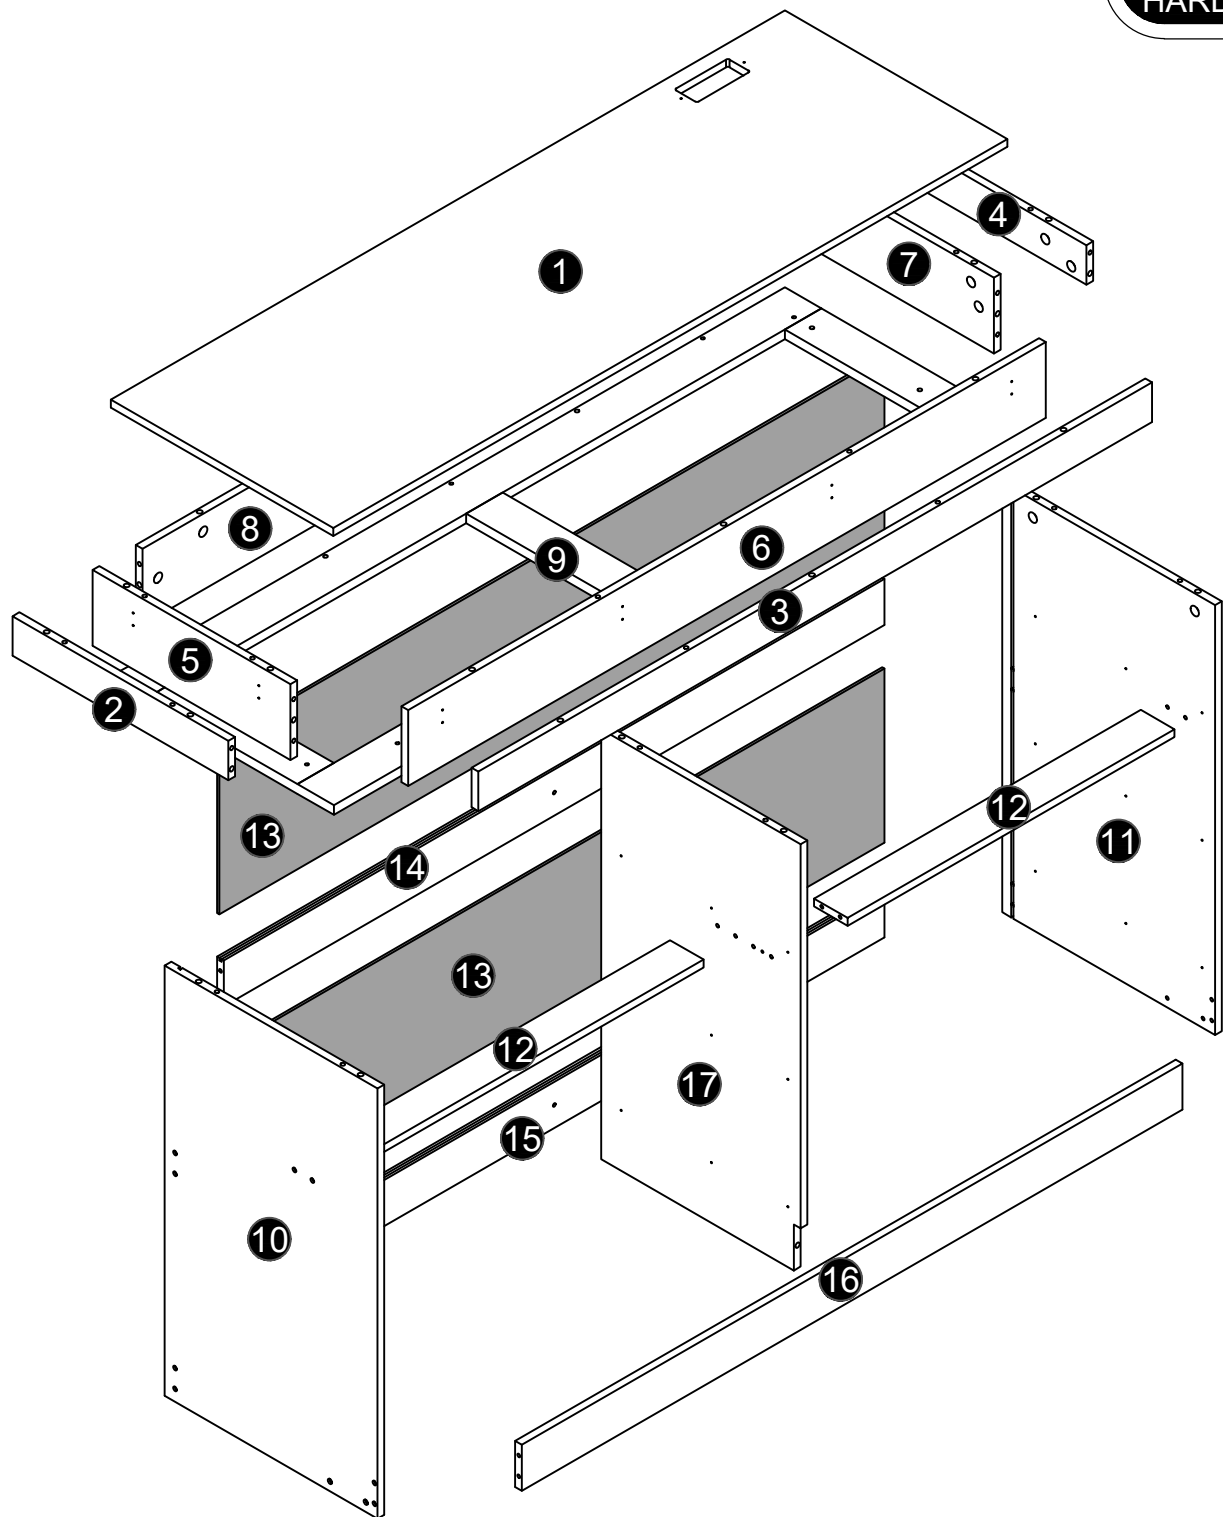






A x60 $\varnothing 6 \times 35 \text{mm}$ +3(spare)	B x60 $\varnothing 15 \times 10 \text{mm}$ +3(spare)	C x62 $\varnothing 6 \times 30 \text{mm}$ +3(spare)	D x32 $\varnothing 4 \times 35 \text{mm}$ +3(spare)	E x84 $\varnothing 3.5 \times 12 \text{mm}$ +3(spare)	F x6
G x32 +3(spare)	H x2 H-1 H-2	I x2	J x1	K x7 +1(spare) K-1 K-2	L x1 L-1 L-2
M x20 +2(spare)	N x12 $\varnothing 3 \times 16 \text{mm}$ +2(spare) N-1 N-2	O x1	P x2	Q x4	R x4 R-1 R-2
S x2					
CL x6 L330mm	CR x6 L330mm	DL x6 L330mm	DR x6 L330mm		

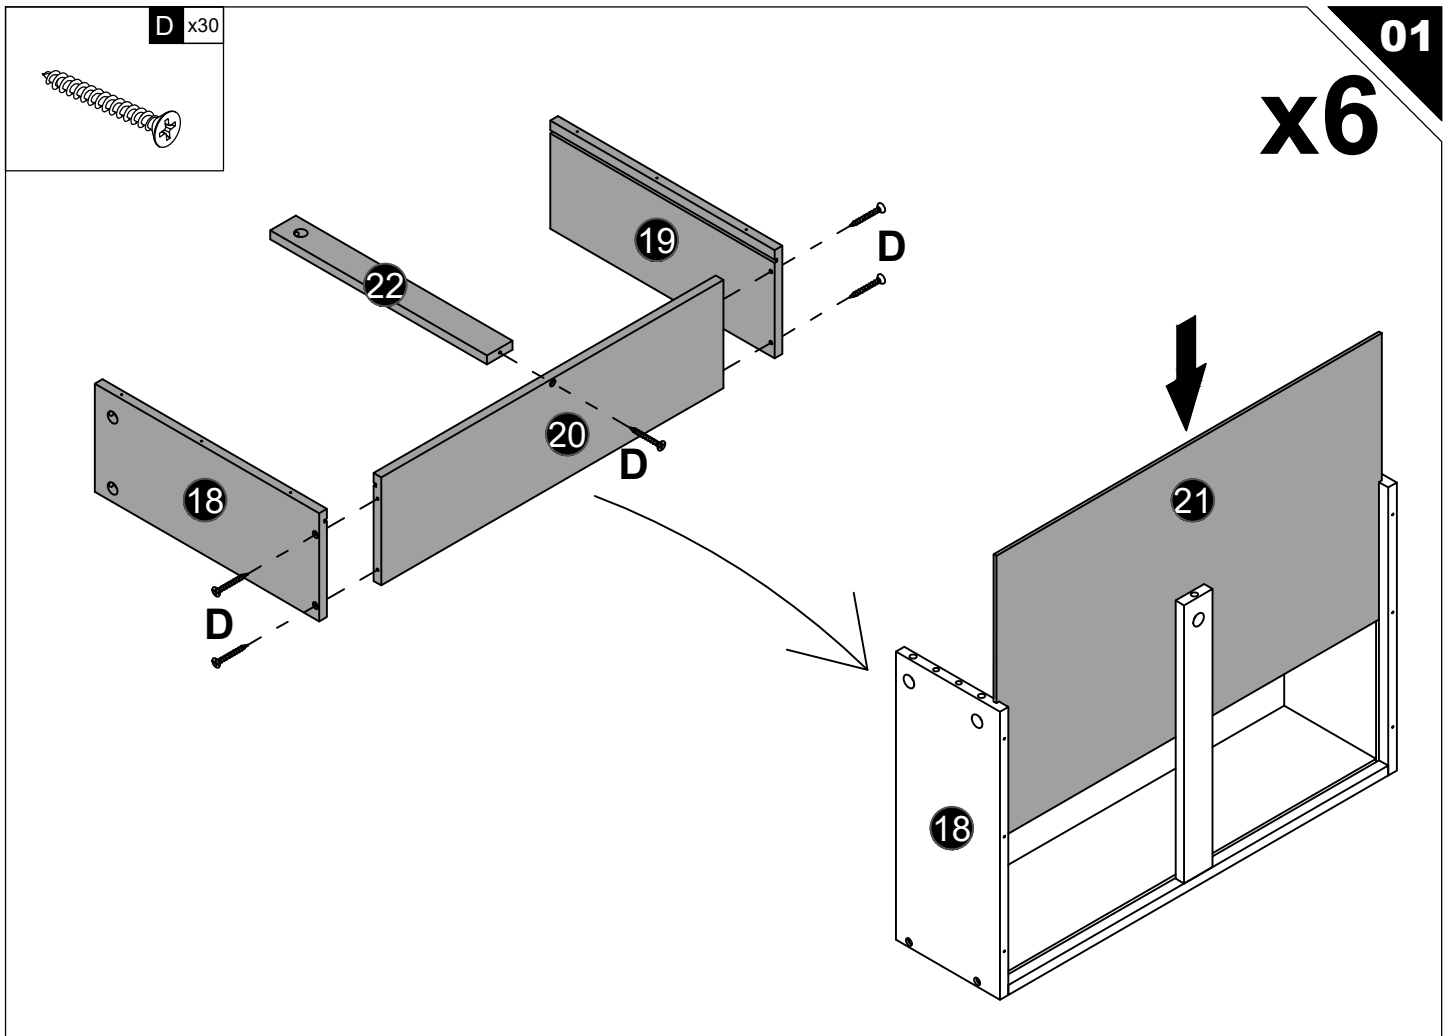

A x30	B x30	C x24	E x48	F x6
				
DL x6	DR x6			
				

02


x3

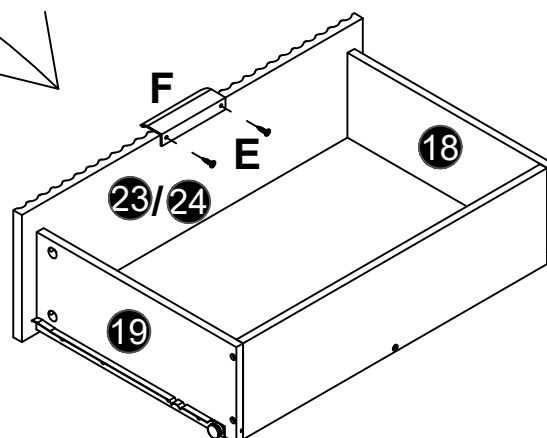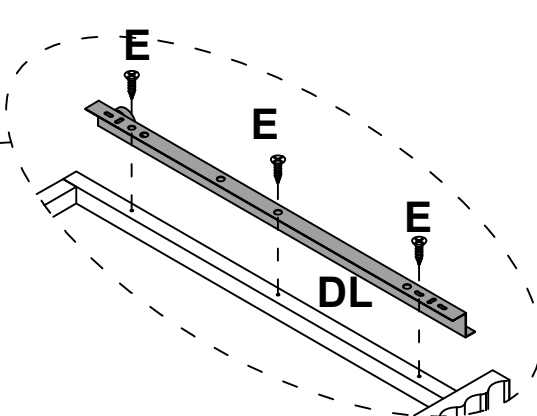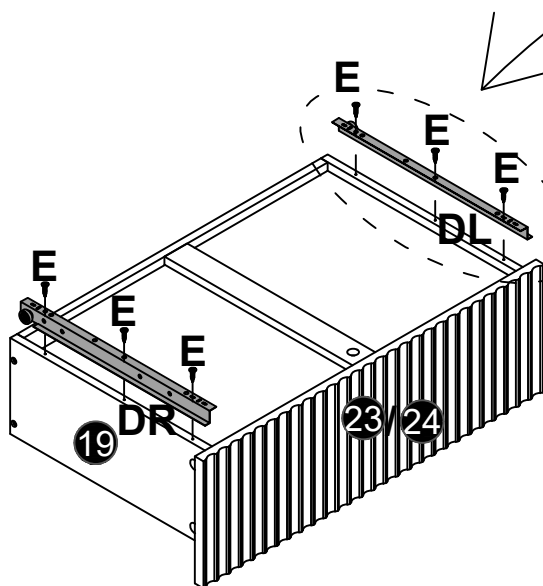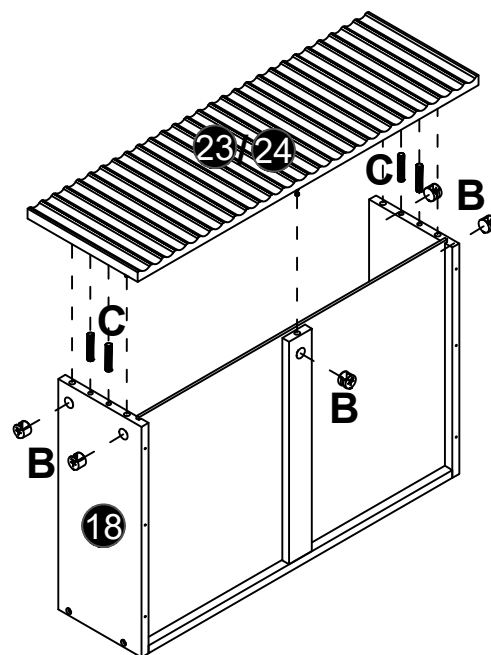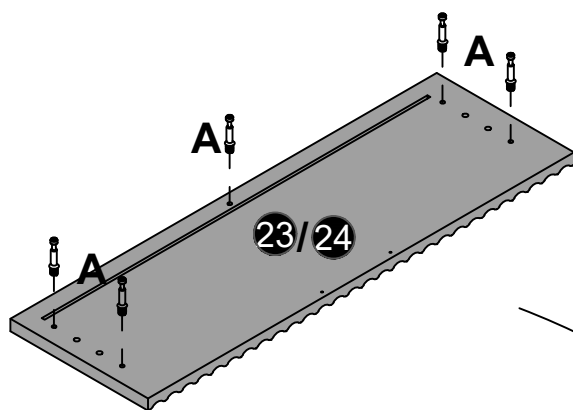

E x9

CL x3


03

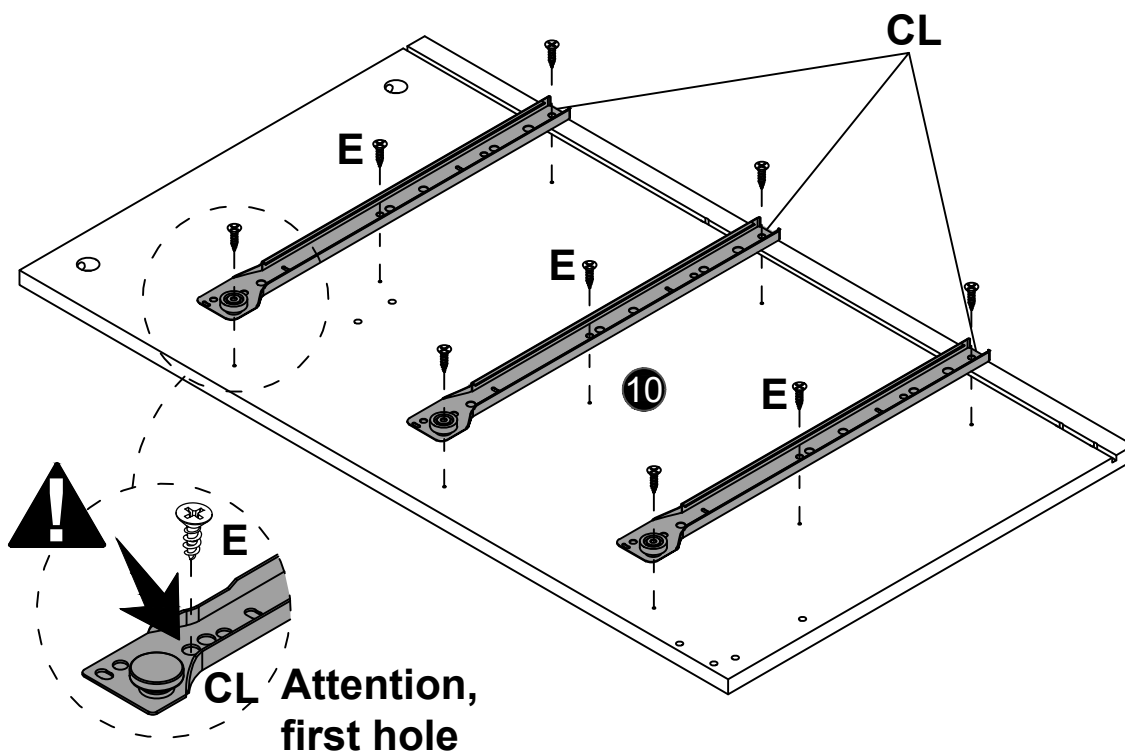

E x9

CR x3

04

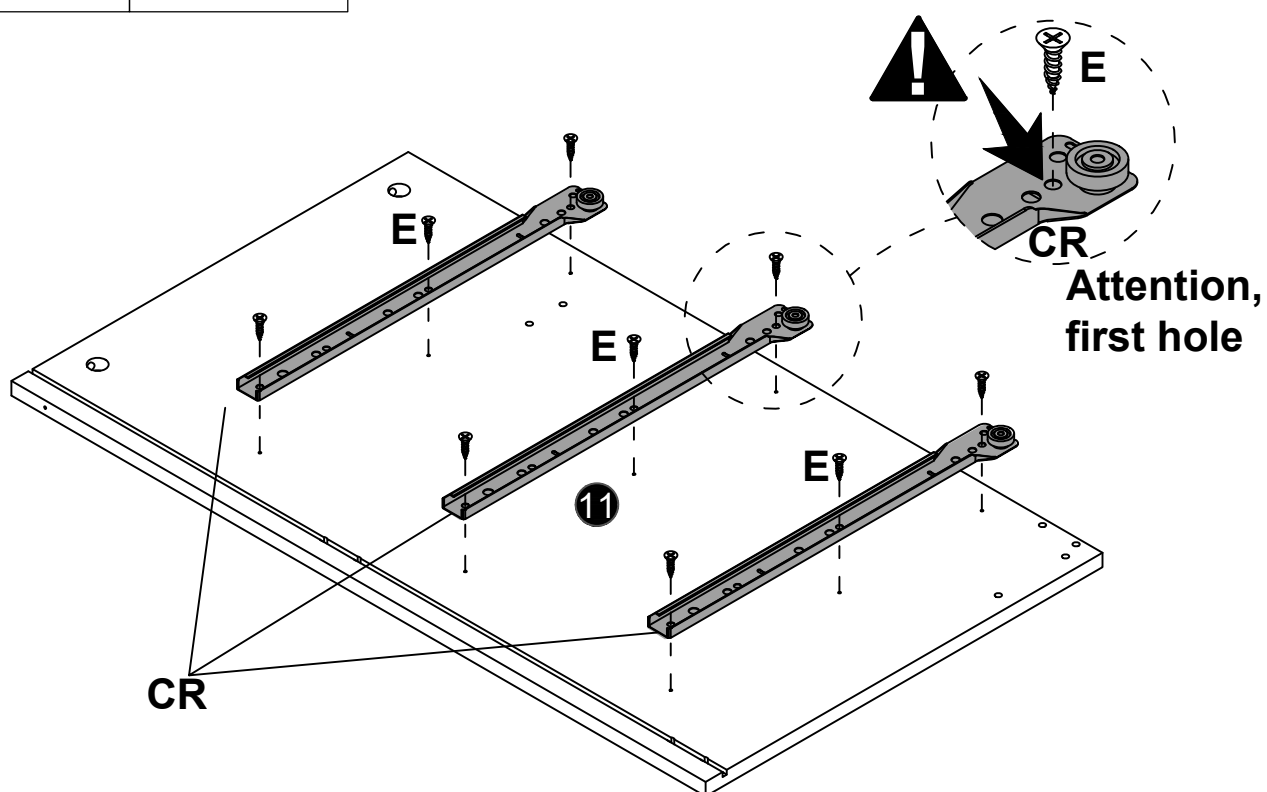

E x18



CL x3

CR x3



05



Notice

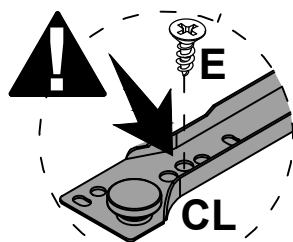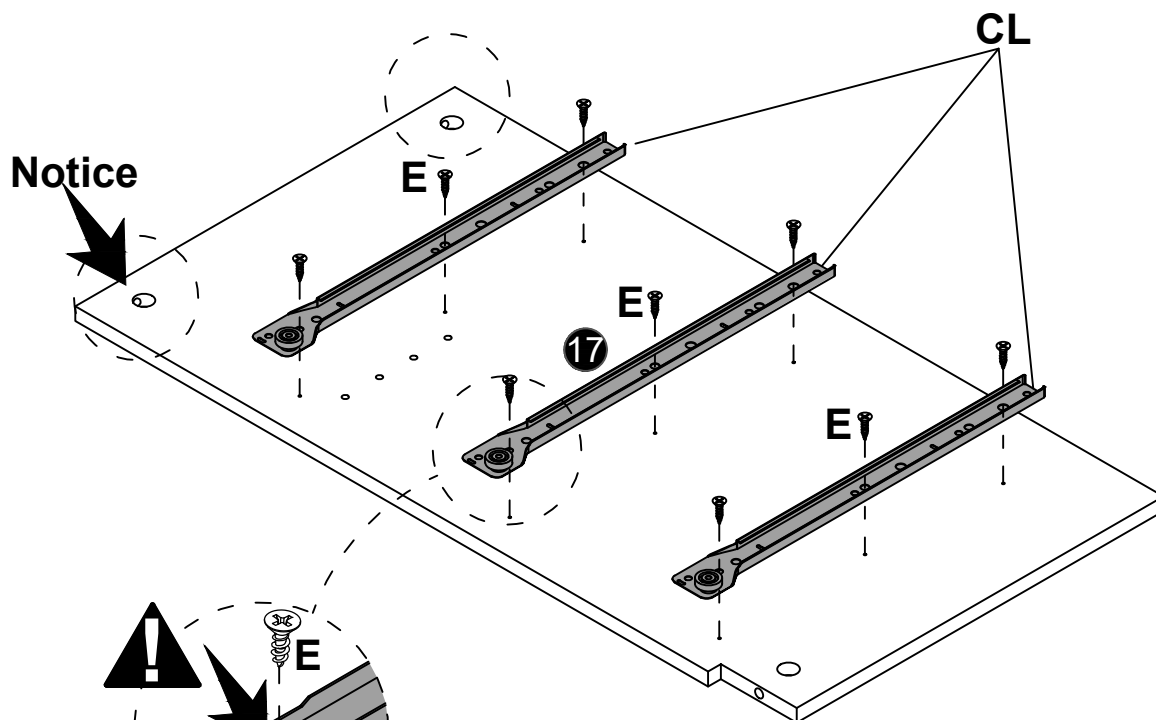


**Attention,
second hole**

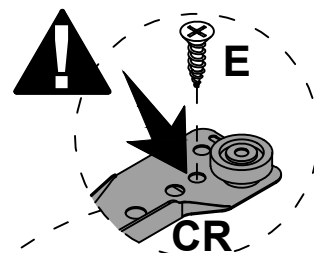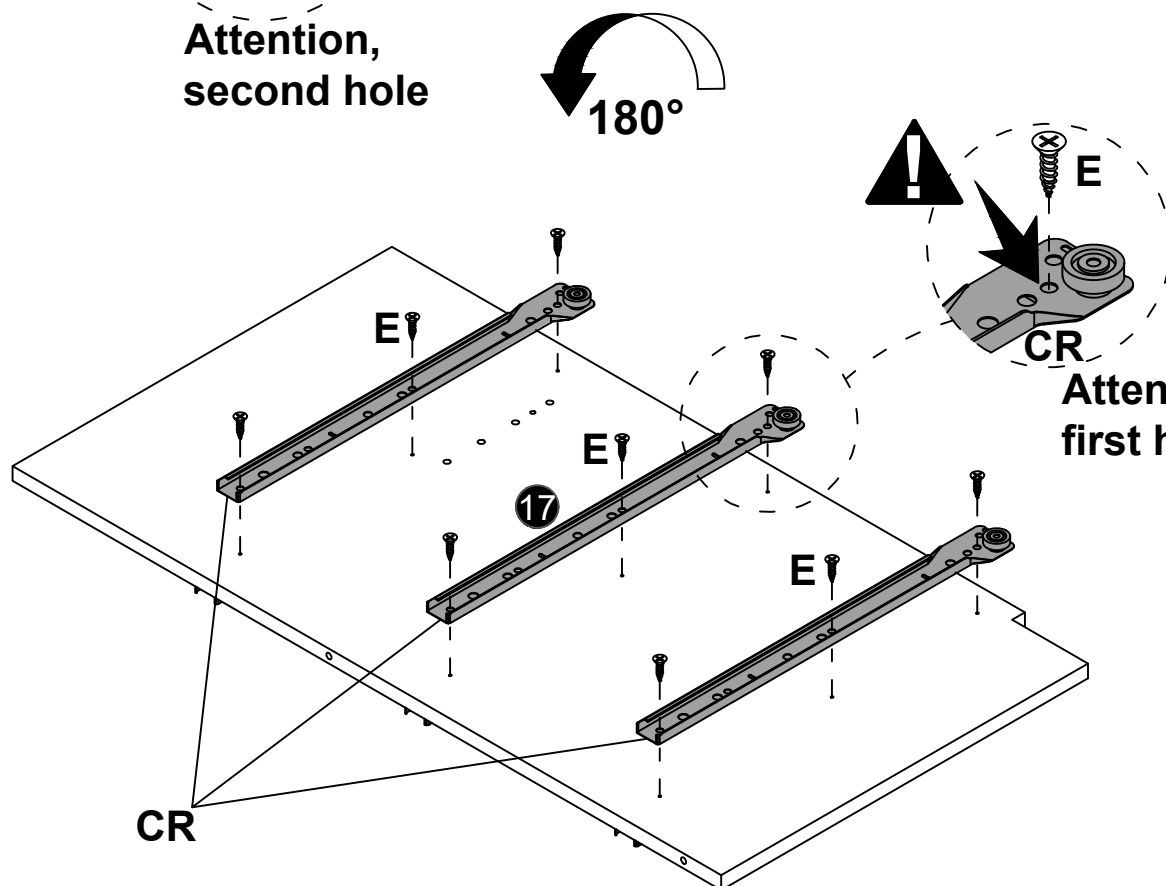


**Attention,
first hole**

A x1




06

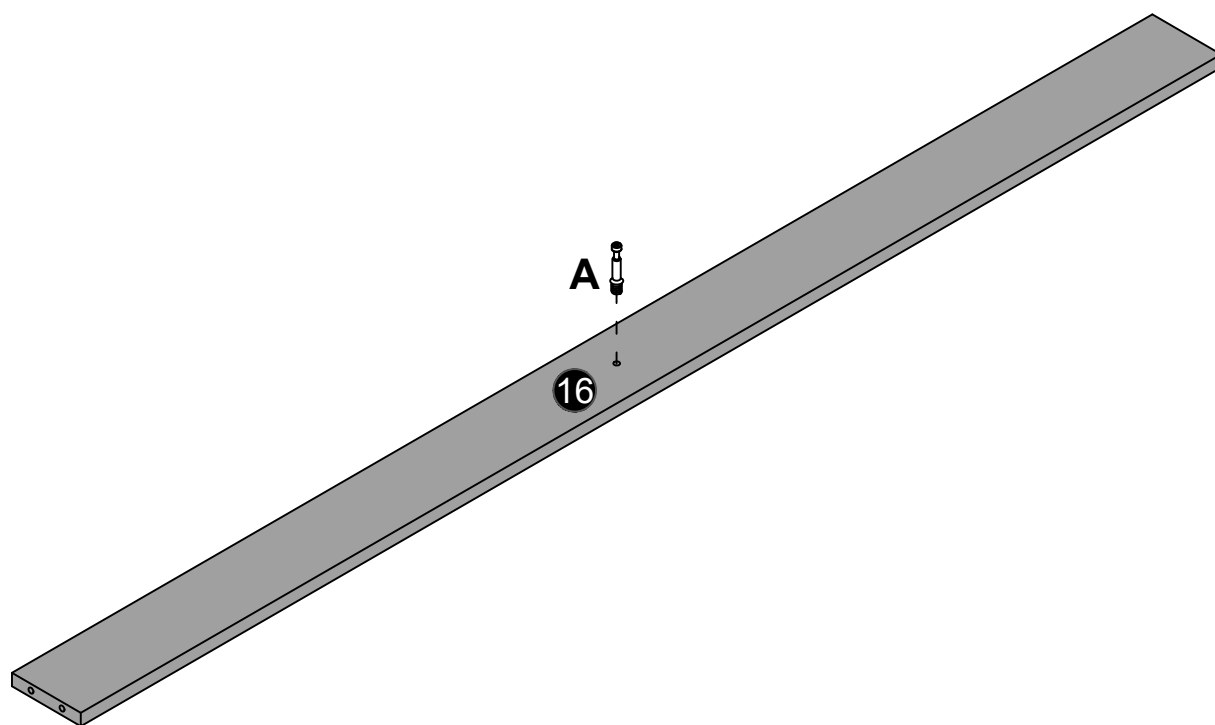

B x1



07

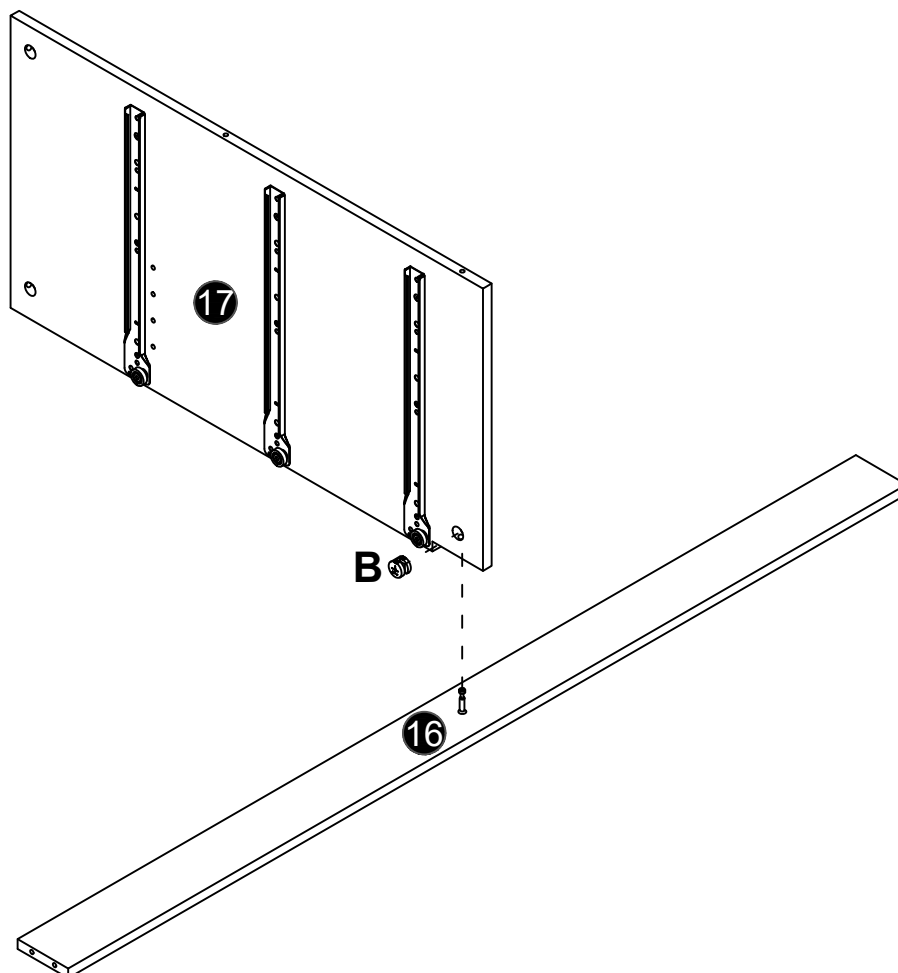



G x2




08




Attention: Use screw "G" to pass through the third and fourth holes of plate 17 connected to board 12.

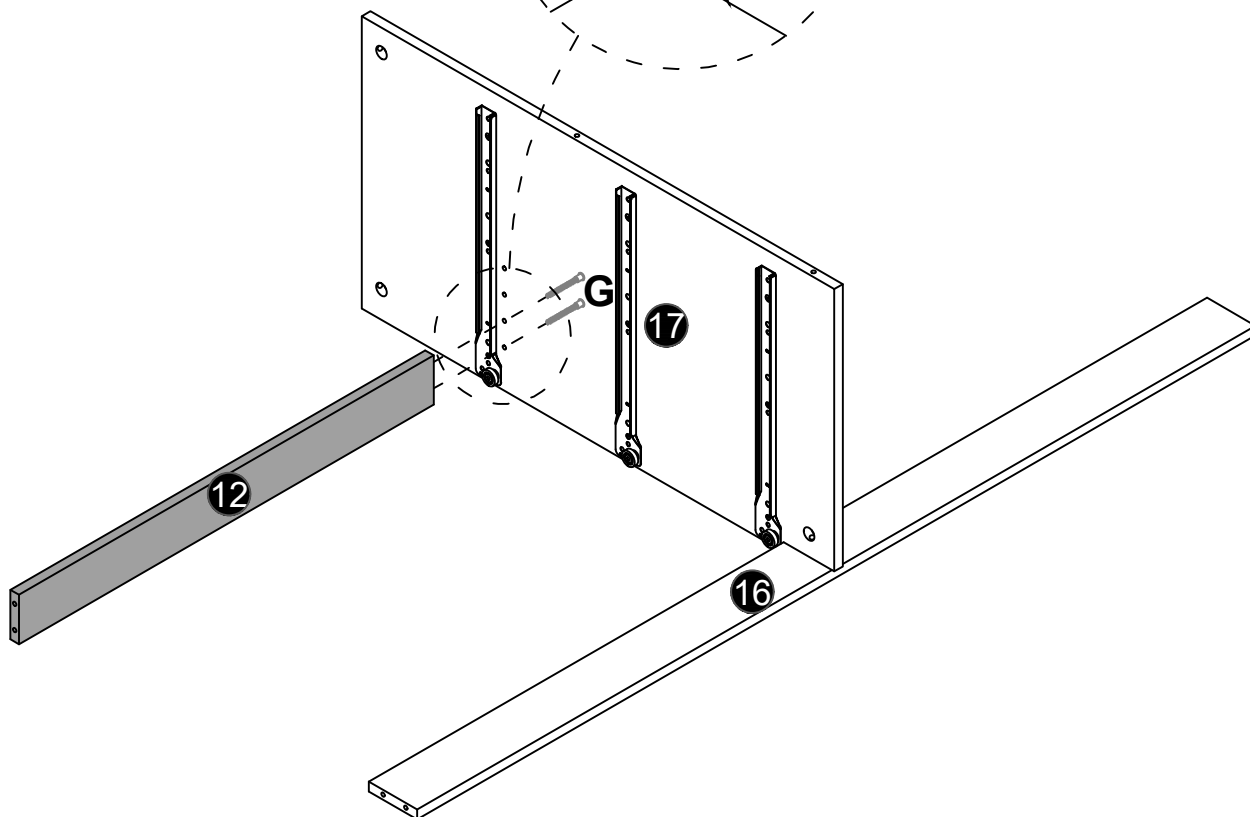
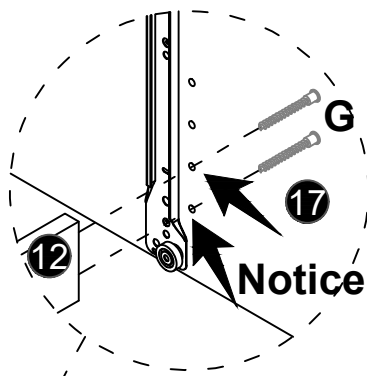



G x4




09

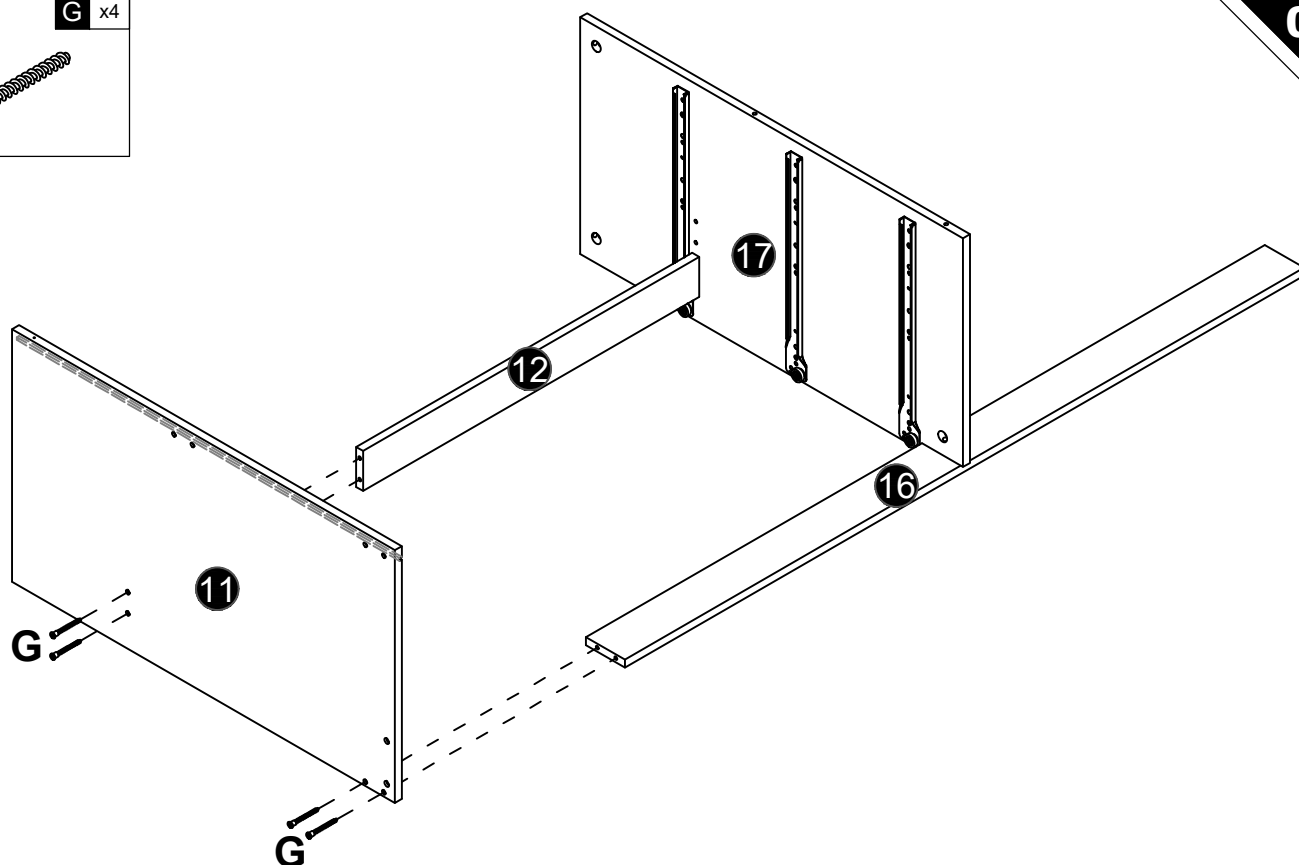


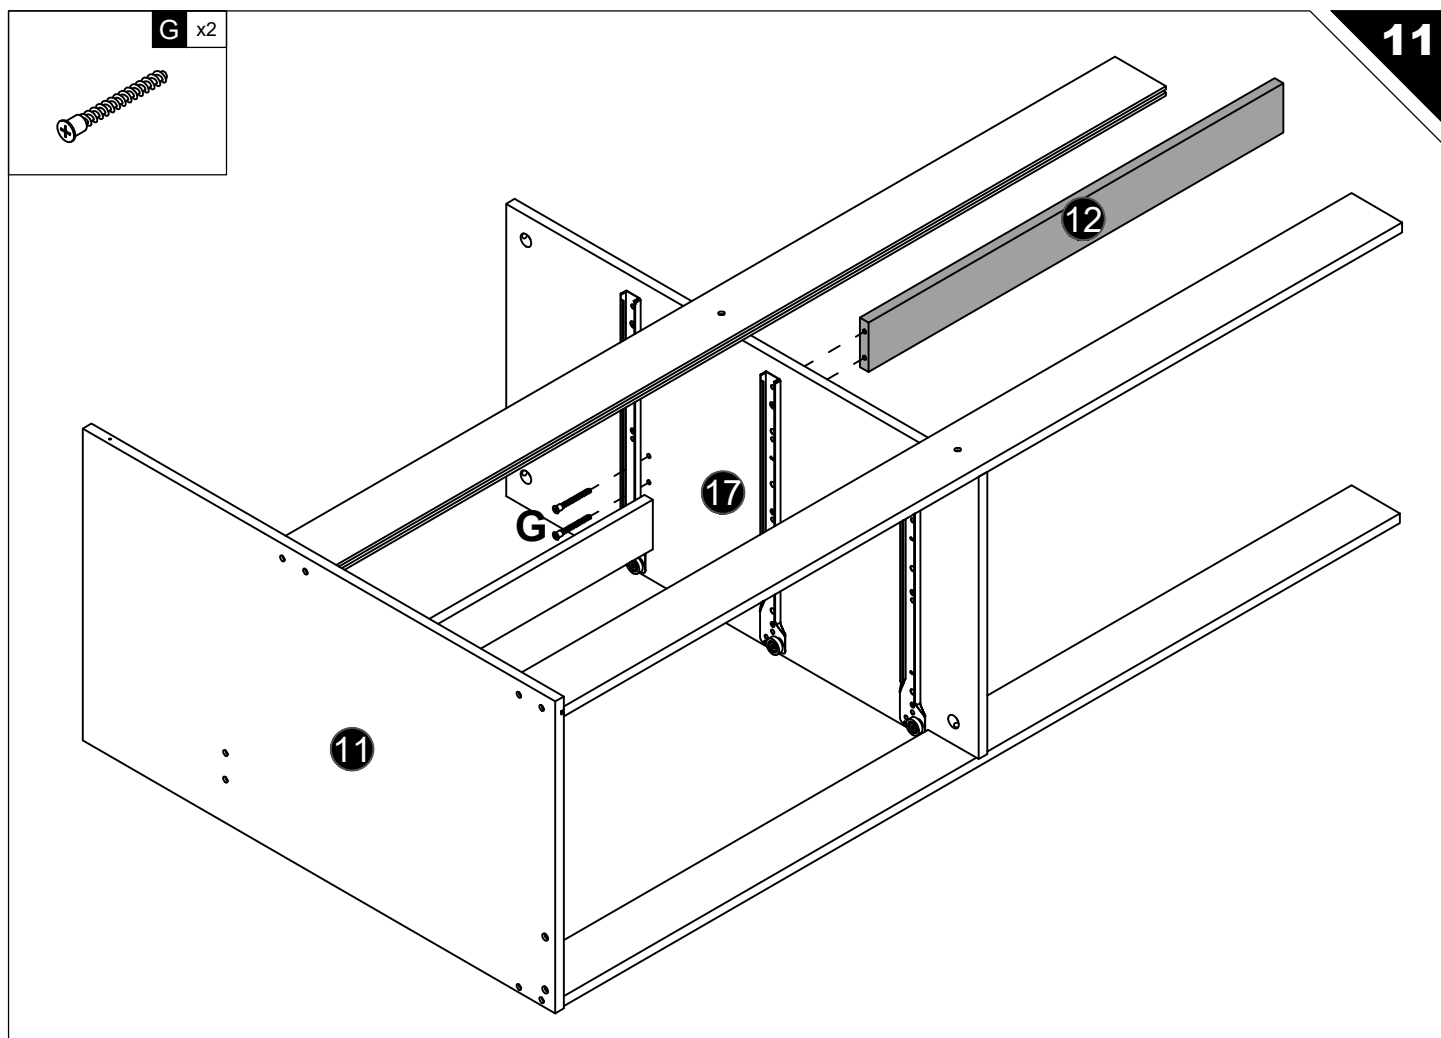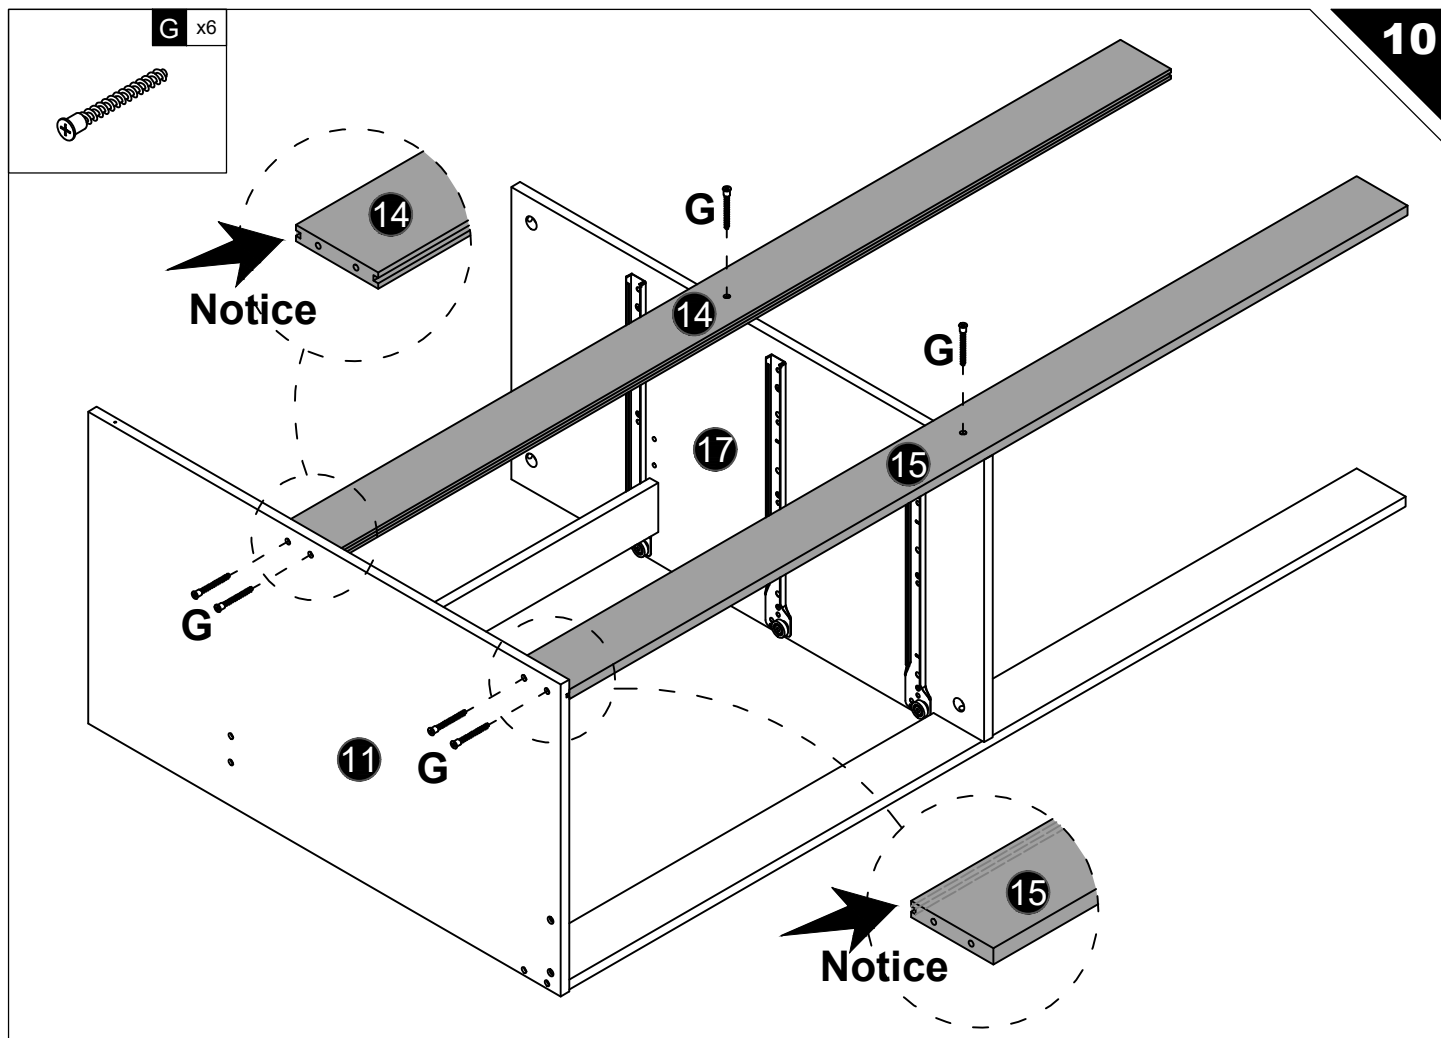

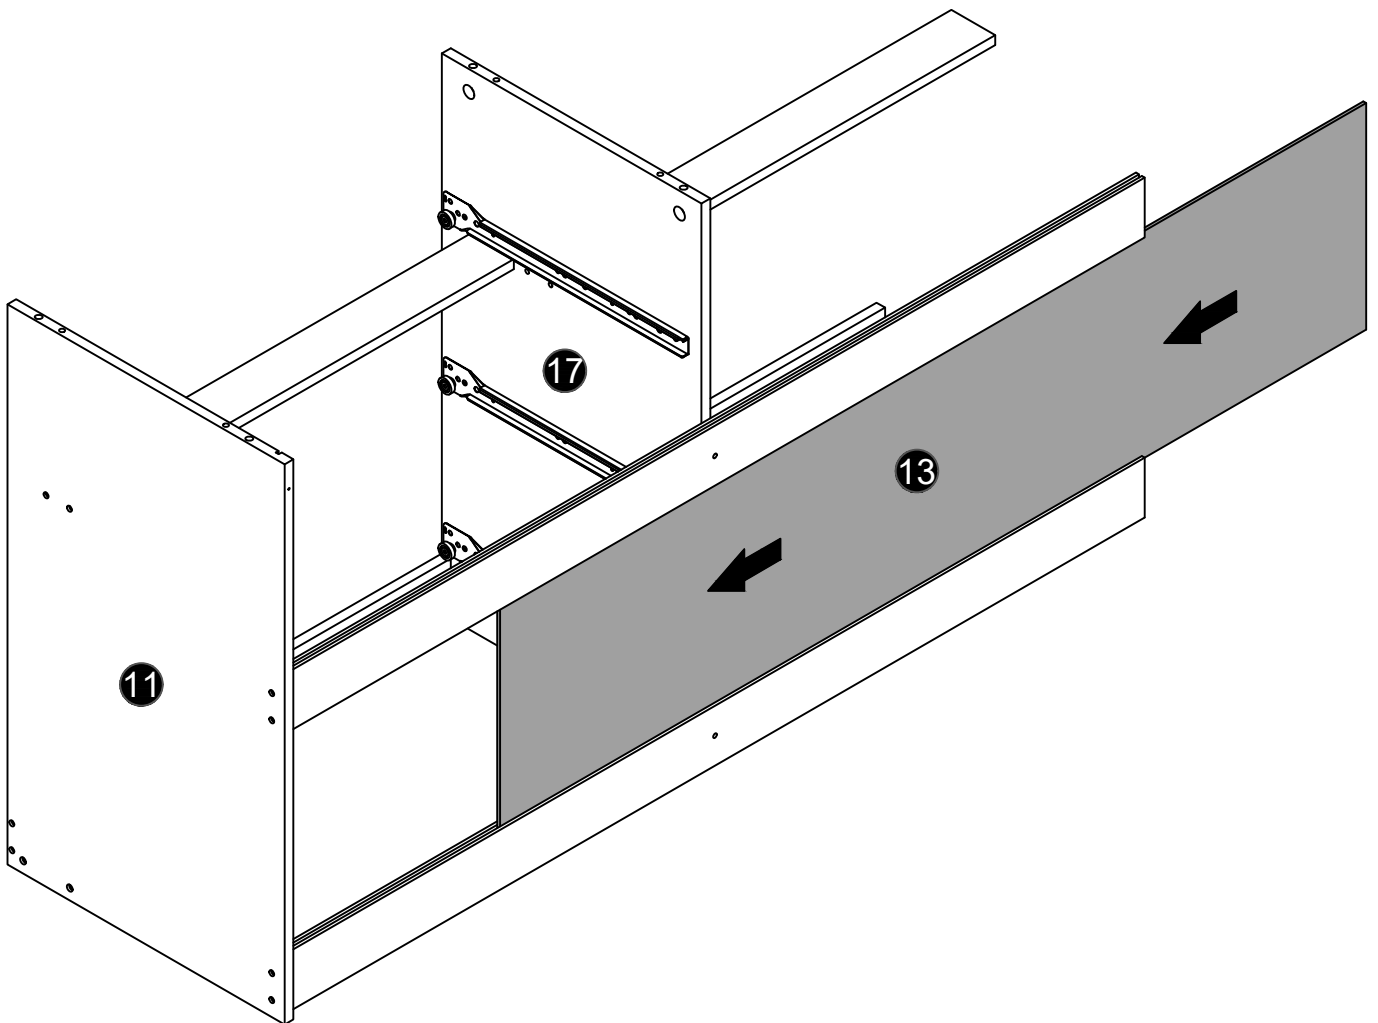


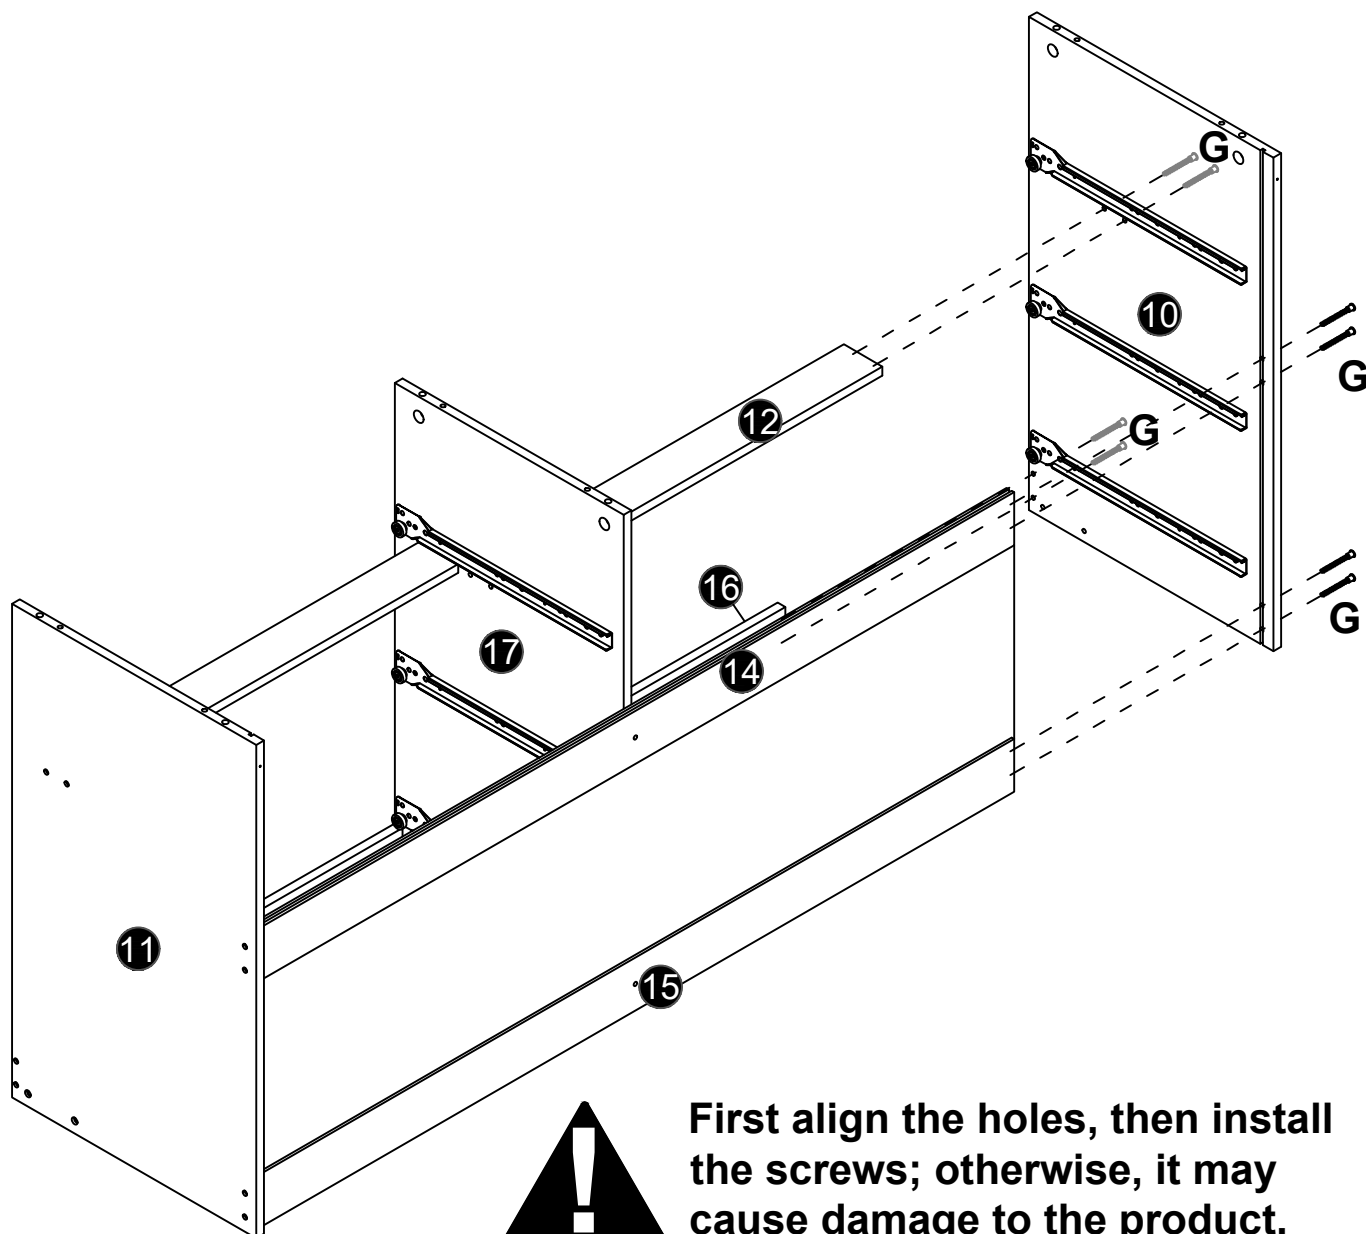


First align the holes, then install the screws; otherwise, it may cause damage to the product.

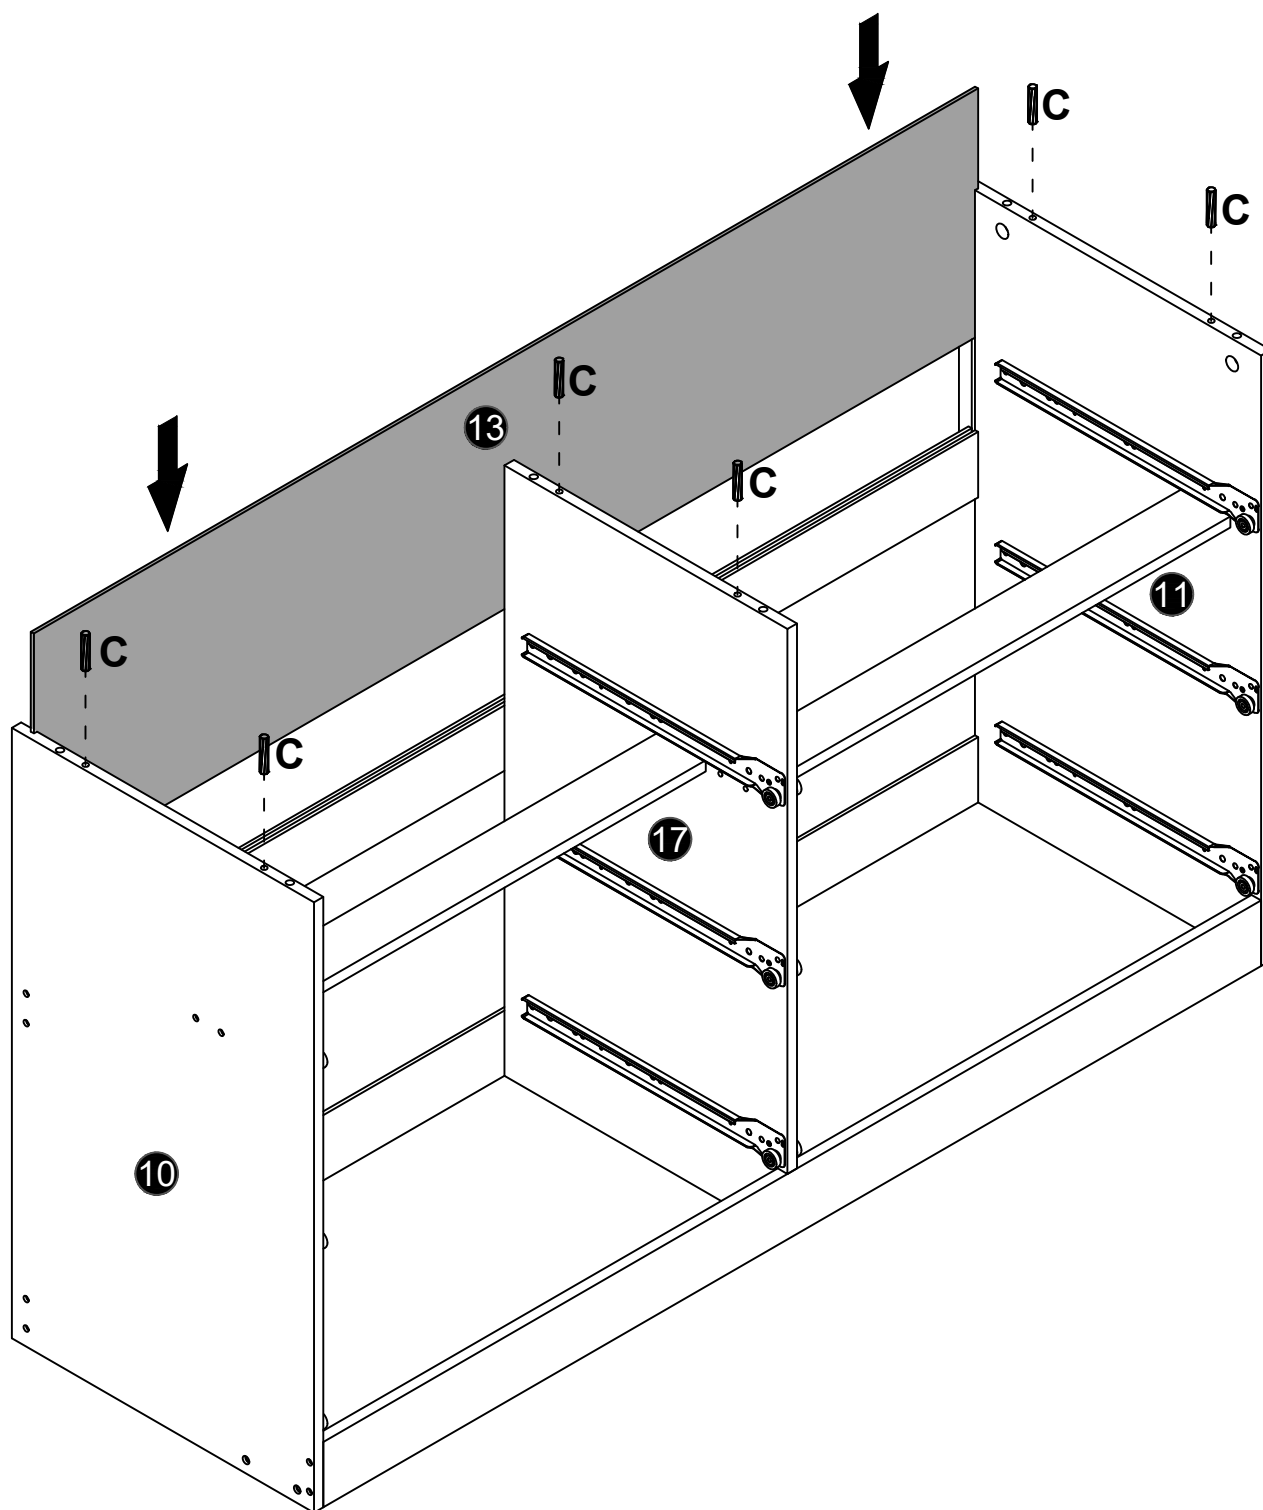


A x7




15


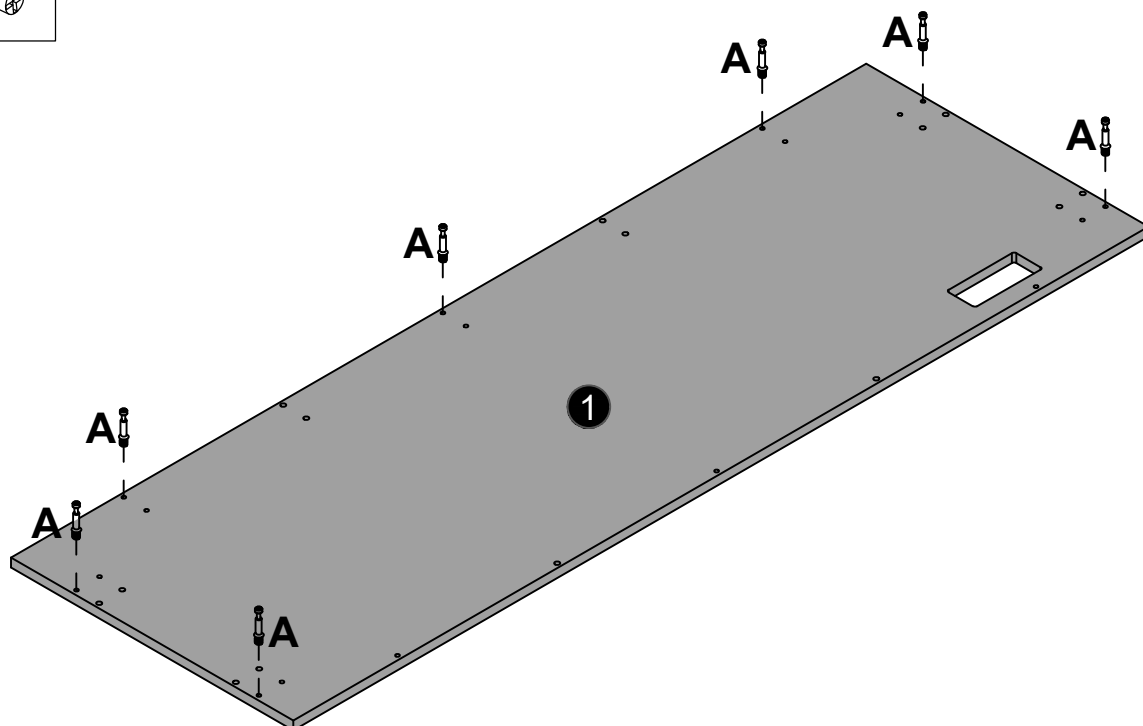


A x2





16

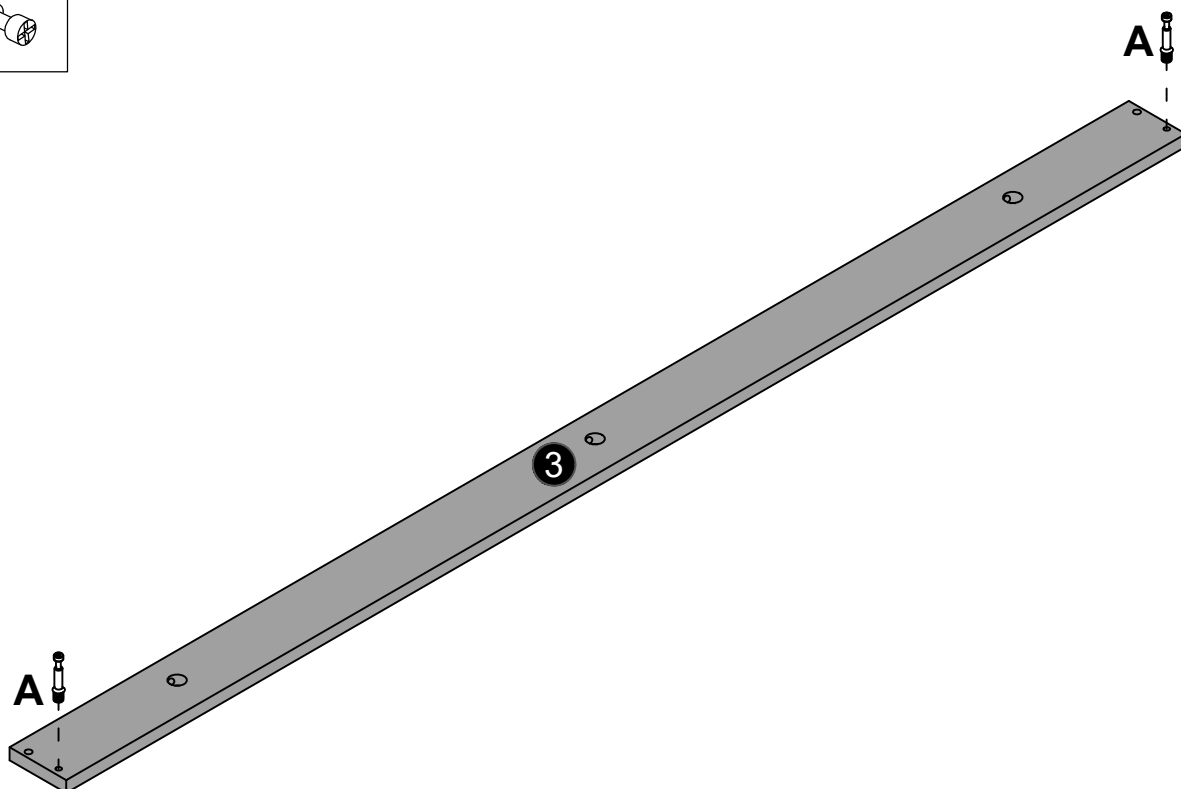

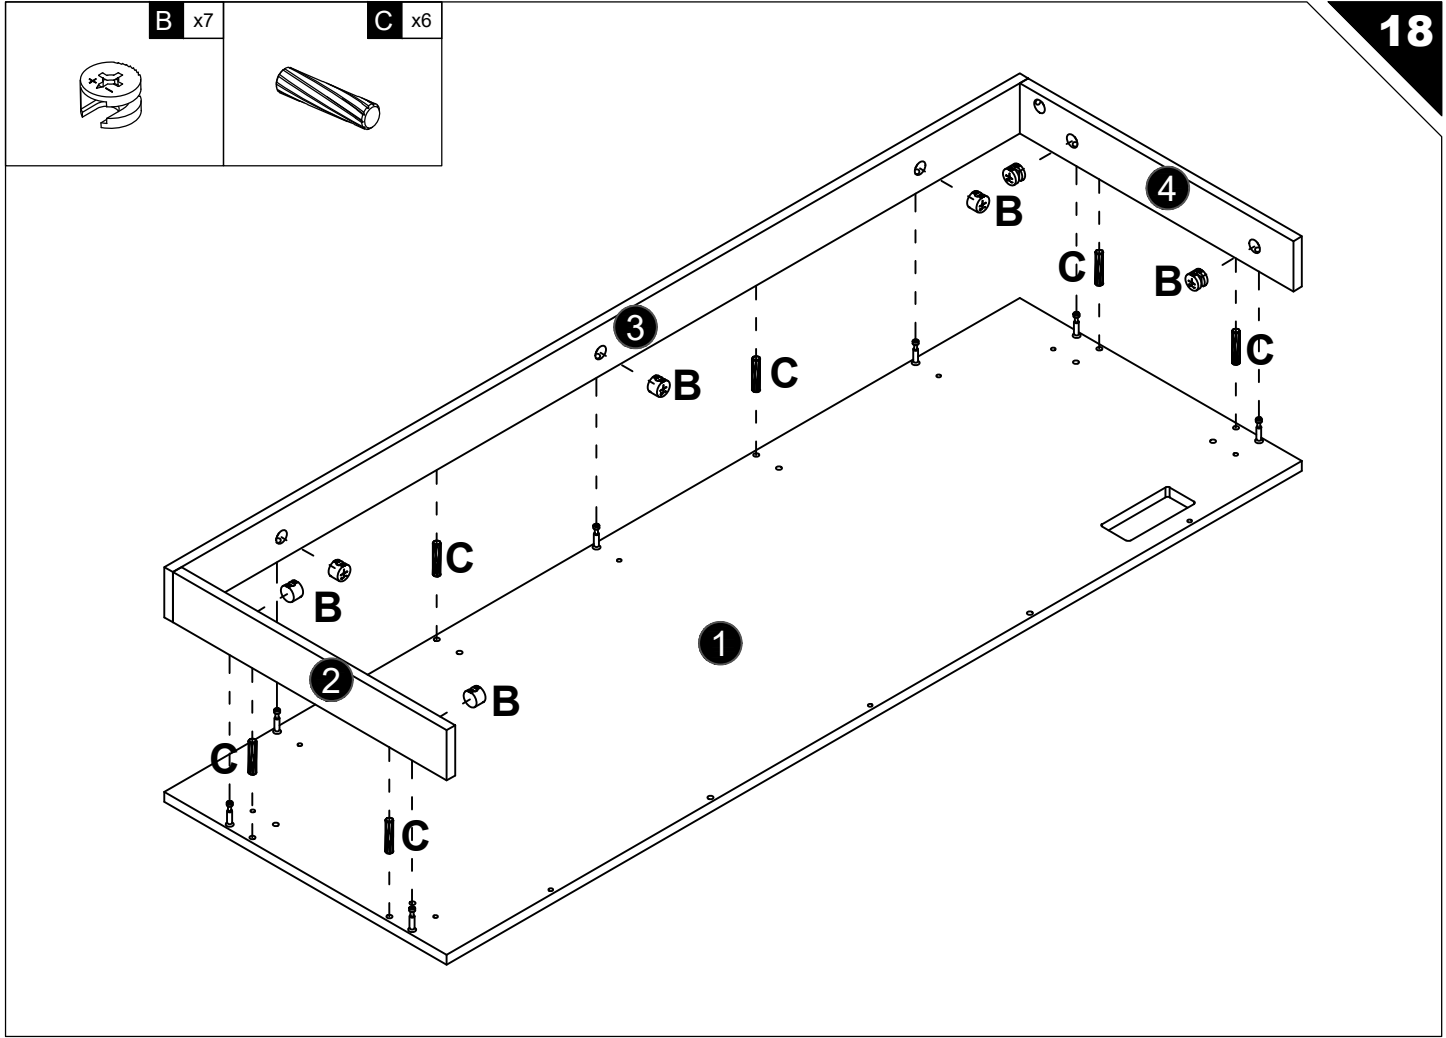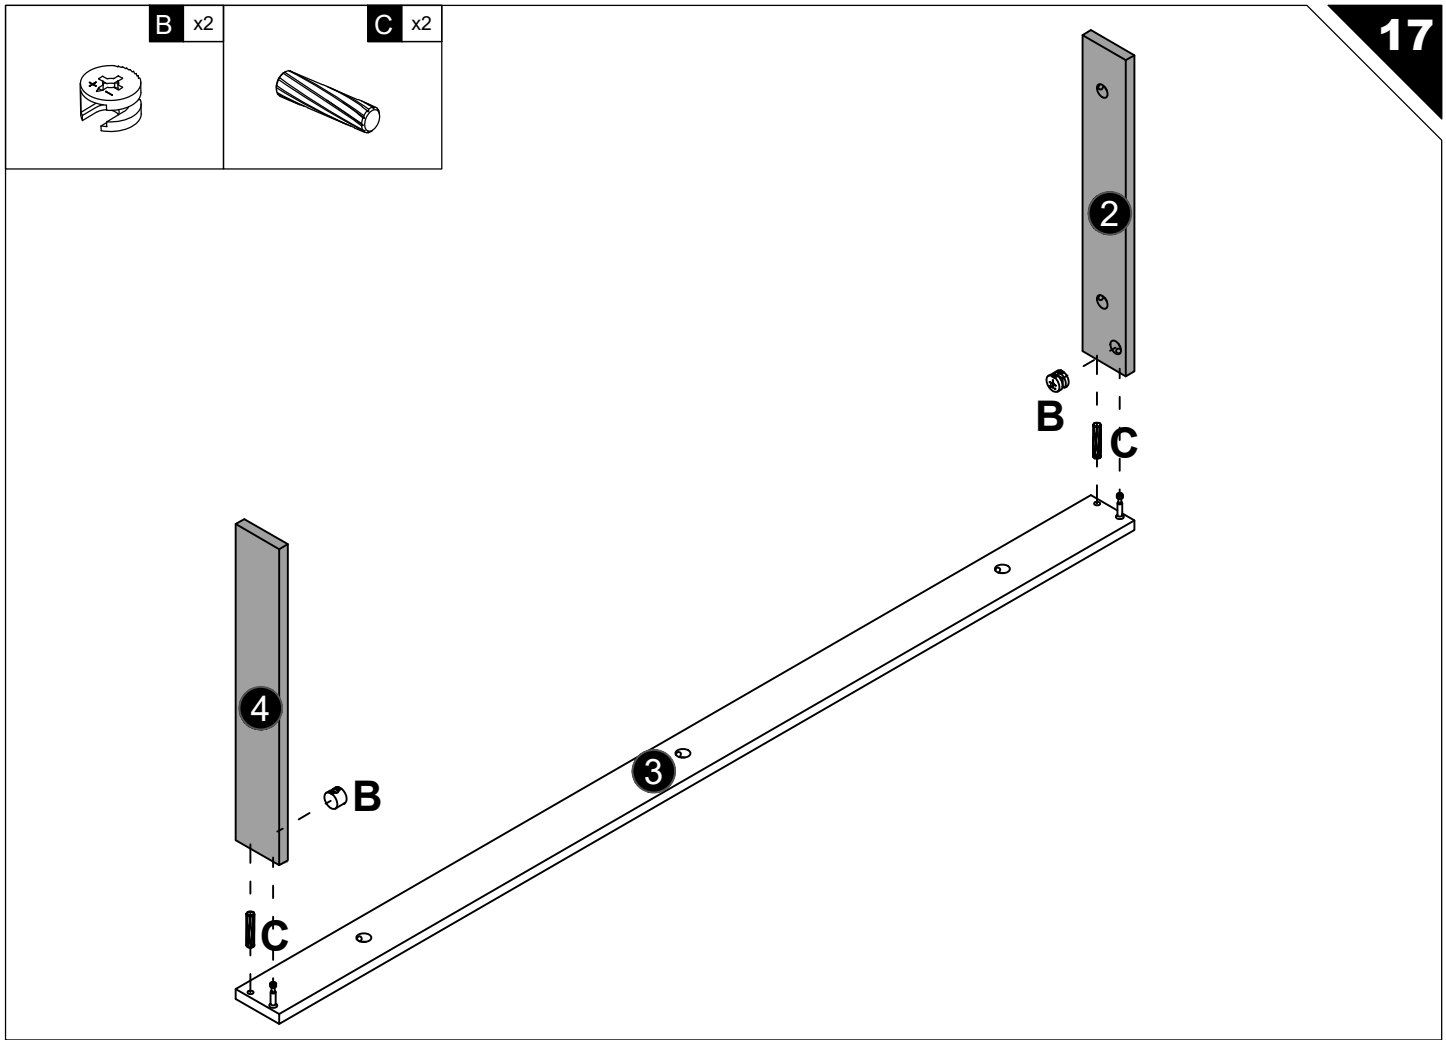



A x10

19

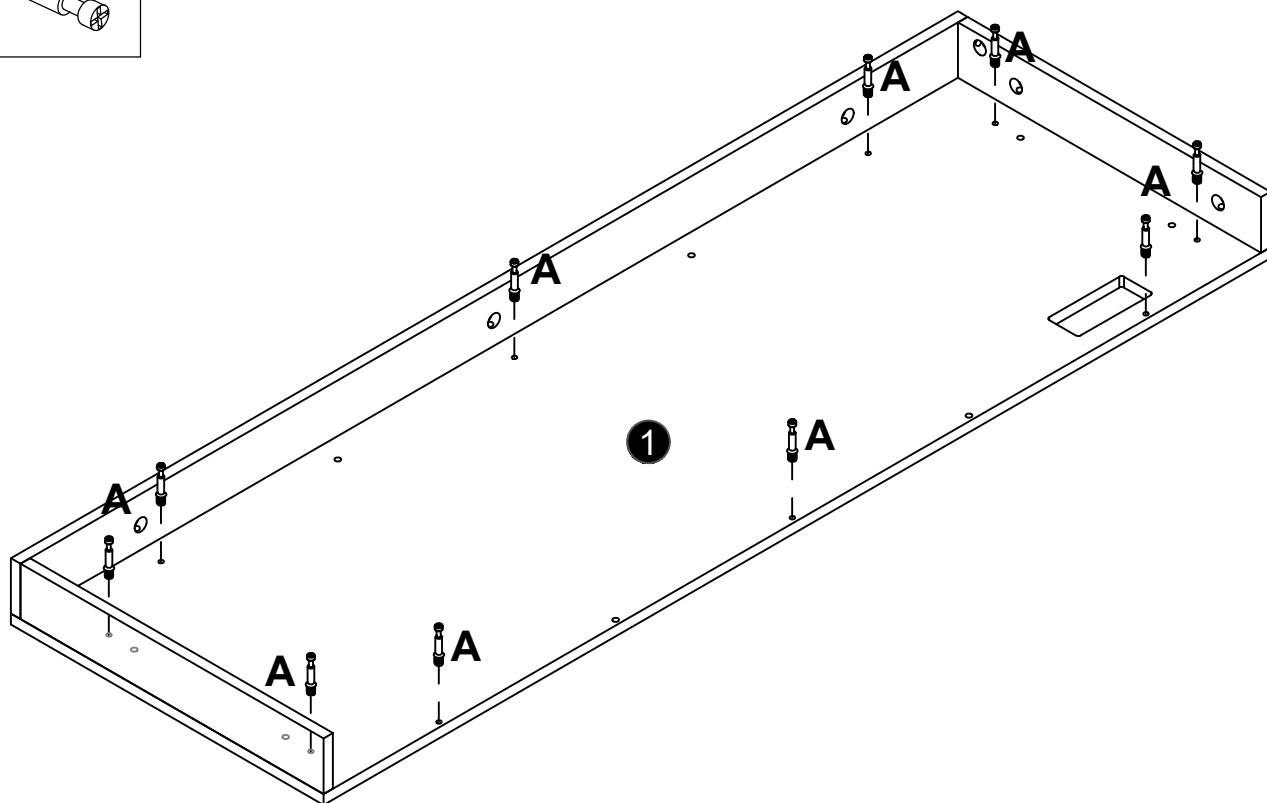


A x4

20

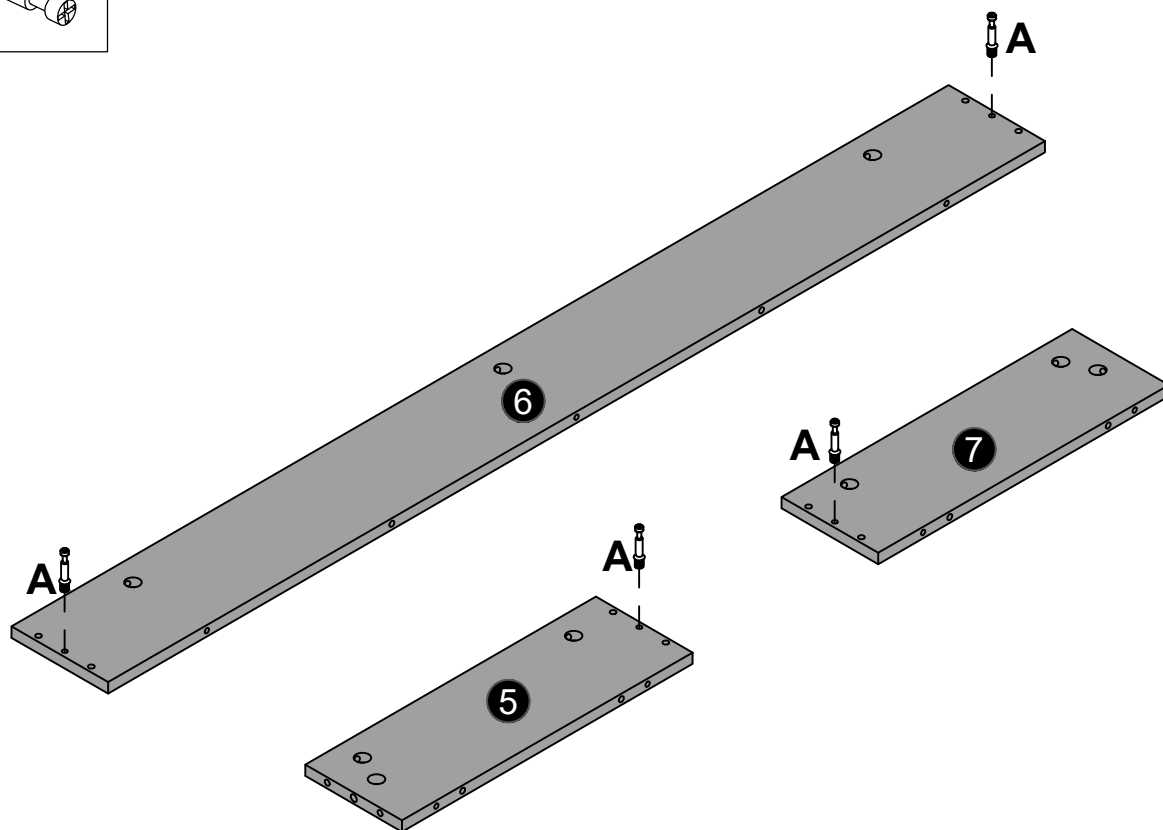


B x2

C x4

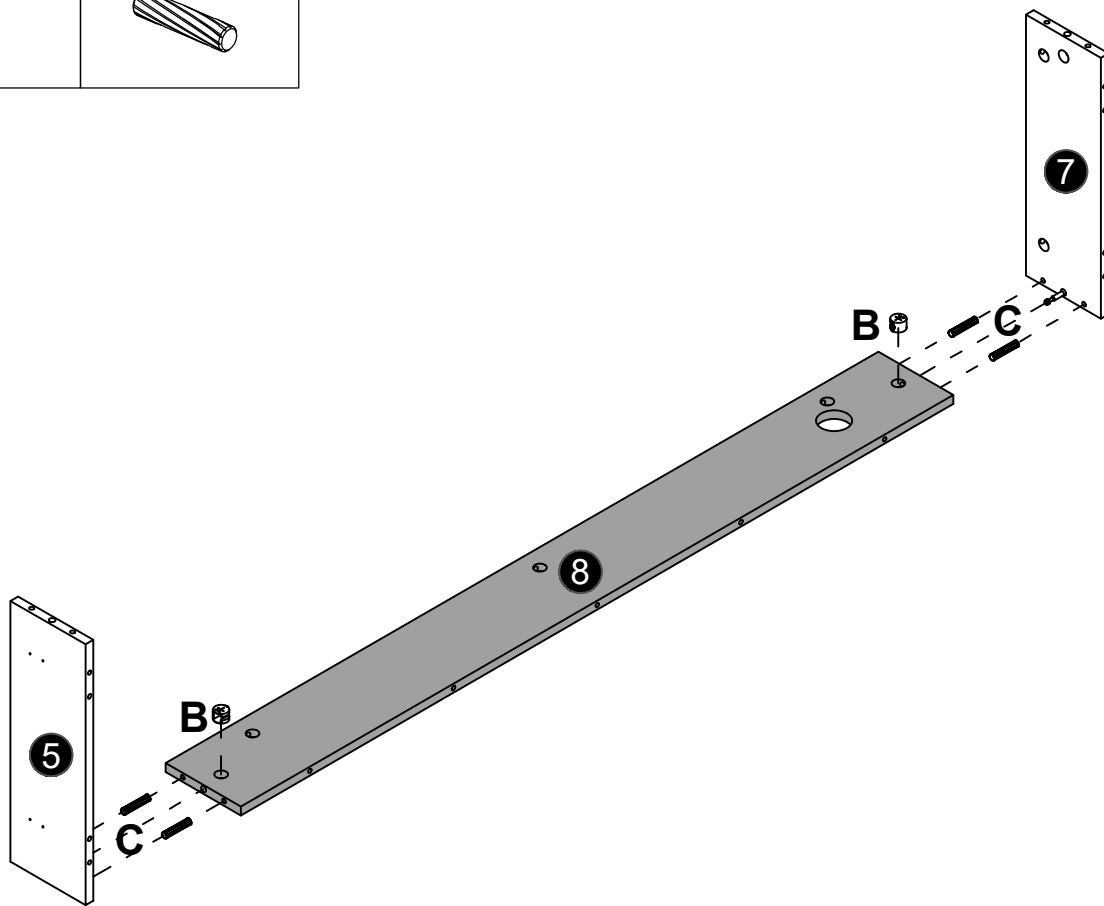


B x2





C x4

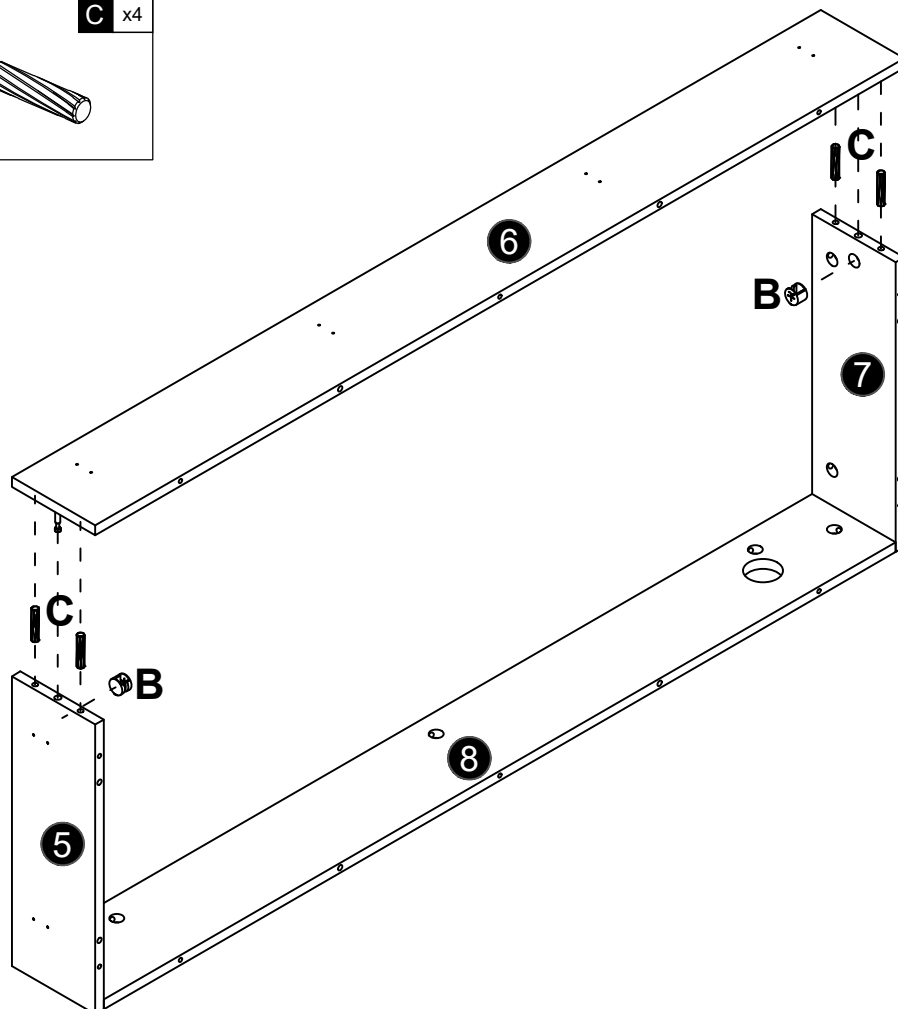

J x1

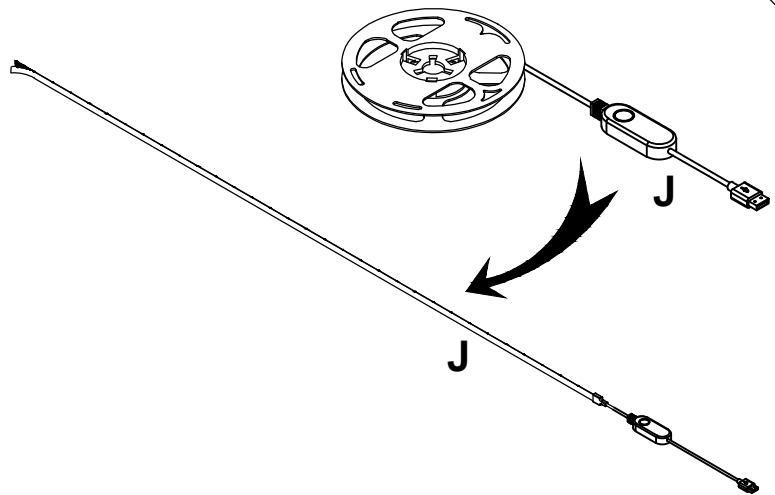

Before installing the light strip, use K to compare the installation path to avoid deviation.

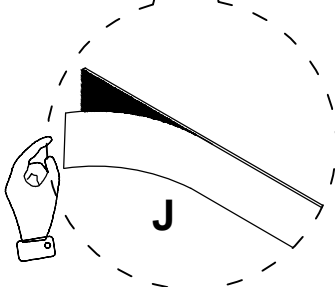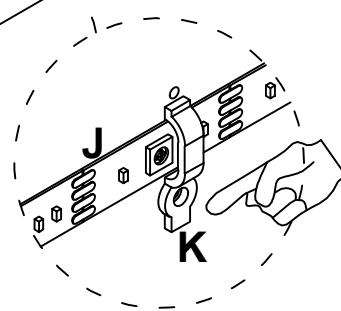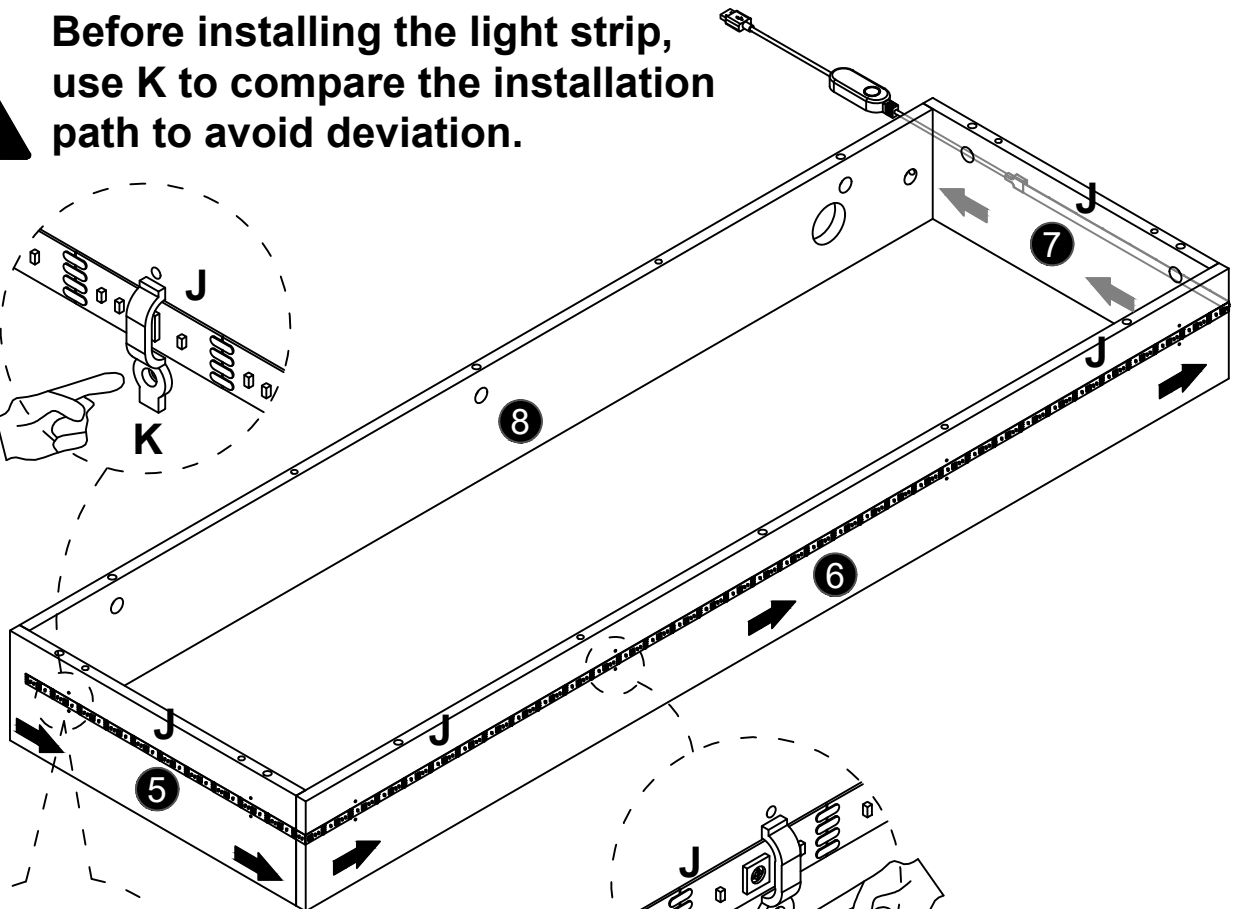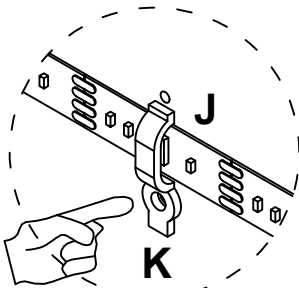

After comparing the installation path, peel off the backing paper slowly. It is recommended to peel along the path while installing the light strip, rather than removing it all at once, to prevent dust from sticking to the light strip, which may cause the adhesive to fail.

K x7

L x1




K-1

K-2




L-1

L-2

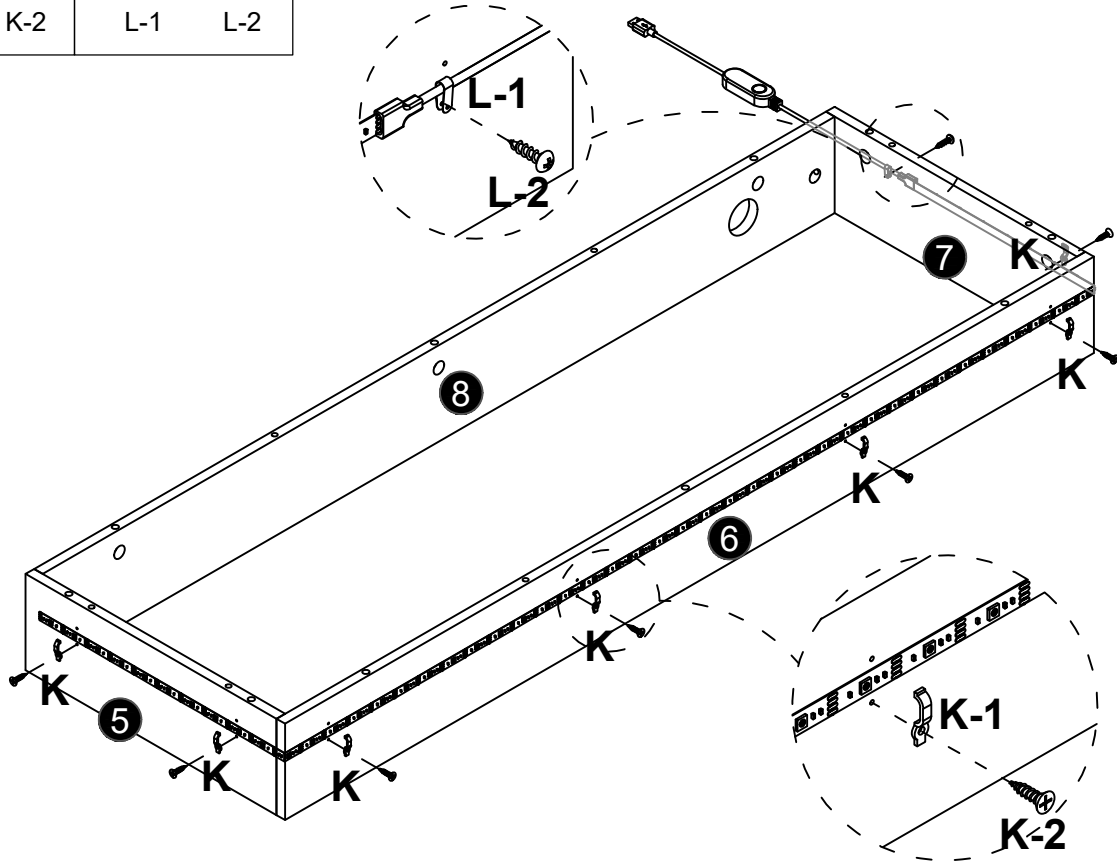




B x10

C x8


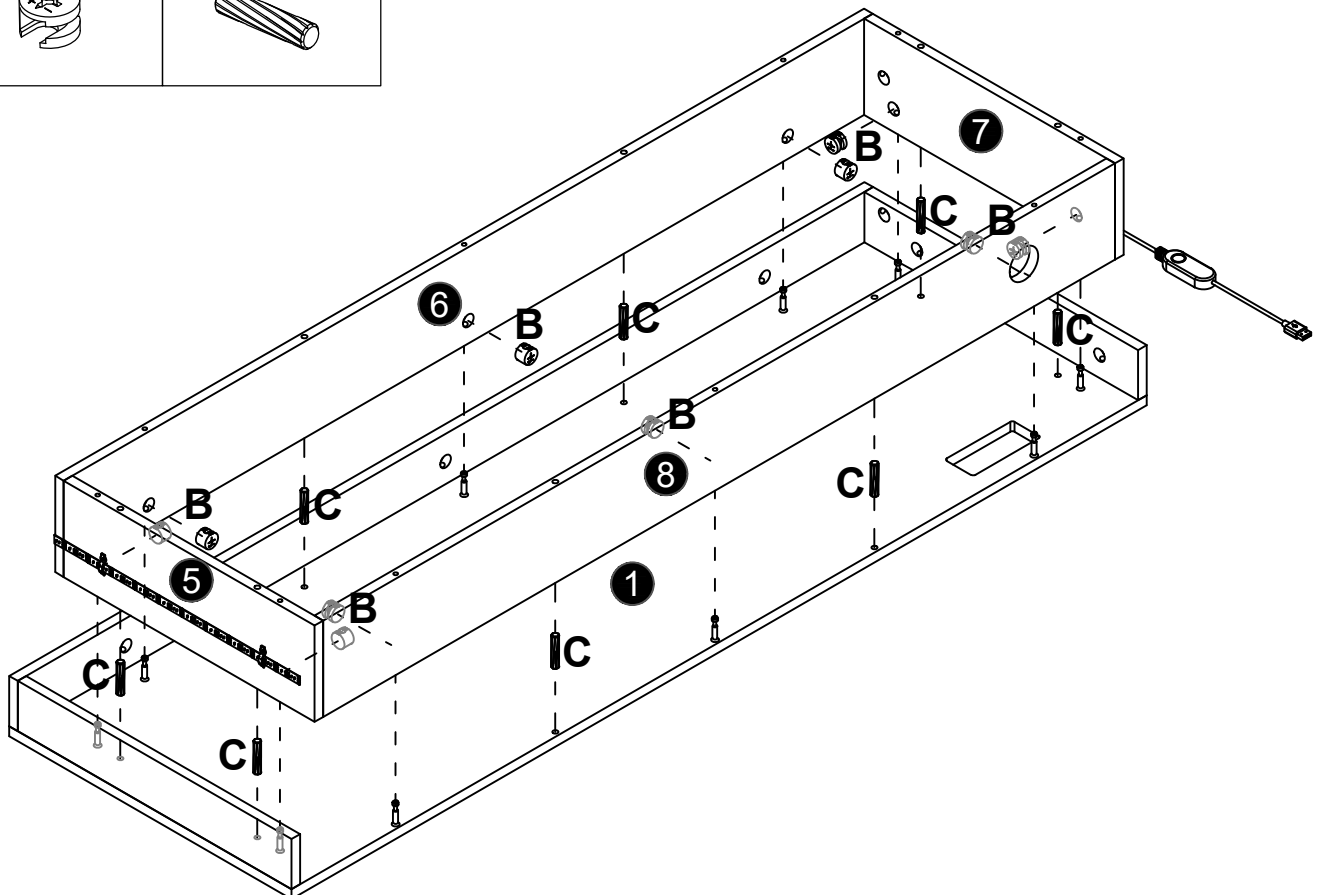




C x8




G x10

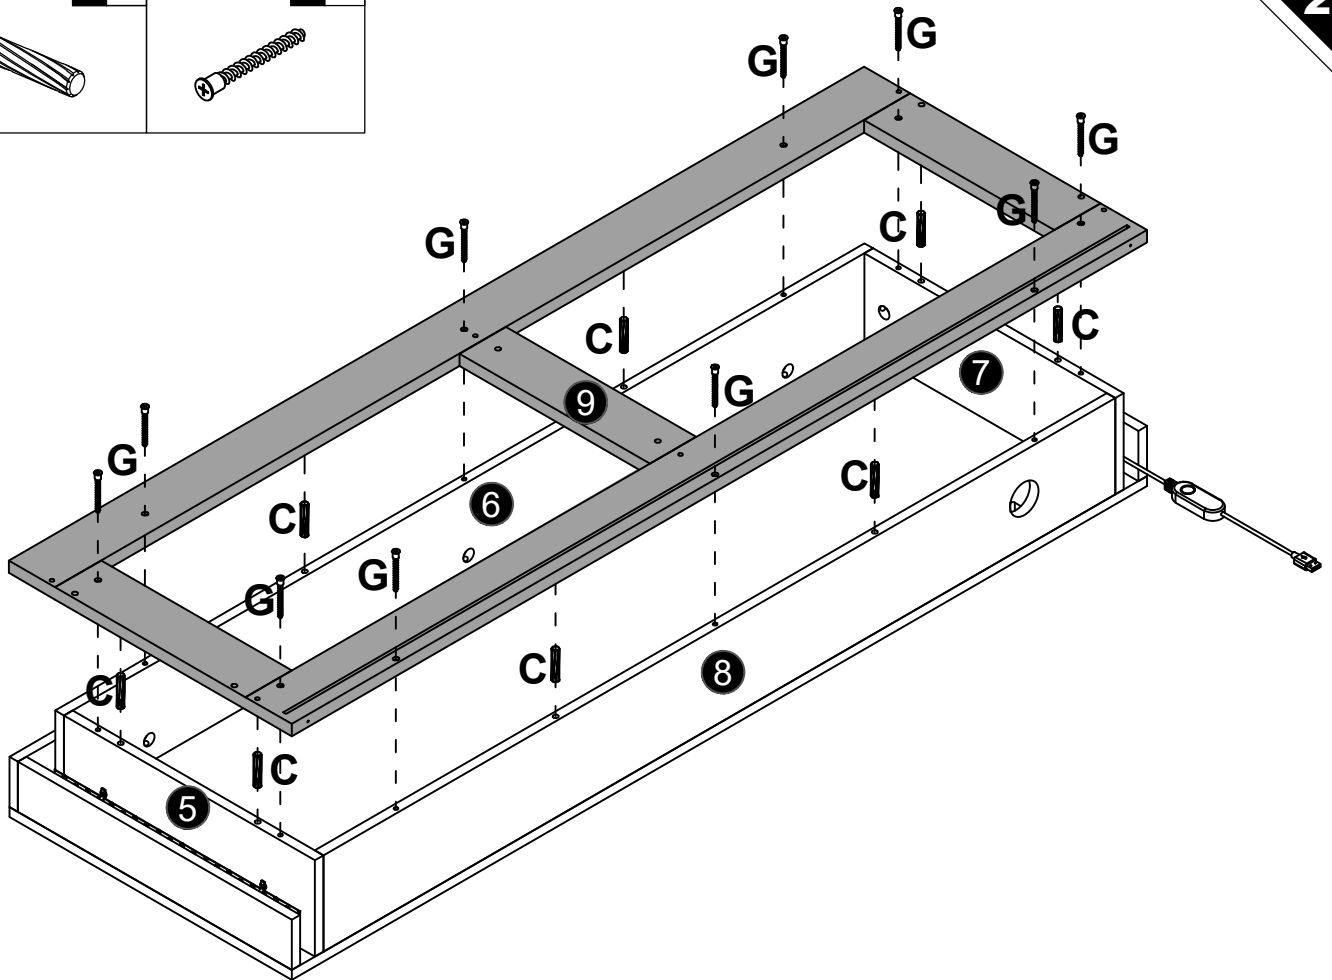


A x6

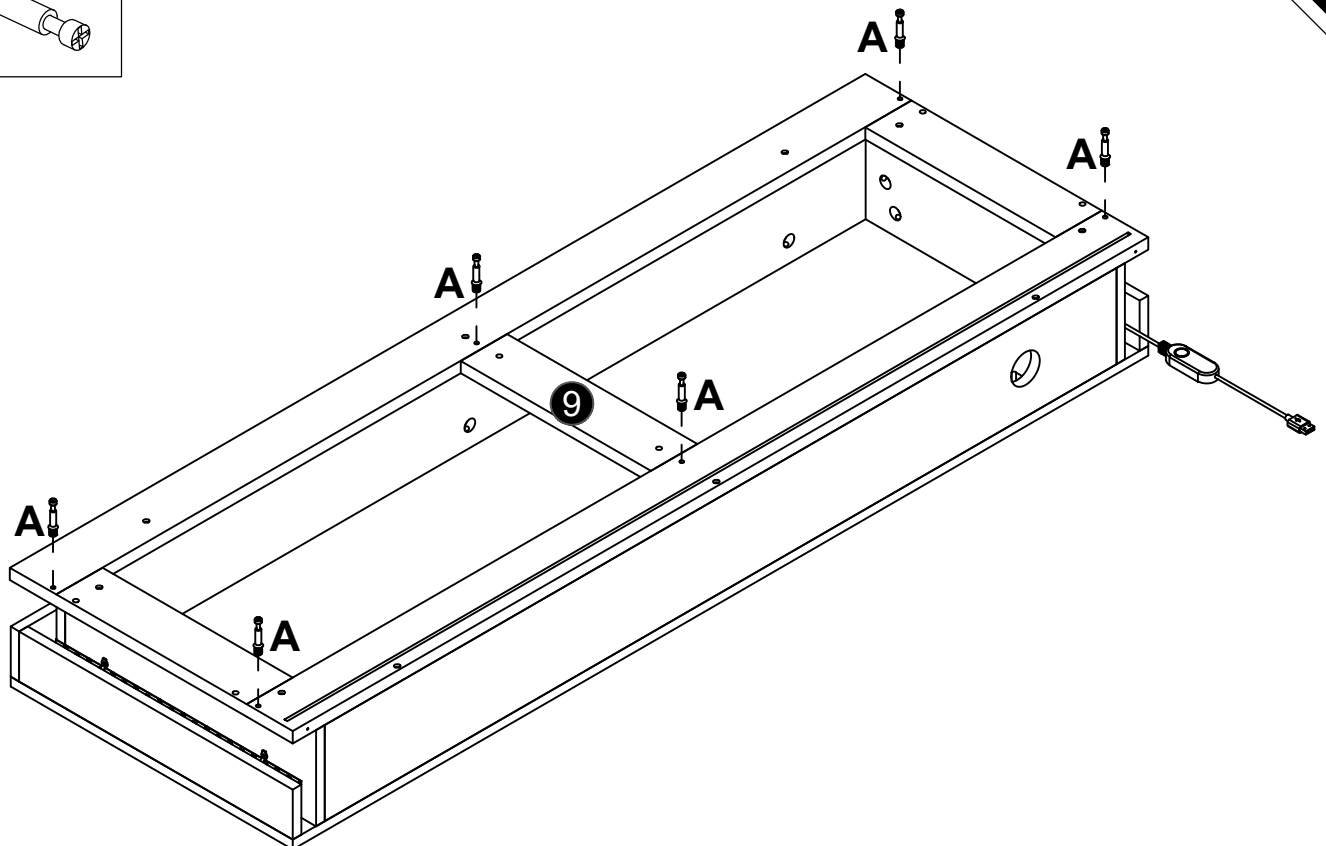

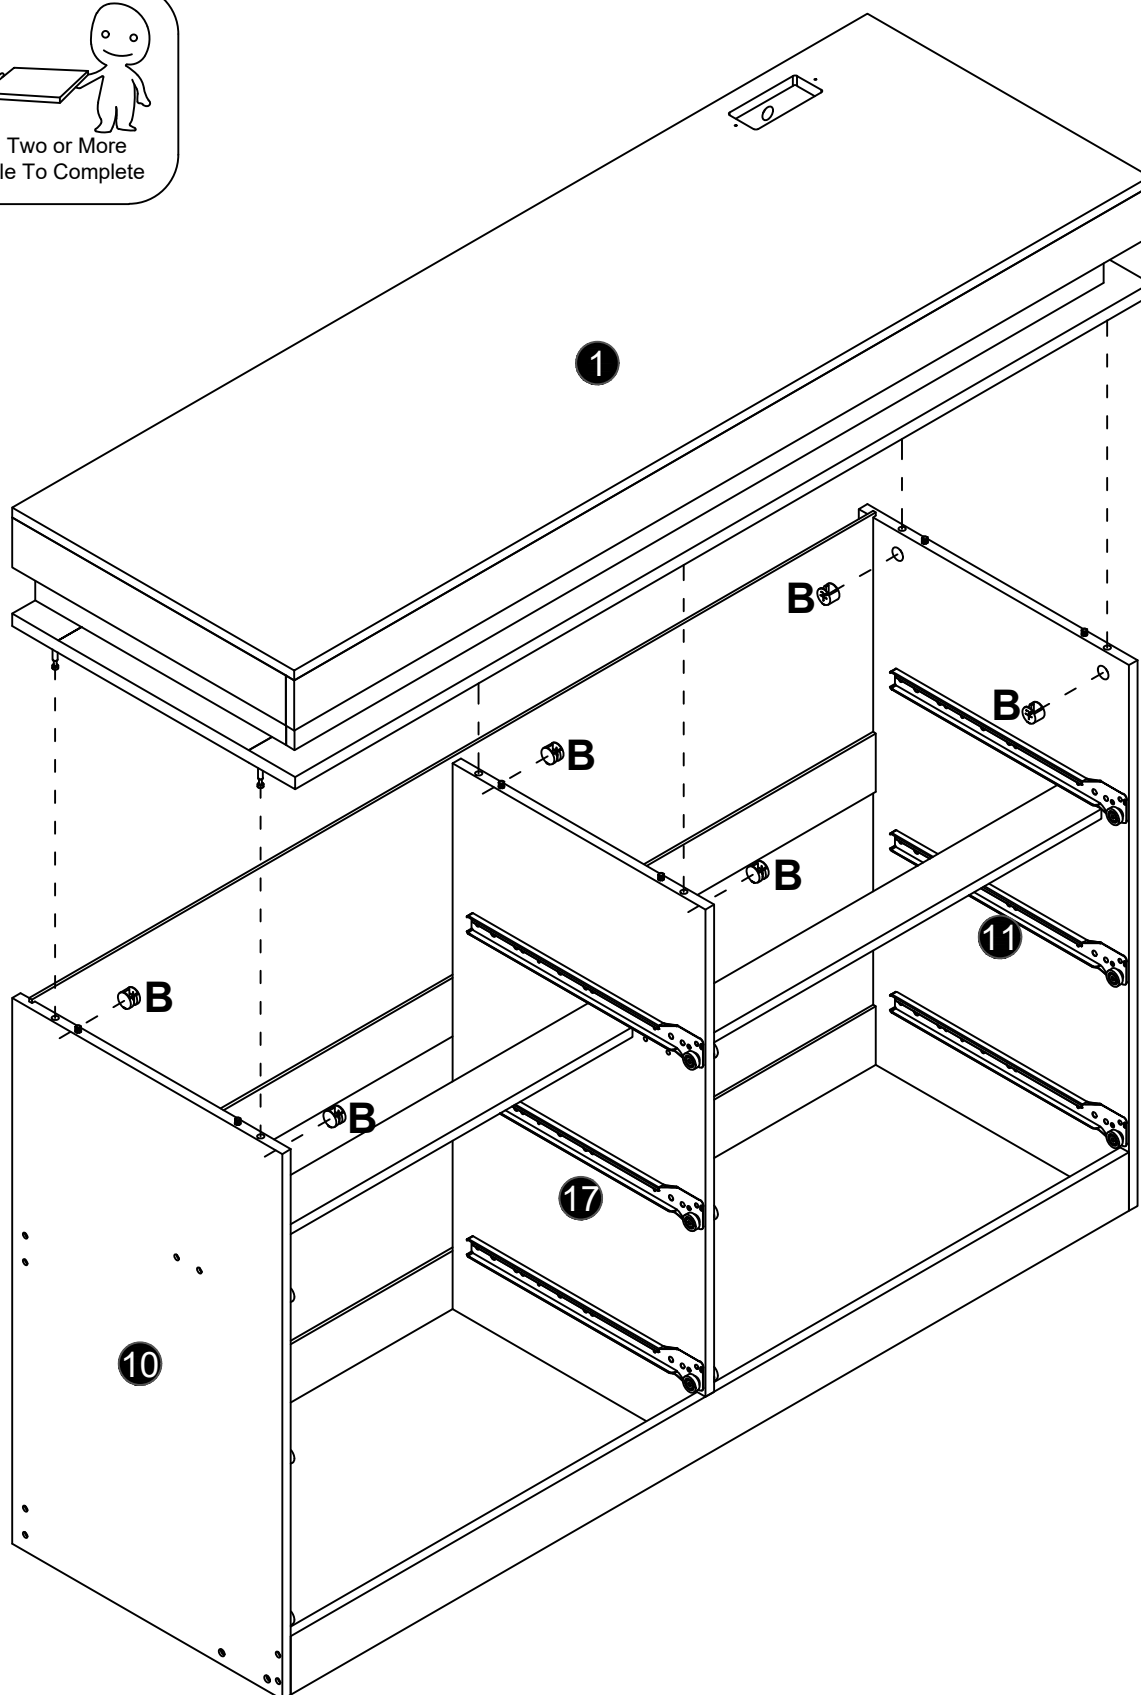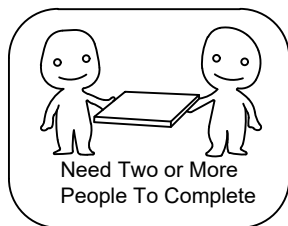


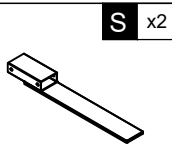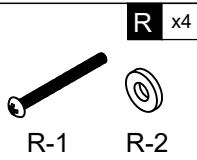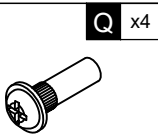



(1)

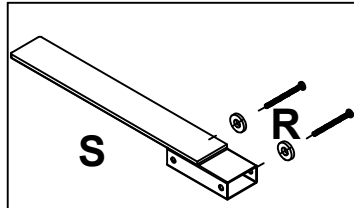

(2)

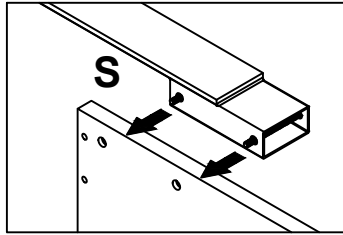


(3)

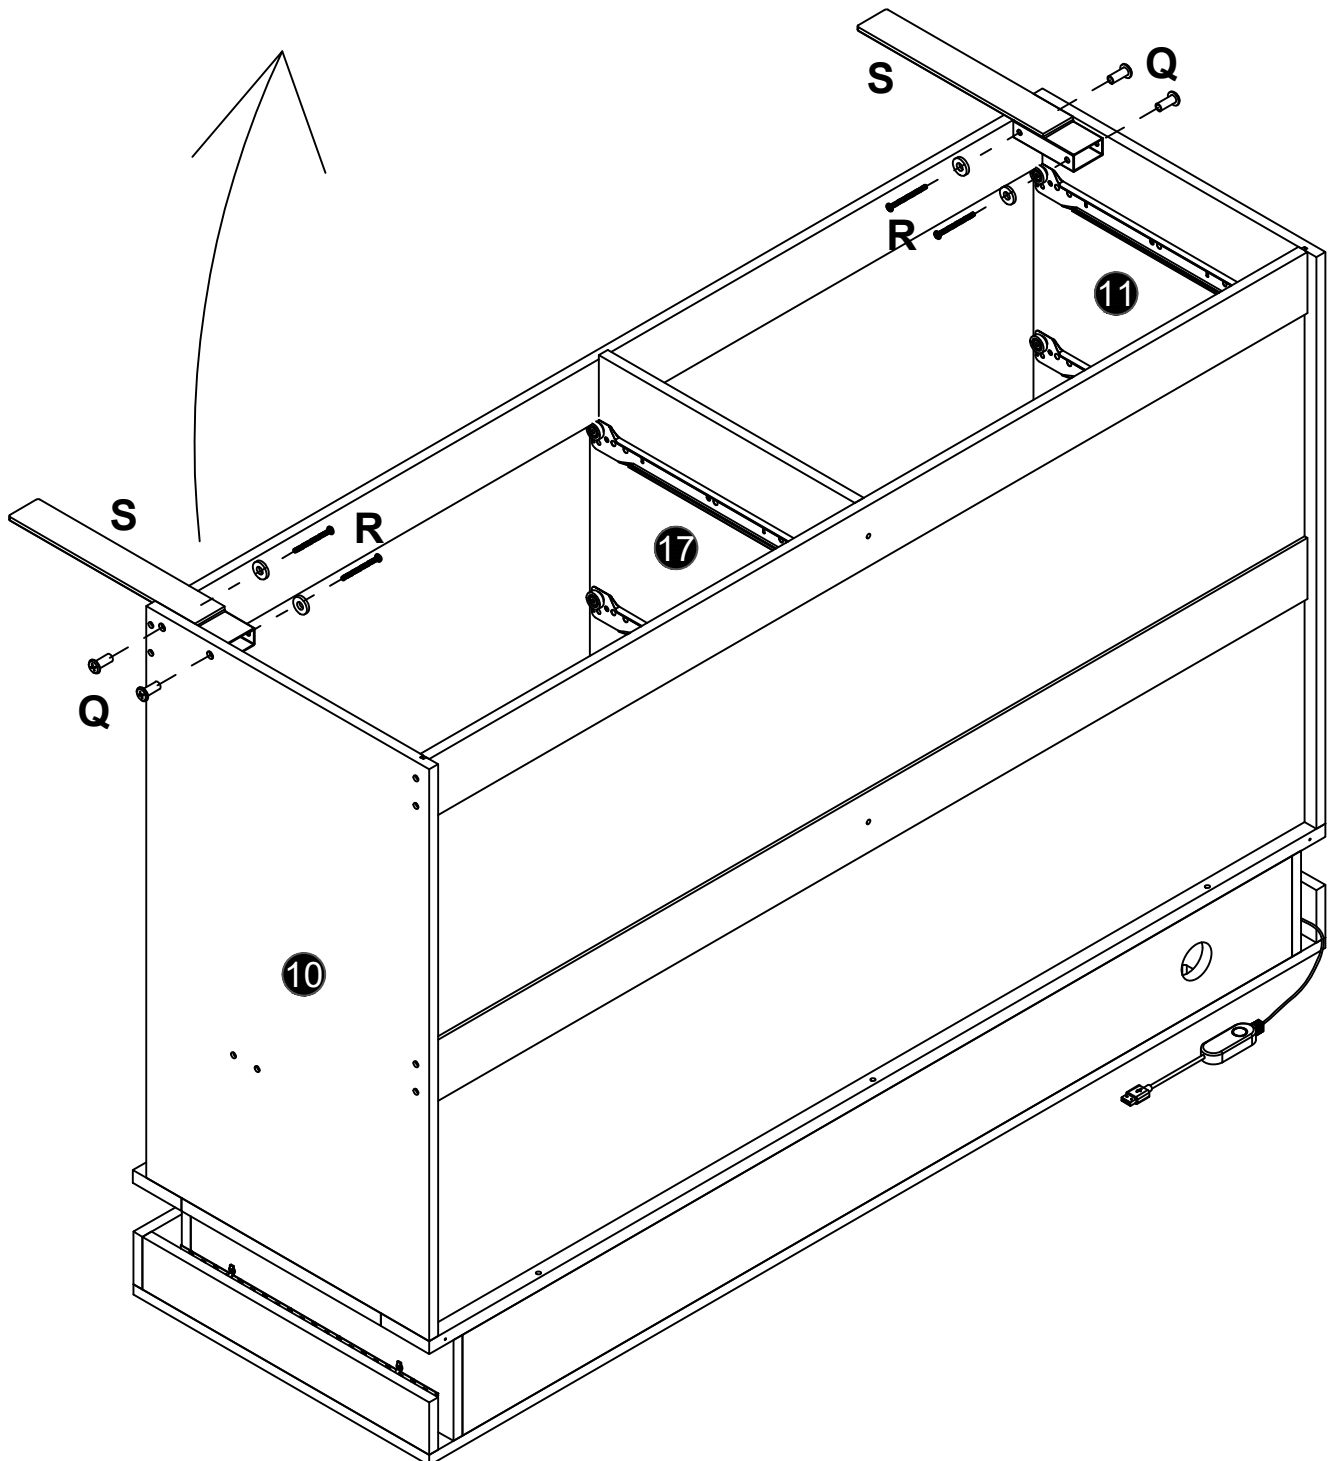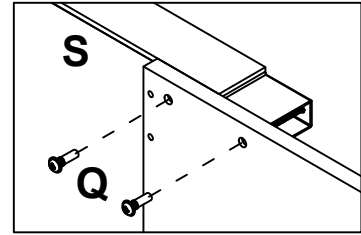

O x1



P x2

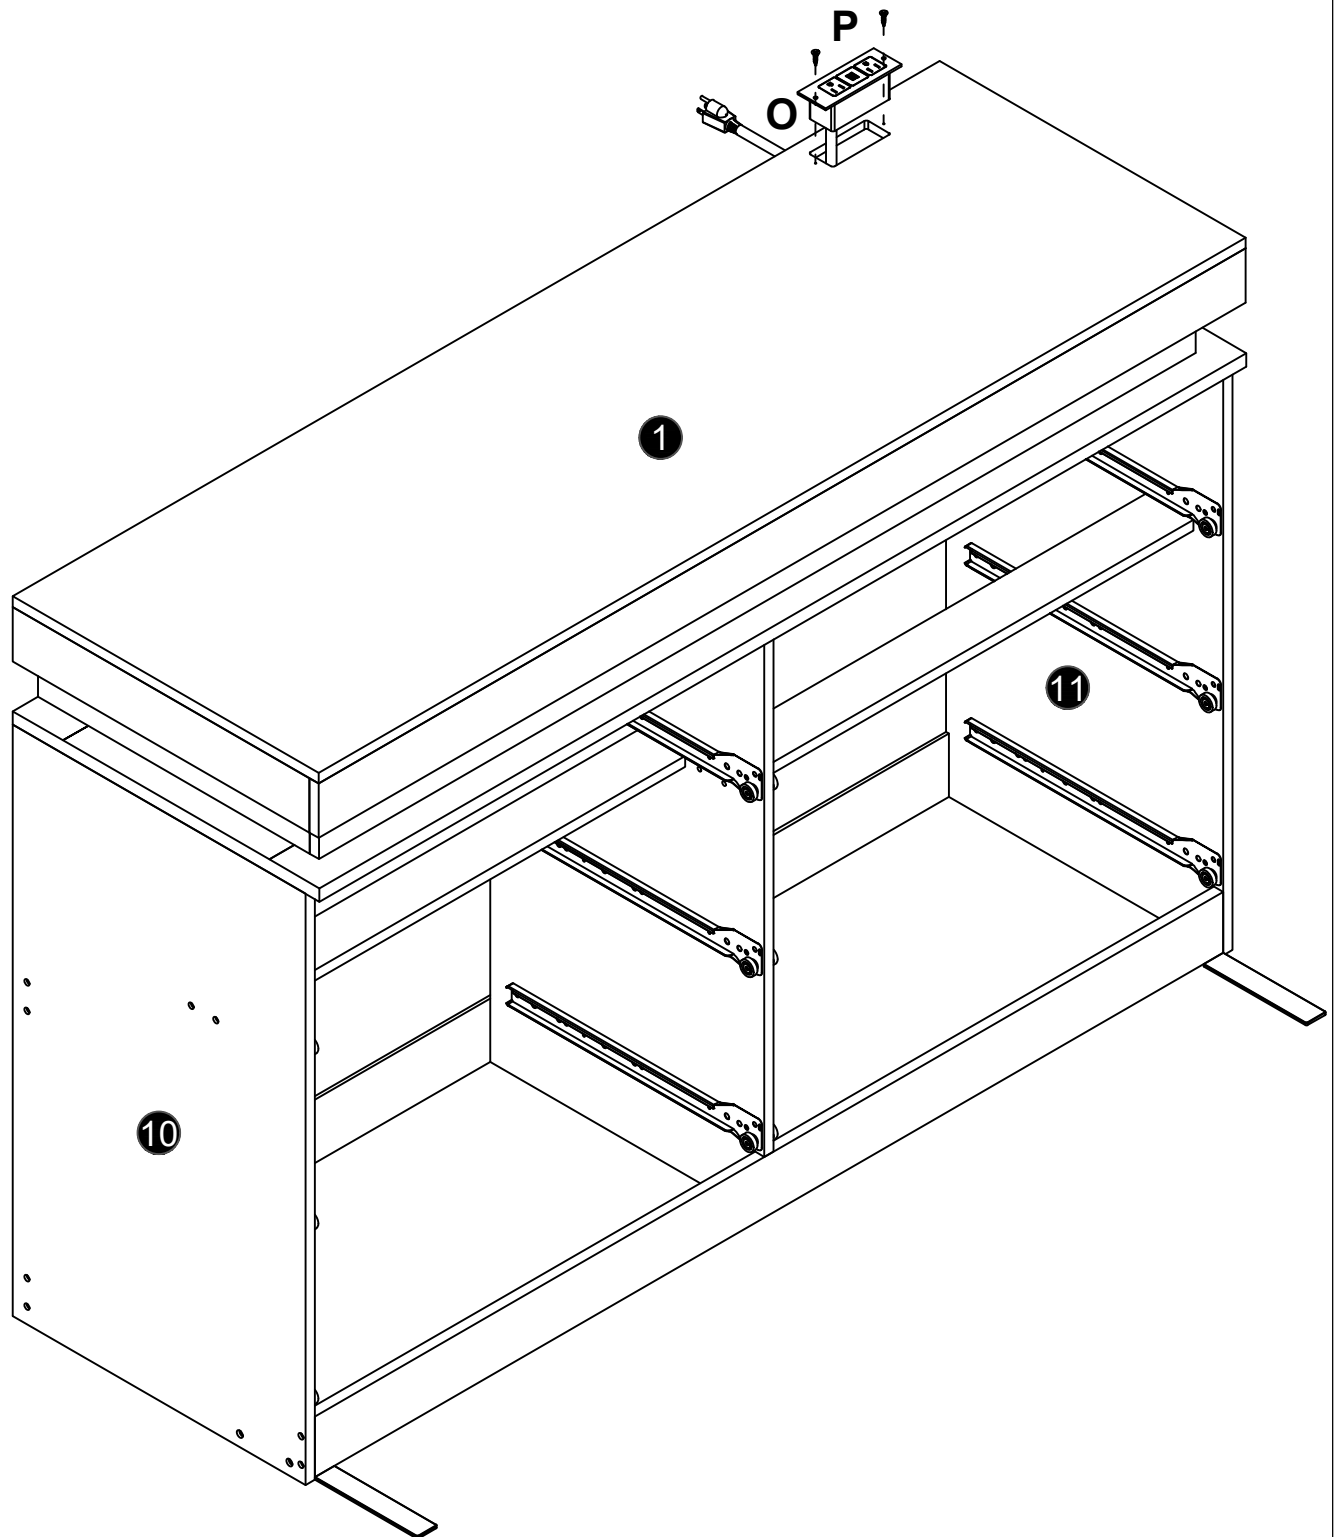

M x20


N x12





N-1




N-2

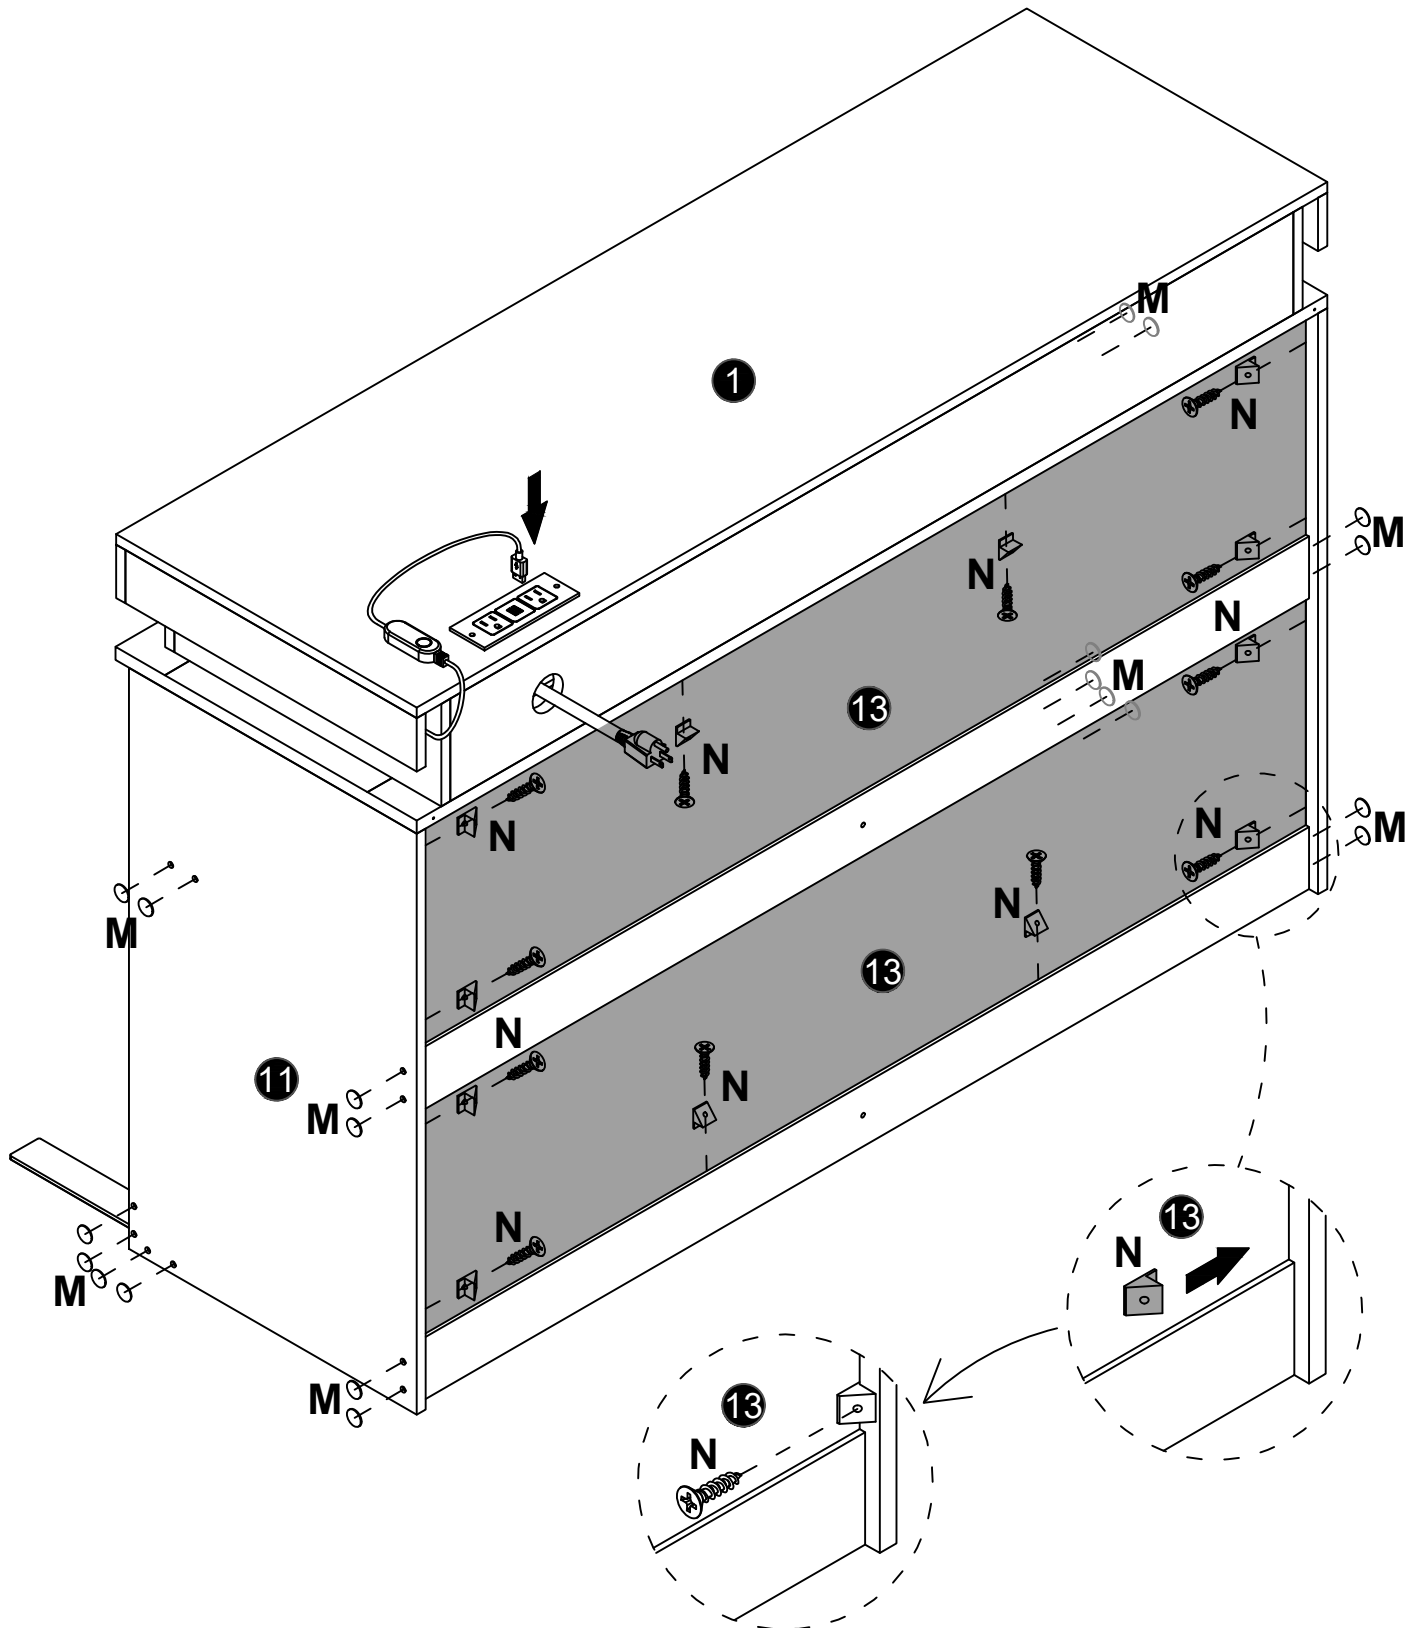


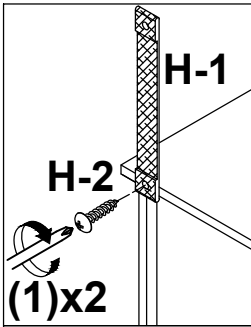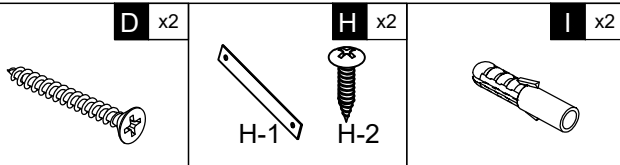


First fix the anti-rewind screw in the reserved hole of the product.

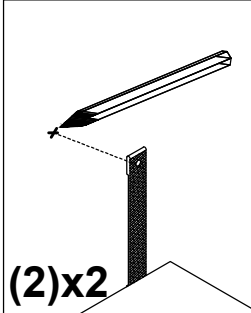


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

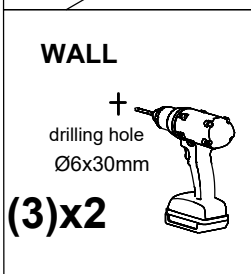

Then use a tape drill to make holes in the wall that are suitable for the product screws.

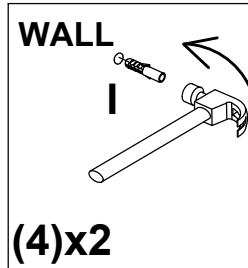


Then, put the expansion bolt into the hole

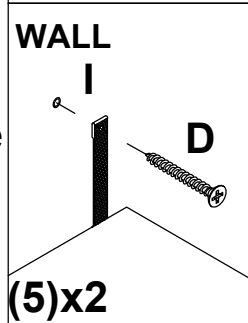




Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.



When moving the product in the future, pull out the drawer first to prevent it from falling and causing injury. Pulling out the drawer also makes moving easier.

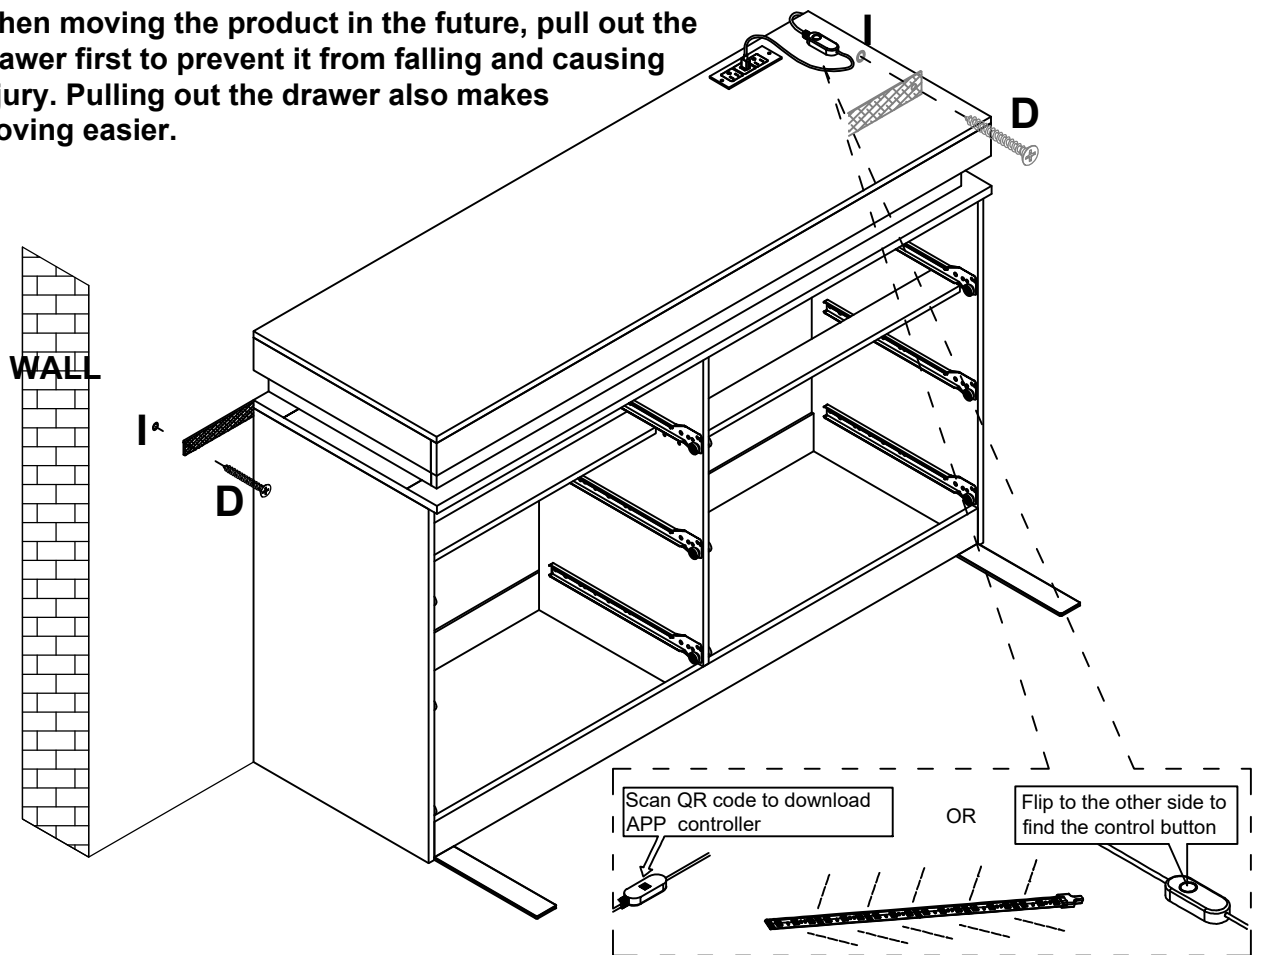

Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
The picture shows the left drawer installed in the cabinet.

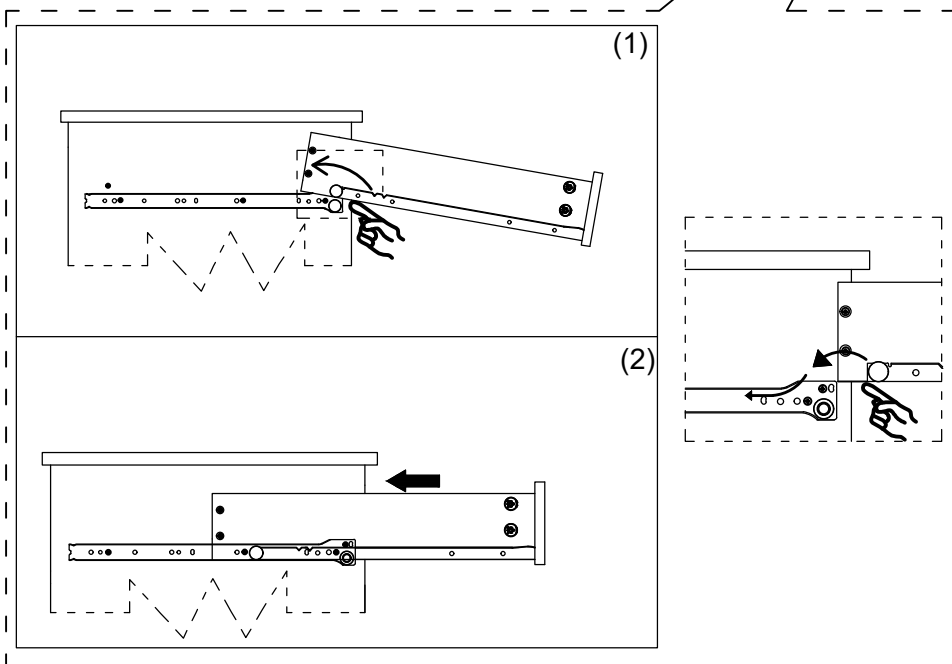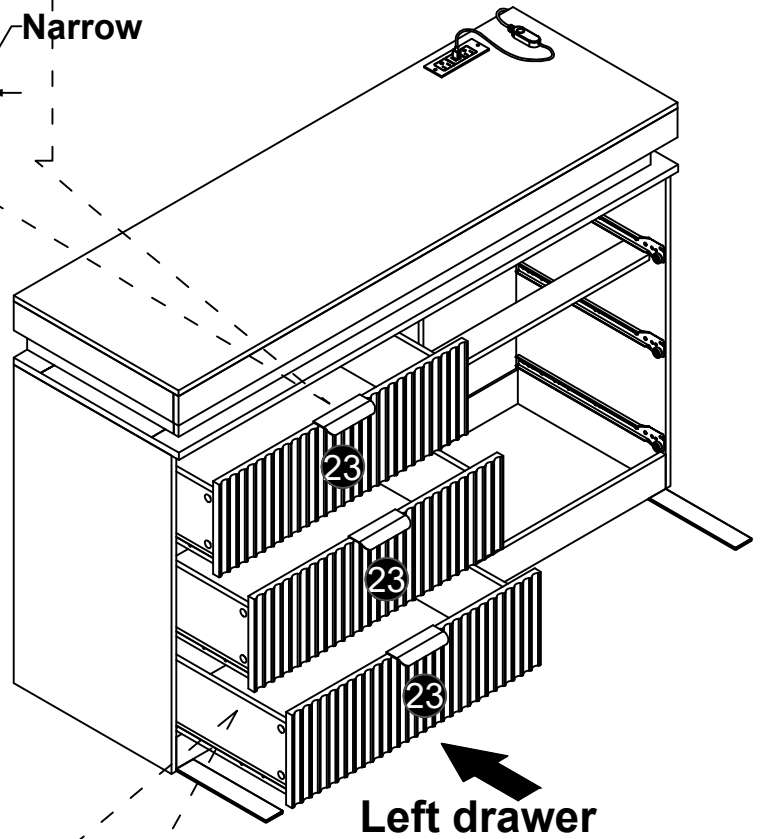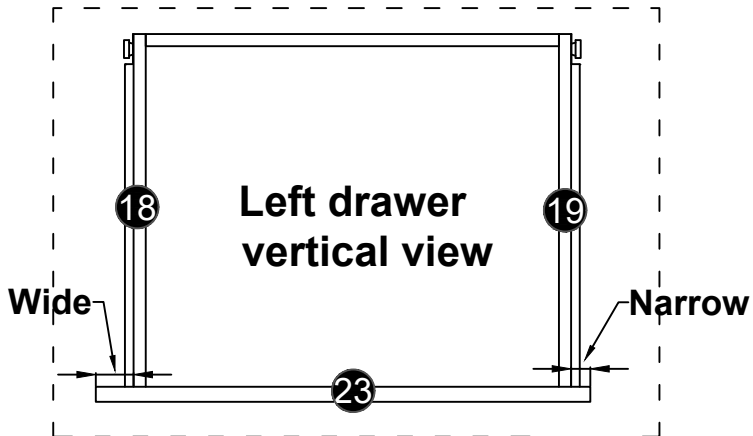

Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
The picture shows the right drawer installed in the cabinet.

