# **FULL SIZE BED**

# **ASSEMBLY INSTRUCTIONS**



PAGE 1 OF 4

### **ASSEMBLY INSTRUCTIONS**

#### ASSEMBLY TIPS

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



#### Warning!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

#### PARTS IDENTIFICATION **B1 (BOX 1) B2 (BOX 2) HEADBOARD PANEL** 1PC **BED SLAT** 4PCS LEFT HEADBOARD LEG 1PC BED SLAT SUPPORT 4PCS WITH LEVELER C RIGHT HEADBOARD LEG 1PC 2PCS **BED RAIL** FOOTBOARD PANEL 1PC D HB 1PC \* FROM BOX 1 **HEADBOARD** 1PC LEFT FOOTBOARD LEG **COMPLETE** FB 1PC RIGHT FOOTBOARD LEG 1PC \* FROM BOX 1 **FOOTBOARD COMPLETE** HARDWARE IDENTIFICATION Z - B2 (BOX 2) **Z - B1 (BOX 1)** 12PCS **BOLT** FLAT HEAD SCREW 8PCS LOCK WASHER 12PCS PHILIPS HEAD 1PC SCREW DRIVER 12PCS 3 FLAT WASHER WOOD PLUG 4PCS 5 ALLEN WRENCH 1PC **NOTE: MANUFACTURER DOES NOT PROVIDE ITEM 7**

## BOX1


## STEP 1


Align and fasten left & right headboard legs to headboard panel using bolt, lock washer and flat washer and tighten with Allen wrench. Insert wood plugs into open holes of headboard legs

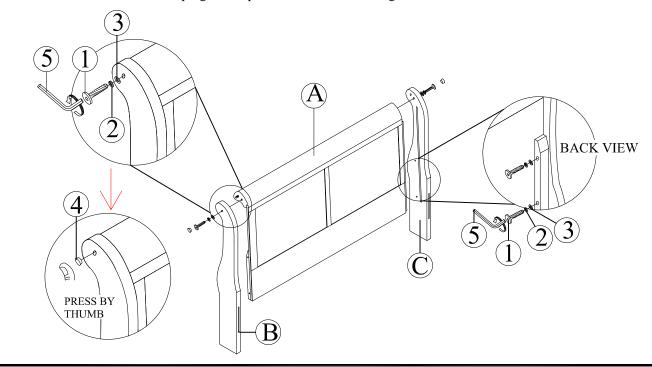

## STEP 2


Align and fasten left & right footboard legs to footboard panel using bolt, lock washer and flat washer and tighten with Allen wrench. Insert wood plugs into open holes of footboard legs

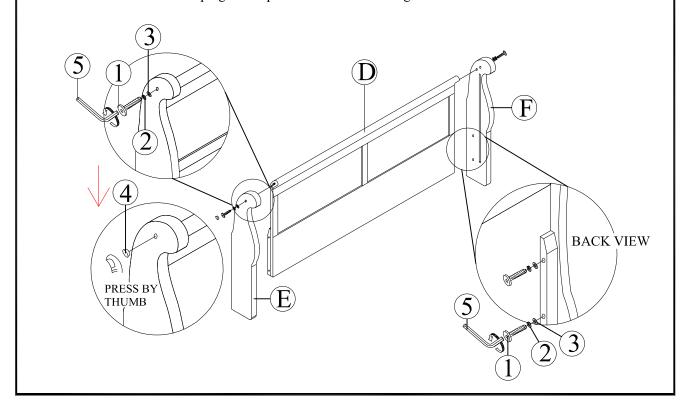

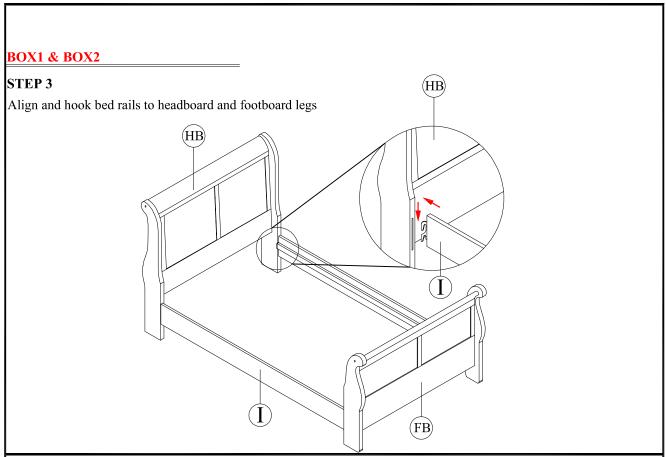

## STEP 4

- 4.1 Align and fasten bed slat support with leveler to bed slat by turning the bed slat support clockwise until tight.
- 4.2 Align and fasten bed slat to bed rails using flat head screws and tighten with screw driver (not included).
- 4.3 Adjust leveler to touch the floor

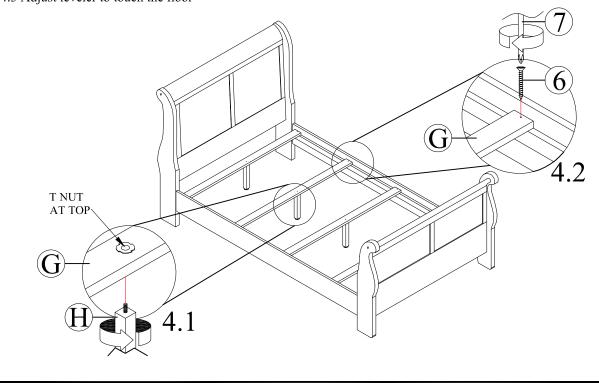

PAGE 4 OF 4