



ASSEMBLY INSTRUCTION

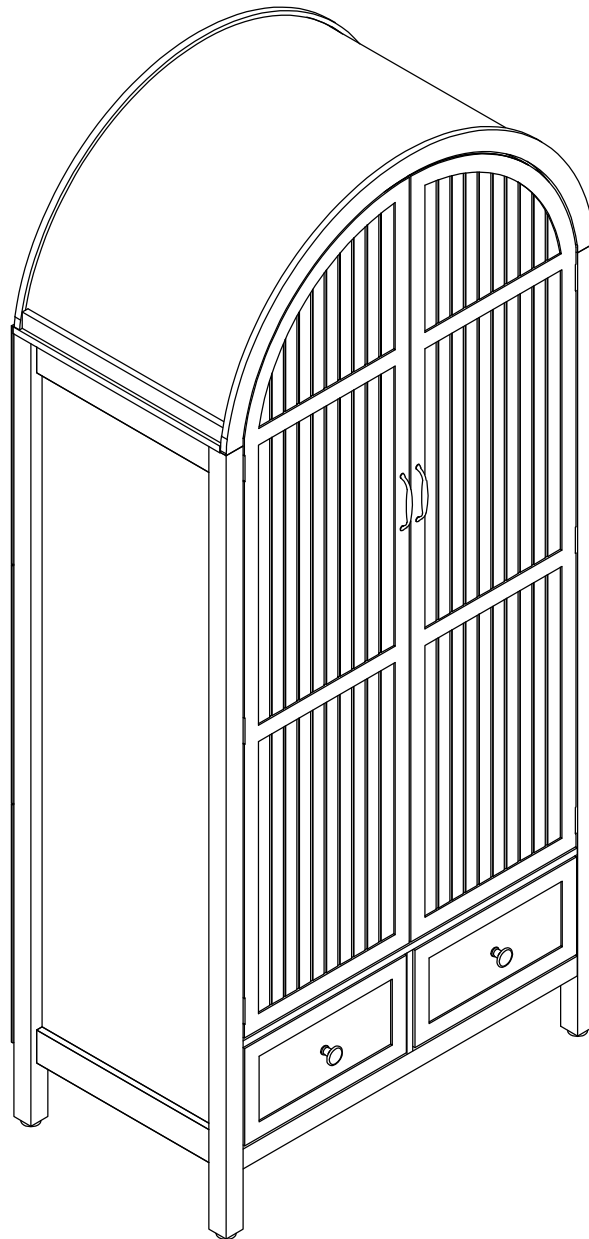




Estimated time for assembly

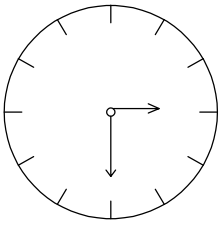

60:00


What you need

- Use the packaging carton as a working surface to prevent product damage during assembly.
- Phillips head screwdriver.








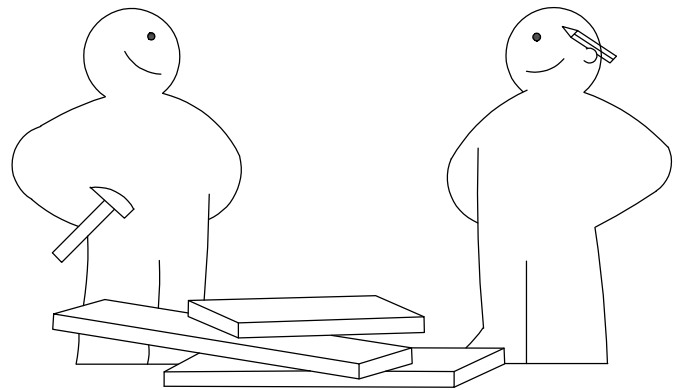
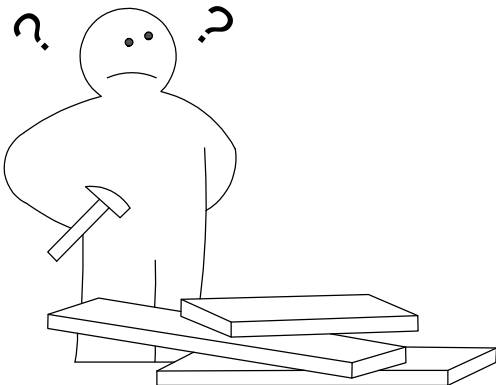
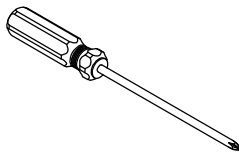















IMPORTANT:


















1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, Do not use power tools.

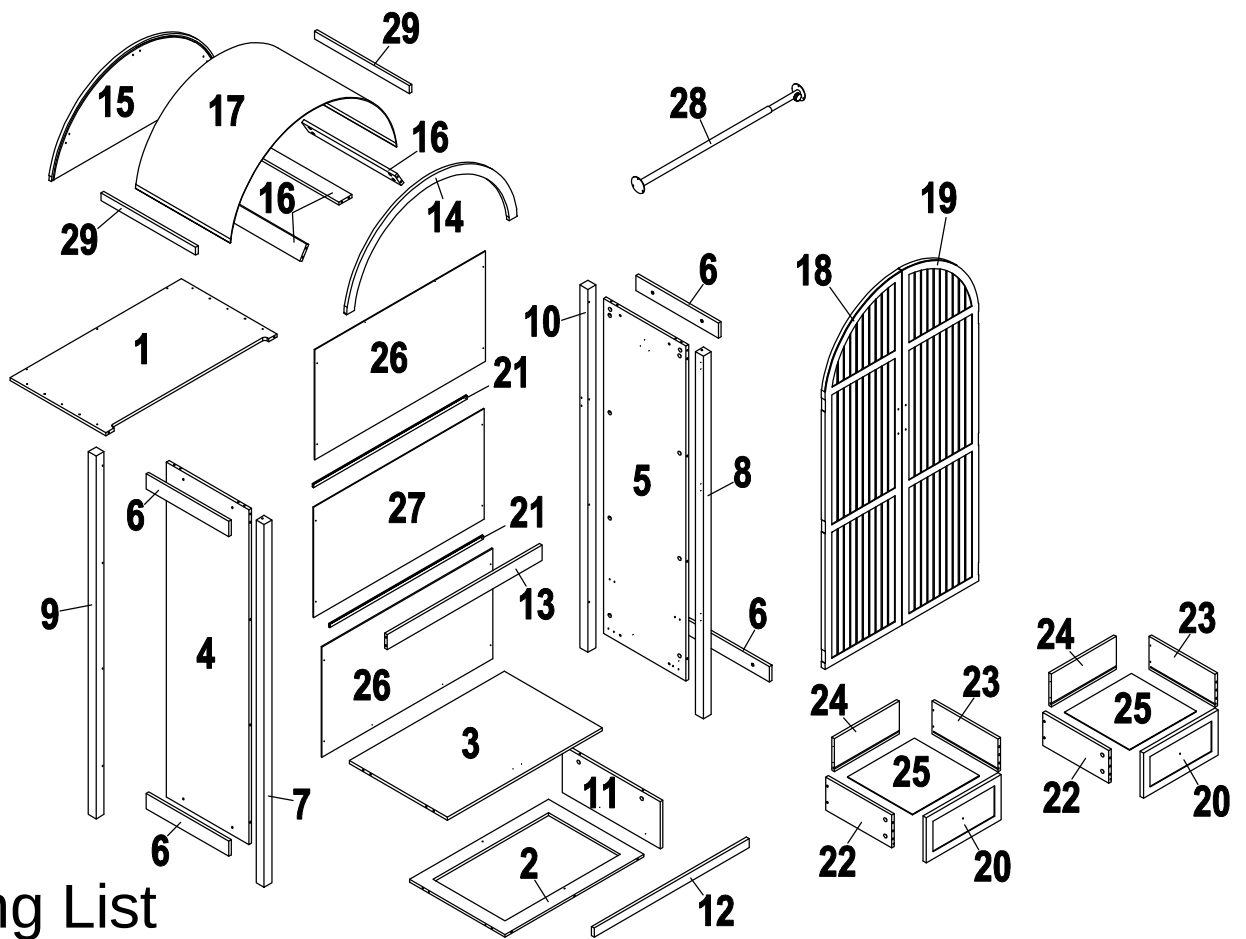



Packing List

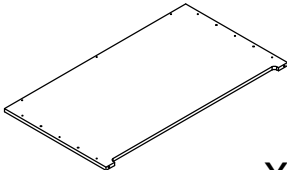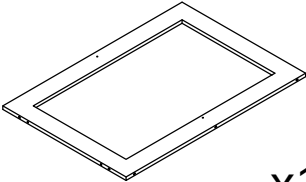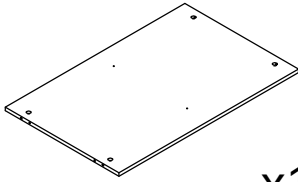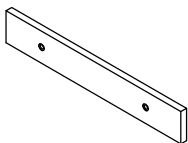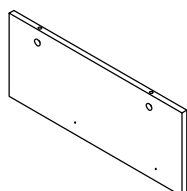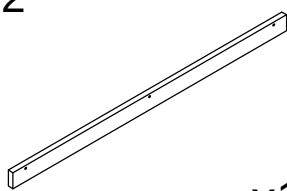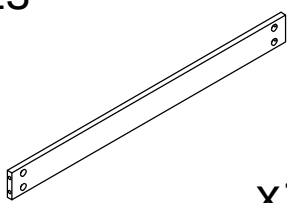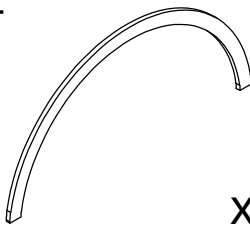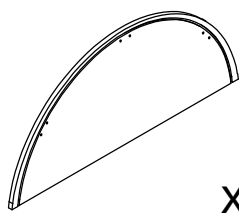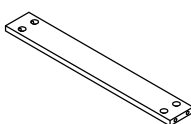1  x1	2  x1	3  x1	4  x1
5  x1	6  x4	7  x1	8  x1
9  x1	10  x1	11  x1	12  x1
13  x1	14  x1	15  x1	16  x3

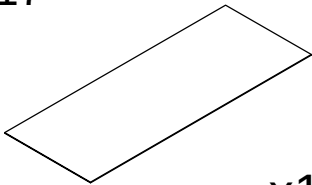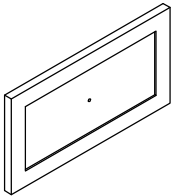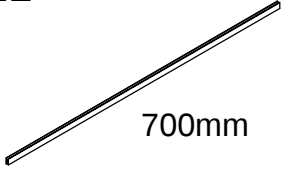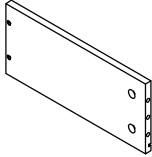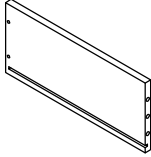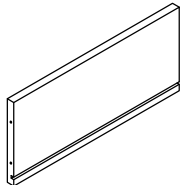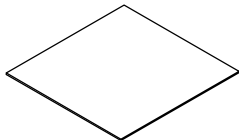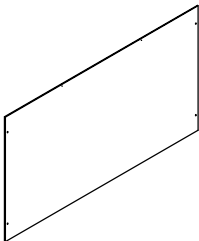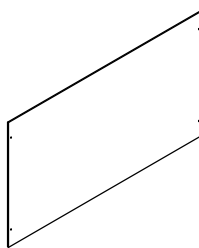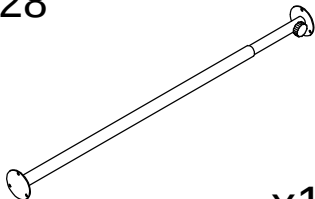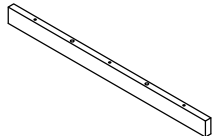17  x1	18  x1	19  x1	20  x2
21  700mm x2	22  x2	23  x2	24  x2
25  x2	26  x2	27  x1	28  x1
29  x2			

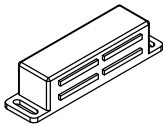
A1  x2	A2  x2	B1  x2	B2  x2	C M3.5x12  x36
D  x59	E  x59	F M6x18  x8	G M6x30  x24	H M5x40  x11
I  x1	J M3x14  x30	K  x1	L M4x12  x6	M  x4
N M3.5x40  x10	O  x2	P M4x22  x6	Q  x6	R  x2
S  x2	T  x2	U  x2	V  x1	W  x2

Step 1

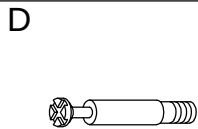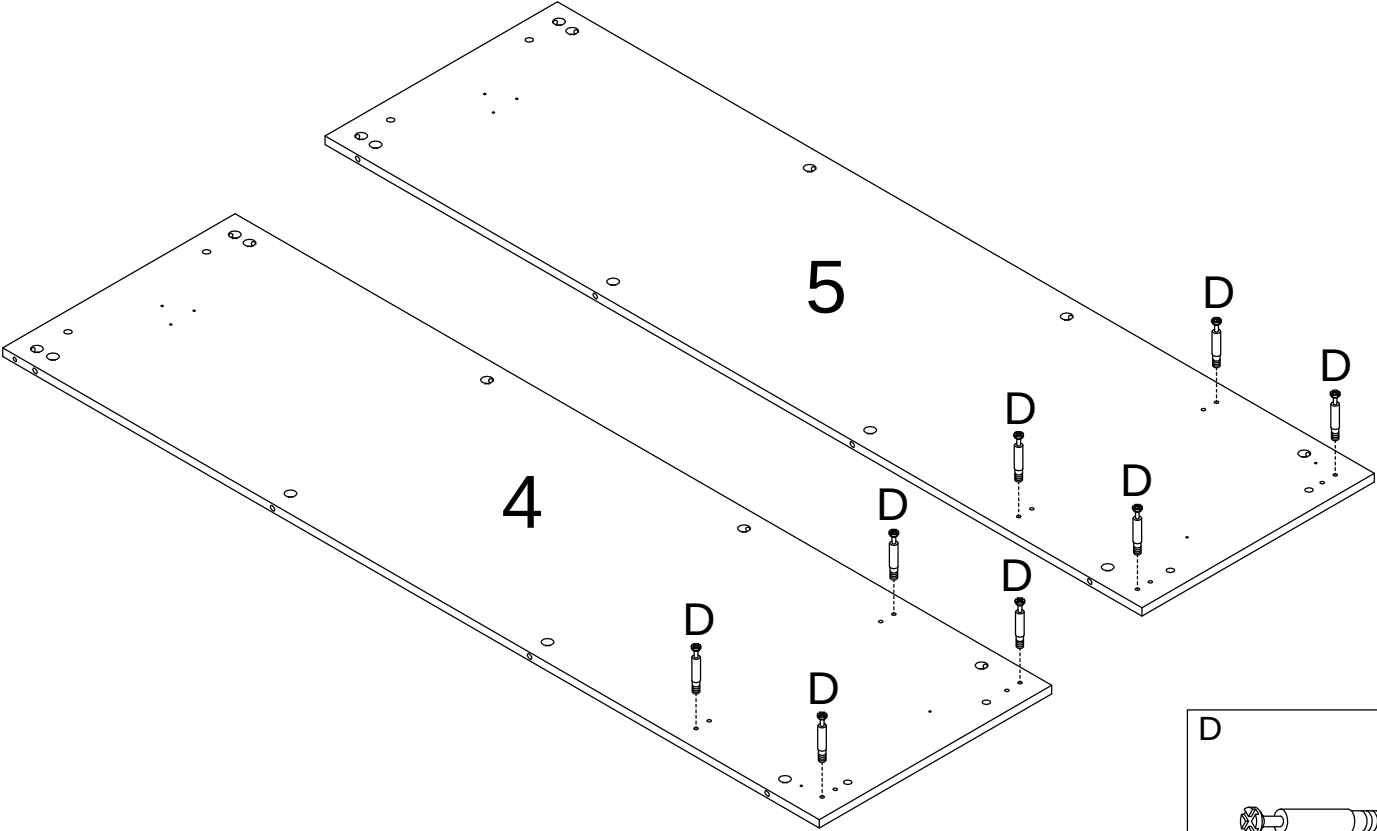

x8

Step 2


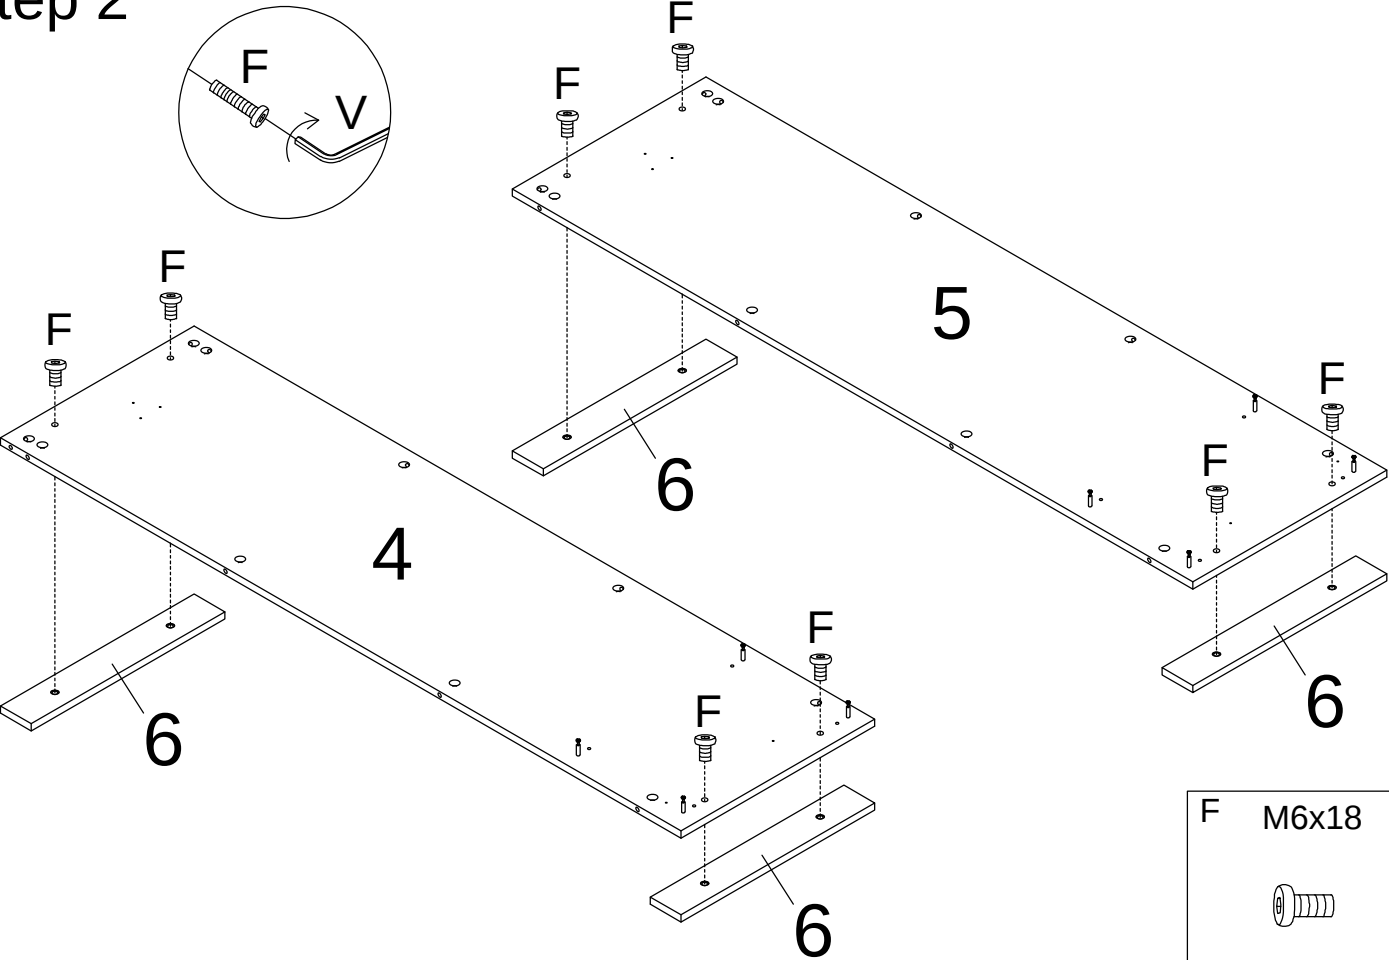


F M6x18





x8

Step 3

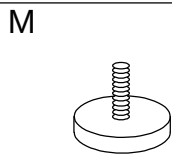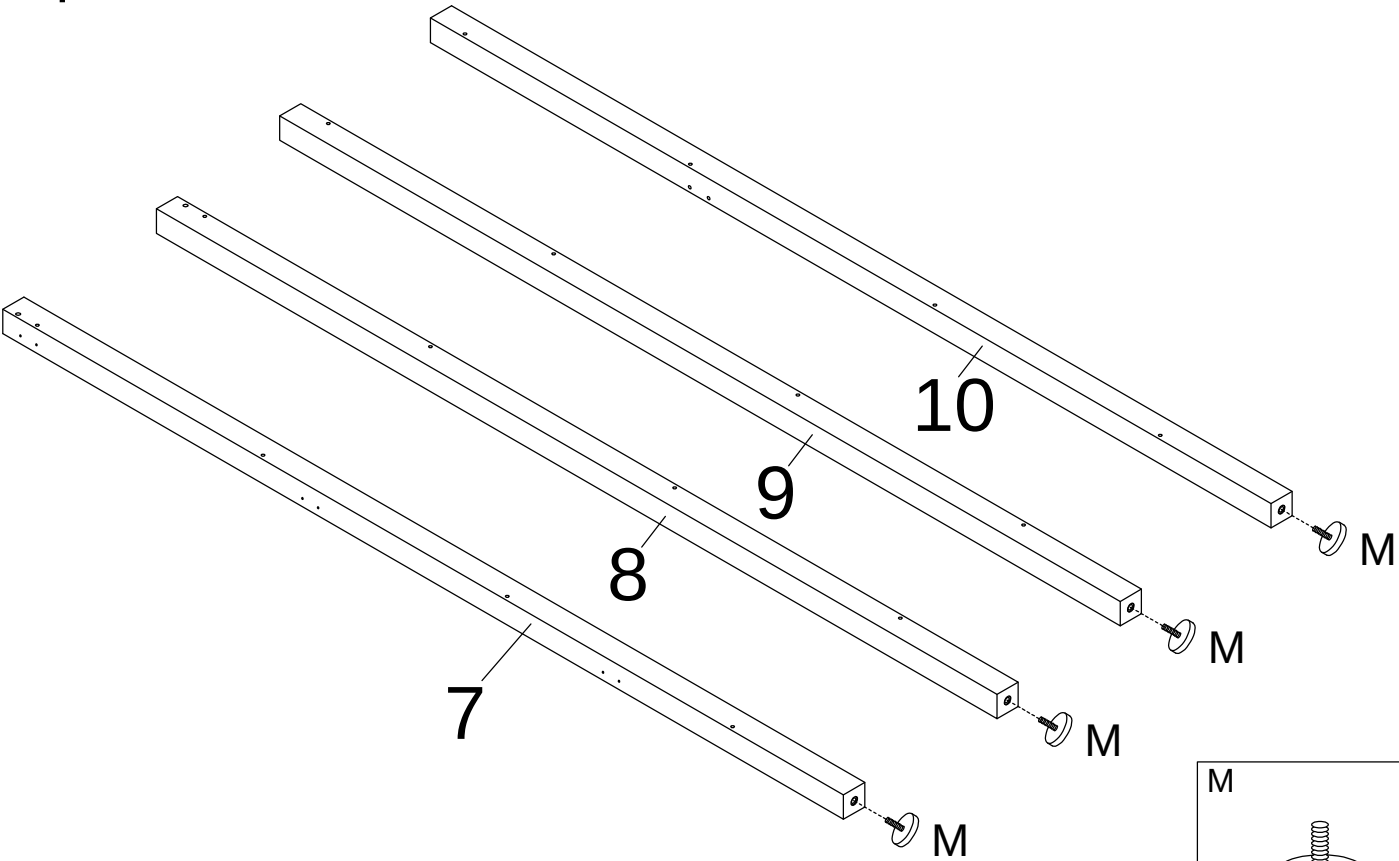



x4

Step 4

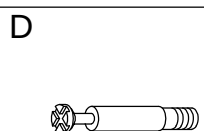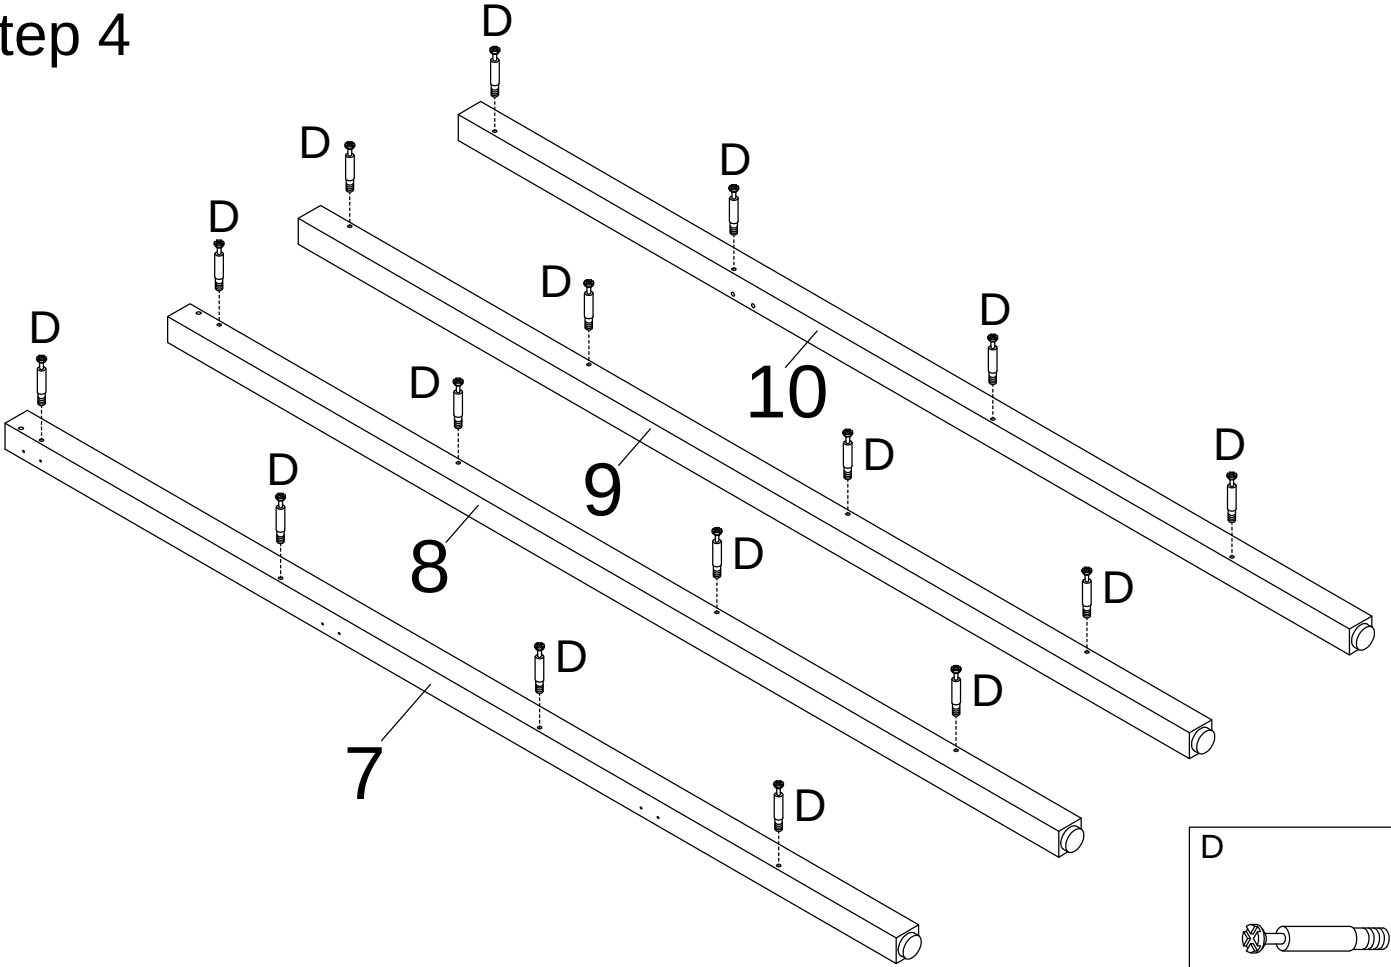



x16

Step 5

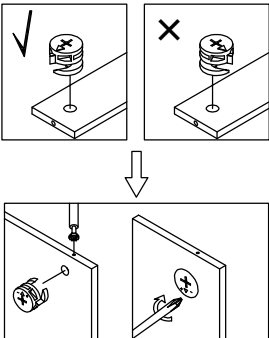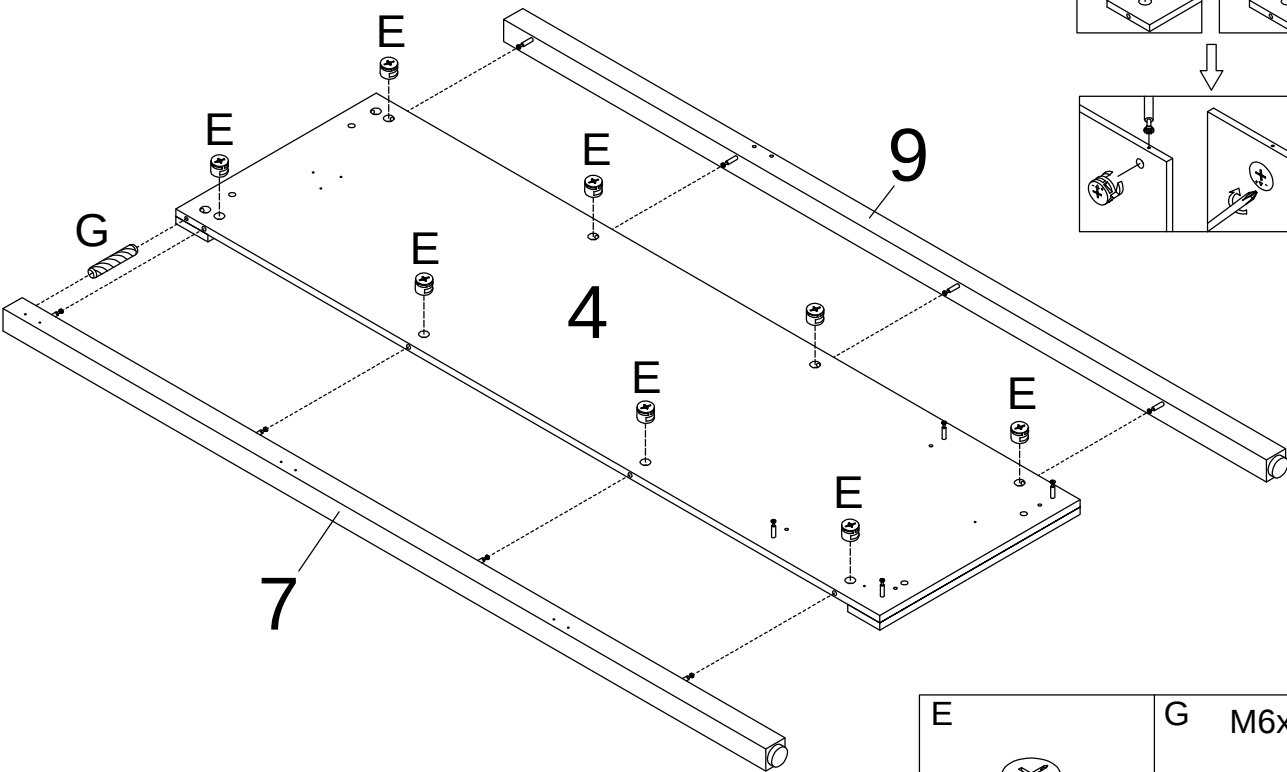



E	G M6x30
	
x8	x1




Step 6

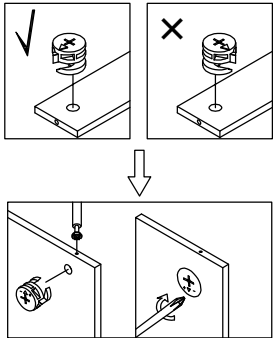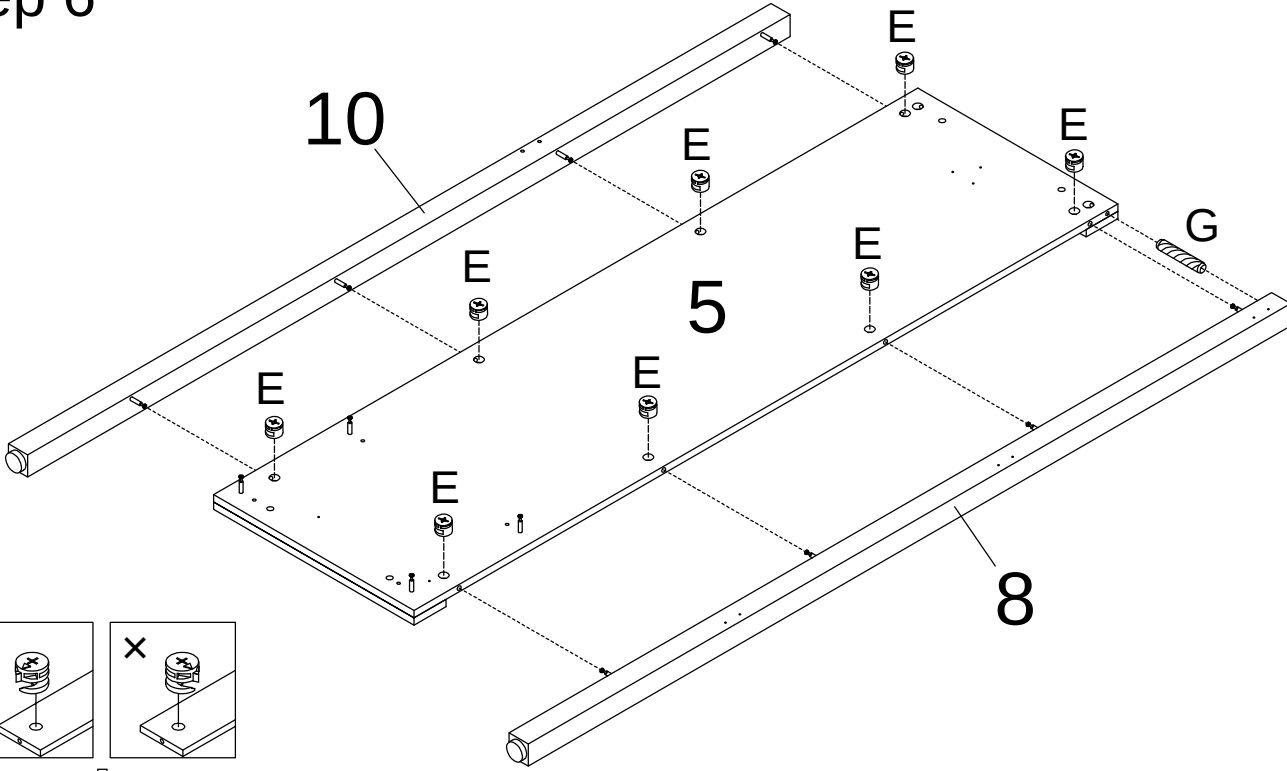


E	G M6x30
	
x8	x1


Step 7

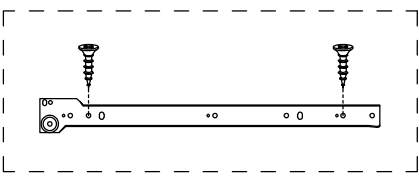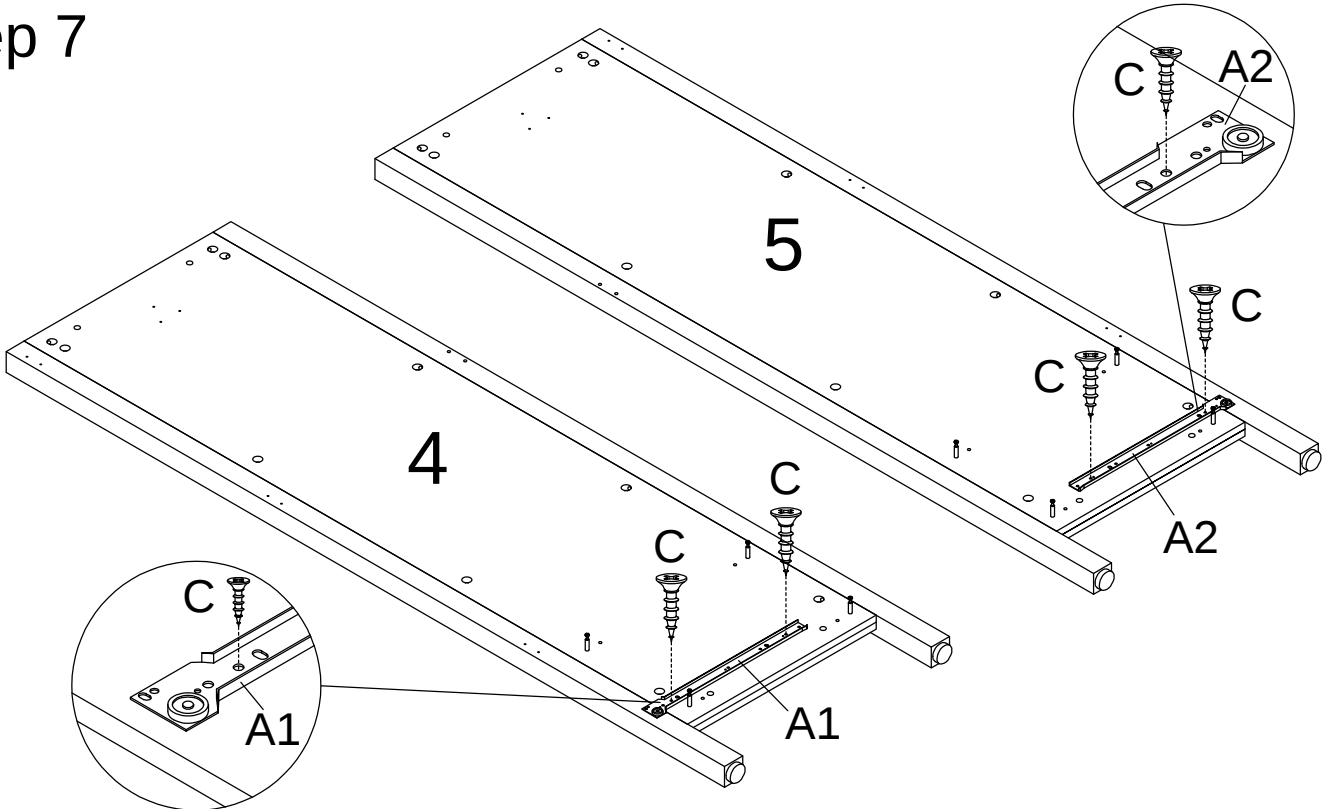


A1  x1	A2  x1	C M3.5x12  x4
---	--	---




Step 8

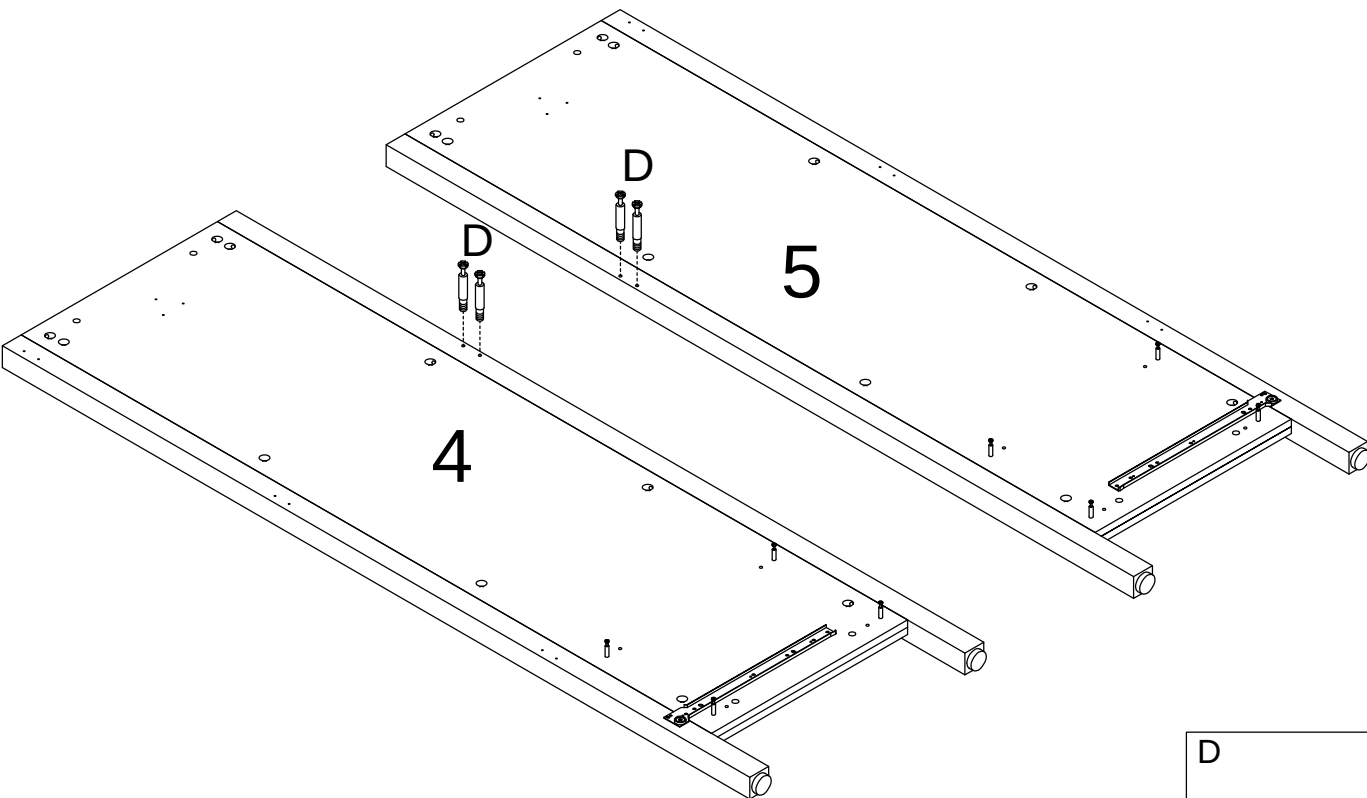


D  x4
--


Step 9

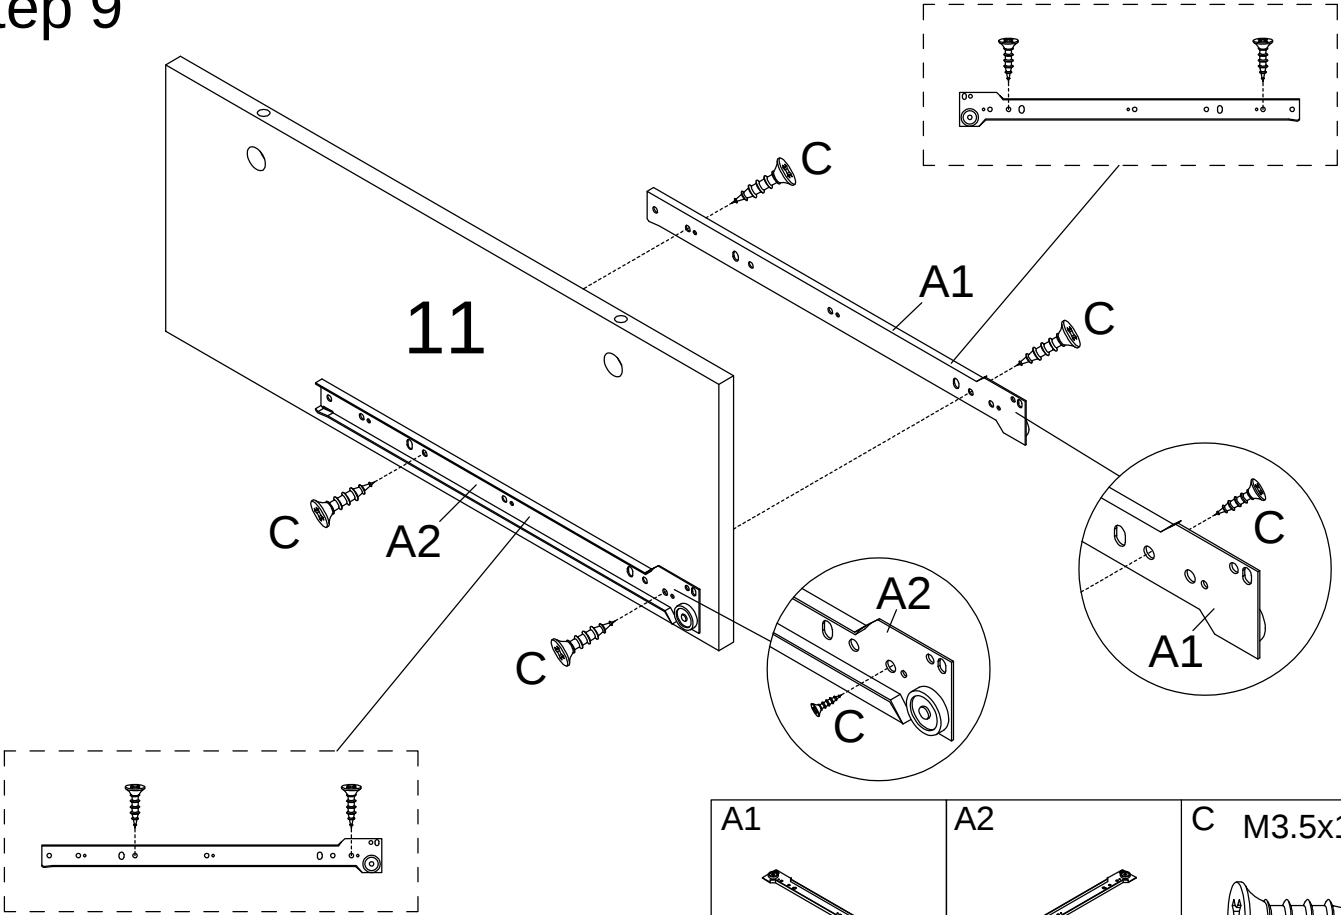


A1	A2	C M3.5x12
		
x1	x1	x4

Step 10

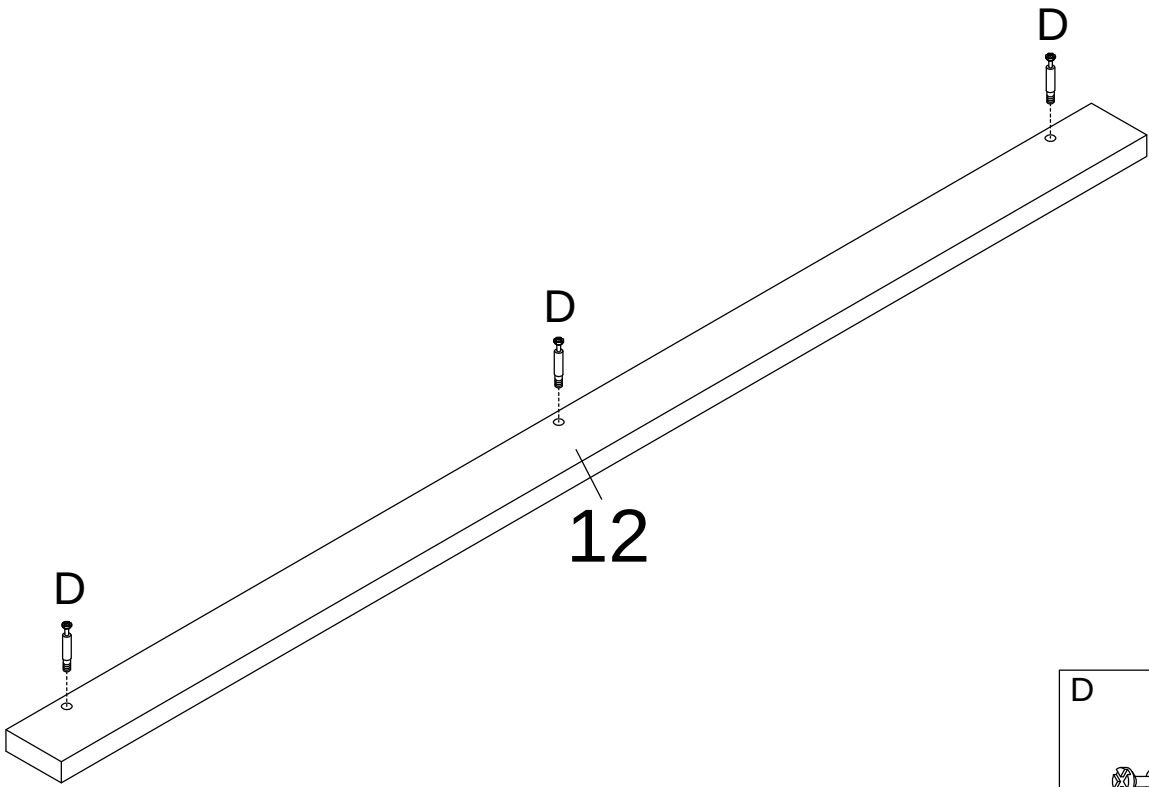


D

x3



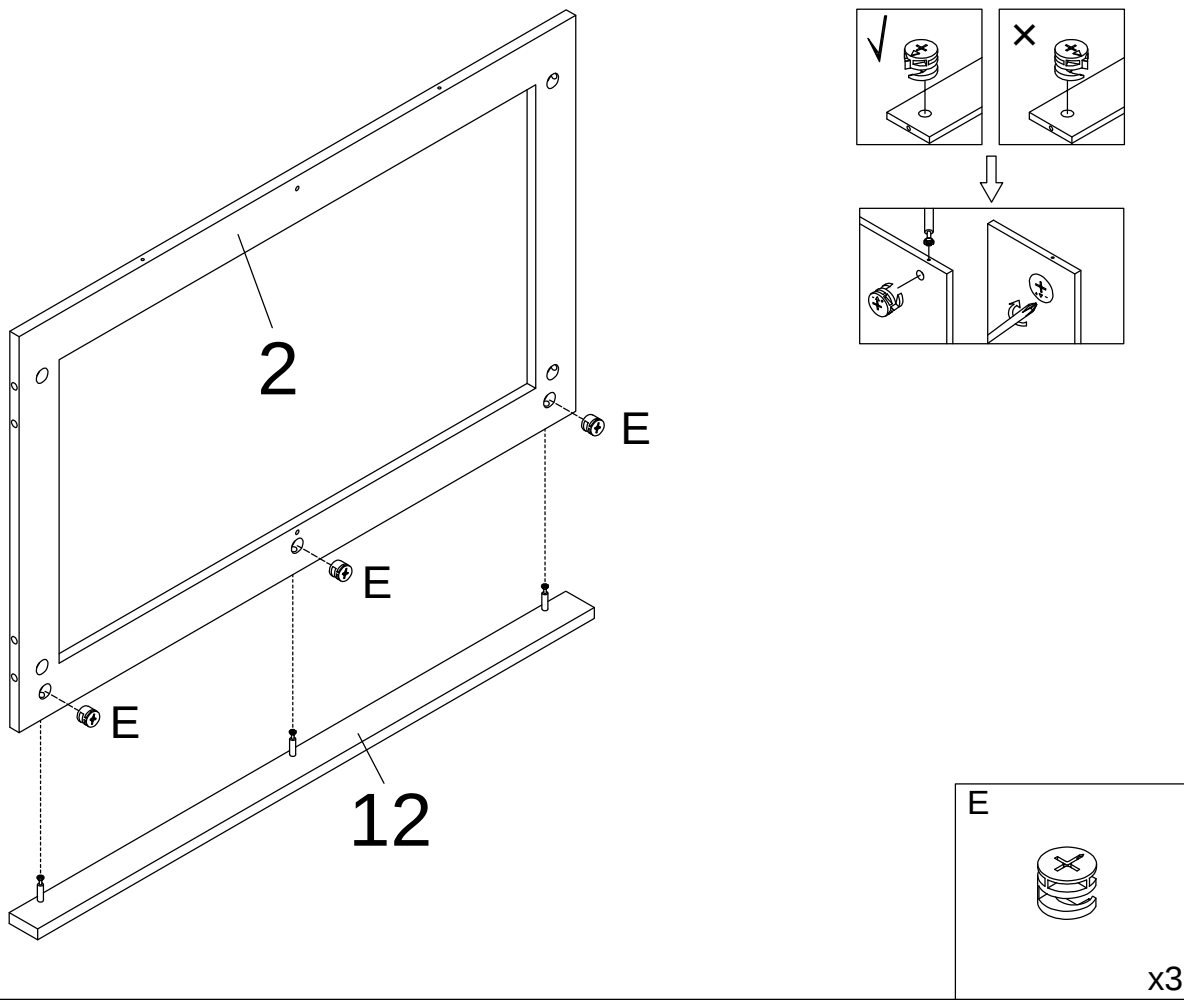
Step 11

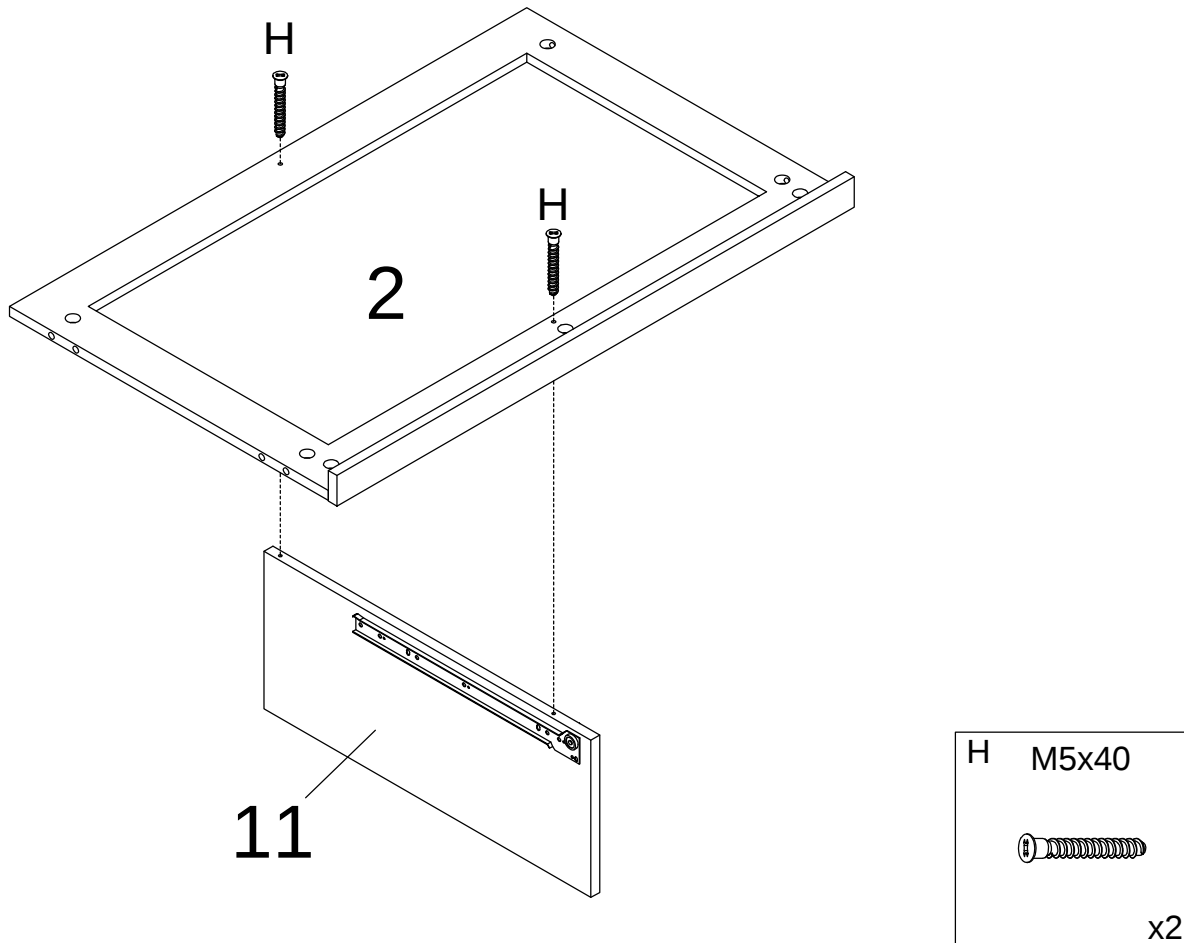



Step 12




Step 13

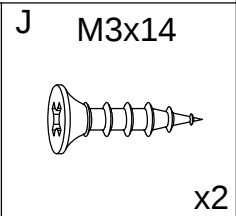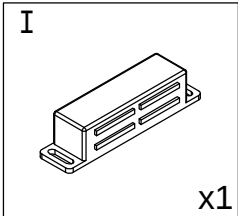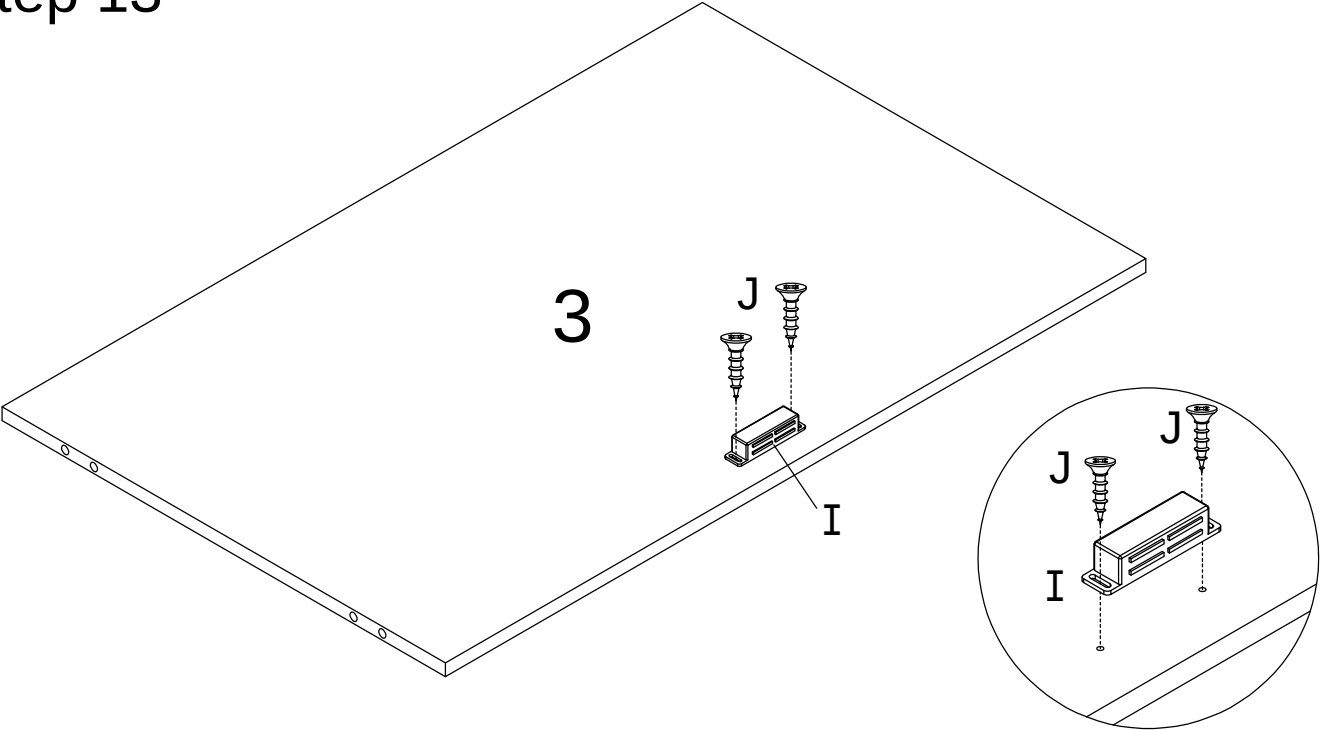


Step 14

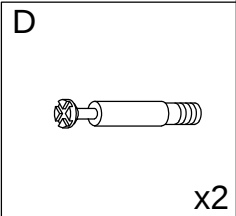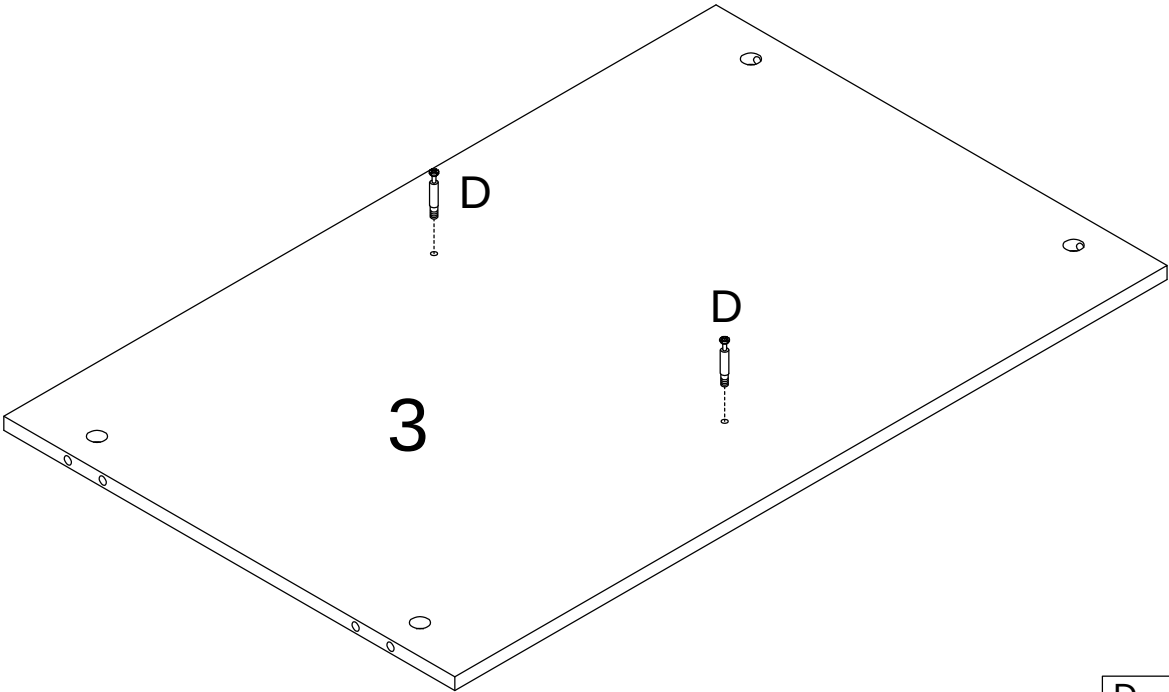



Step 15

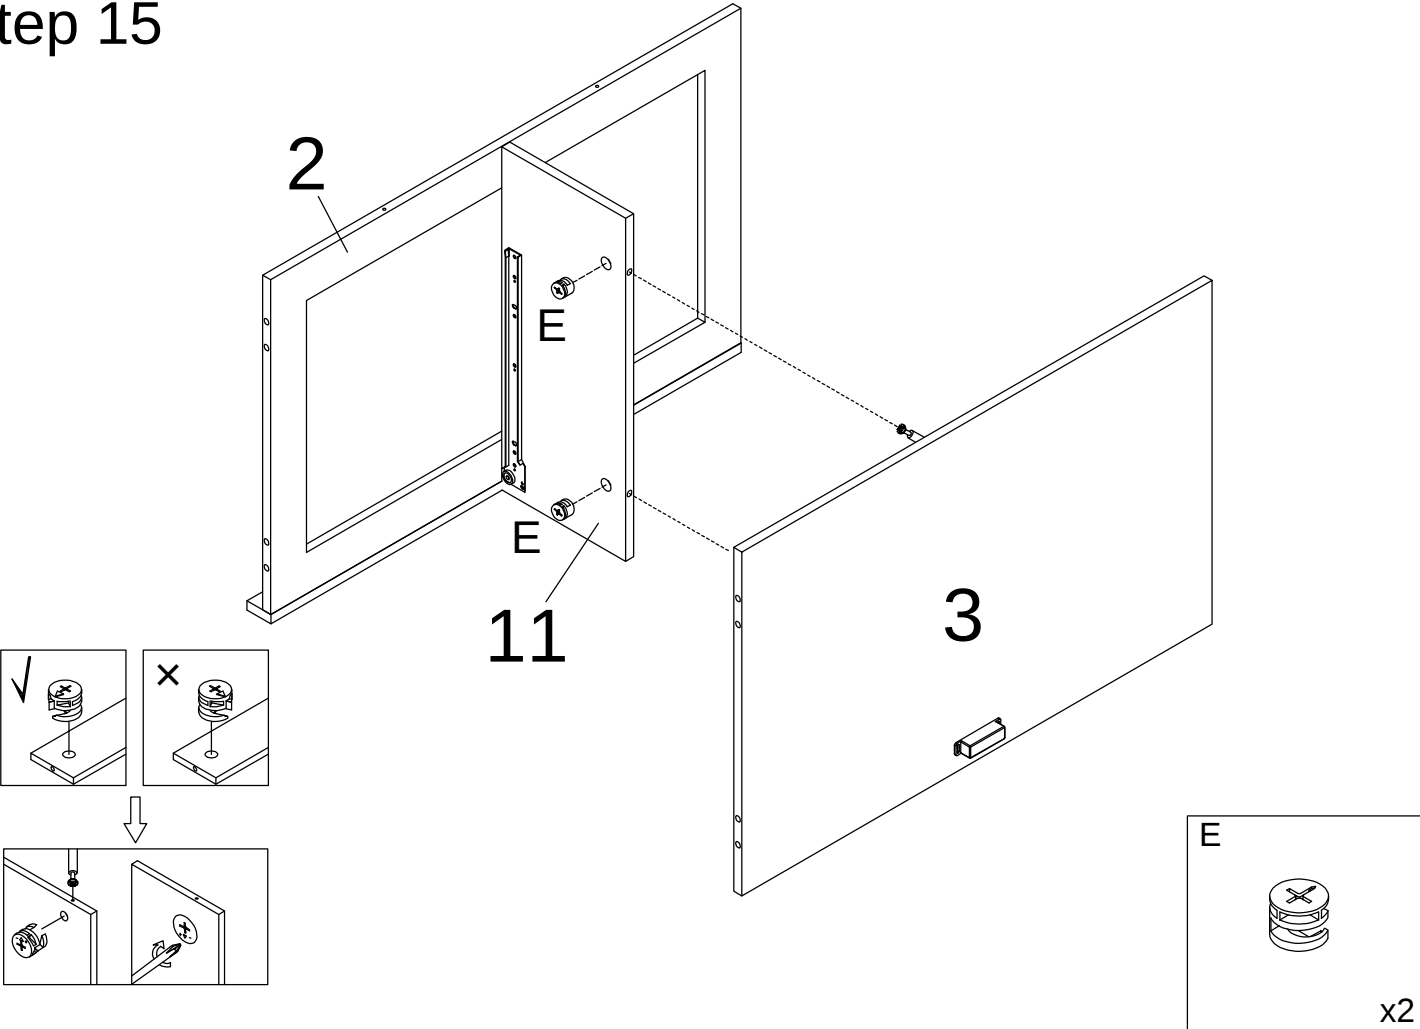




Step 16

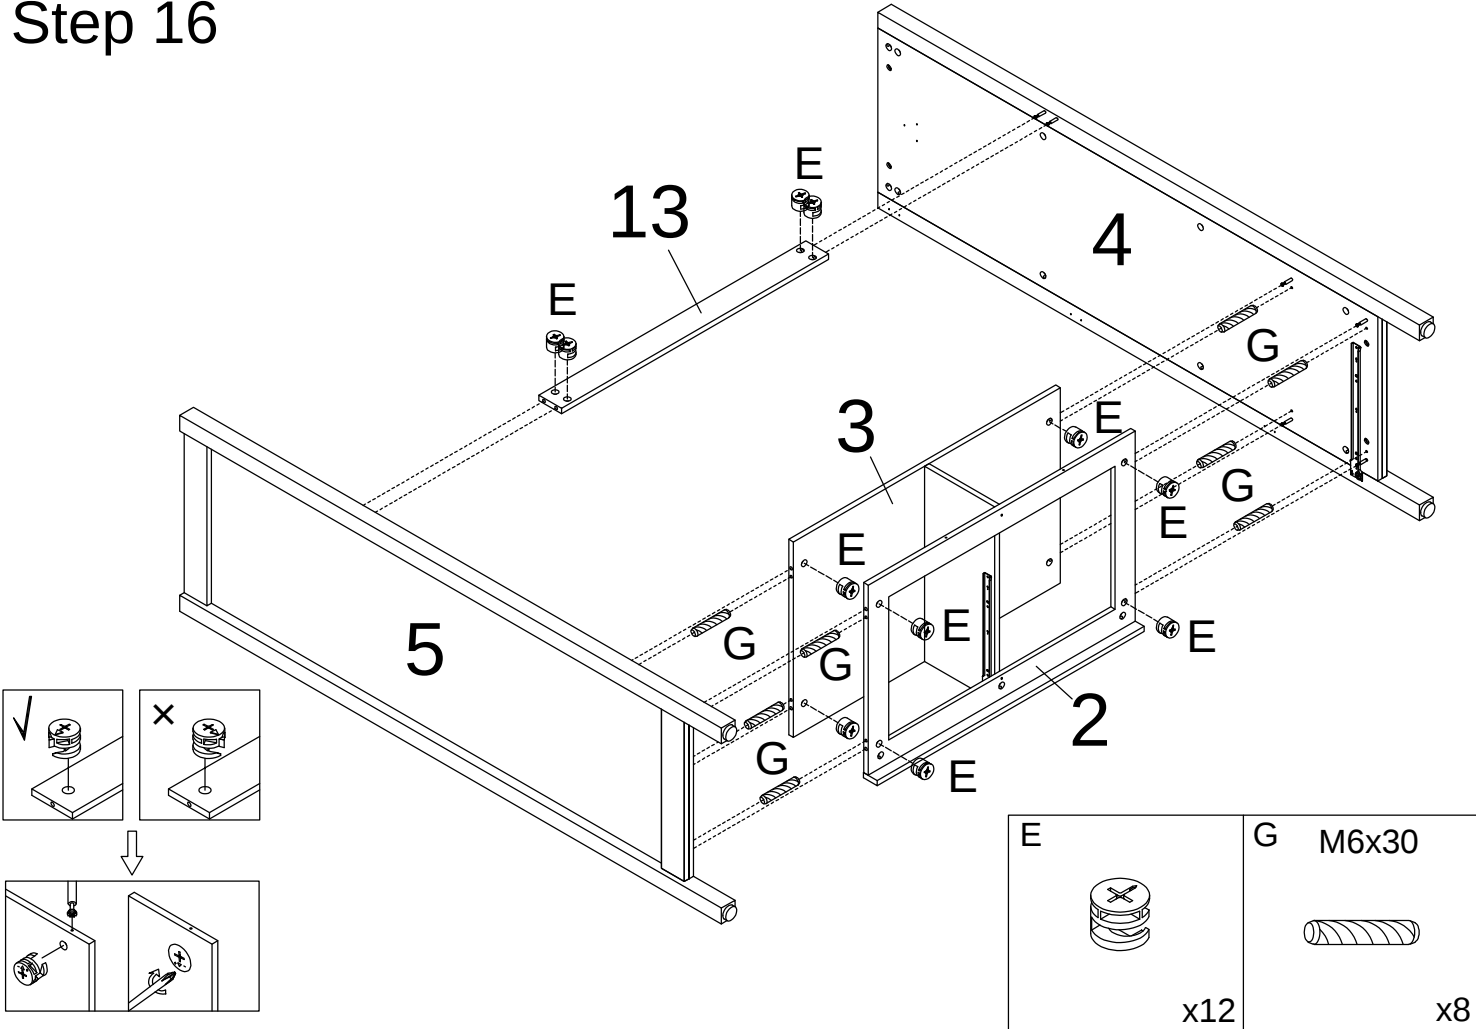



Step 17

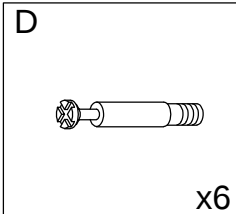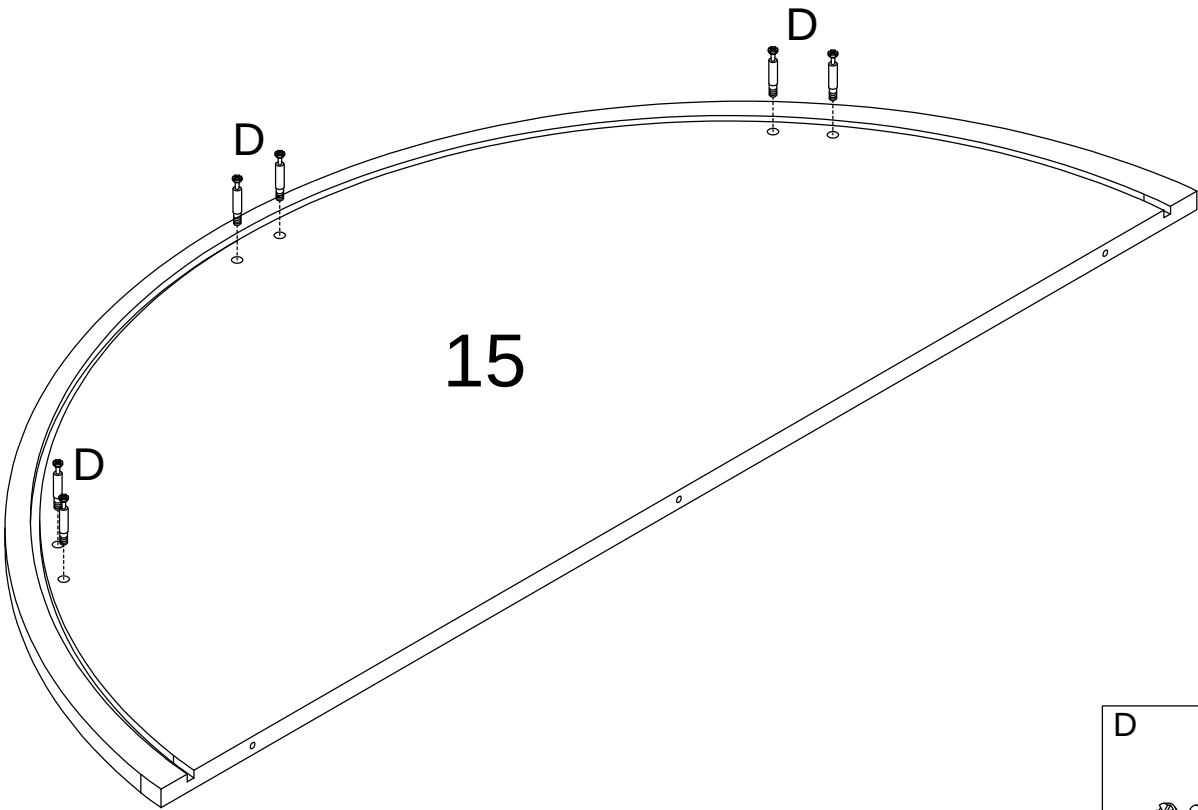




Step 18

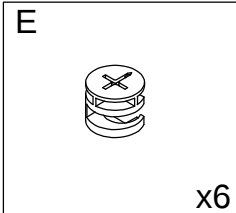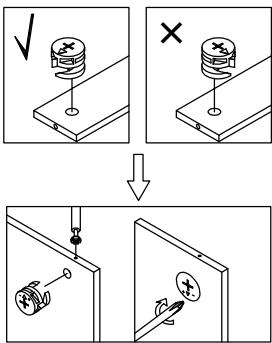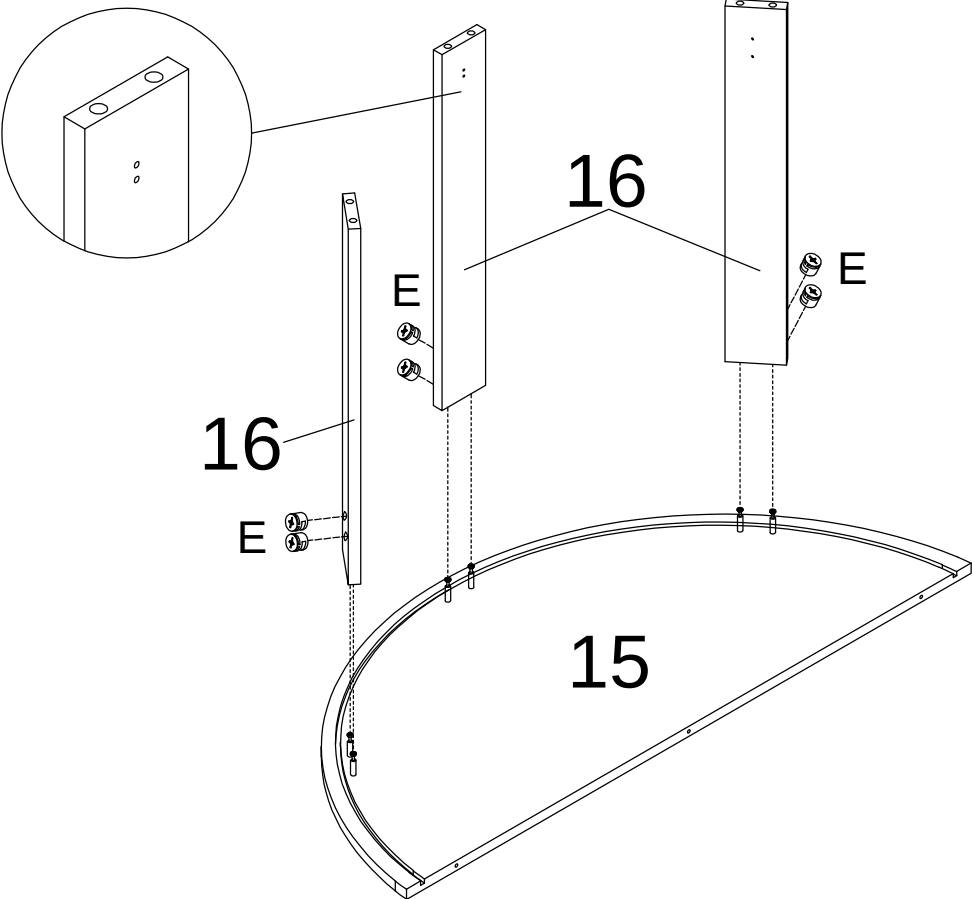




Step 19

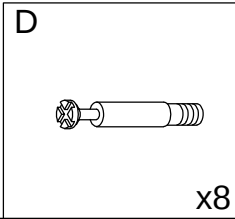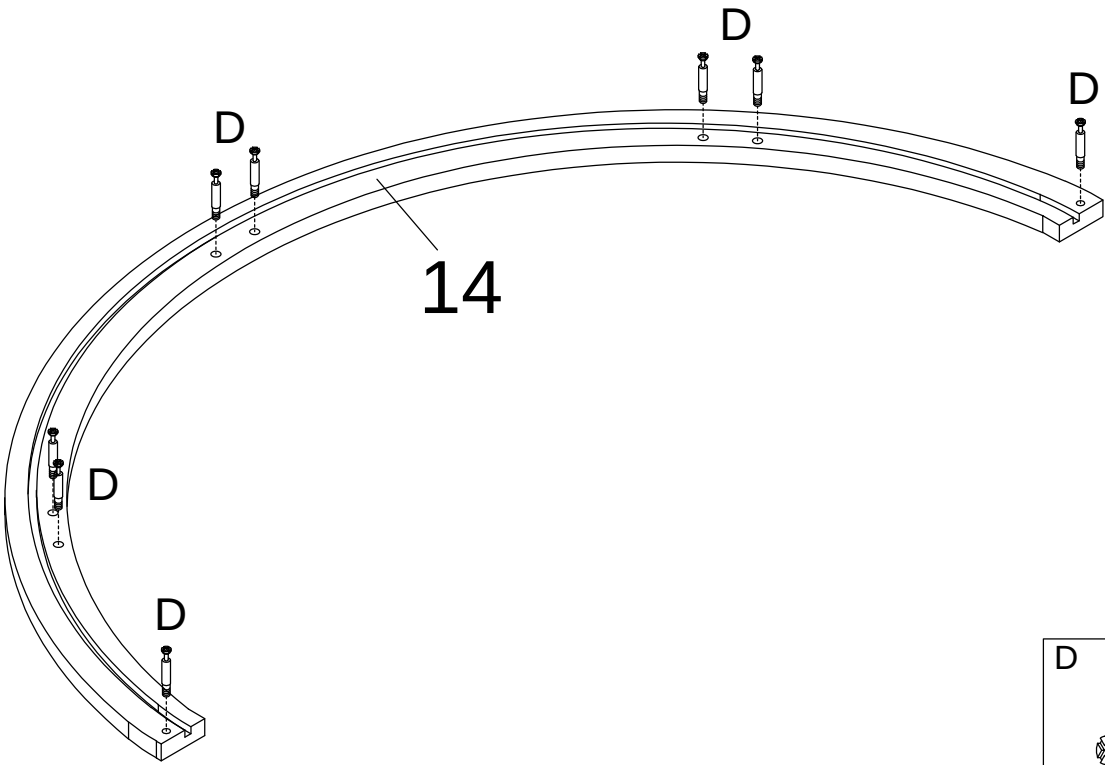

Step 20

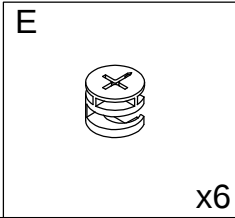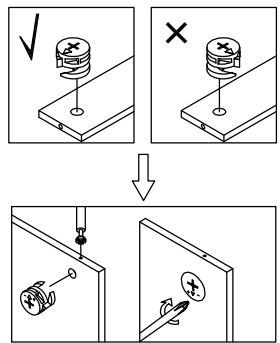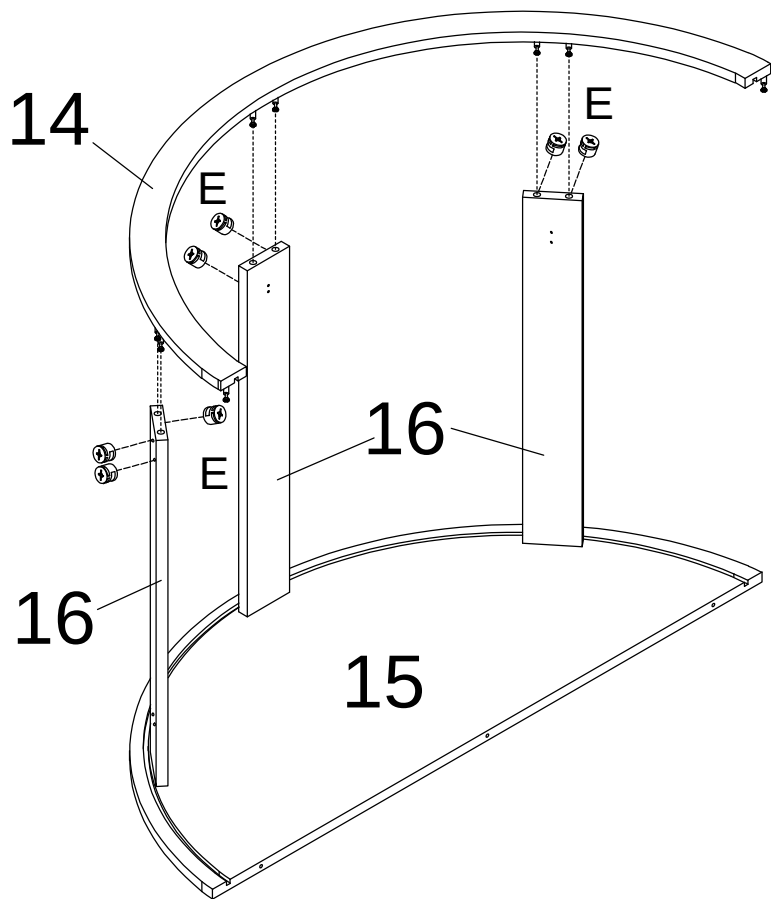


Step 21

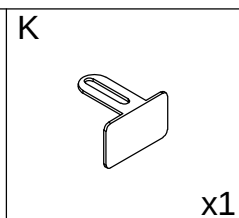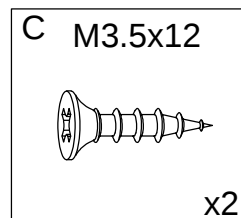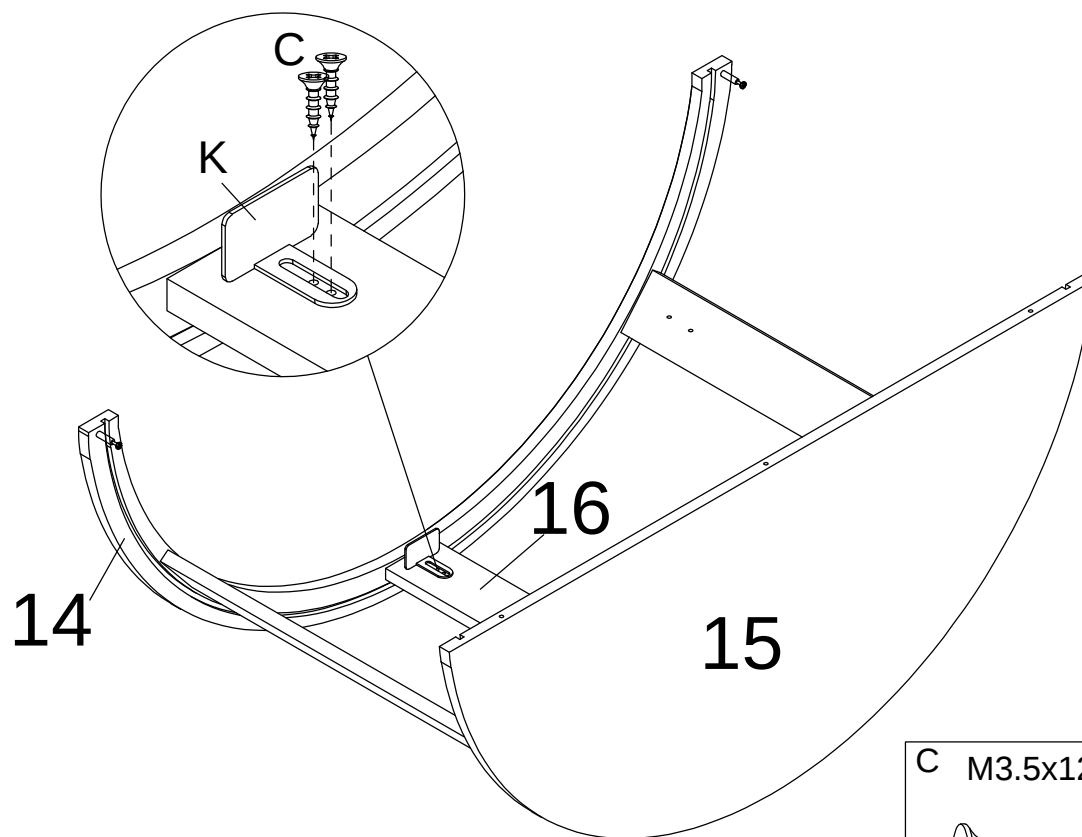




Step 22

Parallel insert Part 17 by slowly. Be careful and don't insert rudely and insert no parallel quickly, or Part 17 will be broken.

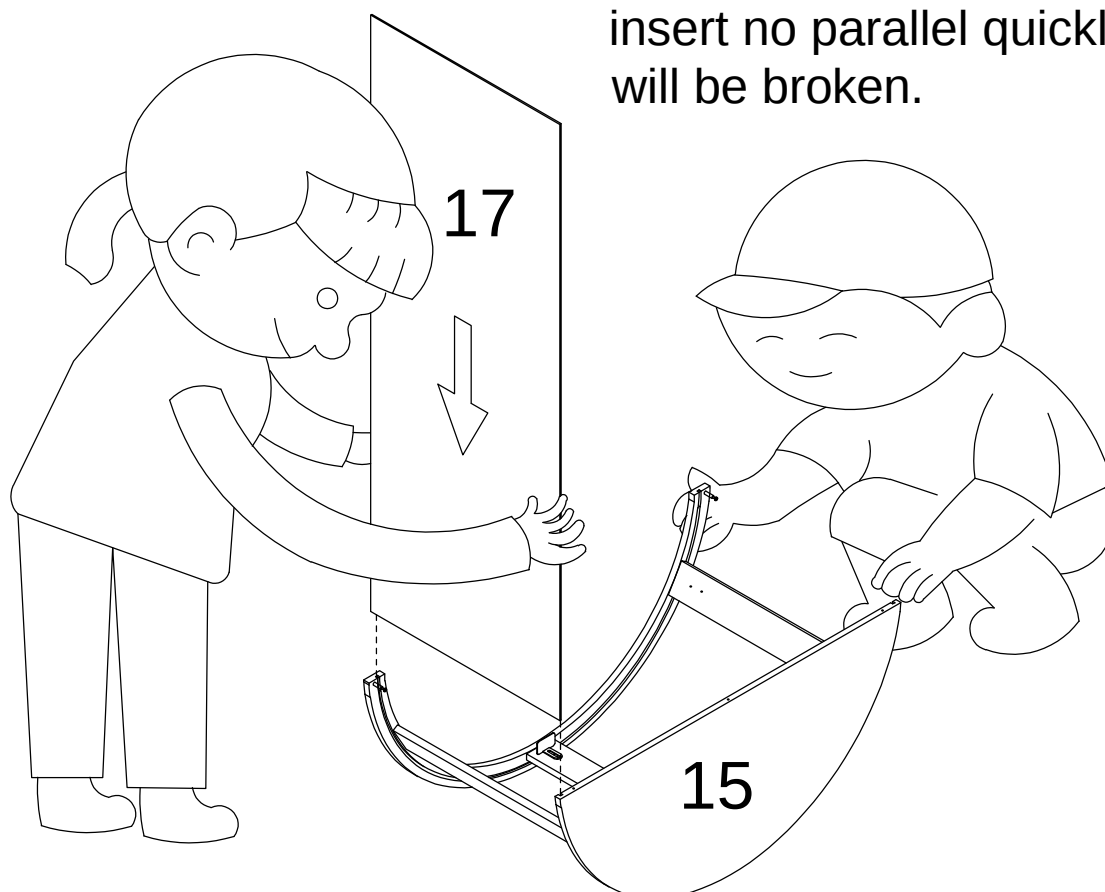



Step 23

The D screw need to insert into the hole on the board 1.

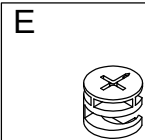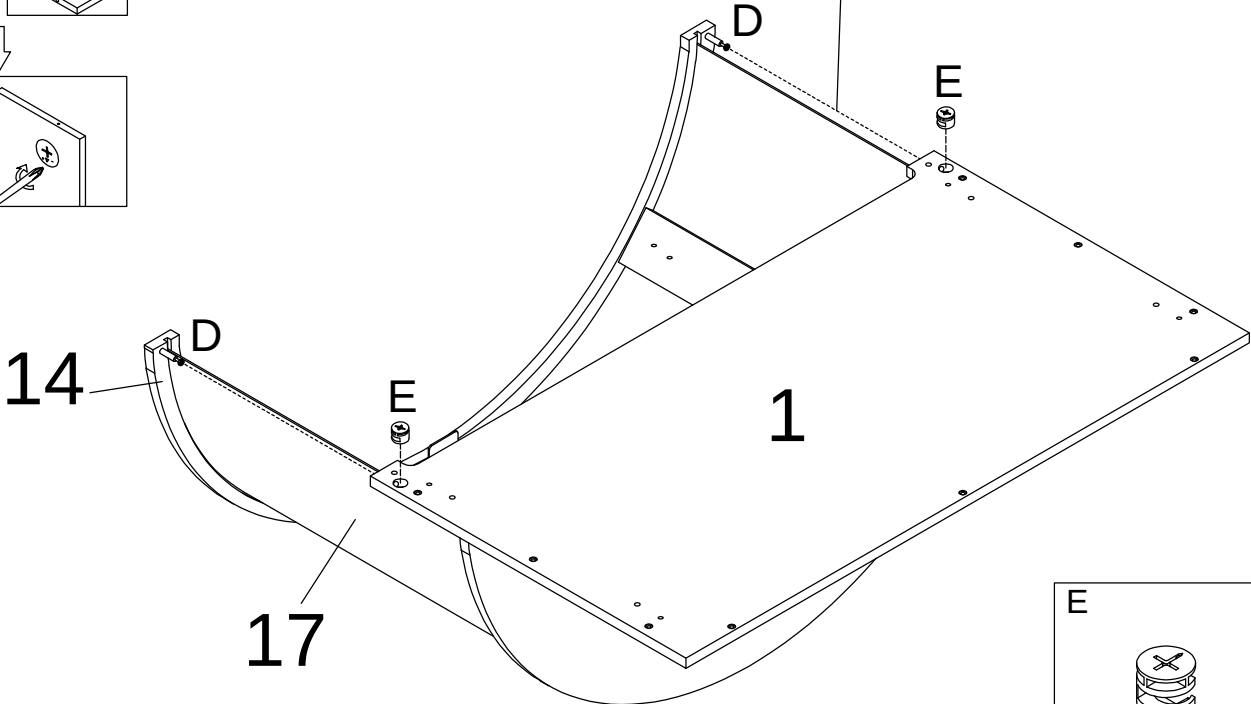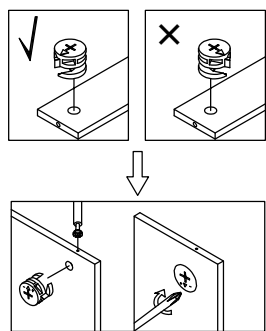


x2

Step 24

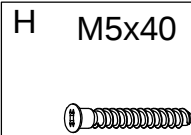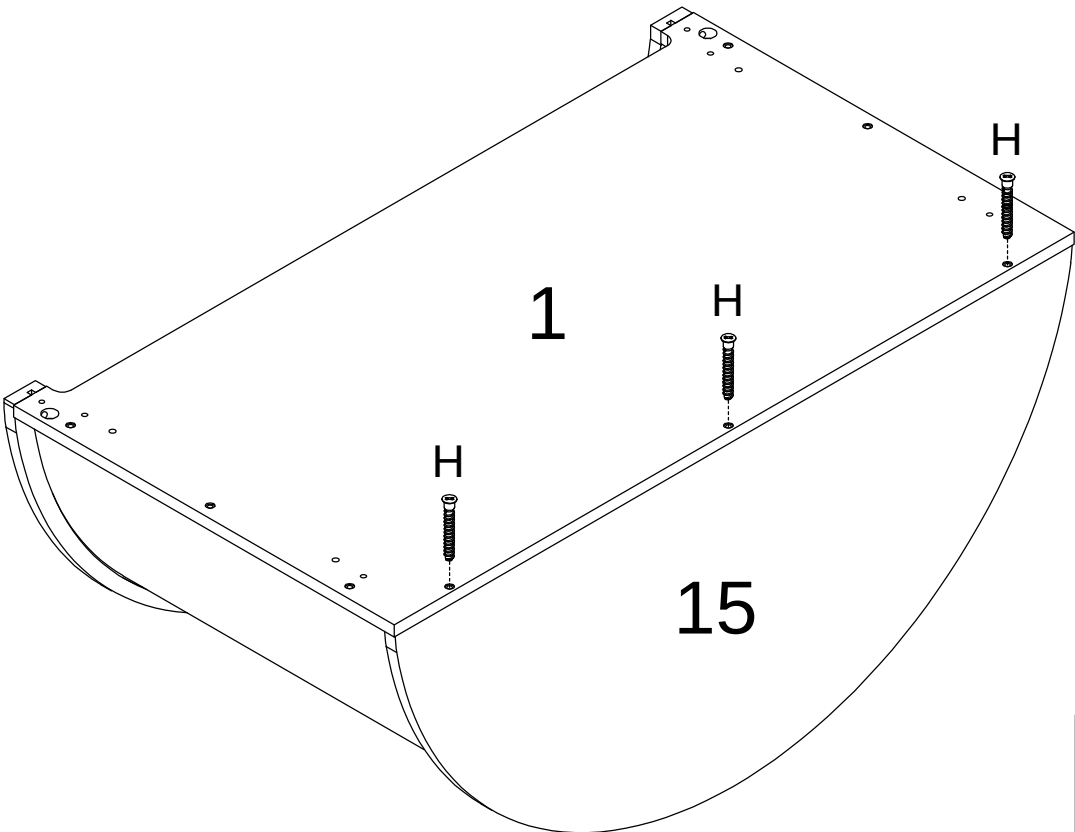

x3

Step 25

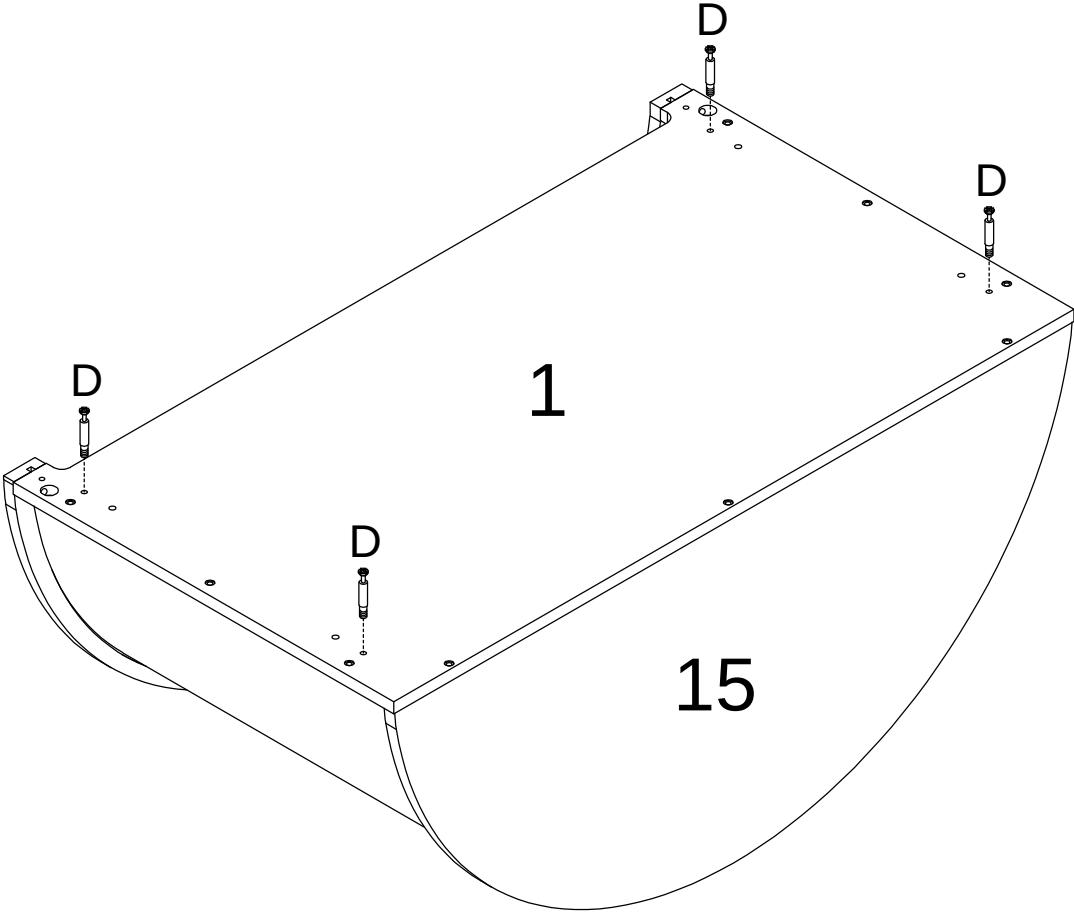


D




x4

Step 26

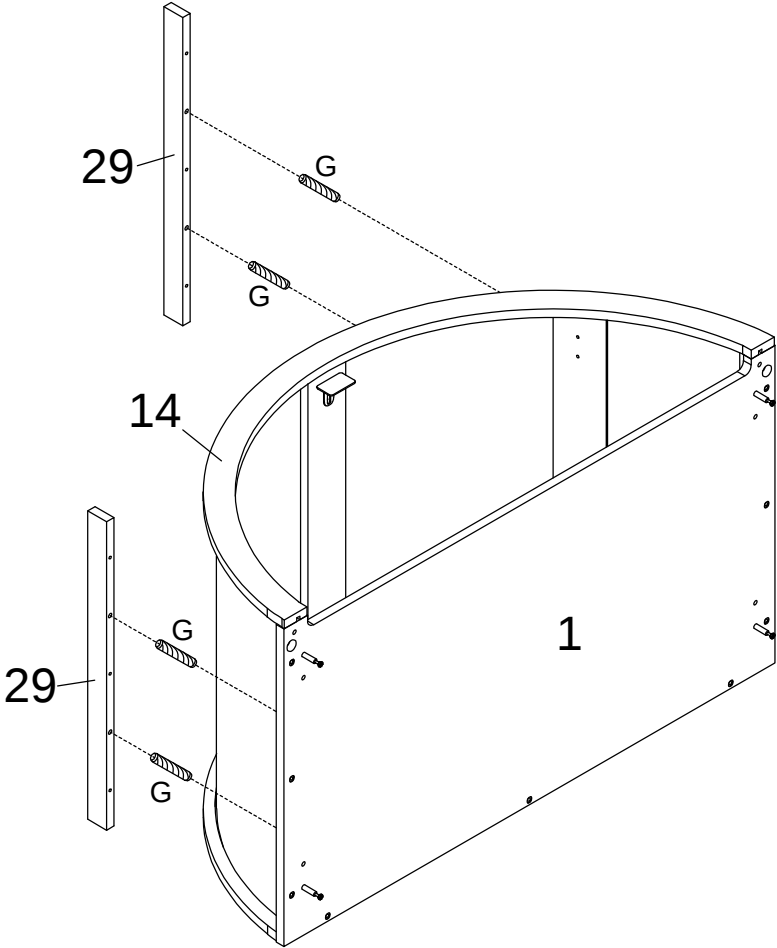


G

M6x30




x4


Step 27

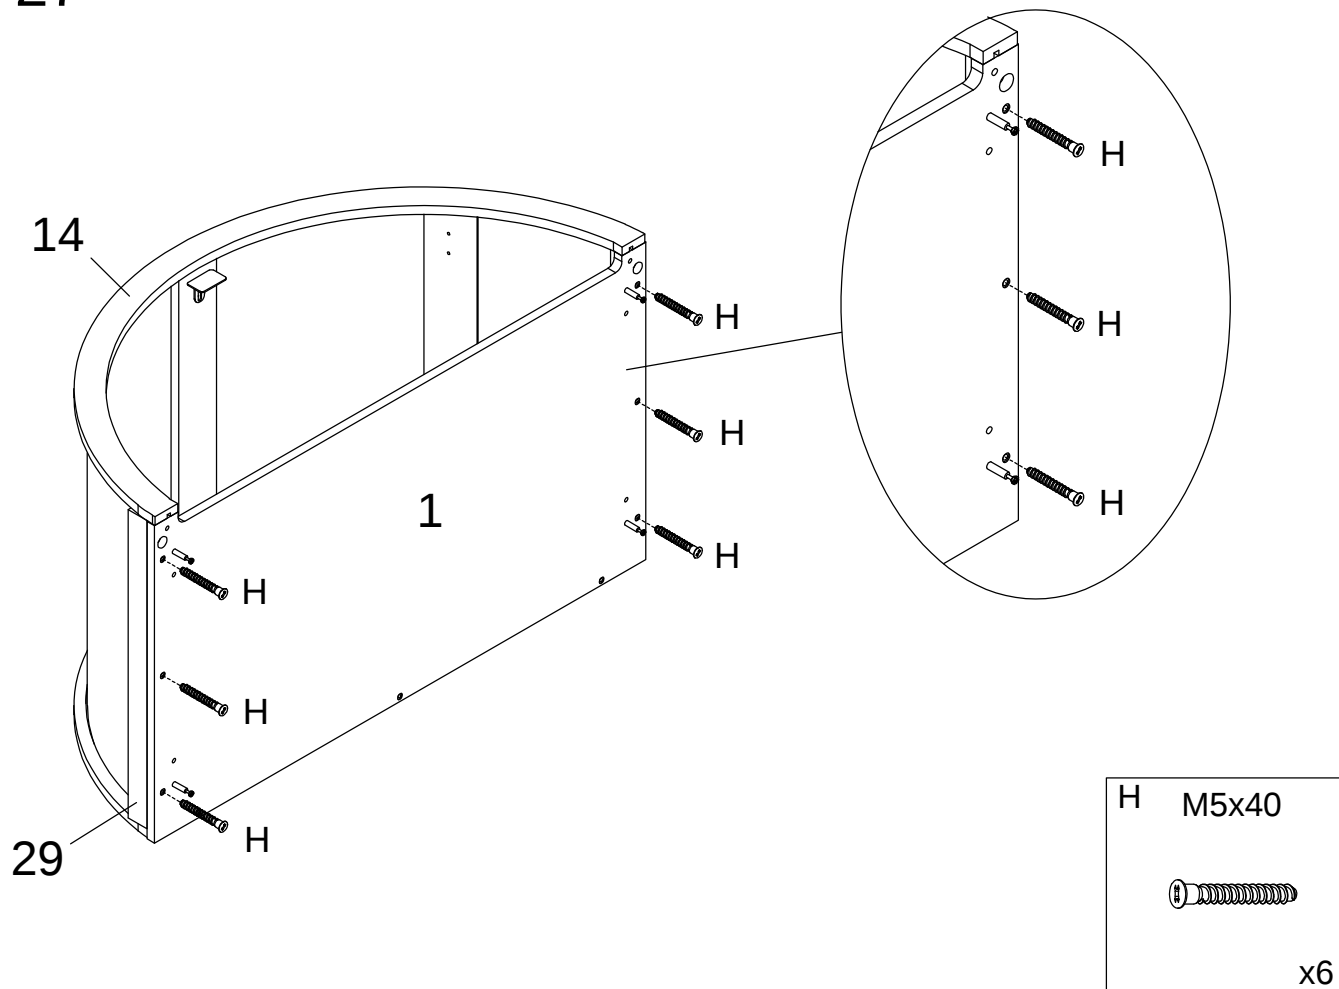


Step 28

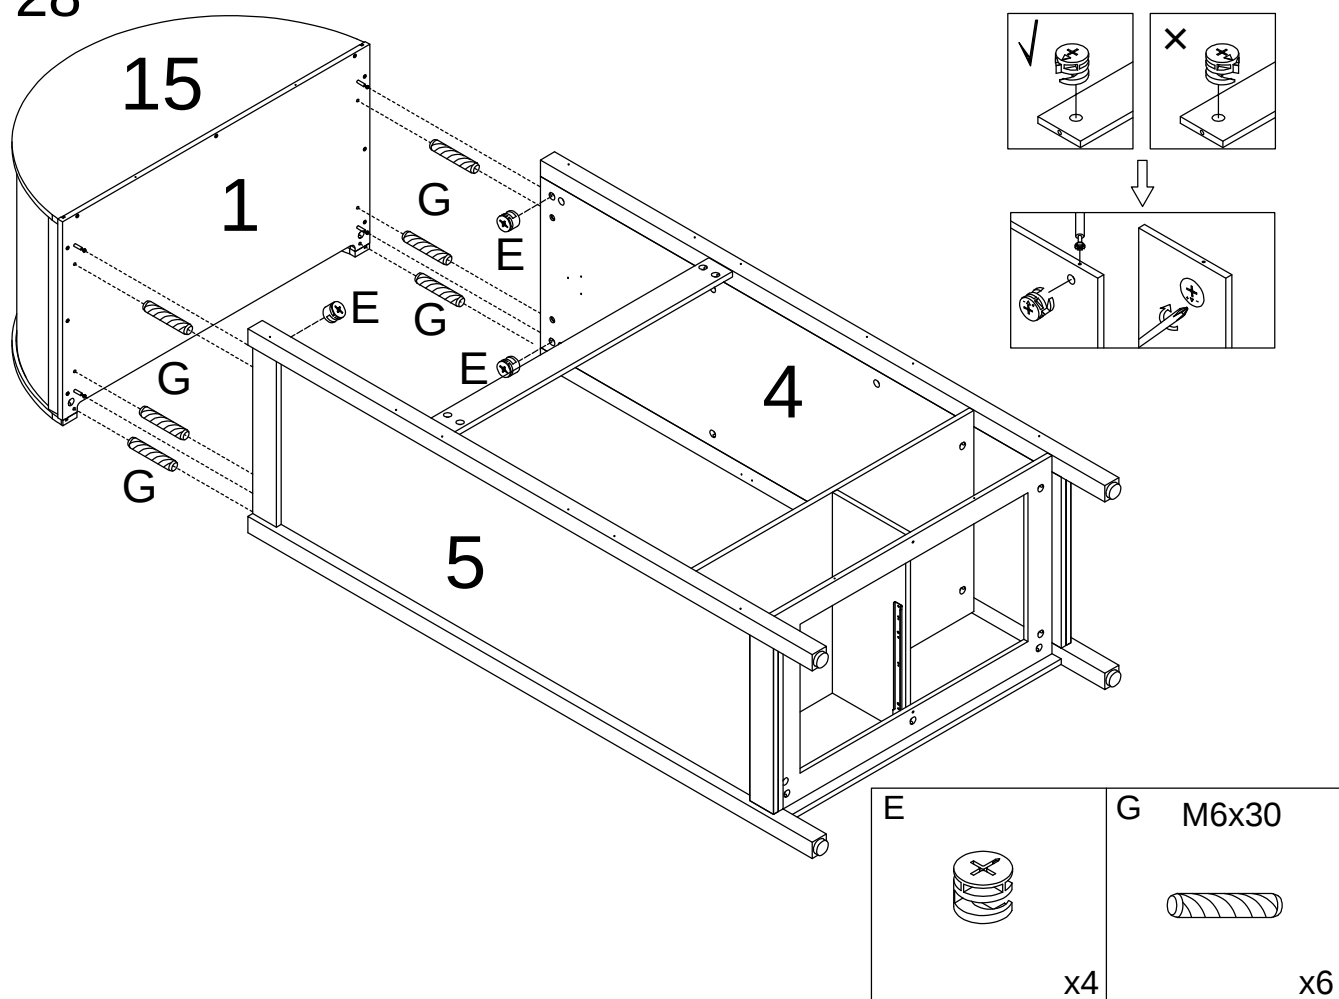

Step 29

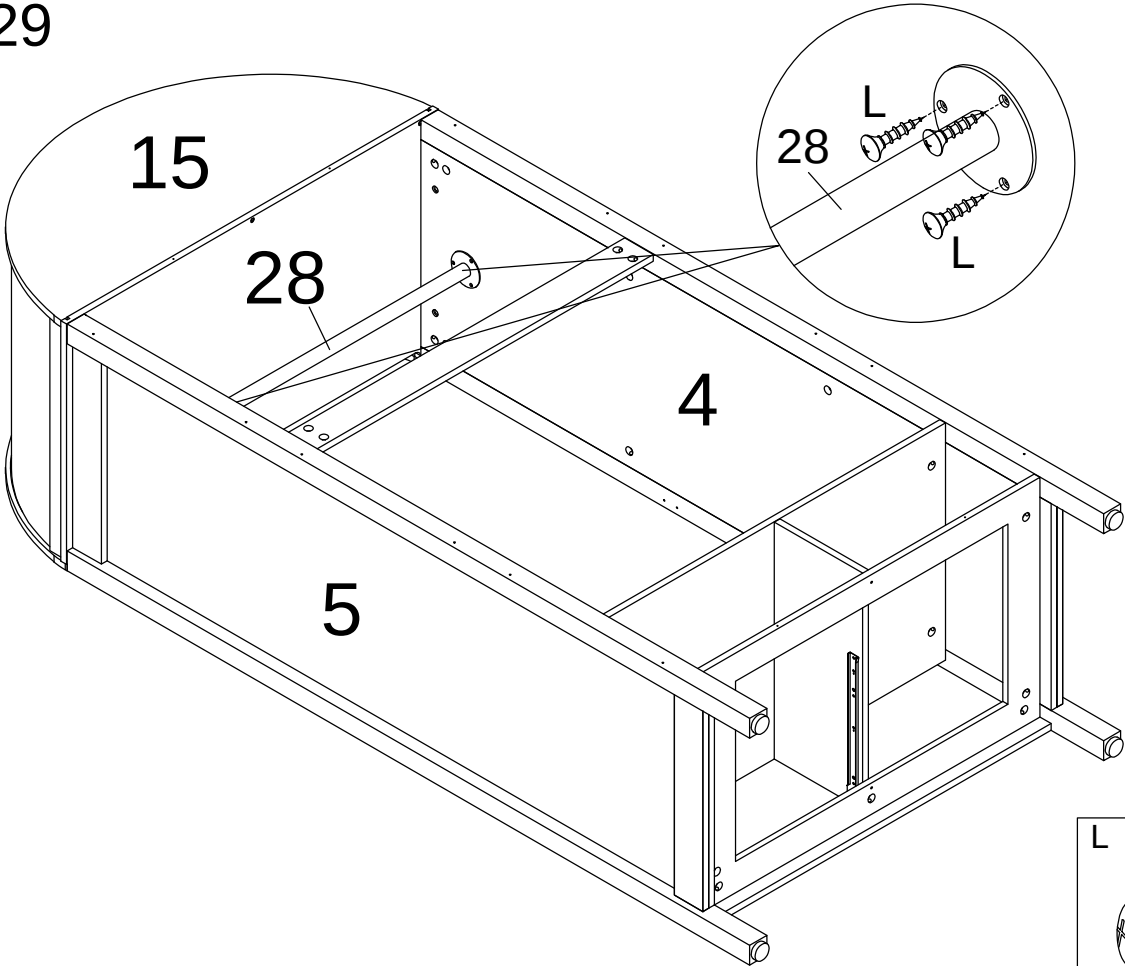


L M4x12




x6

Step 30

X2

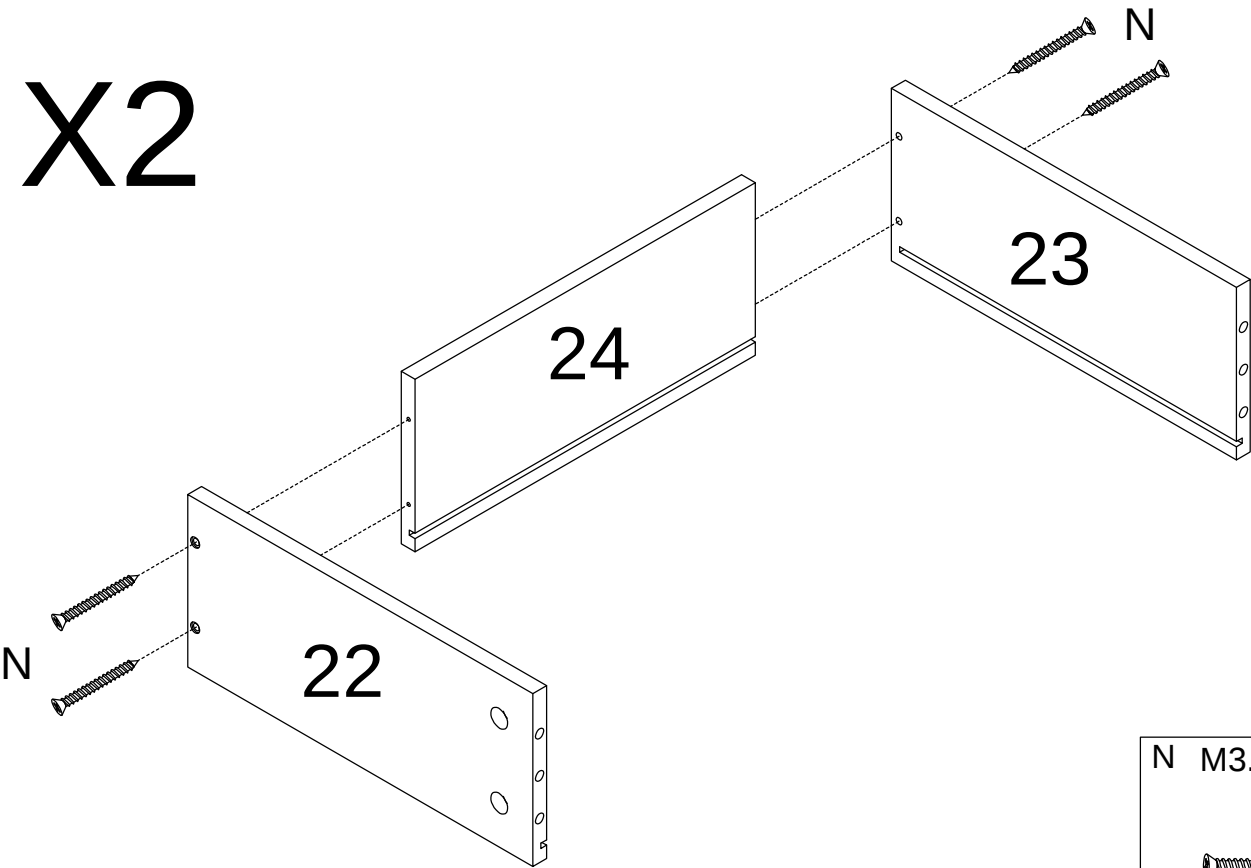


N M3.5x40




x8

Step 31

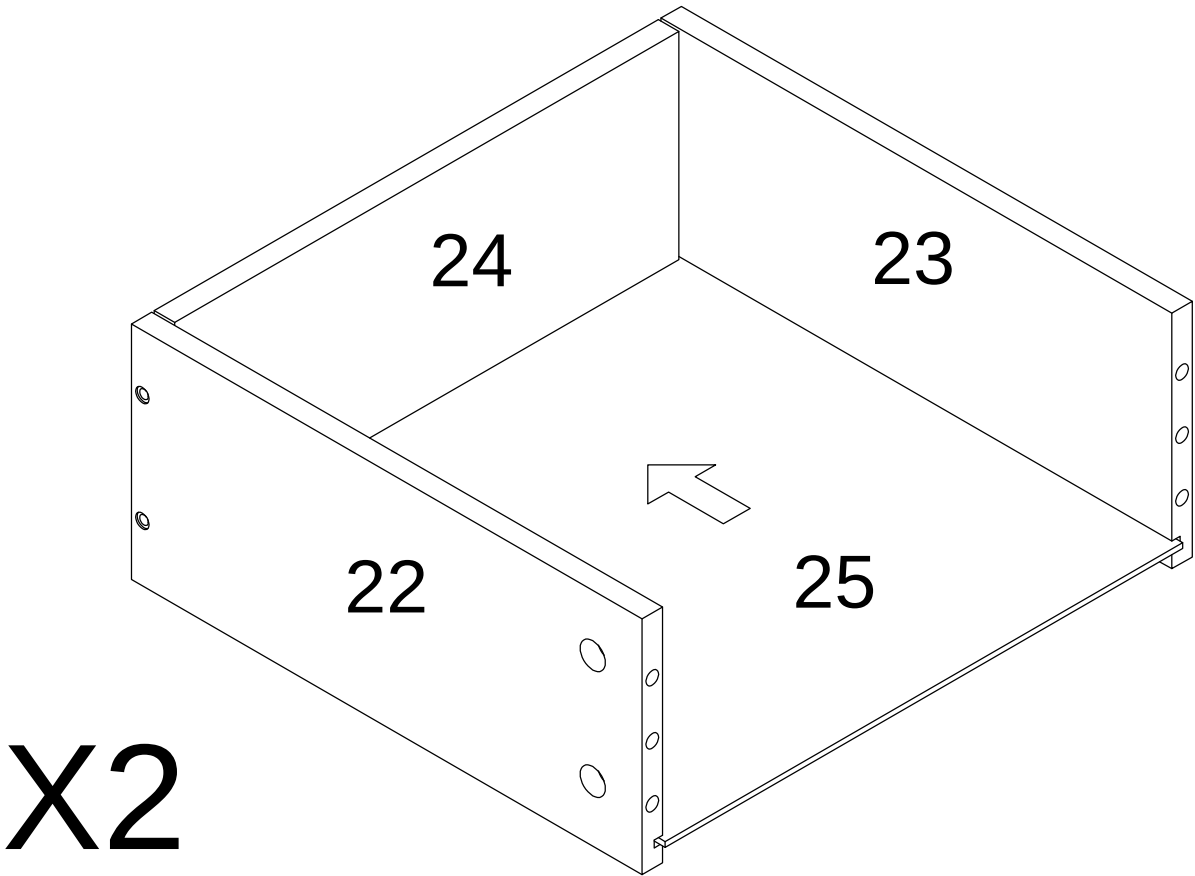


X2


Step 32

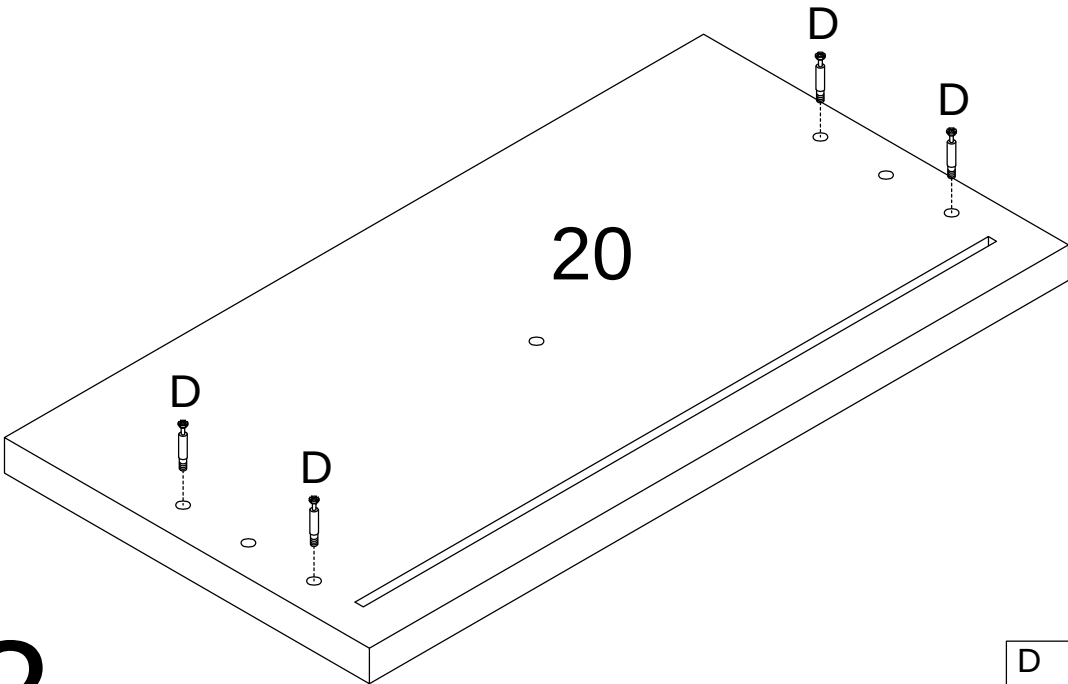

X2

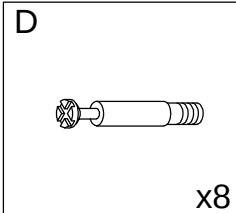


Step 33

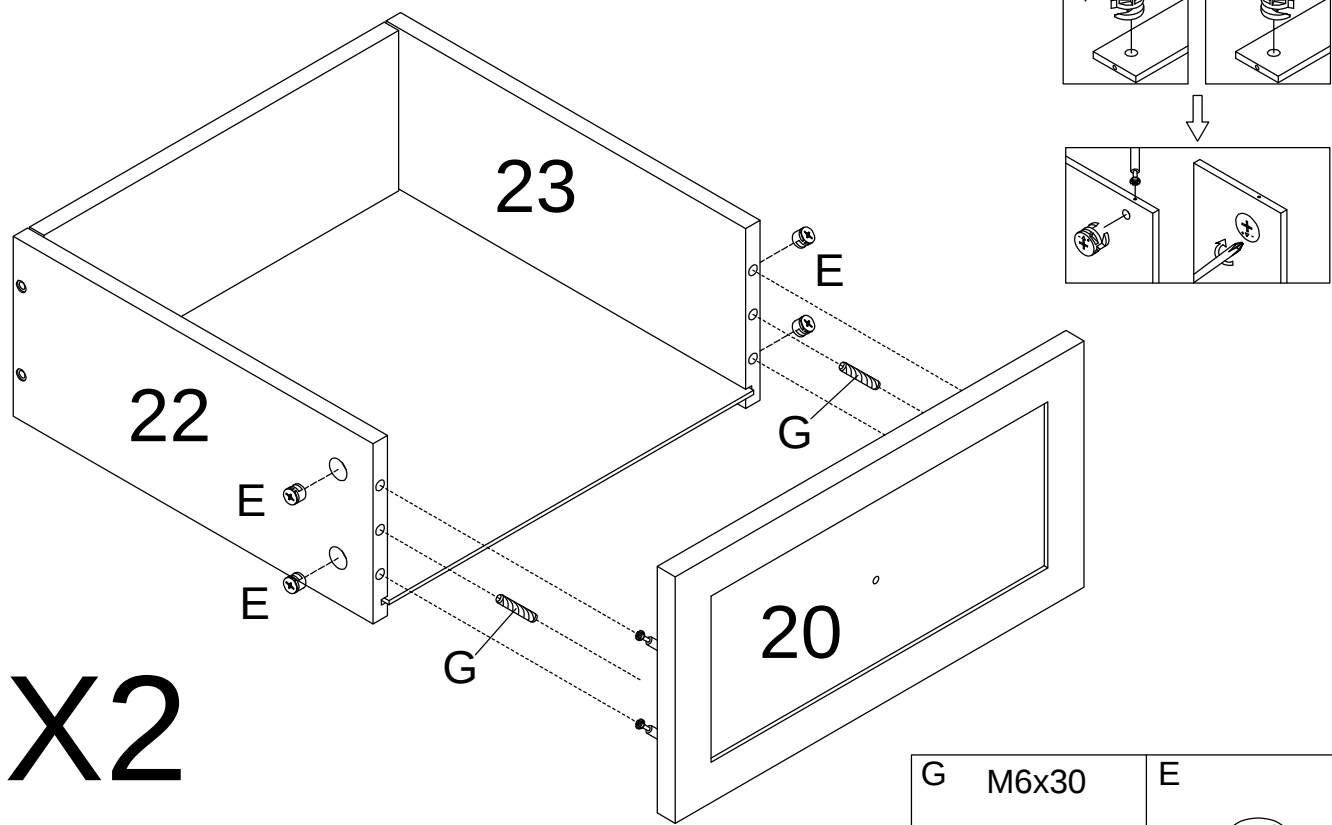

X2

G	M6x30	E
		
	x4	x8

Step 34


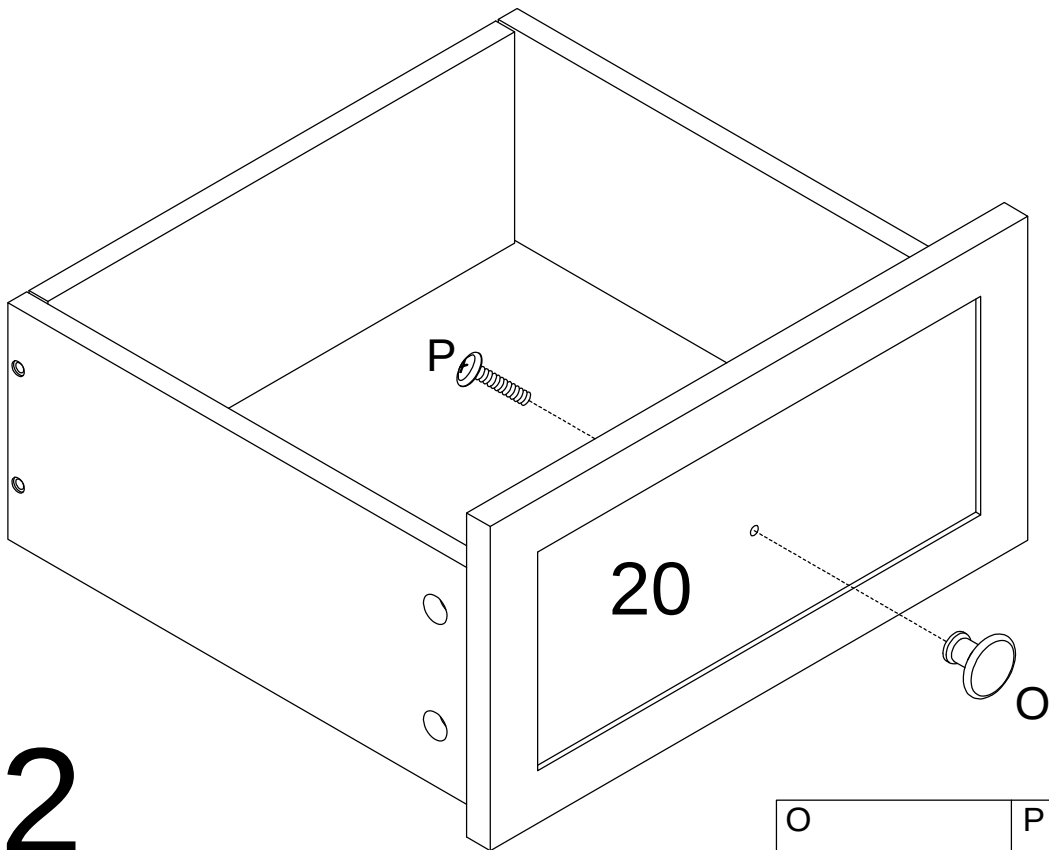





X2

O	P	M4x22
		
	x2	x2



Step 35

X2

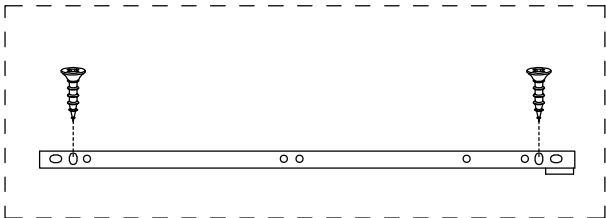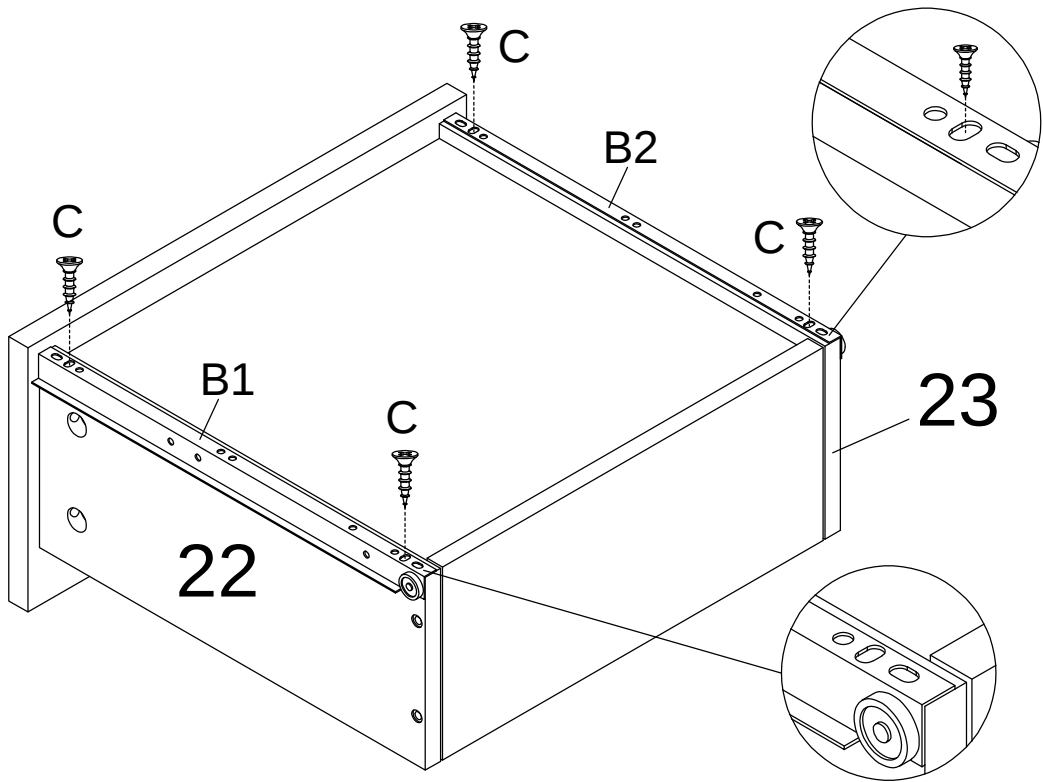


B1	B2	C M3.5x12
		
x2	x2	x8


Step 36

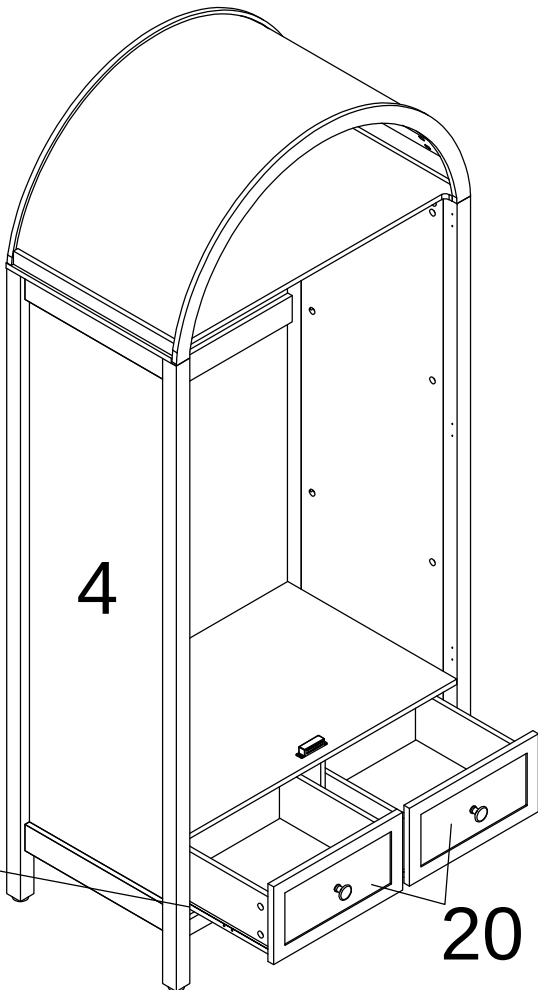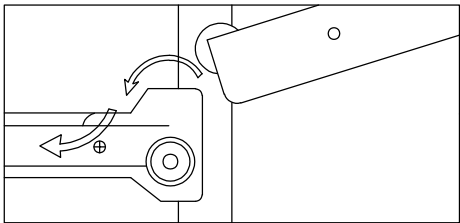


Step 37

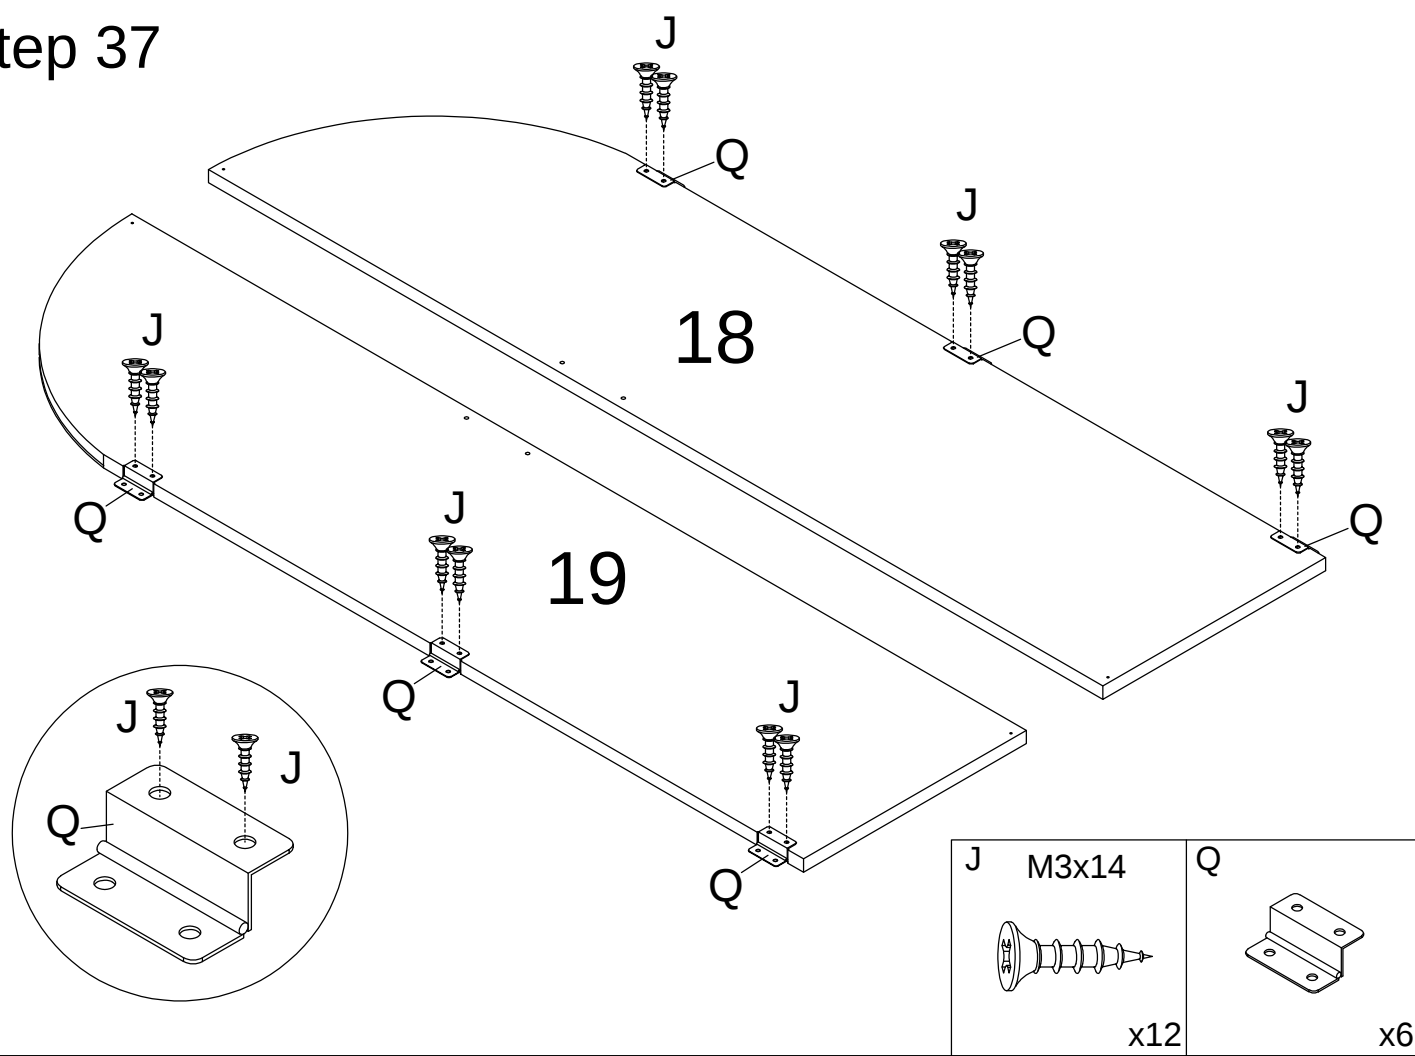

Step 38

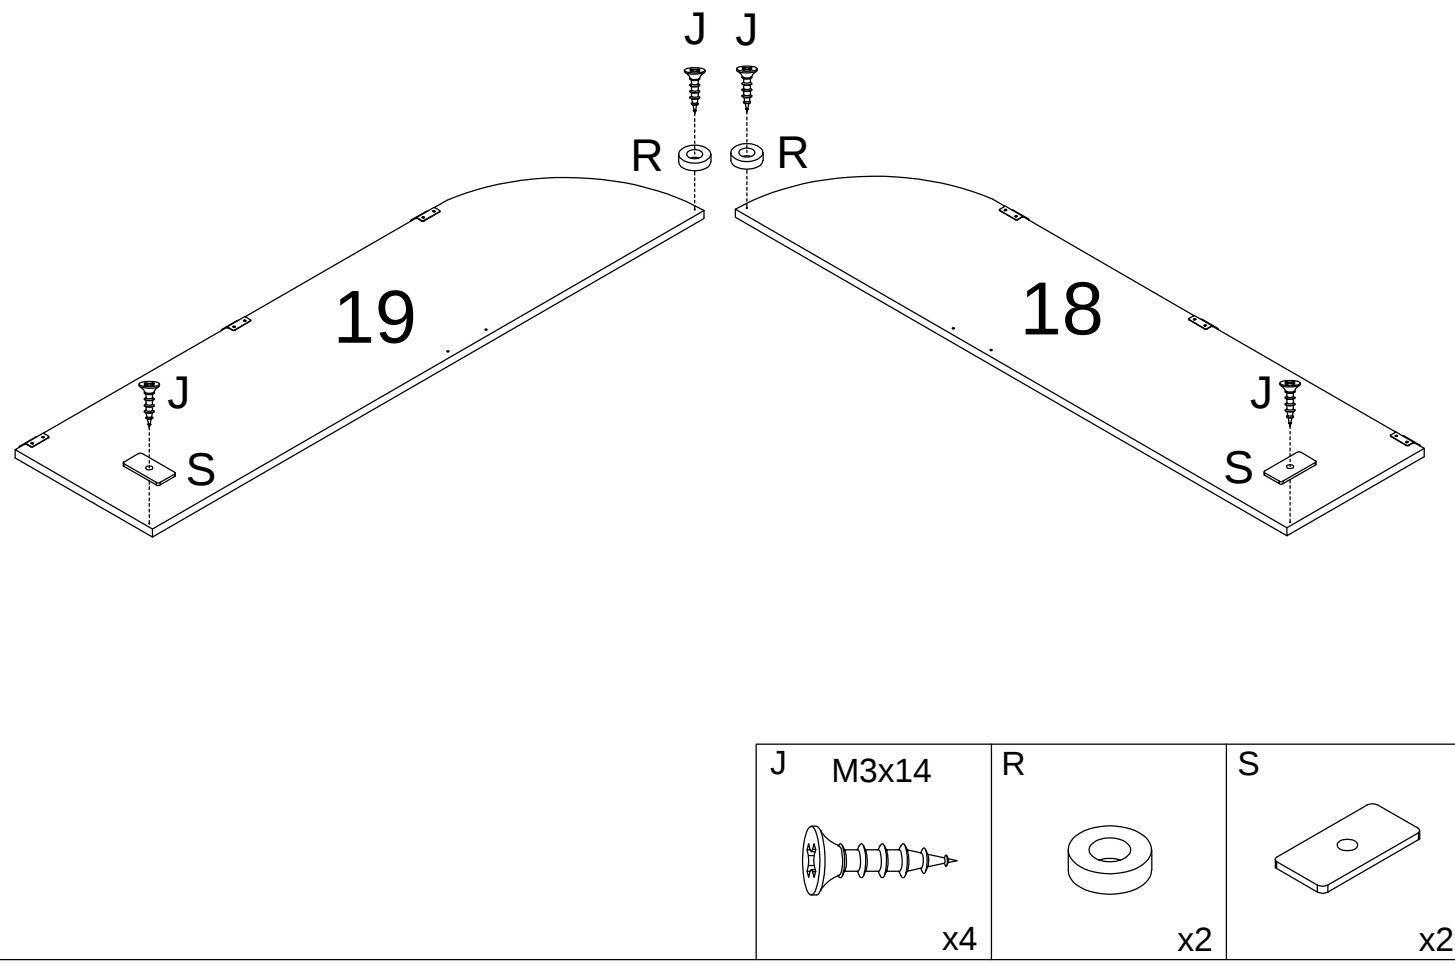



Step 39

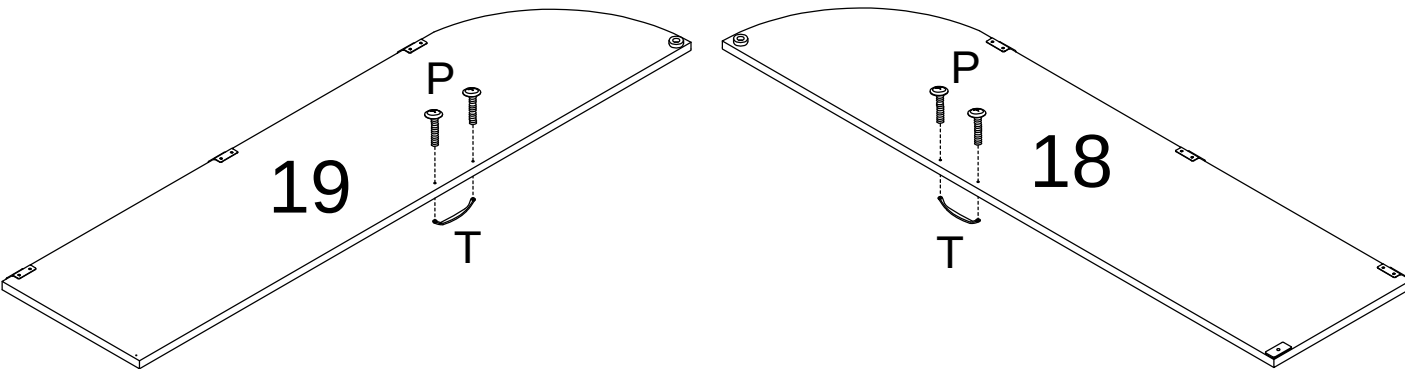


T	P M4x22
	
x2	x4

Step 40

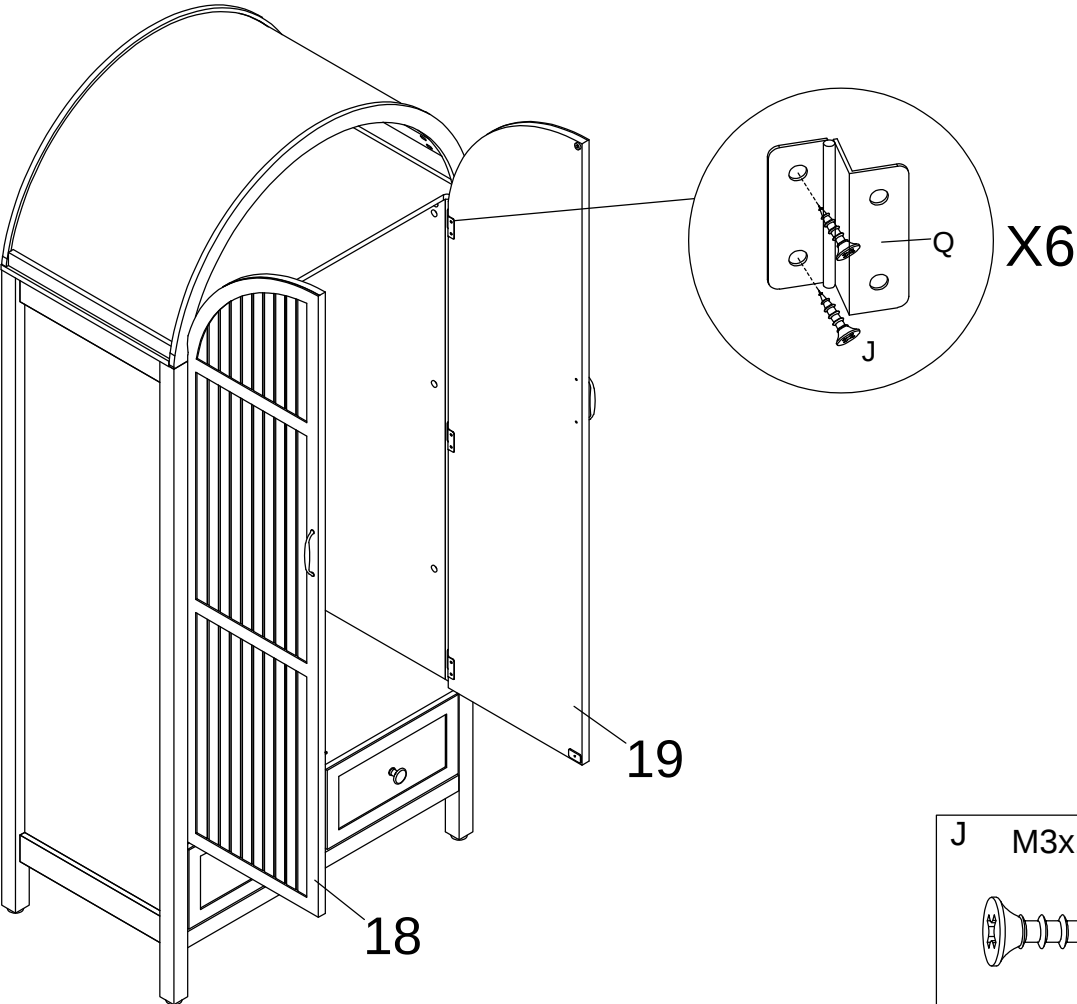


J M3x14

x12

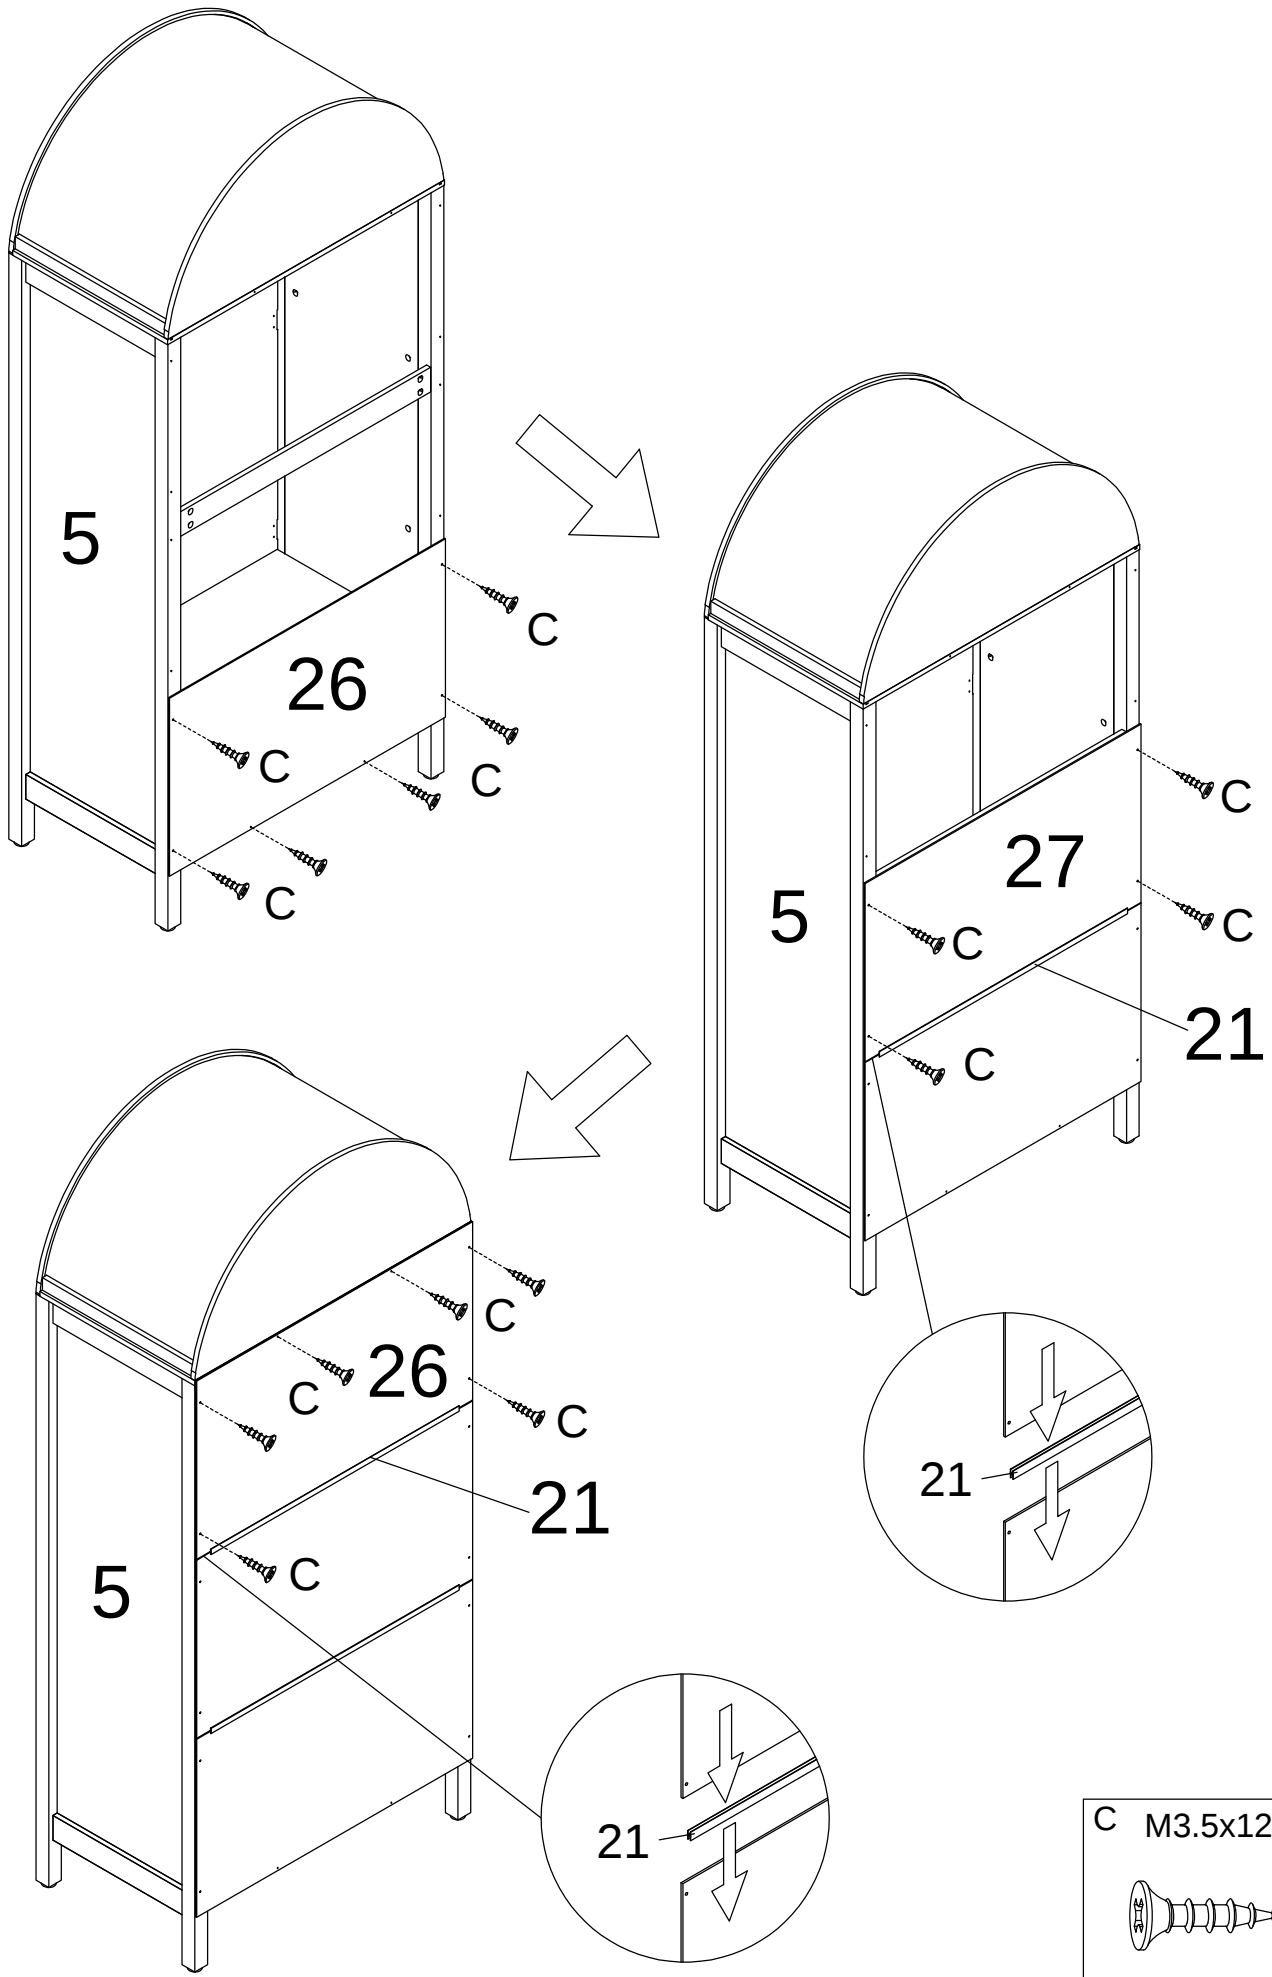Step 41




C M3.5x12




x16

Step 42

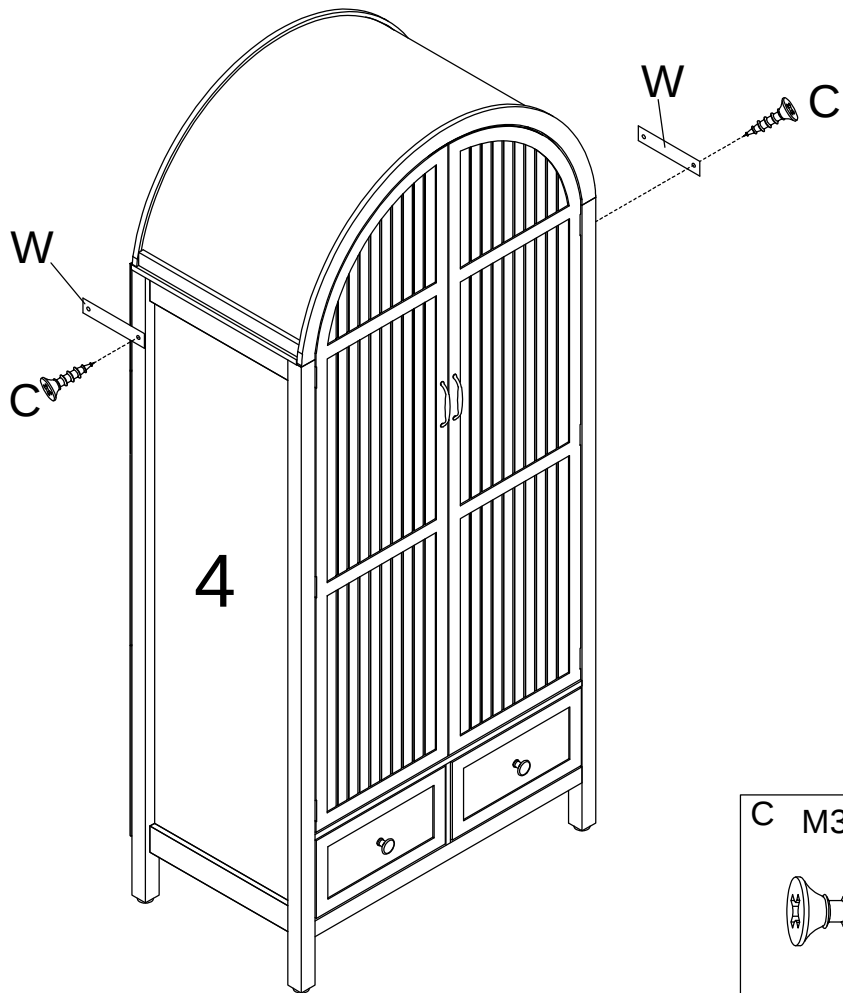


C M3.5x12




x2

W




x2

Step 43

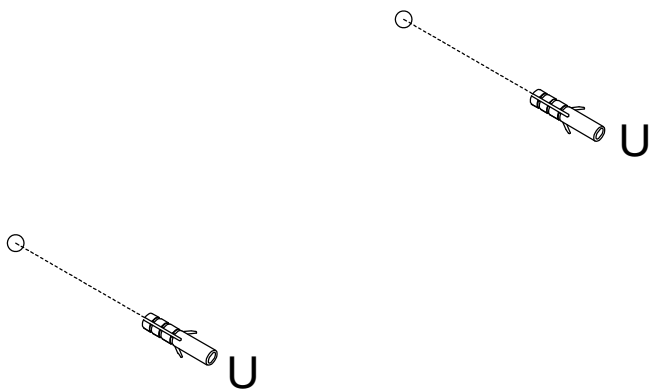


U




x2

Step 44

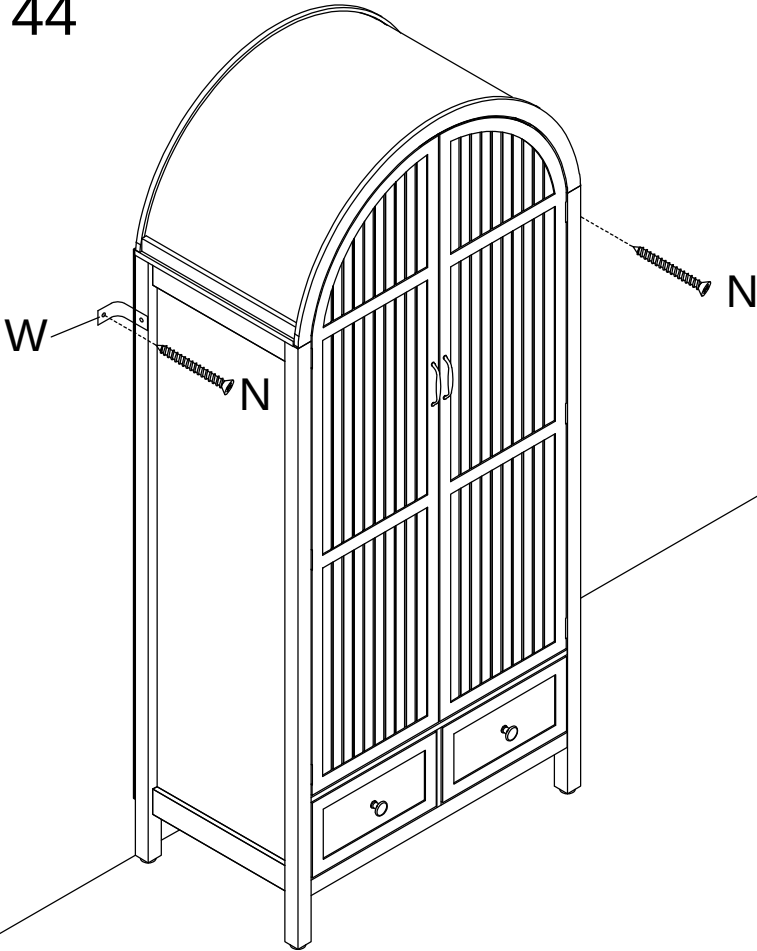


N M3.5x40



x2


Finish !!!

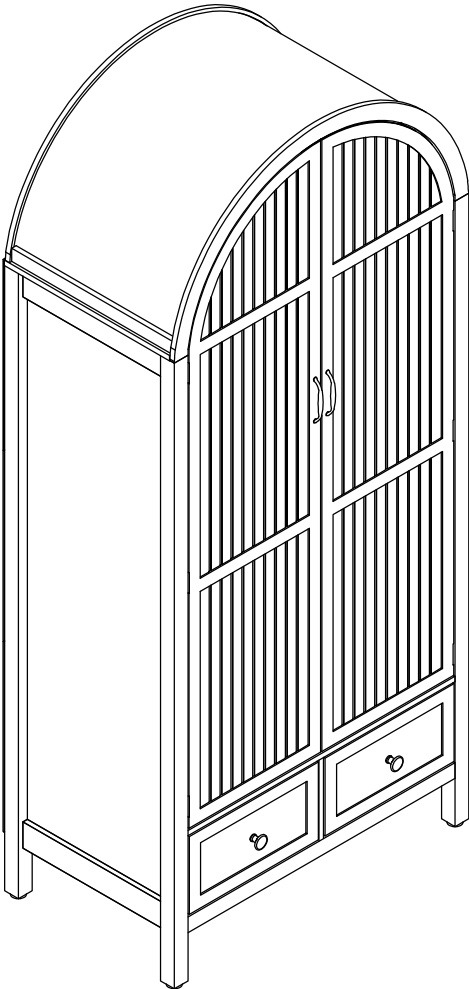





X

Before

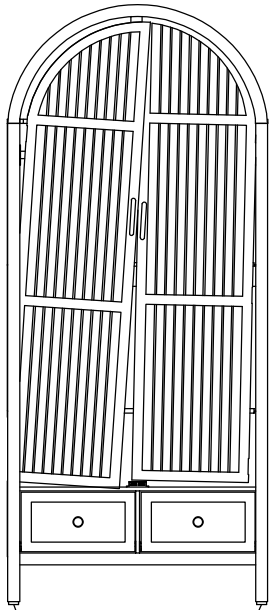

After

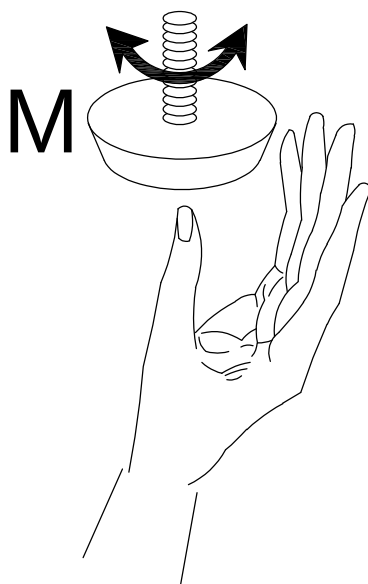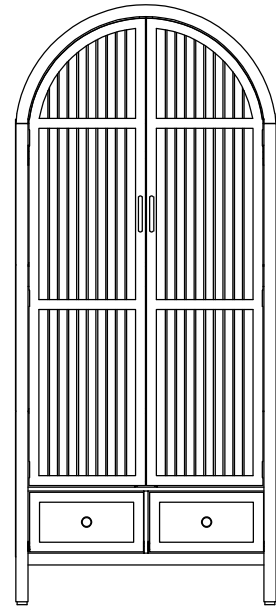

Installation tips: If the height of the door is inconsistent after installation, please adjust the adjusting feet M at the bottom.