




6-STEP INSTALL GUIDE

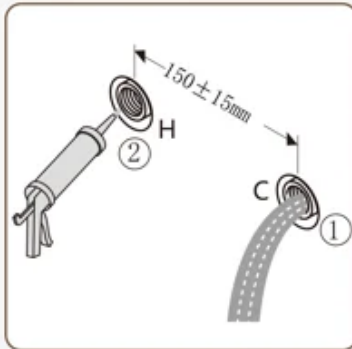

1. Turn on water and flush pipe 3 mins to clear debris. Seal G1/2 outlet-wall gap with silicone.

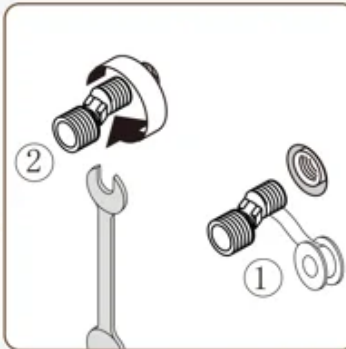


2. Wrap Teflon tape on threads, wrench elbows into hot/cold outlets.

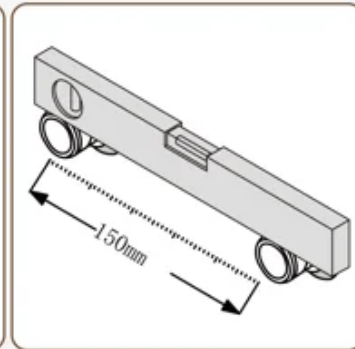


3. Adjust swivel elbows to 150mm center-distance, ensure level.



4. Fit decorative covers onto swivel elbows, then tighten faucet with wrench.

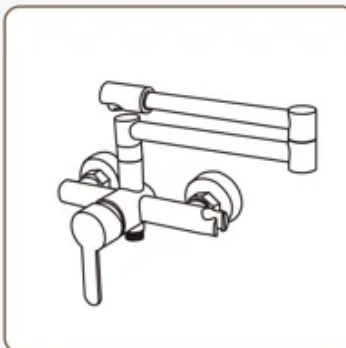

5. After partial install, push faucet against wall when idle to save space.

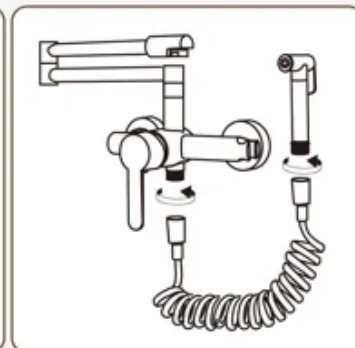

6. Use the hose to connect the faucet and sprayer.