


ASSEMBLY INSTRUCTION

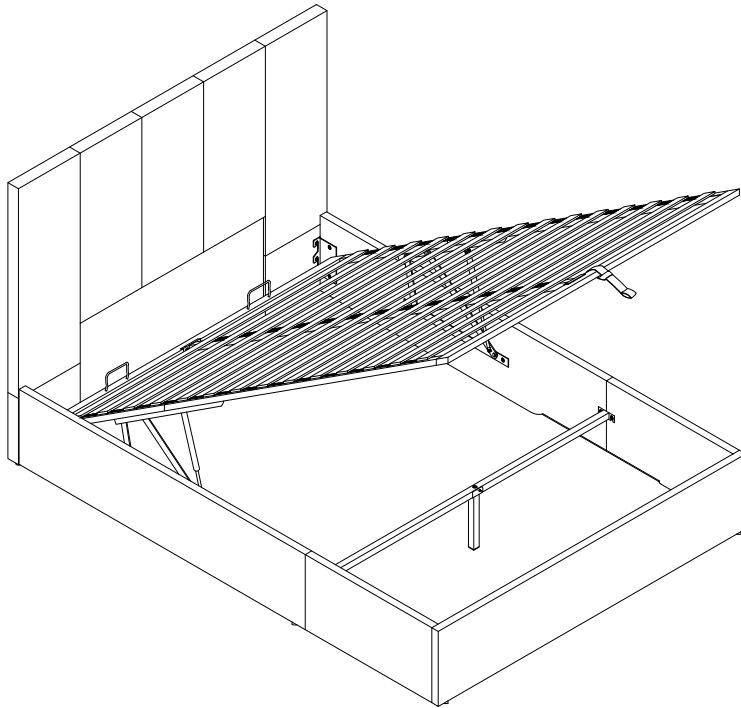


Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!


ITEM NUMBER:S23001

IMPORTANT NOTE



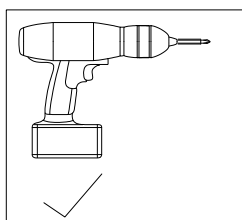













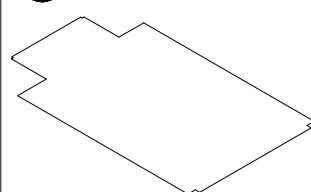
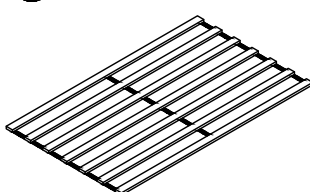

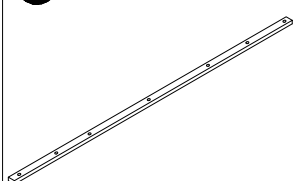
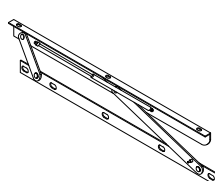
1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
5. NEED PARTS OR ASSISTANCE? EMAIL US AT support@velocavabed.com
6. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

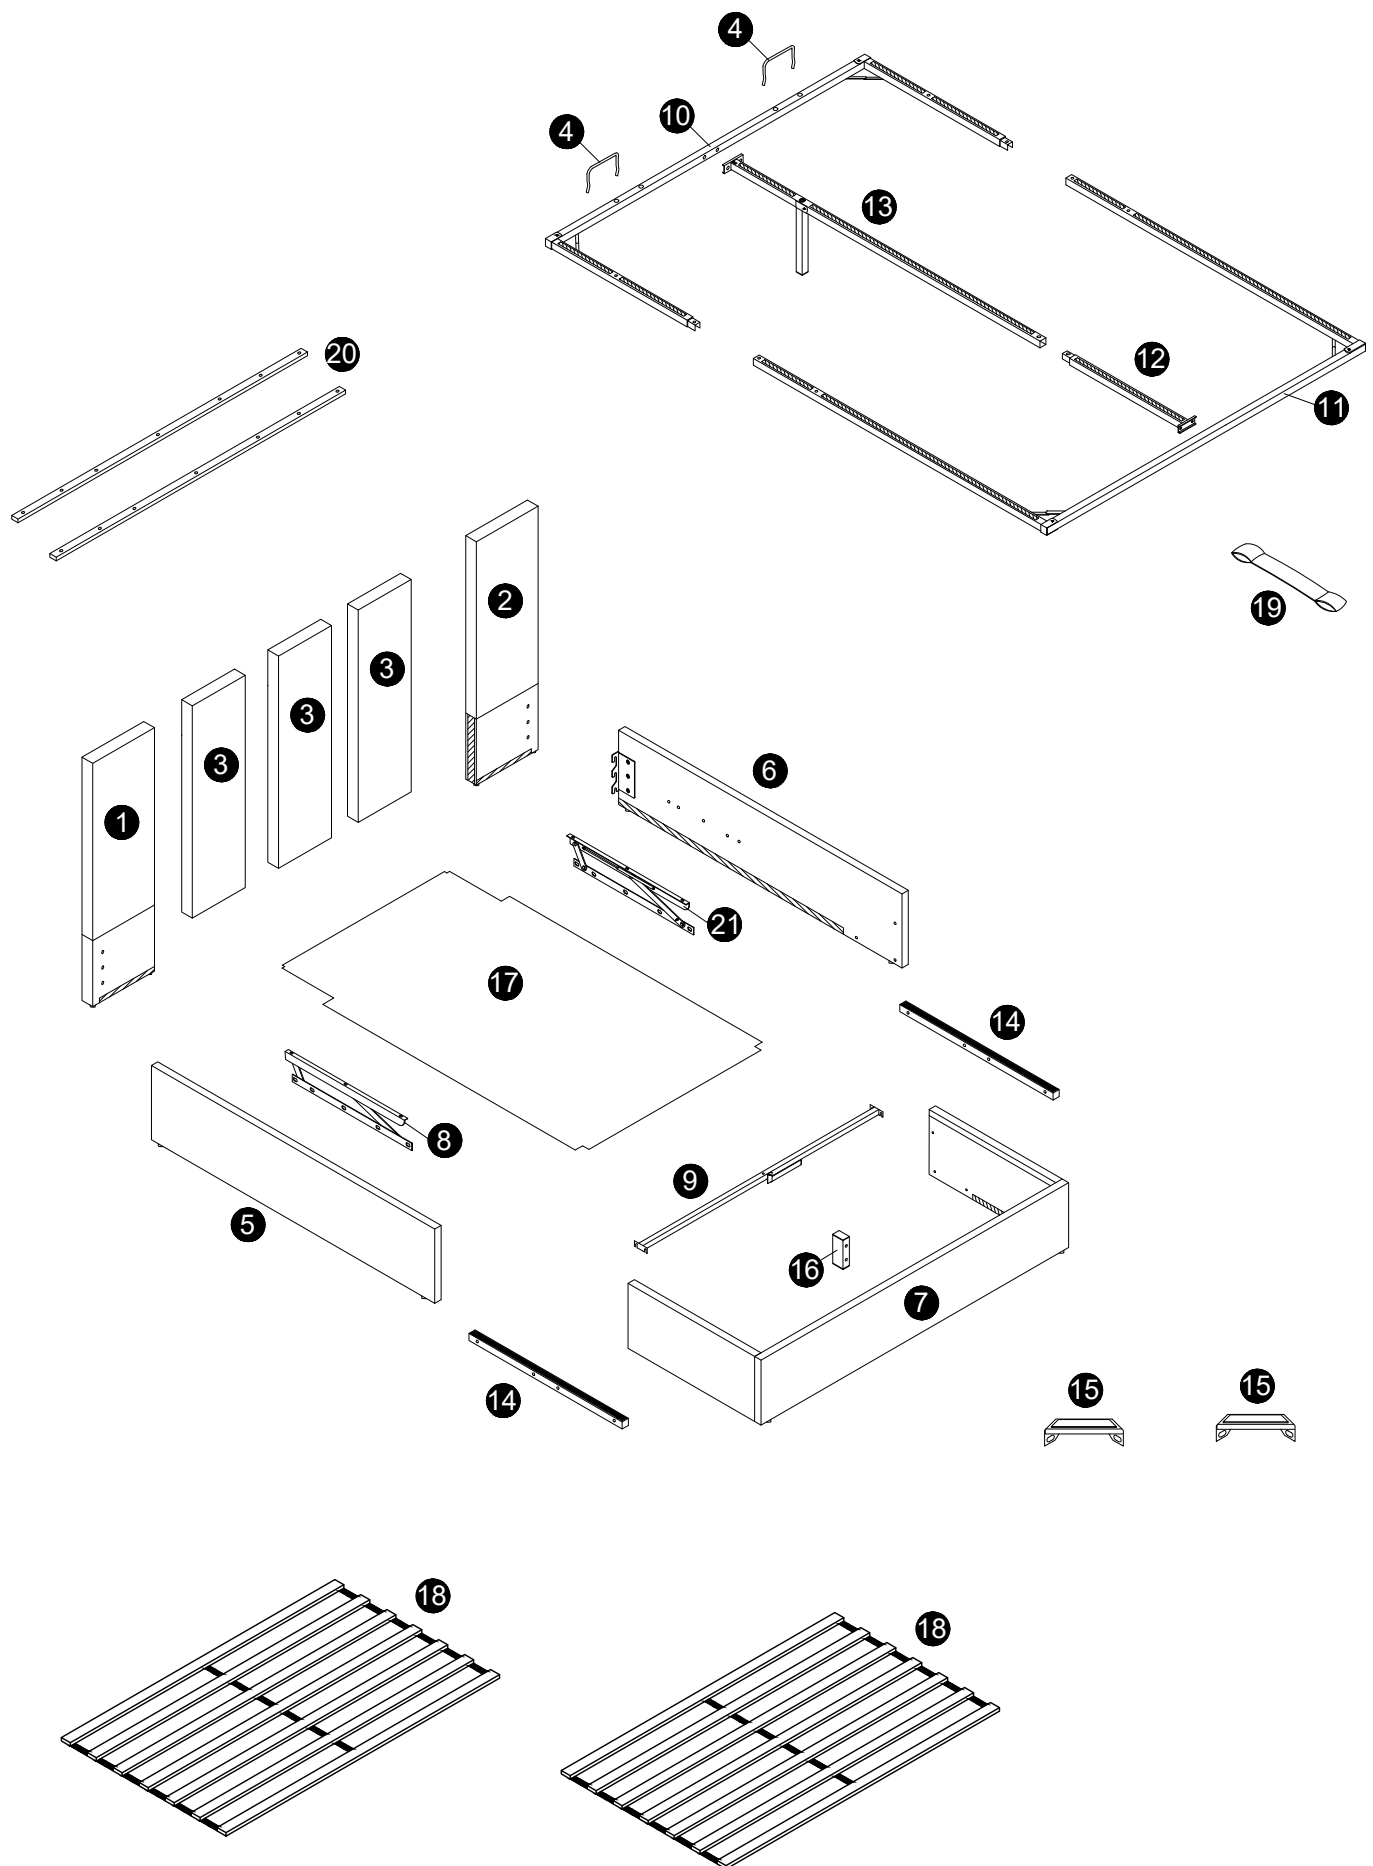

PART LIST



PART LIST

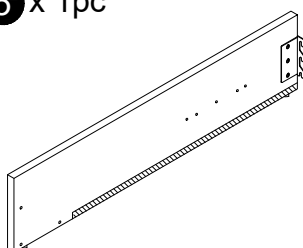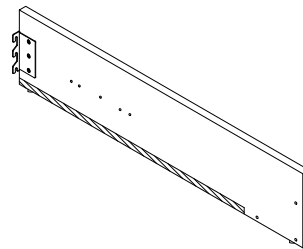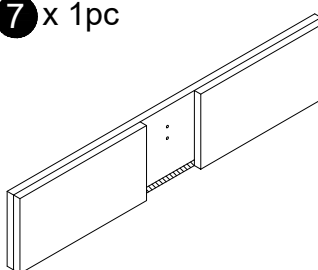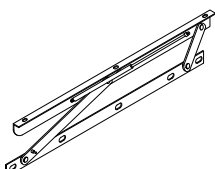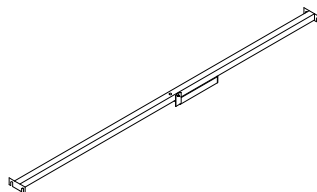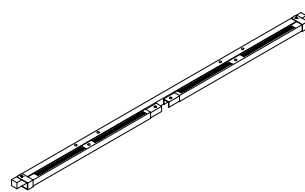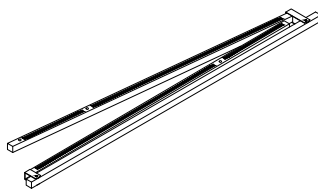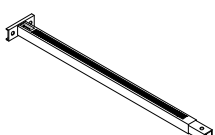1 x 1pc		2 x 1pc		3 x 3pcs		4 x 2pcs			
5 x 1pc		6 x 1pc		7 x 1pc		8 x 1pc			
9 x 1pc		10 x 1pc		11 x 1pc		12 x 1pc			
13 x 1pc		14 x 2pcs		15 x 2pcs		16 x 1pc			
17 x 1pc		18 x 2pcs		19 x 1pc		20 x 2pcs		21 x 1pc	

HARDWARE LIST



H1 M5 x 1pc



H2 M8x25mm x 23pcs



H3 M8x35mm x 28pcs



H4 M8x60mm x 2pcs



H5 M8 x 43pcs



H6 M8x17mm x 61pcs



H7 M8 x 6pcs




H8 M14 x 1pc




H9 M8x45mm x 8pcs

1

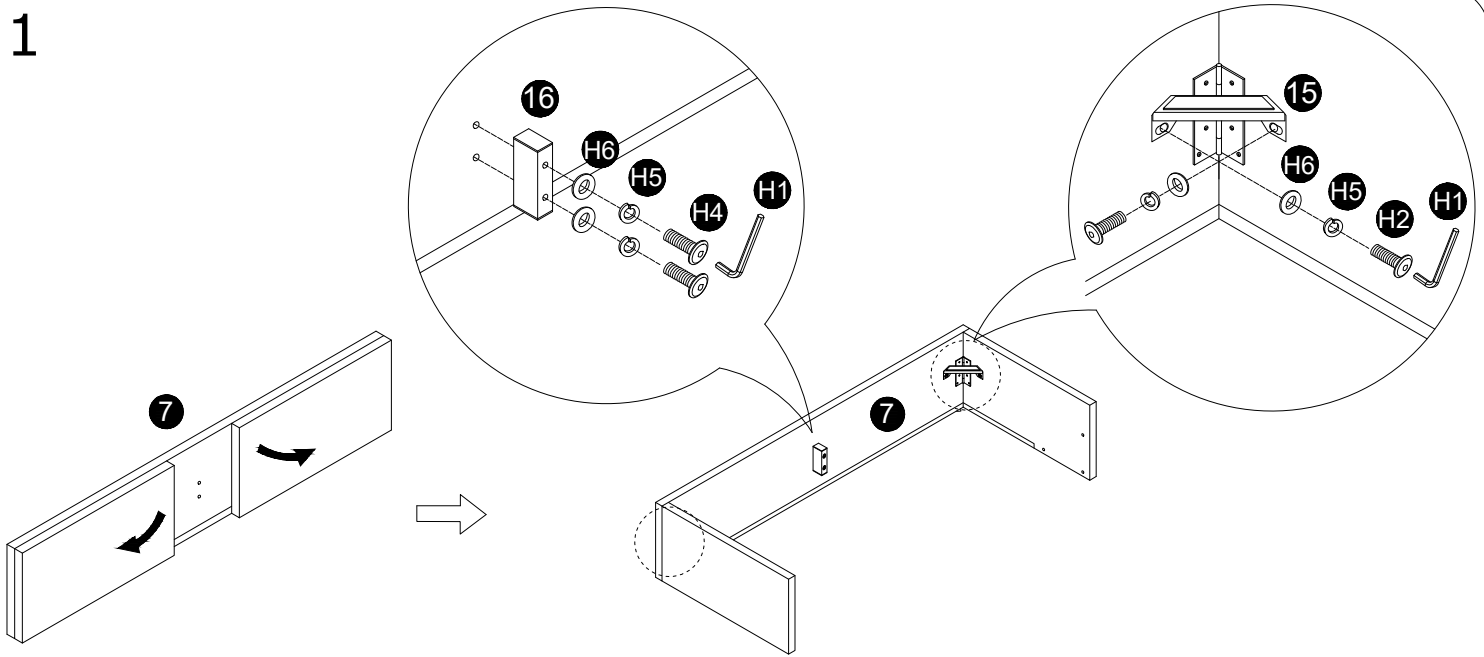


2

Loosely screw parts 1, 2, and 20 together to facilitate inserting part 3 between 1 and 2. Tightening the screws too much will make it difficult to insert part 3.

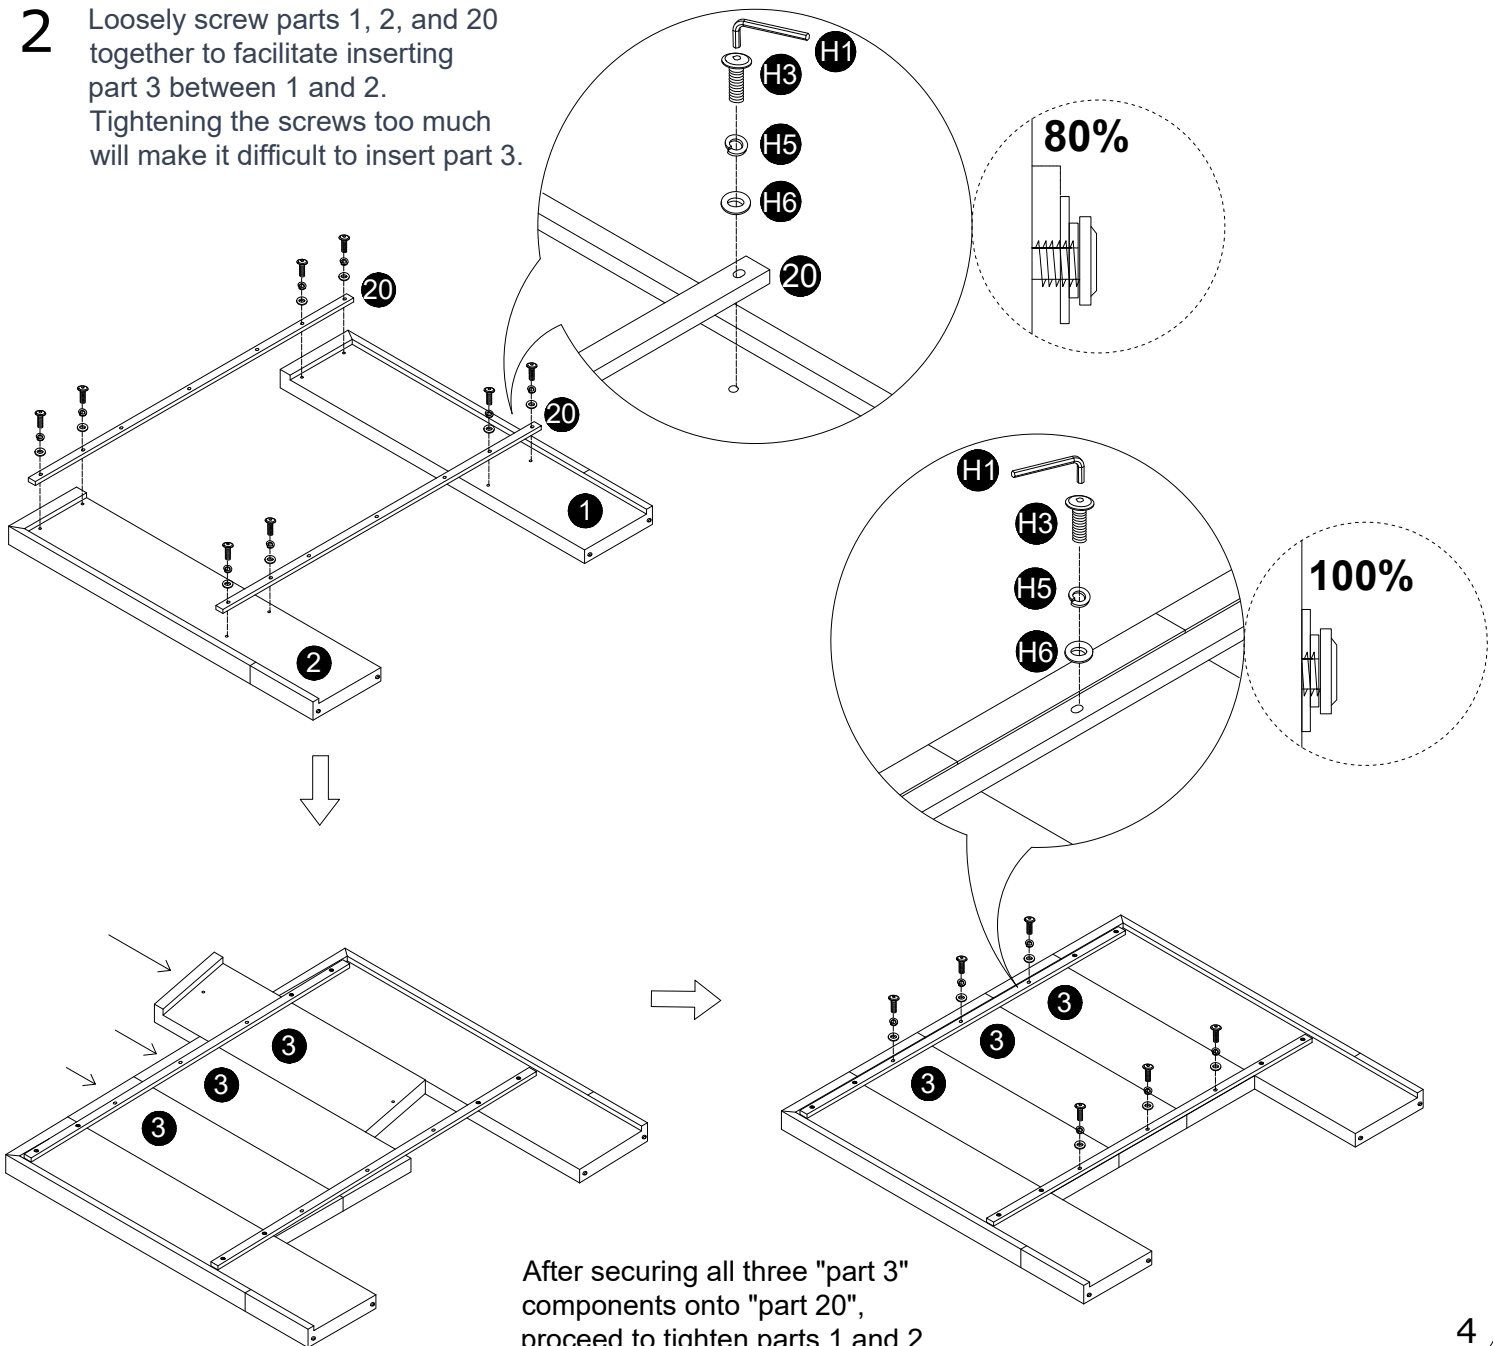


After securing all three "part 3" components onto "part 20", proceed to tighten parts 1 and 2.


3

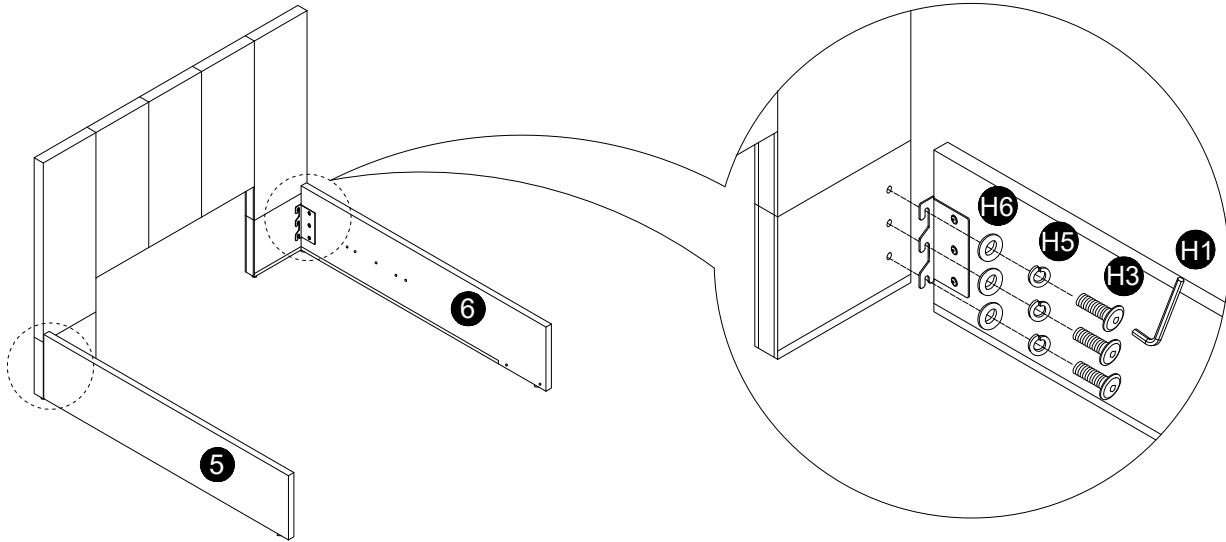


4

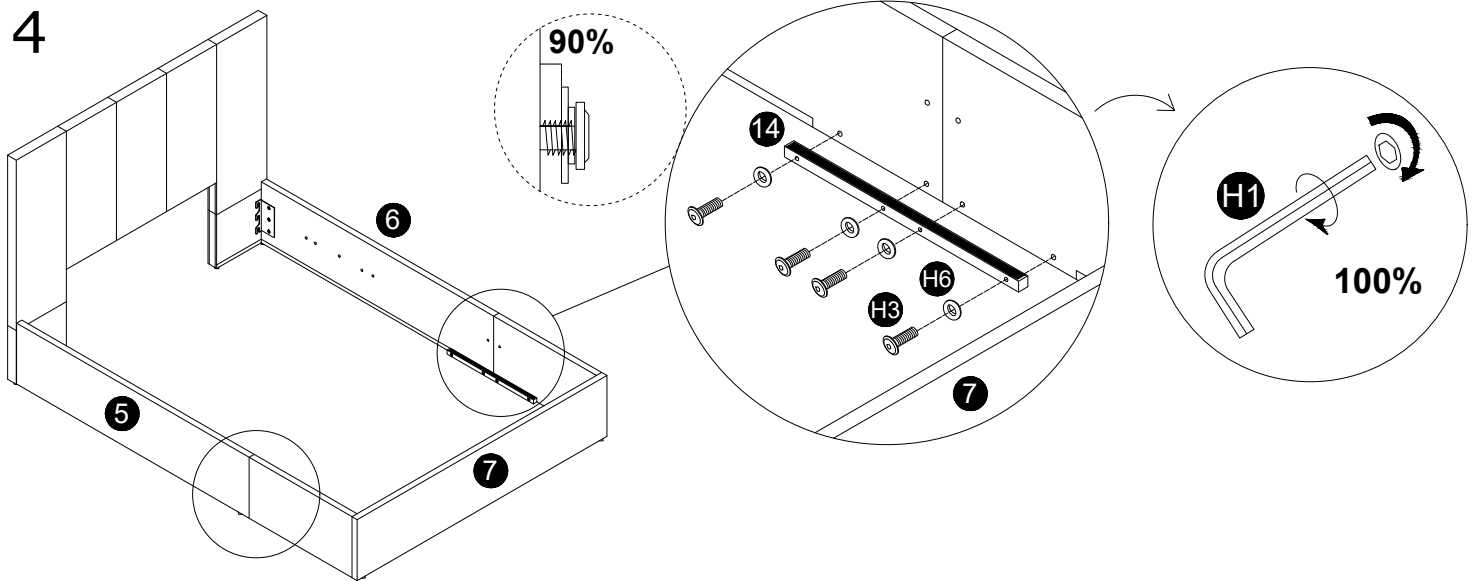


5

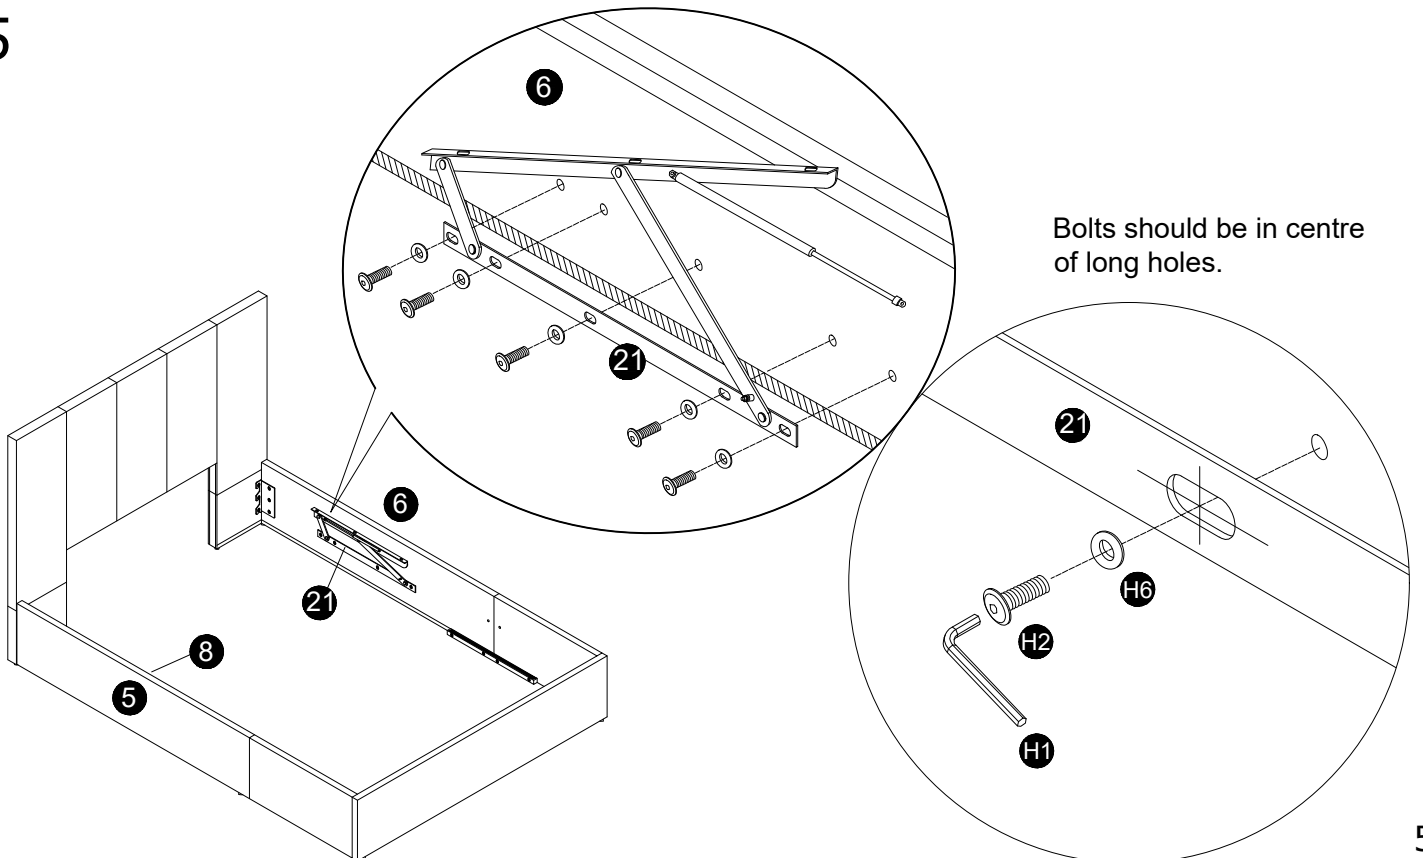


6

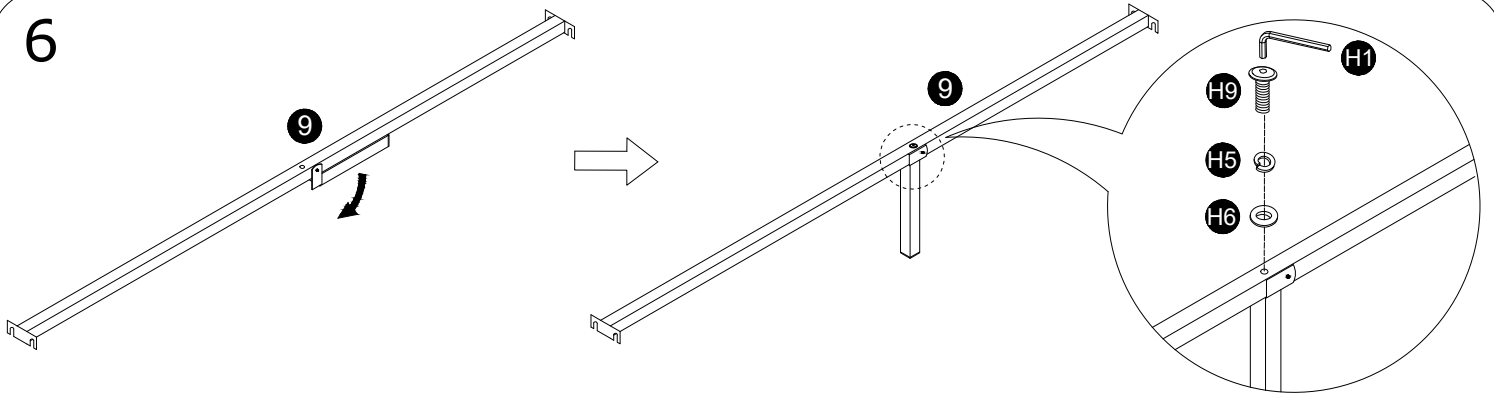


7

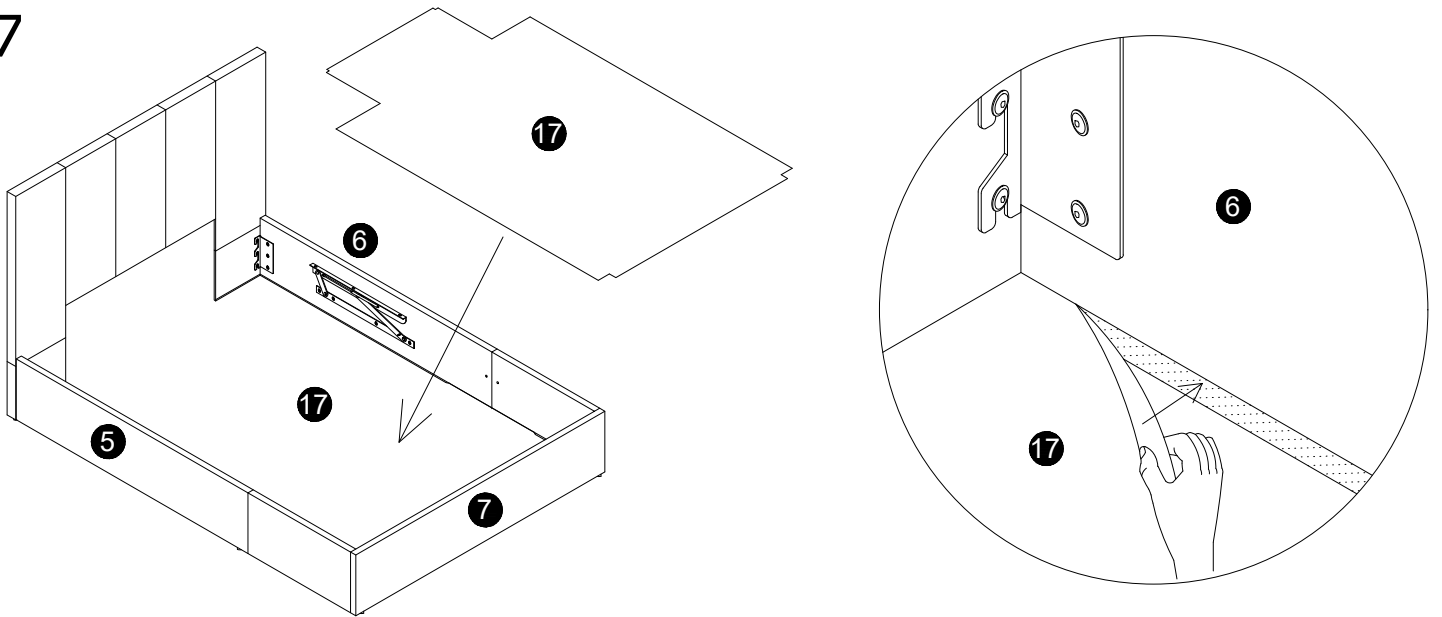


8



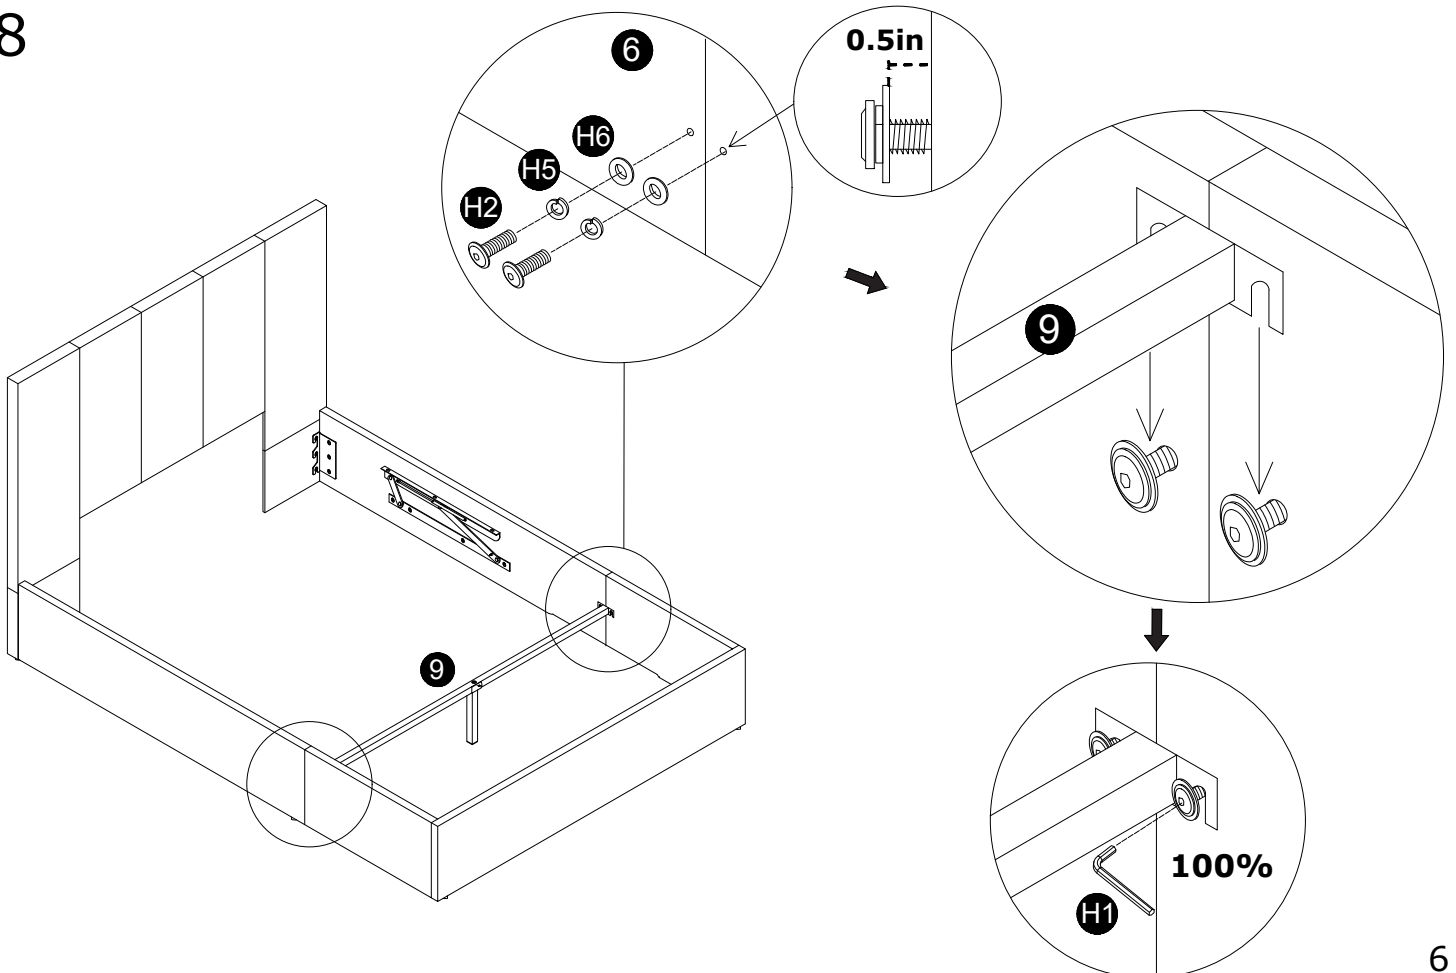


9


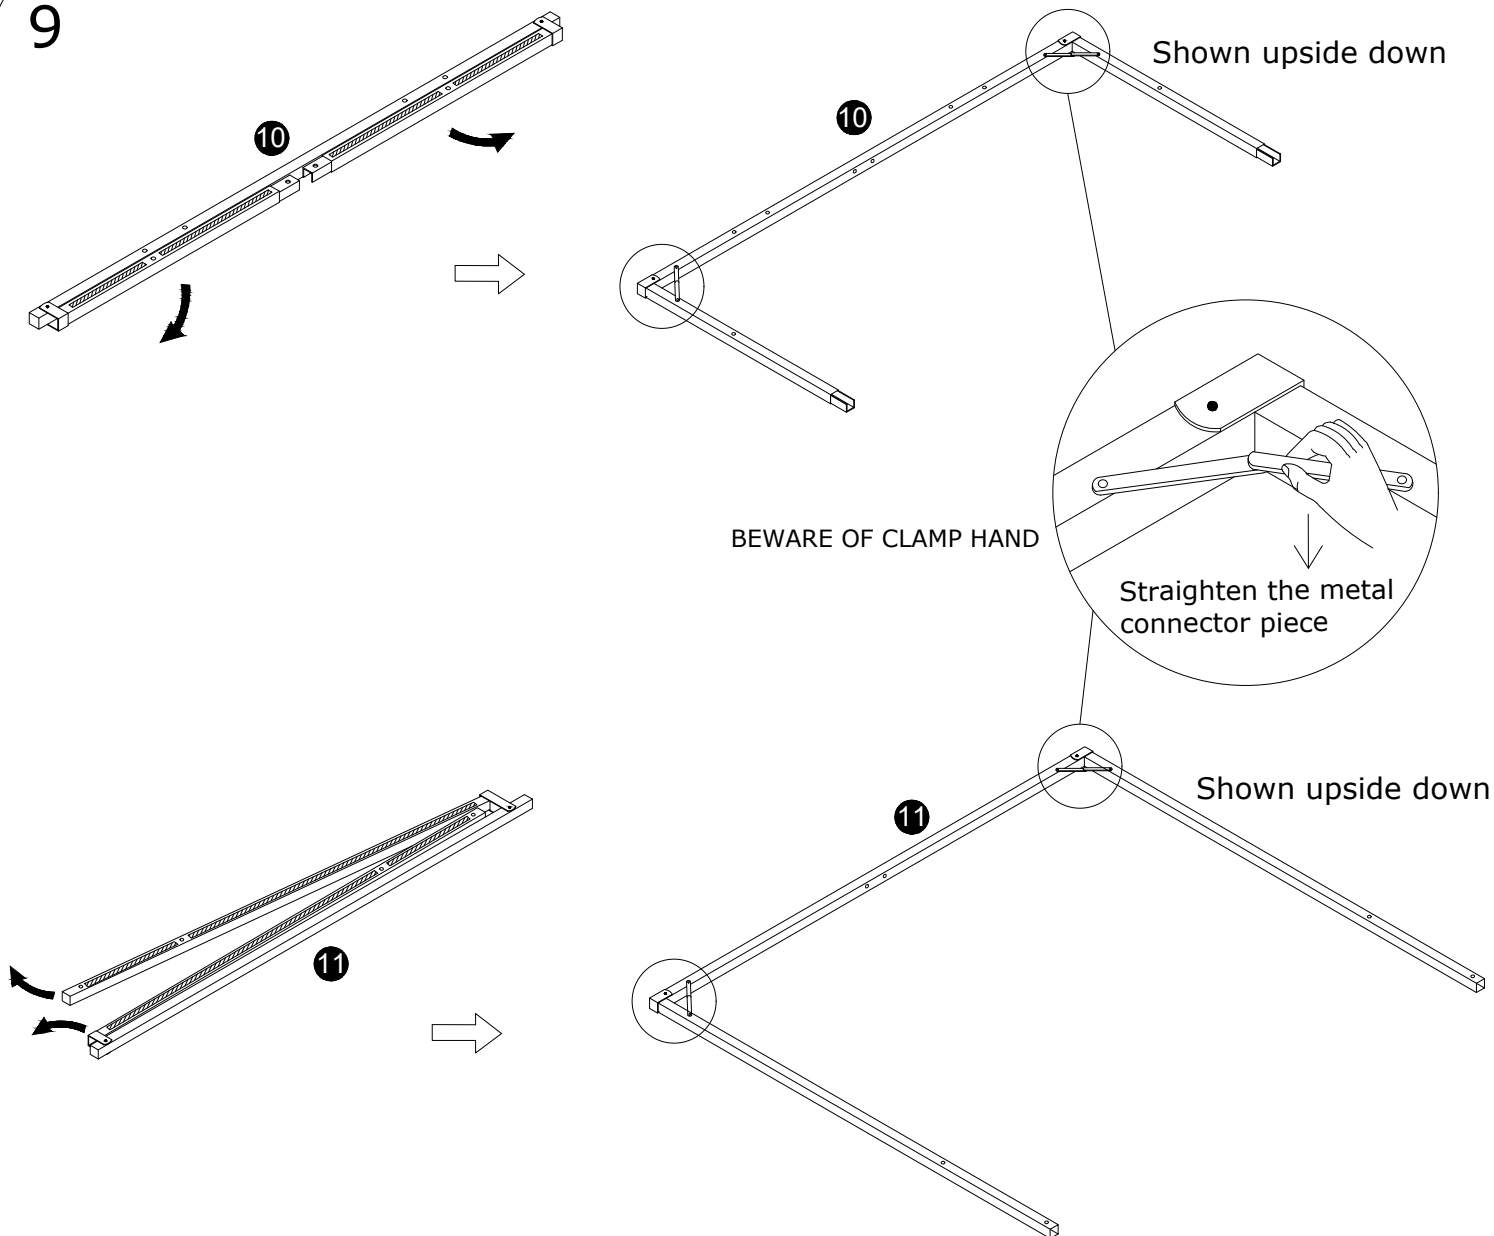


10

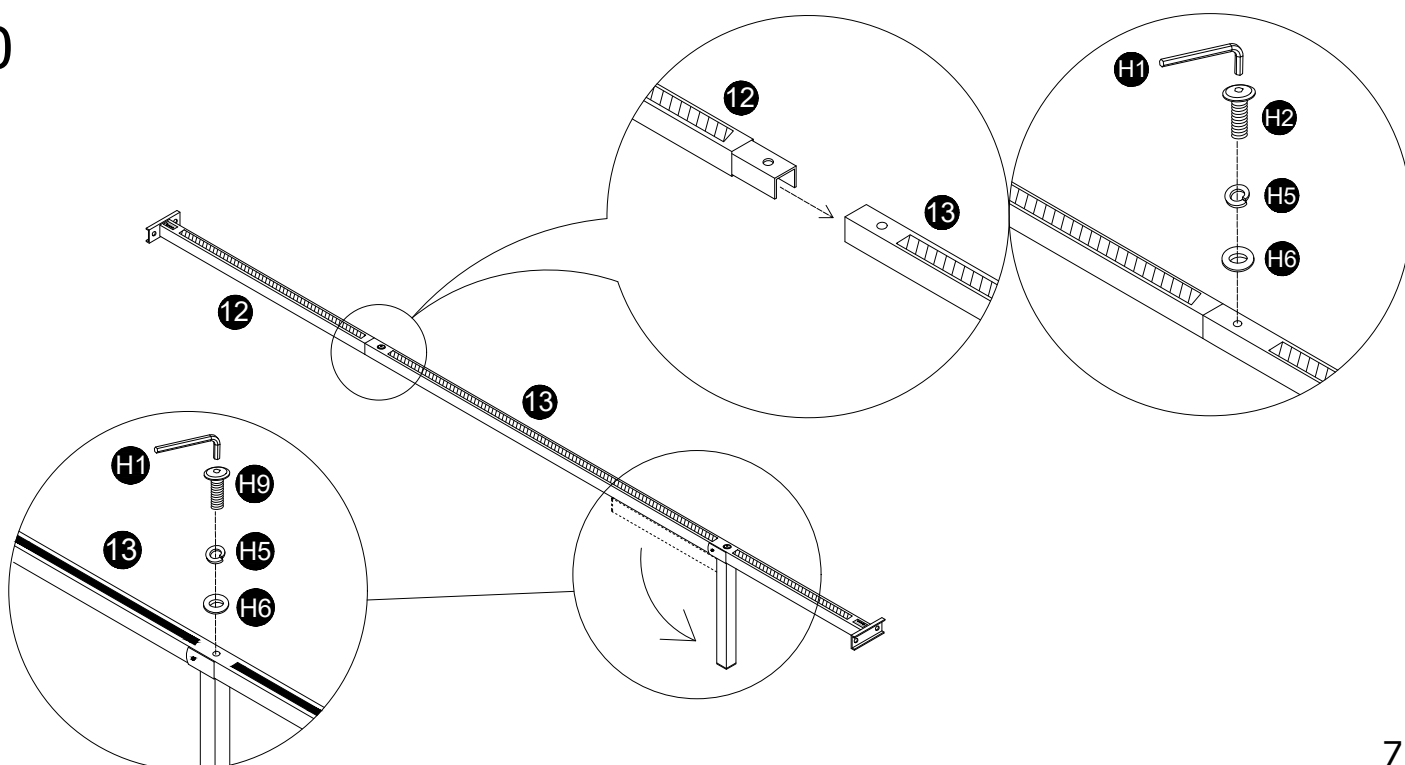

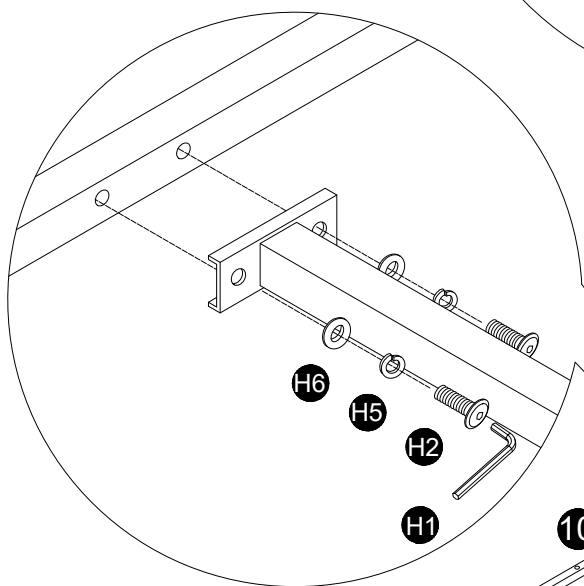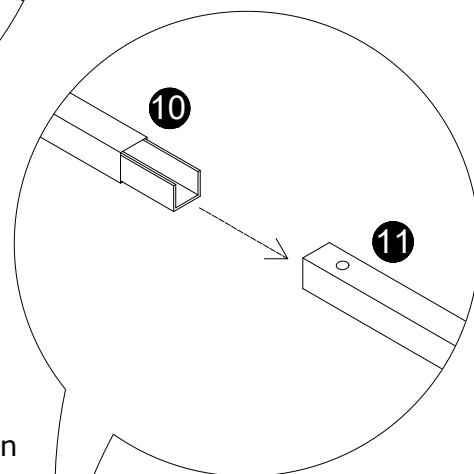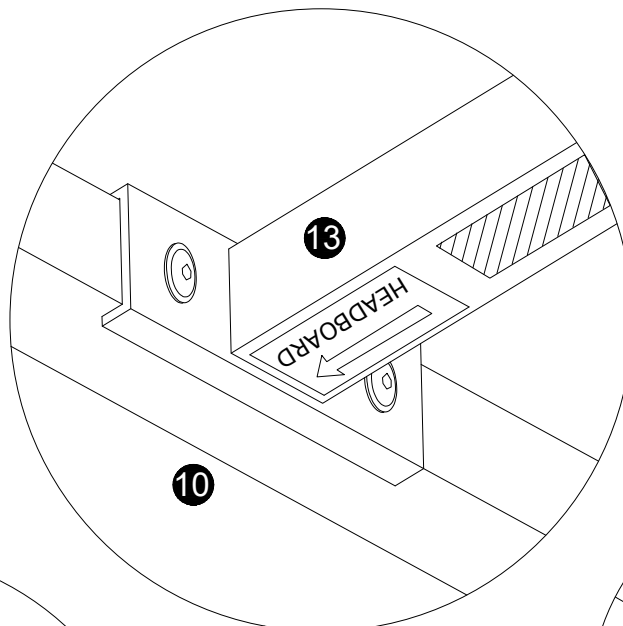


Shown upside down

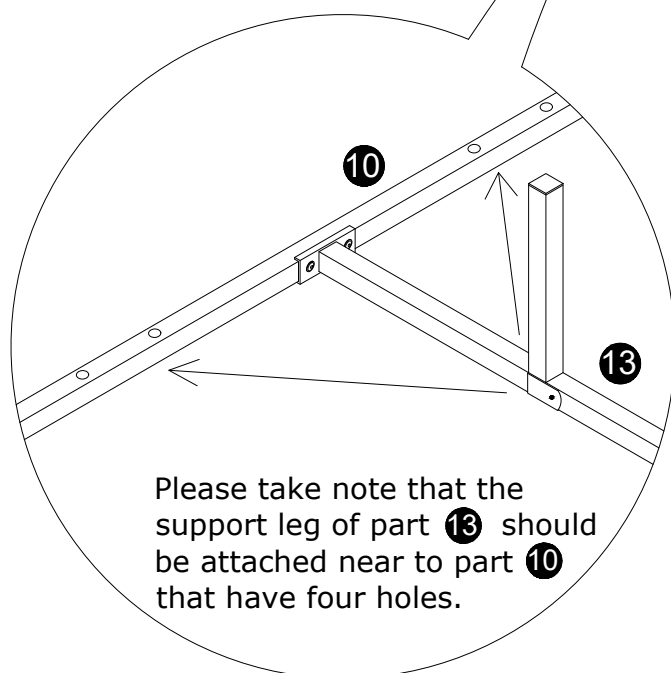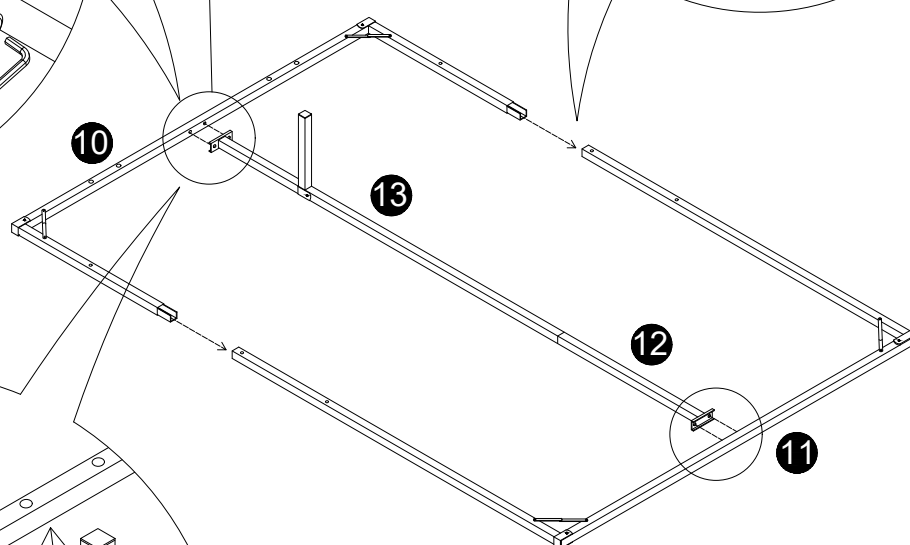


Please take note that the support leg of part 13 should be attached near to part 10 that have four holes.

12

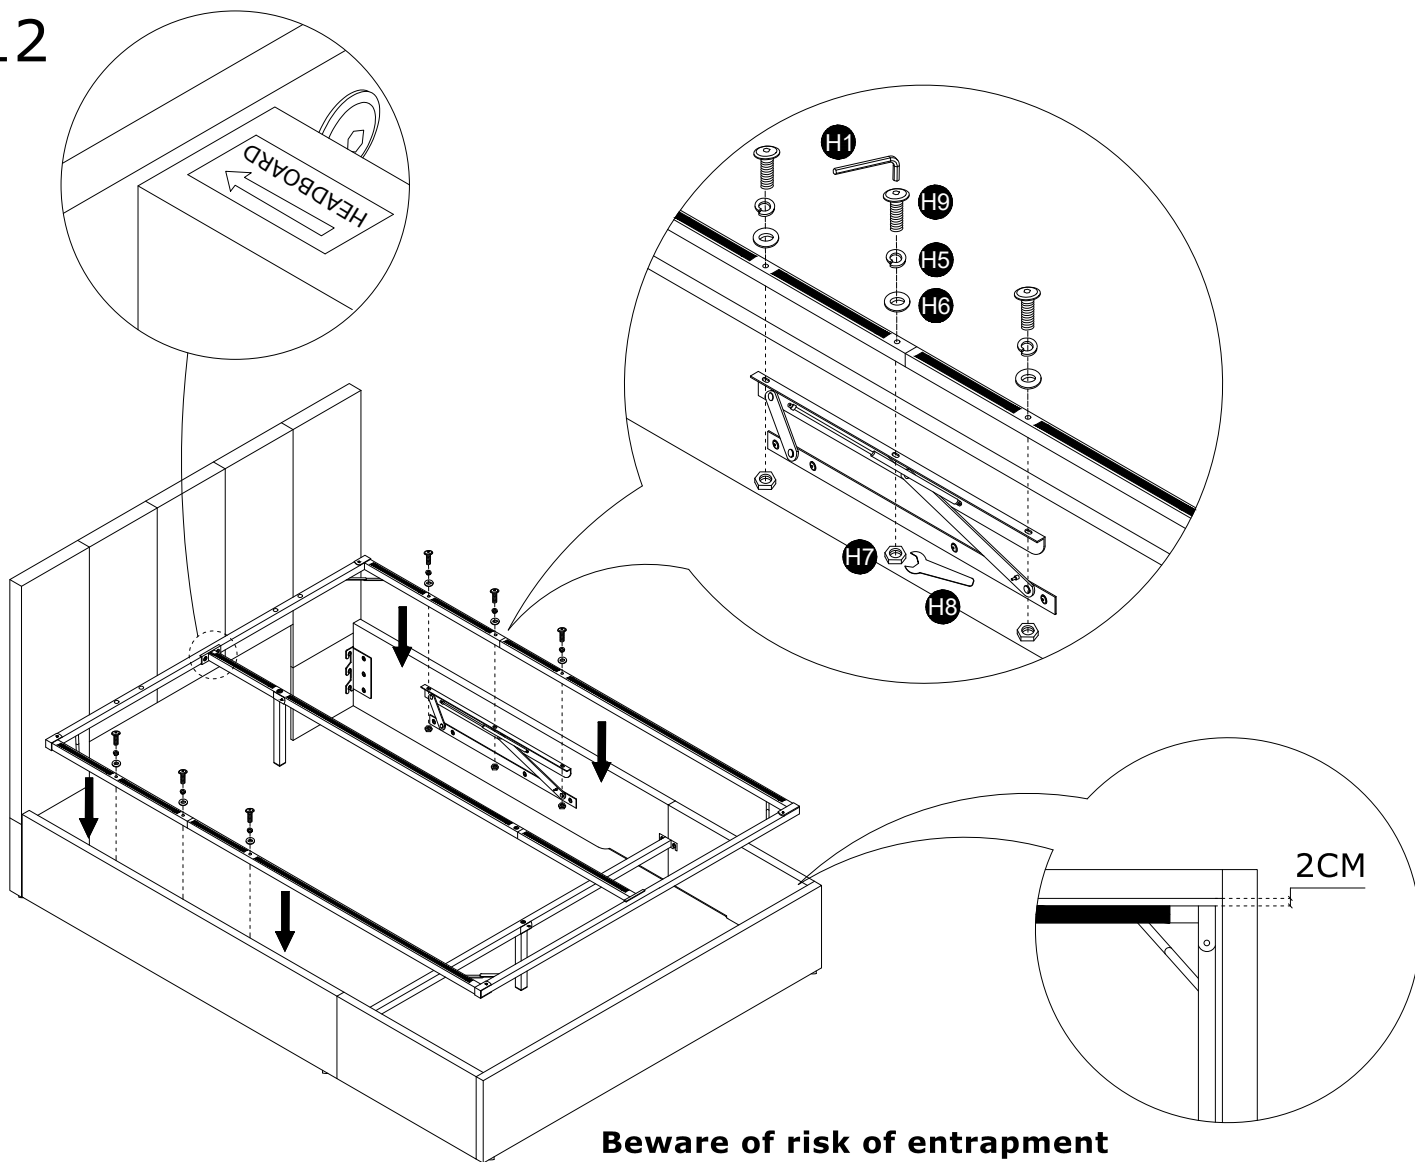


Beware of risk of entrapment from folding hinges!

13

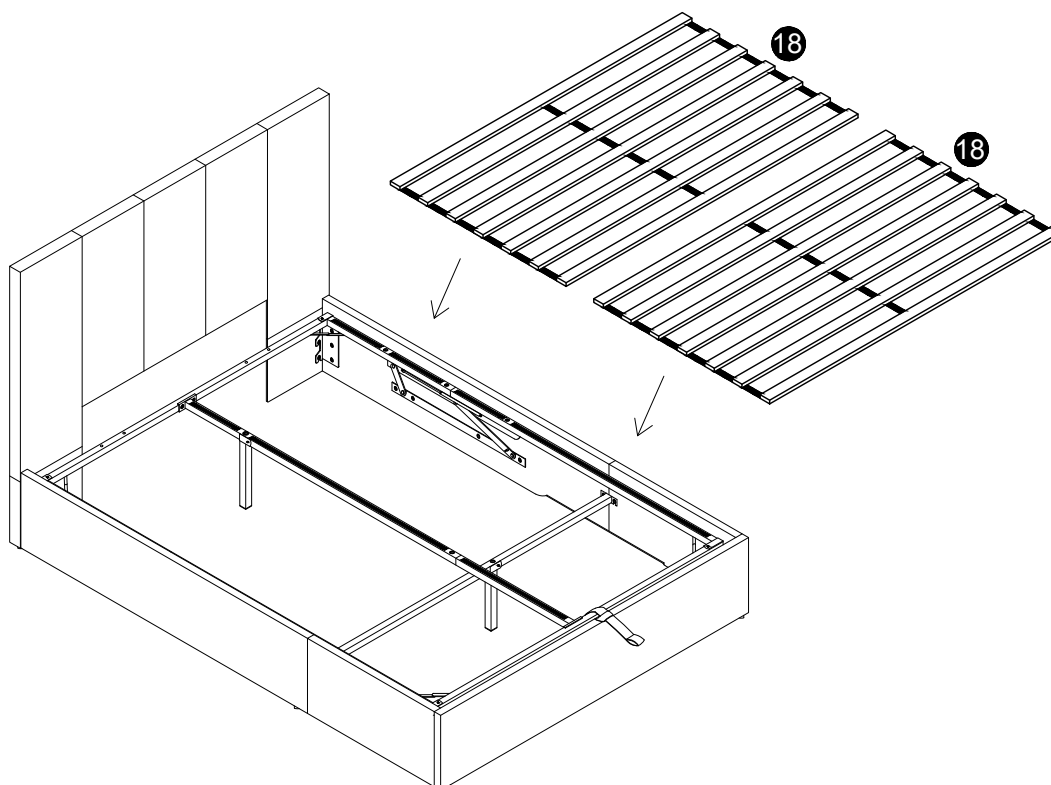


14

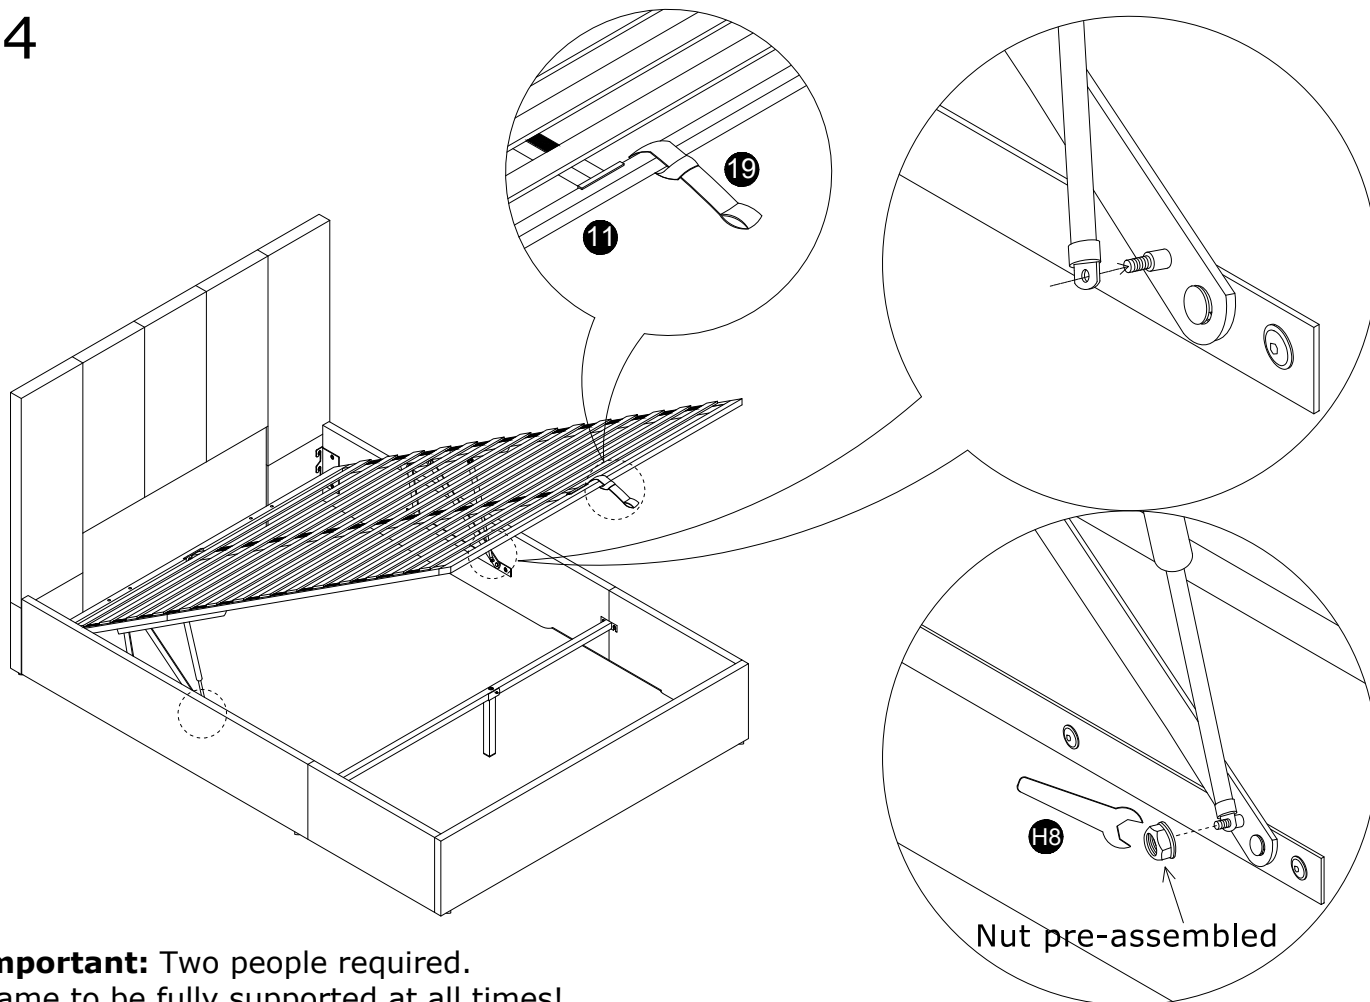

Important: Two people required.
Frame to be fully supported at all times!

15

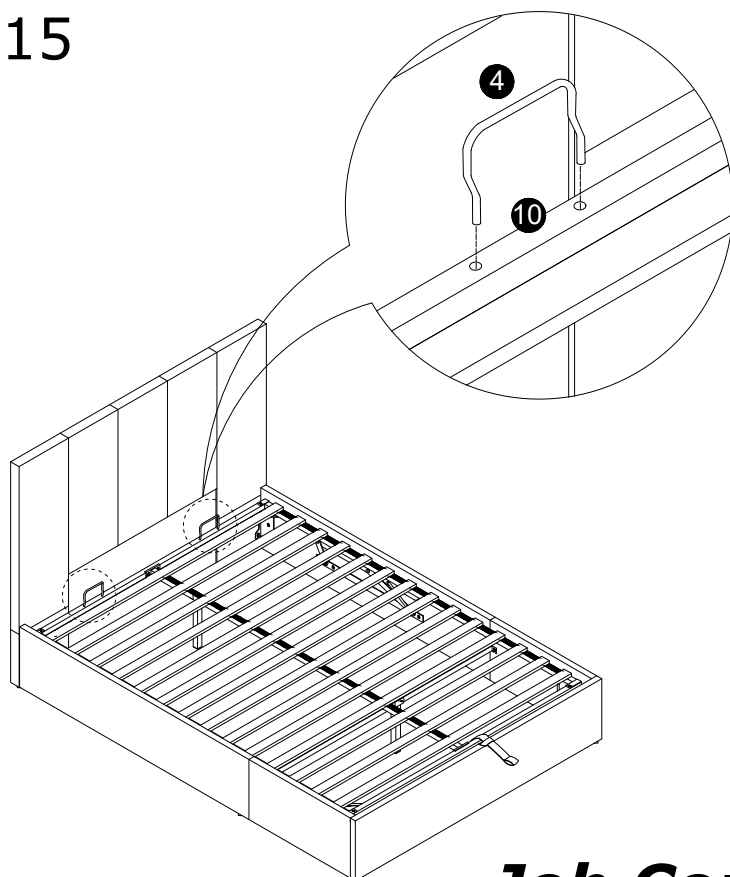

After placing the mattress on frame,
push down the frame with 30lbs force.



Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.