



INSTALLATION STEPS


BEFORE YOU BEGIN

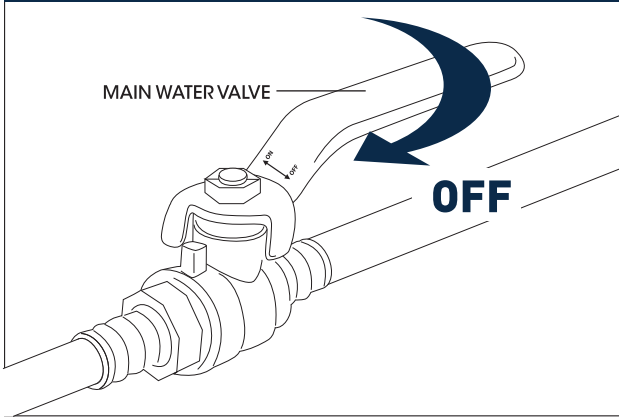


THE SIZE OF COUNTER BASIN'S HOLE AS ABOVE

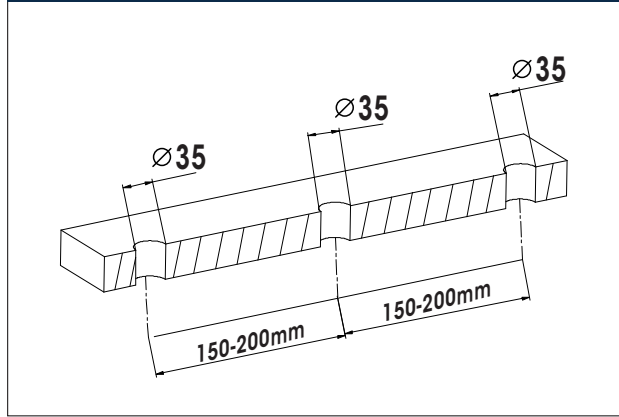


1

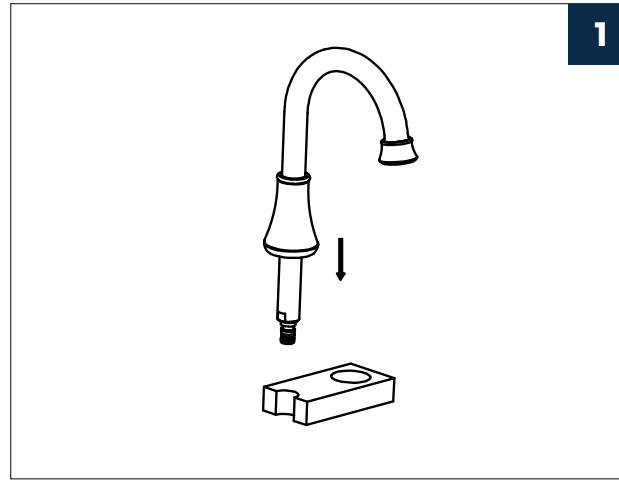


2

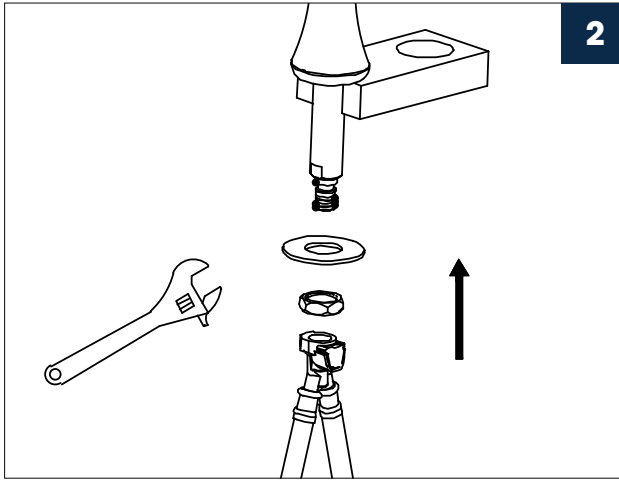


3

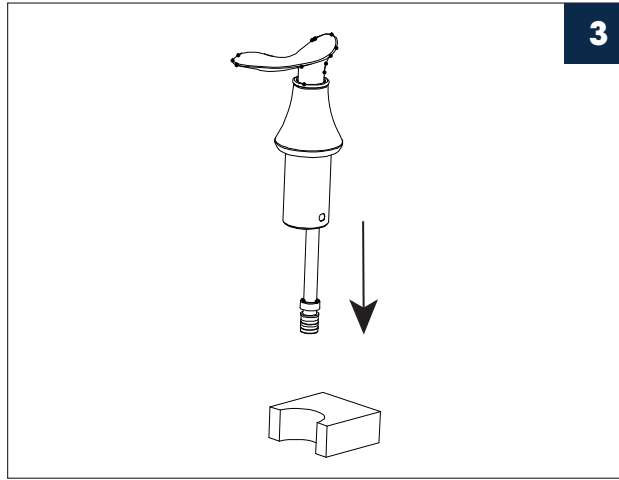


4

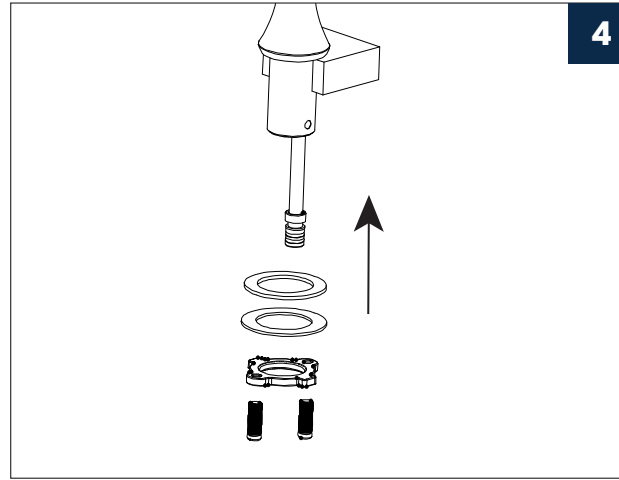


5

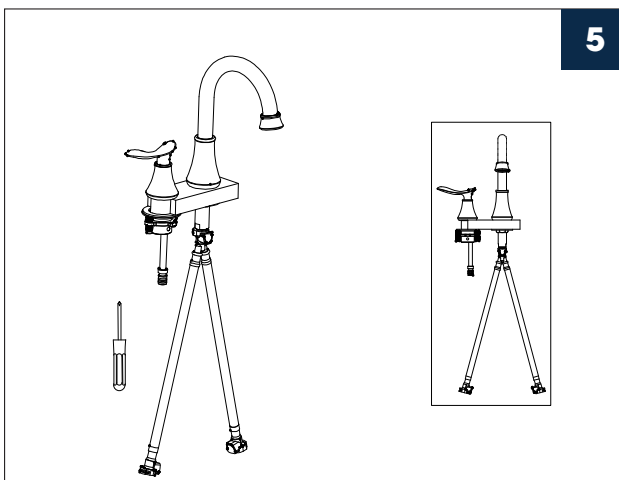

6

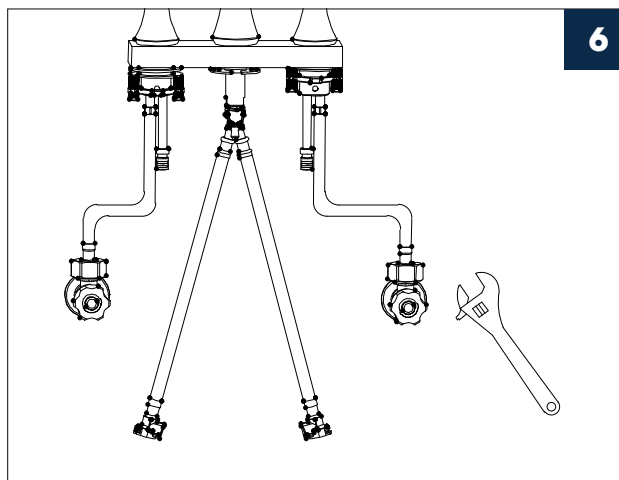

7

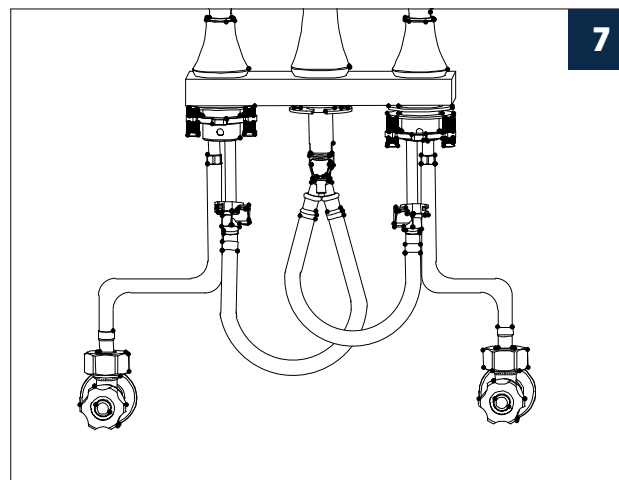

WIDESPREAD BATHROOM FAUCET

Installation instruction



MB/BN/BG/CH/ORB

CARE INSTRUCTIONS

Rinse the product with clear water. Dry the product with a soft cloth.

DO NOT:

Use abrasive cleansers, cloths, or paper towels. Use any cleaning agents containing acid, polish, wax, alcohol, ammonia, bleach, solvent or any other corrosive or harsh chemical cleansers.

RECOMMENDED TOOLS

Plumber's putty



Thread seal tape



Included

