

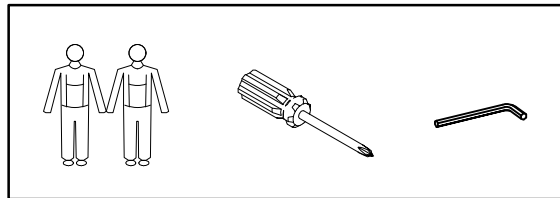


ASSEMBLY INSTRUCTION

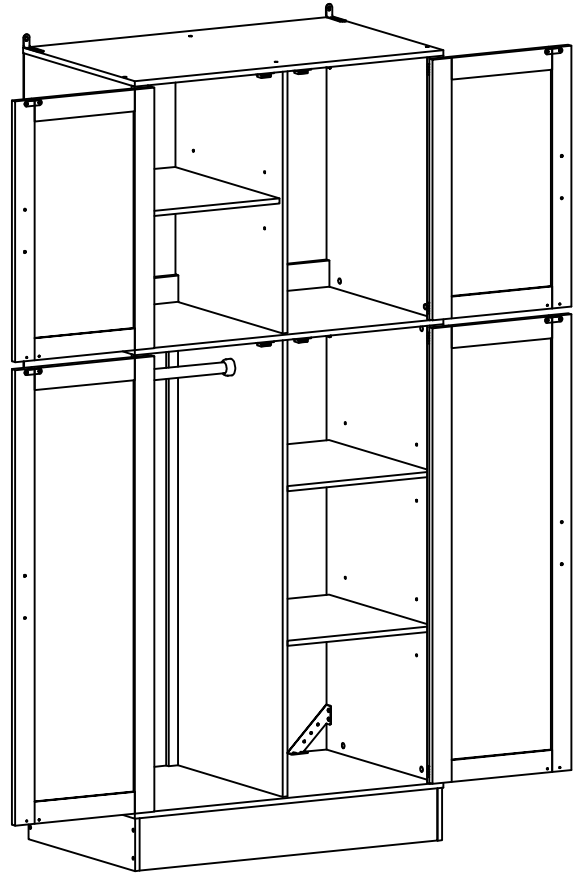

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.

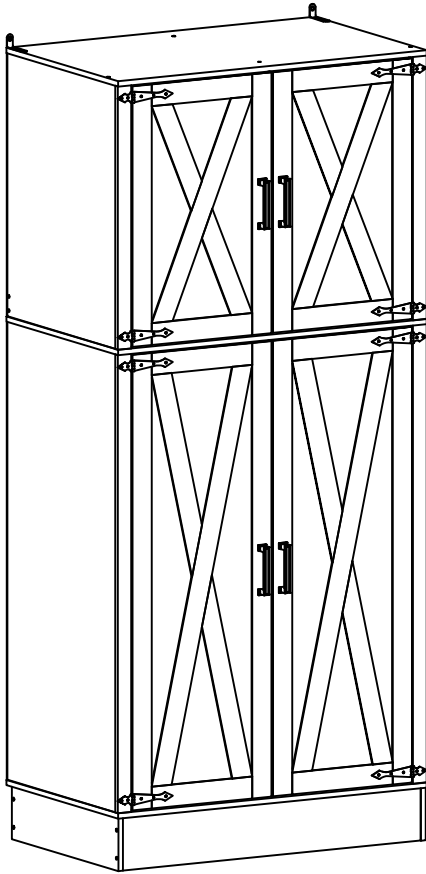

There are two packages for this closet, you may not receive them at the same time, please wait a few days if you only get one package.

Dear Customers,



Thank you for purchasing our products.

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.




Please follow the instruction manuals and use a pad to protect the product during your assembly.

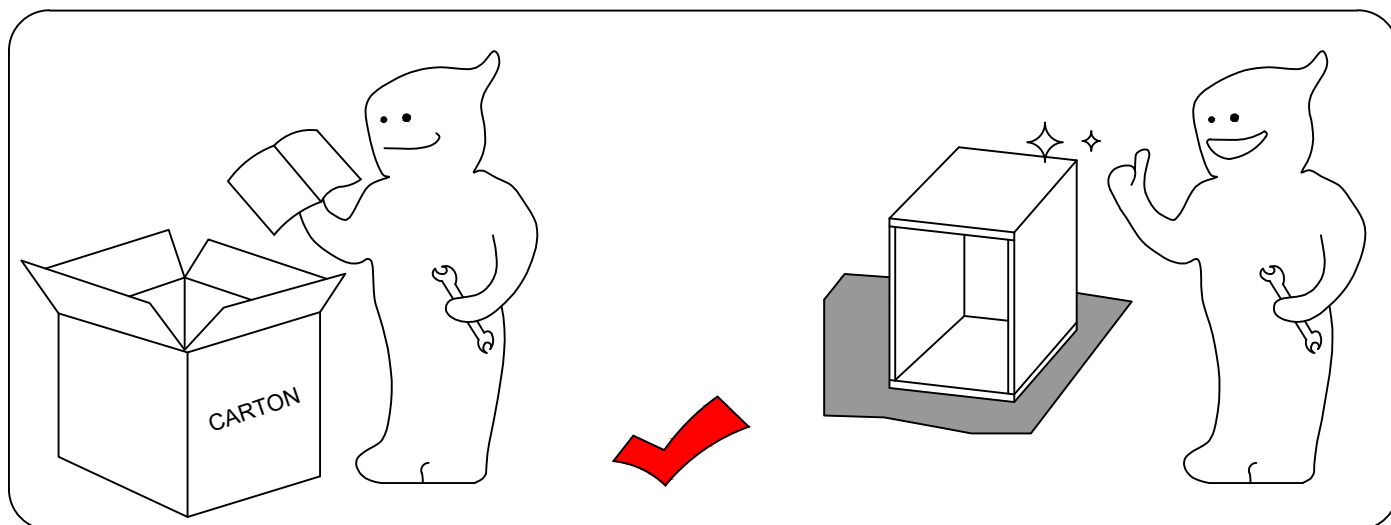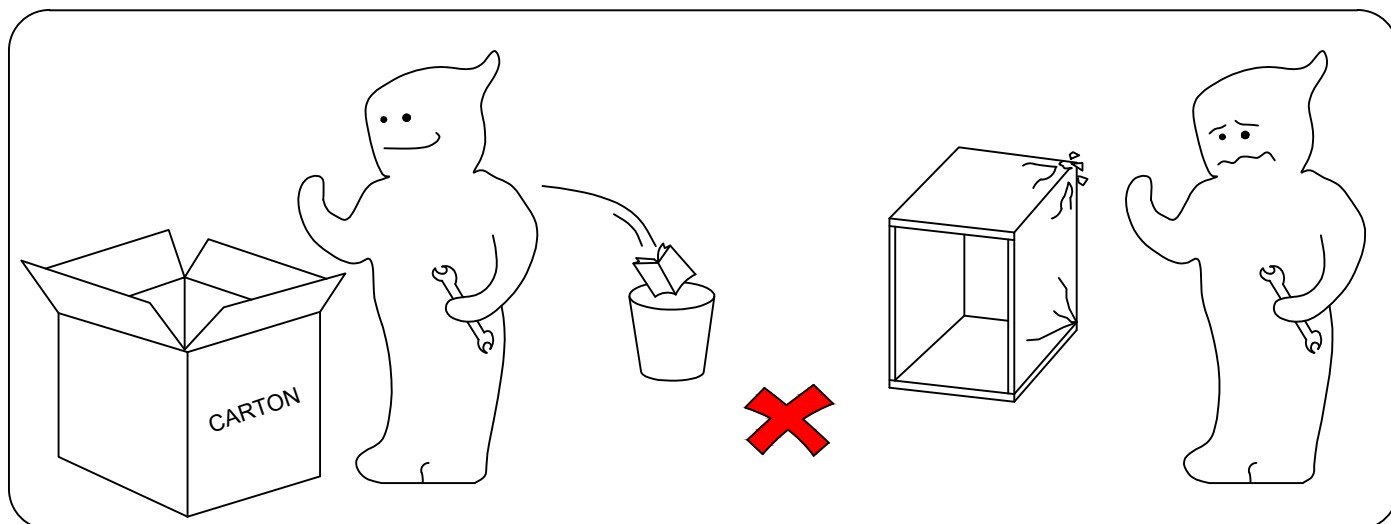

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

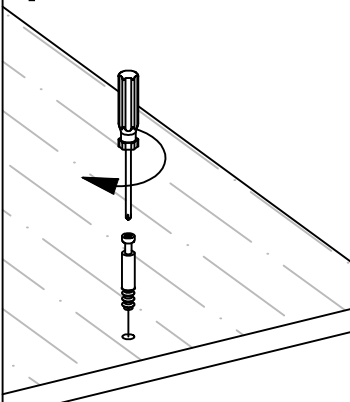

Push the male camlock into the entry hole.


2

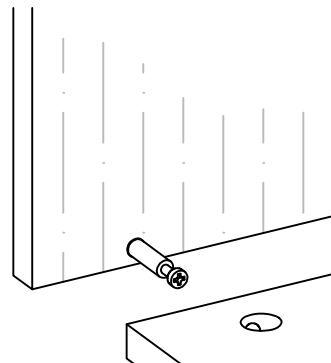

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

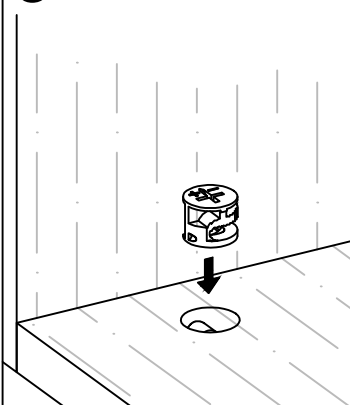



Turn the female camlock clockwise with a screwdriver.















You should feel a click when the camlock is locked in place.





The joint is now secure.

4














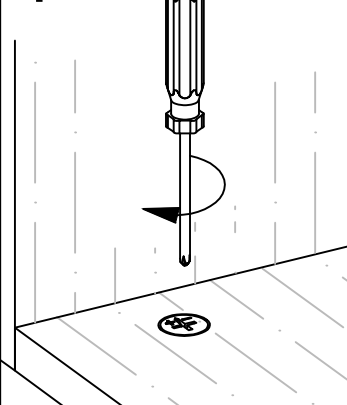


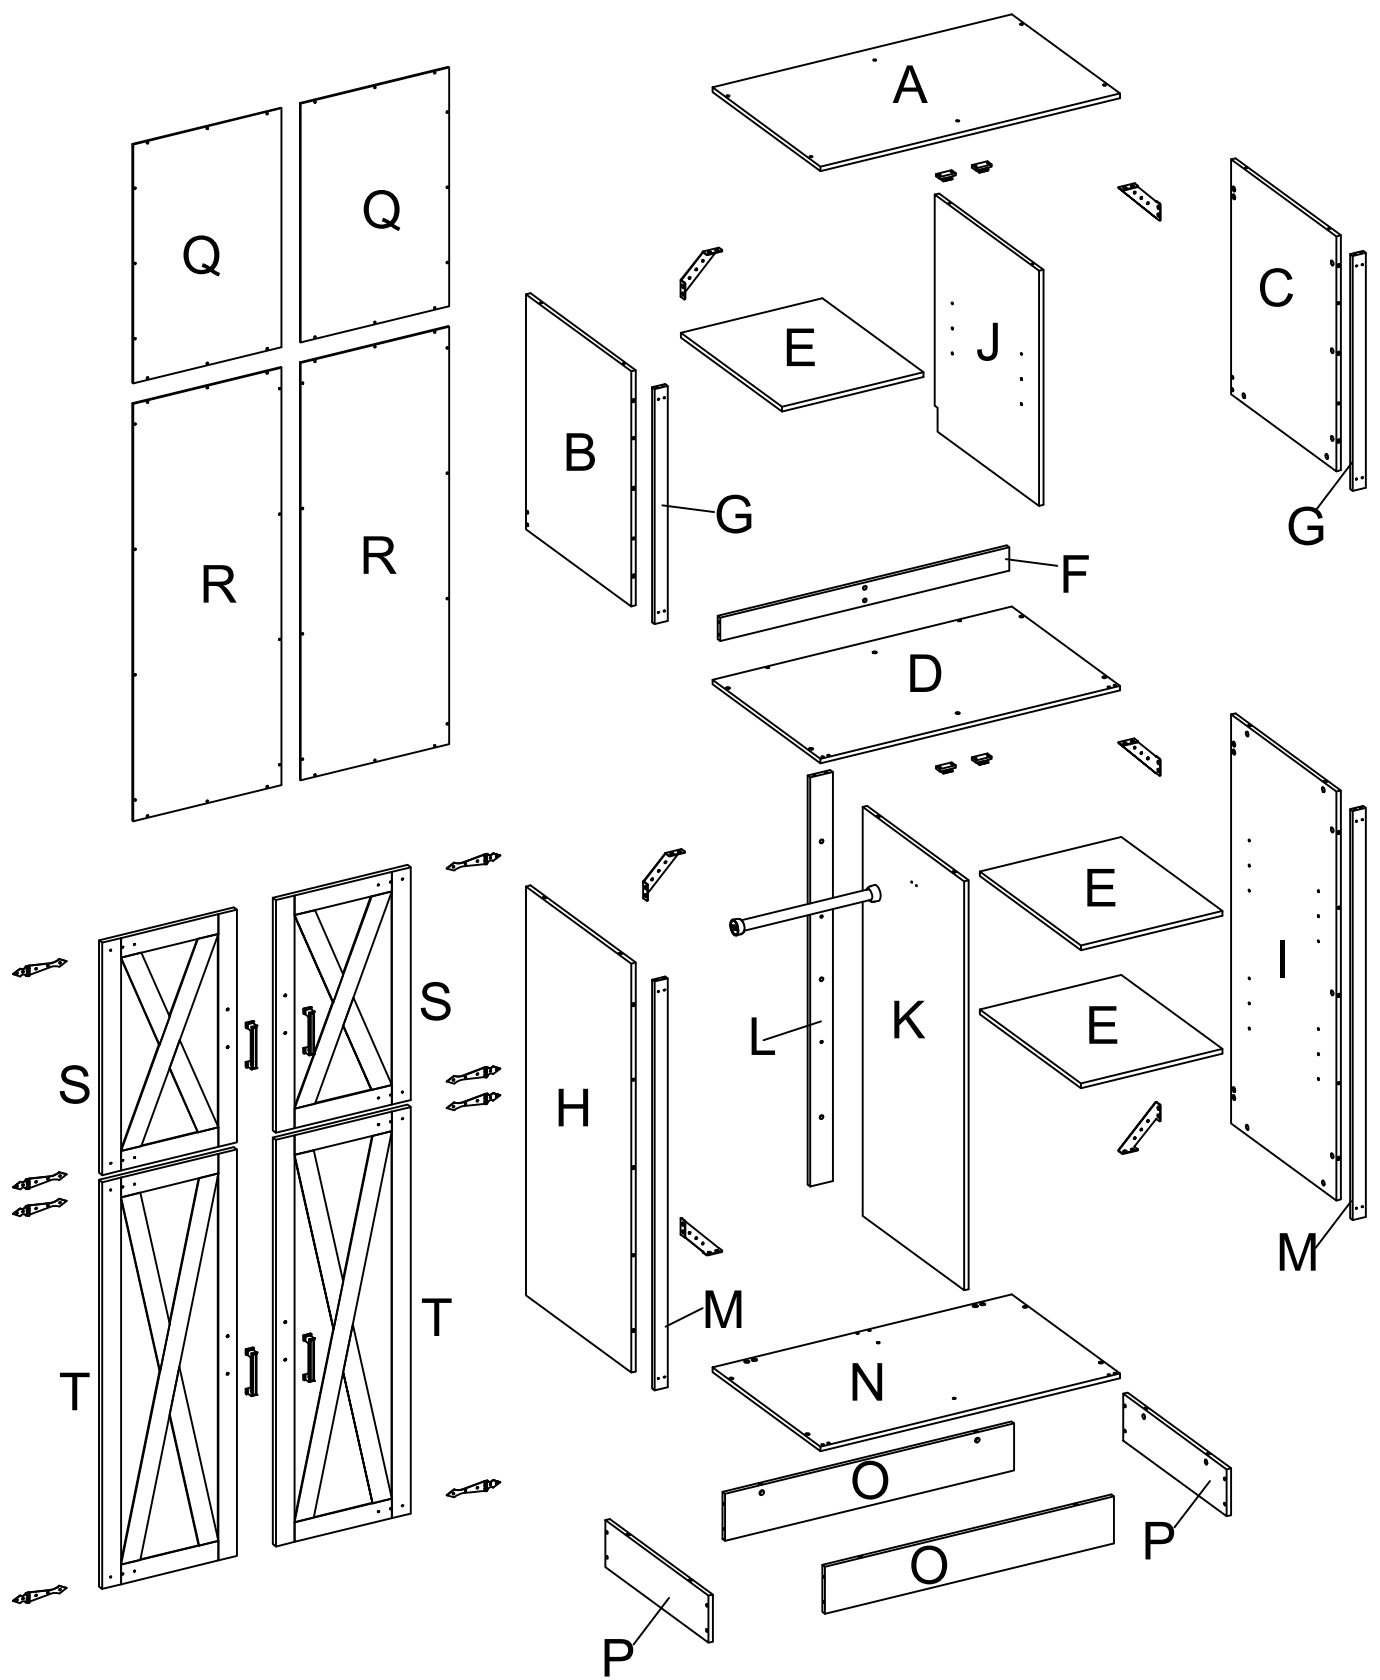

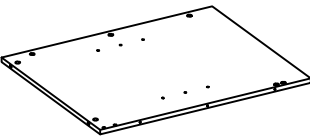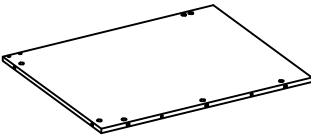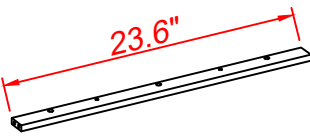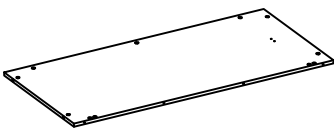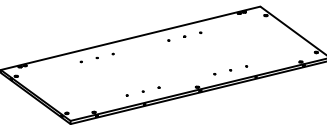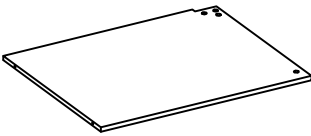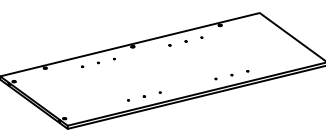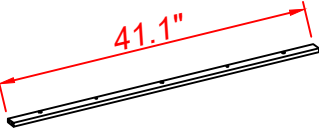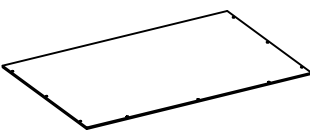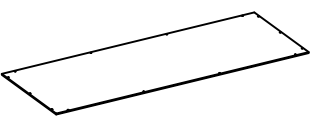
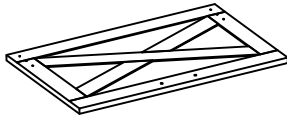
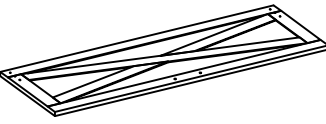
PART LIST A			
B  1 pc	C  1 pc	F  1 pc	G  2 pcs
H  1 pc	I  1 pc	J  1 pc	K  1 pc
L  1 pc	M  2 pcs	O  2 pcs	P  2 pcs
Q  2 pcs	R  2 pcs	S  2 pcs	T  2 pcs

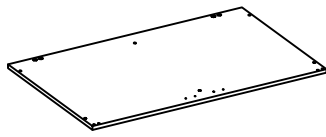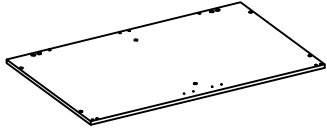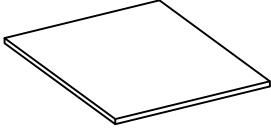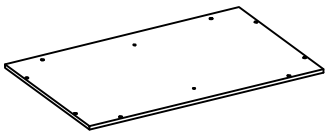PART LIST B			
A  1 pc	D  1 pc	E  3 pcs	N  1 pc



HARDWARE LIST

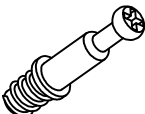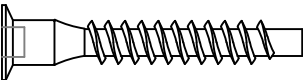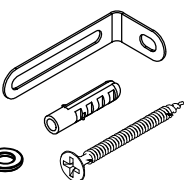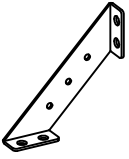①  M6x28 41 pcs	②  Ø12 41 pcs	③  M6x40 22 pcs	④  1 pc
⑤  M4x40 2 pcs	⑥  M3x16 54 pcs	⑦  M4x18 8 pcs	⑧  4 pcs
⑨  Ø25x367 1 pc	⑩  2 pcs	⑪  2 pcs	⑫  M4x12 4 pcs
⑬  M3x16 4 pcs	⑭  4 pcs	⑮  8 pcs	⑯  M3.5x12 40 pcs
⑰  8 pcs	⑱  M6x19 12 pcs	⑲  M6x30 22 pcs	⑳  M6x50 4 pcs
㉑  M6x10 24 pcs	㉒  102x102x30 6 pcs	㉓  M4 1 pc	

STEP 1

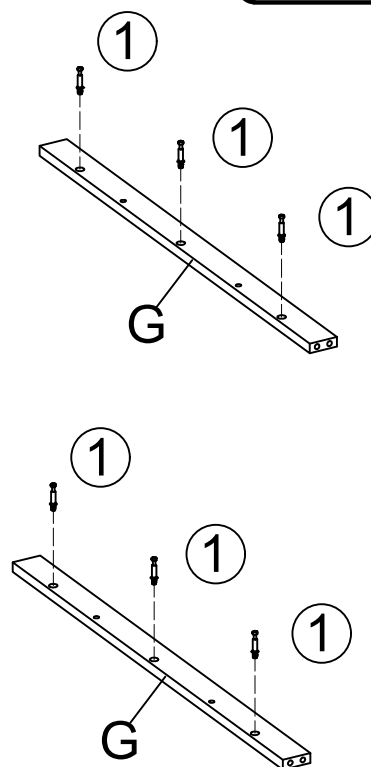
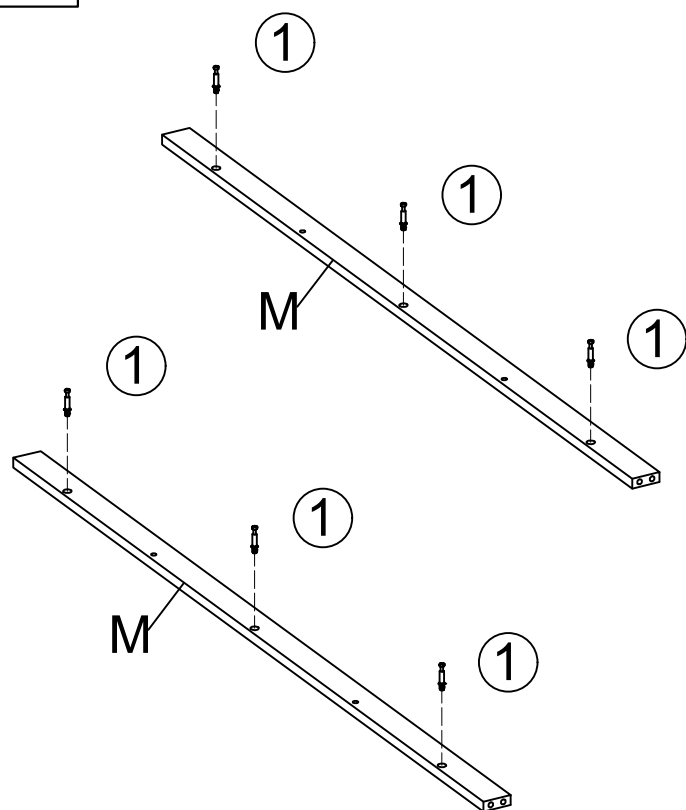


STEP 2

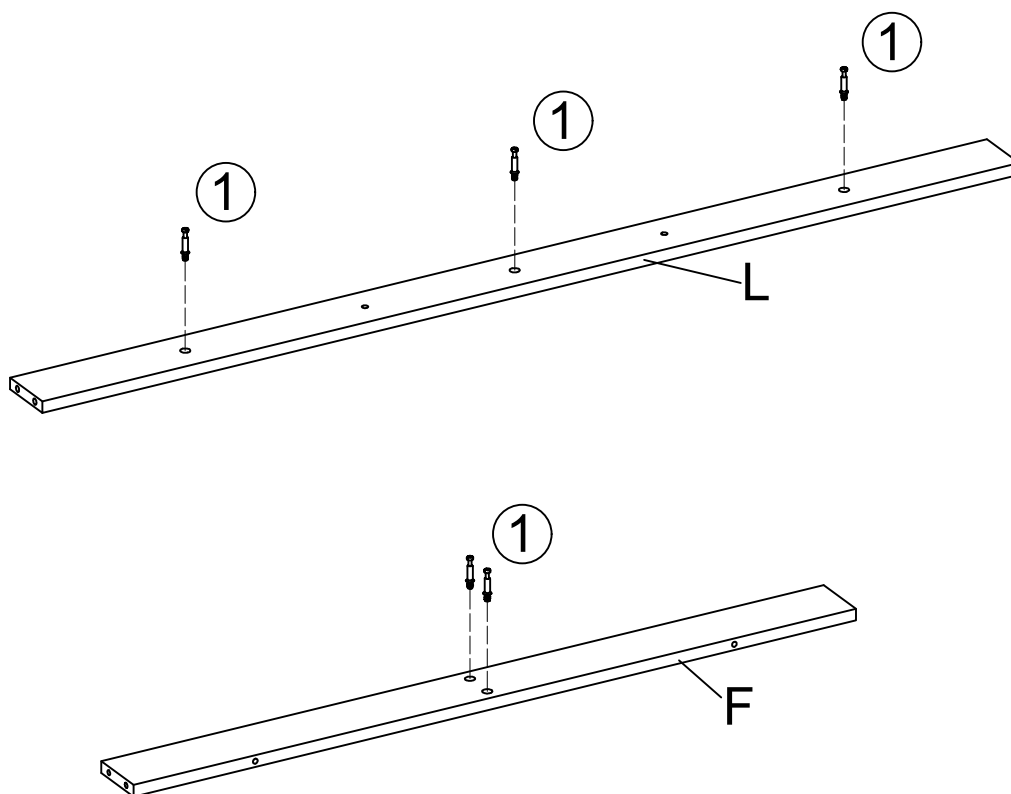



STEP 3

13   x4

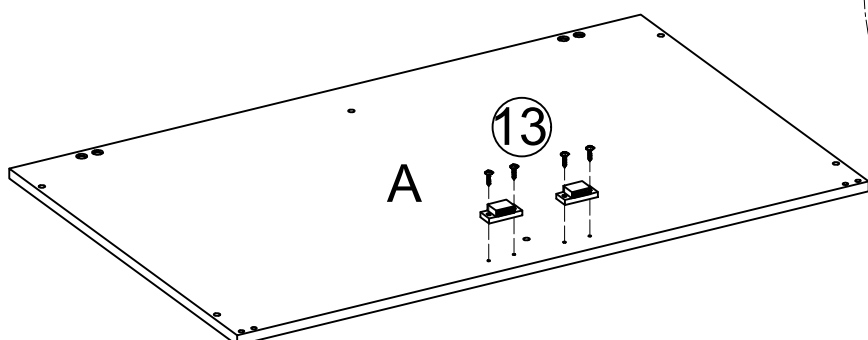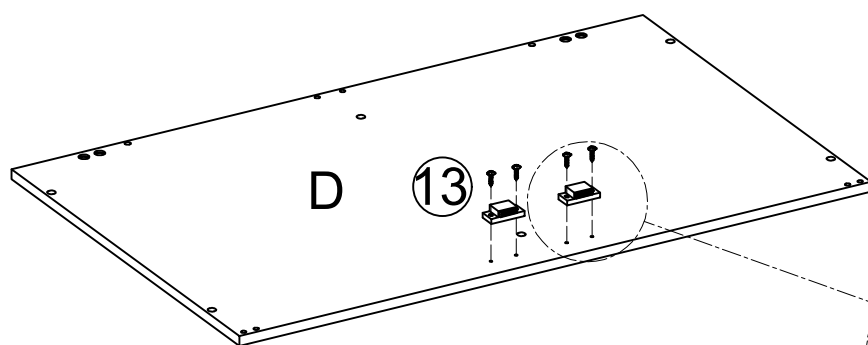


STEP 4

1  x14

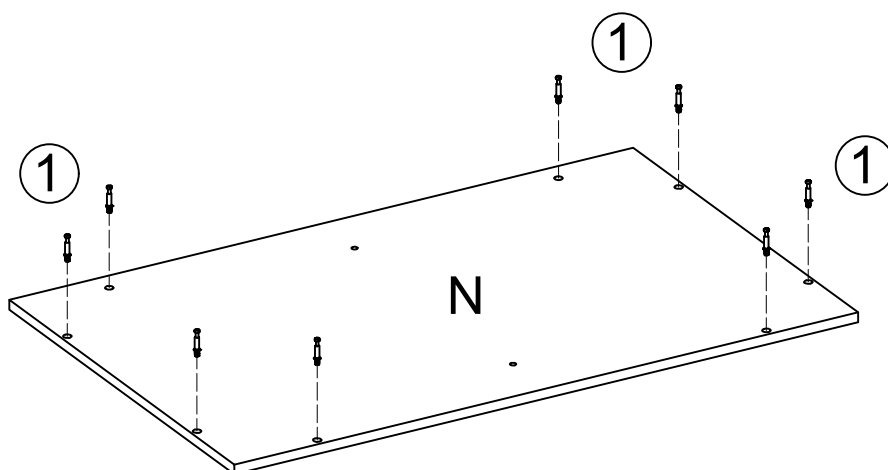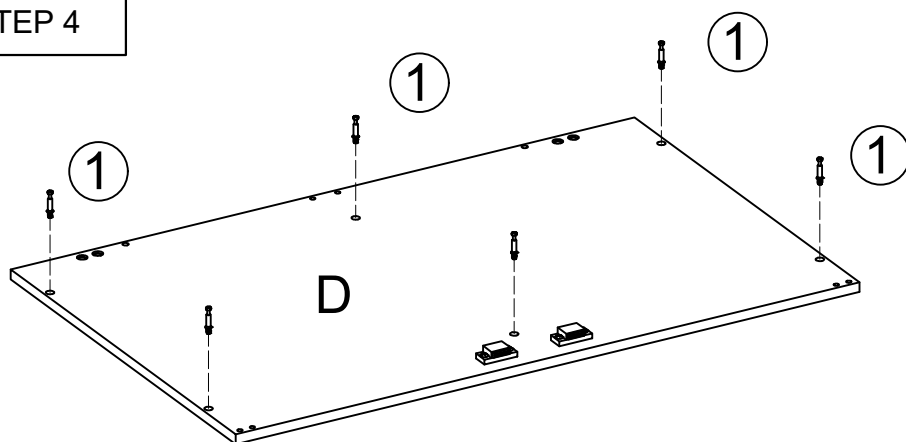


STEP 5

③  x8

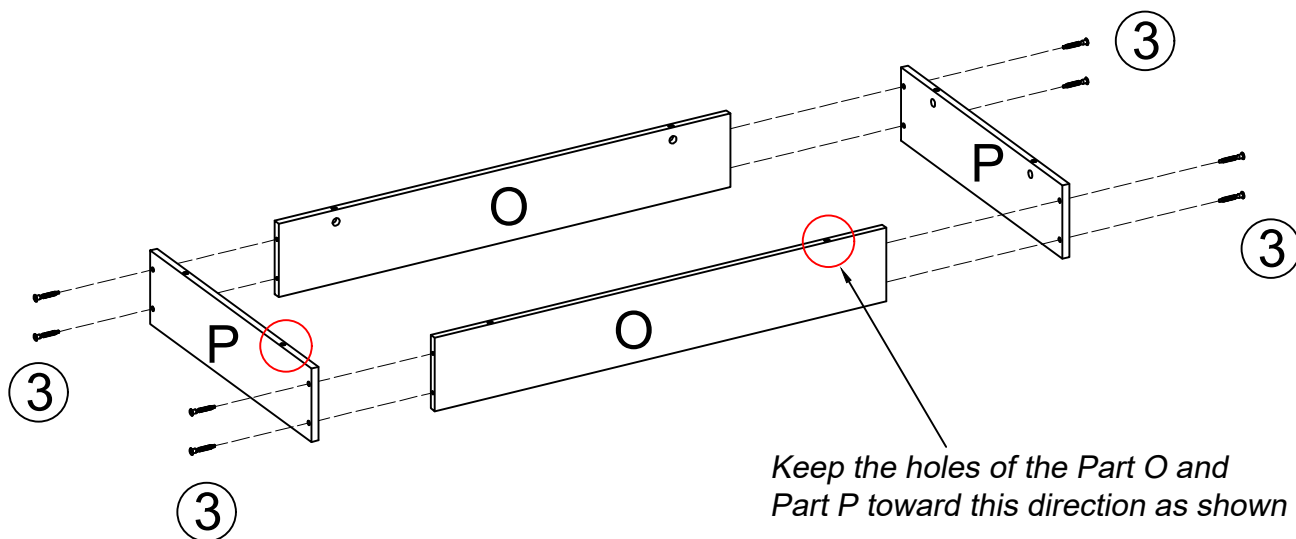



STEP 6

②  x8


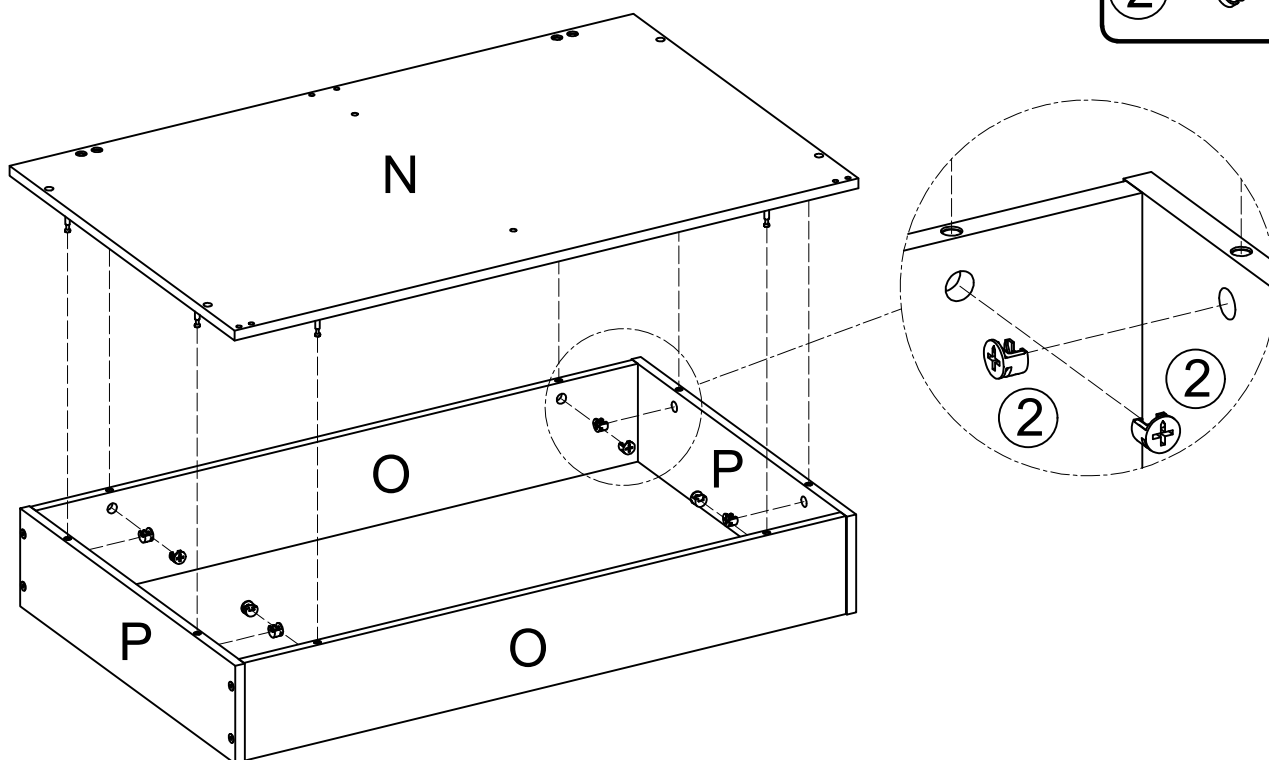


STEP 7

Keep the holes of the Part M, Part H and Part I toward this direction as shown

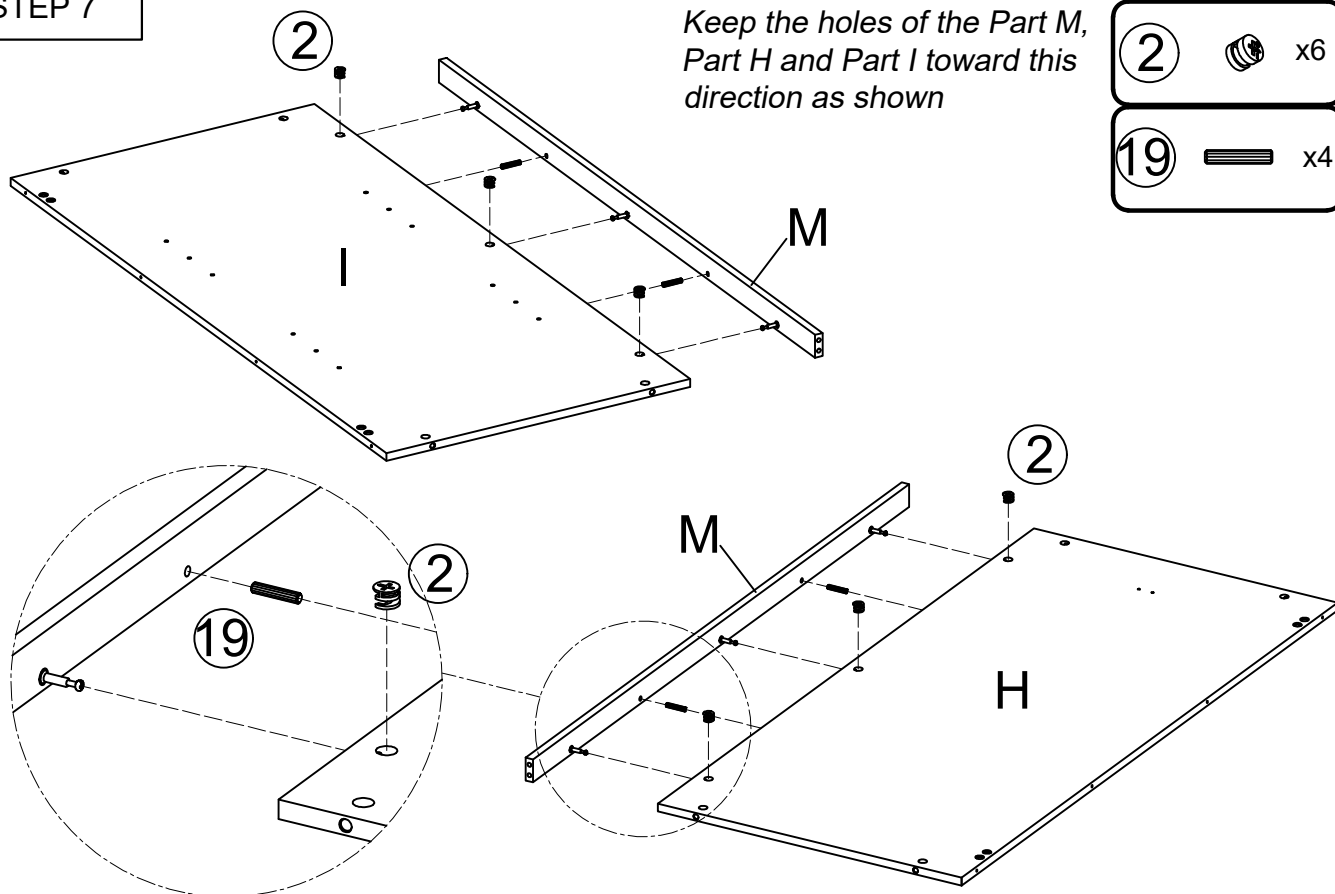
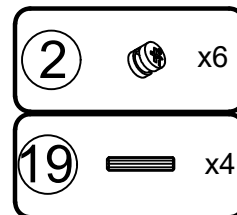


STEP 8

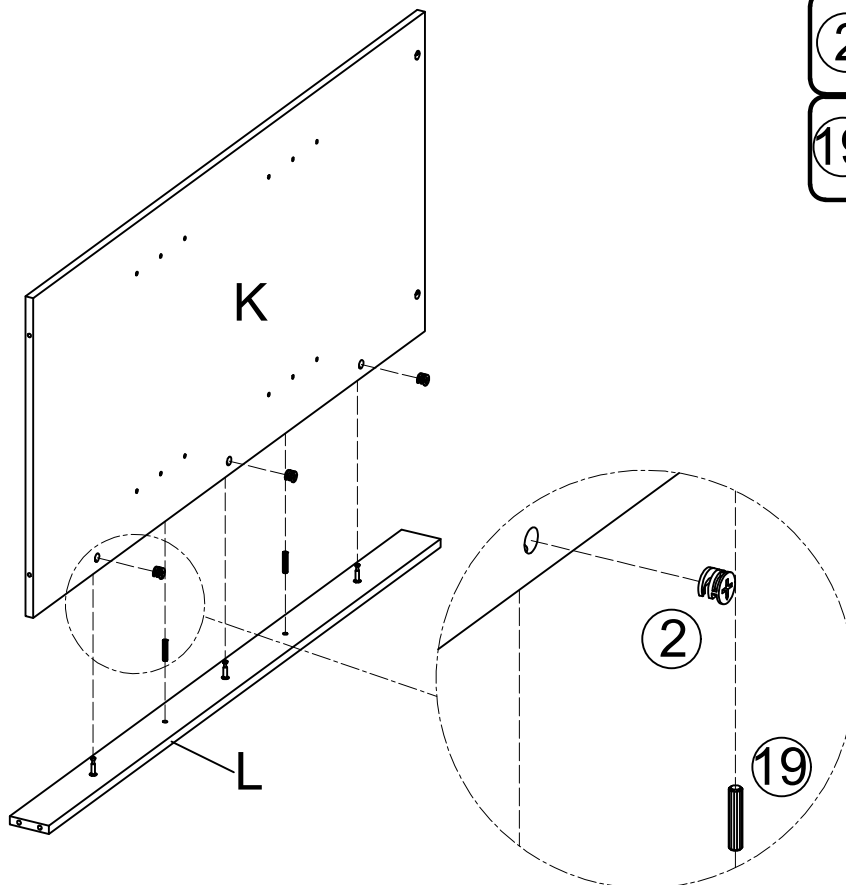
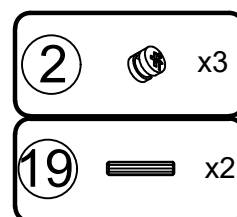


STEP 9



Keep the holes of the Part K and Part N toward this direction as shown

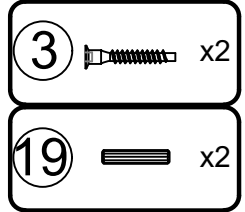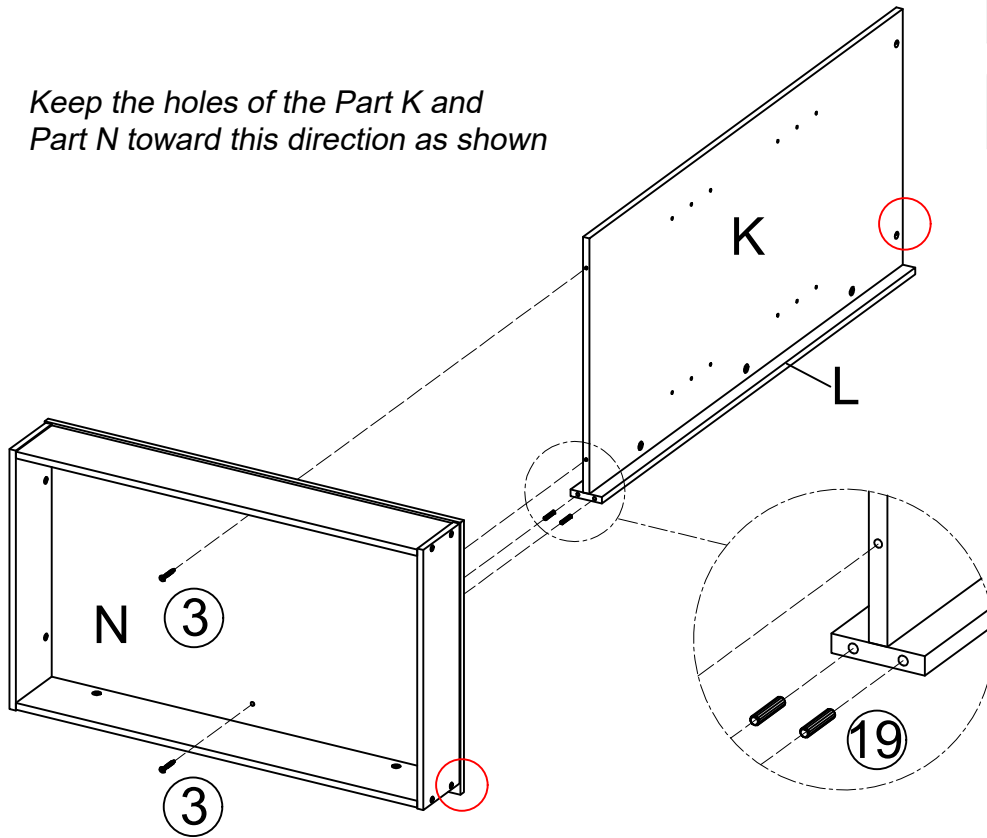



STEP 10

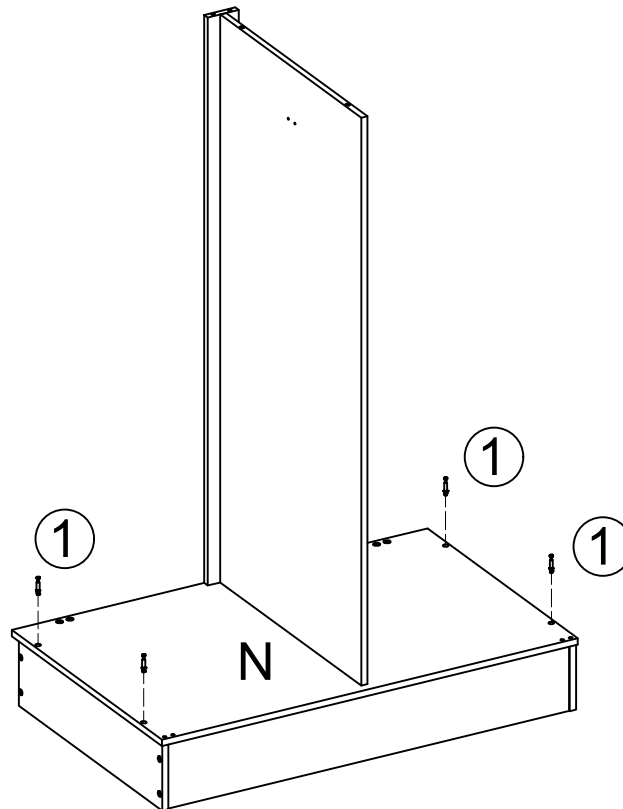




STEP 11

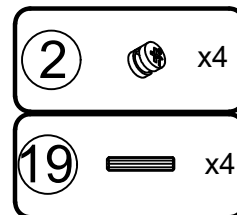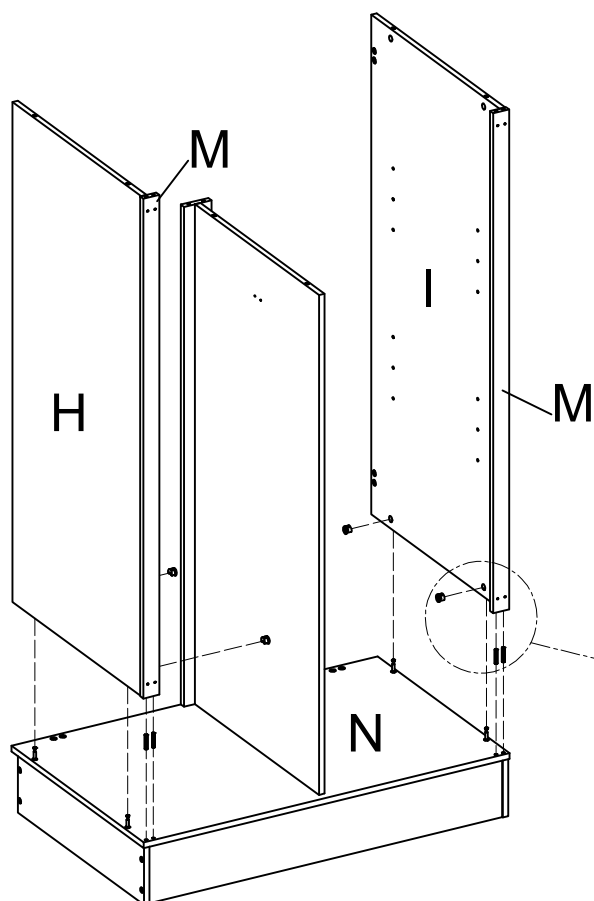

STEP 12

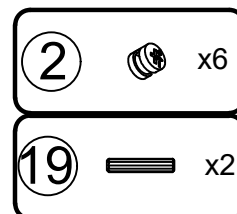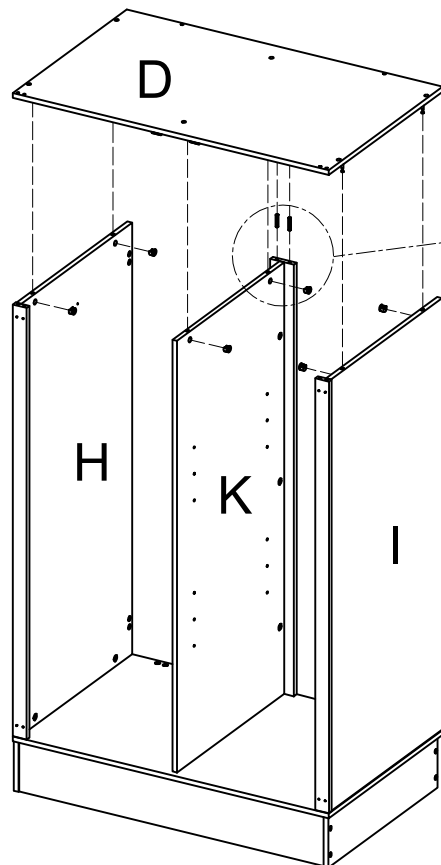






STEP 13

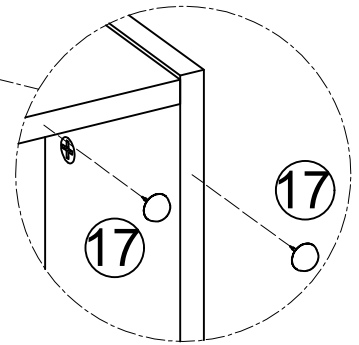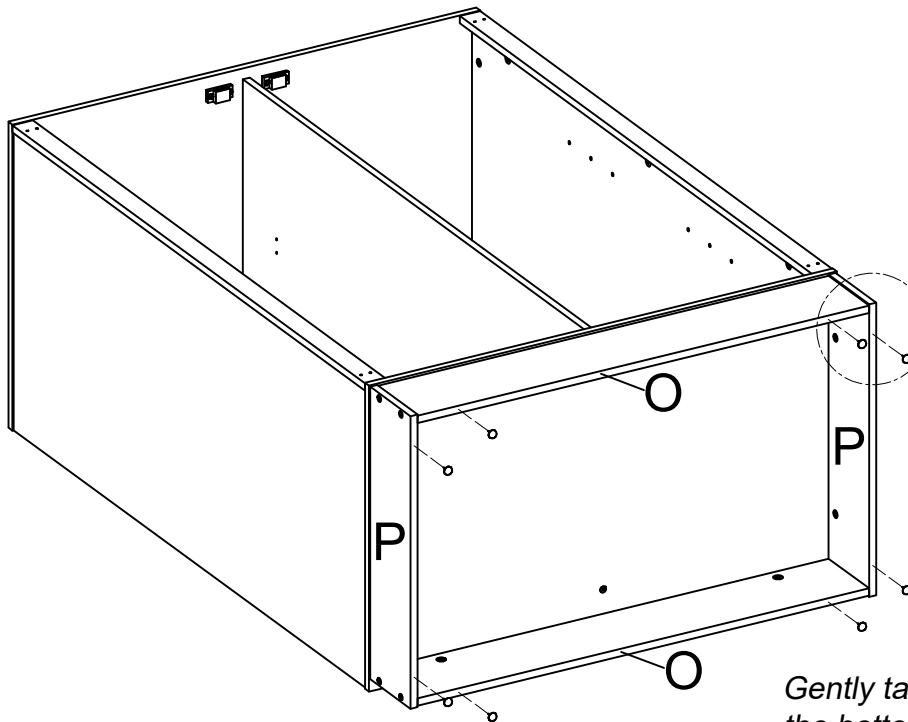



Gently tap the Floor Protectors ⑰ at the bottom of side panels avoiding crack or damage of side panel.

STEP 14

Keep the holes of the Part G, Part B and Part C toward this direction as shown

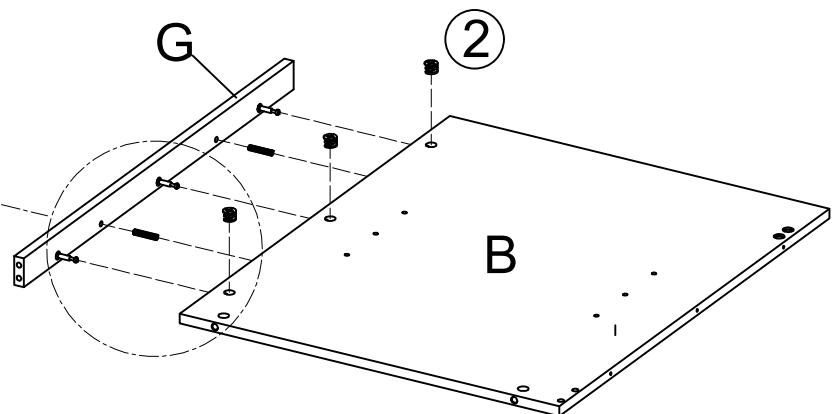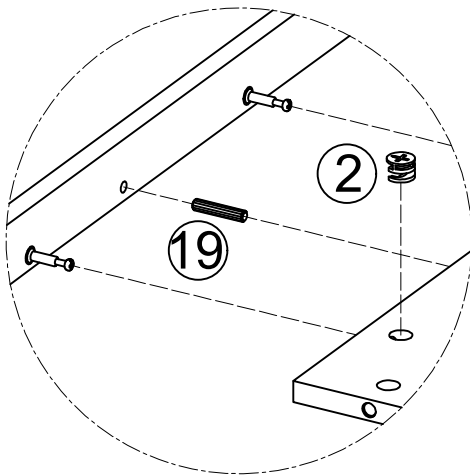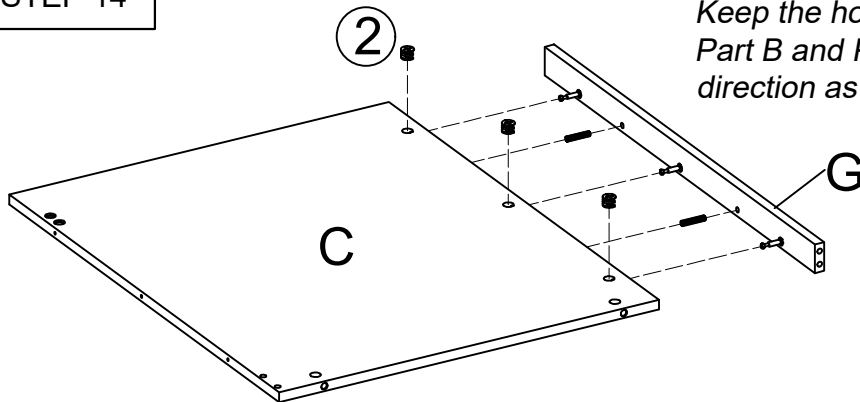



STEP 15

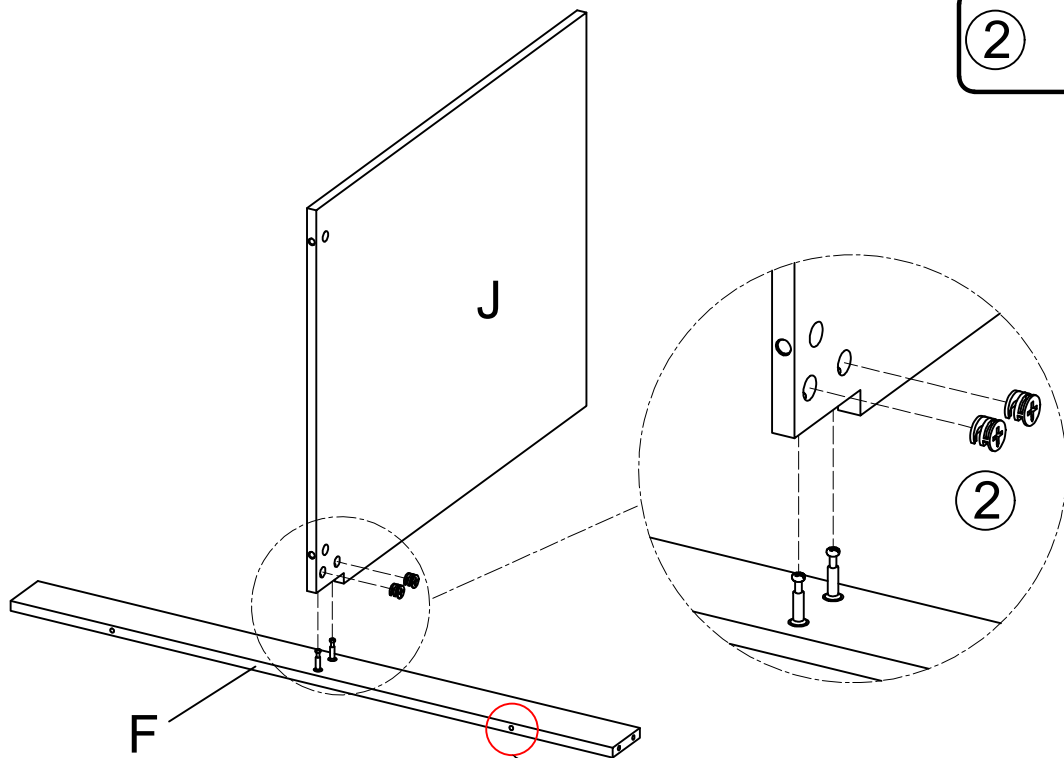


Keep the holes of the Part F toward this direction as shown


STEP 16

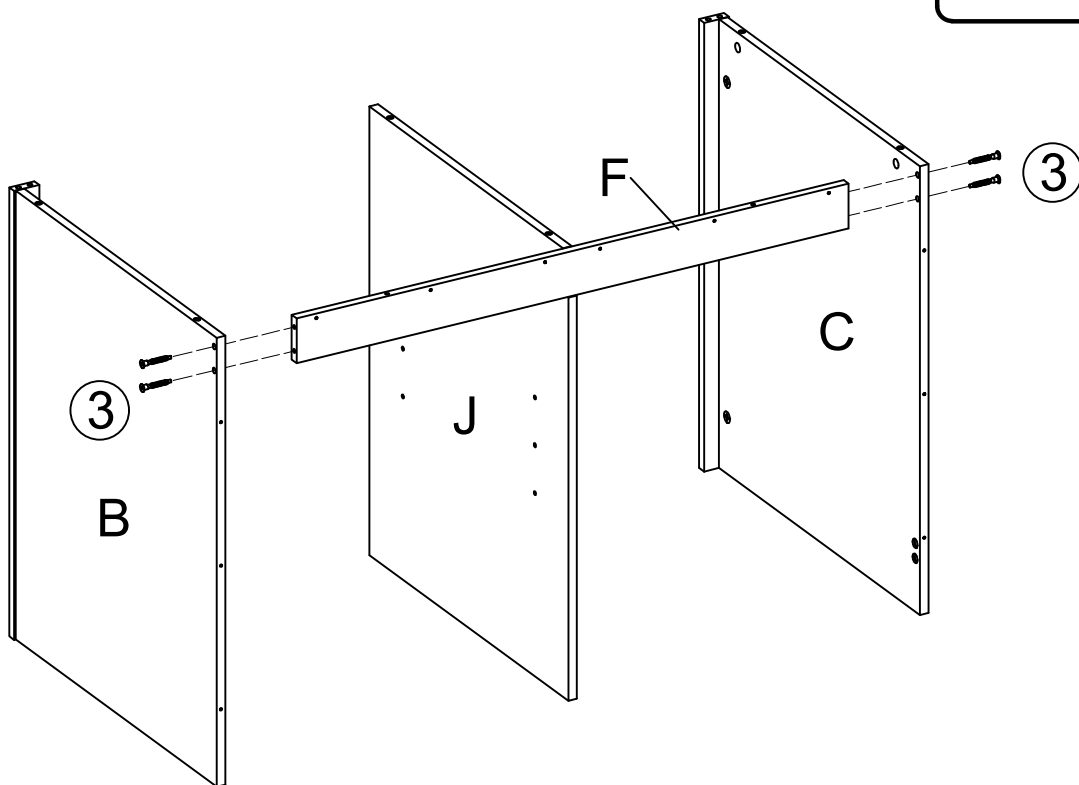



STEP 17

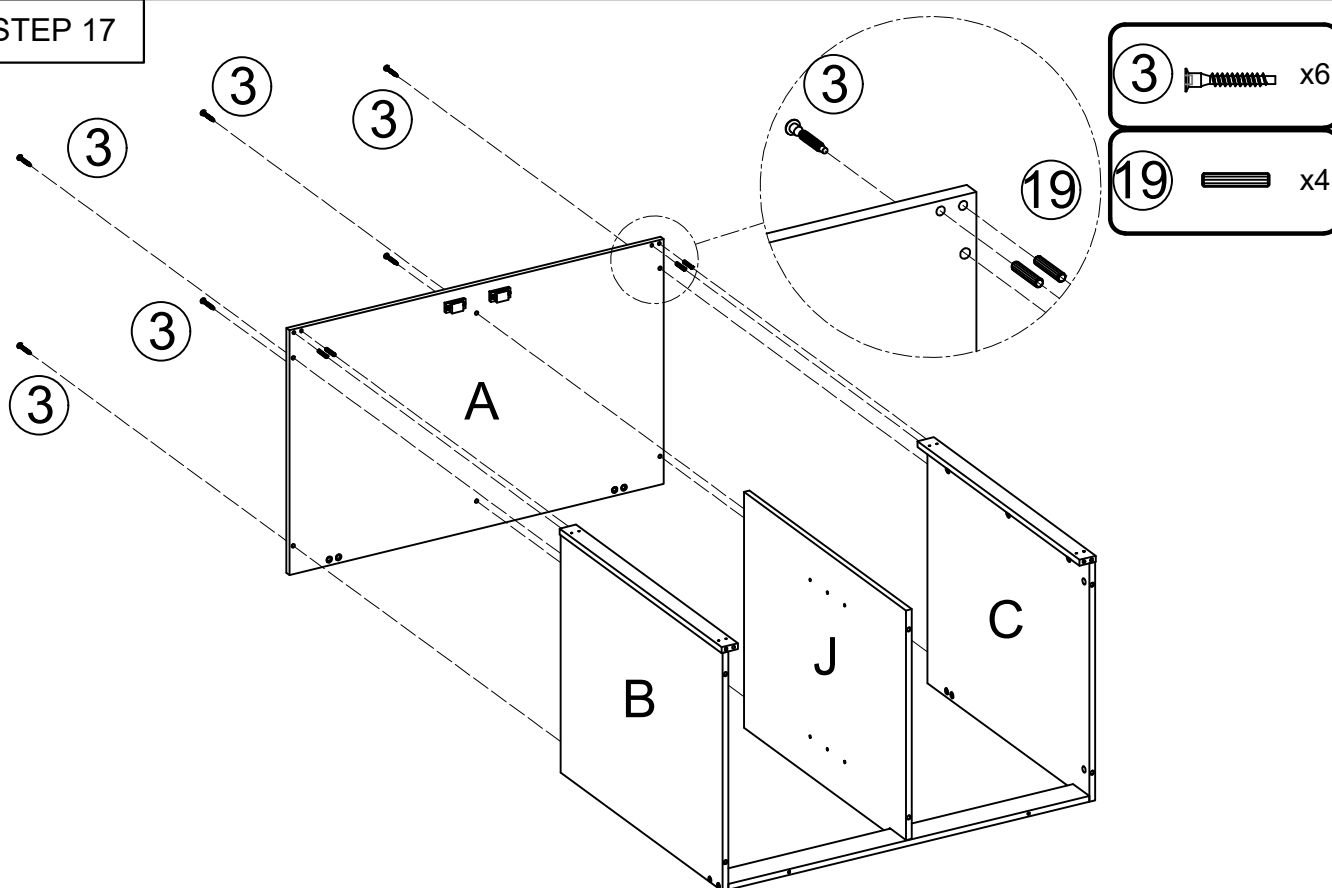


STEP 18

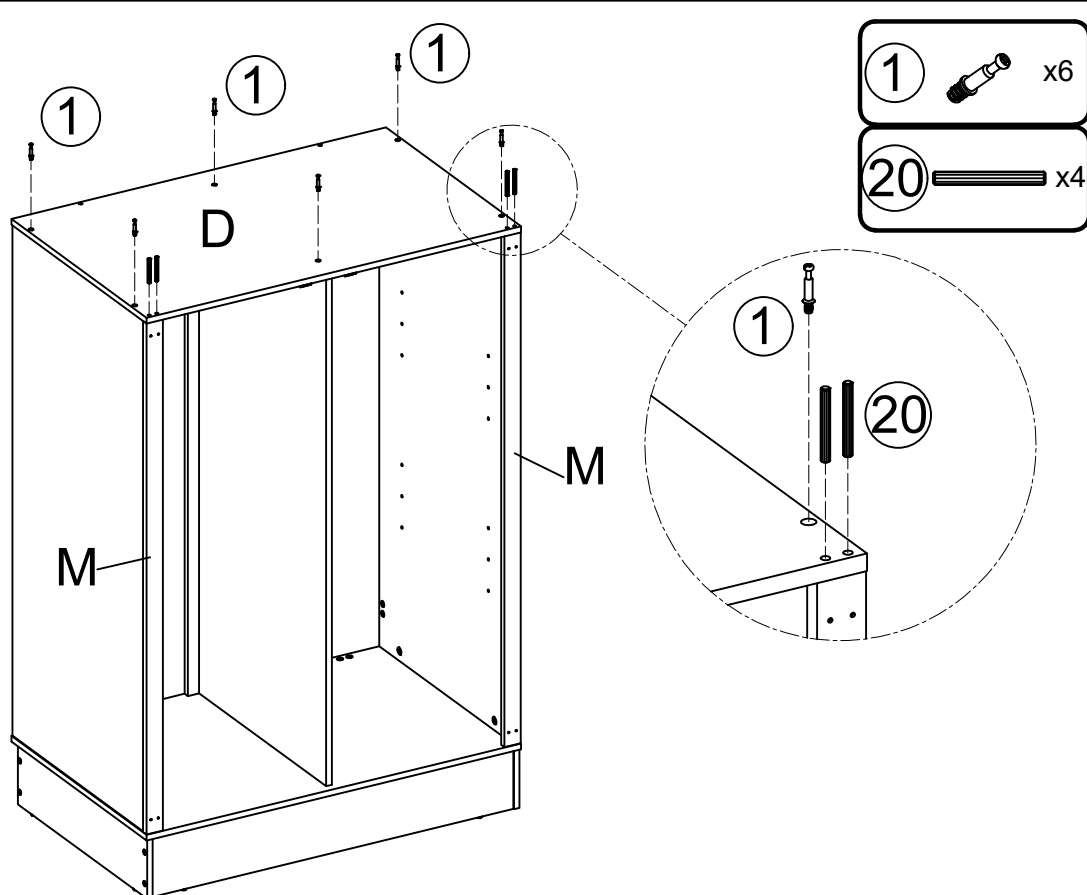



STEP 19

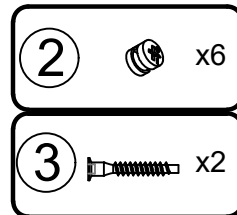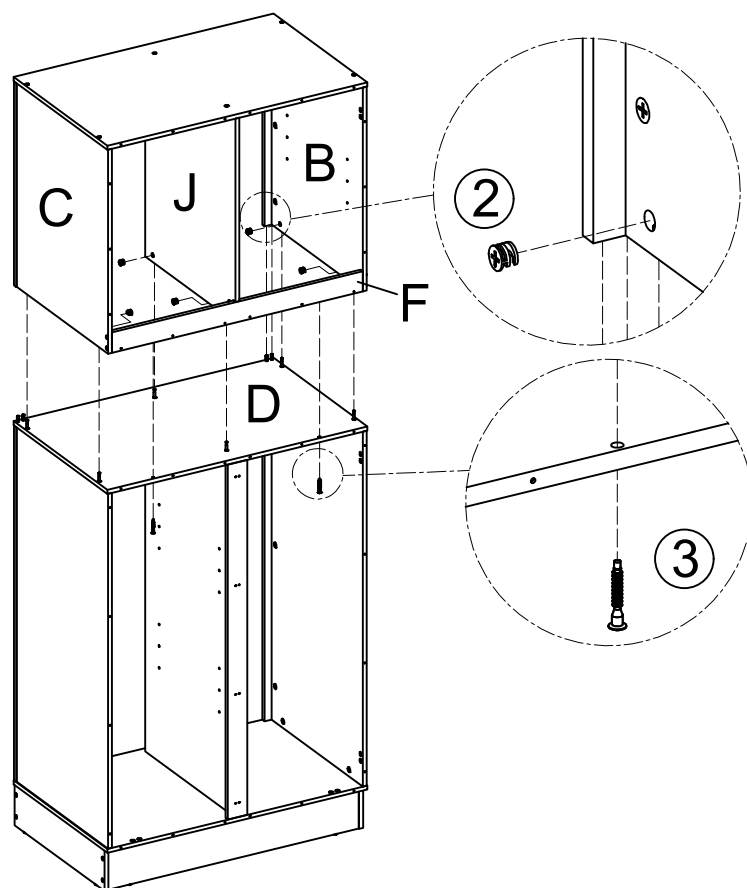

STEP 20


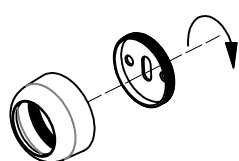


Please rotate and remove parts ⑩ and ⑪ as instructed.
Note: If necessary, please wear protective gloves during this step to avoid hand injuries.


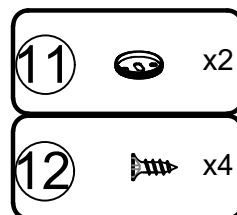
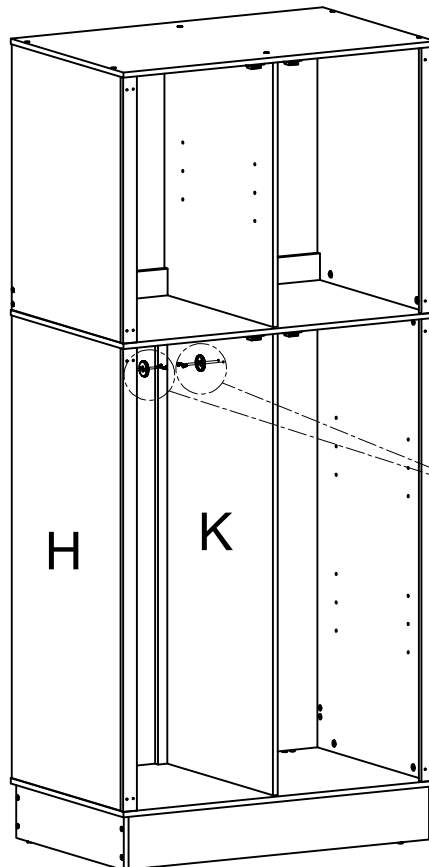


STEP 21





Please slide part ⑩ onto the rod part ⑨ with the threads facing outwards.

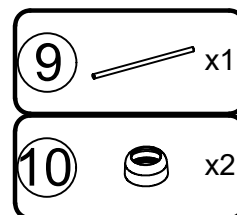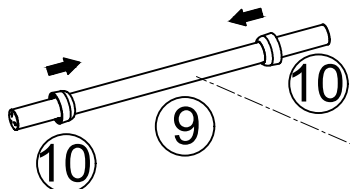



reinstall part ⑩ to part ⑪.

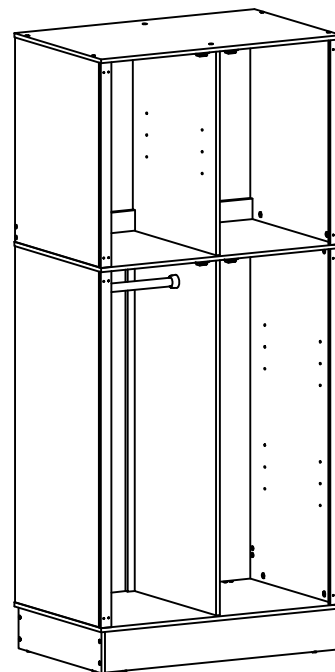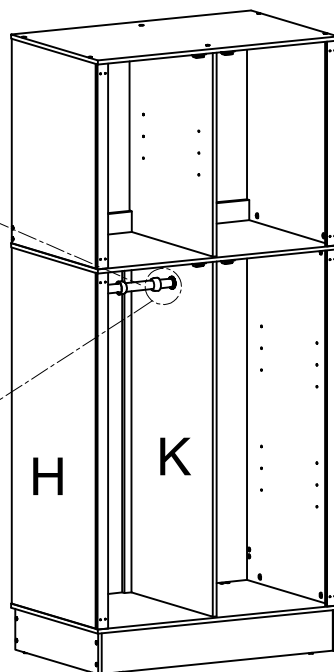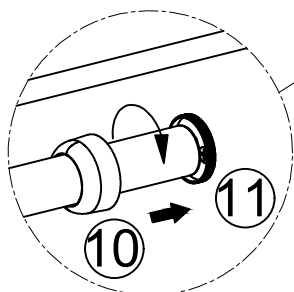

STEP 22

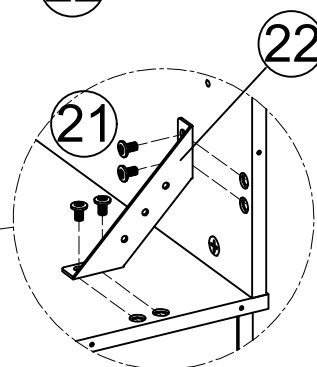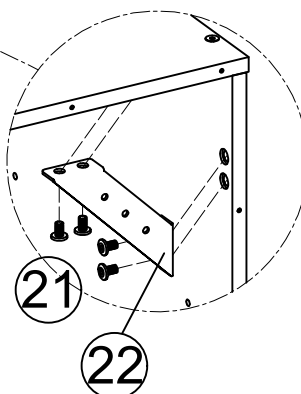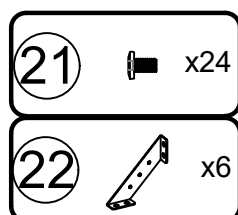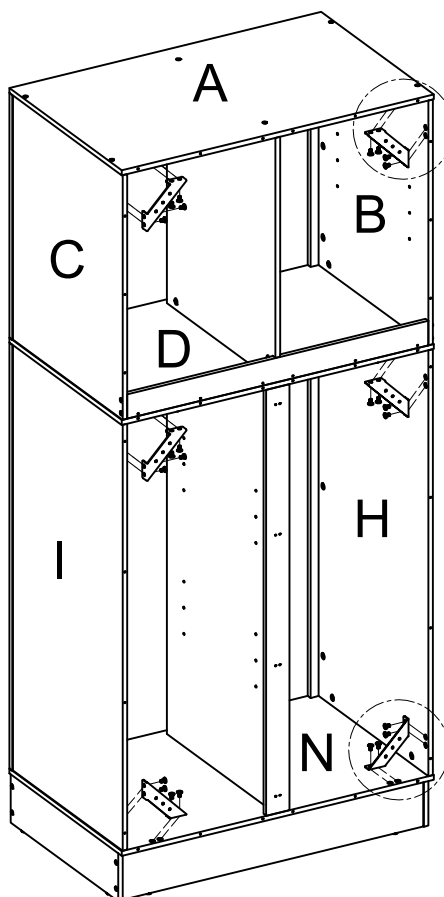




STEP 23

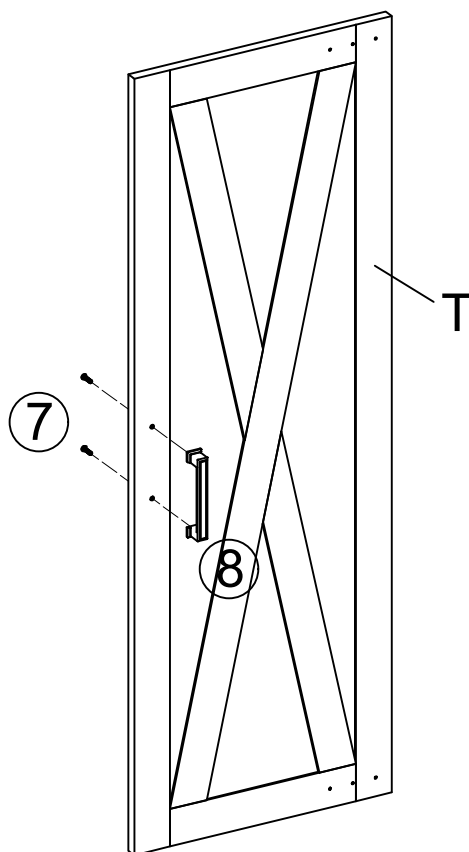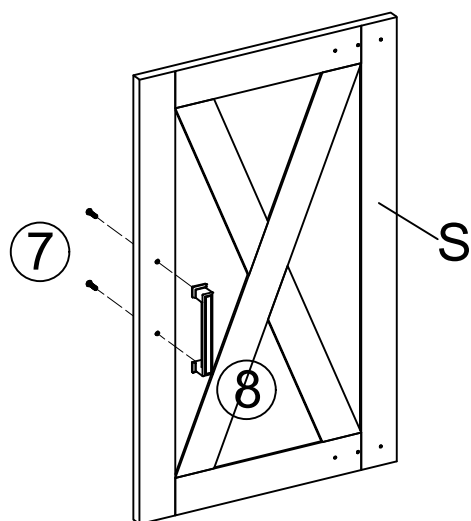

- 7  x8
- 8  x4

x2


STEP 24

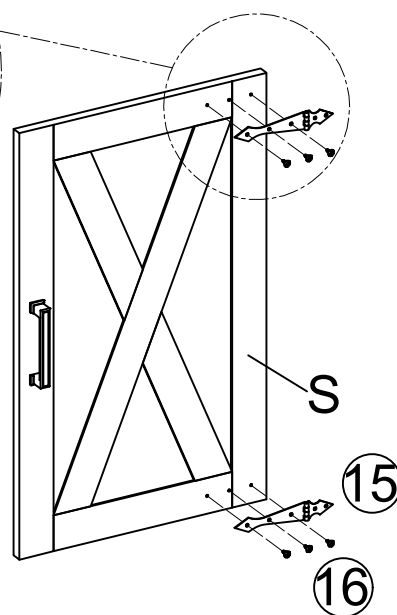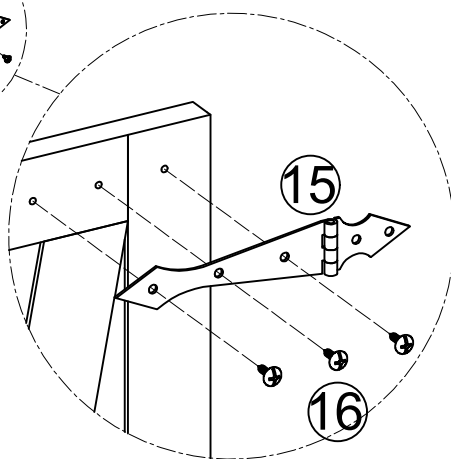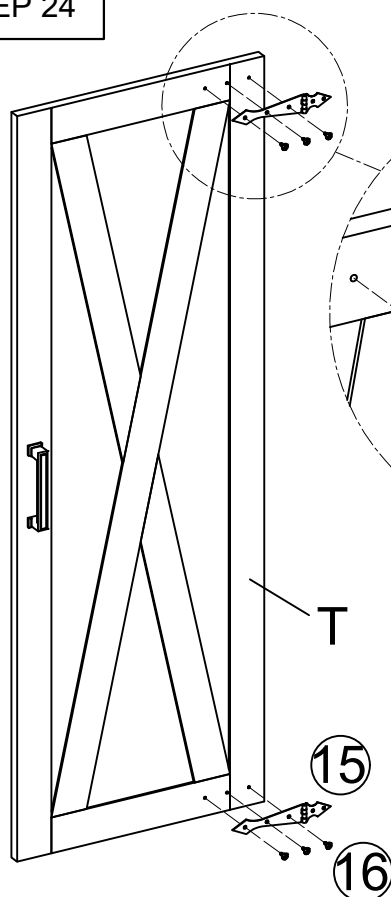


x2

- 15  x8
- 16  x24


STEP 25

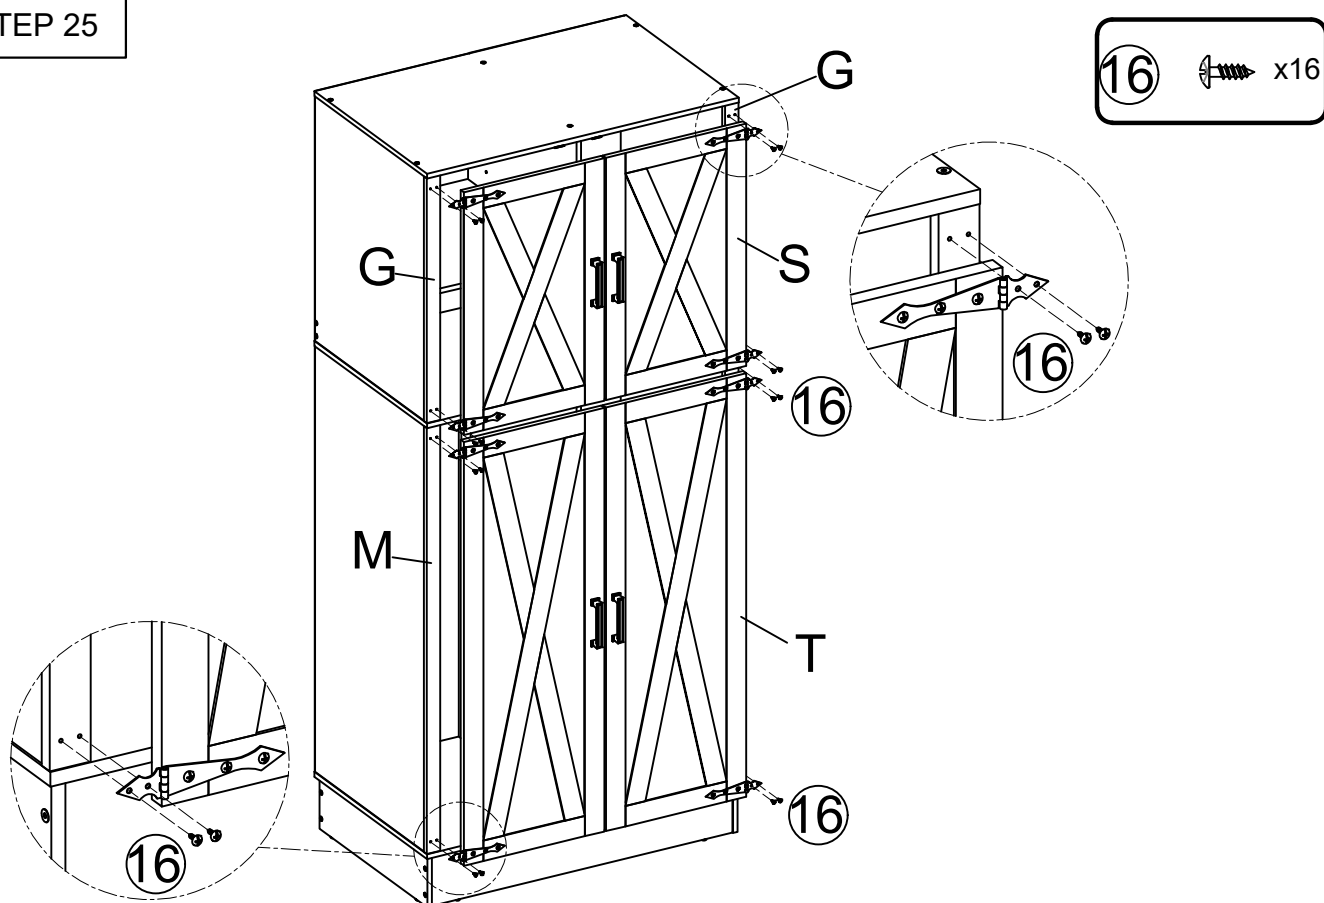


STEP 26

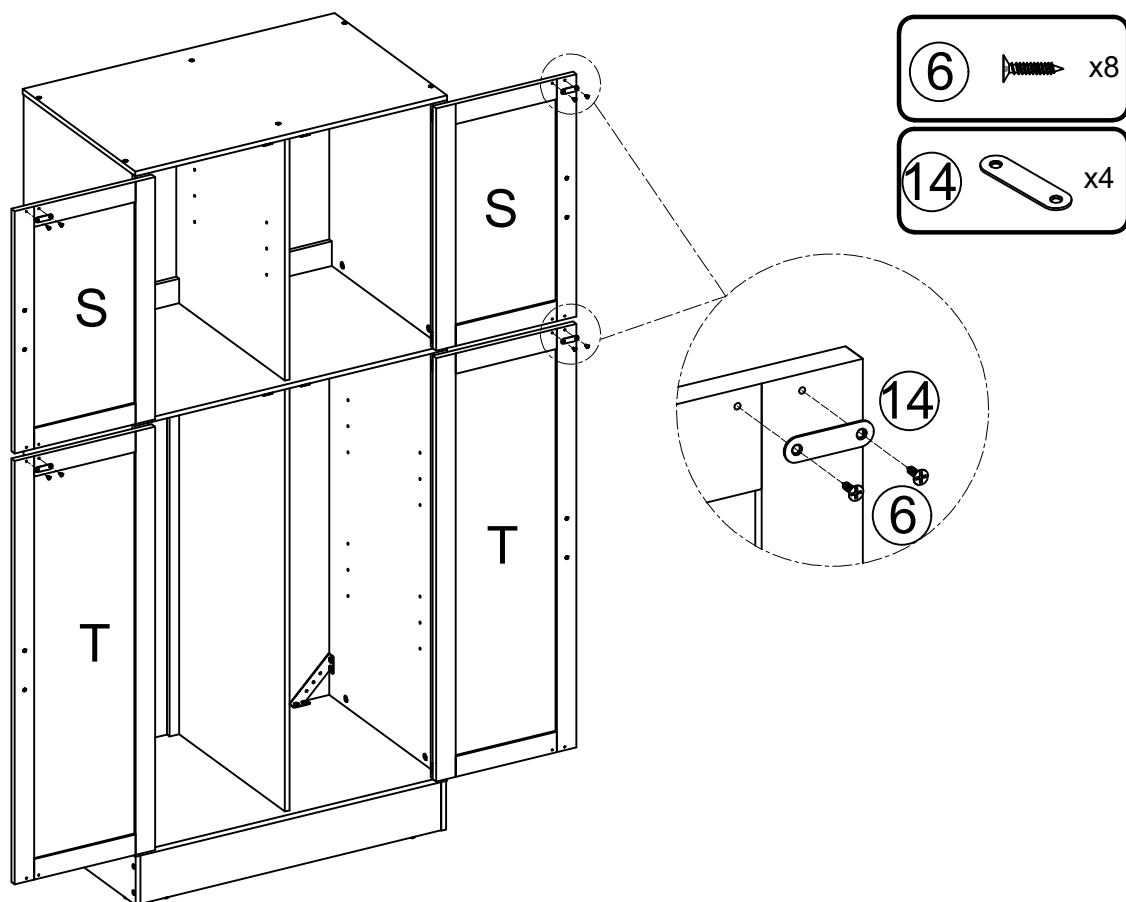


STEP 27

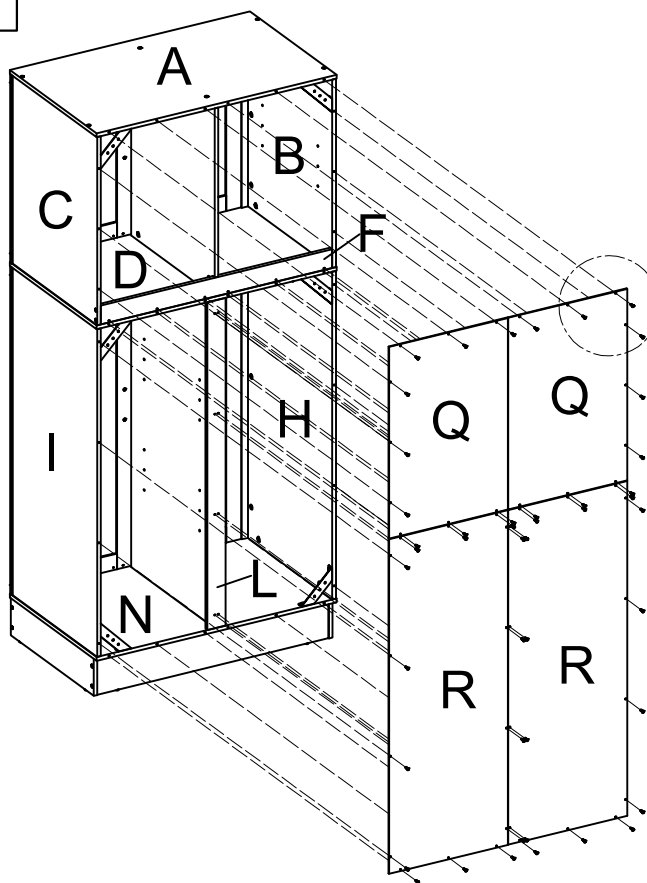


⑥  x46

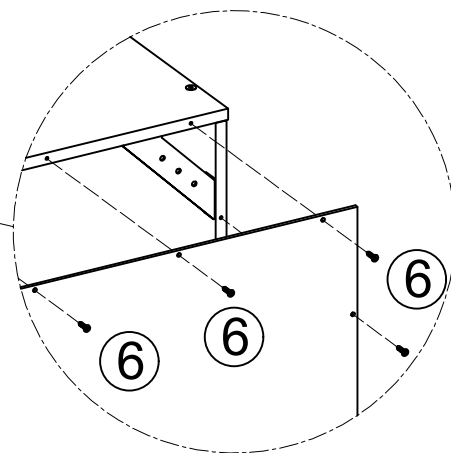

STEP 28

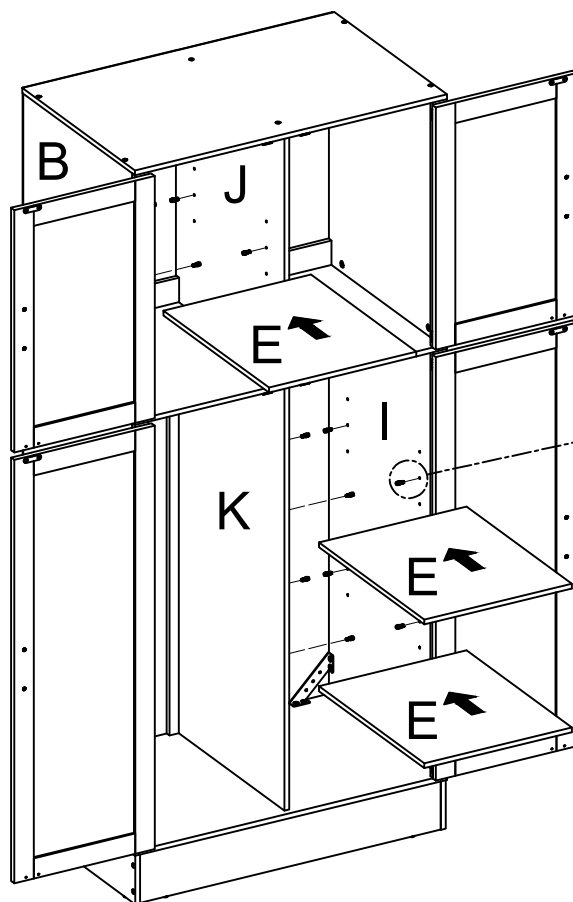


⑱  x12

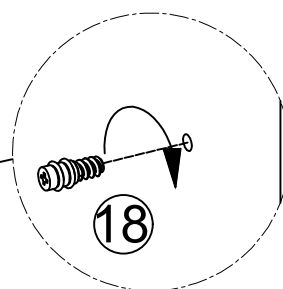

There are 3 heights for the shelf to be adjusted as you need.

TIPPING RESTRAINT HARDWARE



Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

