

ASSEMBLY INSTRUCTION 3' BED PINE

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR 3' BED FRAME

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT jump on this bed frame.

DO NOT use this bed frame if any parts are missing, damaged or worn.

DO NOT use this bed frame unless all fixings are secured.

Please keep small parts out of the reach of children.

Always use on a level, even surface.

WARNING: If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.

CARE & MAINTENANCE:


Assemble in the room of use.


Periodically check all screws & fixings to ensure they are secure.

DO NOT push the bed frame as this will damage the legs.





Always lift the bed with two people to reposition.

Keep any sharp objects away from the frame.

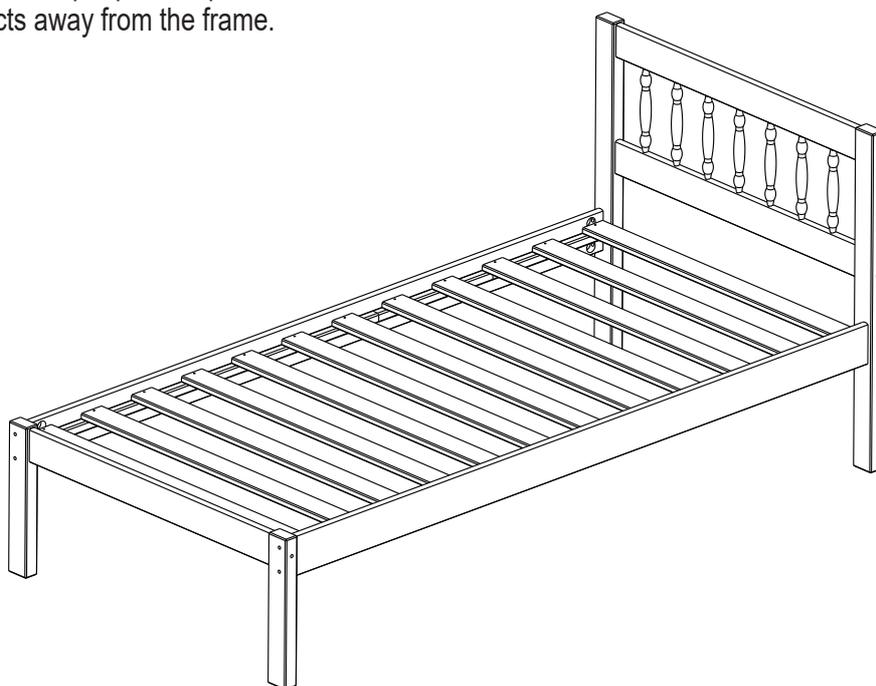


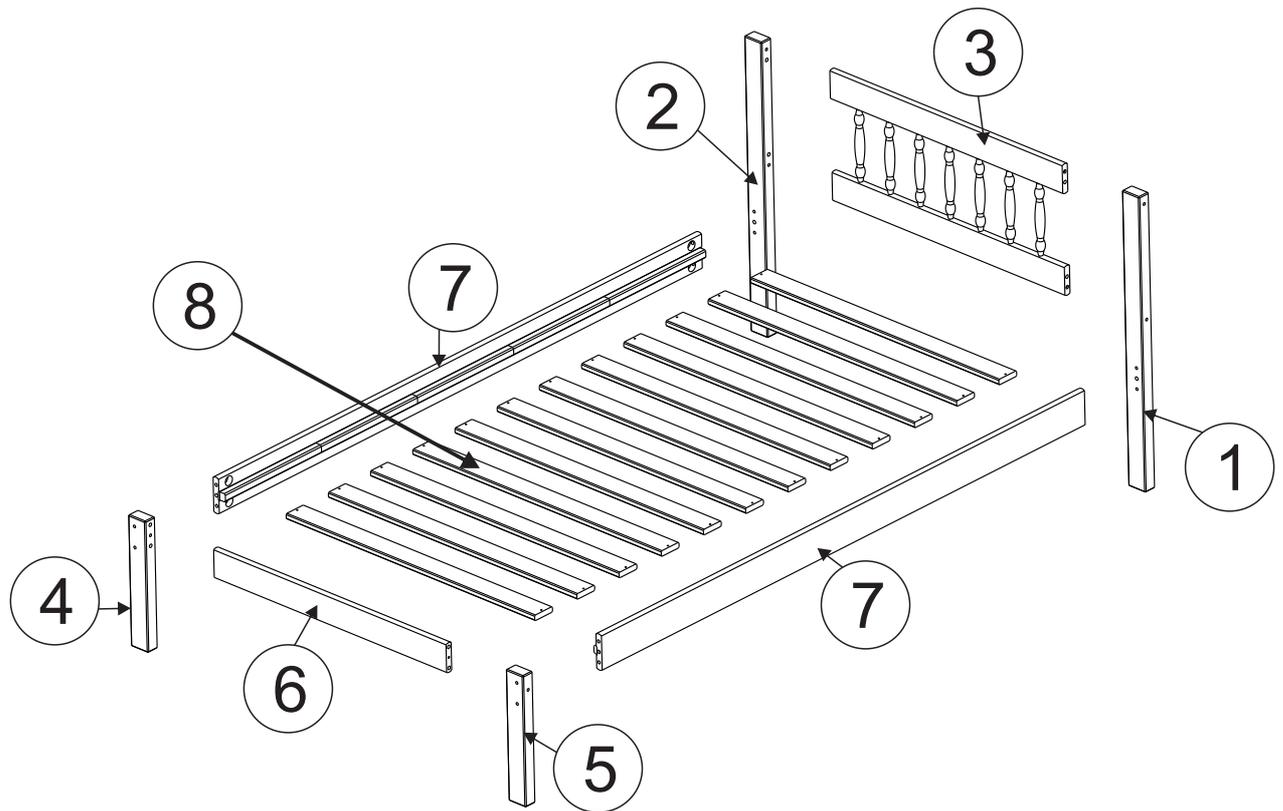


Parts List				Hardware List (found in box 1)		
Part	Description	Box	Qty	Part	Description	Qty
1	Headboard foot	1	1	A	1/4" x 80 mm Bolt	8
2	Headboard foot	1	1	B	Elliptical Nut	8
3	Headboard	1	1	C	7 x 100 mm Bolt	6
4	Foot end	1	1	D	10 x 40 mm Wooden Dowel	12
5	Foot end	1	1	E	Allen Key	1
6	Rail	1	1	F	Spacer Block 96 mm	2
7	Side rail	2	2	G	4.0 x 30 Screw	24
8	Slats	1	12			

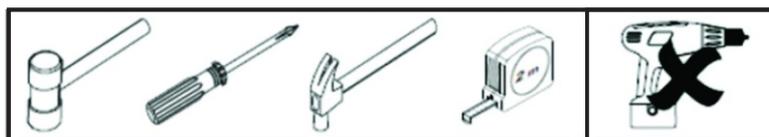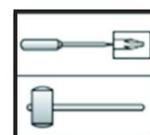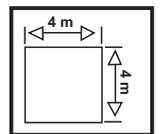


Step 1: Insert the wooden dowels (D) into the headboard (3), then set up the legs (1) and (2) in the headboard (3) setting the parts with the bolts (C) with the allen key (E).

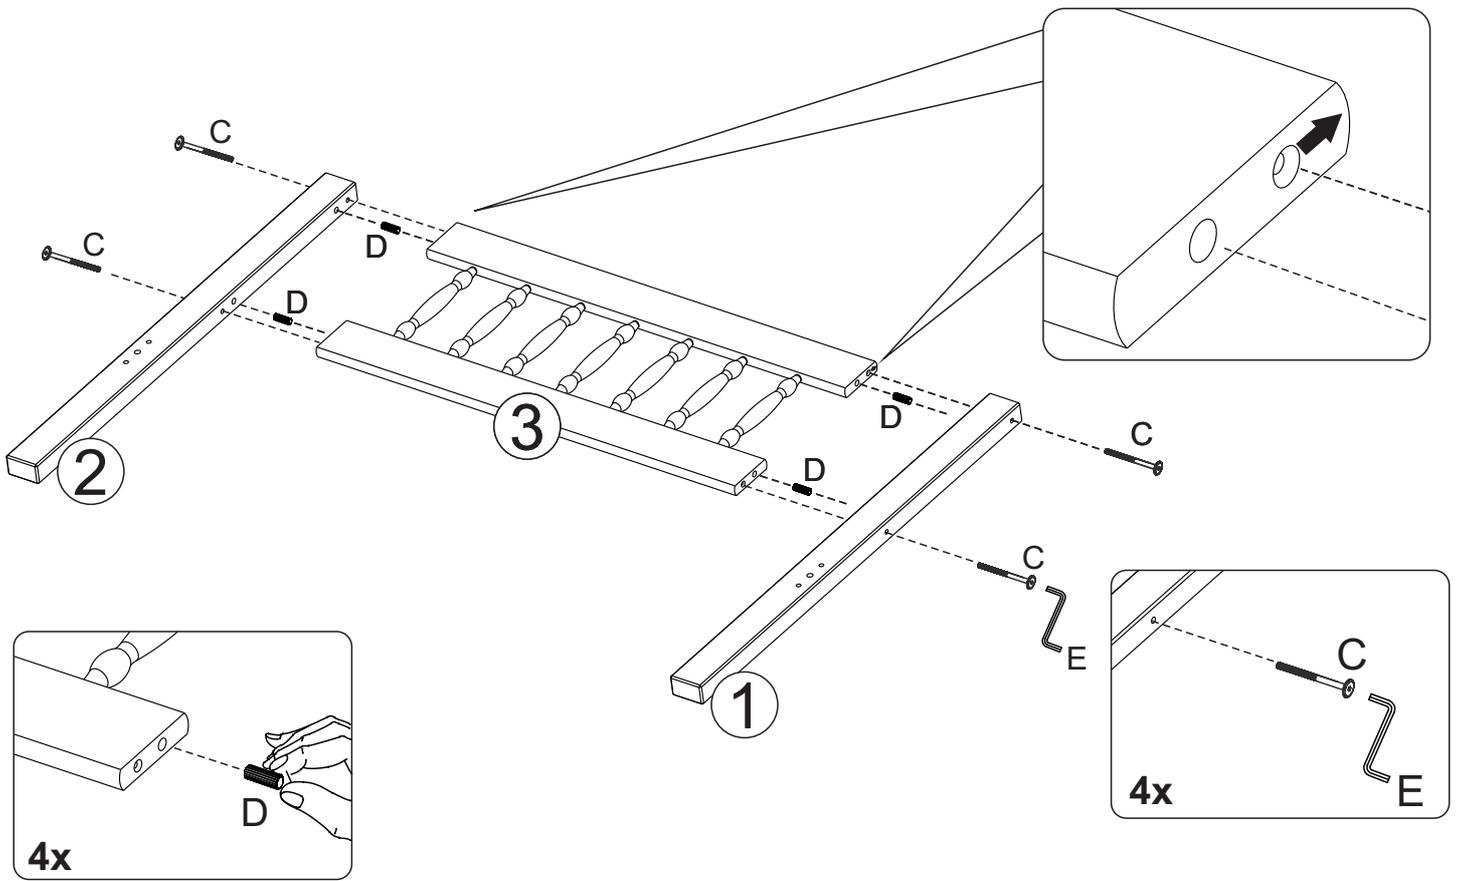

Step 2: Insert the wooden dowels (D) into the rail (6), then set up the legs (4) and (5) in the rail (6) setting the parts with the bolts (C) with the allen key (E).

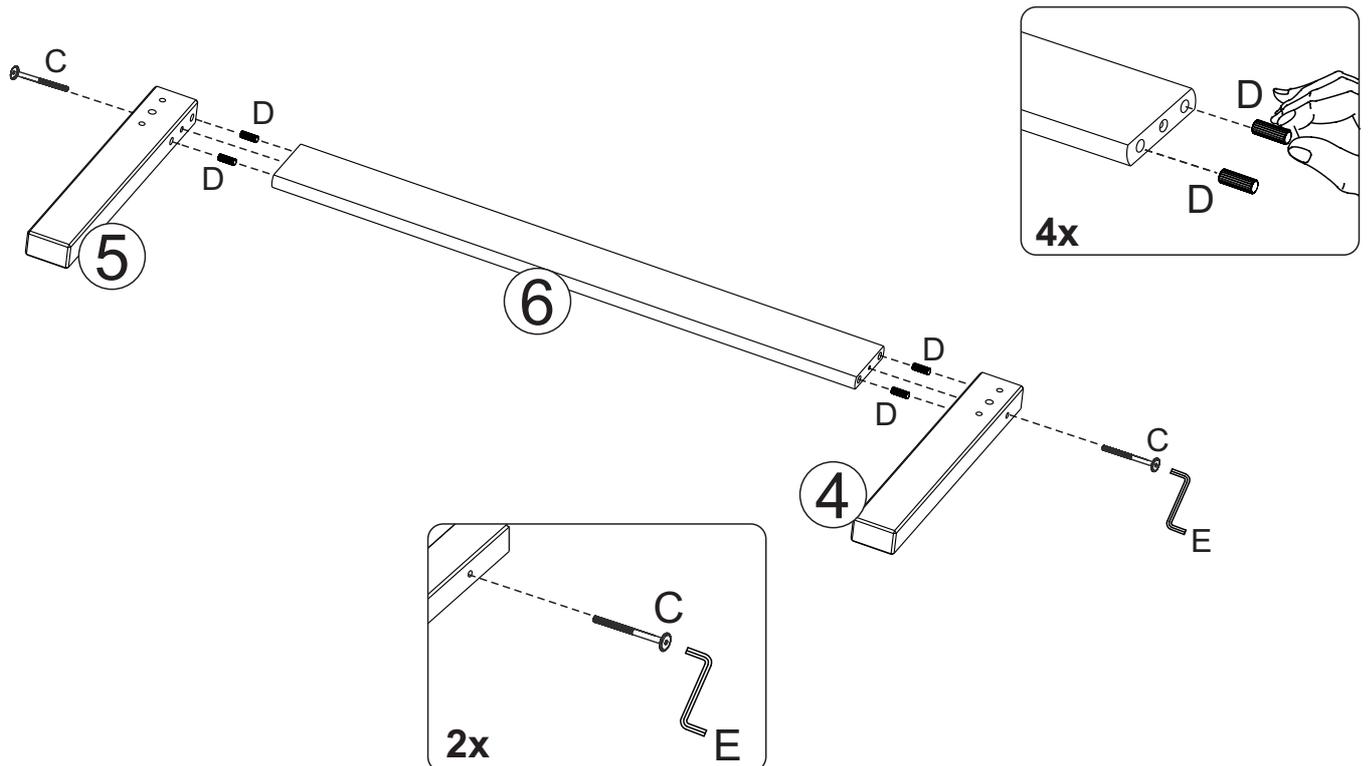

Step 3: Put the wooden dowels (D) in the side rails (7), then set up the footend and the headboard in the siderails (7) setting them with the bolt (A) and the Elliptical nut (B) with the allen key (E).

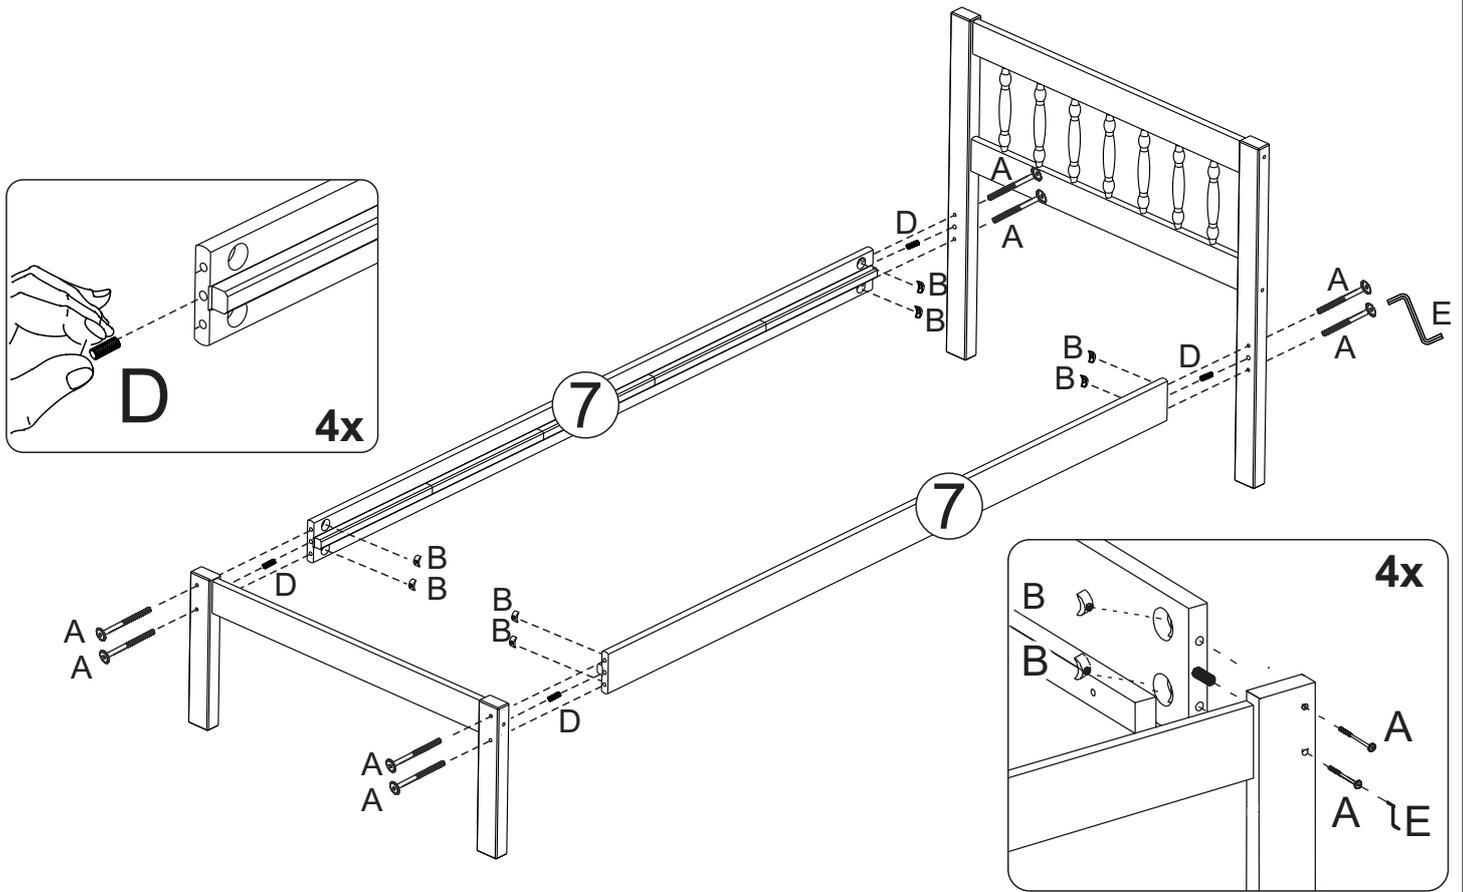

Step 4: Put the slats (8) distancing each other with the Spacer block (F) attach the slats with the screws (G) using a Philips screwdriver (Not provided).

