



Bread Case 001

MBG001

Assembly Instructions

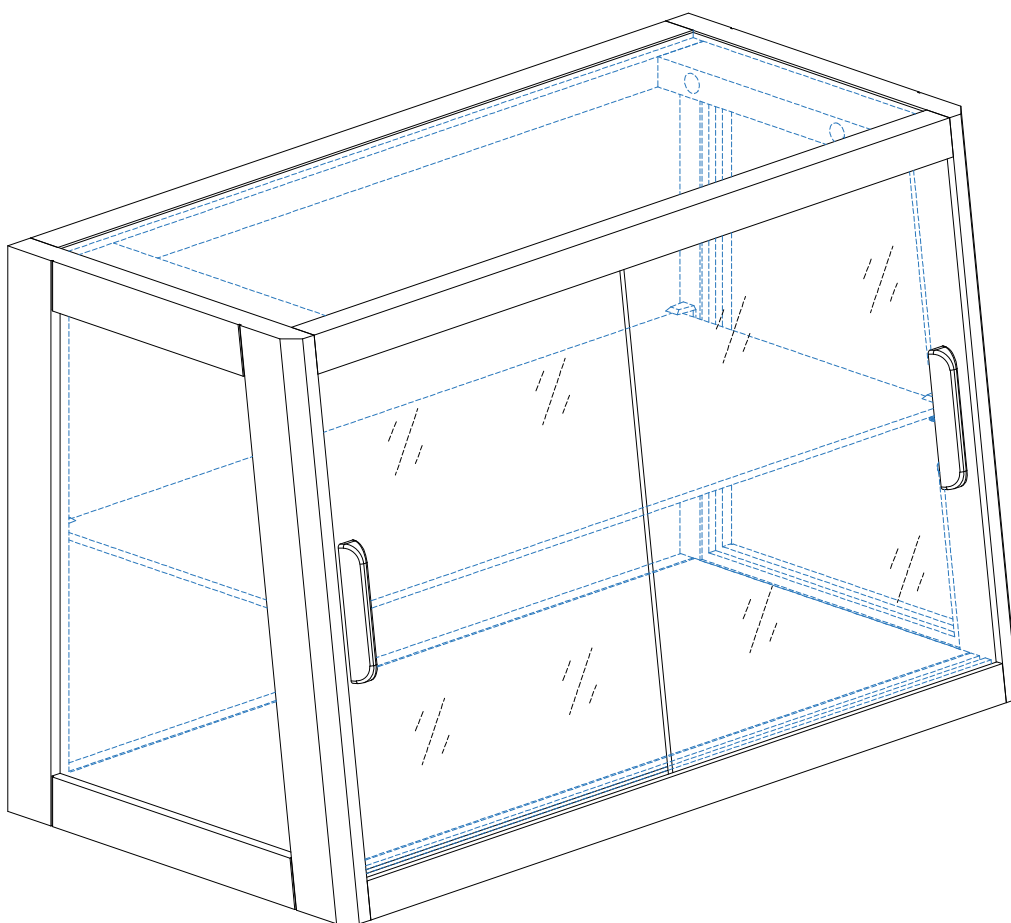


Assembly Overview

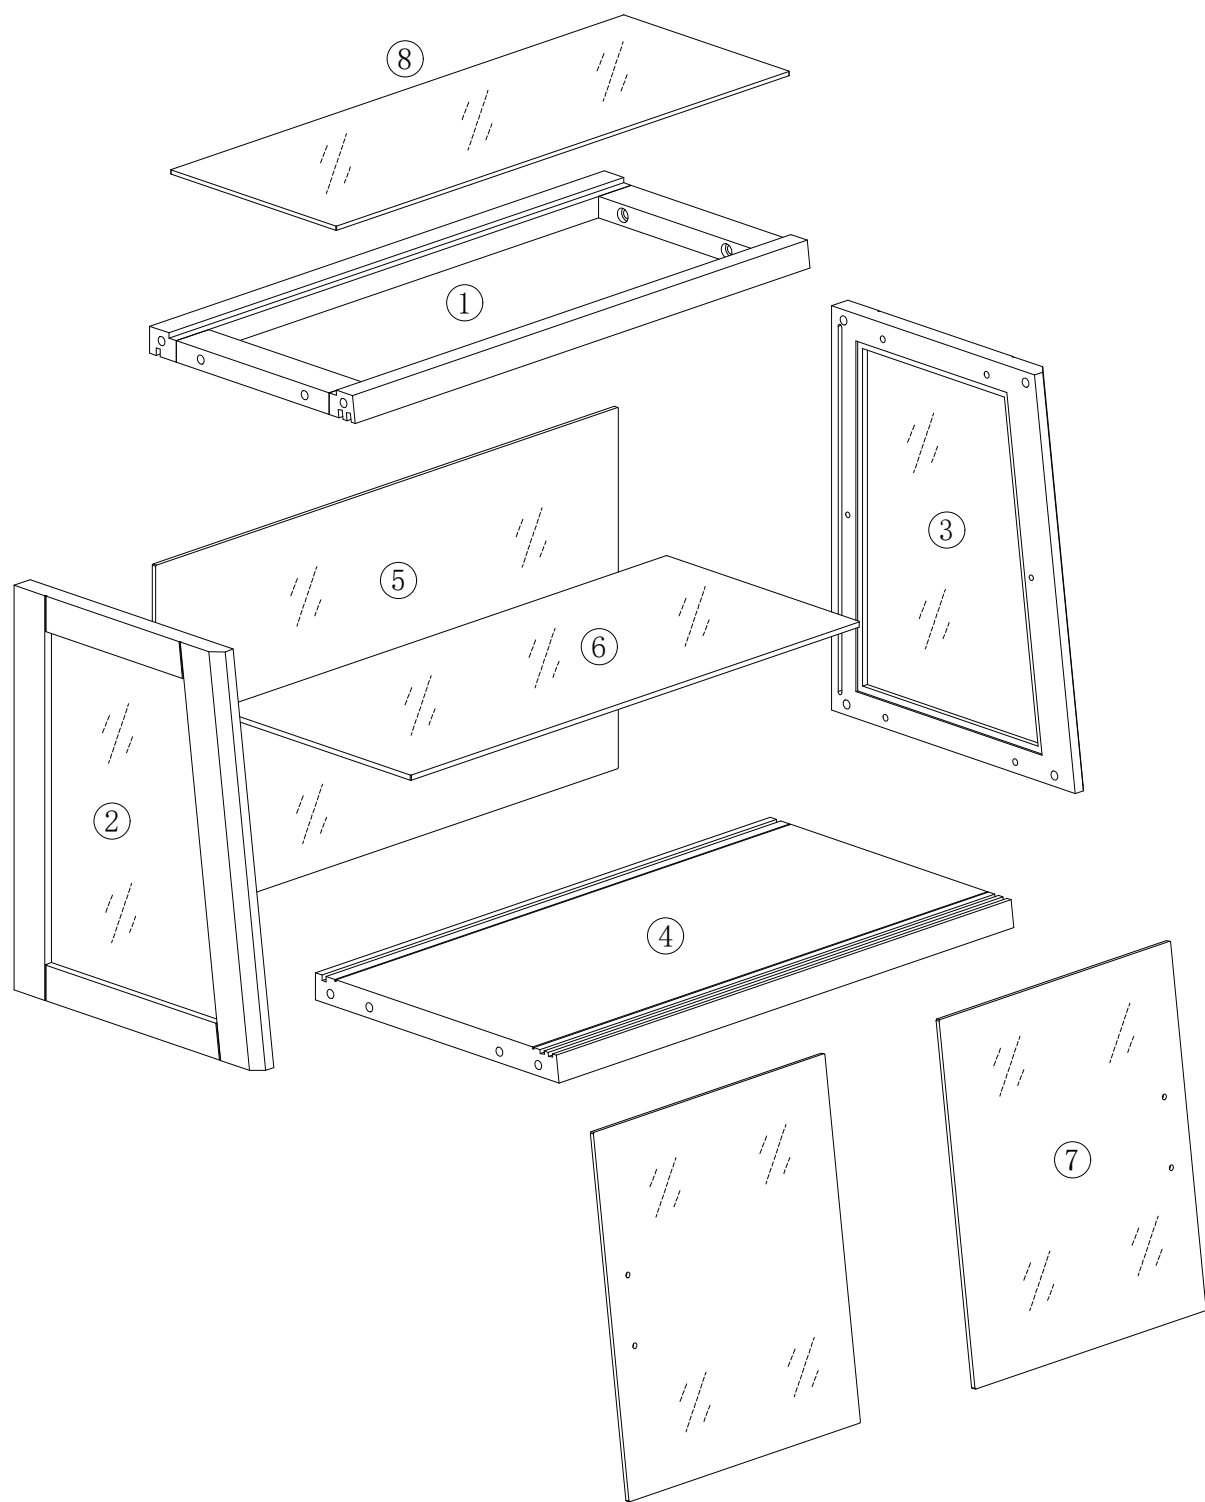


Parts List

1 Face frame

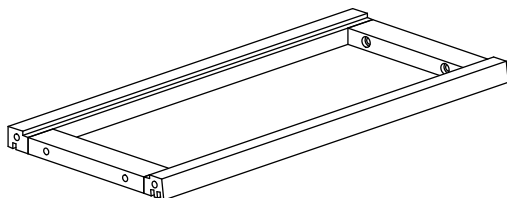


2 Left frame

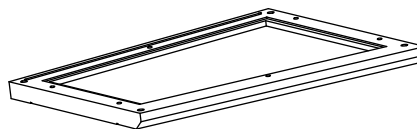


1 PC

1 PC

3 Right frame

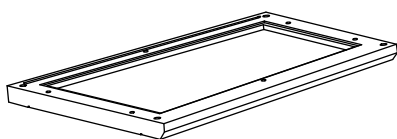

4 Bottom plate

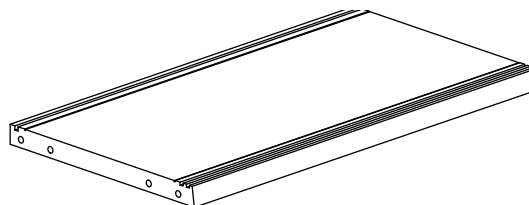


1 PC

1 PC


Parts List (continued)

5 Back glass panel

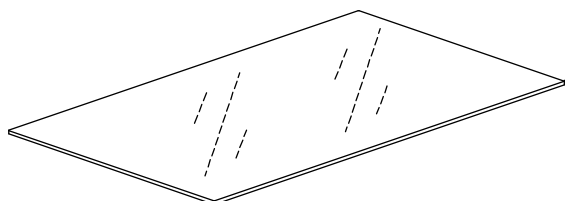


1 PC

6 Glass shelf

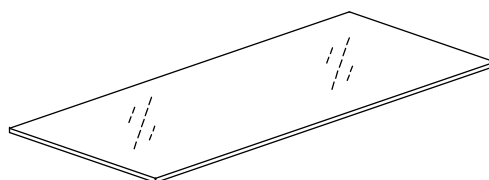


1 PC

7 Glass door panel



2 PCS


8 Front frame glass

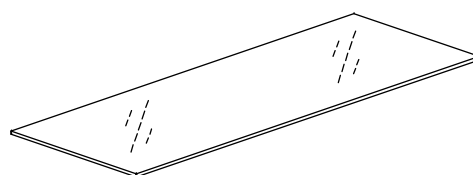

1 PC

Hardware List


A Countersunk hex socket screw

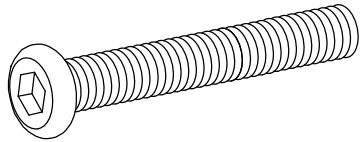

M6 × 50mm

8 + 1 PCS


B Wood dowel

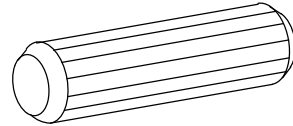

Ø8 × 30mm

10 + 1 PCS


C Glass shelf support

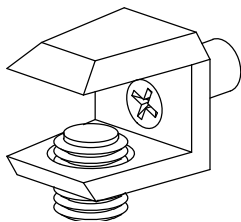

15 × 10 × 13MM

4 PCS

D Wooden handle

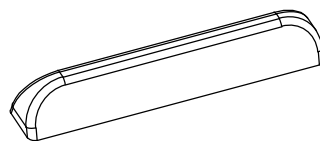


90 × 15 × 15MM

2 PCS

Hardware List (continued)


E Phillips large flat-head screw



M4 × 10MM

4 PCS


F Clear plastic washer



Ø10 × 1MM

4 PCS


H Non-woven fabric pad

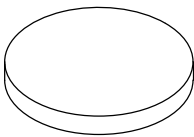

Ø20 × 3MM

4 PCS

I Decorative protective sticker

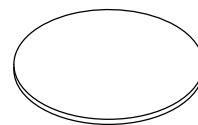

Ø20MM


4 + 1 PCS

Reusable Tool

G Hex key


M4 × 65MM

1 PC (reusable)

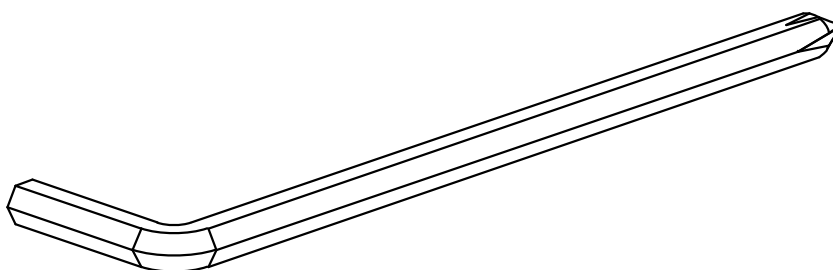

Important

Using the correct screws prevents damage to the components.

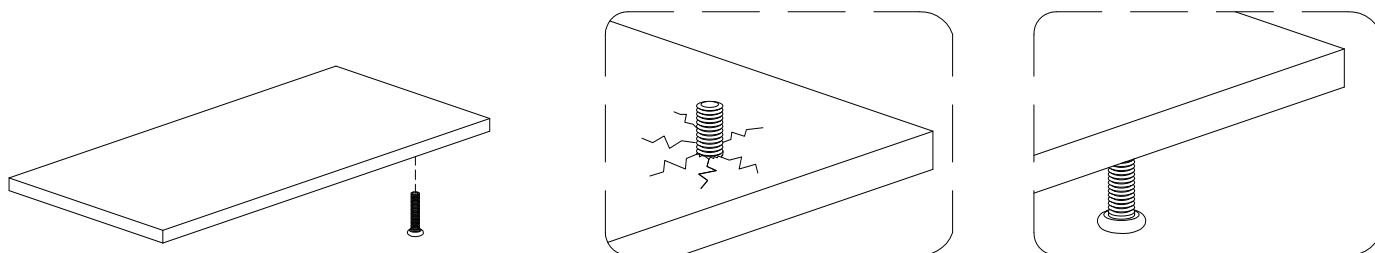

Incorrect screws can split the boards.


The correct screws fit properly.

WARNING


1. Place the unit on a level surface, or level it with the included hardware where applicable.
2. Do not sit or stand on the assembled product. Do not allow children to climb, sit, or stand on it.
3. For safety, this unit must be mounted to the wall.
4. Do not use the unit without installing the tip restraint.
5. The unit can tip over, causing severe injury or death.
6. Do not exceed the recommended weight limits.
7. Distribute weight evenly on each level and keep heavier loads at the bottom.
8. Before cutting, drilling, or hammering into any wall or floor, check the locations of electrical, plumbing, and gas lines. Cutting may cause serious injury.

Cam Lock System


General example: letters inside these diagrams are local example labels, not the product hardware IDs.

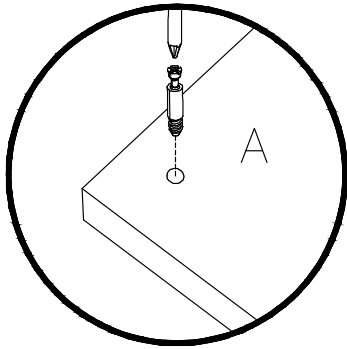


1. Screw the cam bolt into the panel.

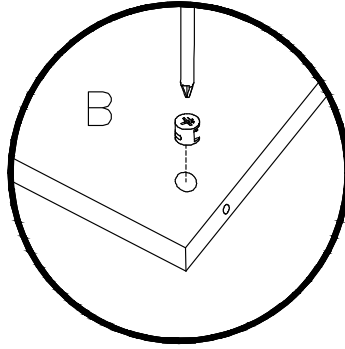


2. Push the cam into the panel. Point its arrow toward the panel edge.

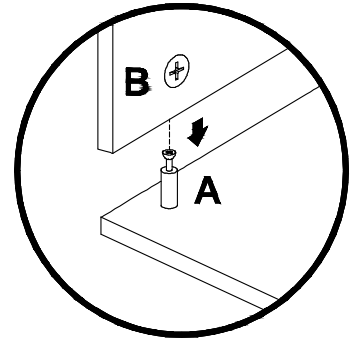

3. Align the cam bolts with the cams and insert fully into the cross-bored holes.

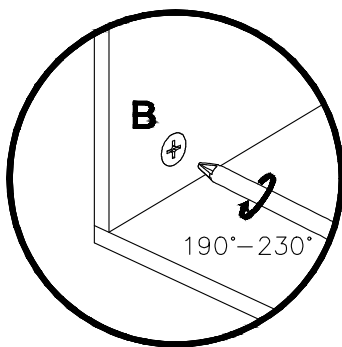


4. Turn the cams clockwise 190°–230° to lock the panels together.

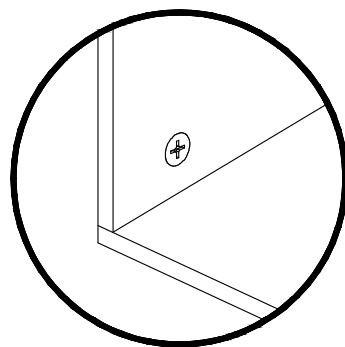

5. The panels should fit tightly together and the connection should be rigid.

Dowel Insertion Example


General example: A and C are local illustration labels, not product hardware IDs. Insert the wood dowel at least halfway. If necessary, tap lightly with a rubber mallet.

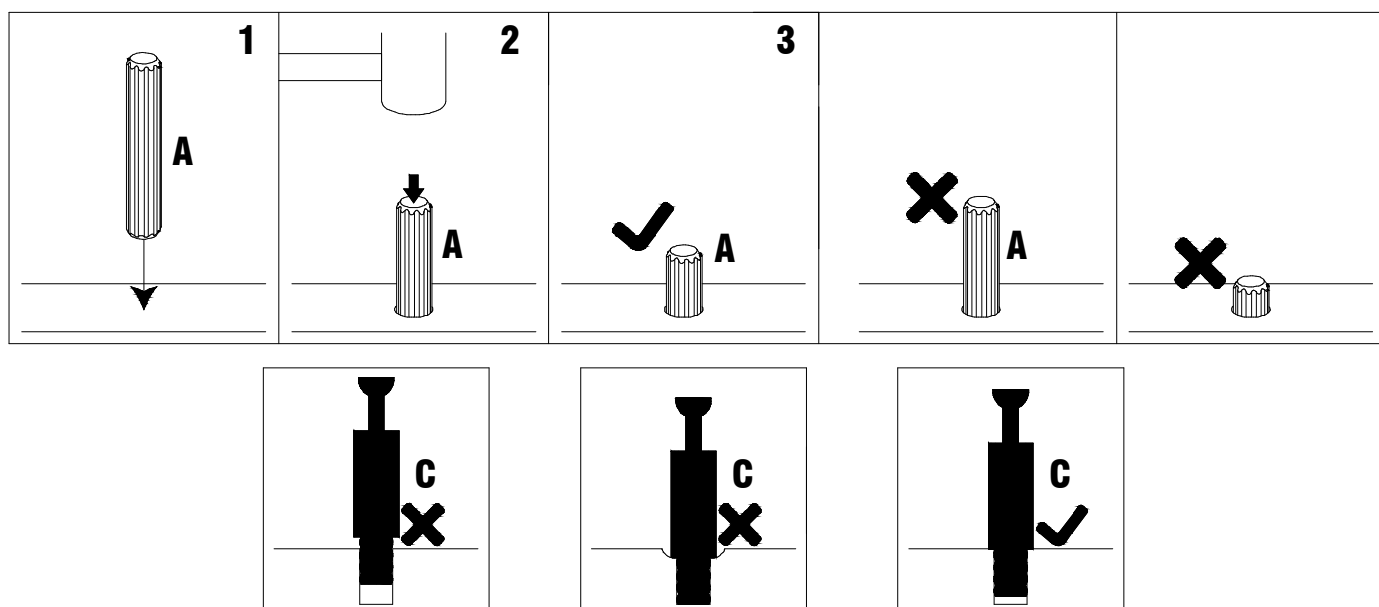

Step 1

Insert four wood dowels B into Right Frame 3, as shown.

B × 4 PCS


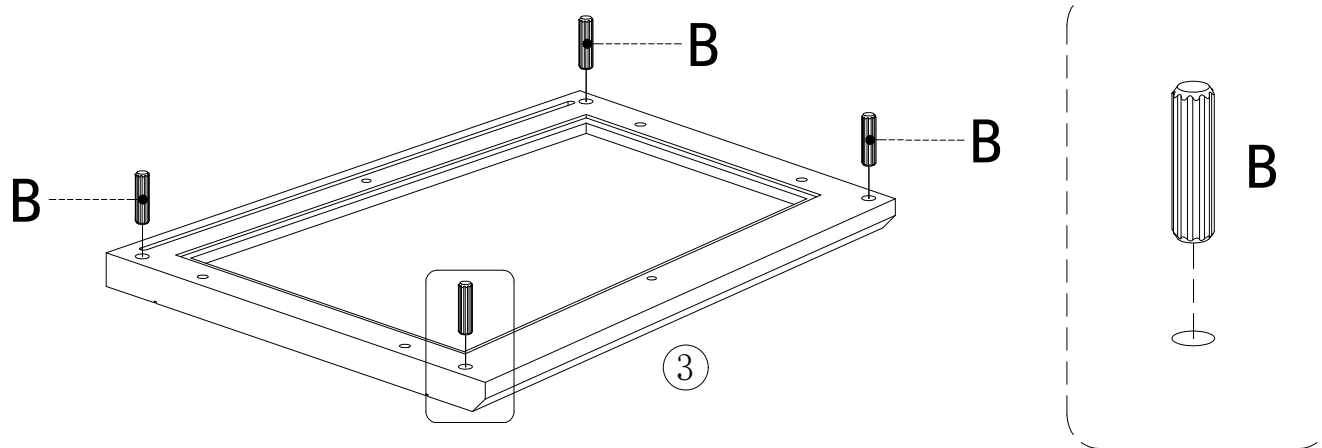


Step 2

Join Face Frame 1 and Bottom Plate 4 to Right Frame 3 using screws A and hex key G.

A × 4 PCS


Tool: G × 1 PC (reusable)

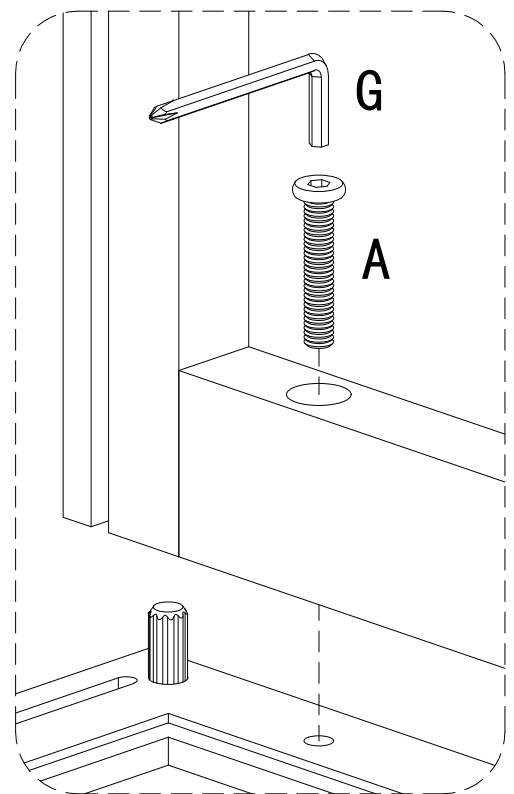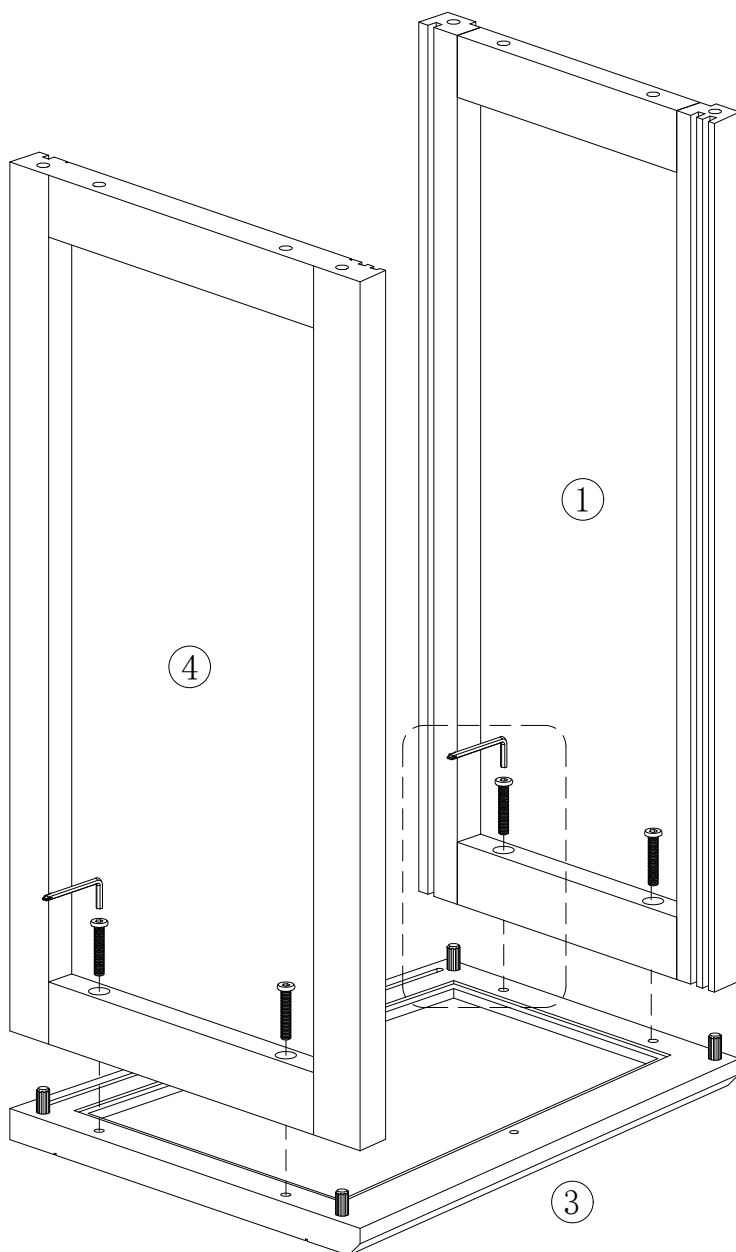

Step 3

Insert Back Glass Panel 5 and four wood dowels B into the assembly from Step 2, as shown.

B × 4 PCS

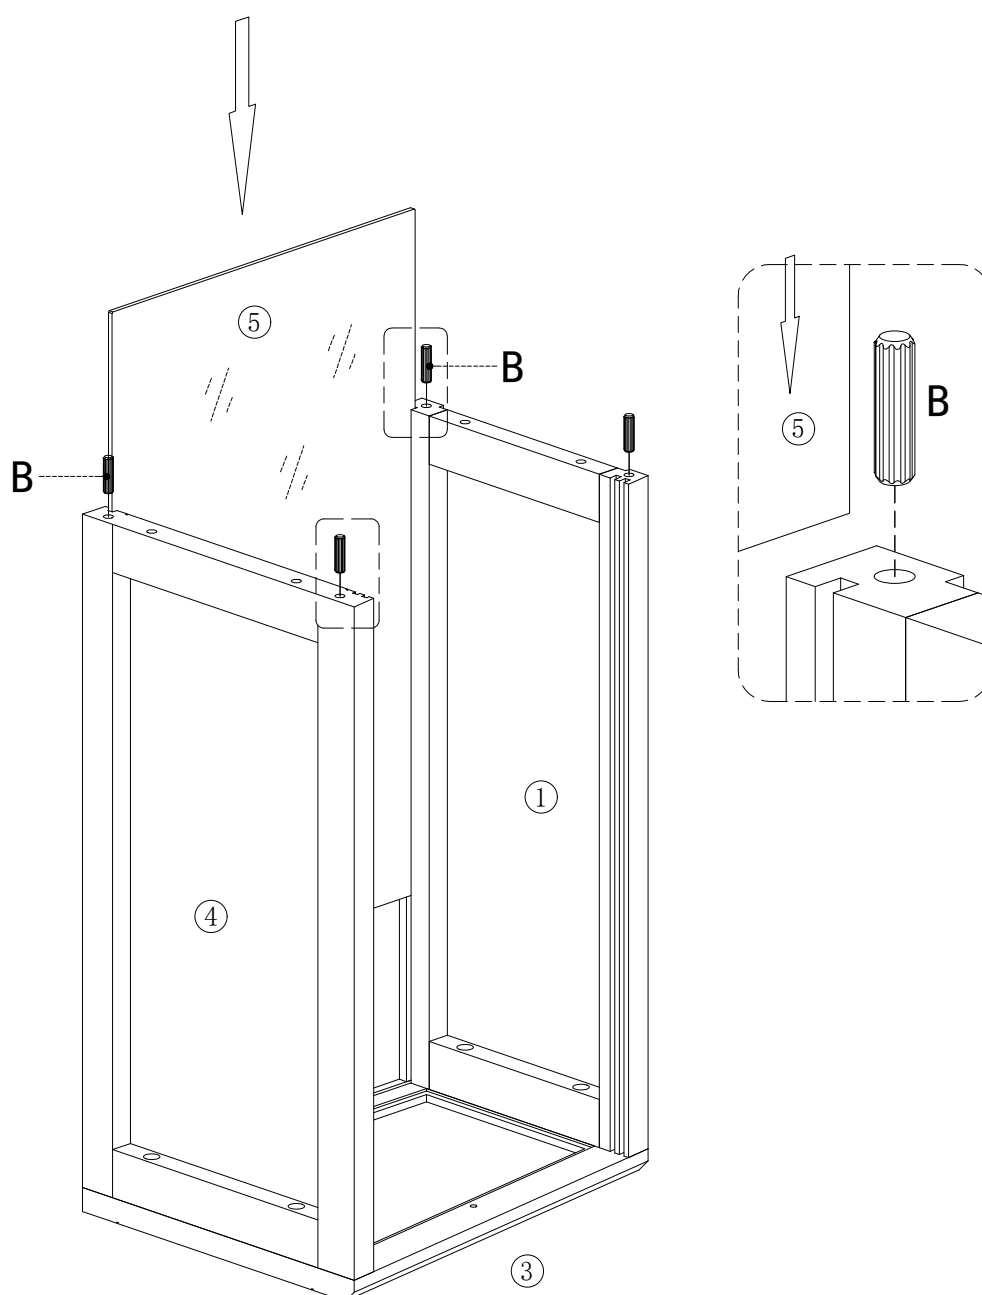


Step 4

Fit Left Frame 2 to the assembly from Step 3 and secure with screws A using hex key G.

A × 4 PCS


Tool: G × 1 PC (reusable)

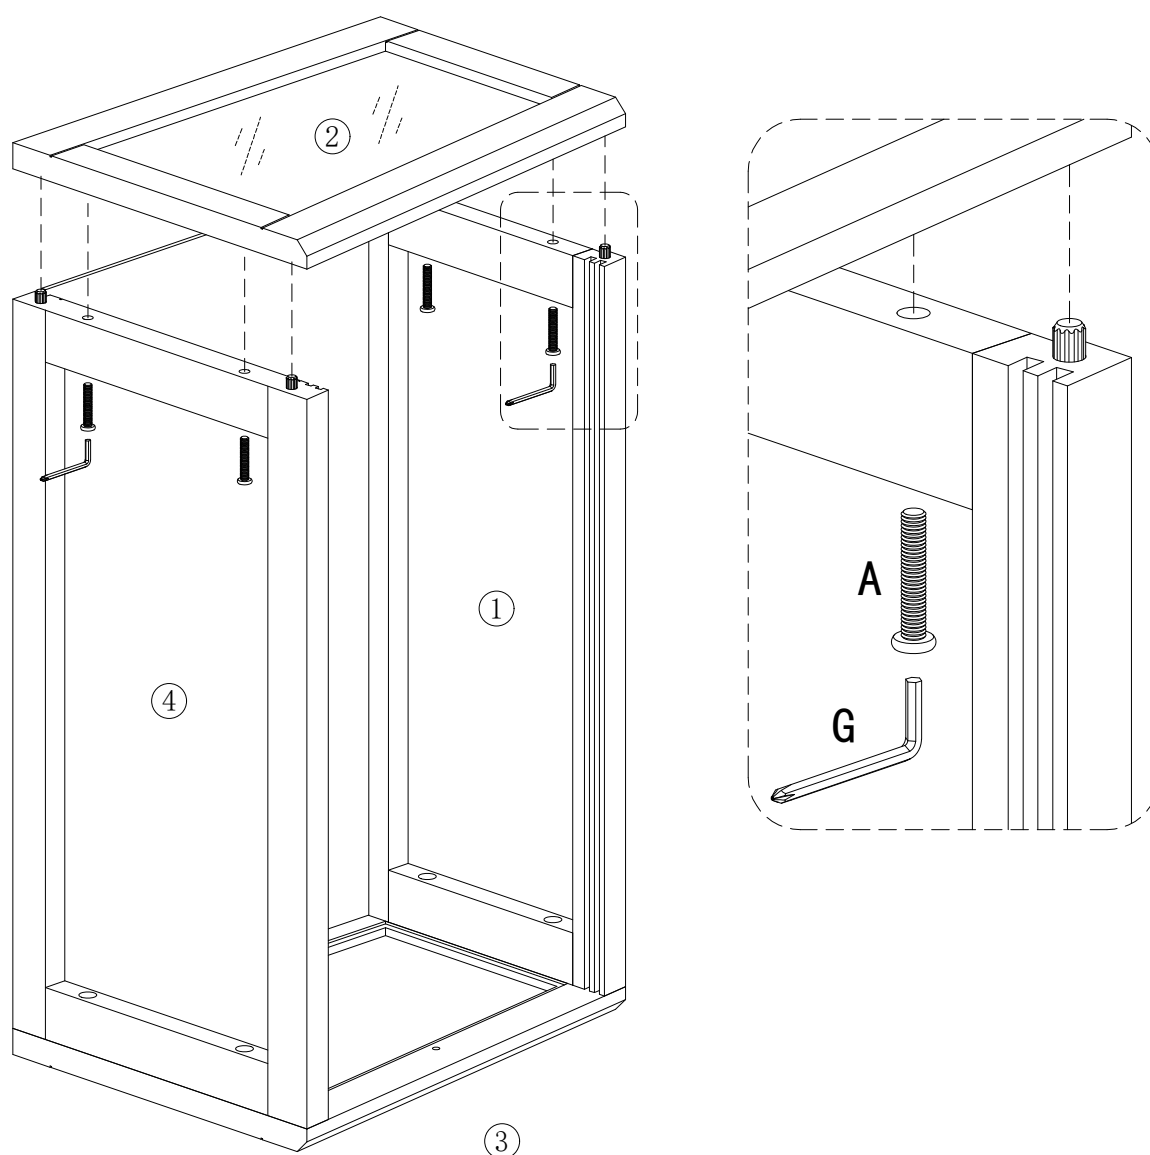

Step 5

Apply fabric pads H to the positions shown on the assembly from Step 4.


H × 4 PCS

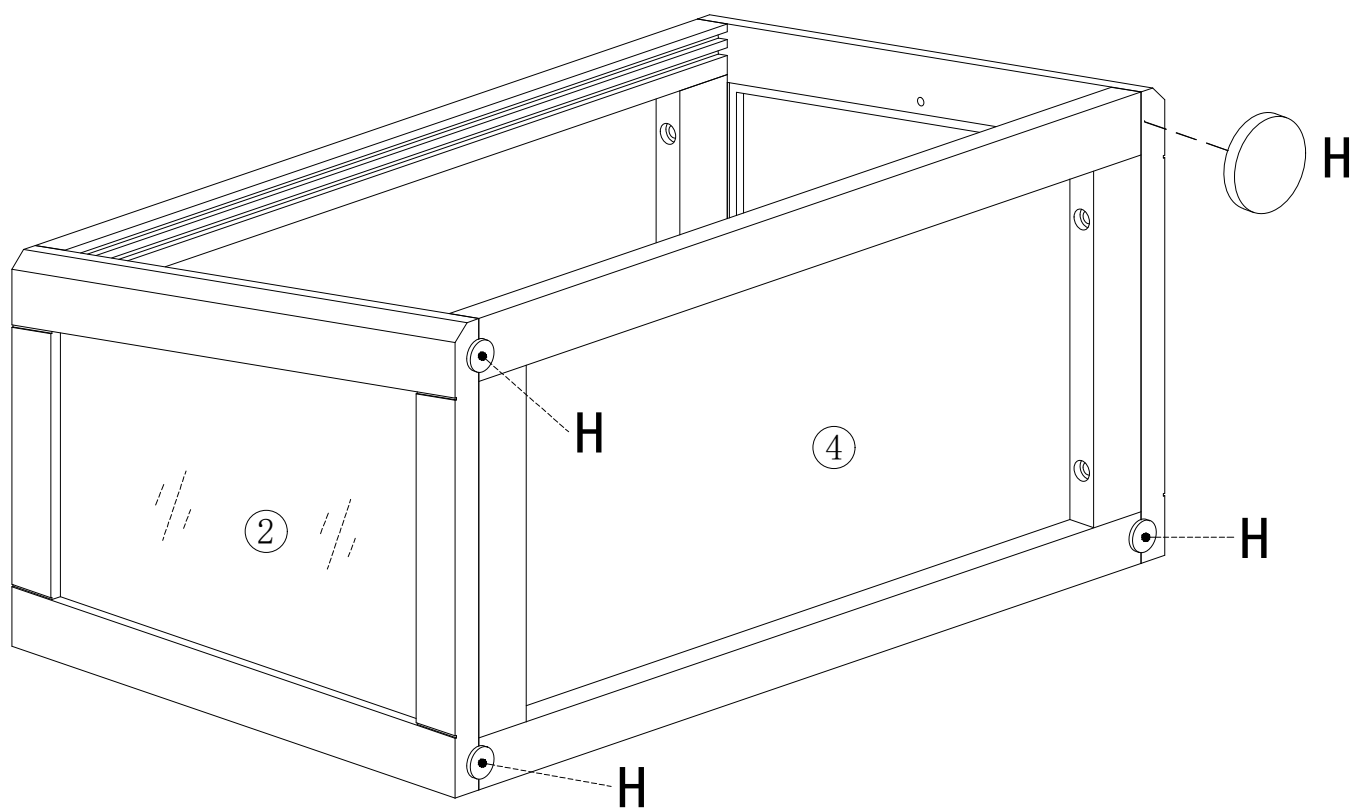

Step 6

Apply protective stickers I to the positions shown on the assembly from Step 5. Then place Front Frame Glass 8 in position.

1 × 4 PCS


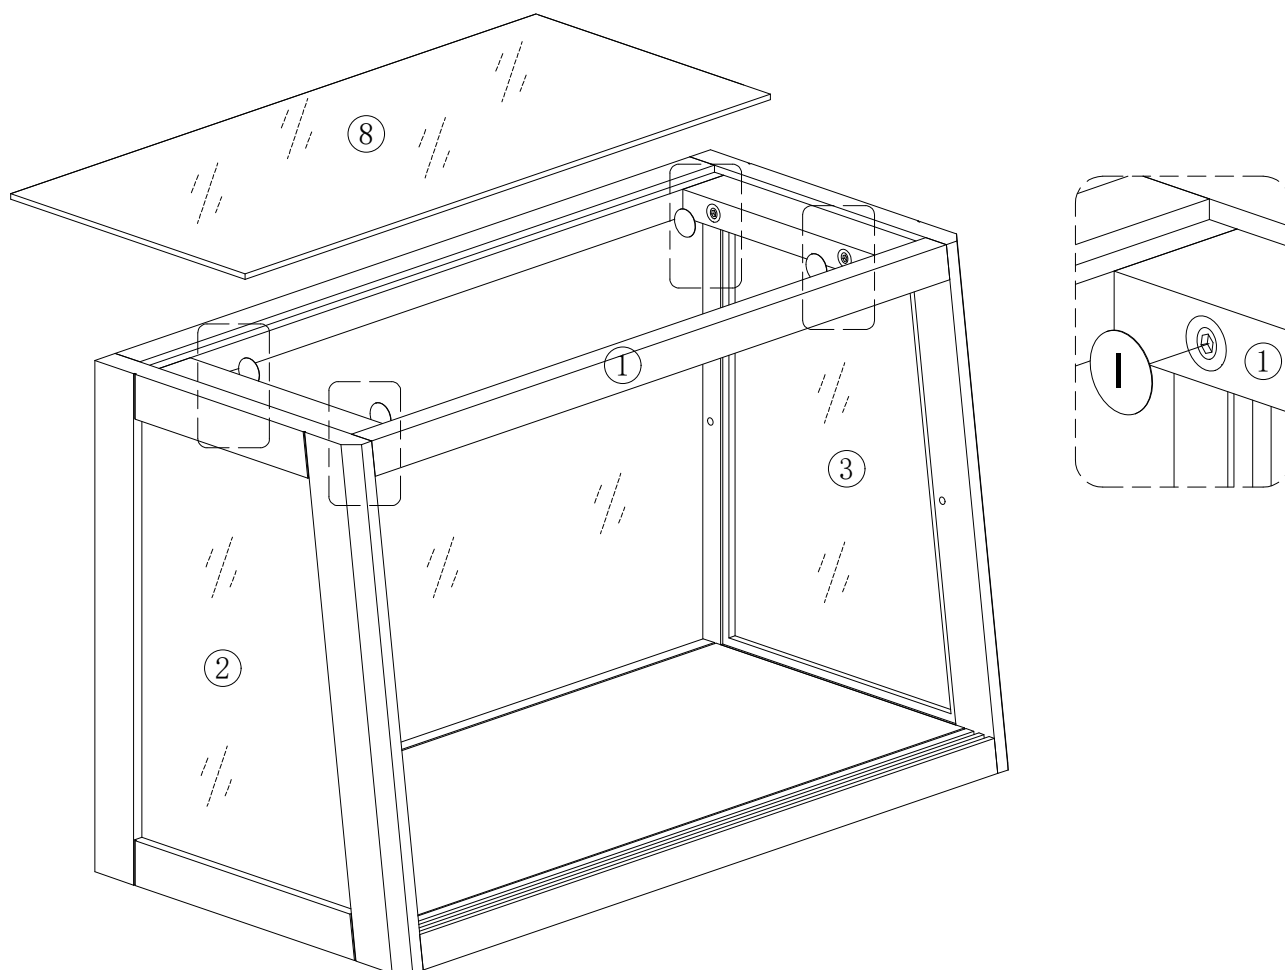


Step 7

Attach glass shelf supports C to the assembly from Step 6 using hex key G. Insert Glass Shelf 6 and secure it using G, as shown.

C × 4 PCS

Tool: G × 1 PC (reusable)

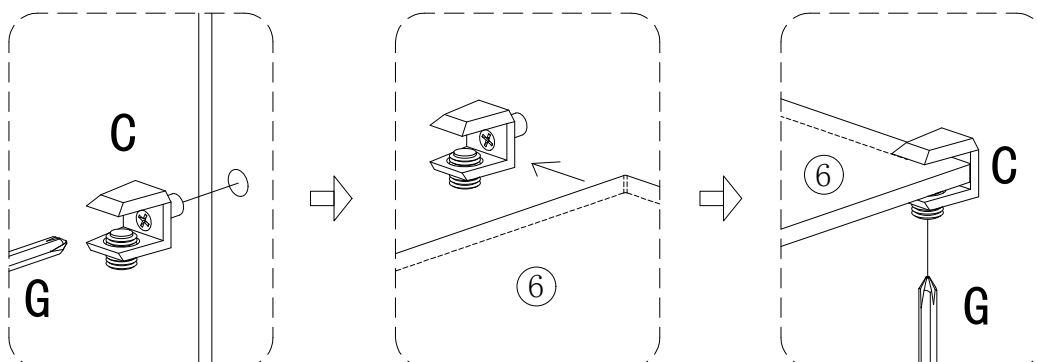
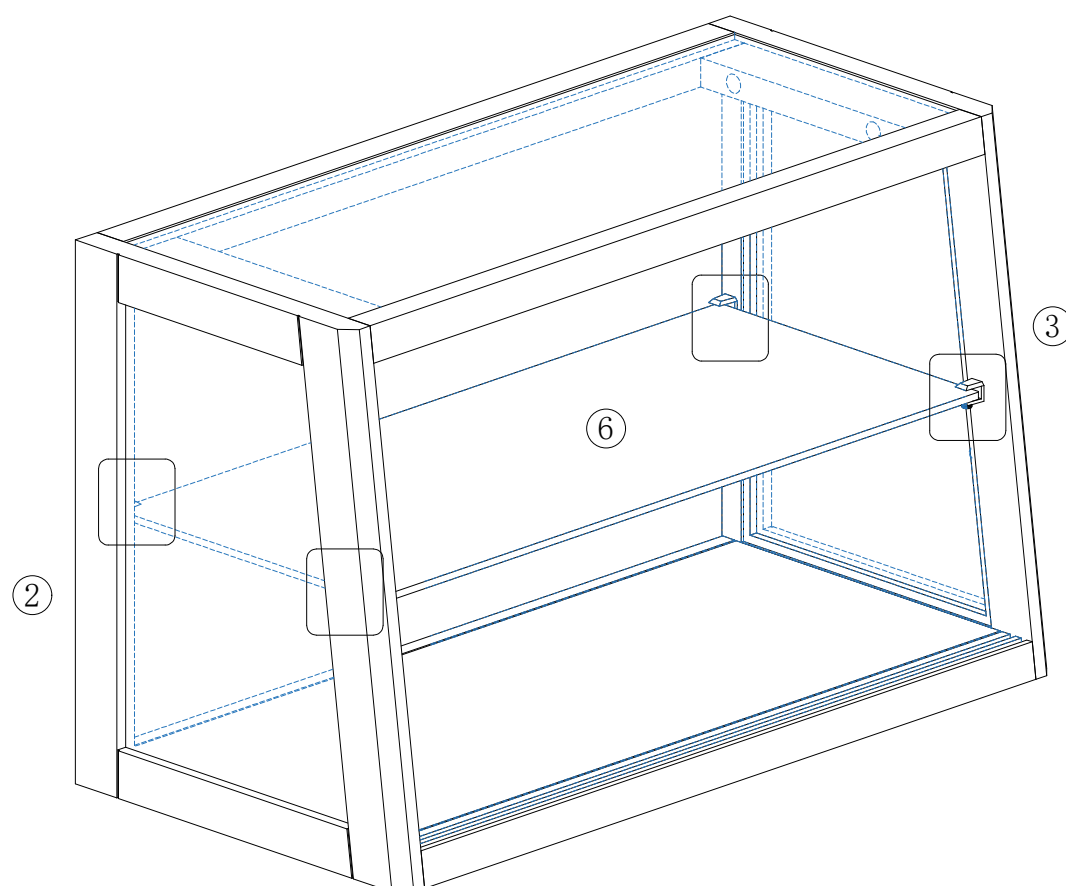


Step 8

Attach handles D to both Glass Door Panels 7 using screws E, washers F, and tool G.

D × 2 PCS; E × 4 PCS; F × 4 PCS

Tool: G × 1 PC (reusable)

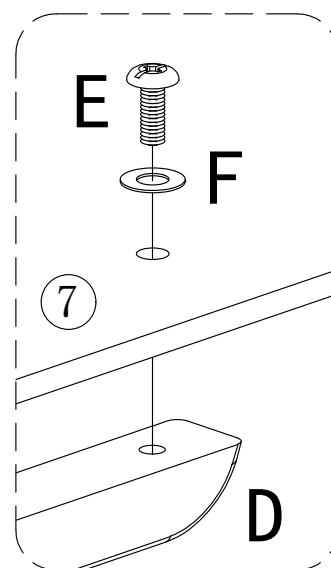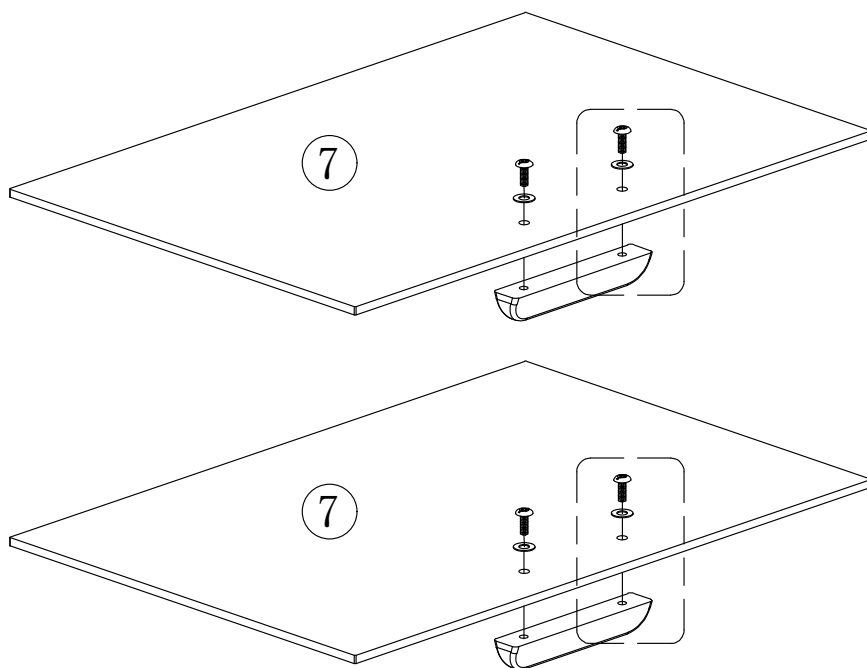

Step 9

Insert the door assemblies from Step 8 into the slots in the assembly from Step 7, following the illustrations.

