
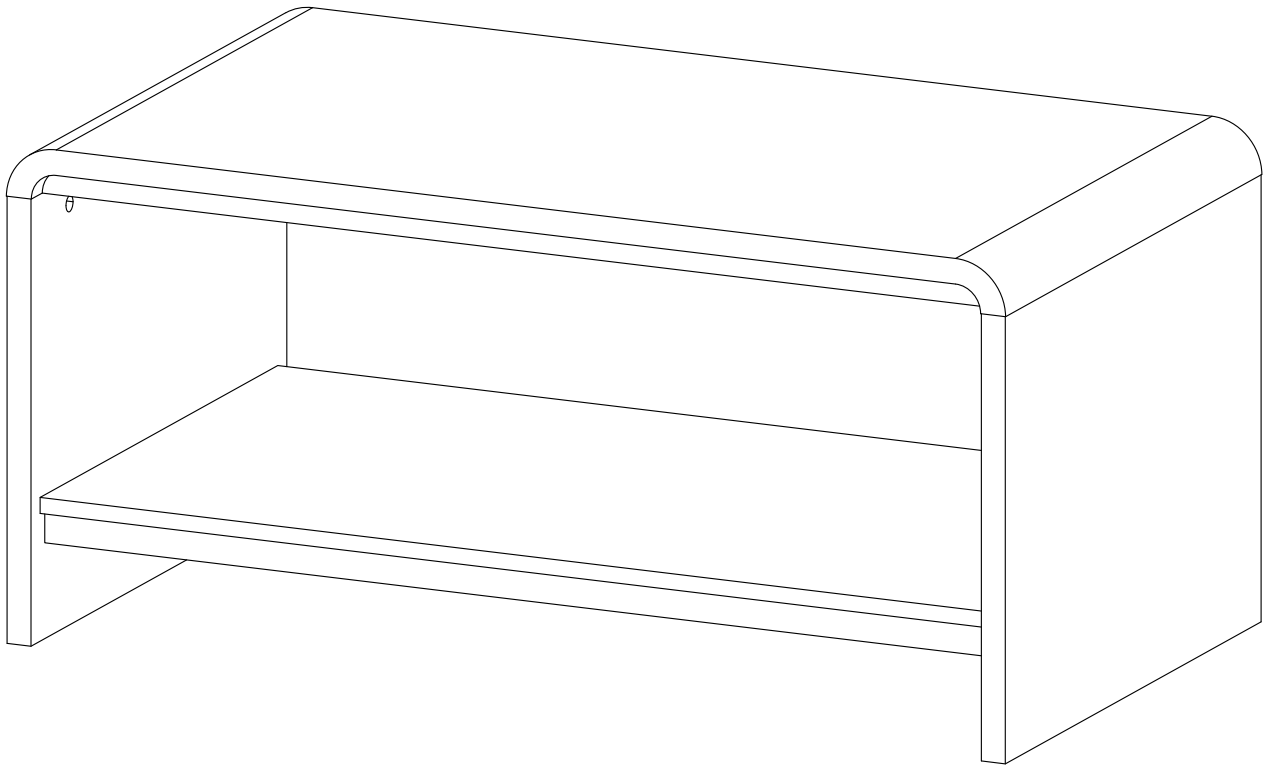
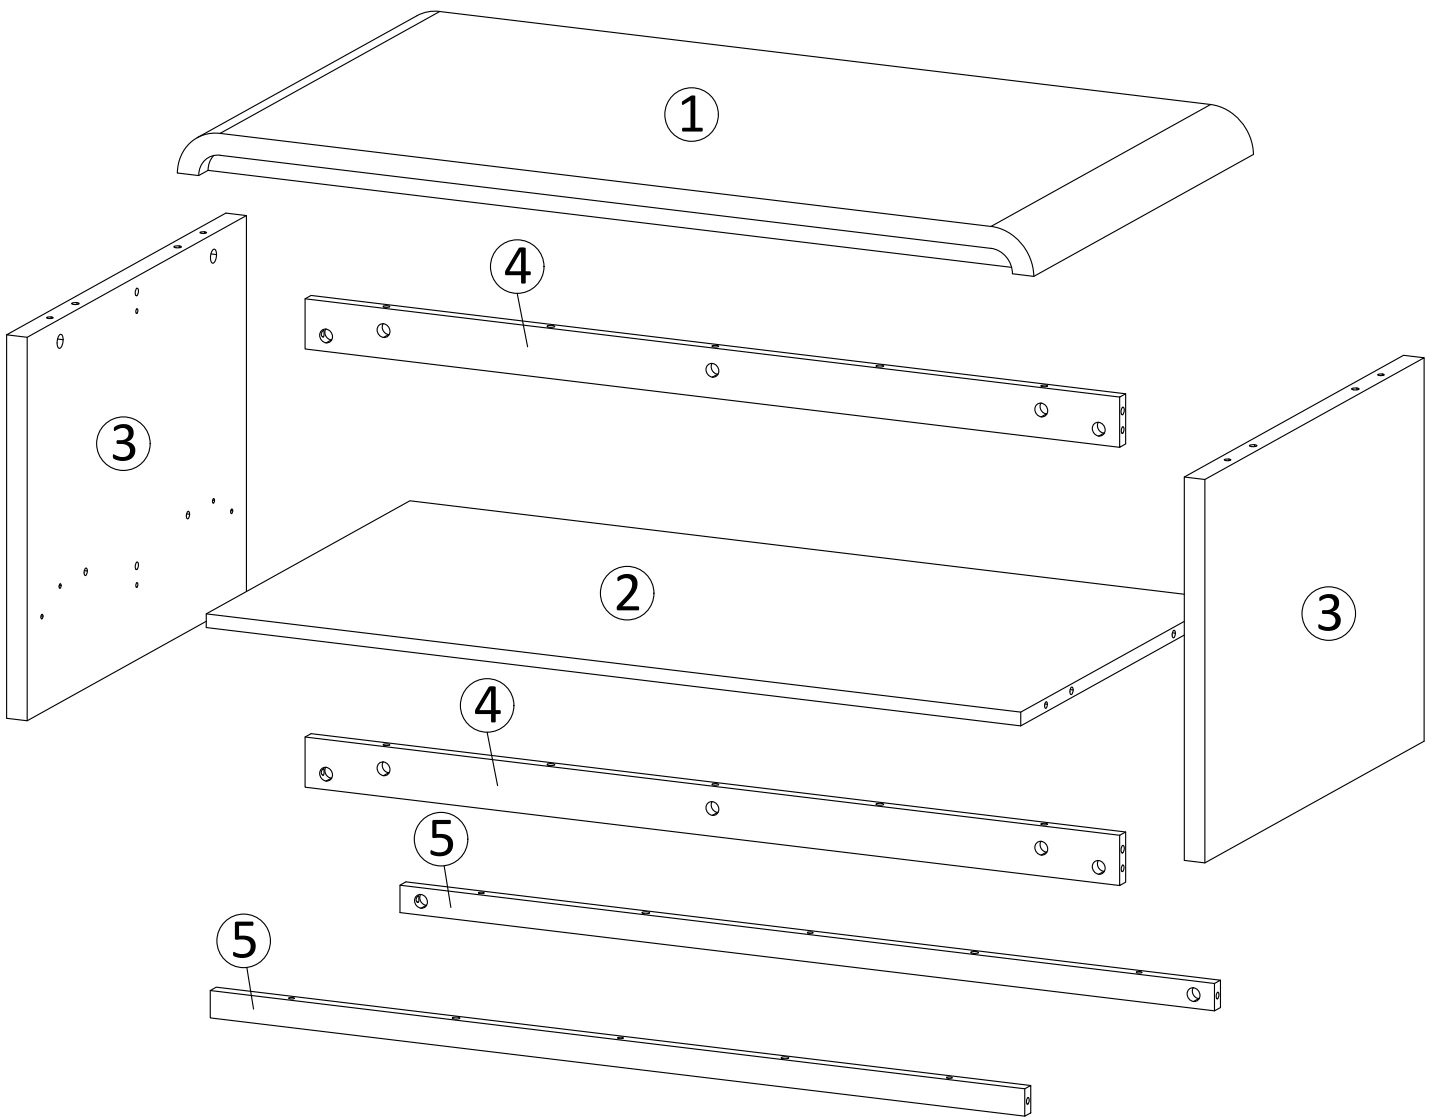



# ASSEMBLY INSTRUCTION








Hardware


A x 22  
  
Ø 6 x 35 mm


B x 22  
  
Ø 15 mm


C x 20  
  
Ø 8 x 30 mm

D x 6  
  
5.5 x 35 mm



E x 4  


F x 4  
  
Ø 15 mm






G x 5  
  
Ø 15 mm

 SET-UP TIME : 45 MINUTES



 NUMBER OF PERSONS : 02

 TOOLS : 


# 1

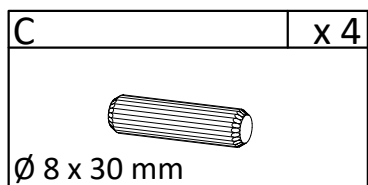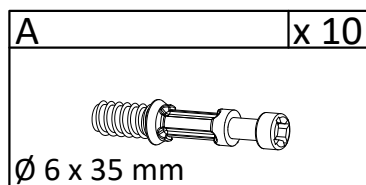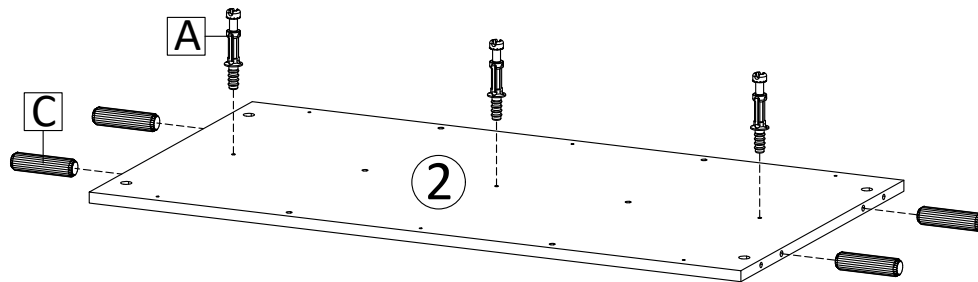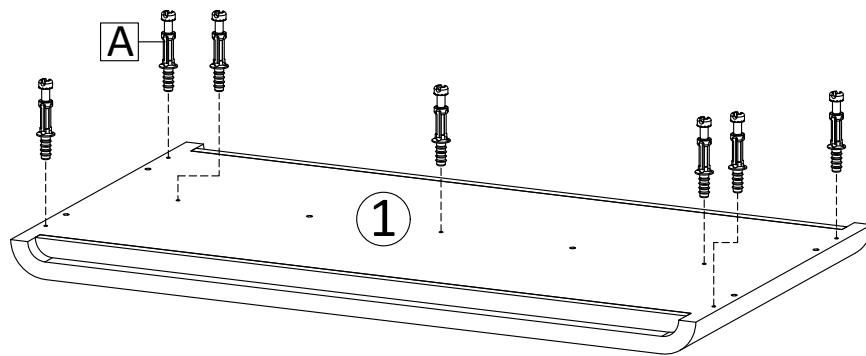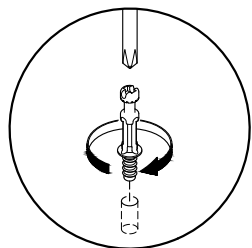

# 2


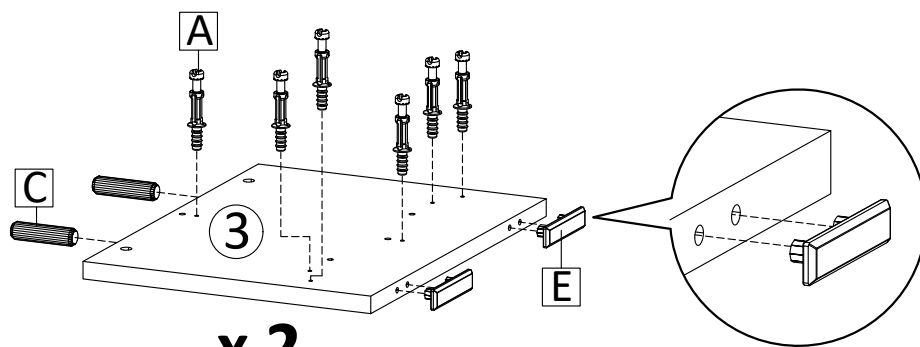
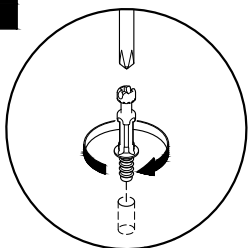


**x 2**



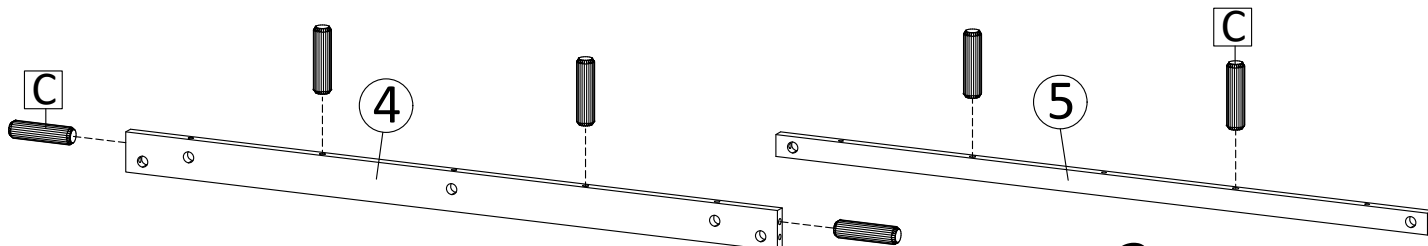


**x 2**




**x 2**

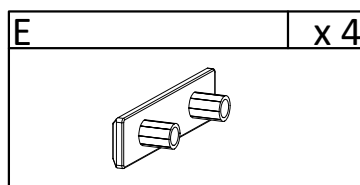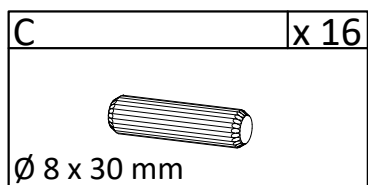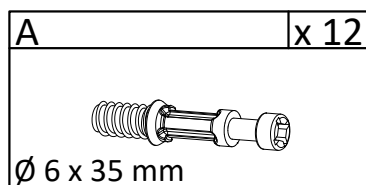



3

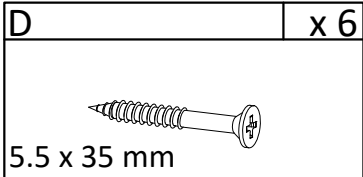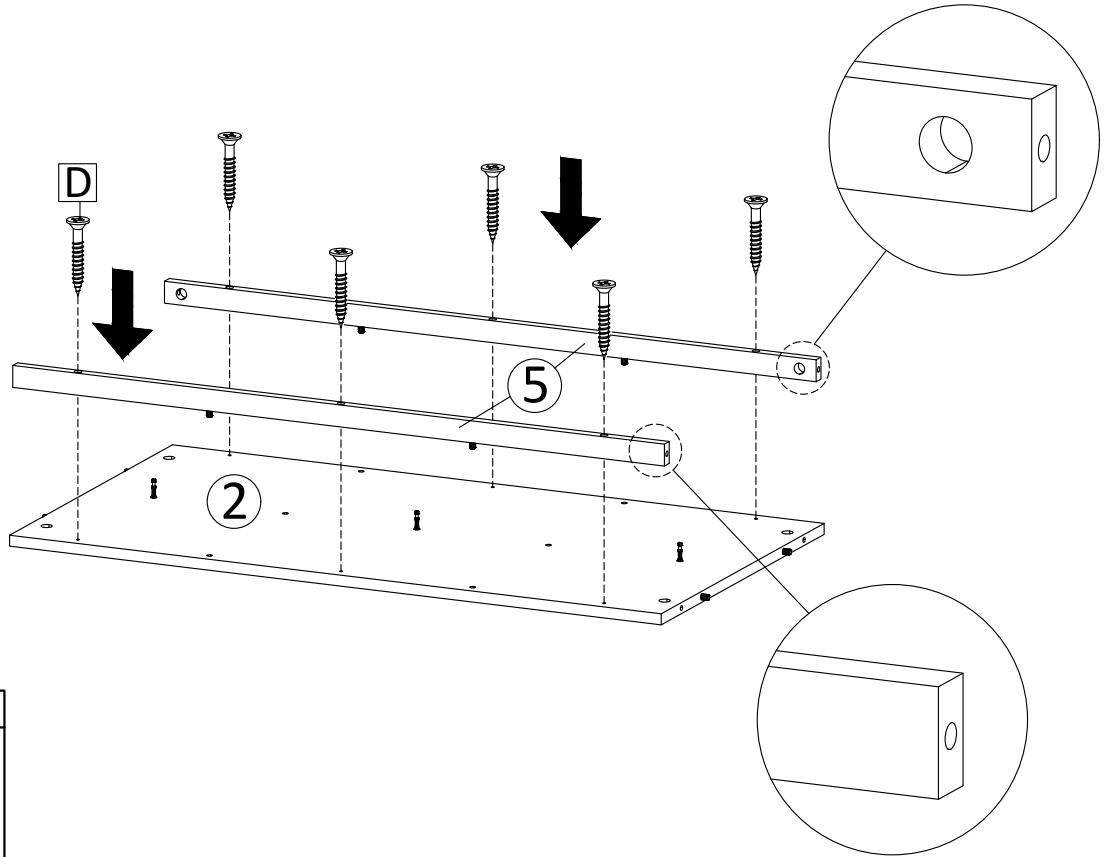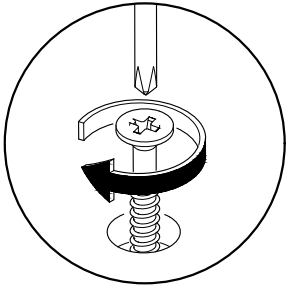


4

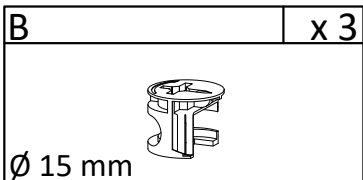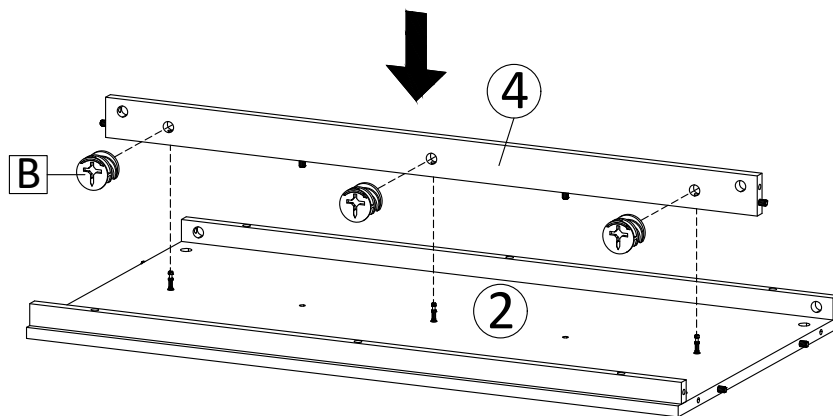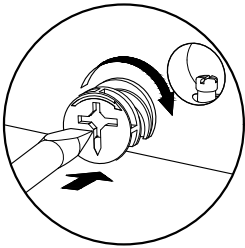

5

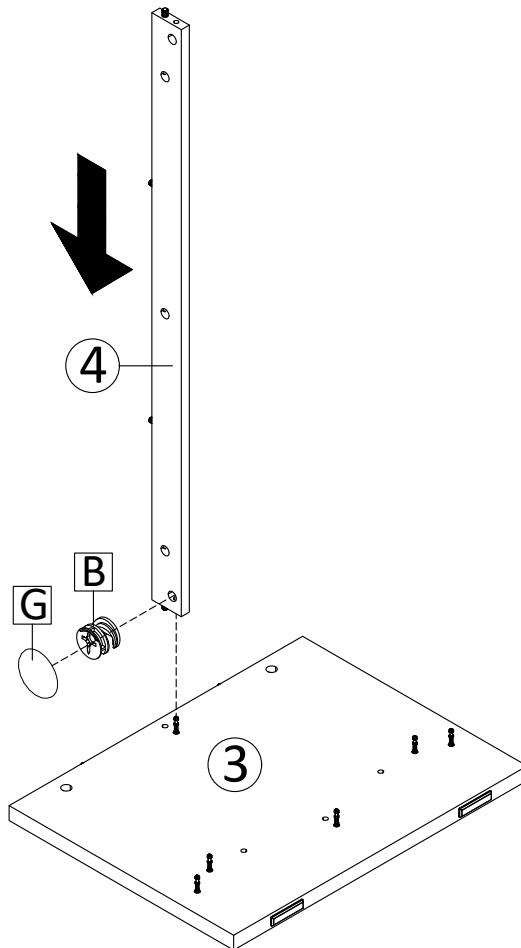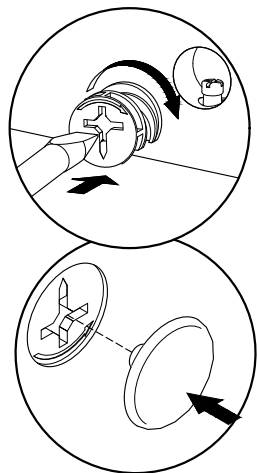

B x 1





Ø 15 mm

G x 1



Ø 15 mm

6

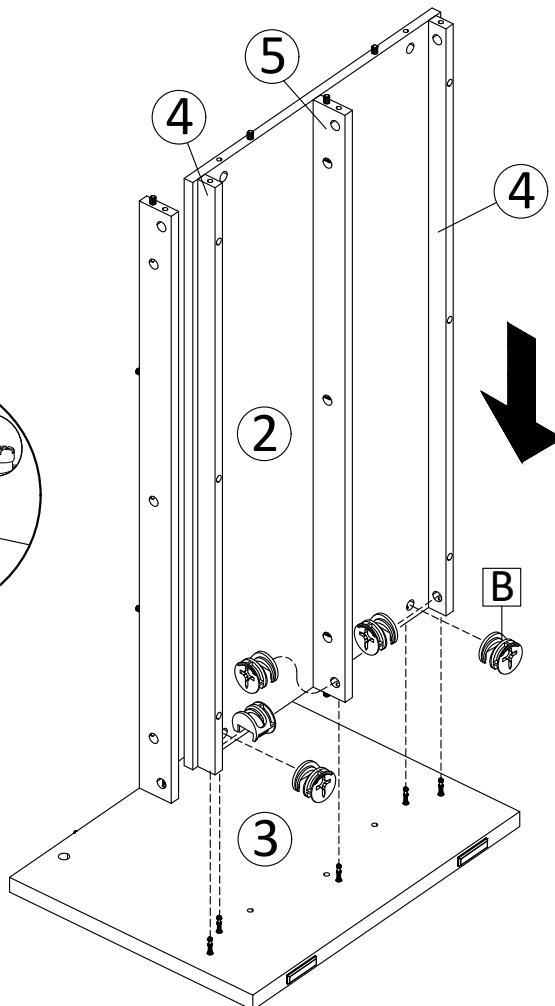
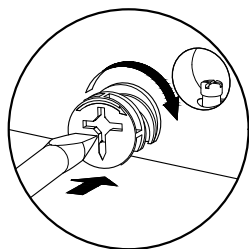


B x 5



Ø 15 mm



7

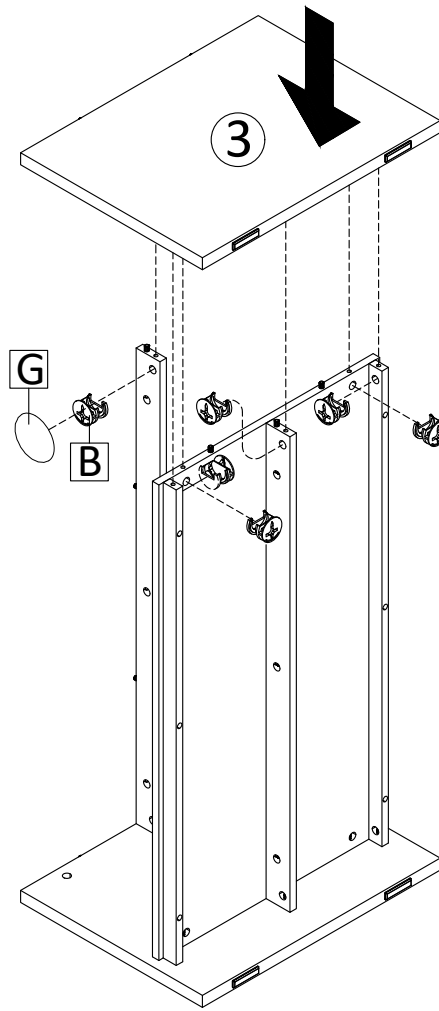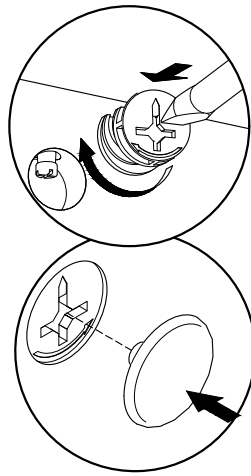

B	x 6
$\varnothing$ 15 mm	

G	x 1
$\varnothing$ 15 mm	

8

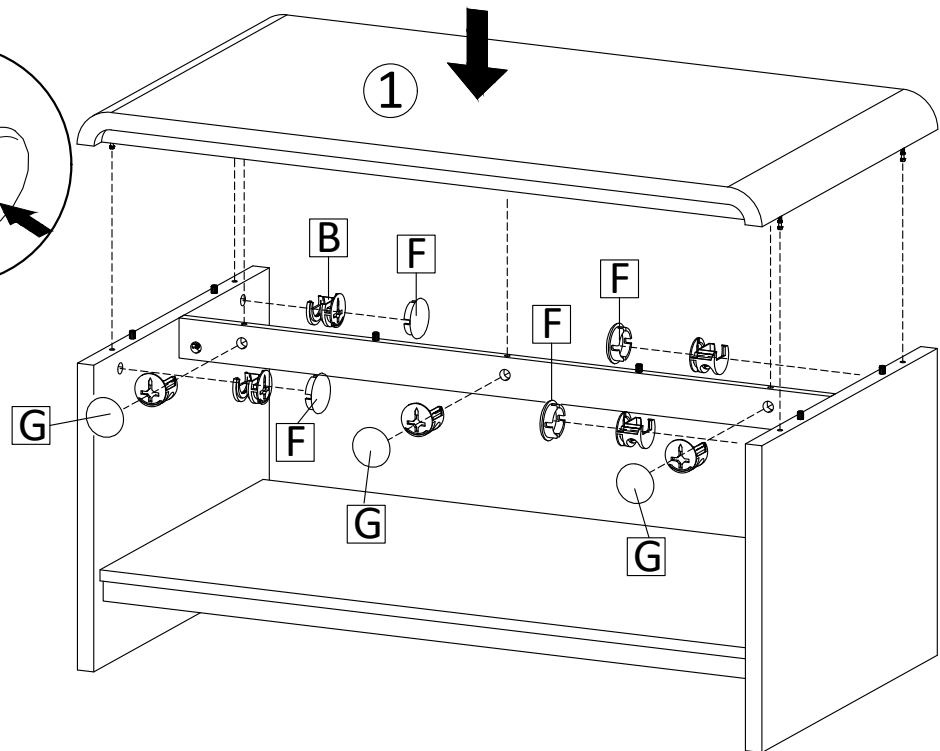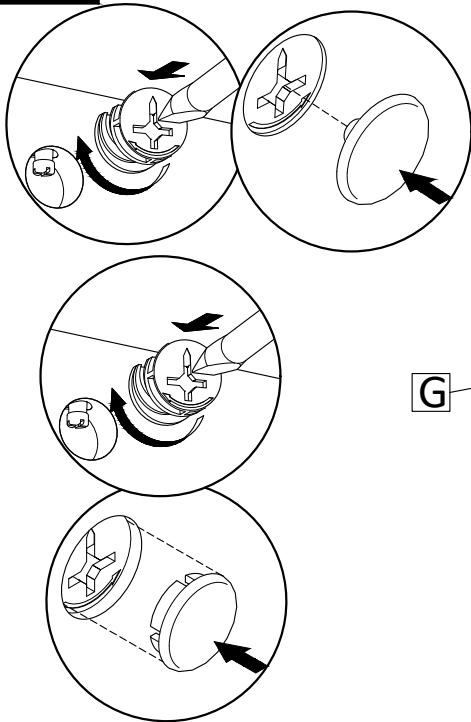

B	x 7
$\varnothing$ 15 mm	

F	x 4
$\varnothing$ 15 mm	

G	x 3
$\varnothing$ 15 mm	

