

Assembly Instructions

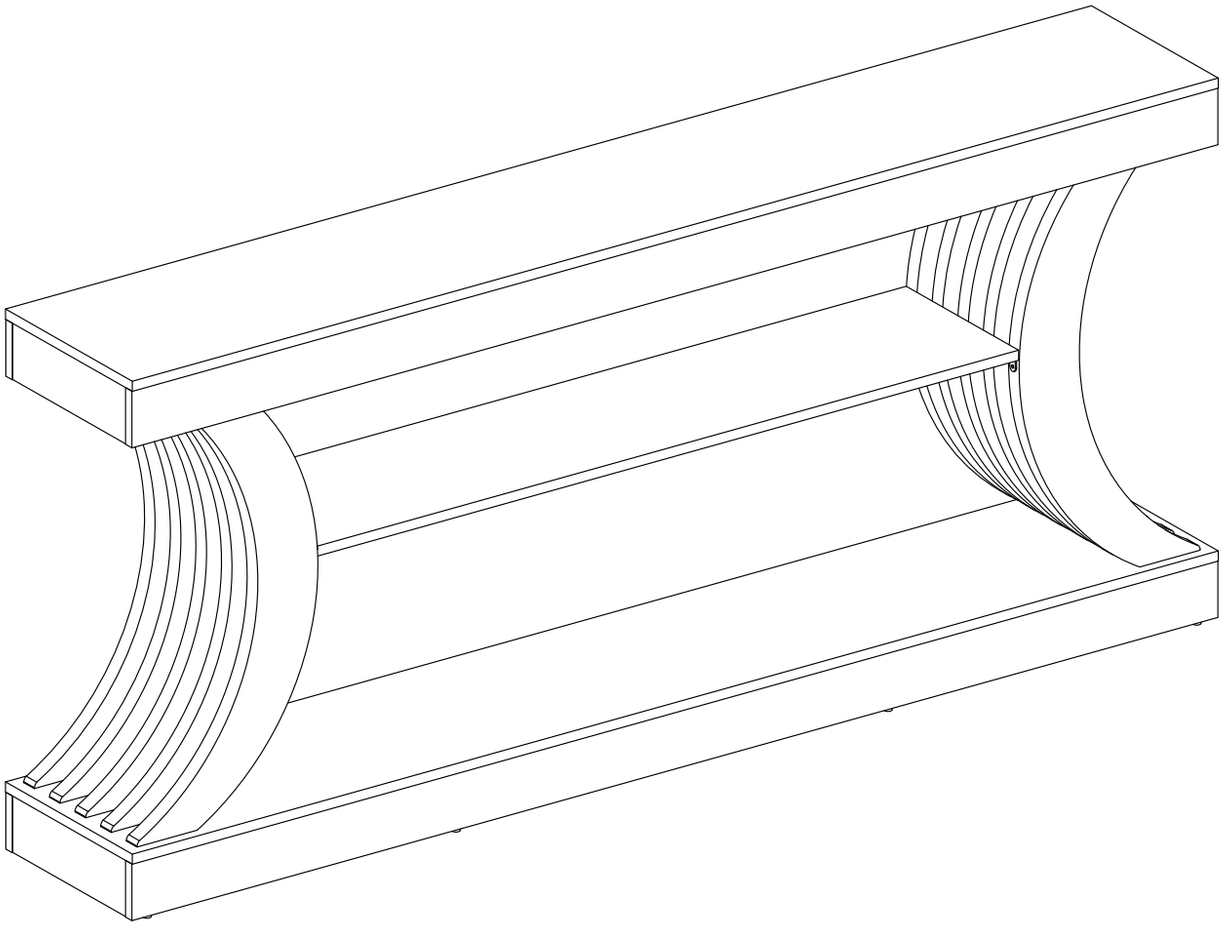

Console Table | Model No. **HOGA-JW1141**

Contact Us


We're here to help you.

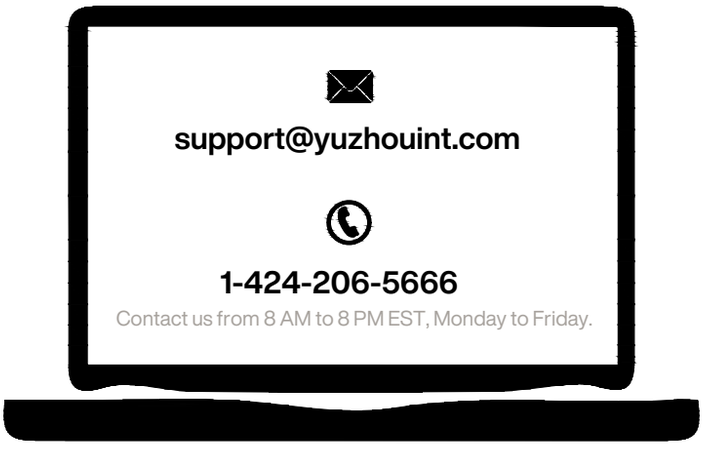



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips


1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

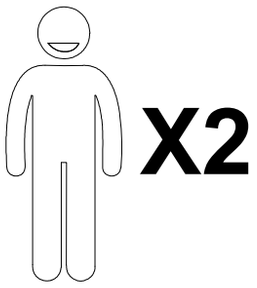


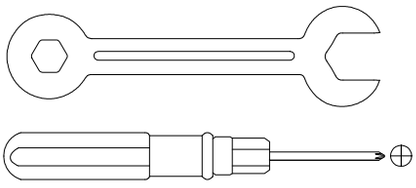

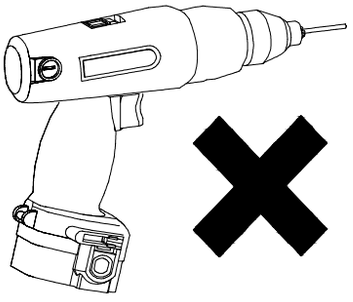


We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

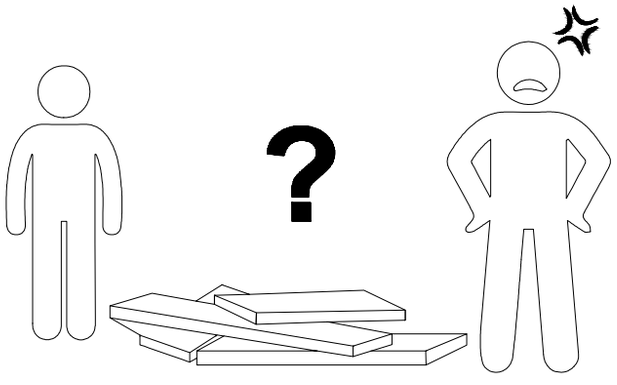


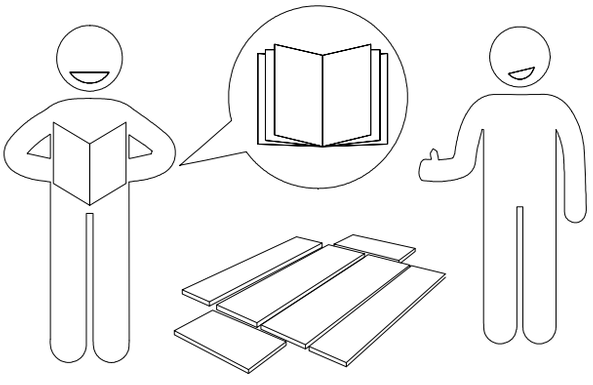


Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

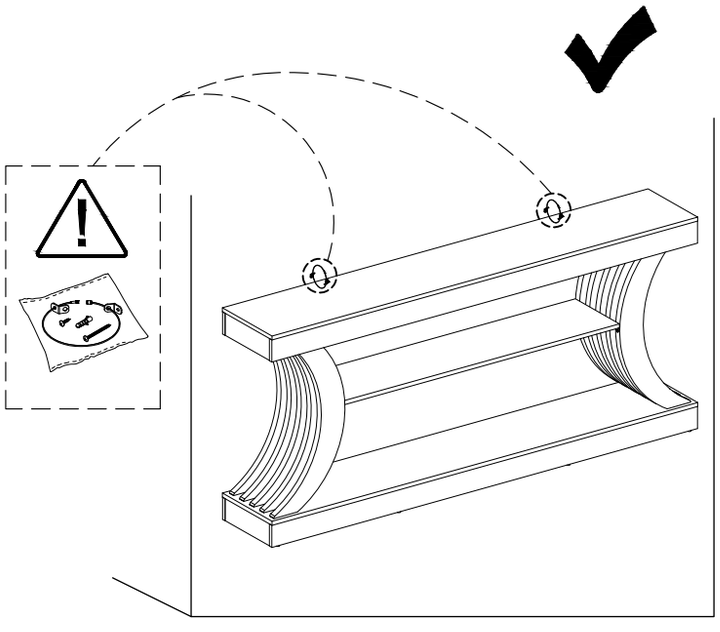



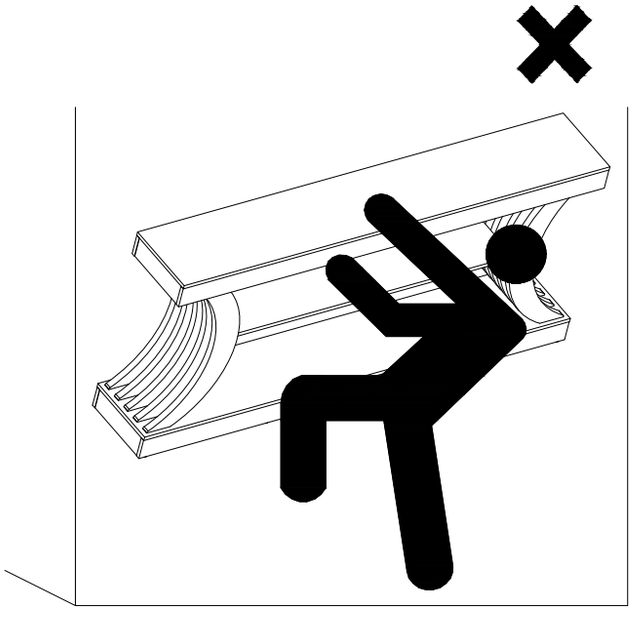


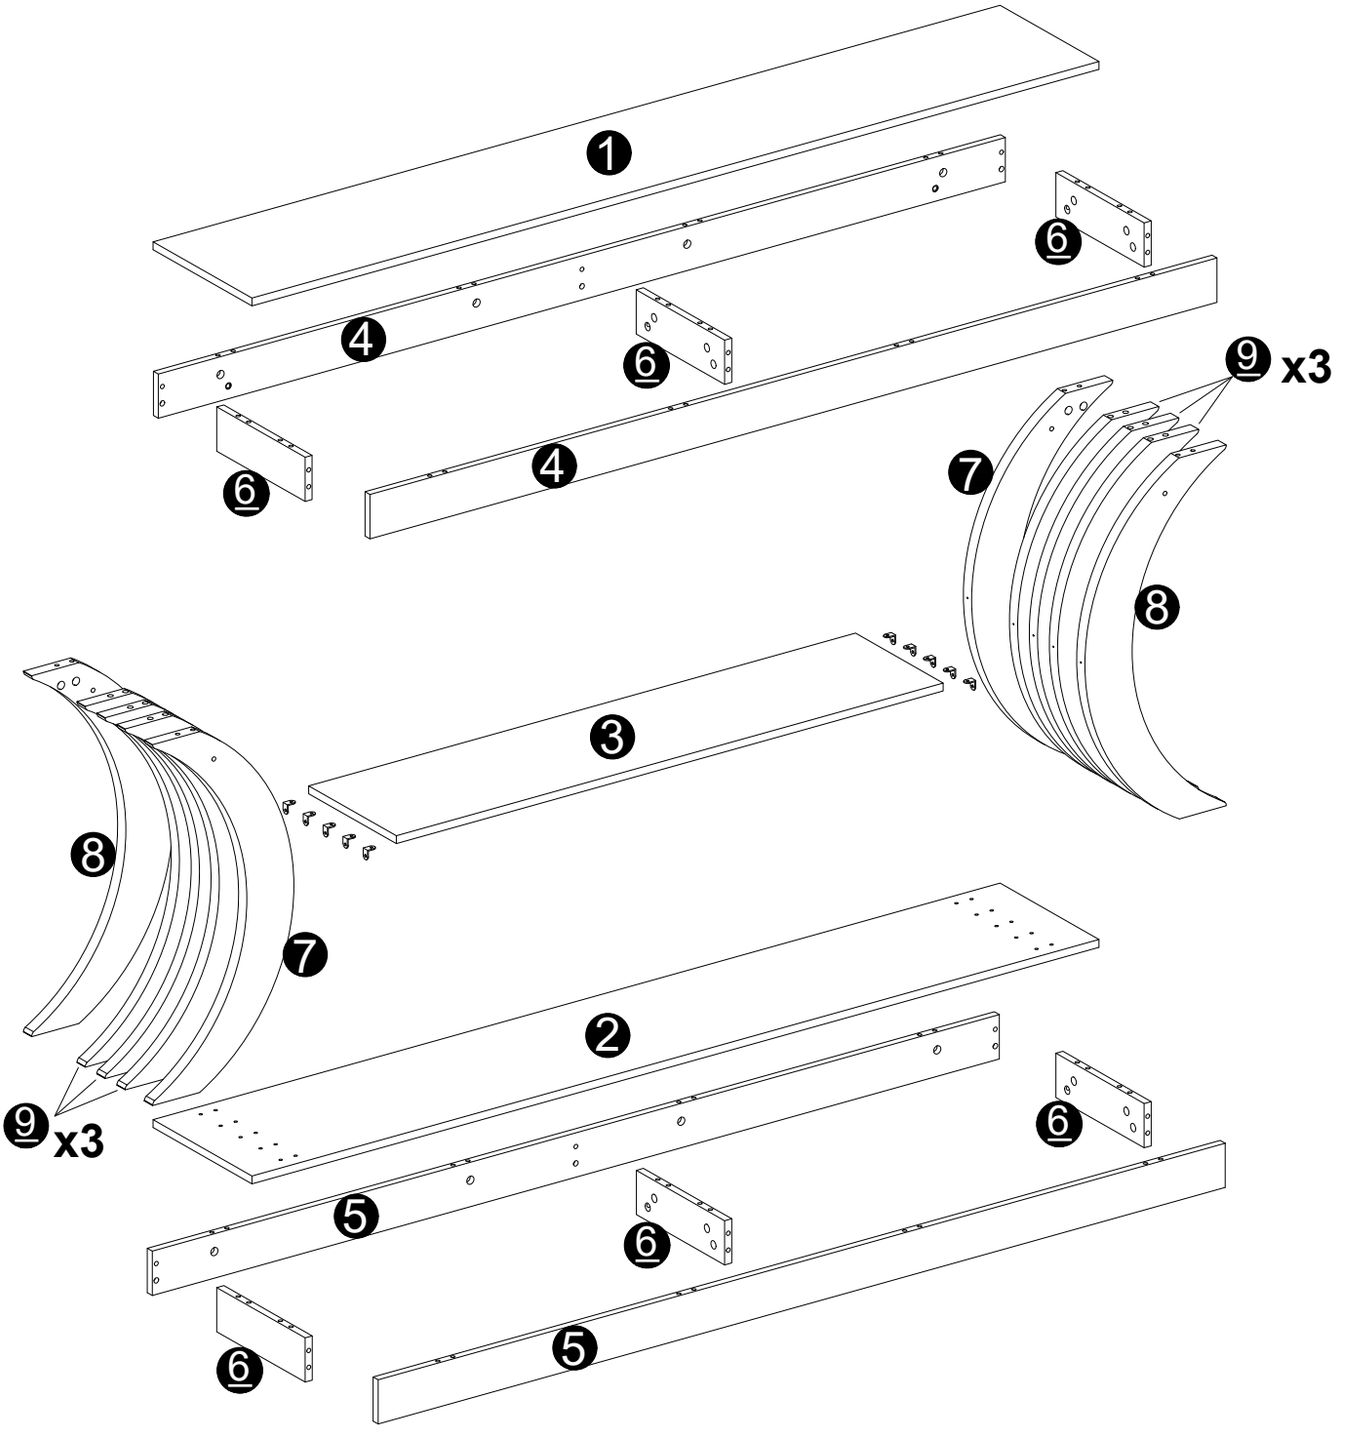





⚠ Caution






Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

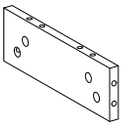❶  1 pc	❷  1 pc	❸  1 pc	❹  2 pcs	❺  2 pcs
❻  6 pcs	❼  2 pcs	❽  2 pcs	❾  6 pcs	


Hardware List

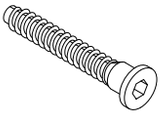A	B	C	D	E	F
 Ø6x40mm	 Ø15x12mm	 Ø8x30mm	 Ø10x30mm	 Ø5x40mm	 M6x35mm
49 pcs	49 pcs	41 pcs	13 pcs	21 pcs	5 pcs

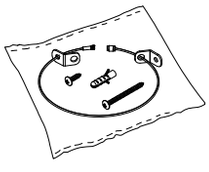
G	H	I	J	K	L
 20x20x13mm	 Ø3.5x14mm	 M4x65mm	 M3x65mm	 Ø14x4mm	
11 pcs	21 pcs	1 pc	1 pc	9 pcs	2 pcs

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

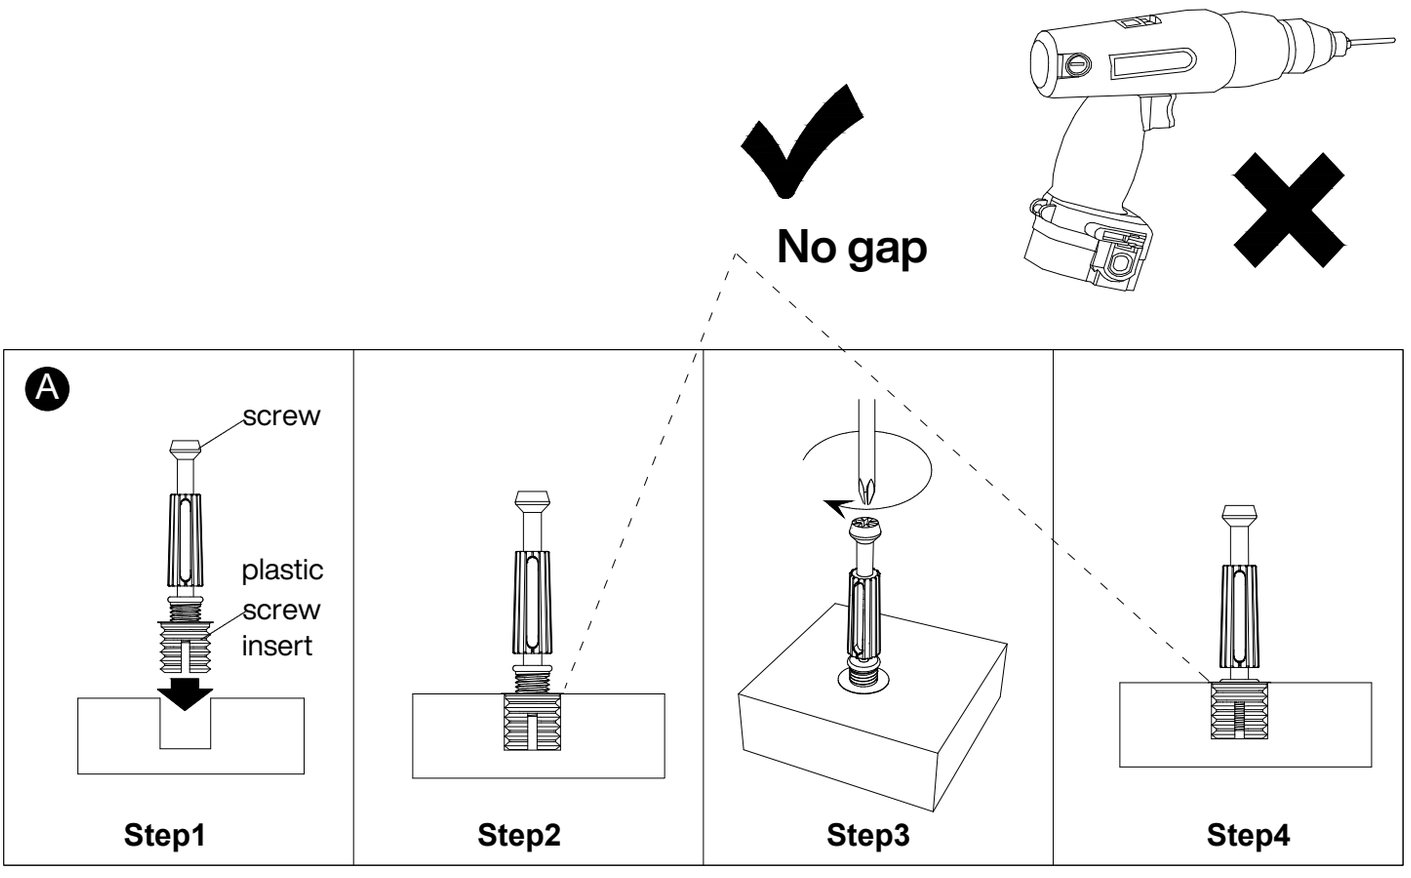



Screw the pin into the hole.Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

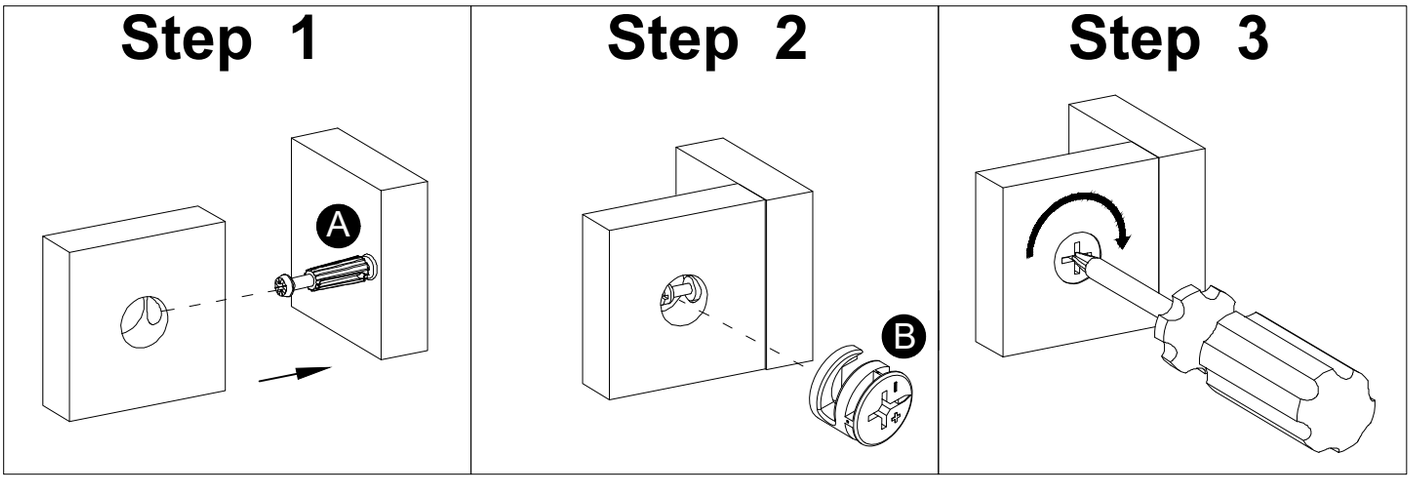


1

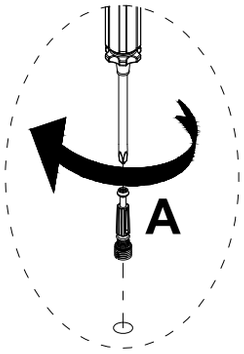


A

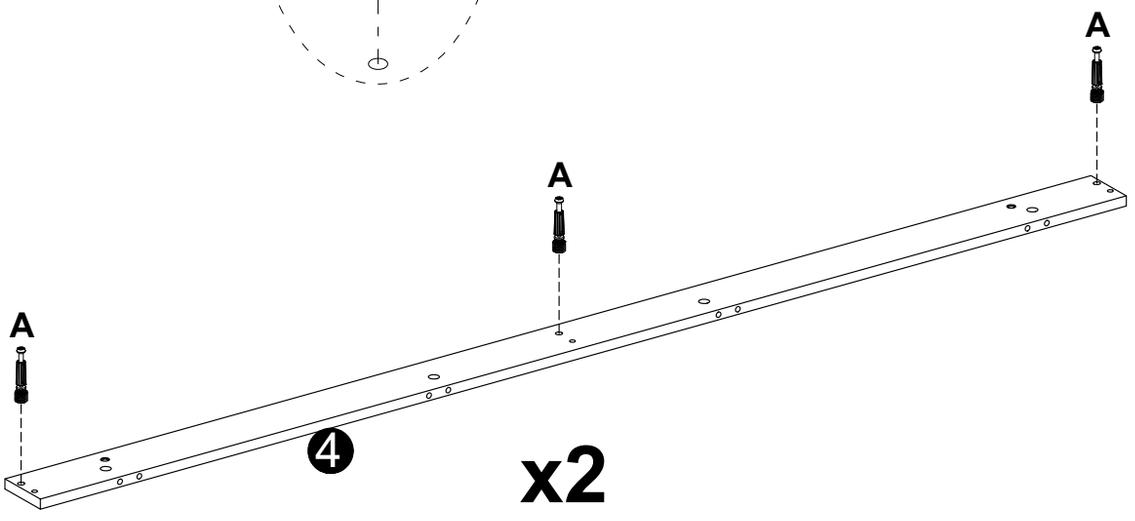Ø6x40mm
6 pcs

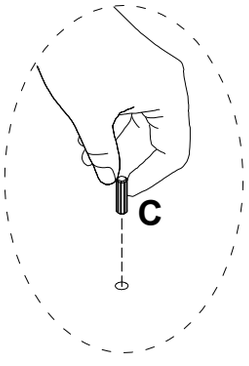


2

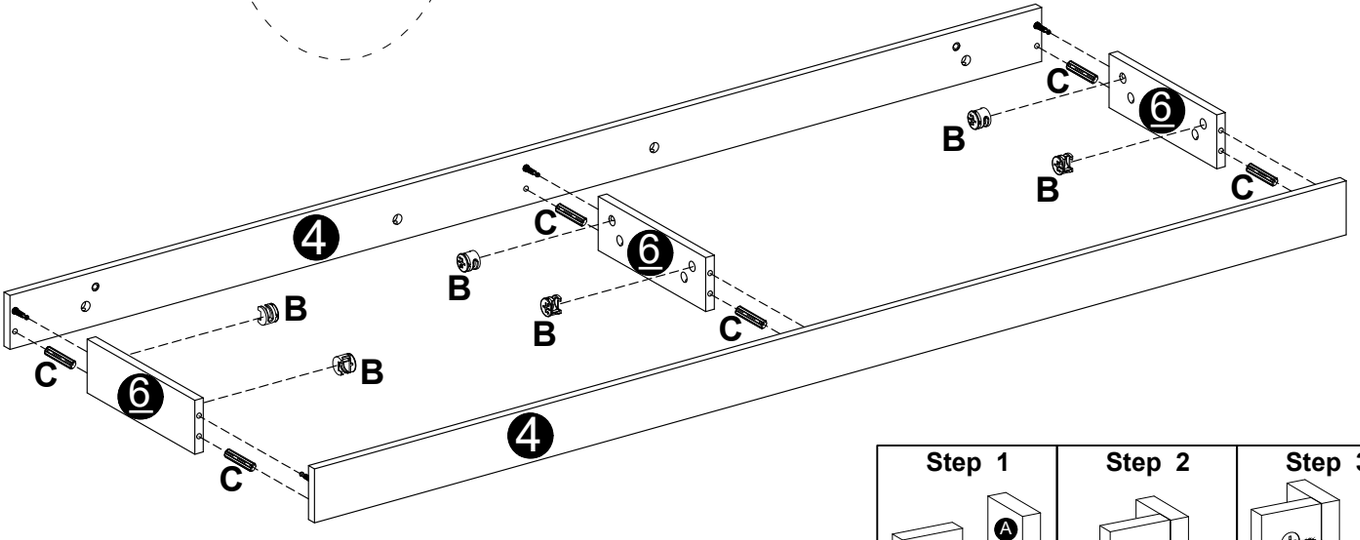



B	C
	
Ø15x12mm	Ø8x30mm
6 pcs	6 pcs




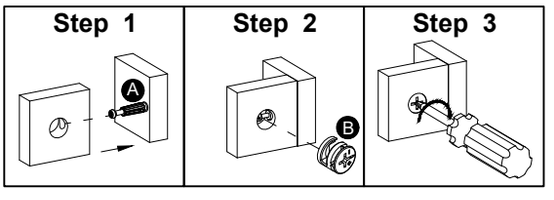


3

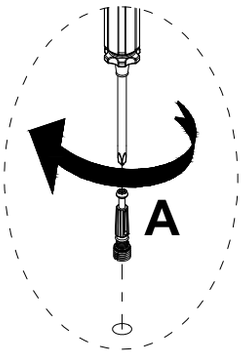



A

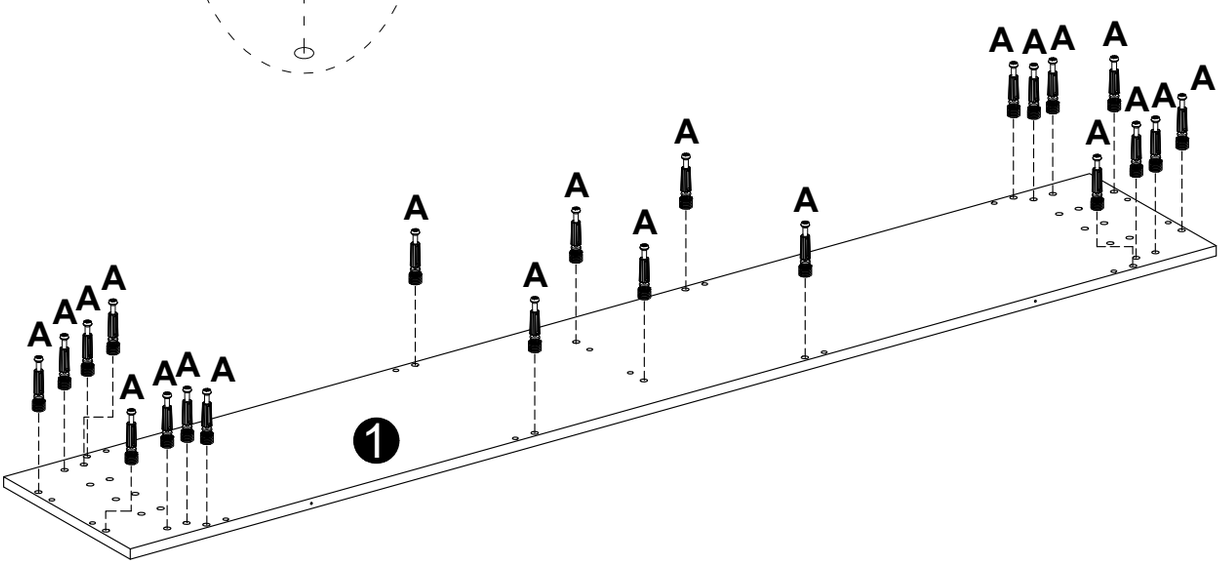Ø6x40mm
22 pcs


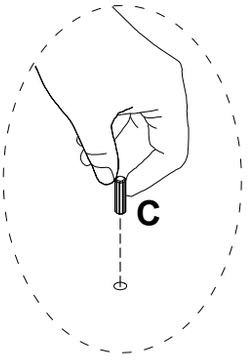


4




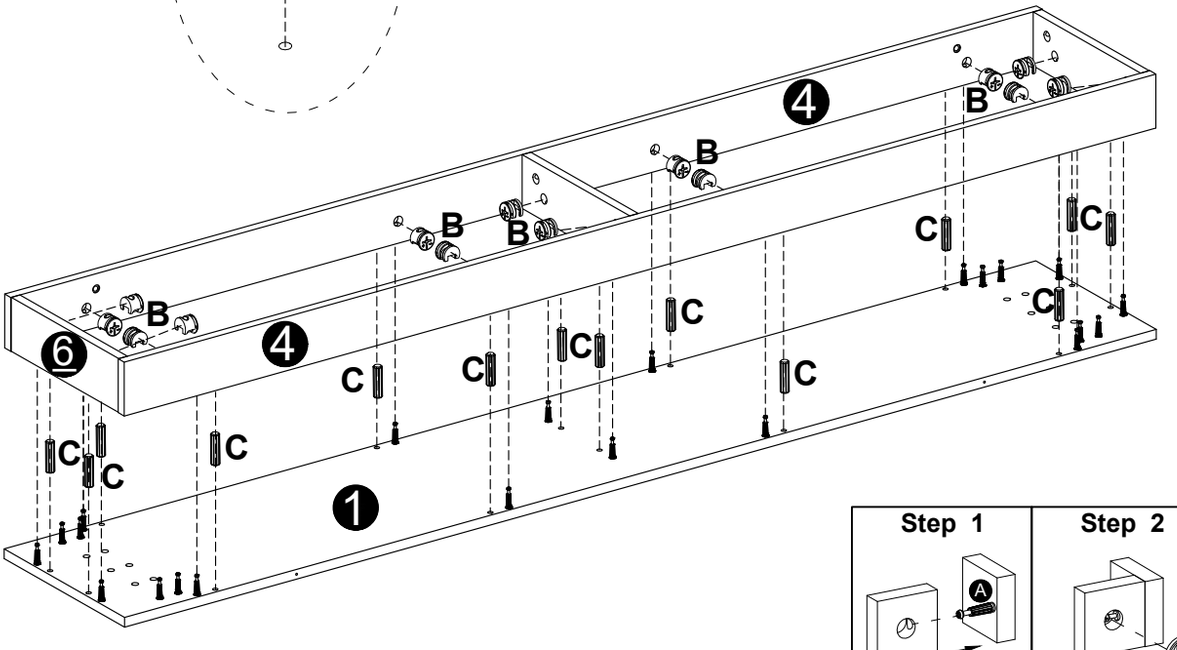B	C
	
Ø15x12mm	Ø8x30mm
14 pcs	14 pcs

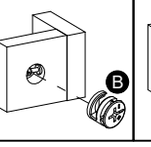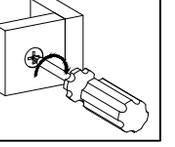


Step 1	Step 2	Step 3
		

5

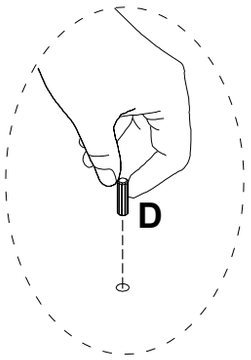


D

Ø10x30mm
12 pcs

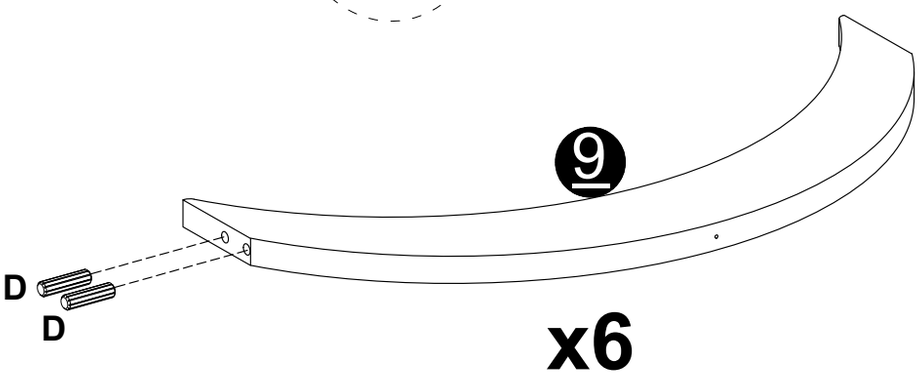


x6

6

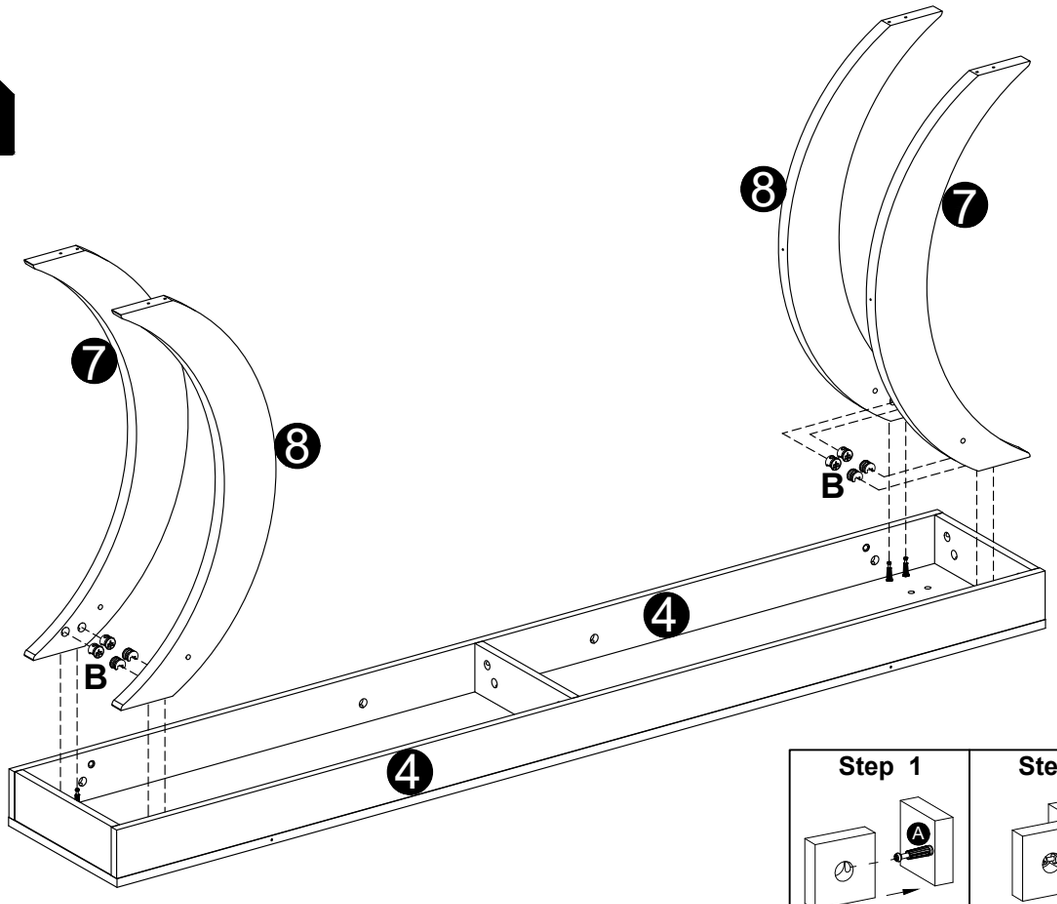



B

Ø15x12mm
8 pcs

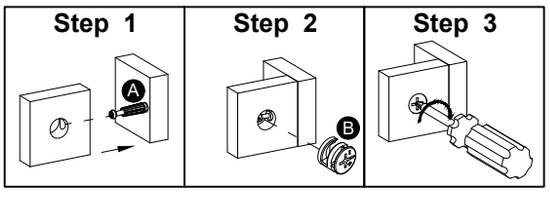


7

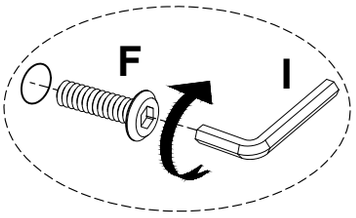


F	I
	
M6x35mm	M4x65mm
4 pcs	1 pc

screw down 100%




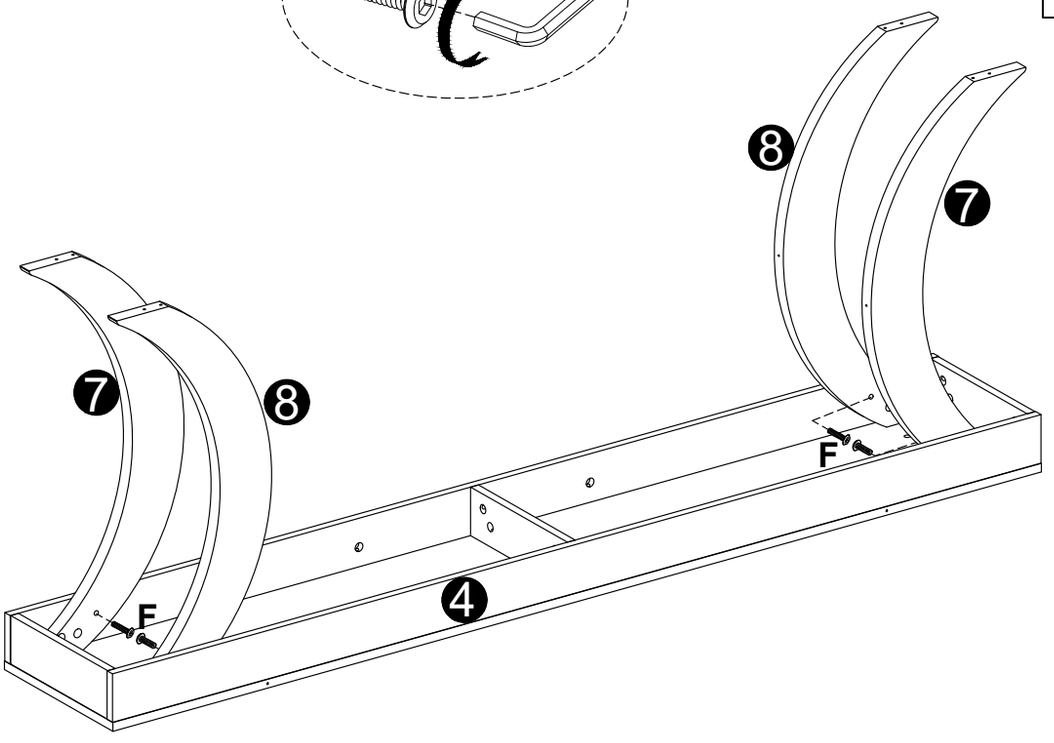



8

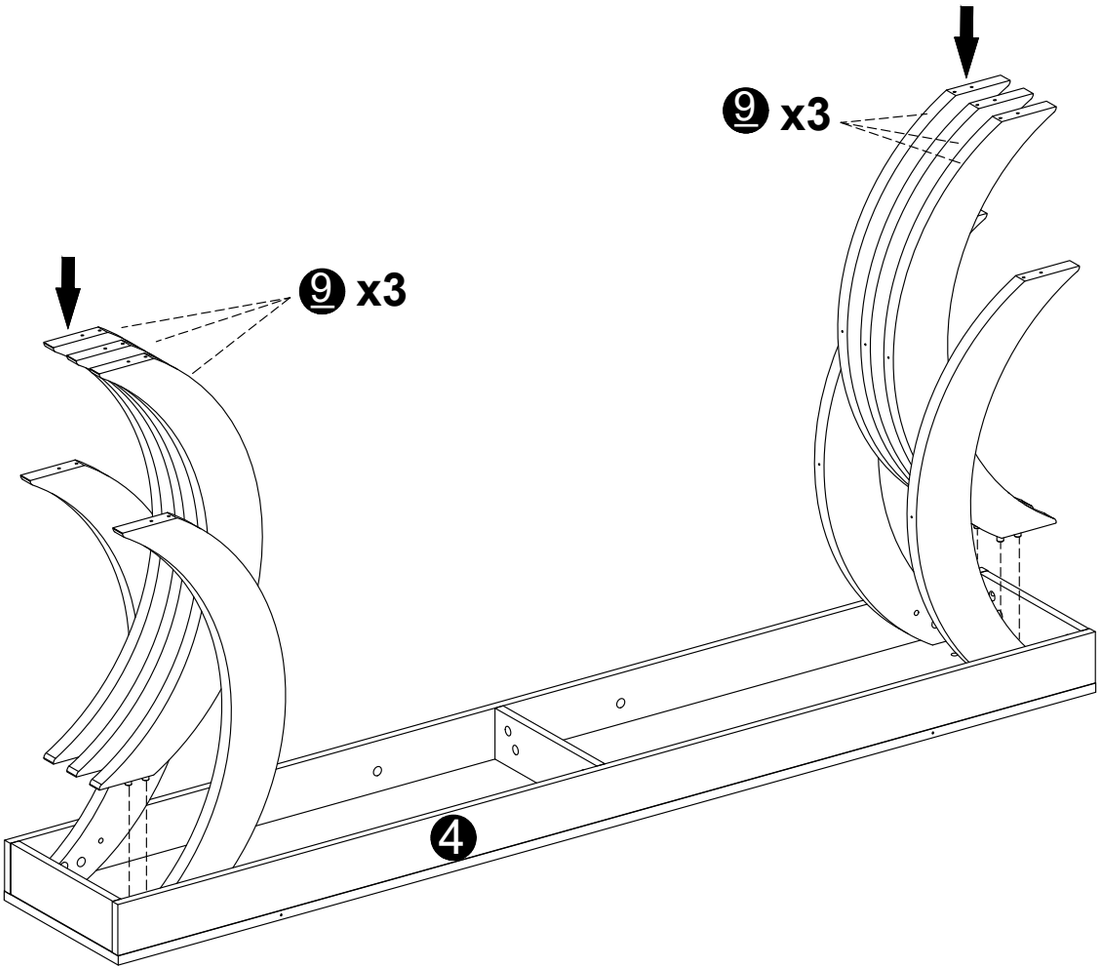


9

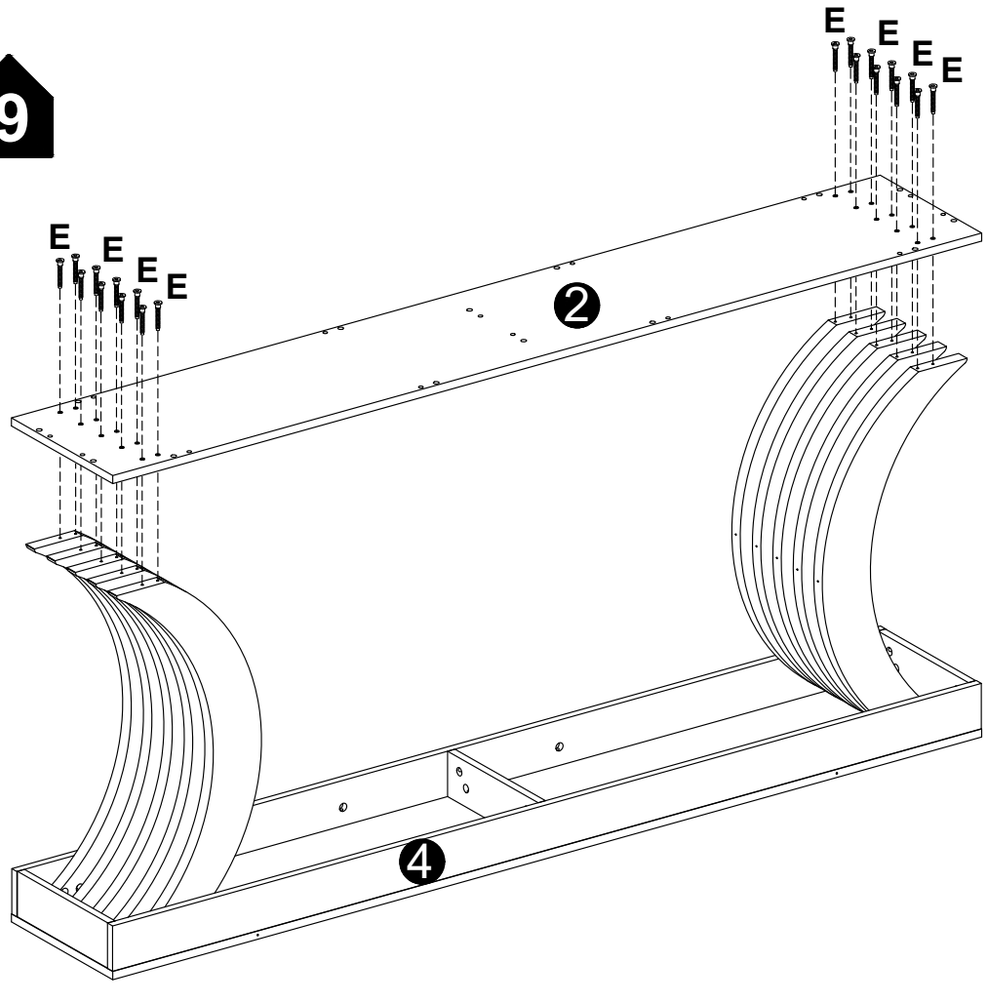


E	J
	
Ø5x40mm	M3x65mm
20 pcs	1 pc

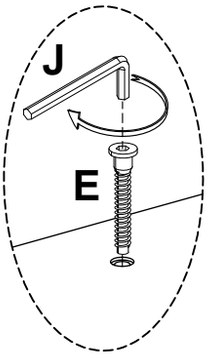


10

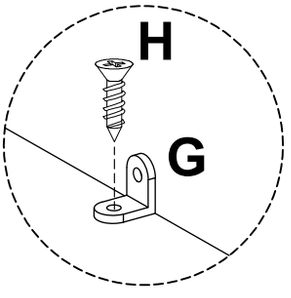

G	H
	
20x20x13mm	Ø3.5x14mm
10 pcs	10 pcs

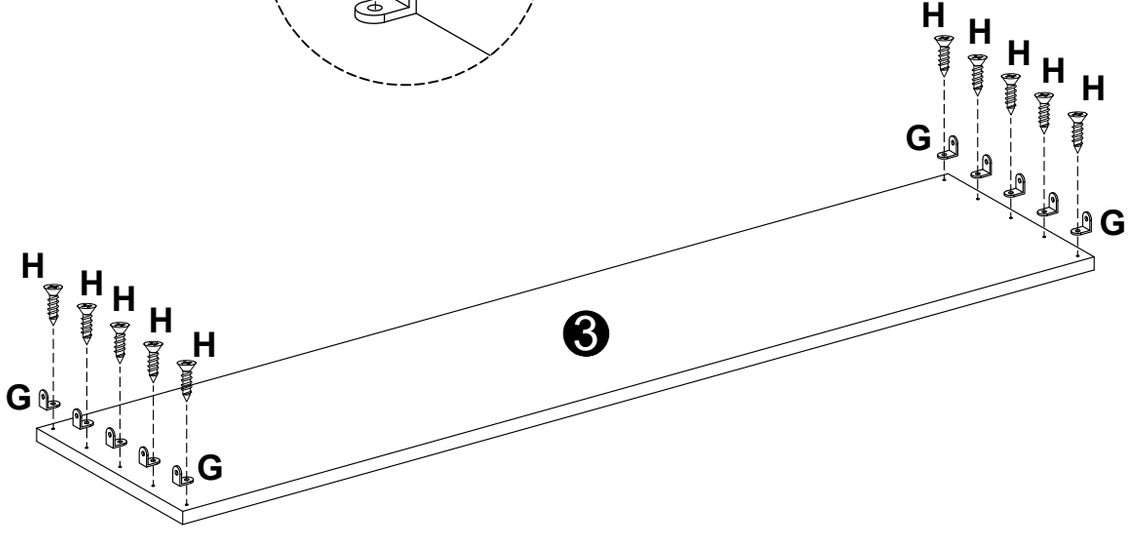


11

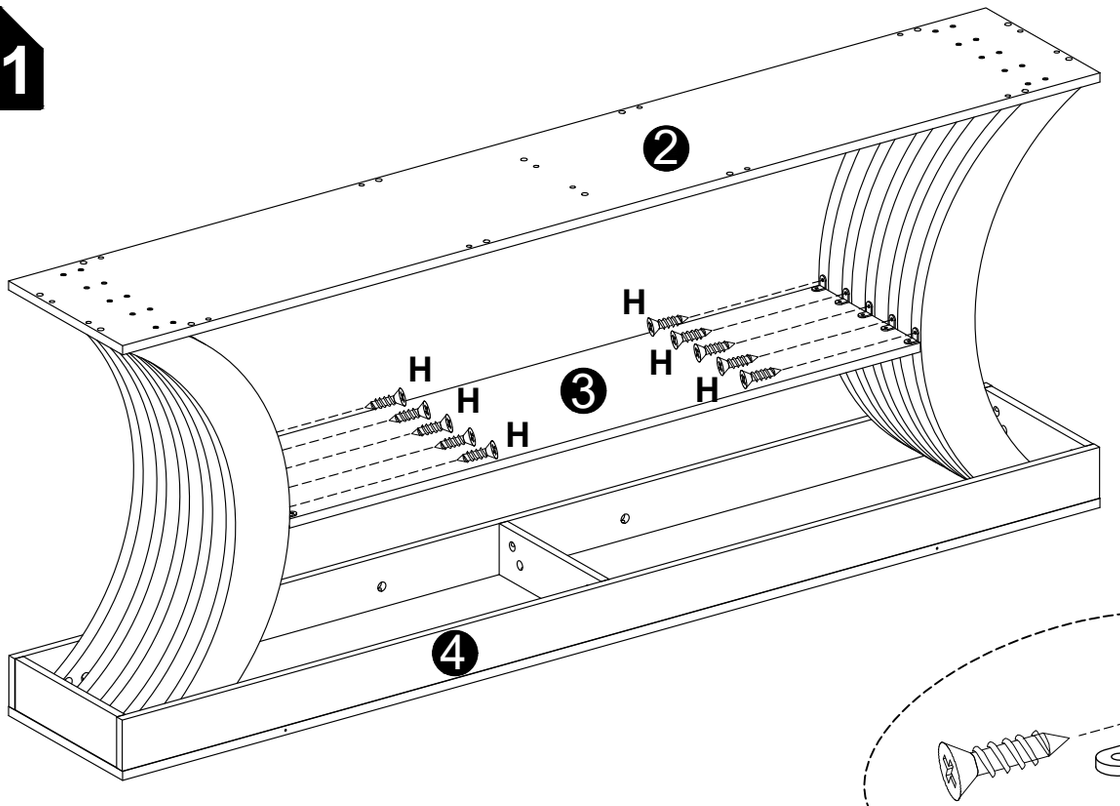



H


Ø3.5x14mm
10 pcs

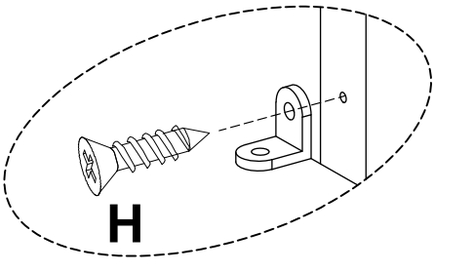


12

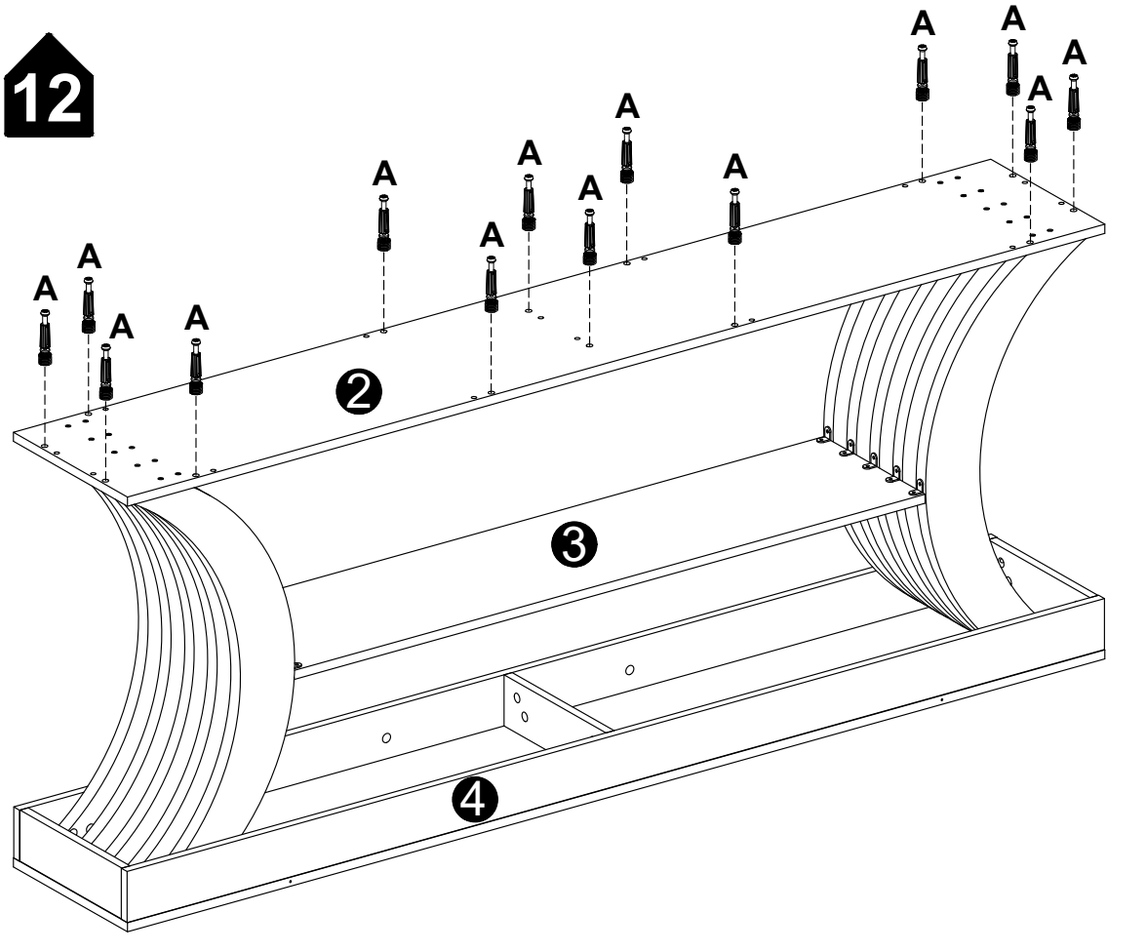



A

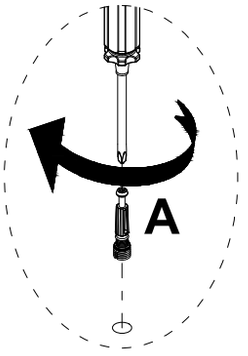Ø6x40mm
14 pcs

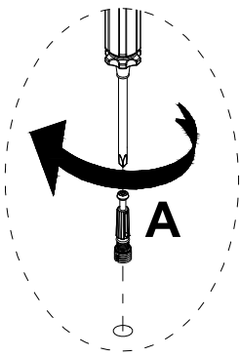


13



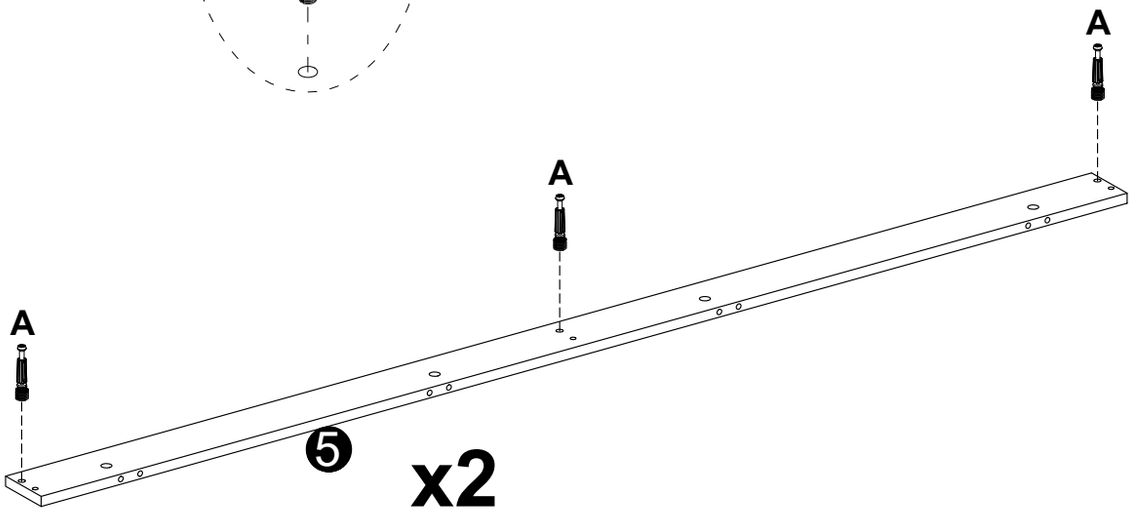
A

Ø6x40mm
6 pcs



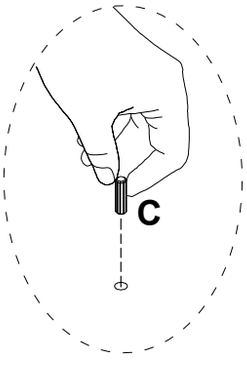


14

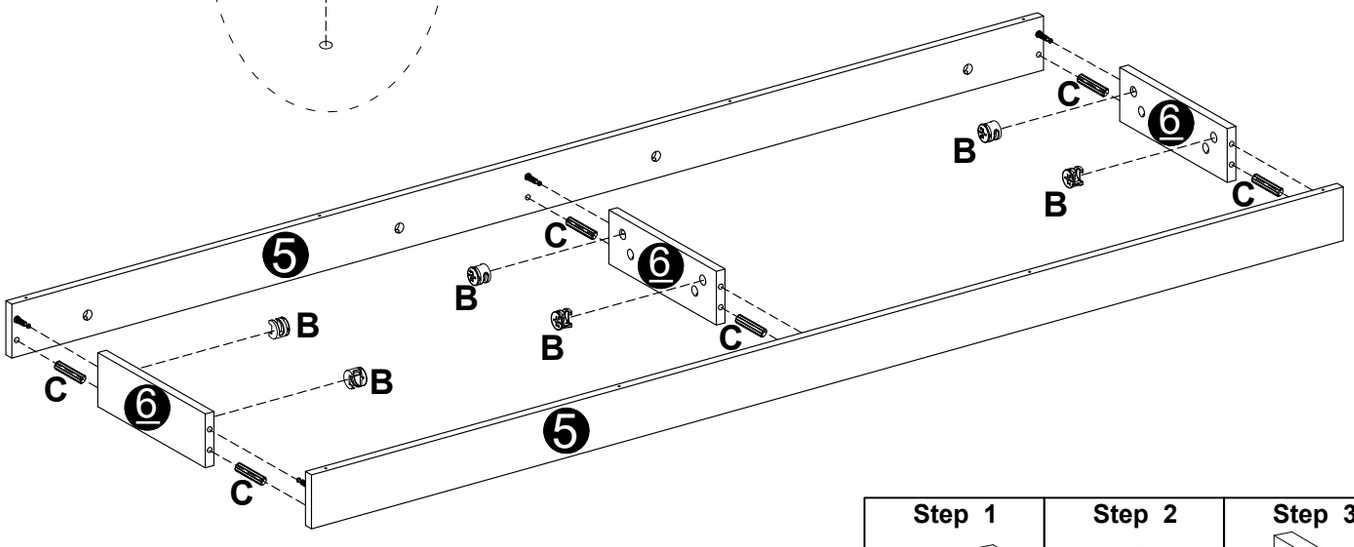


B	C
	
Ø15x12mm	Ø8x30mm
6 pcs	6 pcs

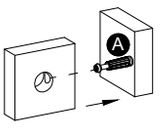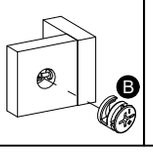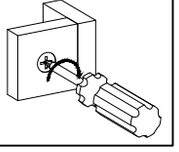



Step 1	Step 2	Step 3
		

15

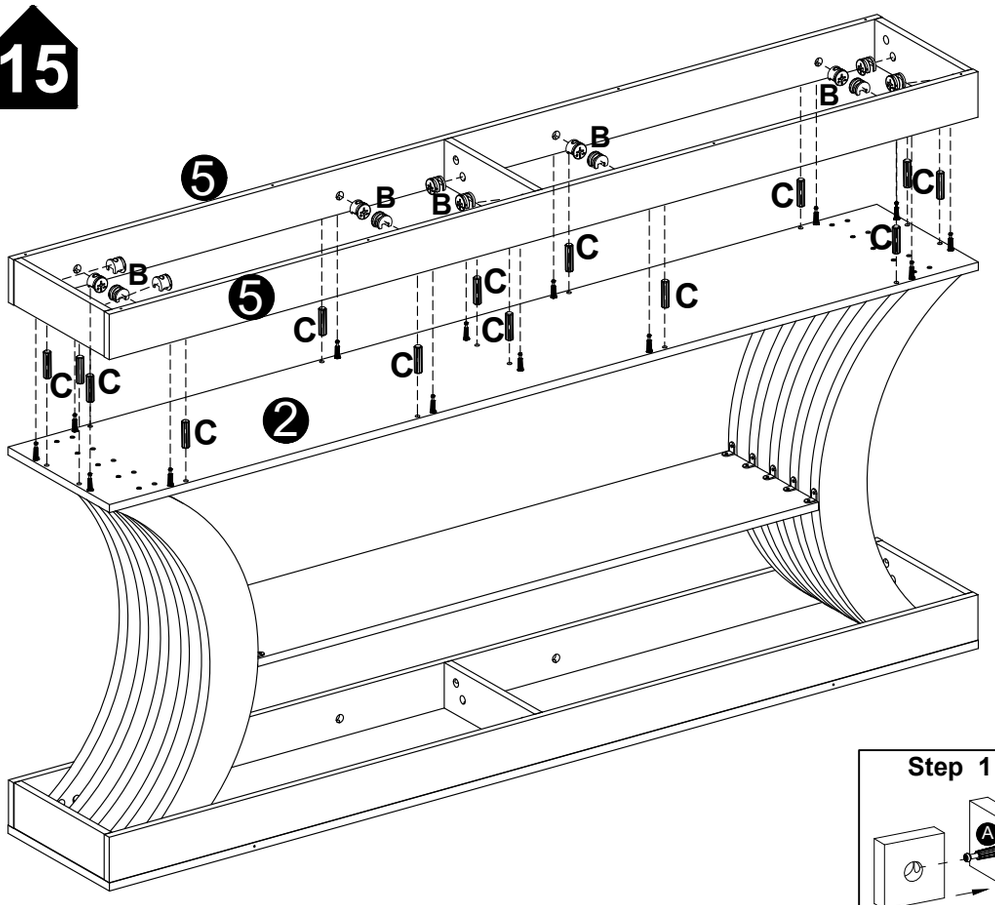


B	C
	
Ø15x12mm	Ø8x30mm
14 pcs	14 pcs

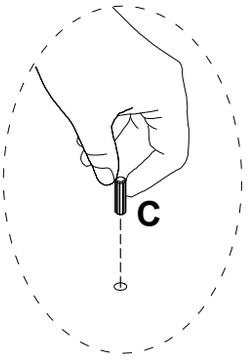

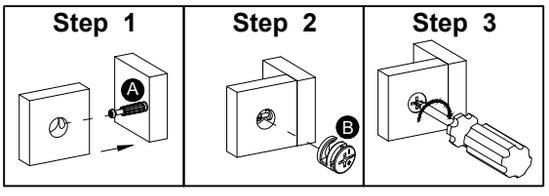

16

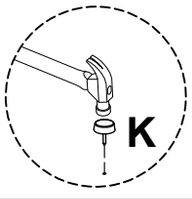


⚠ Caution! Tap lightly

K

Ø14x4mm
8 pcs


17

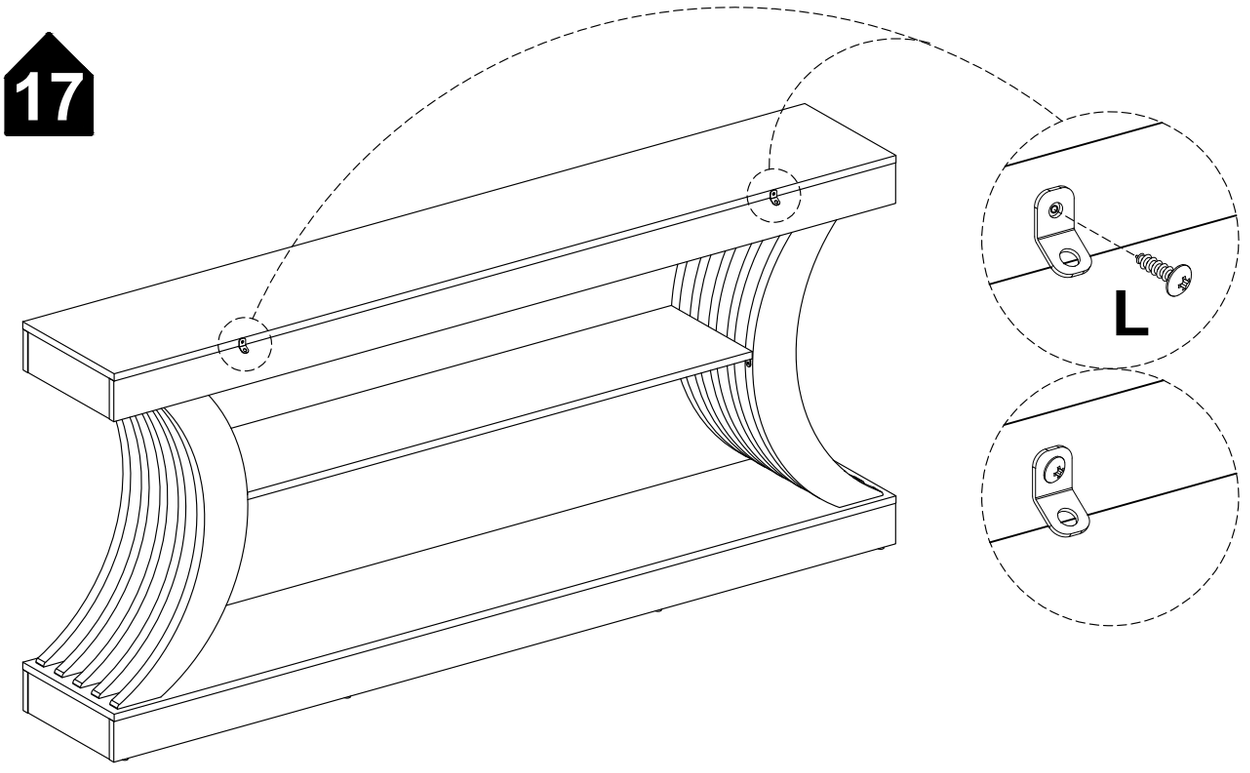

L



2 pcs

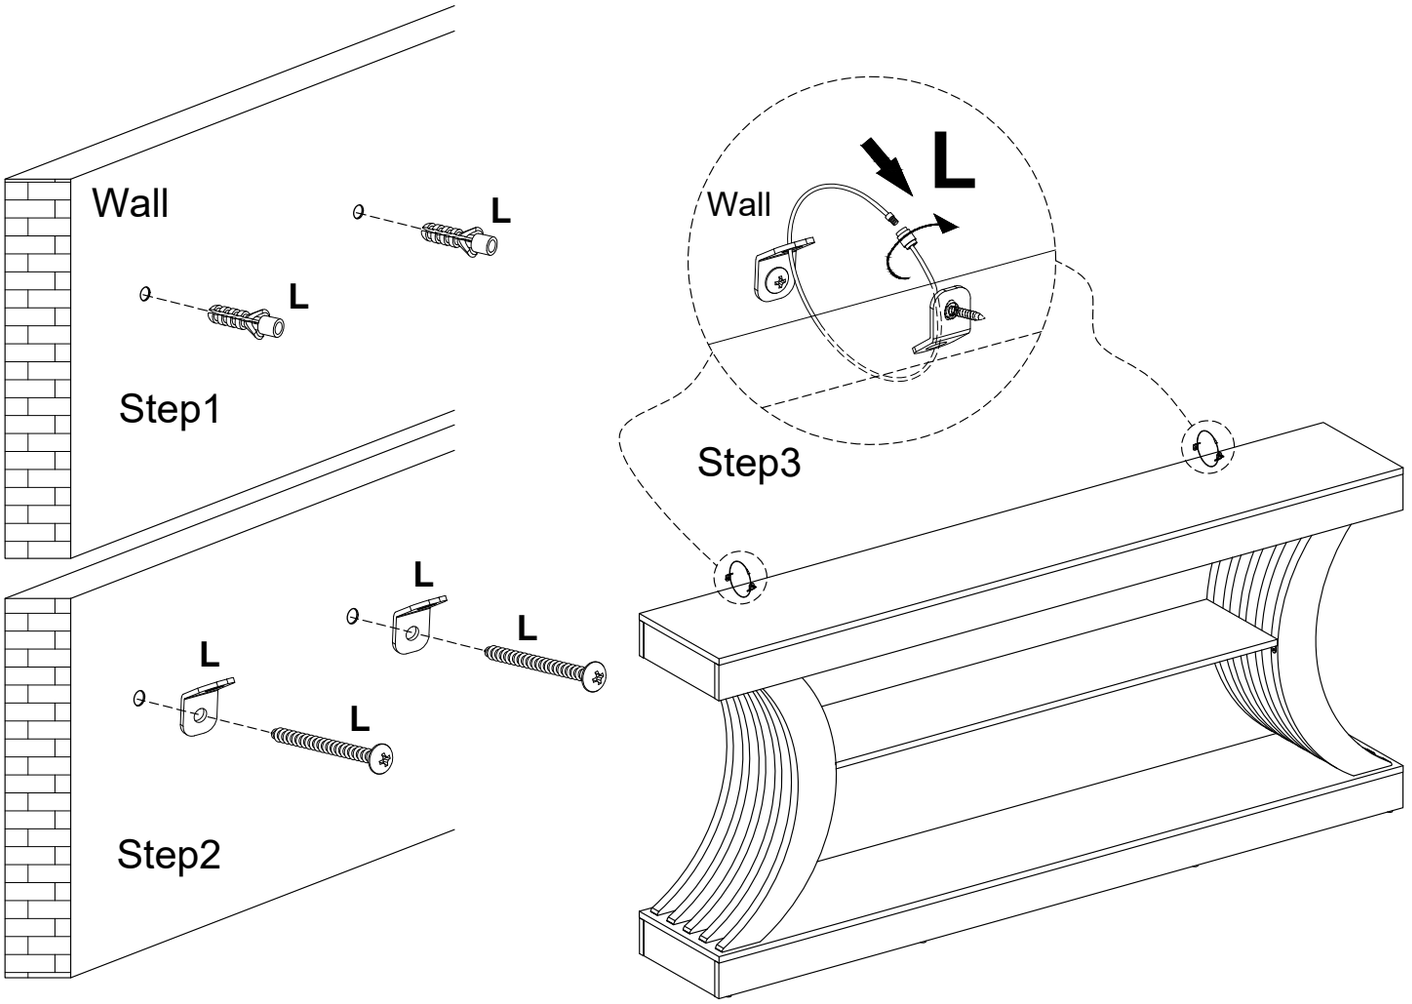

Thank you for your support!

