




ALUMINUM SOFA SET INSTALLATION MANUAL

Corner Sofa

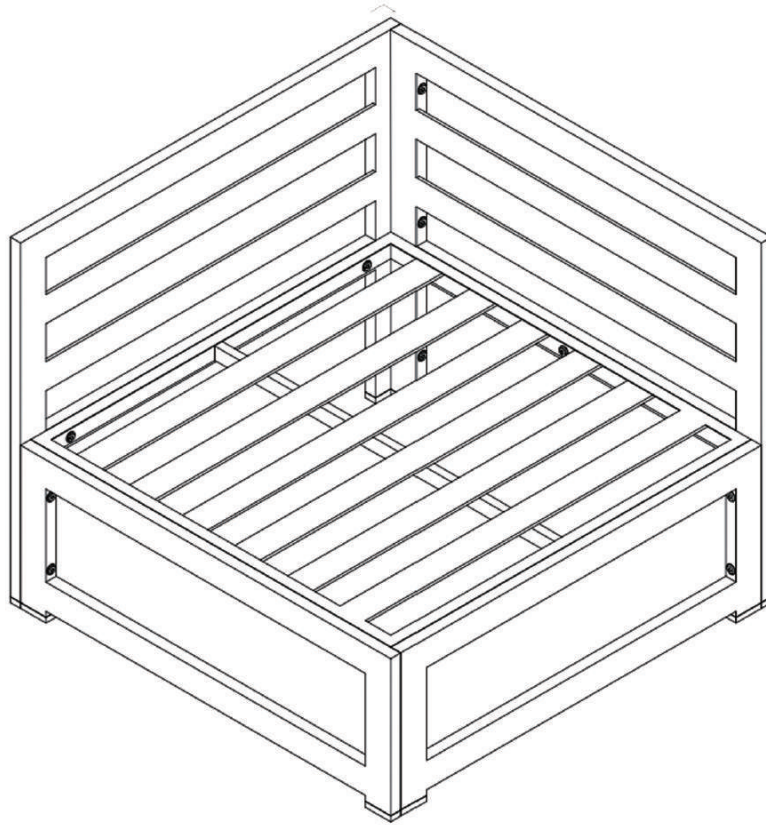

READ BEFORE INSTALLATION

1. If you encounter any problems, such as missing accessories or damaged parts, please contact us and send us pictures in time (email: jm@nicesoulfurniture.com), our after-sales team will reply you within 24 hours.
2. 2 persons needed for assembly.
3. Using an electric drill in slow mode, Our allen wrench is preferred.
4. DO NOT tighten the screws completely until align all the screws with the holes.

Back cushion NOTE

1. The back cushion is vacuumed sealed. After opening the bag, some time and fluffing will be required for the cushion to return to the original thickness.
2. Rub and flap the cushion to original thickness before use.

Hardware

1 SETS IN BOX



#1
6x30mm
x 6



#2
6x65mm
x 9




#3
Washer
x 15




#4
Allen key
x 1

Parts


1 SETS IN BOX

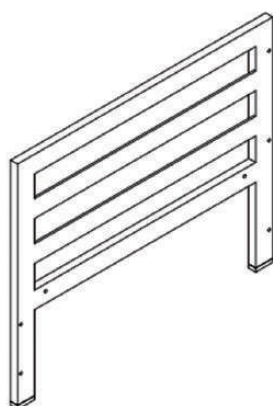


#A
75cm / 29.5in
x 1

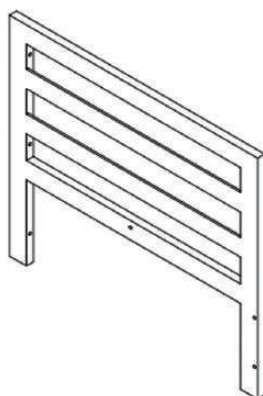


#B
73cm / 28.7in
x 1

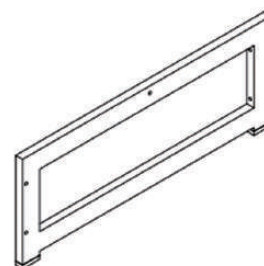

#C
73cm / 28.7in
x 1

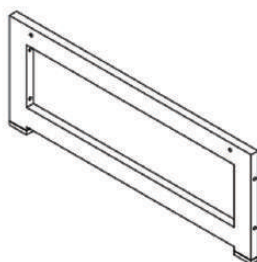




#D
71cm / 27.9in
x 1

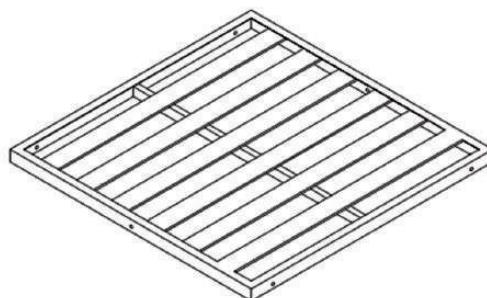

#E
x 1






STEP 1

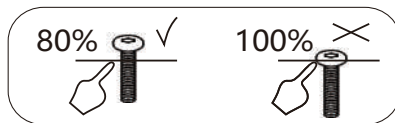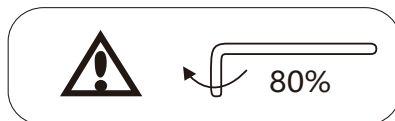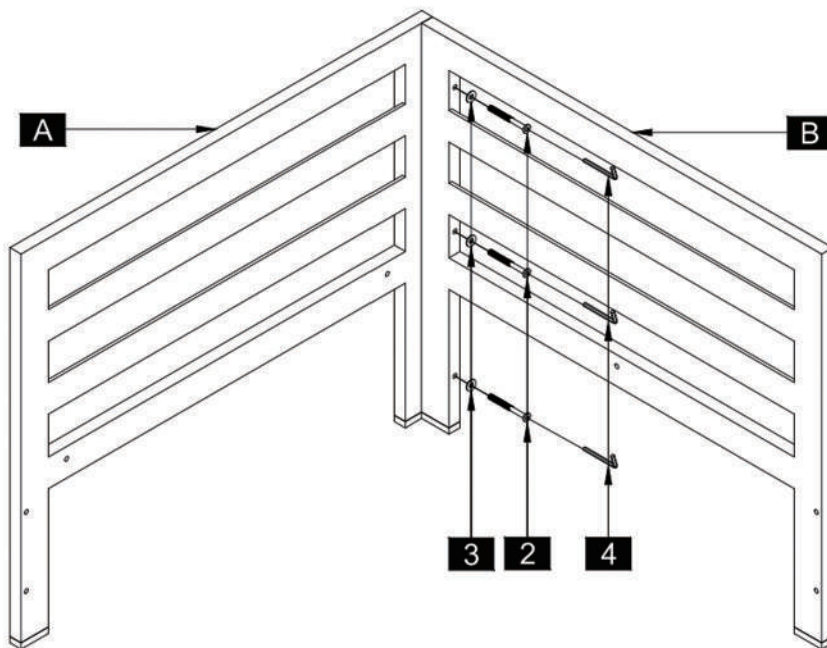




A*1PC	B*1PC	2*3PCS (M6*65)	3*3PCS

STEP 2

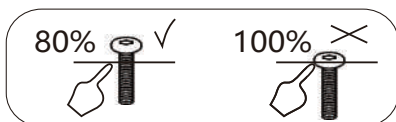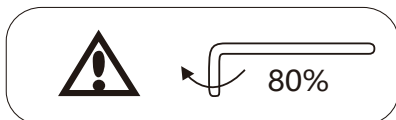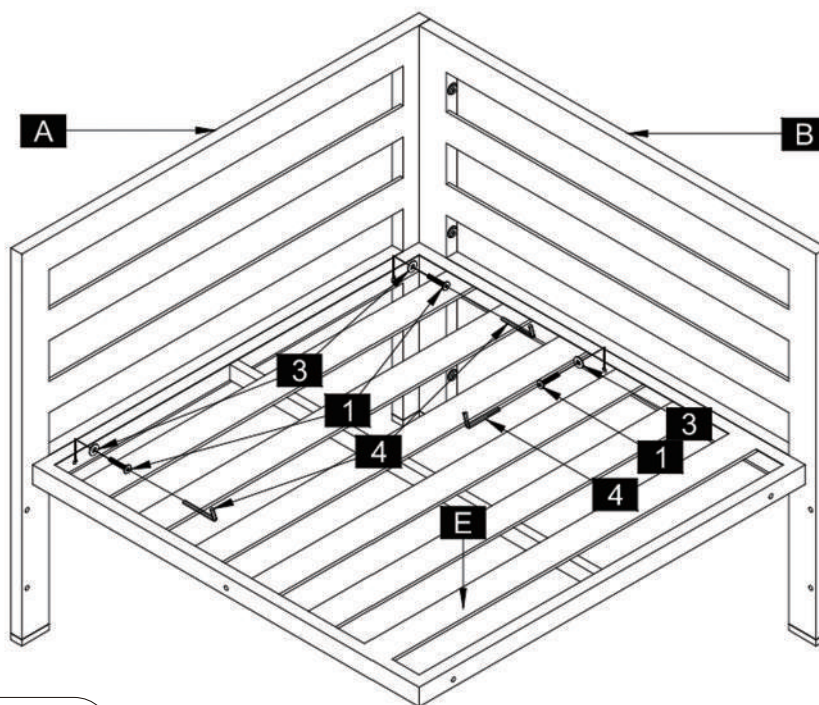




E*1PC	1*3PCS (M6*30)	3*3PCS

STEP 3

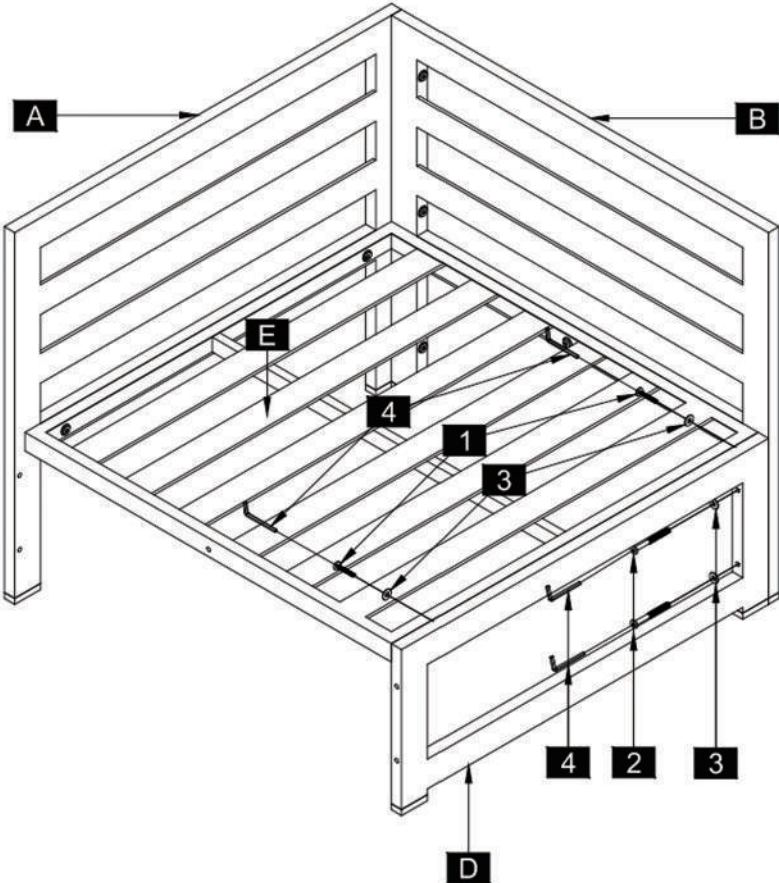



D*1PC	1*2PCS (M6*30)	2*2PCS (M6*65)	3*4PCS

STEP 4

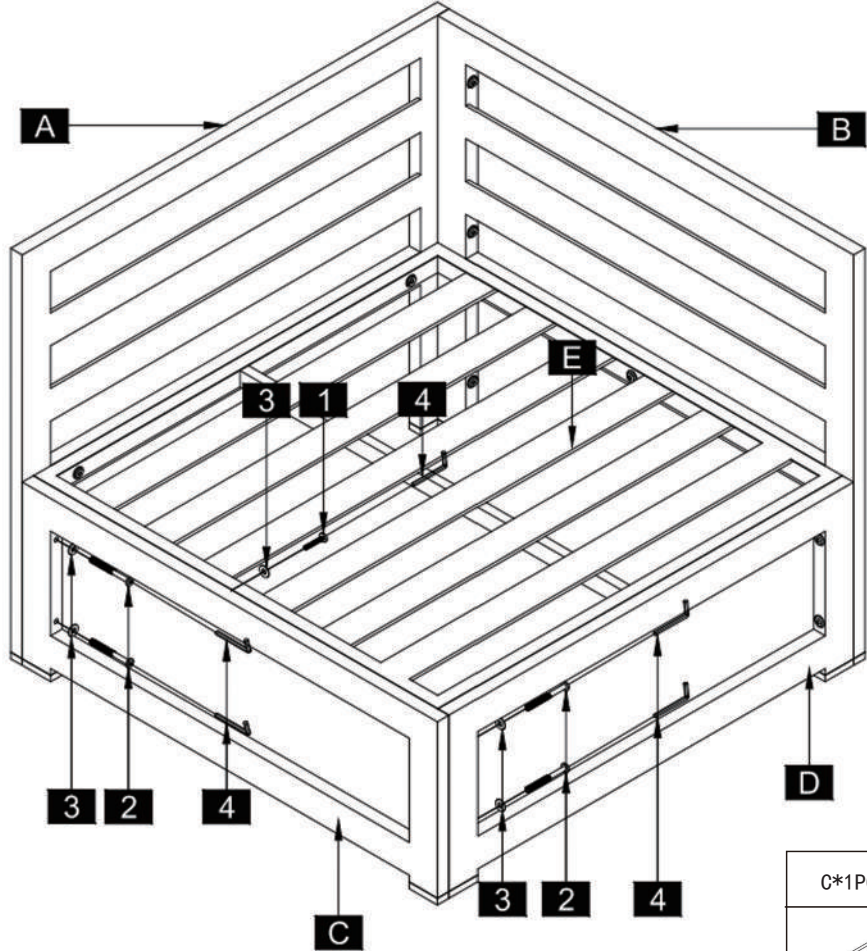


C*1PC	2*4PCS (M6*65)	1*1PC (M6*30)	3*5PCS

STEP 5

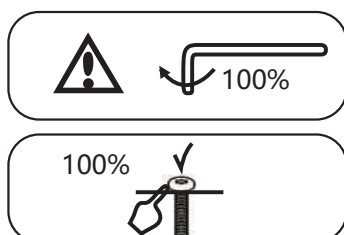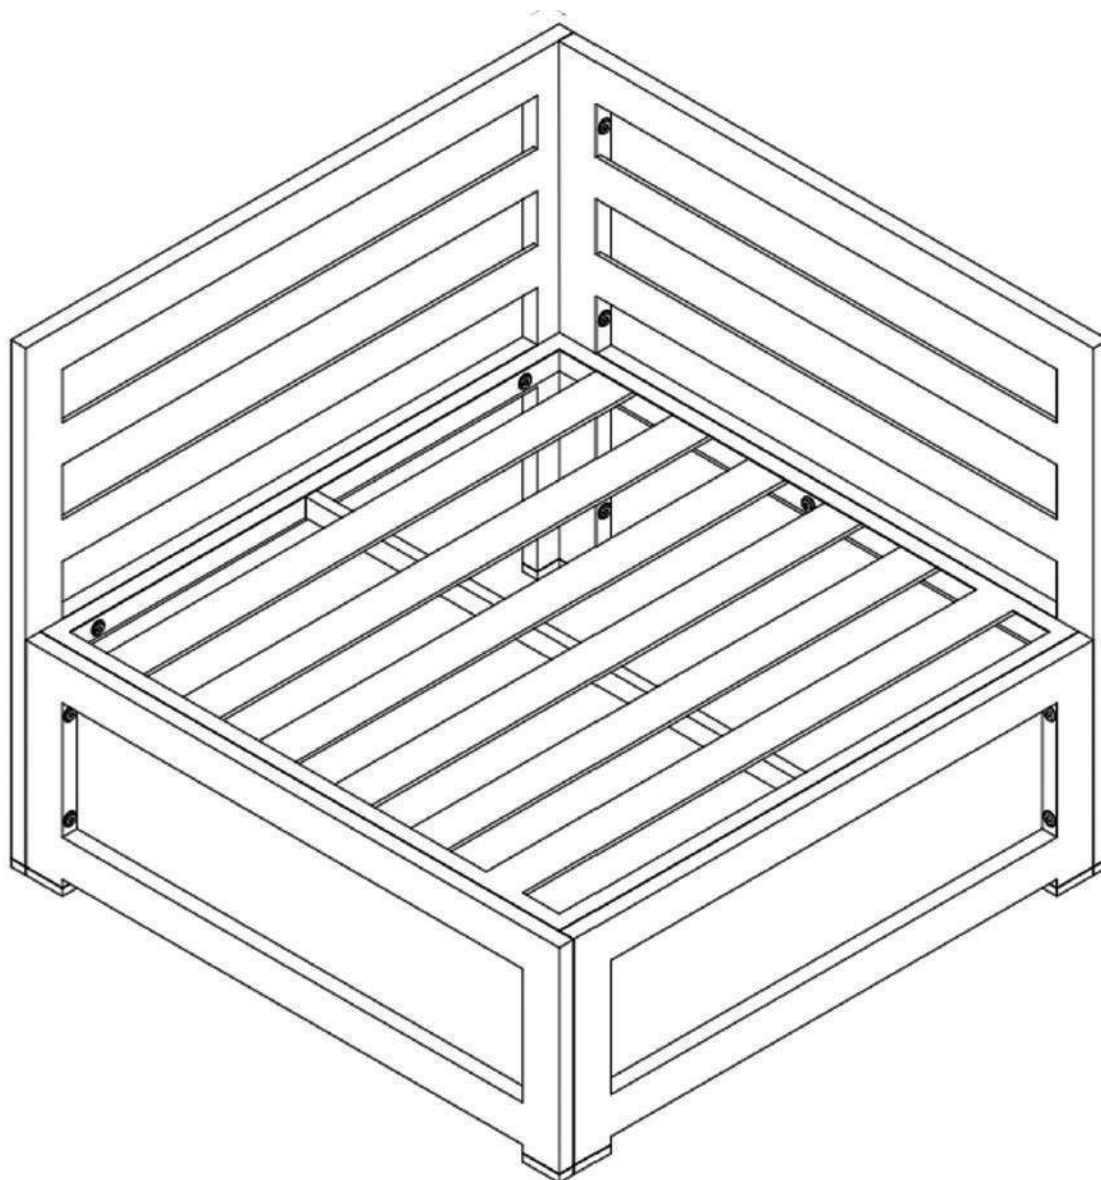

Ensure all screws are tightened before using

Armless Sofa

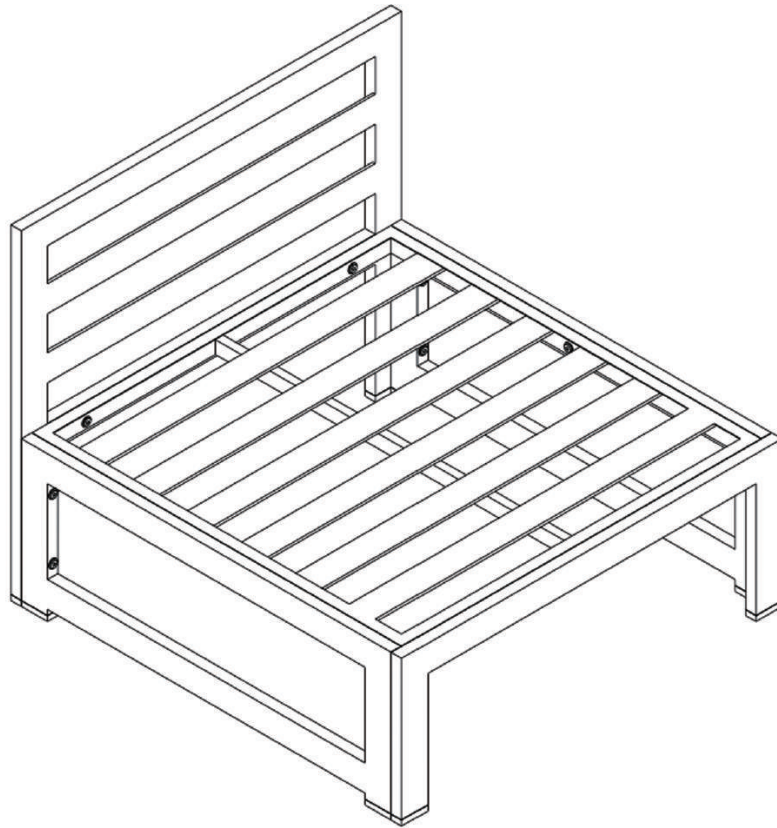

READ BEFORE INSTALLATION

1. If you encounter any problems, such as missing accessories or damaged parts, please contact us and send us pictures in time (email: jm@nicesoulfurniture.com), our after-sales team will reply you within 24 hours.
2. 2 persons needed for assembly.
3. Using an electric drill in slow mode, Our allen wrench is preferred.
4. DO NOT tighten the screws completely until align all the screws with the holes.

Back cushion NOTE

1. The back cushion is vacuumed sealed. After opening the bag, some time and fluffing will be required for the cushion to return to the original thickness.
2. Rub and flap the cushion to original thickness before use.

Hardware

2 SETS IN BOX



#1
6x30mm
X12



#2
6x65mm
X16




#3
Washer
X28




#4
Allen key
X2

Parts


2 SETS IN BOX

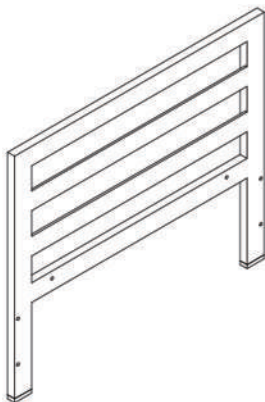


#F
73cm / 28.7in
X2

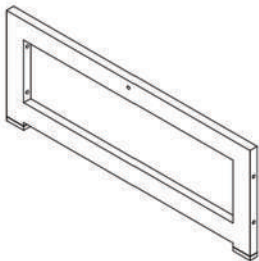

#G
71cm / 27.9in
X4

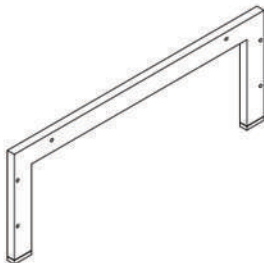


#H
73cm / 28.7in
X2

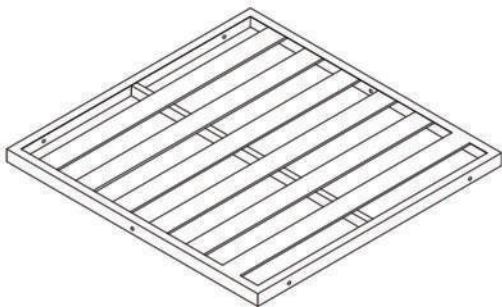


#I
X2




STEP 1

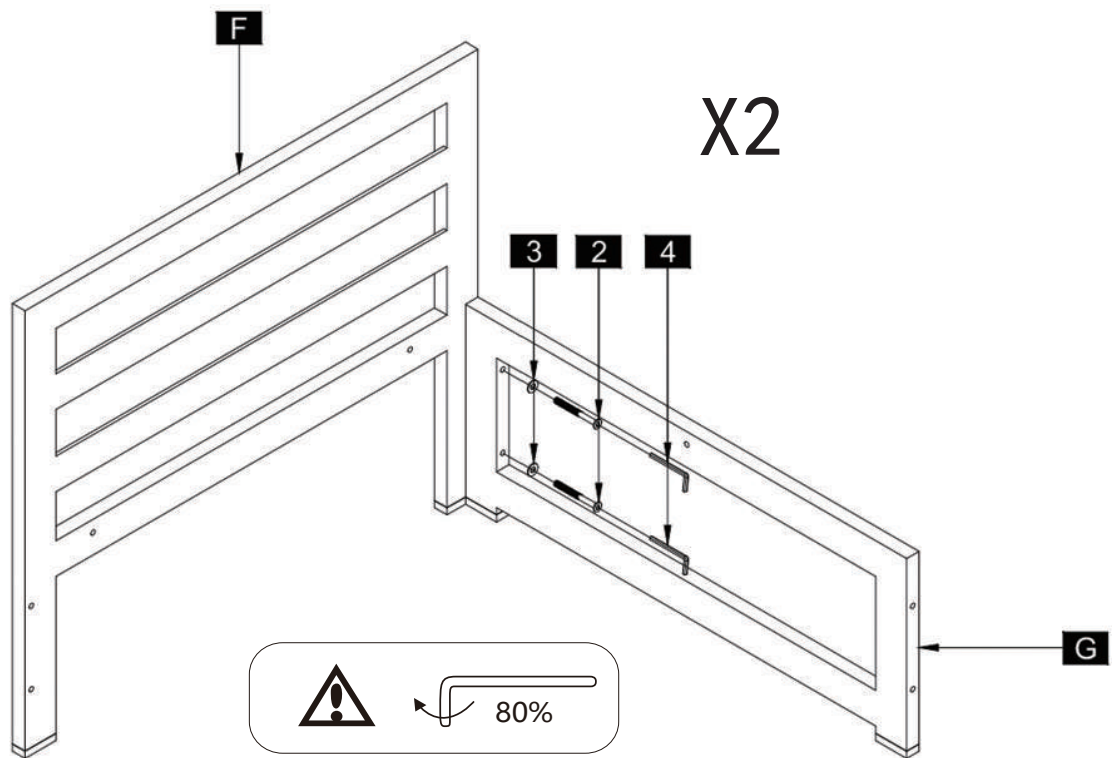


F*1PC	G*1PC	2*2PCS (M6*65)	3*2PCS
			

STEP 2

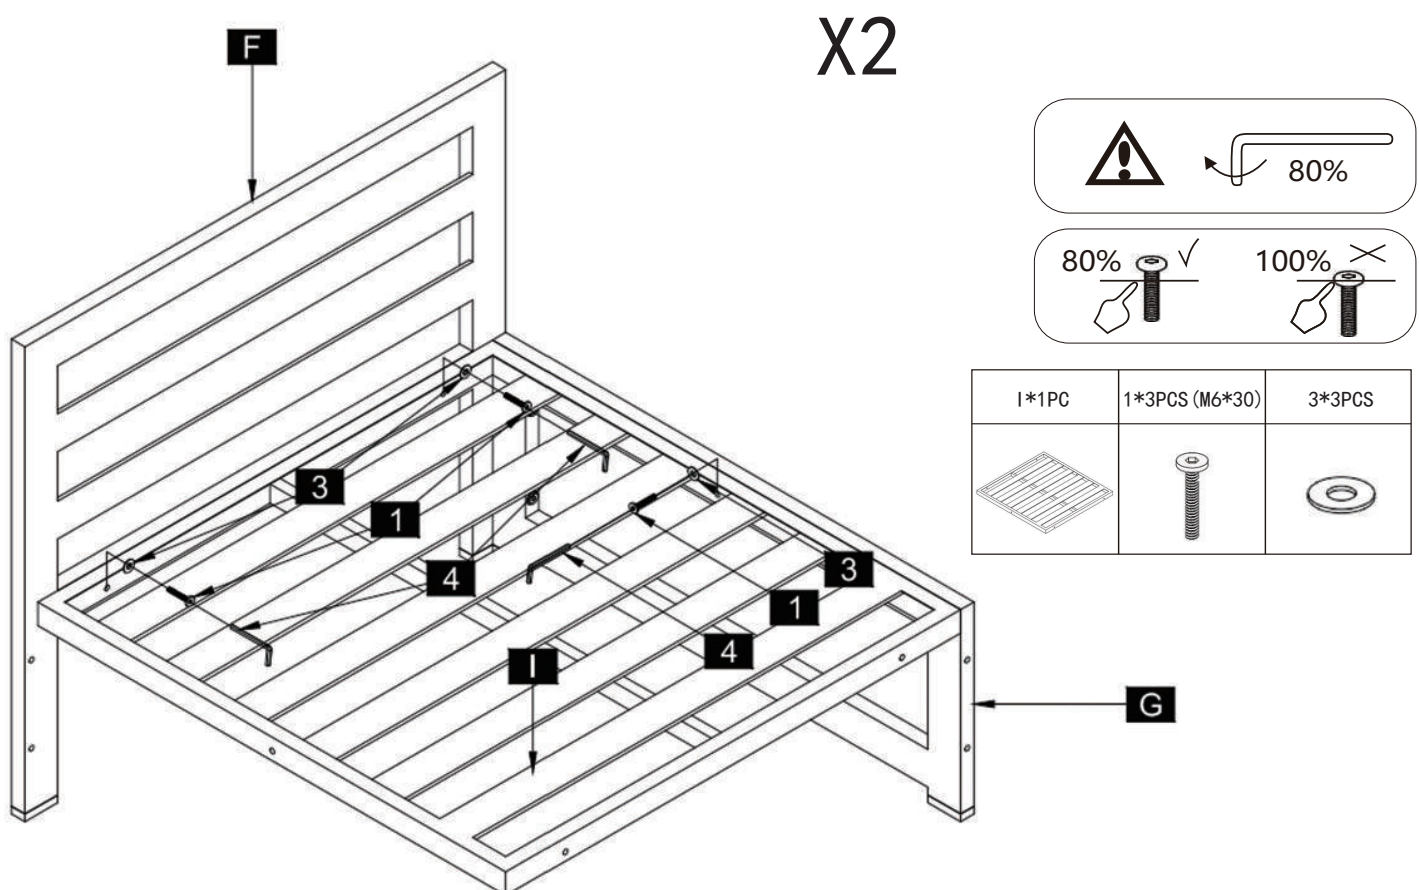


I*1PC	1*3PCS (M6*30)	3*3PCS
		

STEP 3

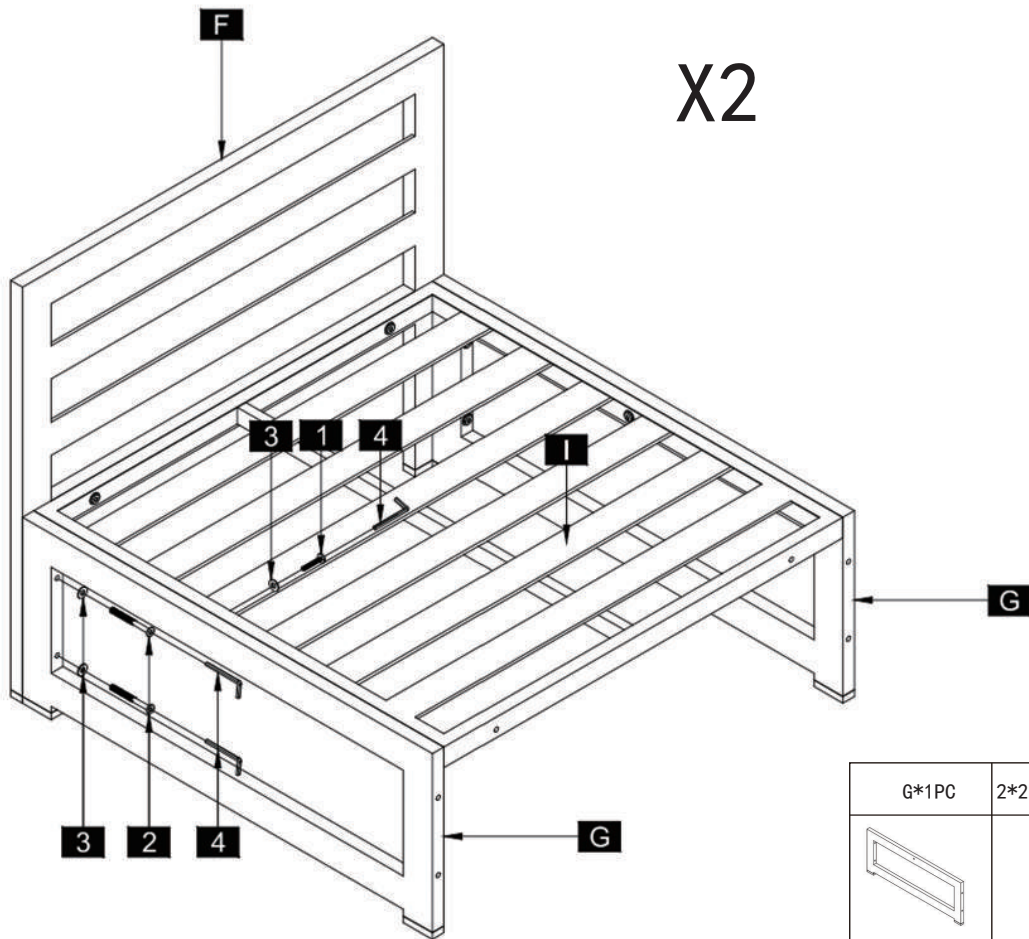


80%




G*1PC	2*2PCS (M6*65)	1*1PC (M6*30)	3*3PCS

STEP 4

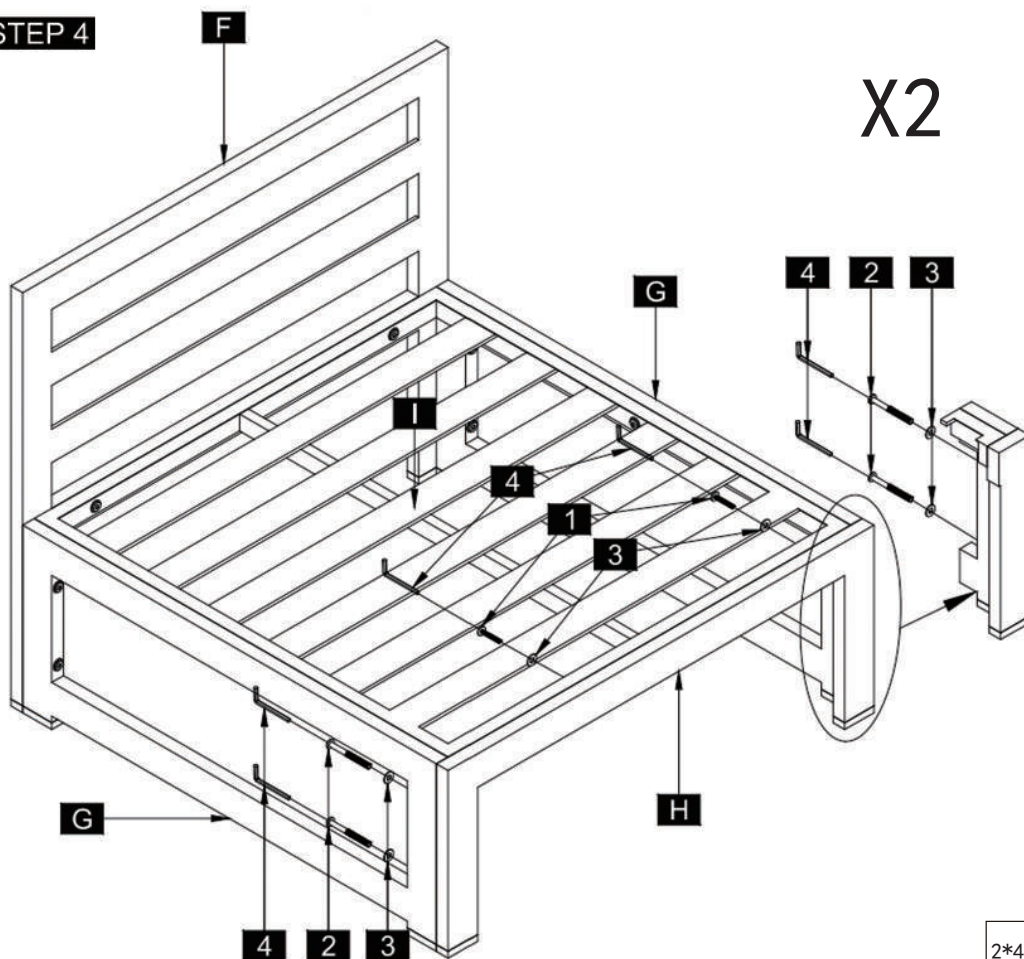




80%



2*4PCS (M6*65)	1*2PCS (M6*30)	3*6PCS

STEP 5

X2

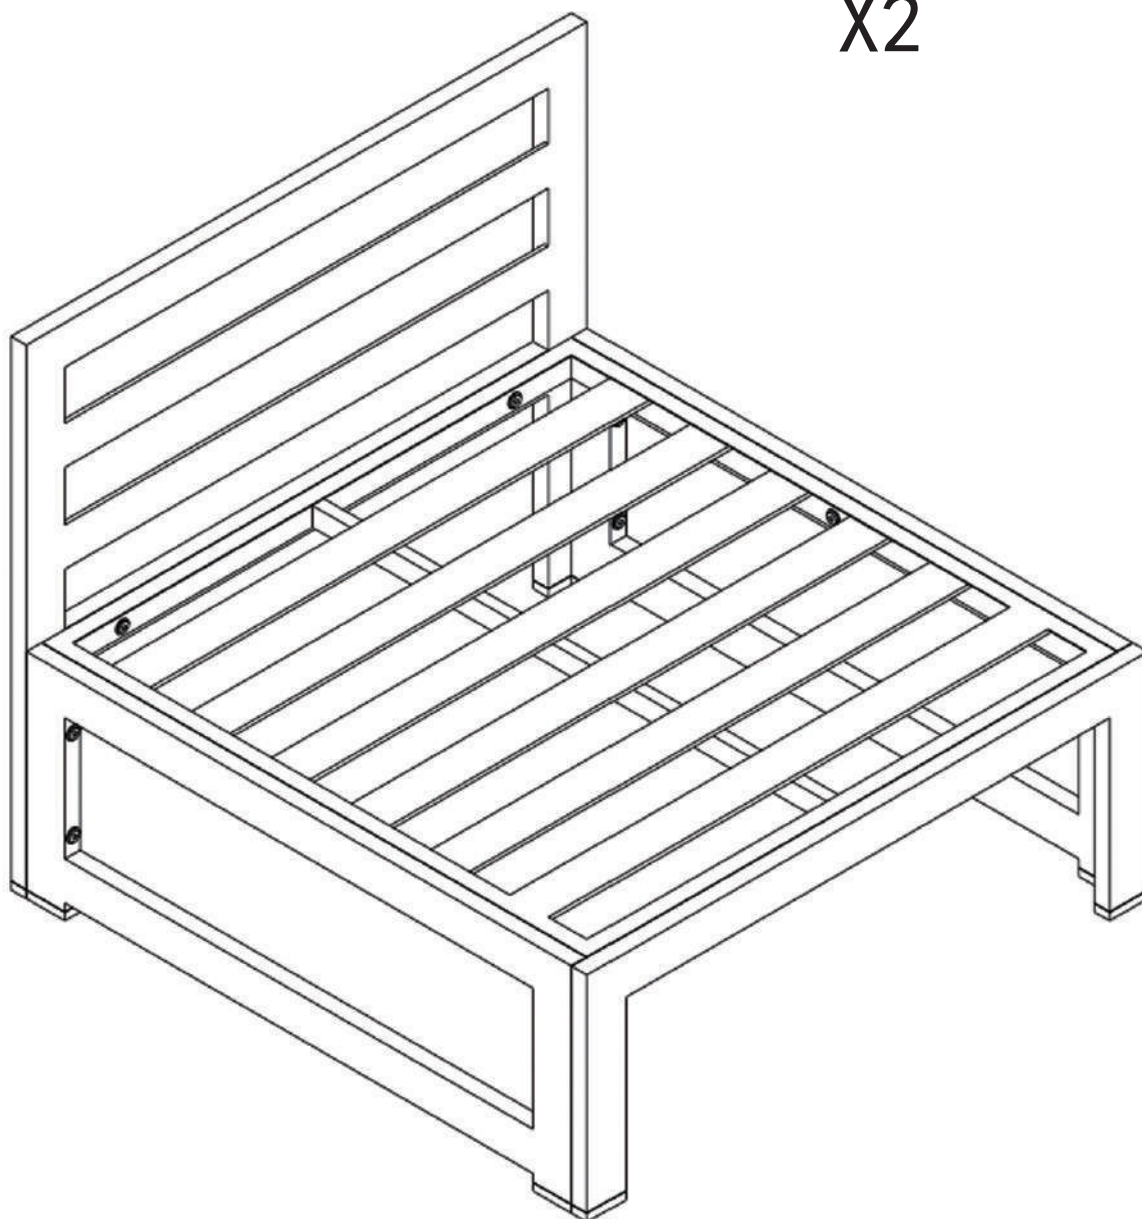

Ensure all screws are tightened before using




Assembly Instruction


Coffee Table

- Please make sure you have all of parts listed, Before you begin to assemble it.
- Please follow our instruction step by step, or follow our video.
- Manually install table with our tools is highly recommended, please use the LOW SPEED when using electrical tools
- DO NOT tighten the screws completely until all screws are aligned with the holes


Hardware

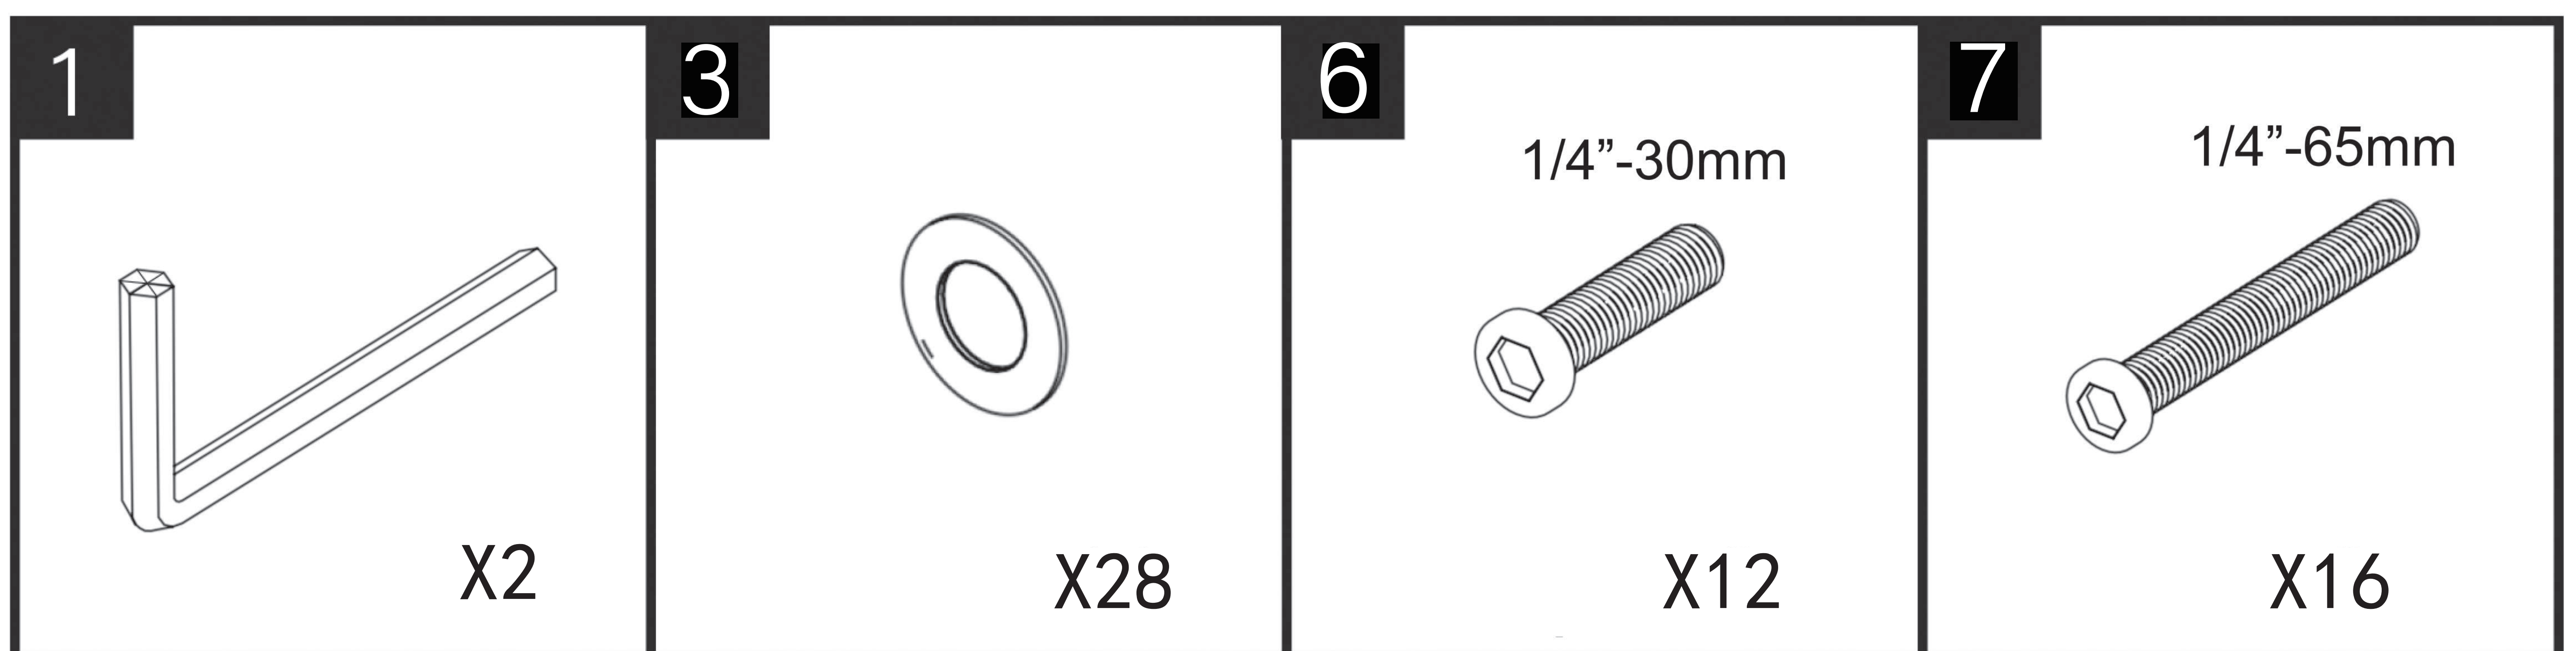


Parts



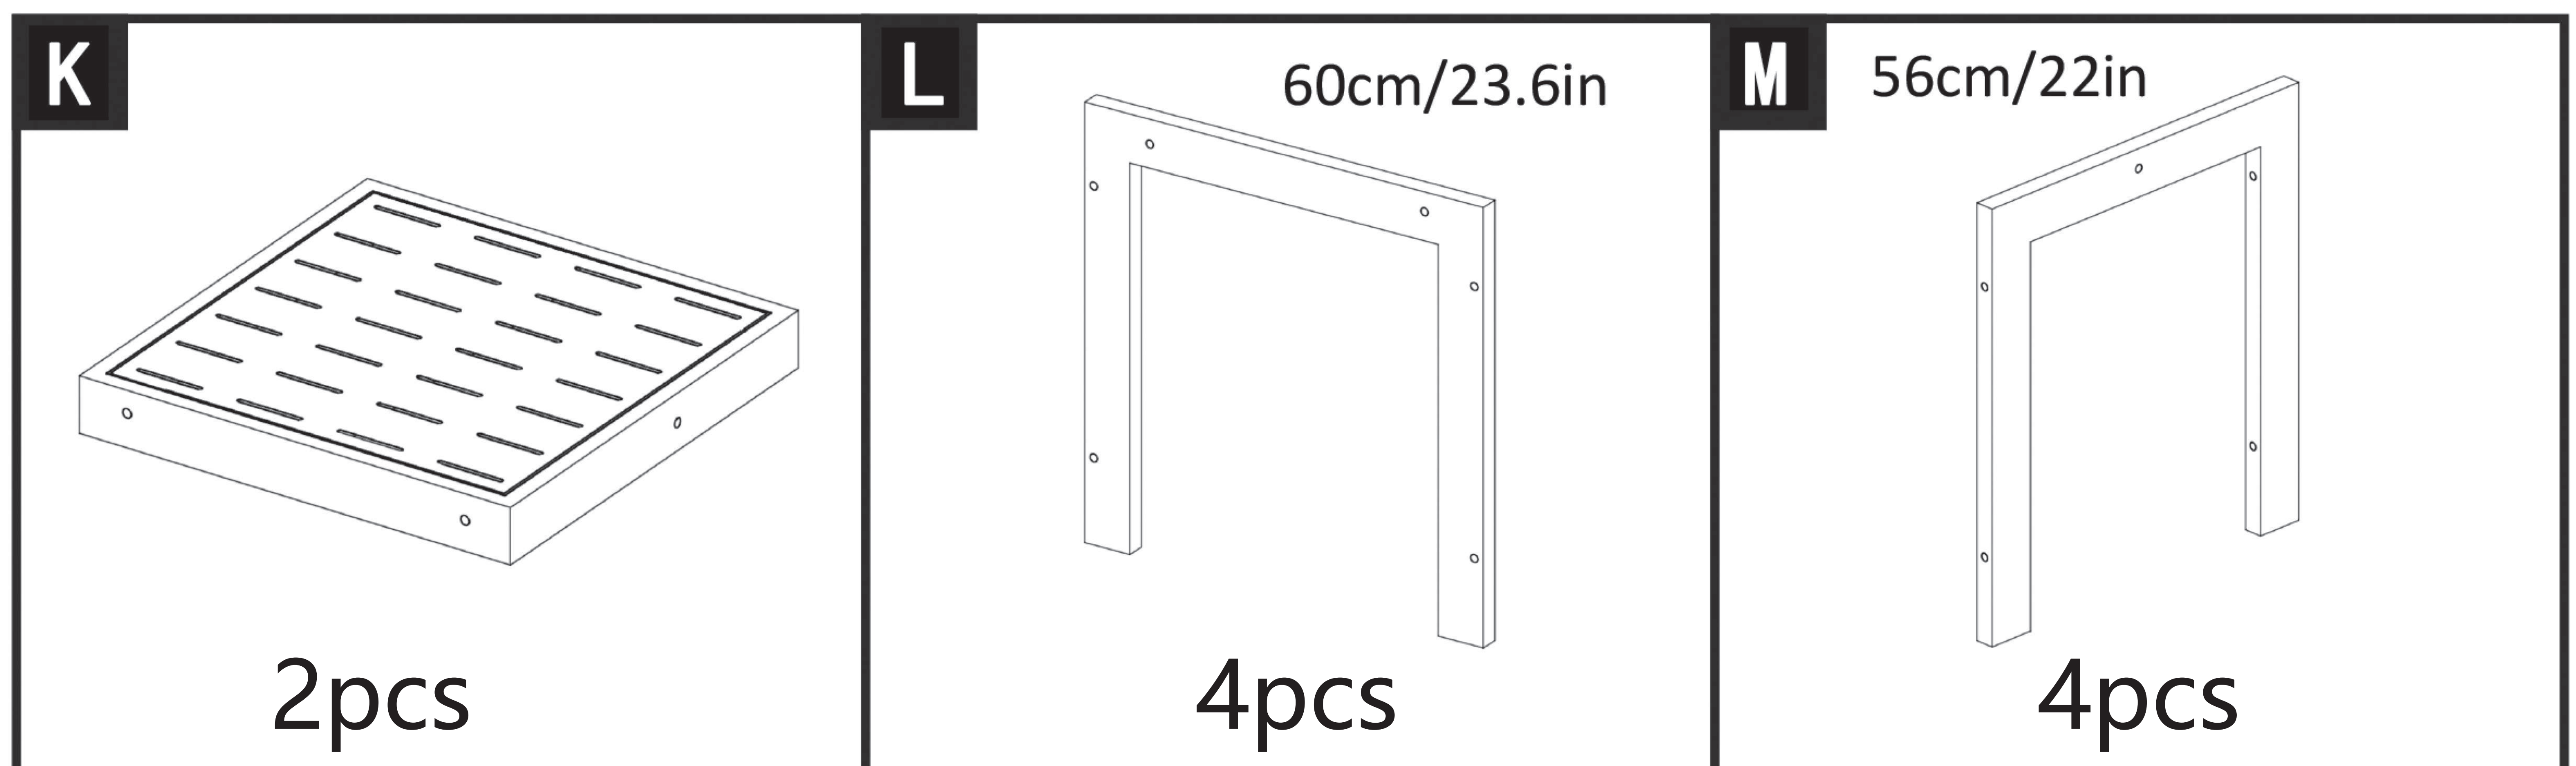


1

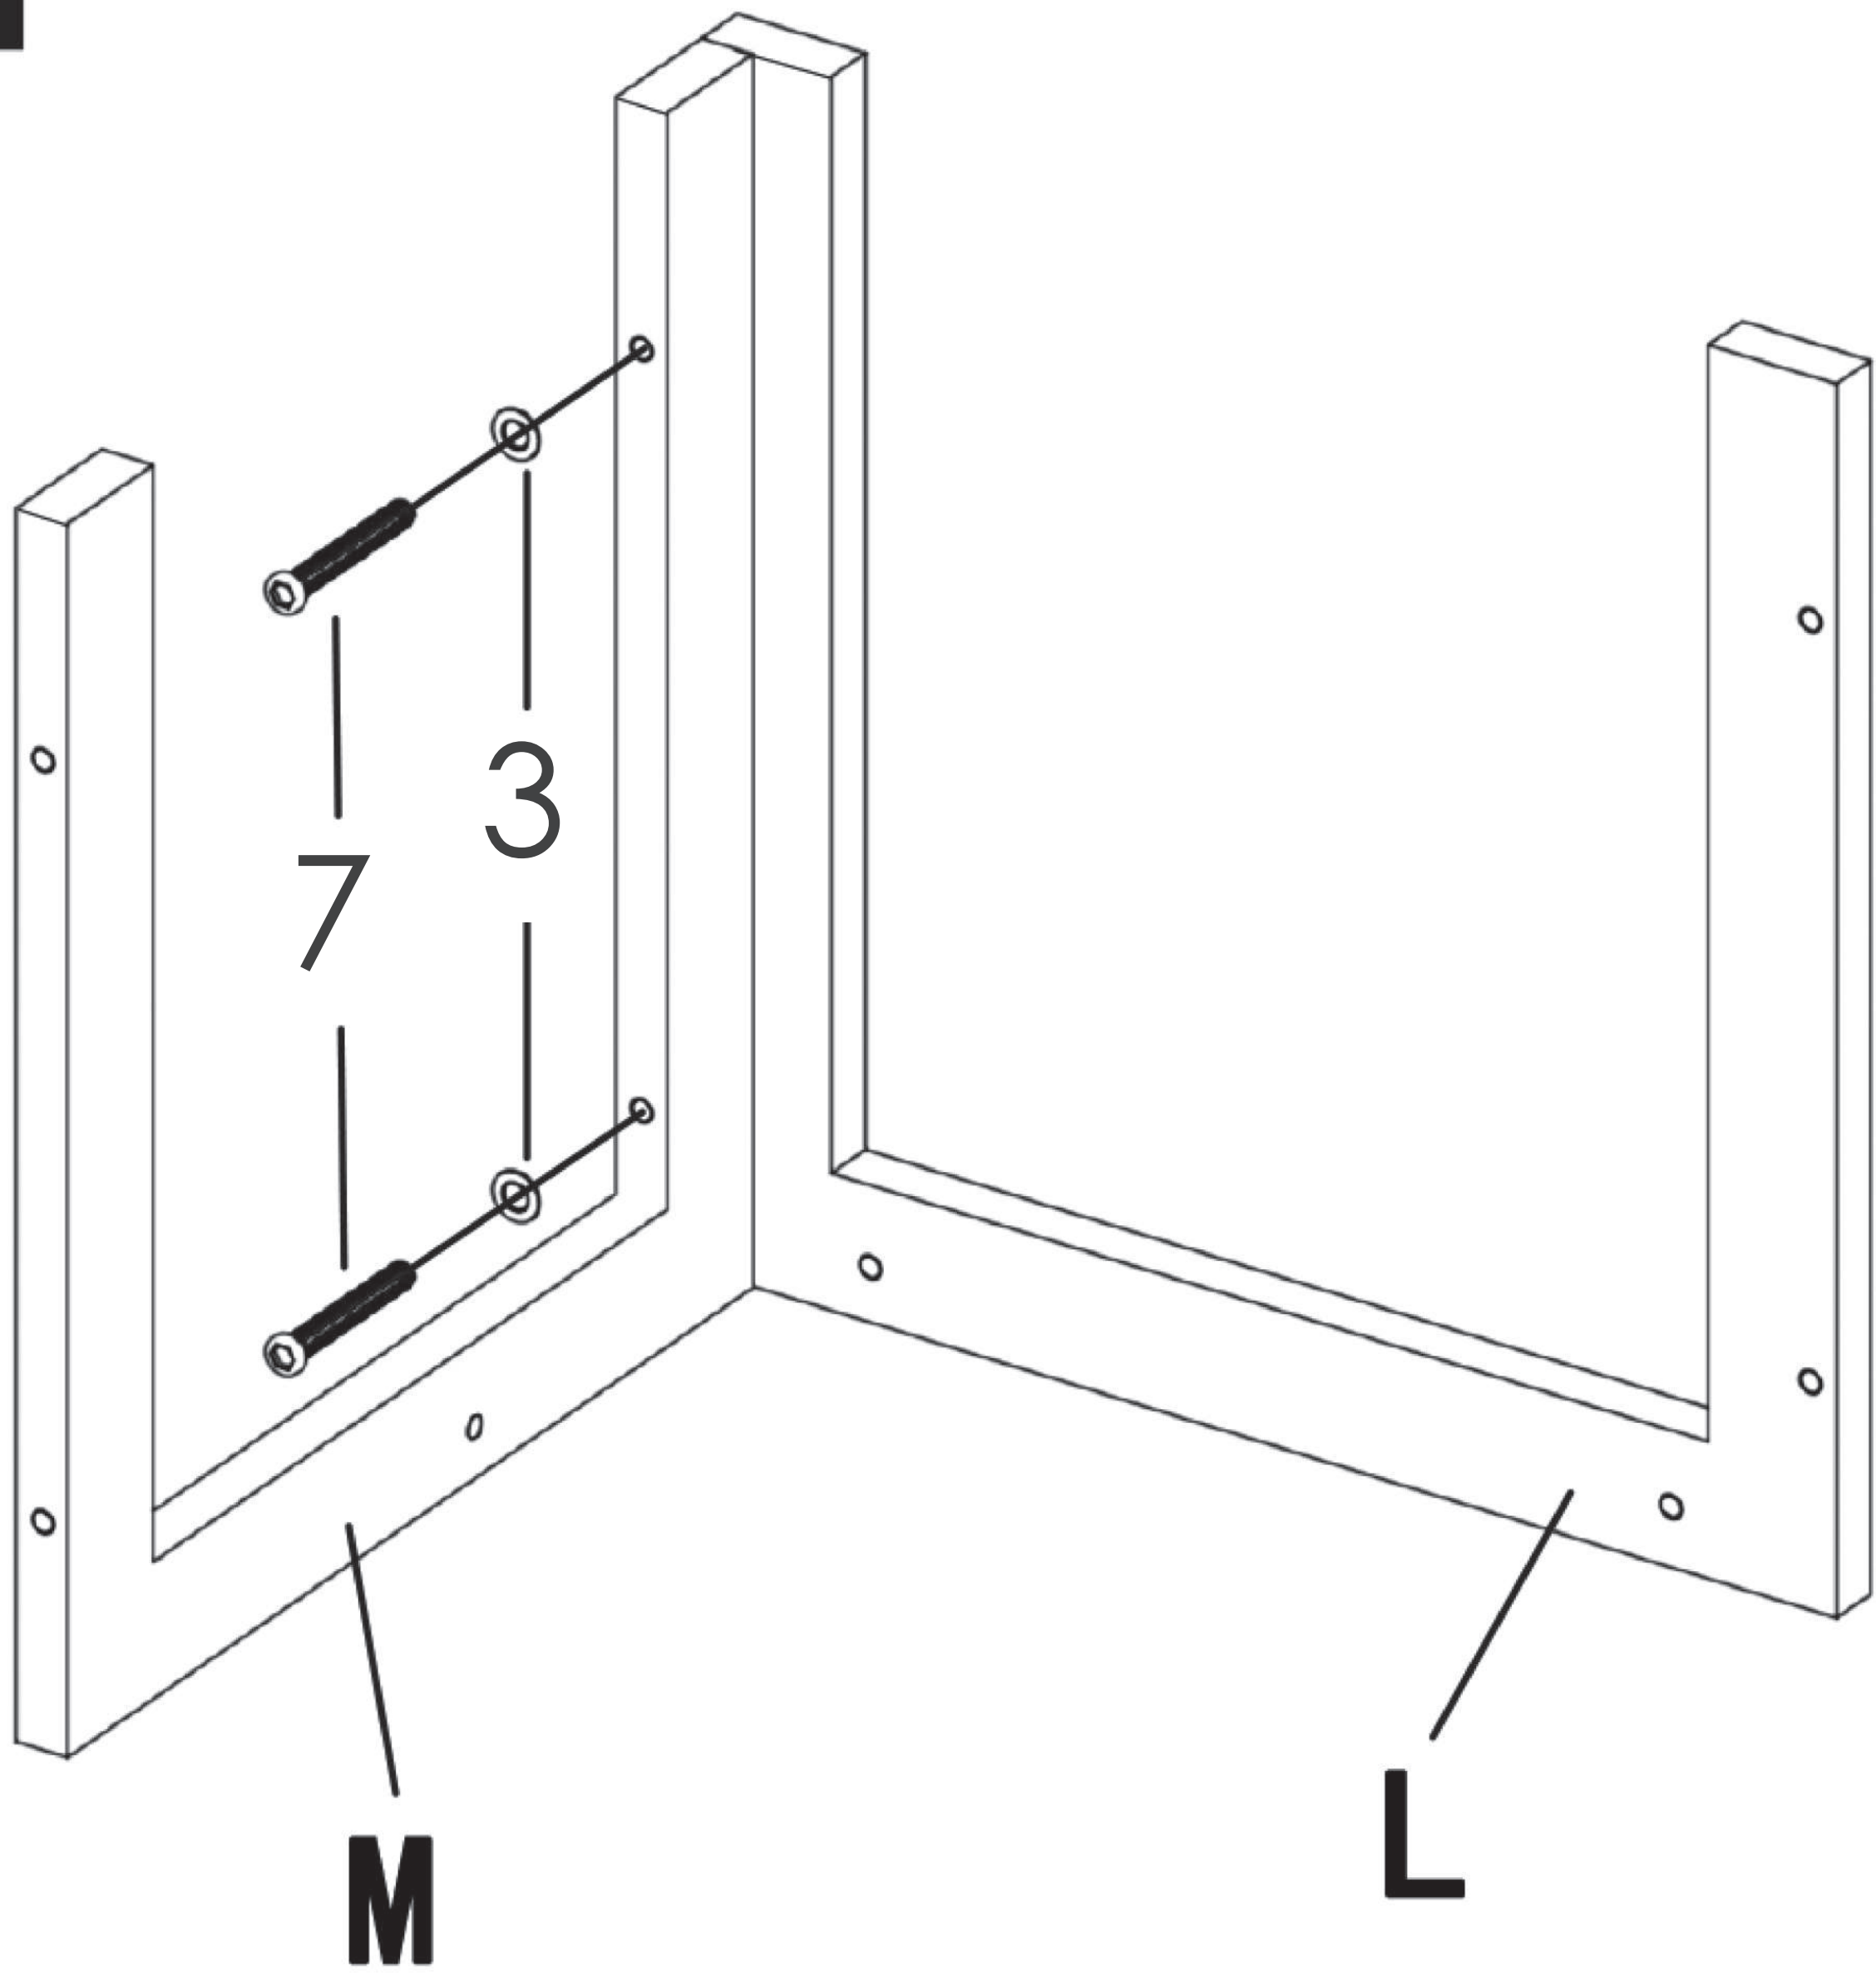




X2

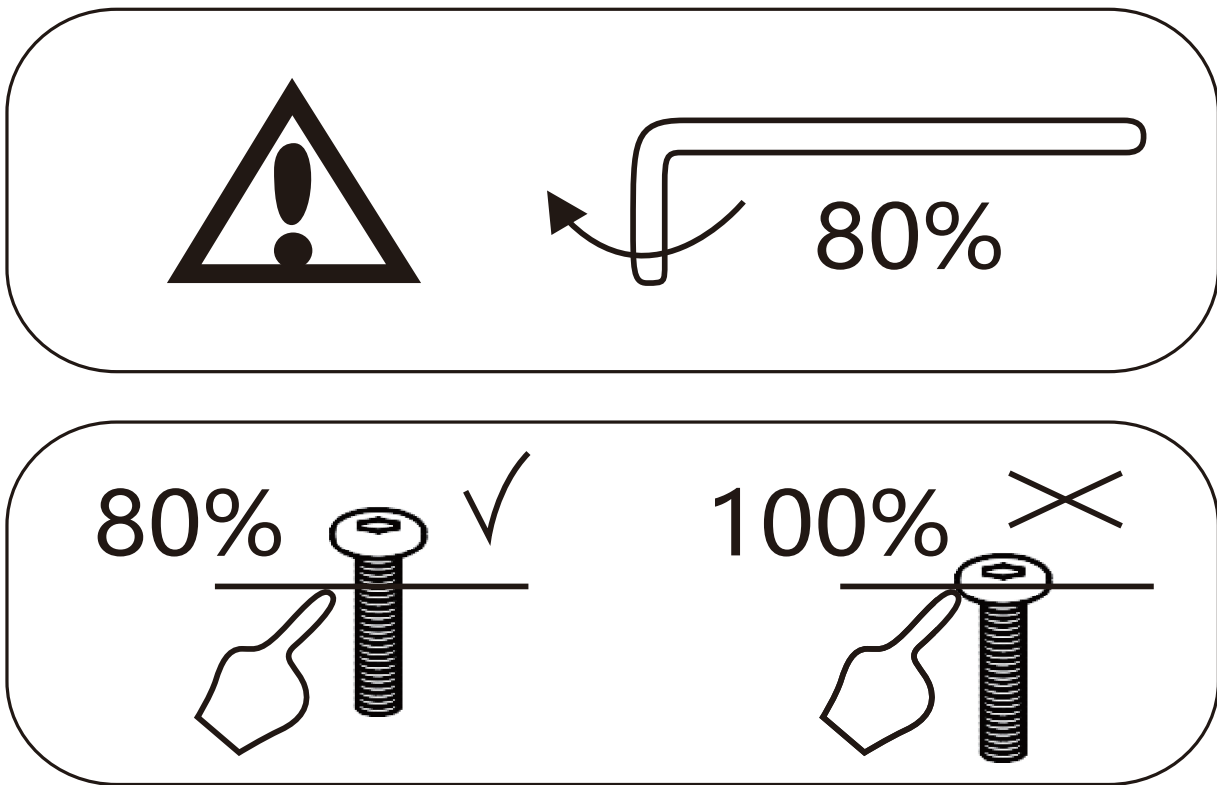

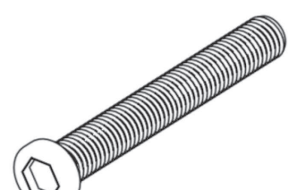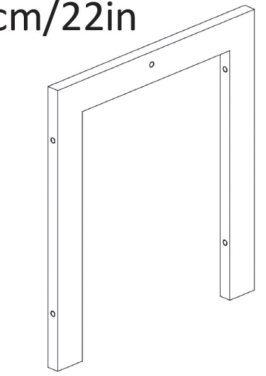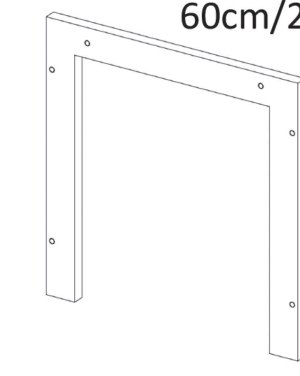
7*2PCS (M6*65)	M*1PC	L*1PC	3*2PCS
1/4"-65mm 	56cm/22in 	60cm/23.6in 	

X2

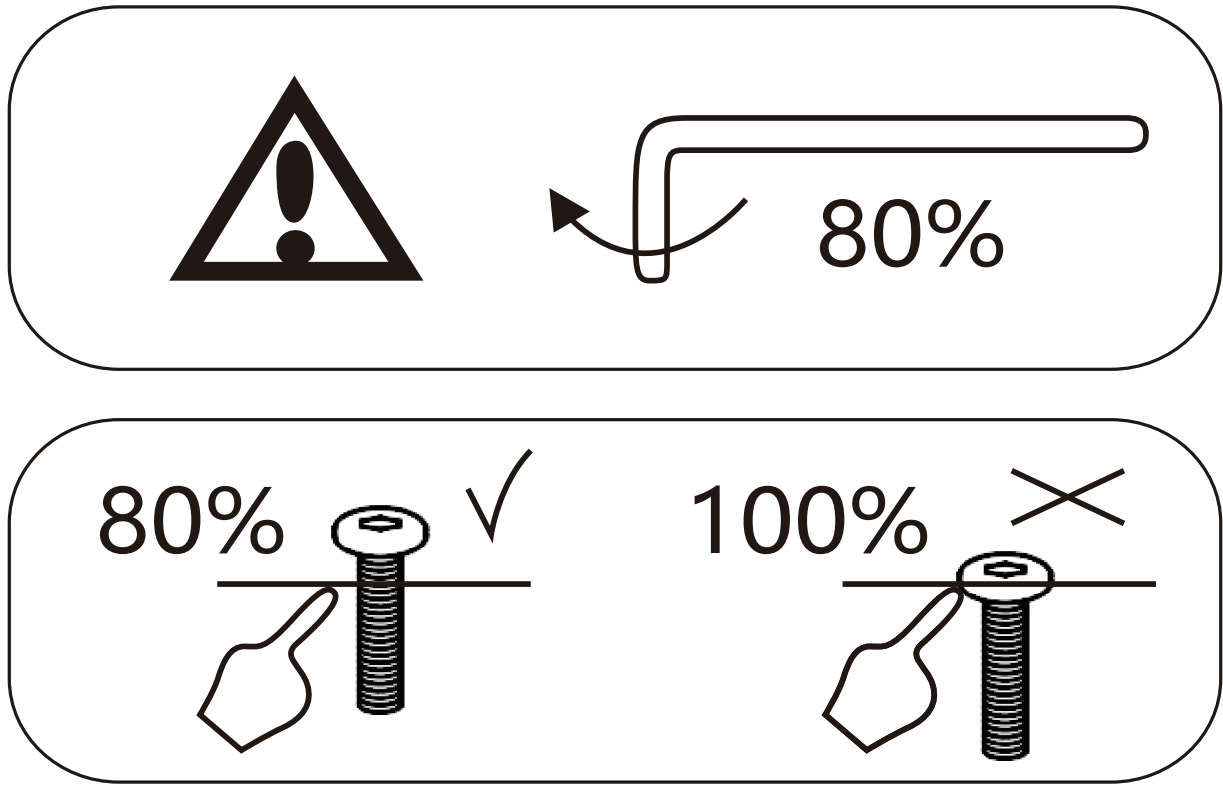



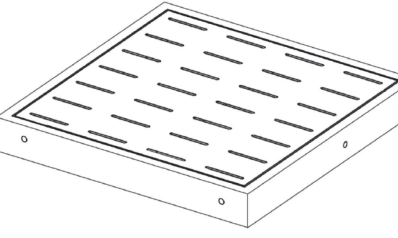
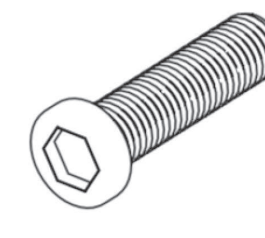
K*1PC	6*3PCS (M6*30)	3*3PCS
	1/4"-30mm 	

2

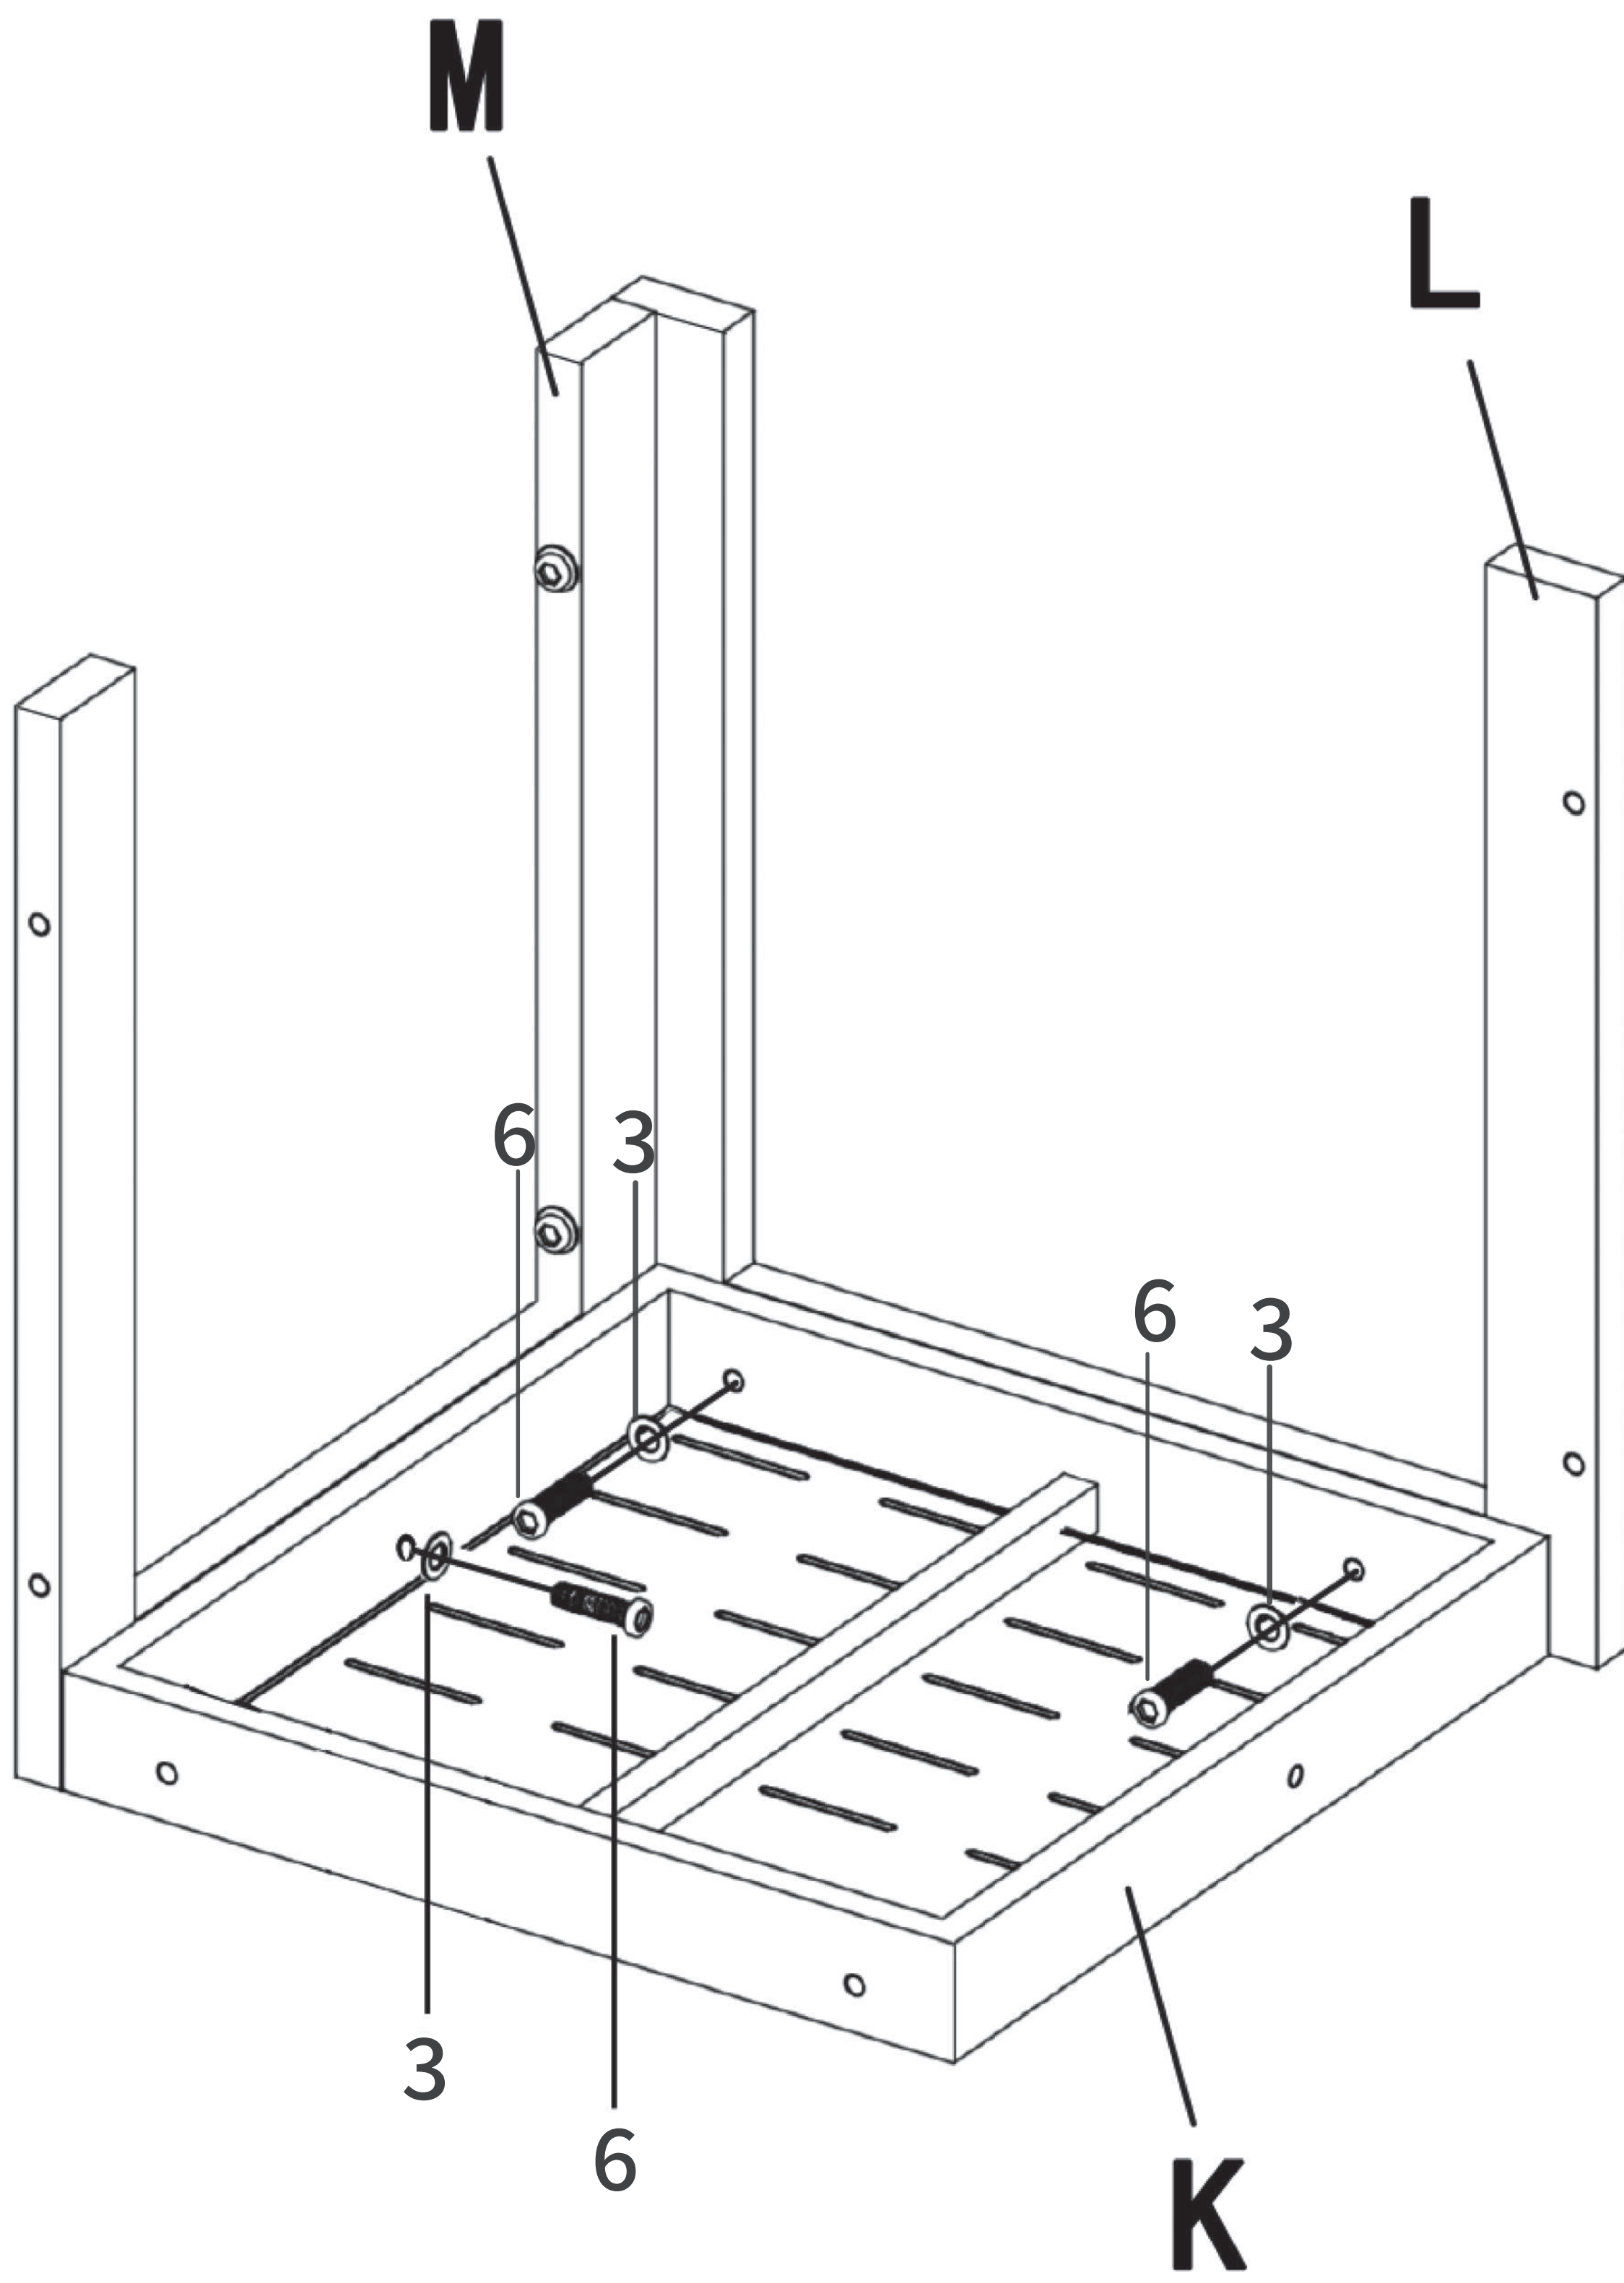


X2

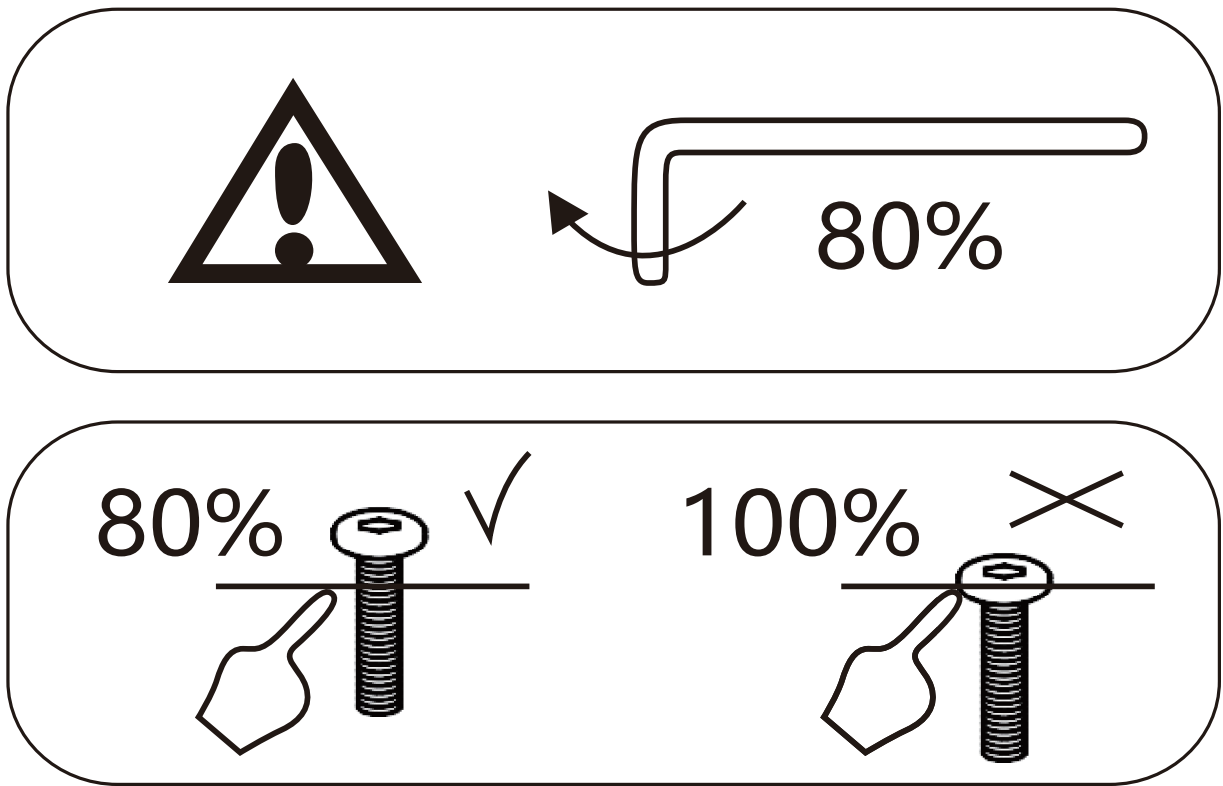

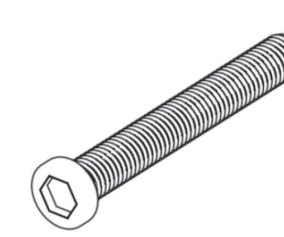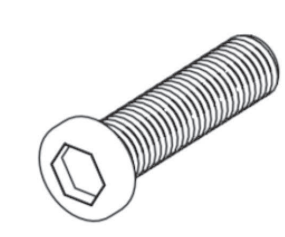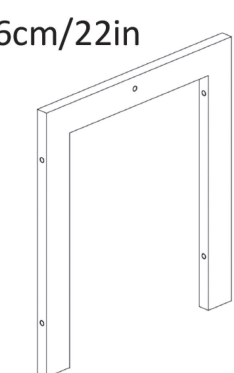
7*2PCS (M6*65)	6*1PC (M6*30)	M*1PC	3*3PCS
1/4"-65mm 	1/4"-30mm 	56cm/22in 	

3

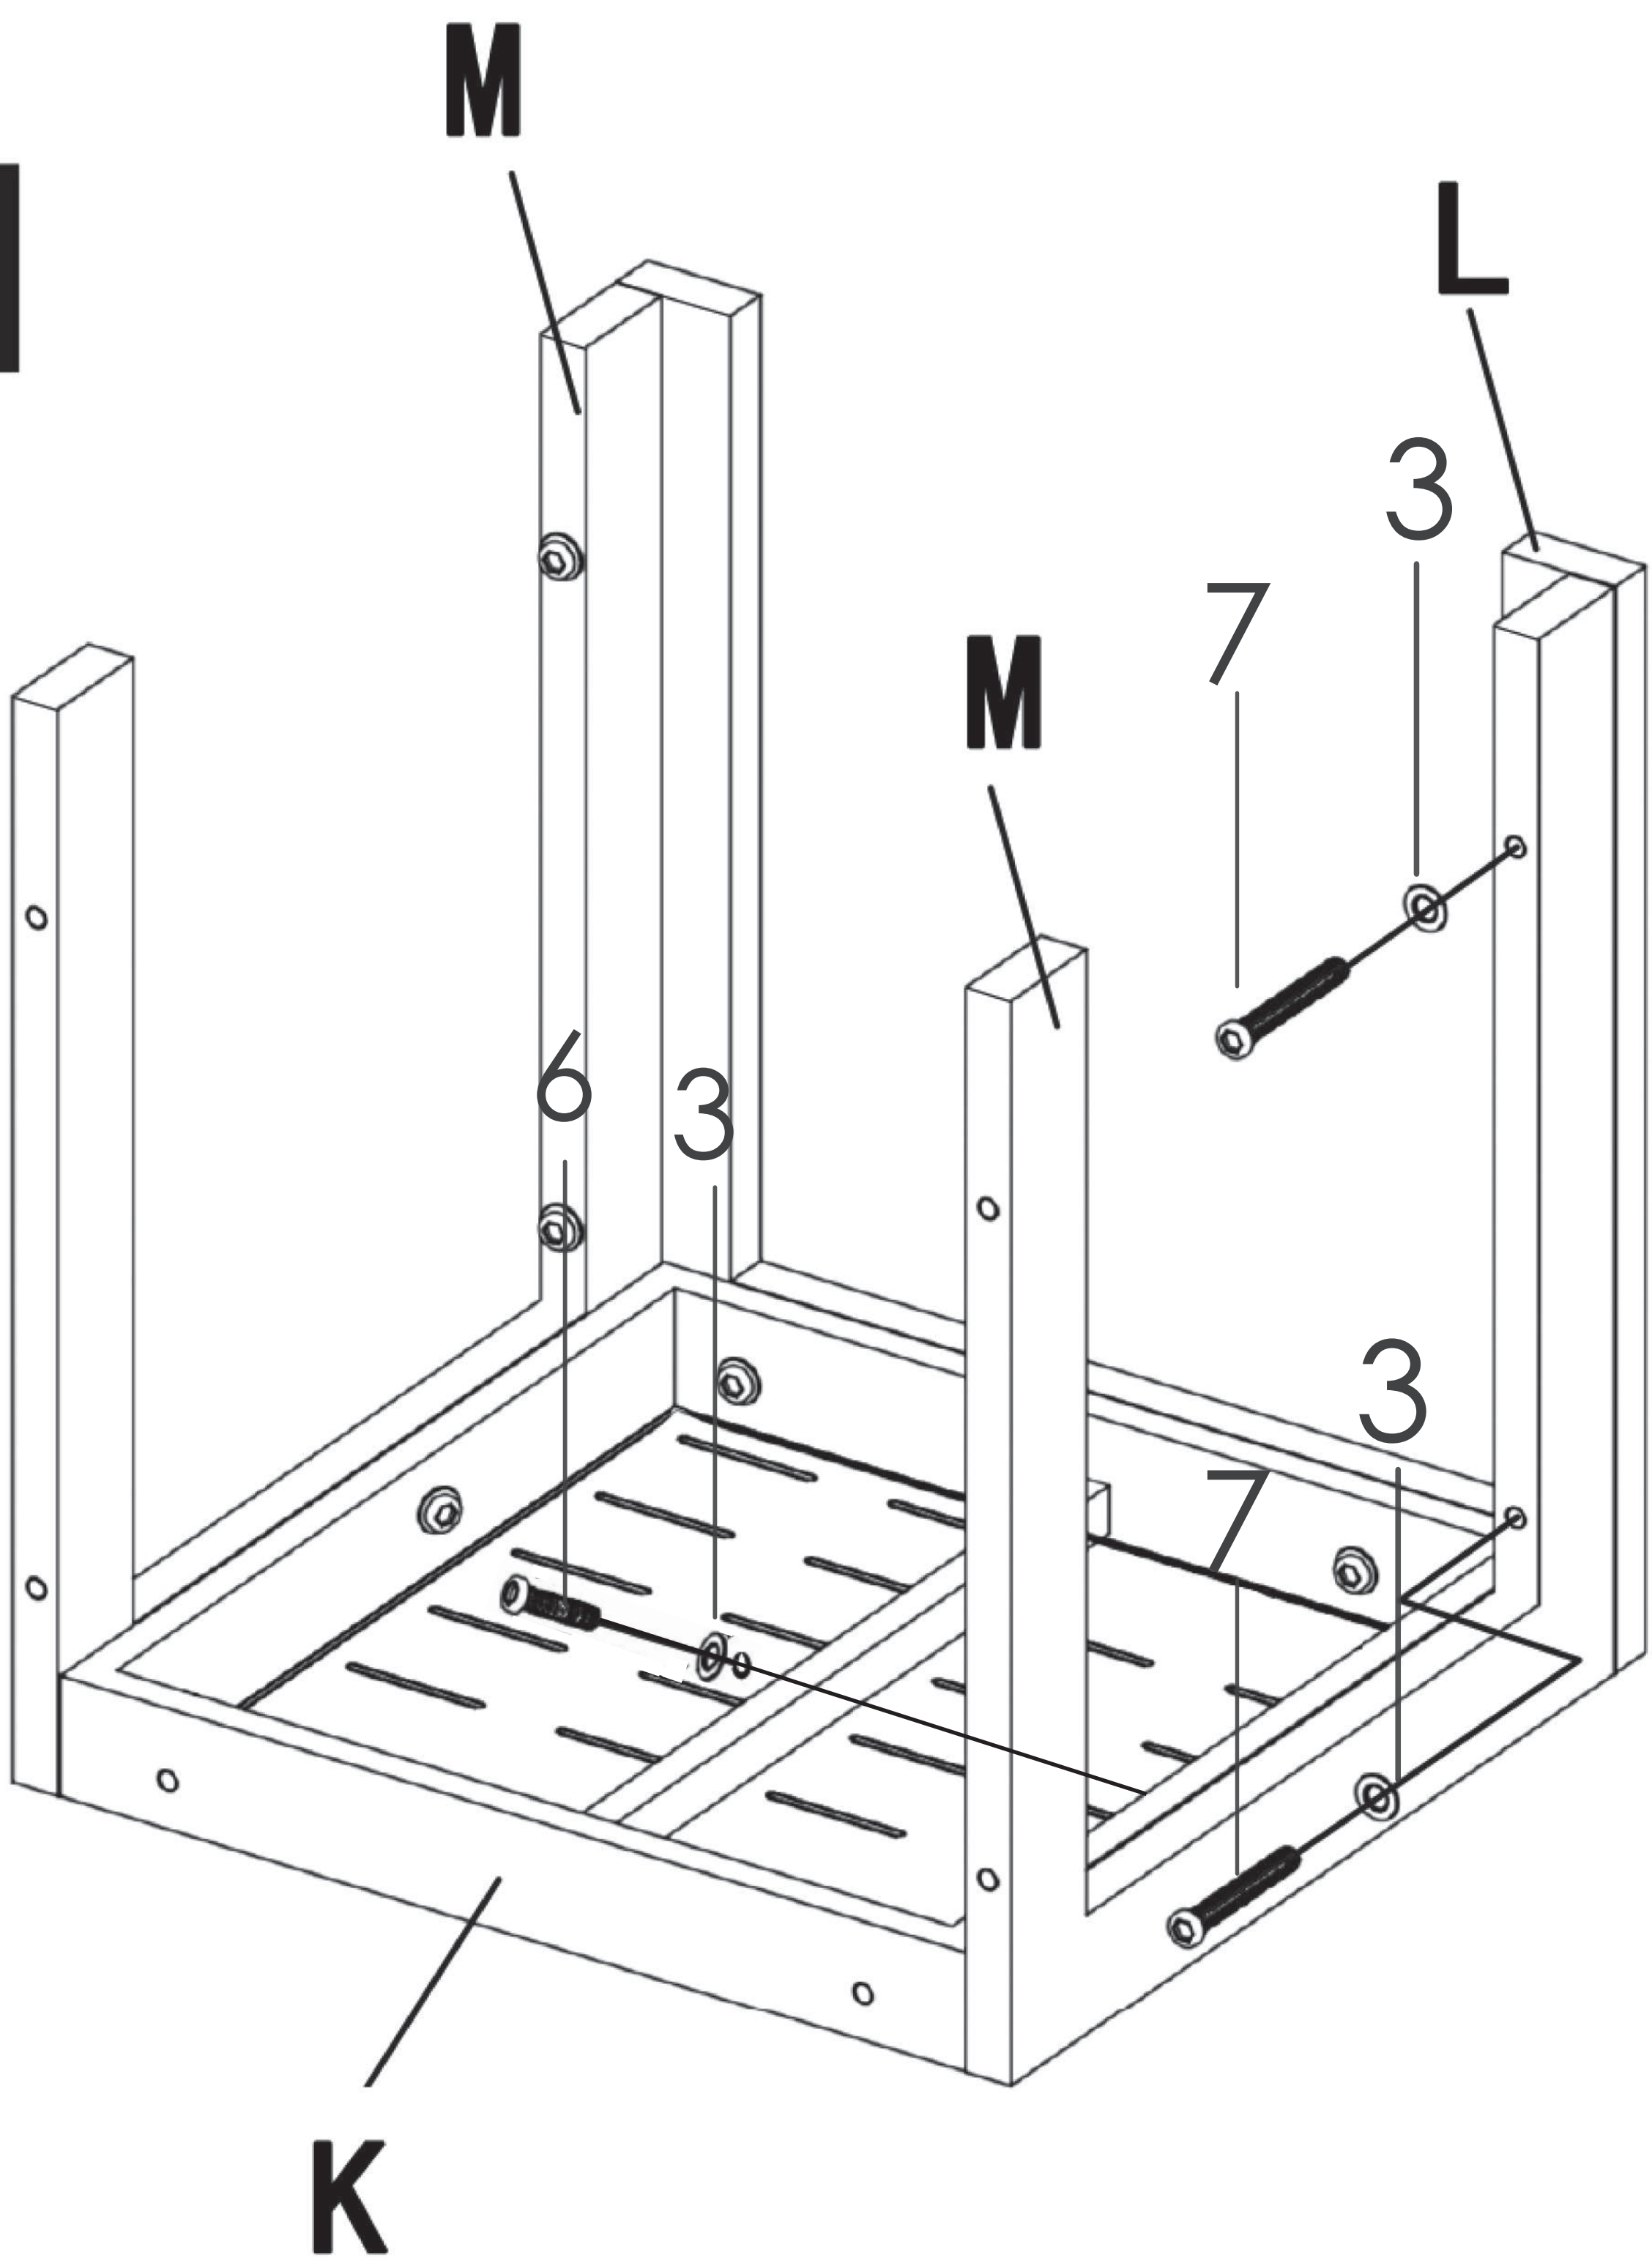


K

4

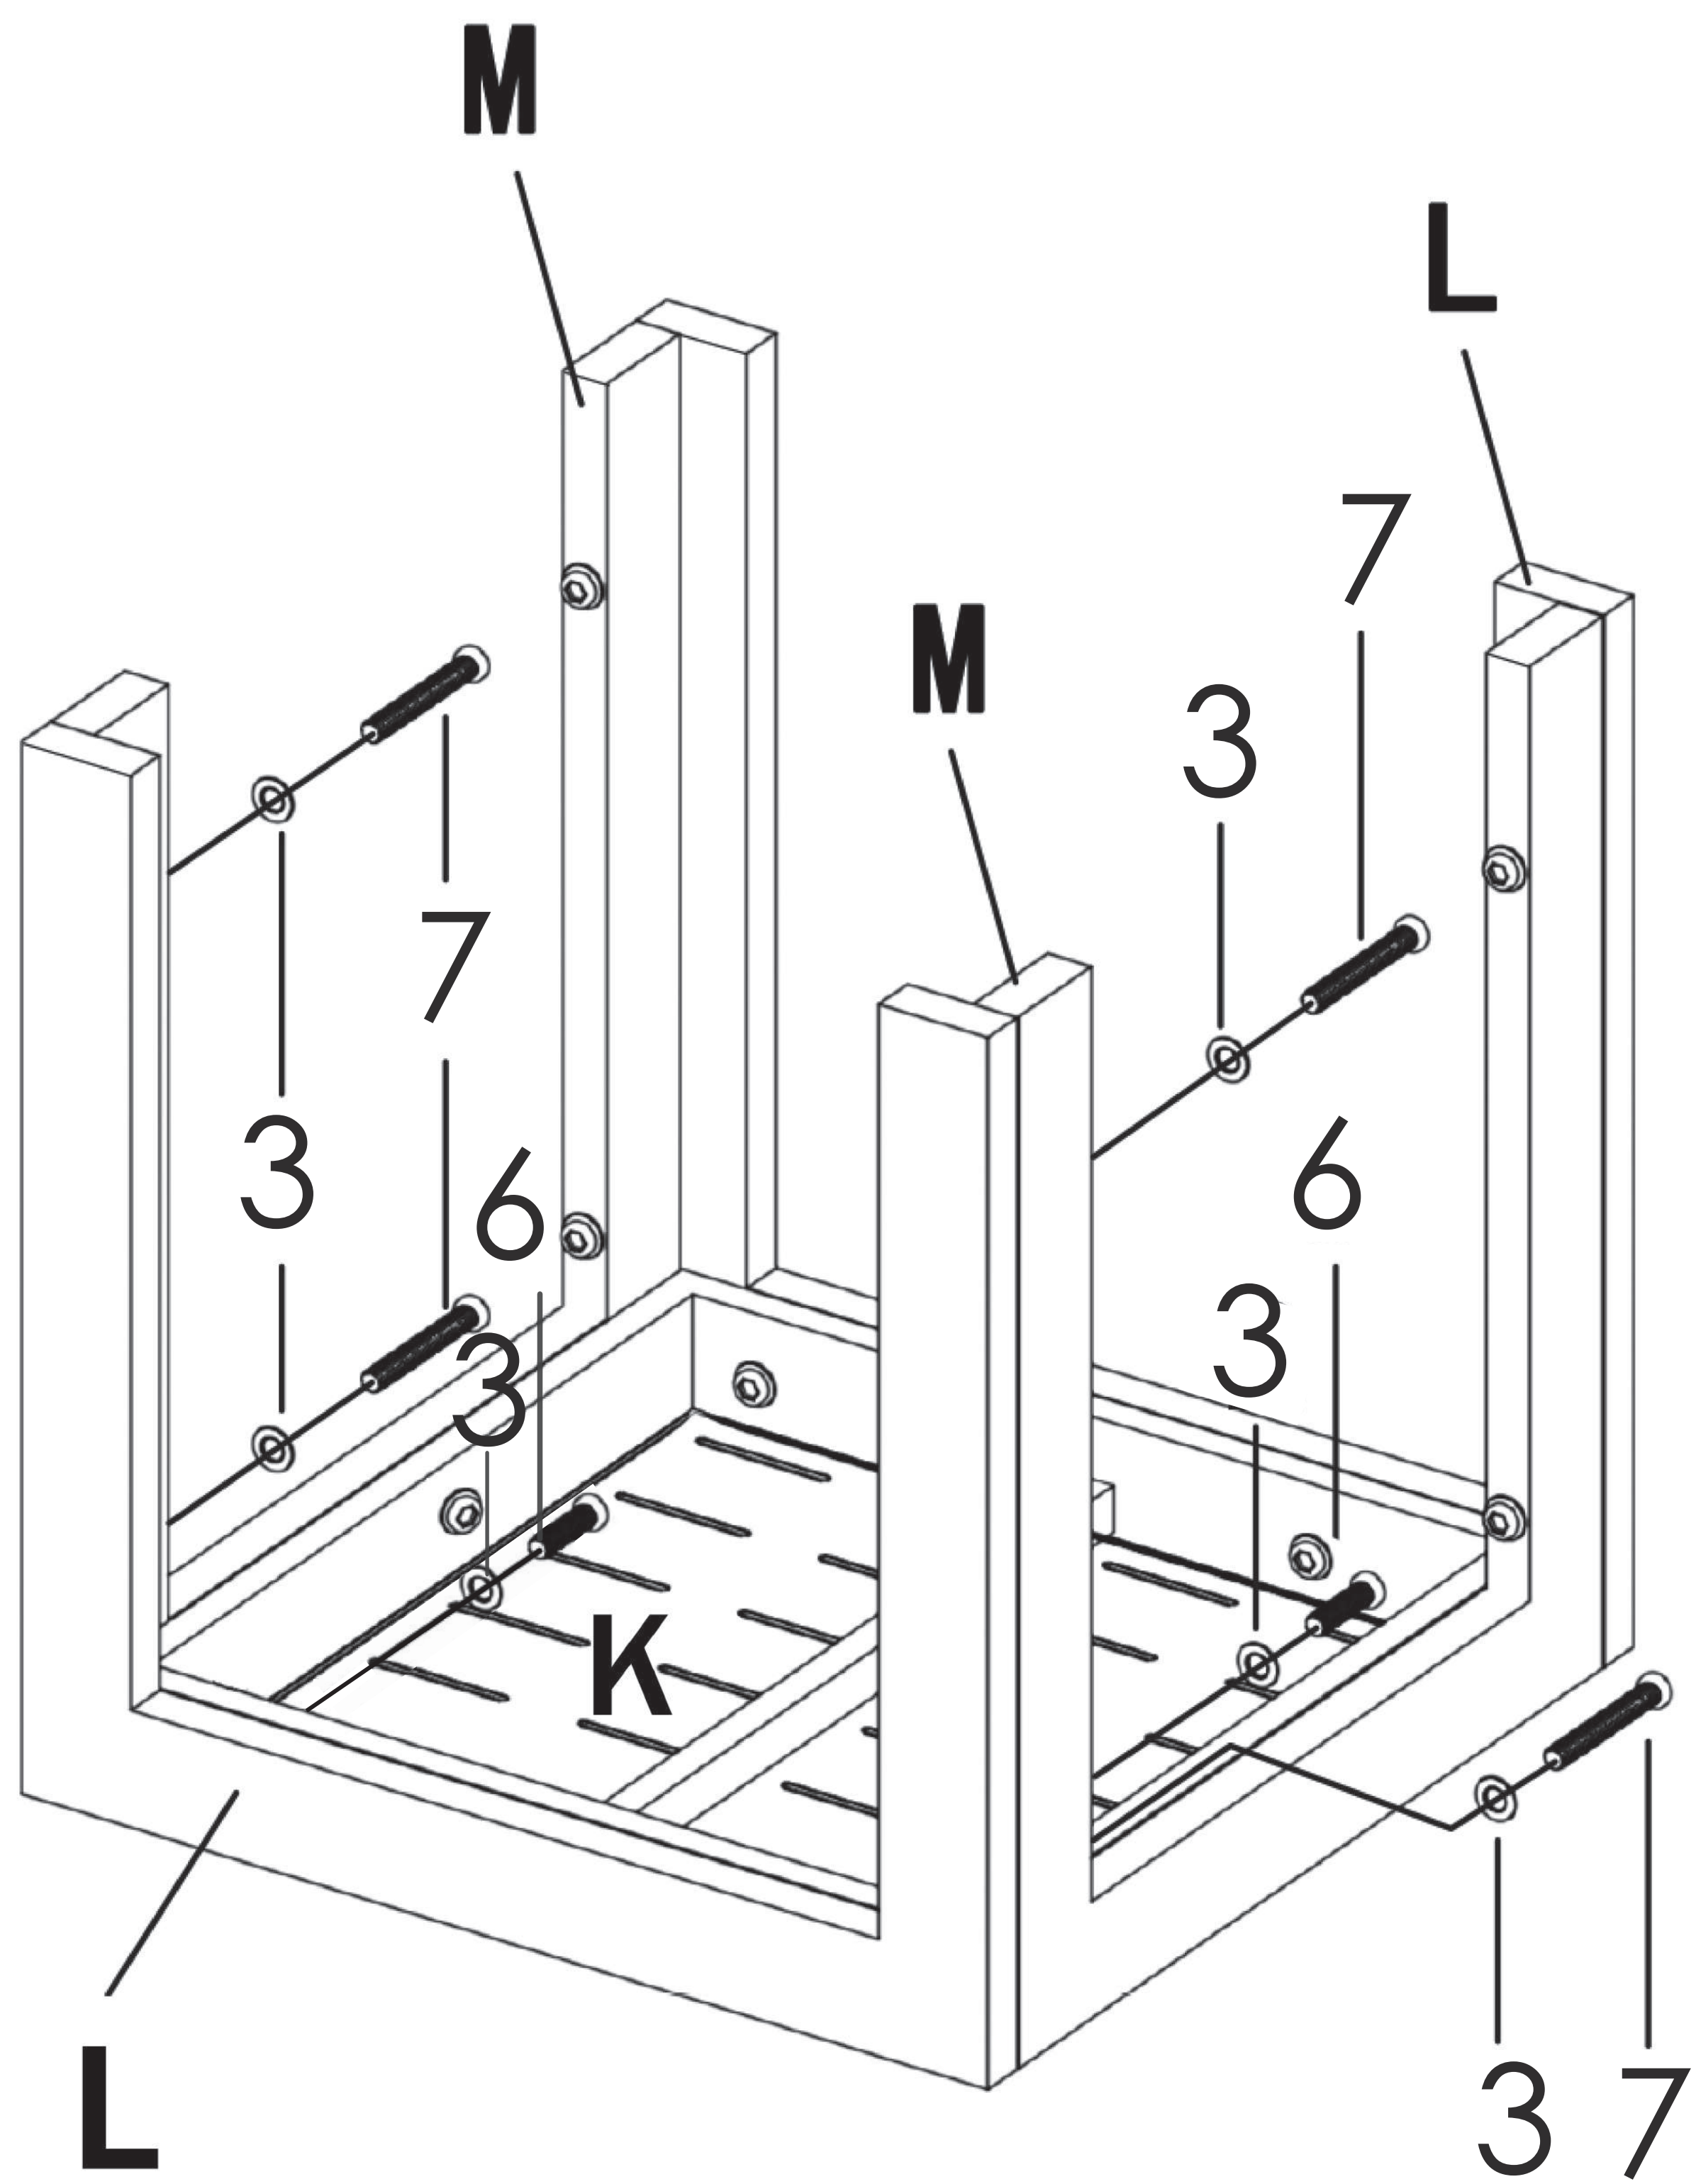


X2

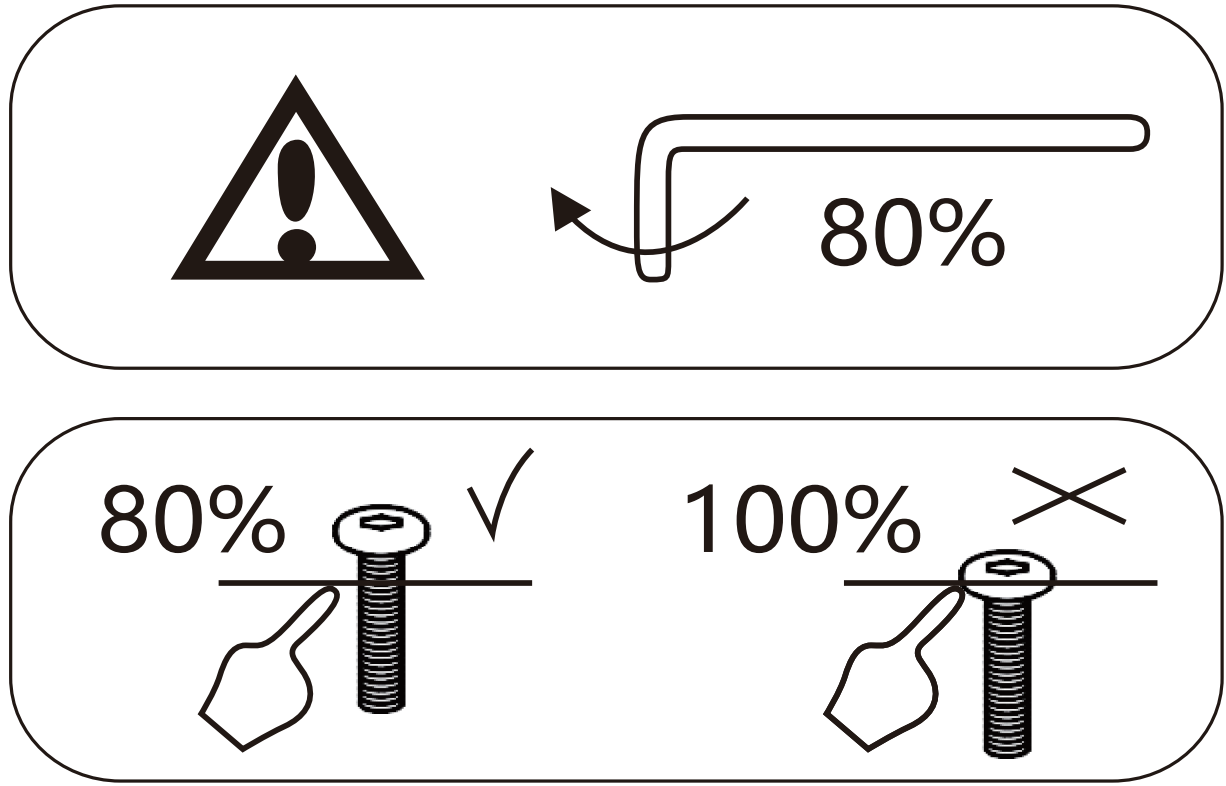


7*4PCS (M6*65)	6*2PCS (M6*30)	L*1PC	3*6PCS
1/4"-65mm	1/4"-30mm	60cm/23.6in	

5

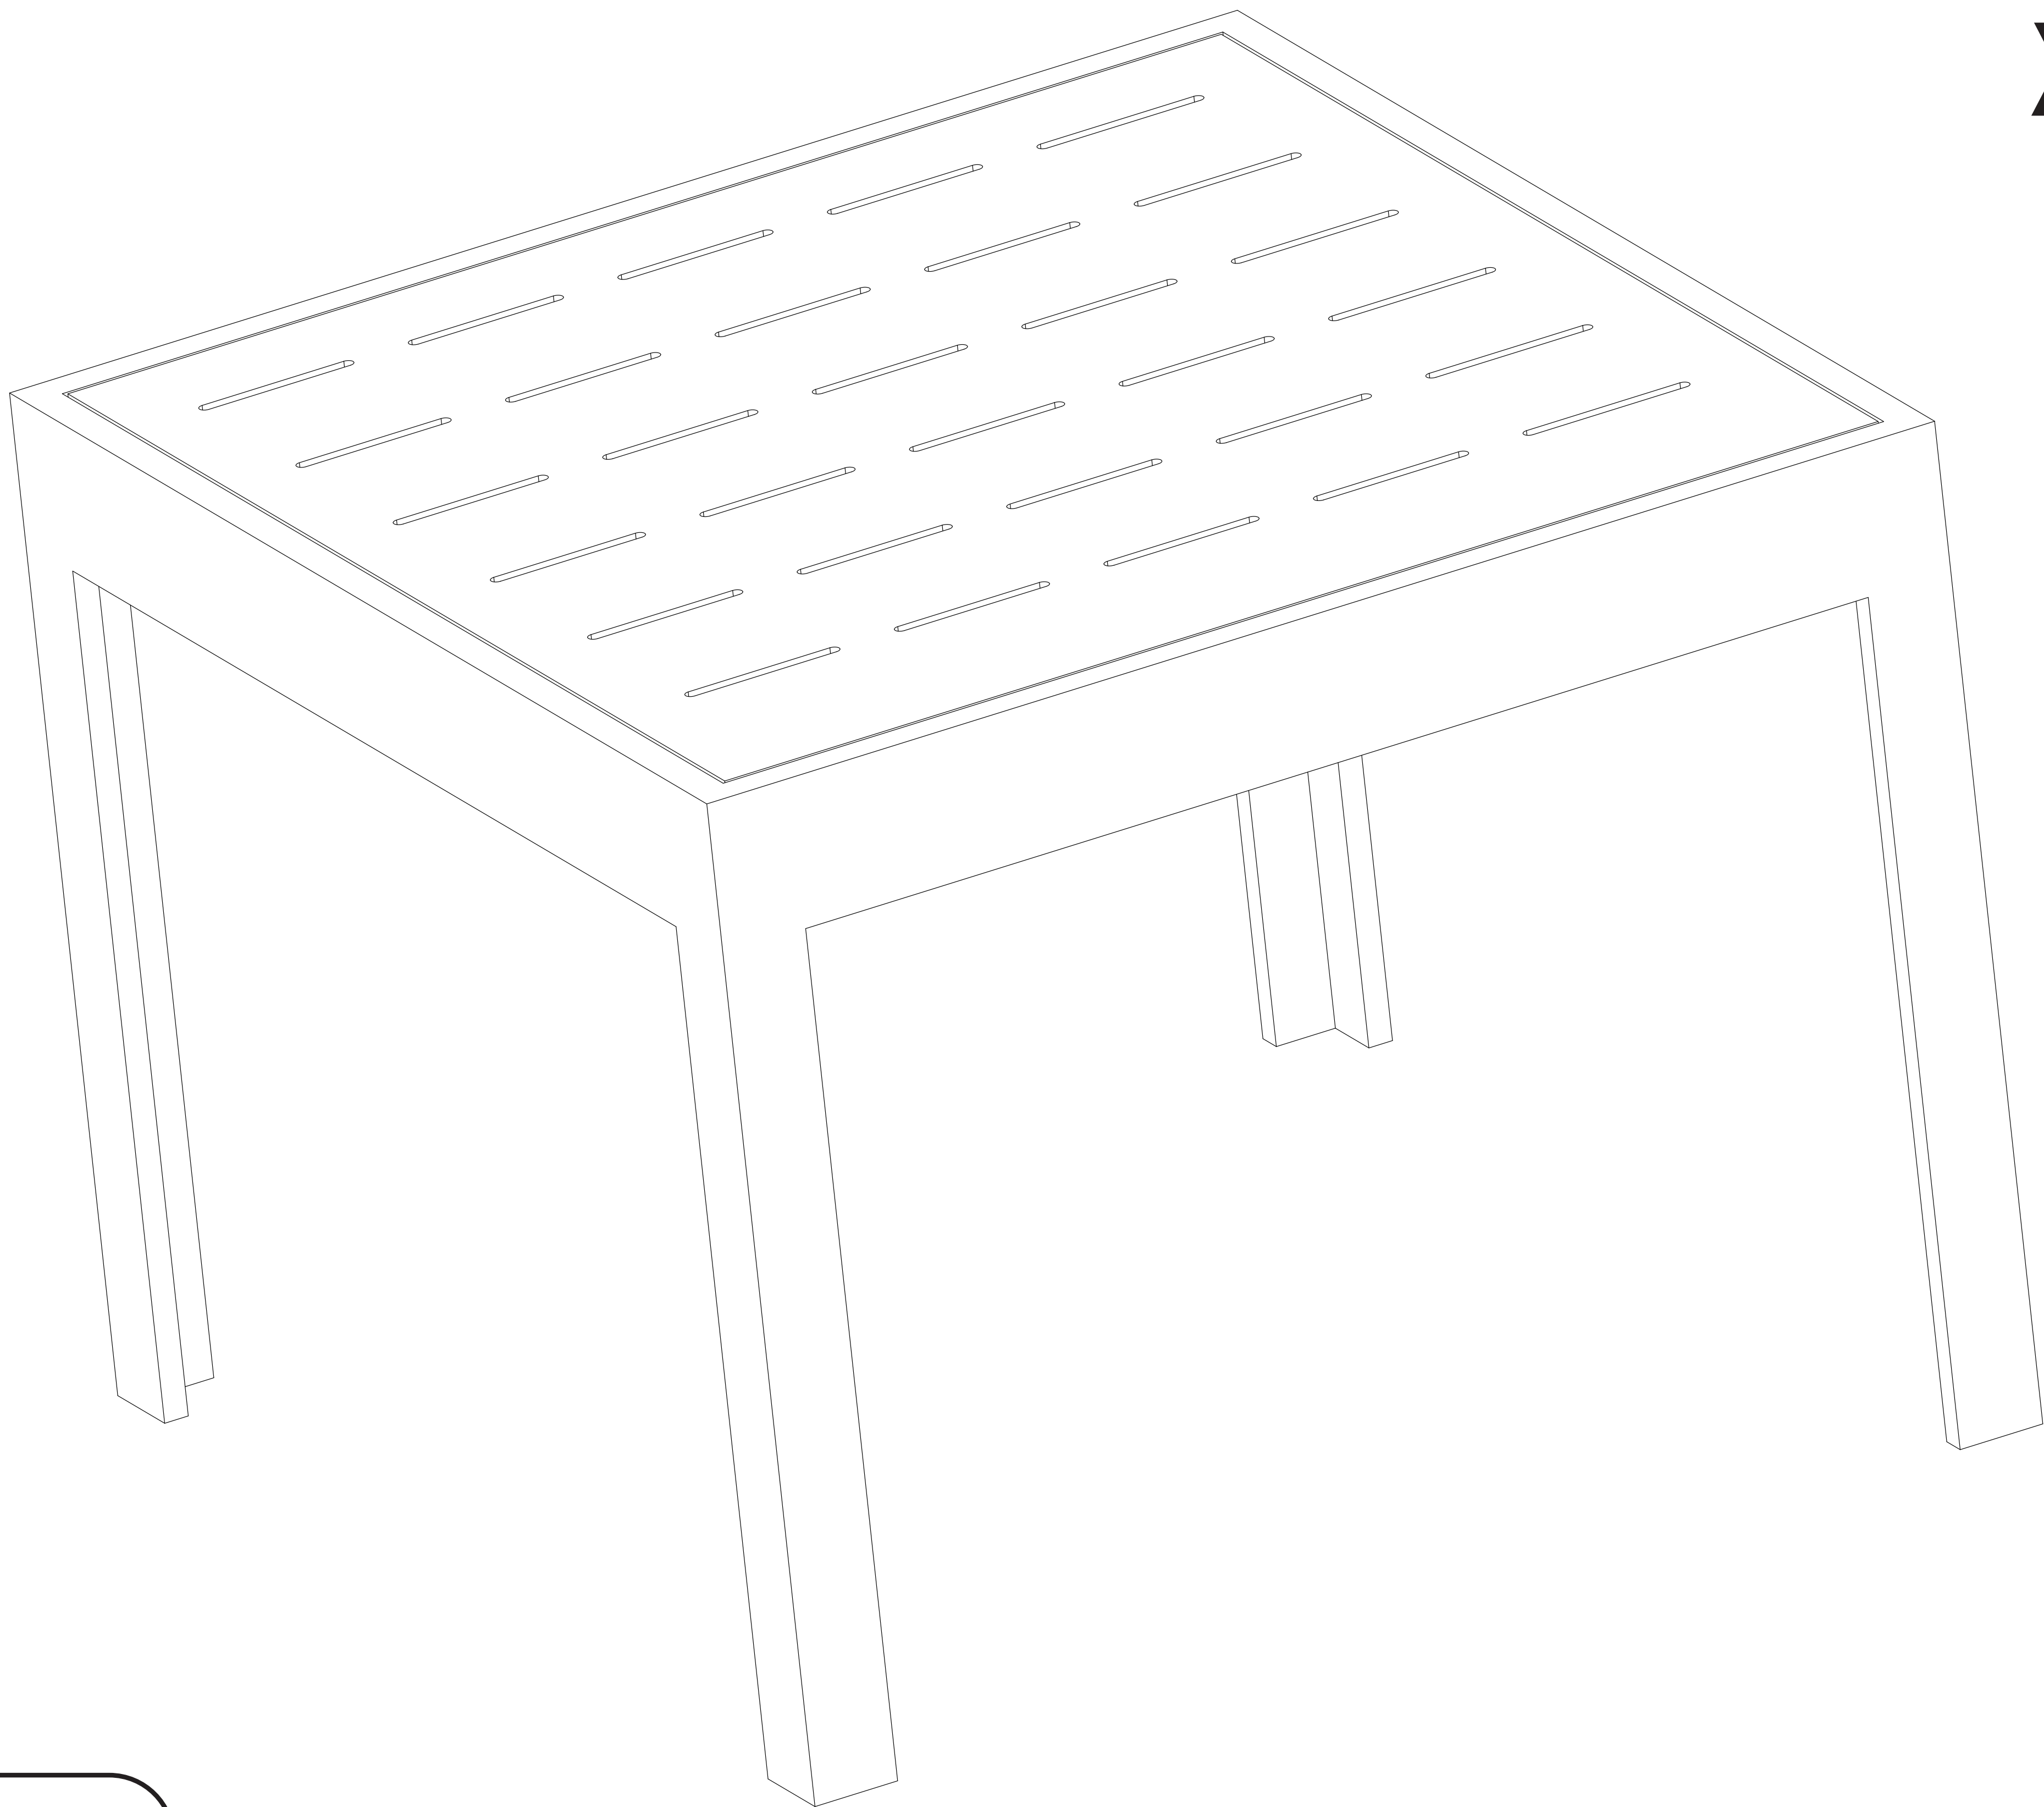

X2

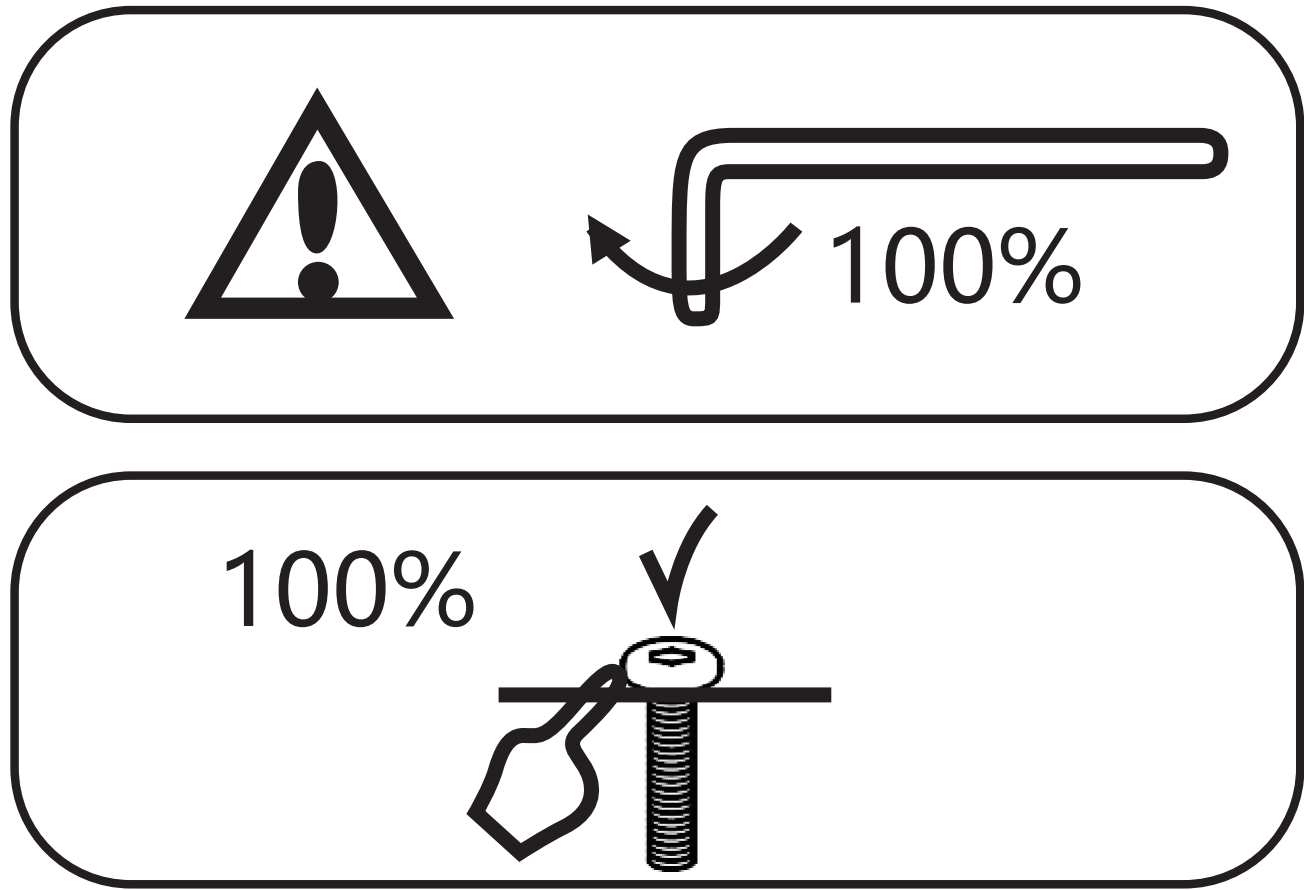

Ensure all screws are tightened before using