
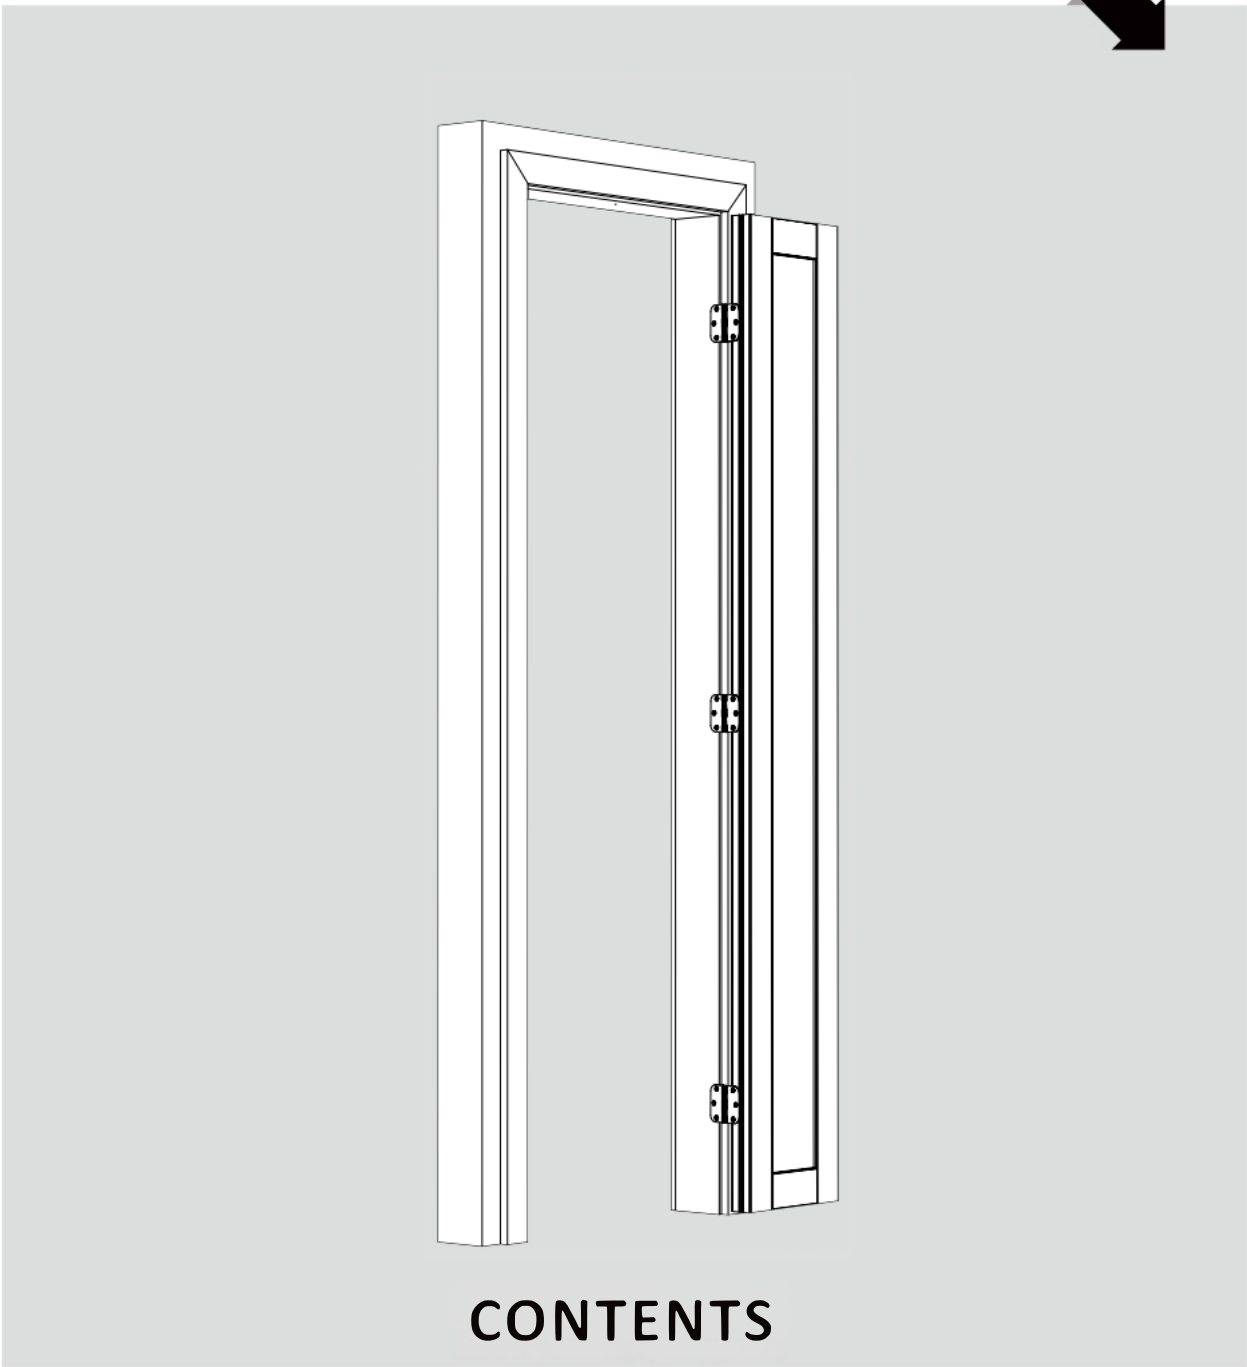
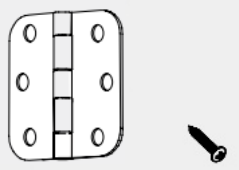
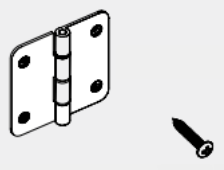
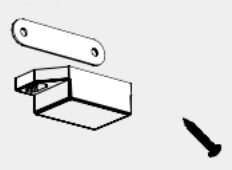


Assembly Instructions

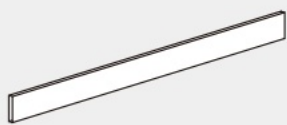

<p>3X Door Hinge</p>  <p>18X Long Screw</p>	<p>3X Center Hinge</p>  <p>12X Short Screw</p>	<p>1X Doorstop</p>  <p>4X Short Screw</p>	<p>1X Wood Doorstop</p> 
--	---	---	---


Suitable for door opening measurement

Note: Before installing the product, please accurately measure the door opening dimensions to avoid the product from being unusable.

The 24"x80" product is used for door openings of 24"x80.5".

The 30"x80" product is used for door openings of 30"x80.5".


The 36"x80" product is used for door openings of 36"x80.5".

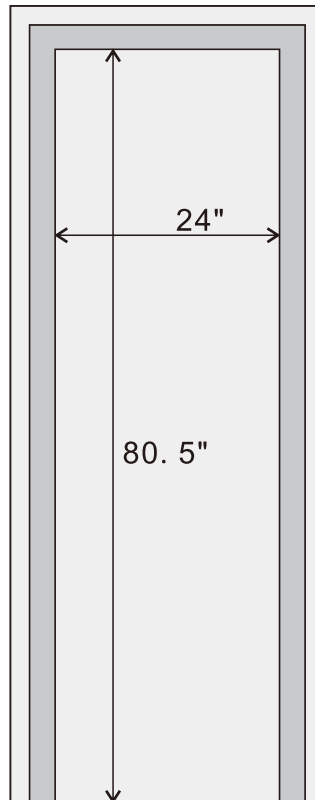

The illustration
is based on a
24"x 80" product.

Step 1 Install Center Hinge


Please first place the door panel horizontally on the ground, and use Center Hinges to connect the two door panels at the pre-drilled holes with Short Screws.

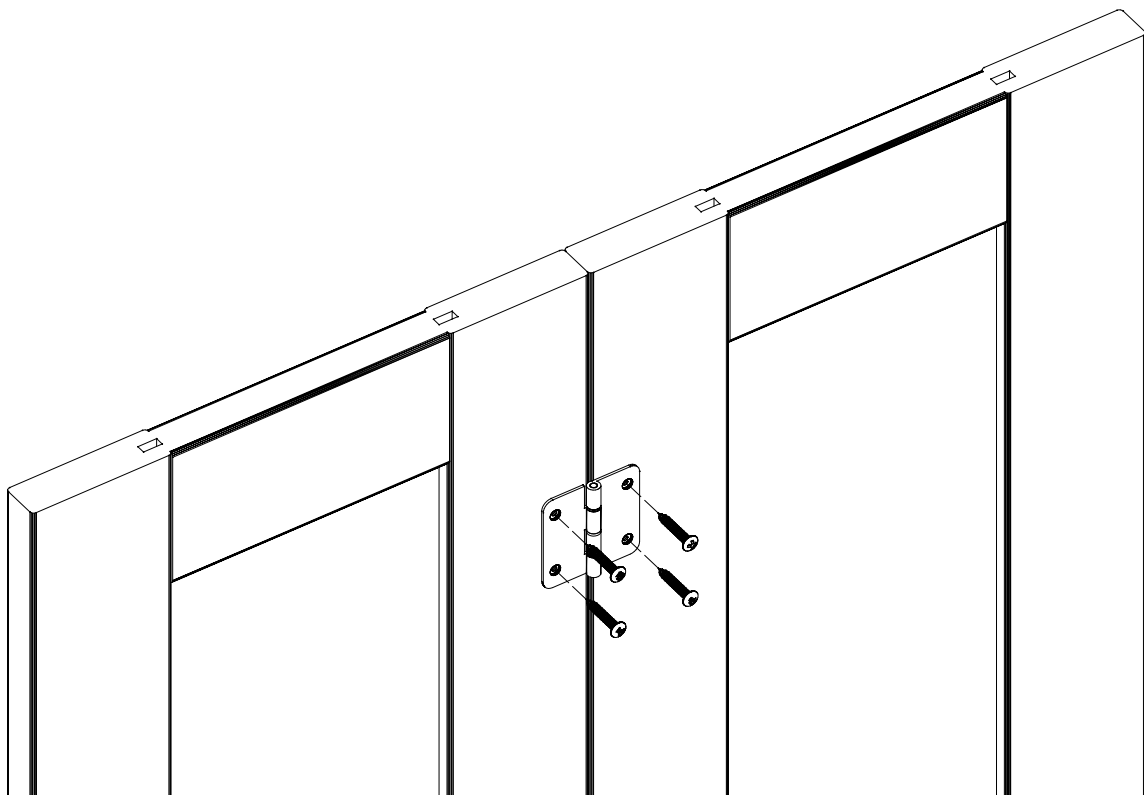

Step 2


Install Door Hinge

1. First, align the 3 Door Hinges with the edge of the door panel.
2. As shown in the figure, adjust the distance of the 3 Door Hinges to the specified measurements and mark the hole positions with a pencil.

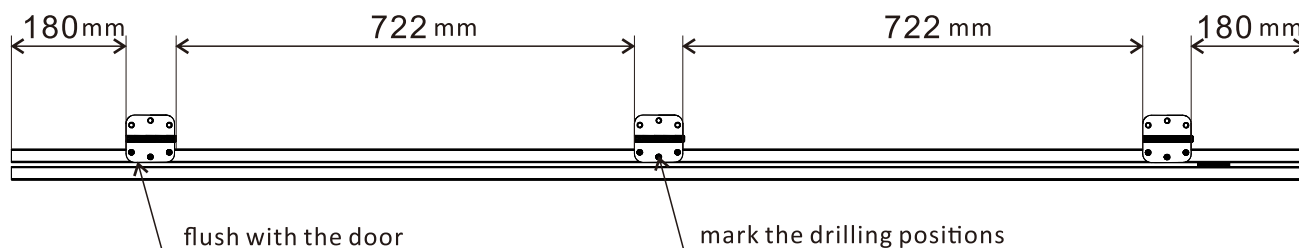

Step 2


Install Door Hinge

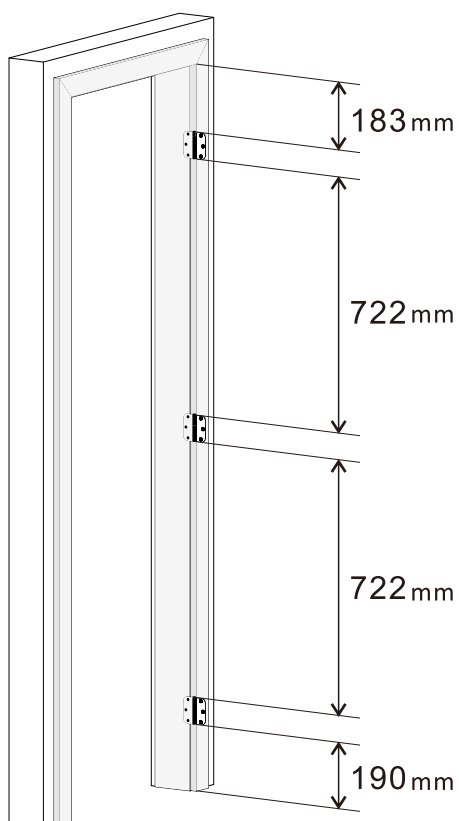

3. Place the 3 Door Hinges on the door frame as shown in the figure, and adjust the distance between the 3 Door Hinges according to the specified measurements.

Note: The pins of the Door Hinges should be facing upwards.

Note: The hinge pins should be facing upwards.

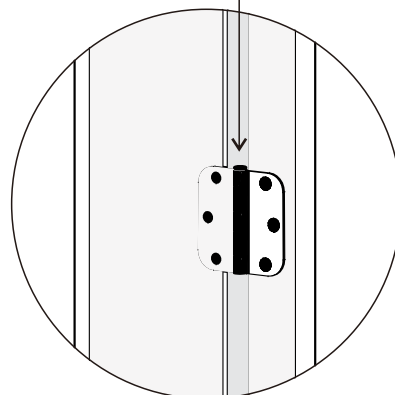


Step 2

Install Door Hinge

4. The distance between the edges of the 3 Door Hinges and the frame is 21mm; mark the hole positions with a pencil.

Drilling positions are well marked.


21mm

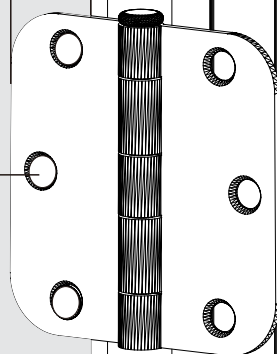

Step 2


Install Door Hinge

5. Remove the pin from the Door Hinge

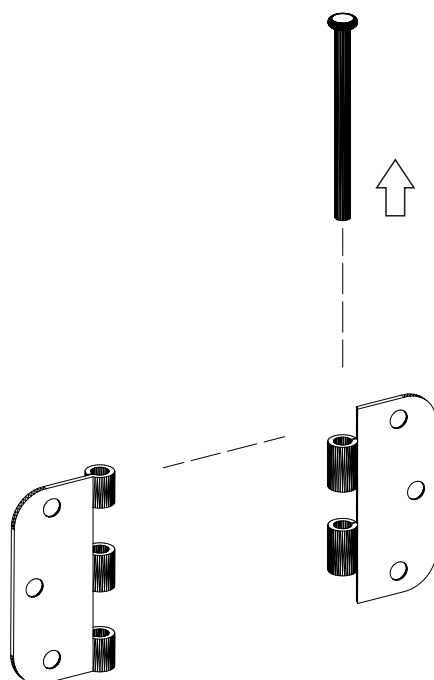

Step 2

Install Door Hinge

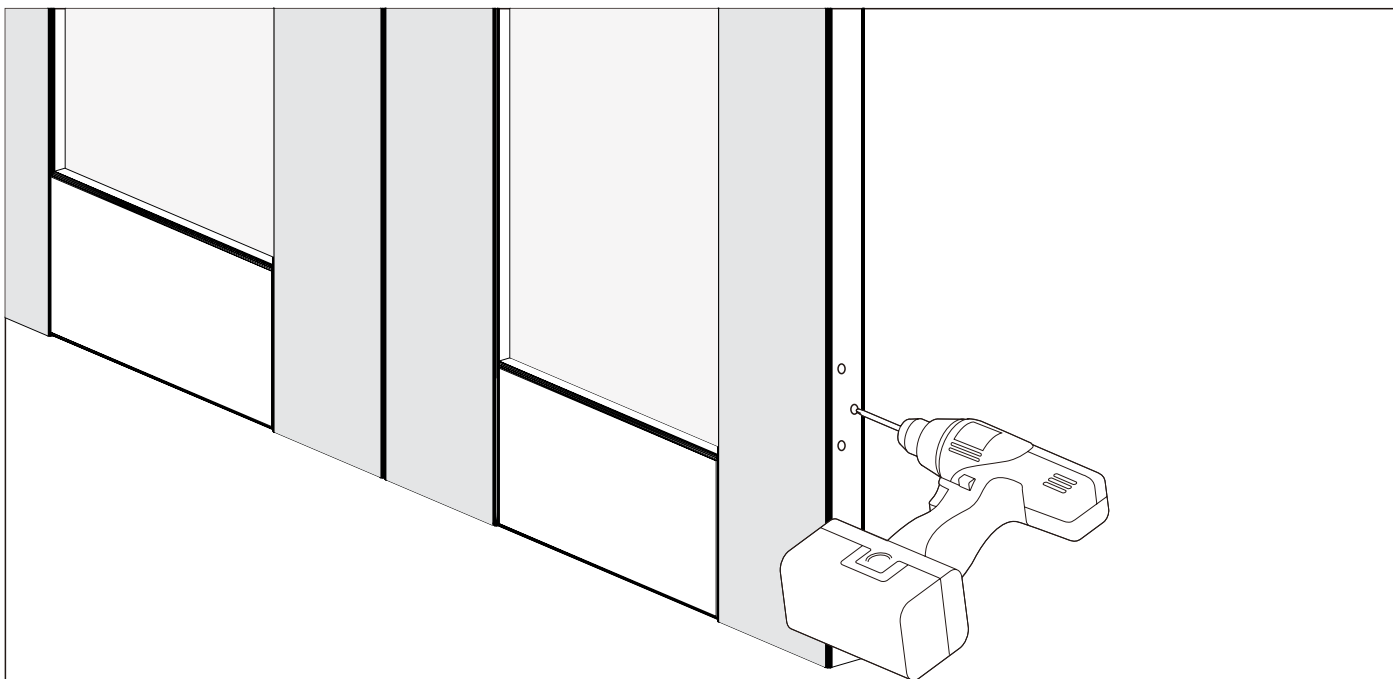


6. At the marked spots on the door panel, drill pilot holes using a 3mm diameter drill bit.

Note: If you directly screw in the Door Hinges without drilling pilot holes, it may cause the door panel to crack.

Step 2

Install Door Hinge


7. At the pilot holes, connect the Door Hinge to the door panel using Short Screws.

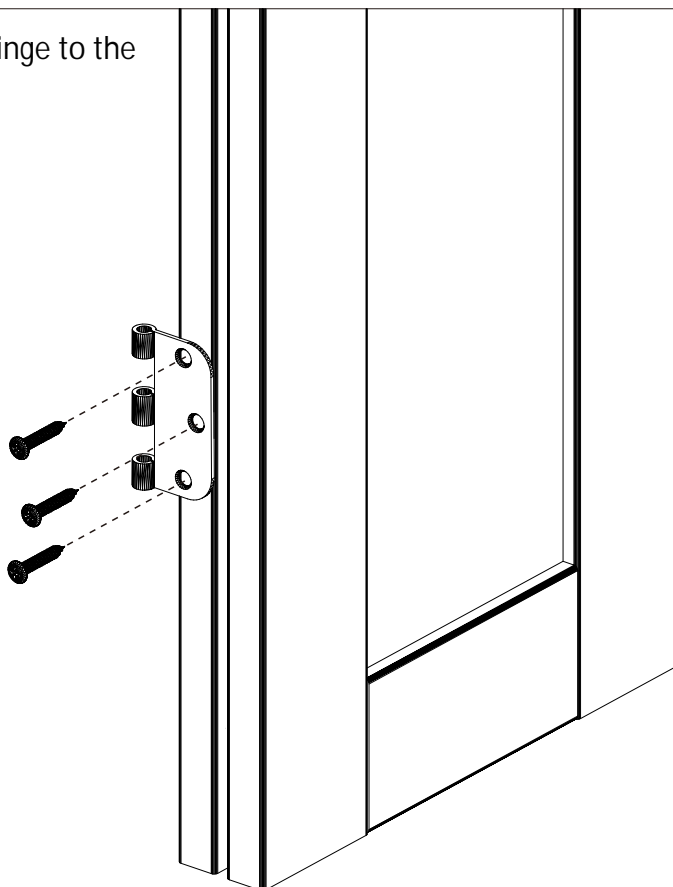

Step 2

Install Door Hinge


8. At the marked spots on the door frame, drill pilot holes using a 3mm diameter drill bit.

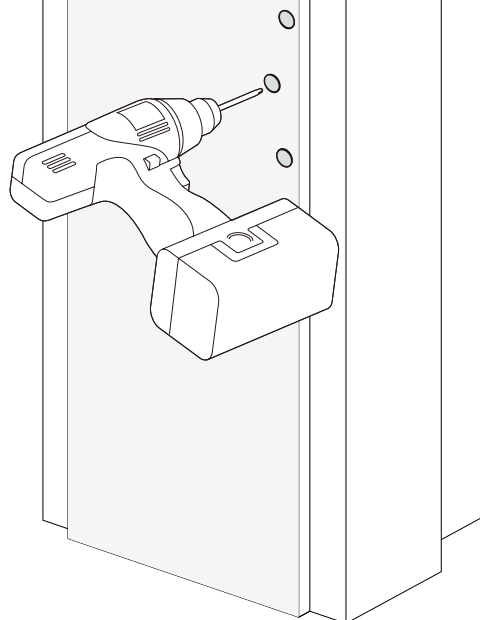

Step 2


Install Door Hinge

9. At the pilot holes, connect the Door Hinge to the door panel using Short Screws.

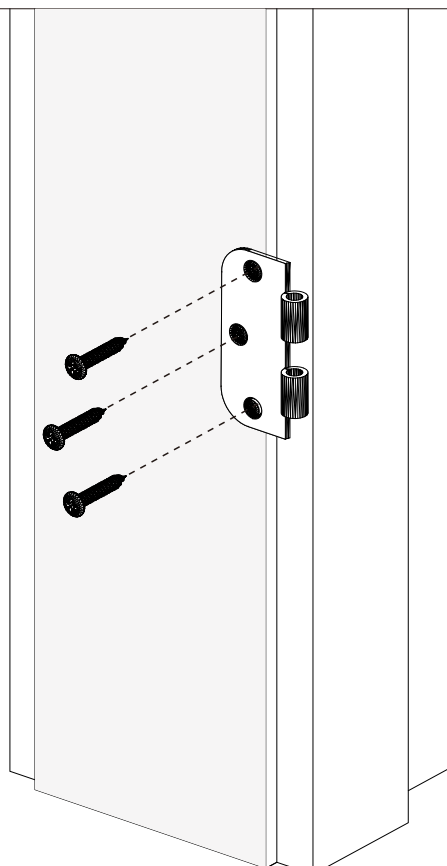



Step**2****Install Door Hinge**

10. Two people are required to assist. Align the Door Hinge holes and insert the hinge pin.

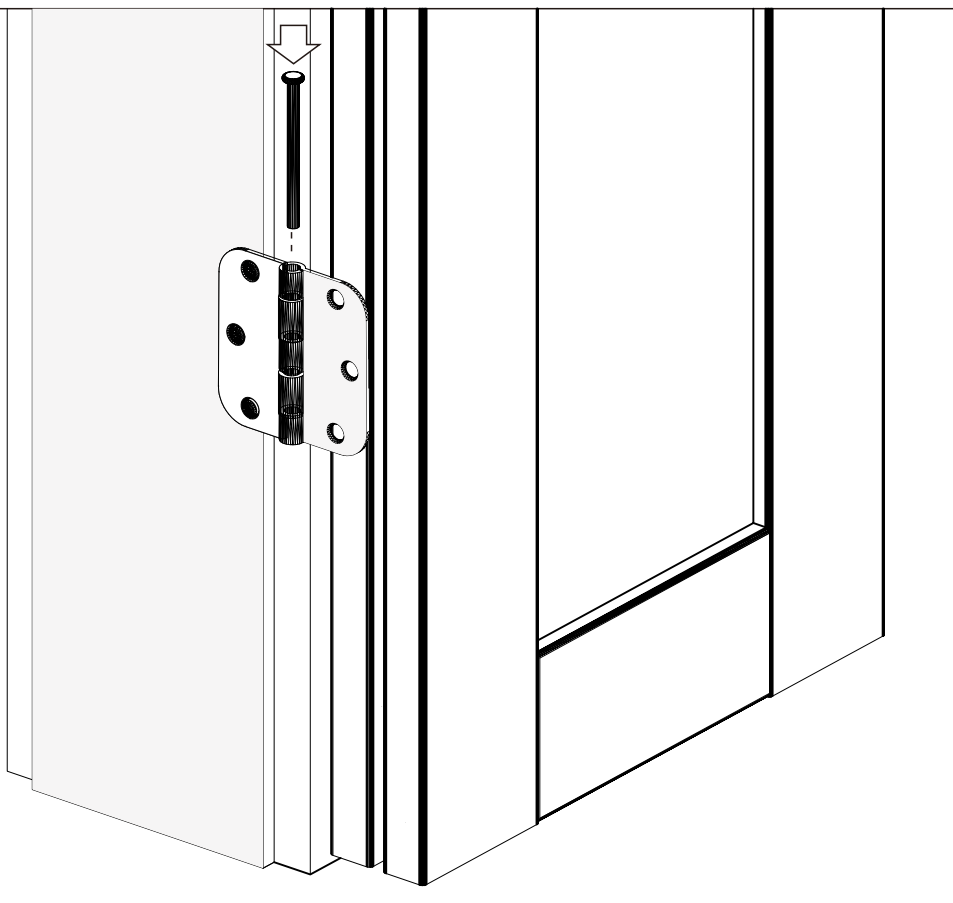**Step****2****Install Door Hinge**


11. After the Door Hinge is installed, there should be a 3mm gap between the top of the door panel and the top of the door opening to ensure the door panel operates properly.

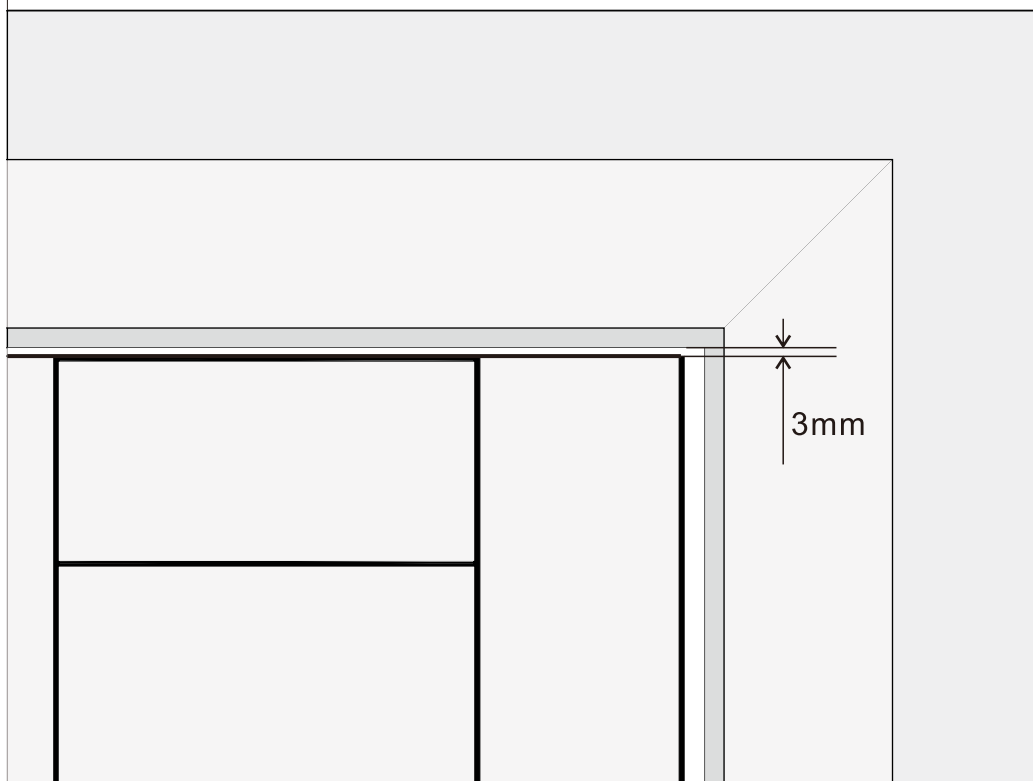

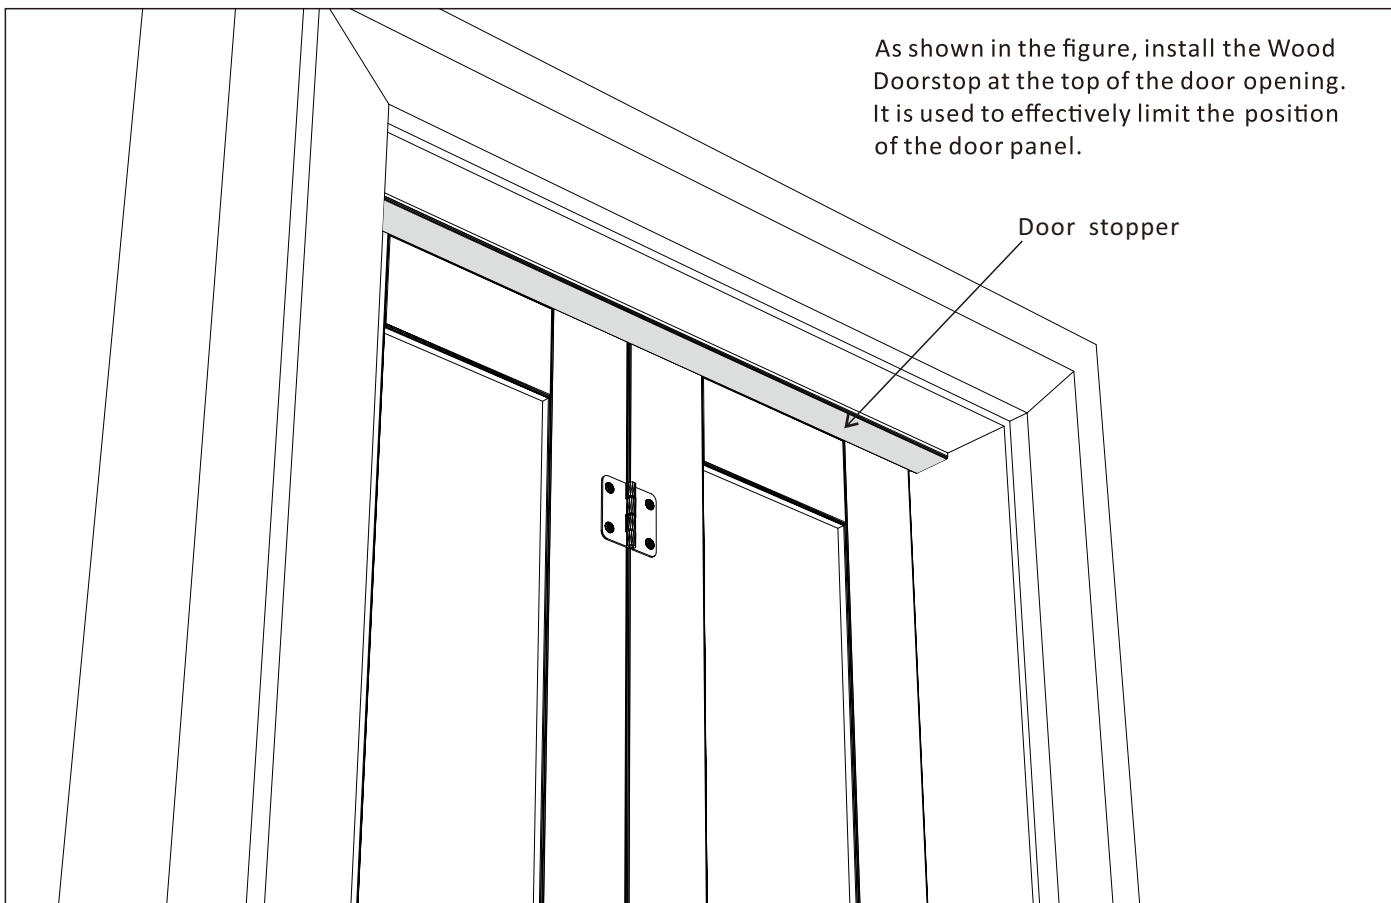Step**3****Install Wood Doorstop****Step****4****Install the Doorstop system**



Confirm the installation position of the Doorstop system:

- When the Door Hinge is on the left side, the Doorstop system should be installed on the right door panel.
- When the Door Hinge is on the right side, the Doorstop system should be installed on the left door panel.

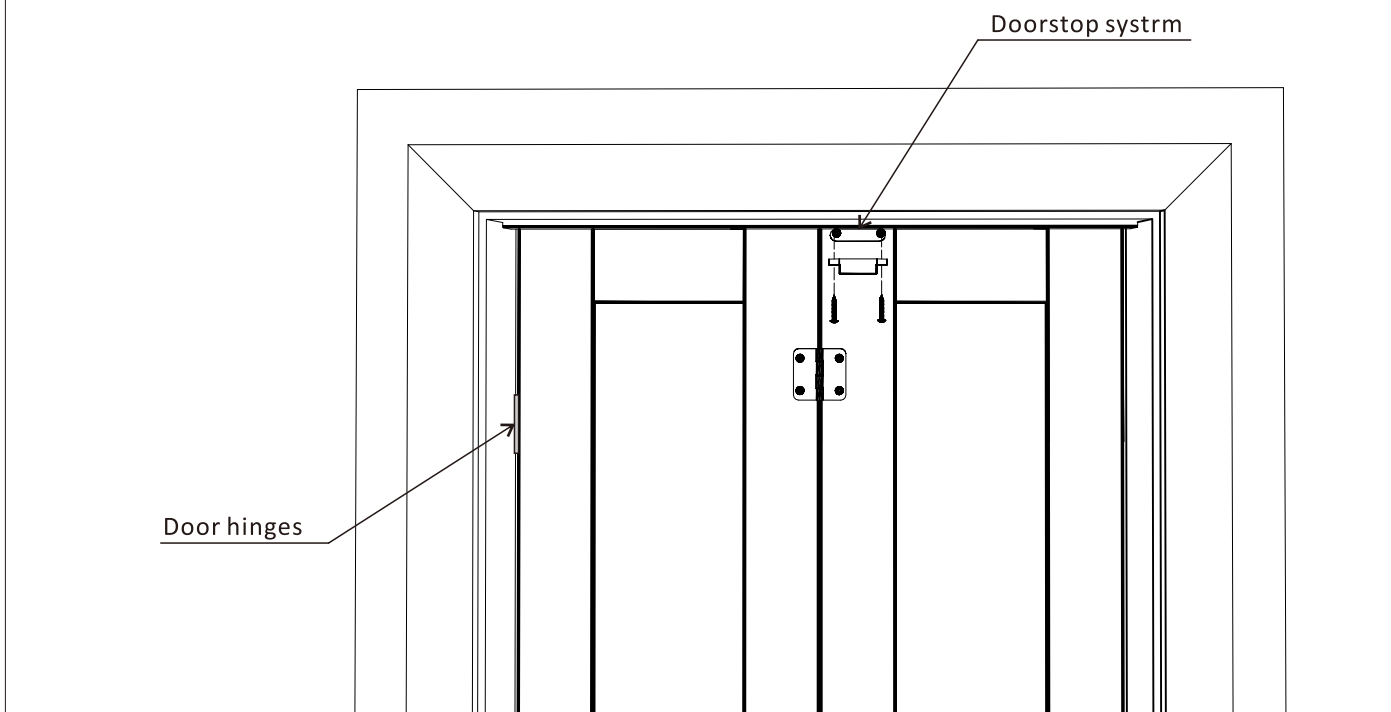

Step**4****Install the Doorstop system**

As shown in the figure, use a short screw to connect the Doorstop system to the door panel and door frame.

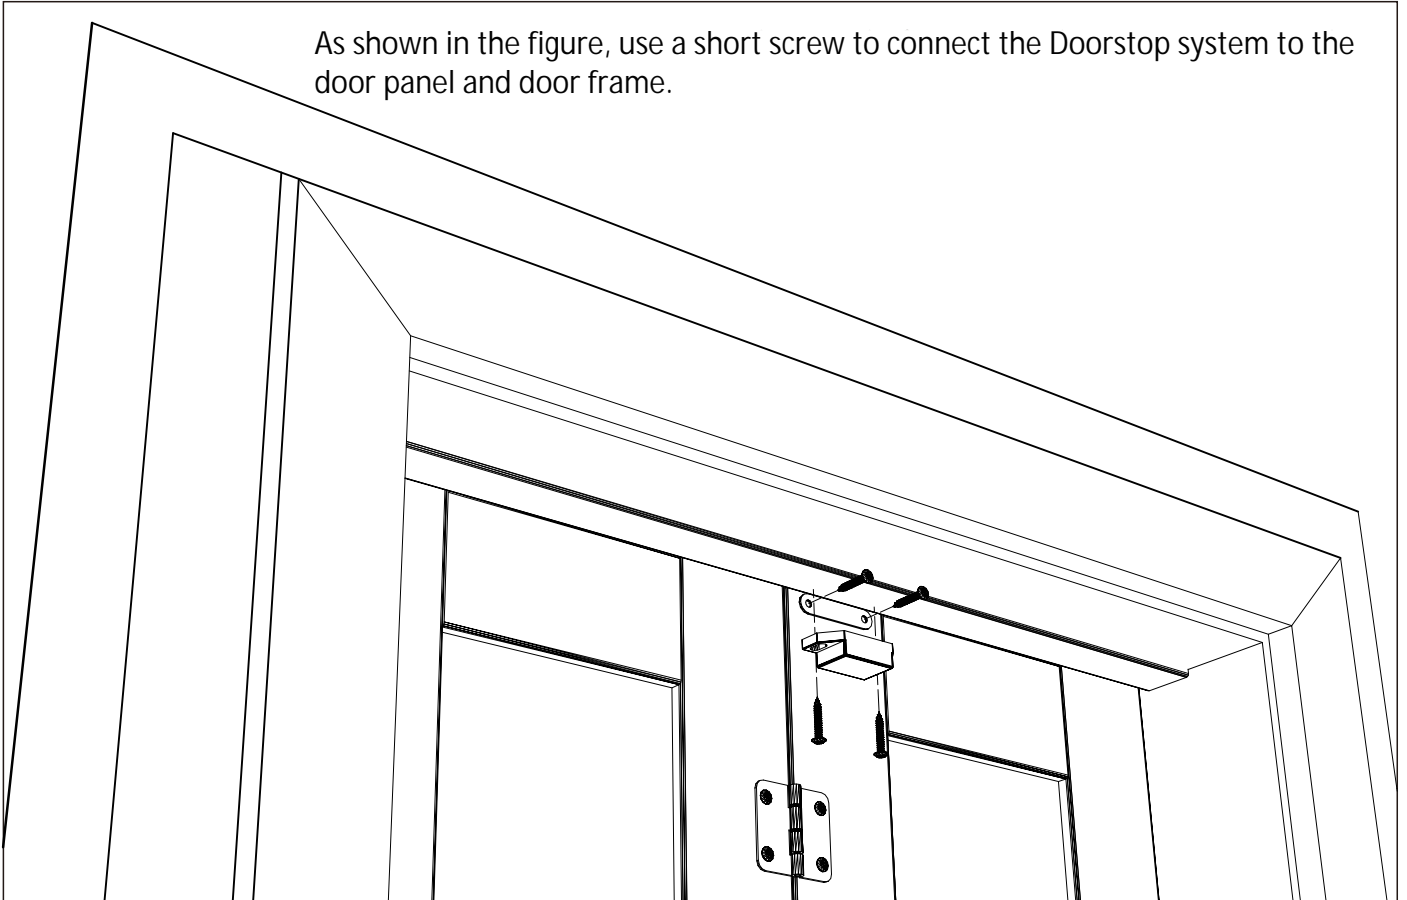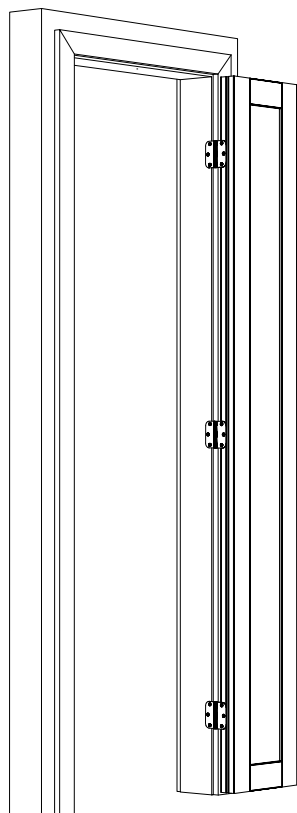**Step****5****Finish**

Assembly Finished.