
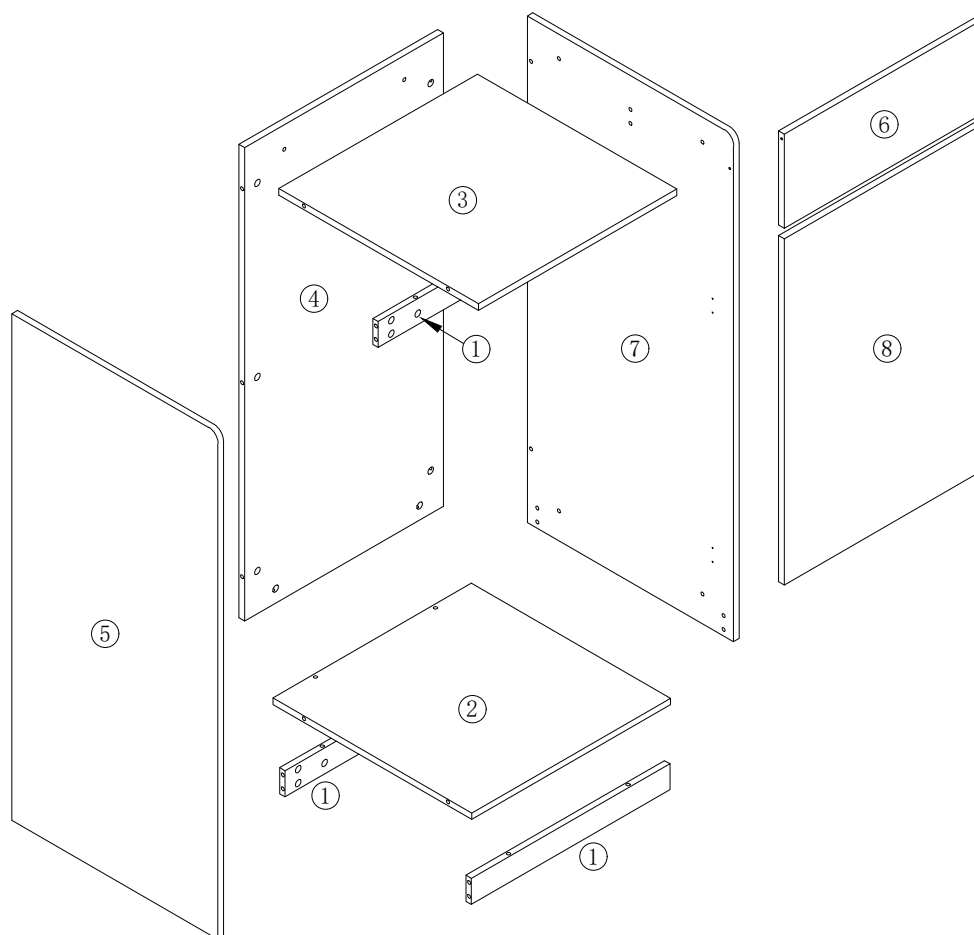
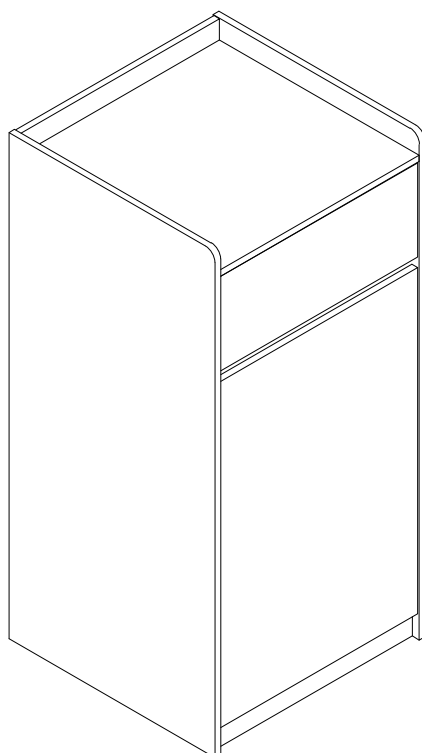

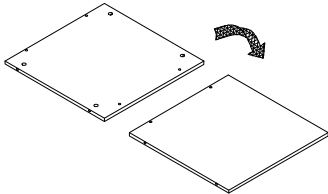
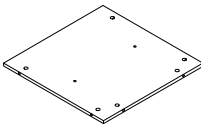
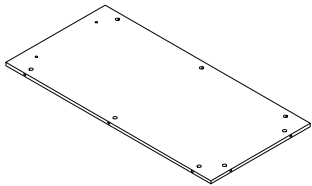
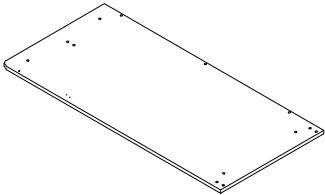

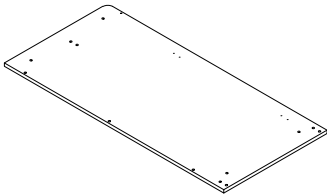
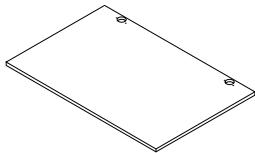



ASSEMBLY INSTRUCTION




ASSEMBLY INSTRUCTION

①  3PCS	②  1PC	③  1PC	④  1PC
⑤  1PC	⑥  1PC	⑦  1PC	⑧  1PC
A  M6*40 36PCS	B  Ø15*12 36PCS	C  30*14*9 1PC	D  Ø3.5*14 14PCS
E  Ø5*15 2PCS	F  Ø15 8PCS	G  2PCS	H  36PCS
I   Ø3.5*30  Ø6*30  Ø3.5*14 1PC			


Step 1

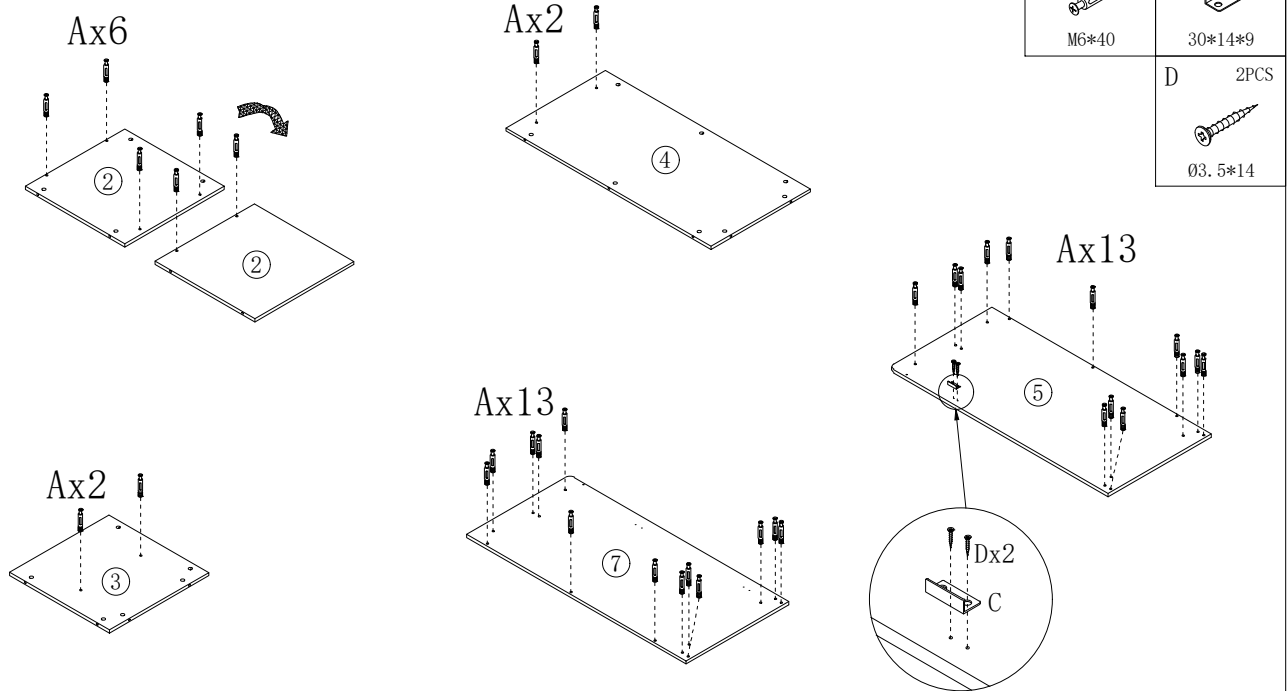

Step 2

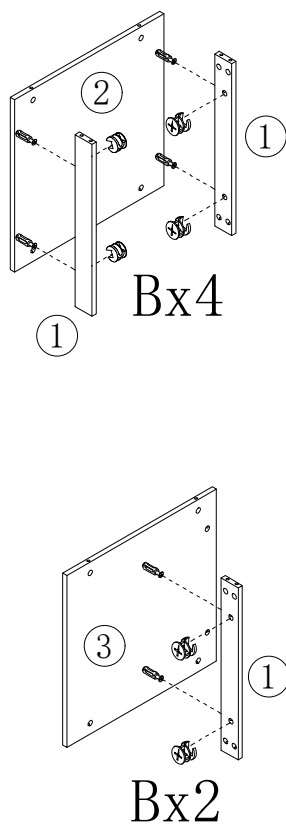

Step 3

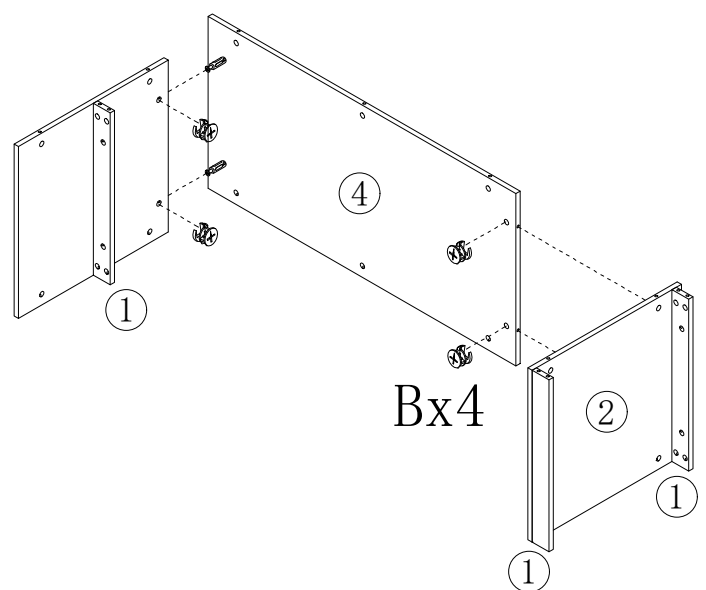


Step 4

B 13PCS



Ø15*12

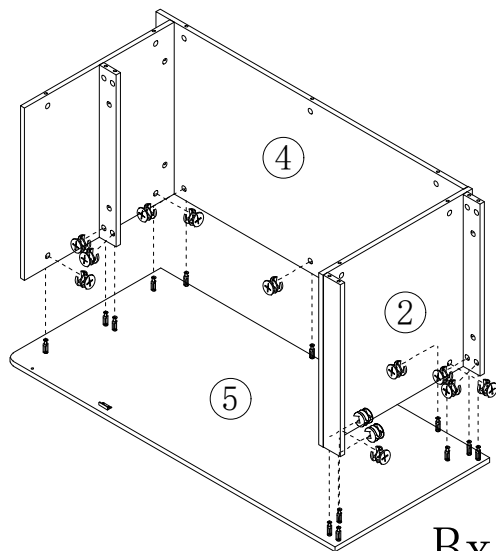


Step 5

E 2PCS



Ø5*15

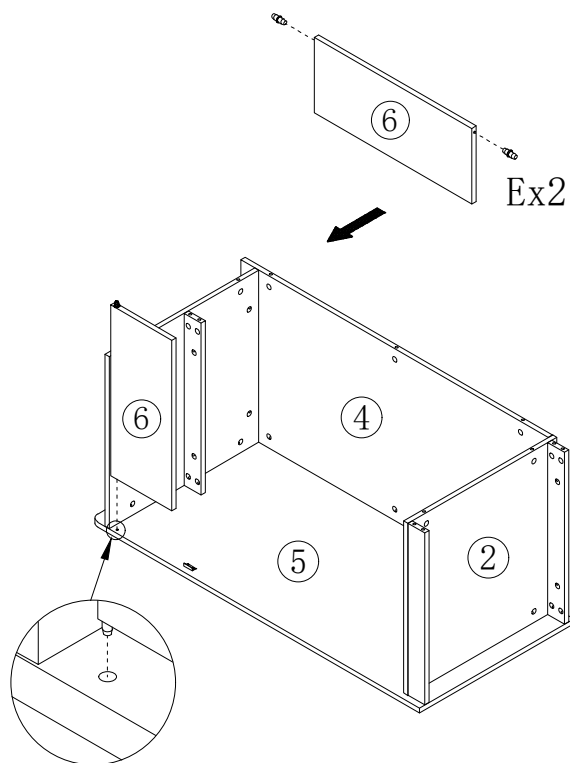


Step 6

B 13PCS



Ø15*12

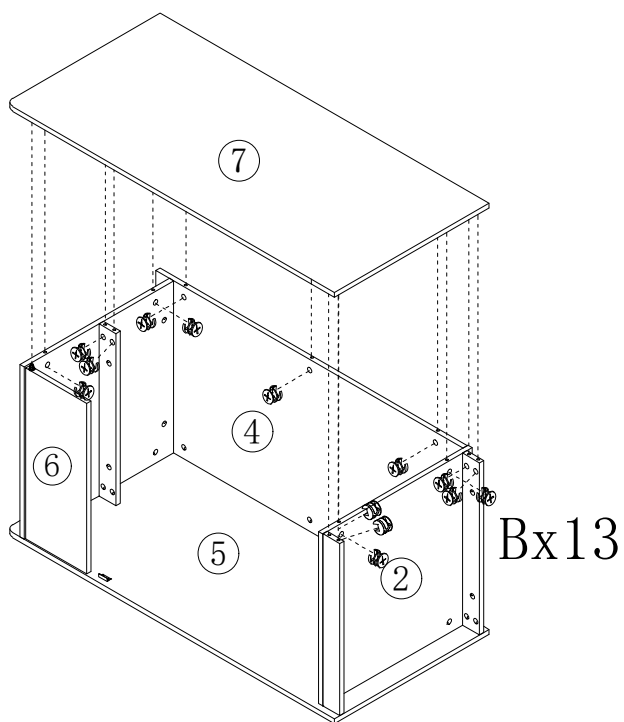


Step 7

F 8PCS



Ø15

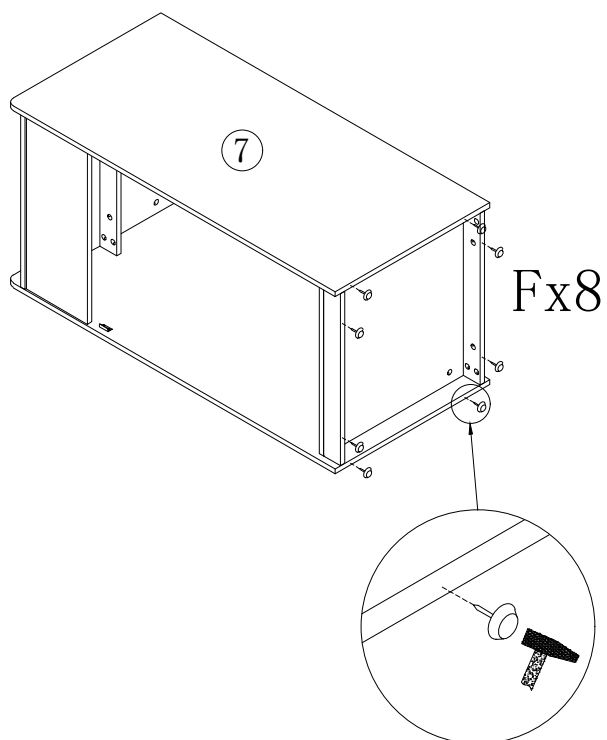


ASSEMBLY INSTRUCTION

Step 8


D 4PCS
Ø3.5*14

G 2PCS

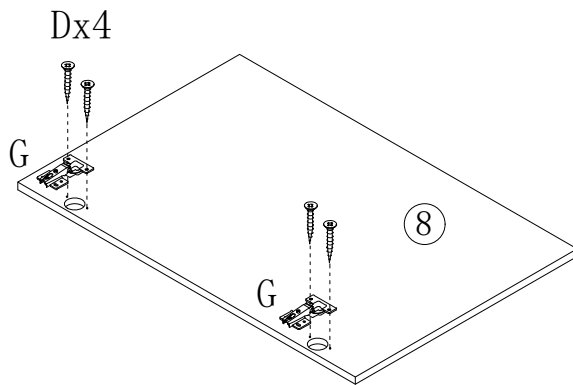


Step 9

D 8PCS
Ø3.5*14

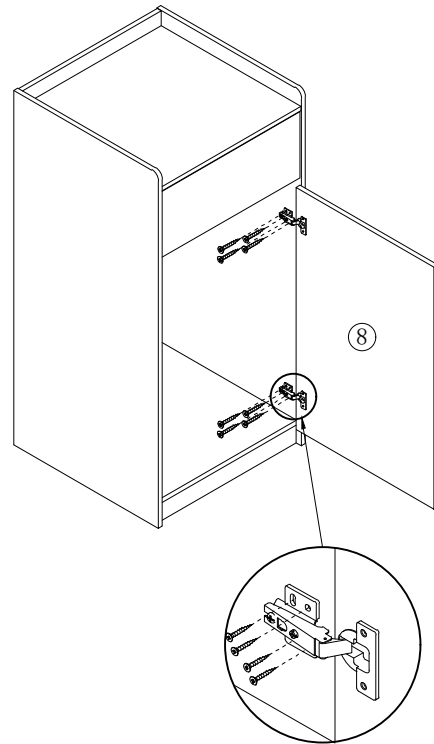


Step 10

I 1PC
Ø3.5*30
Ø3.5*14

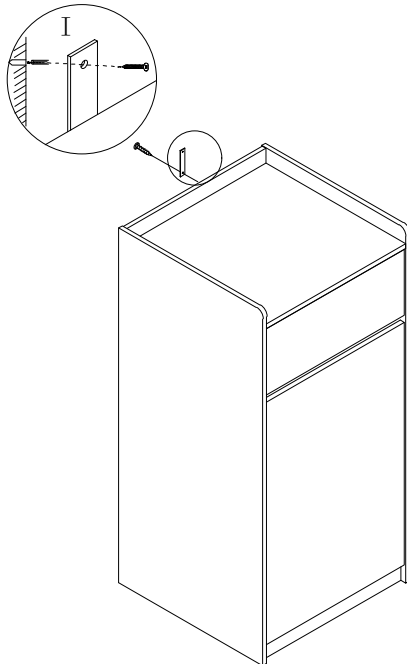

Step 11

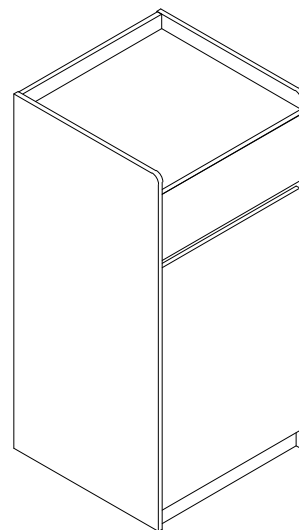

OK