



BED FRAME

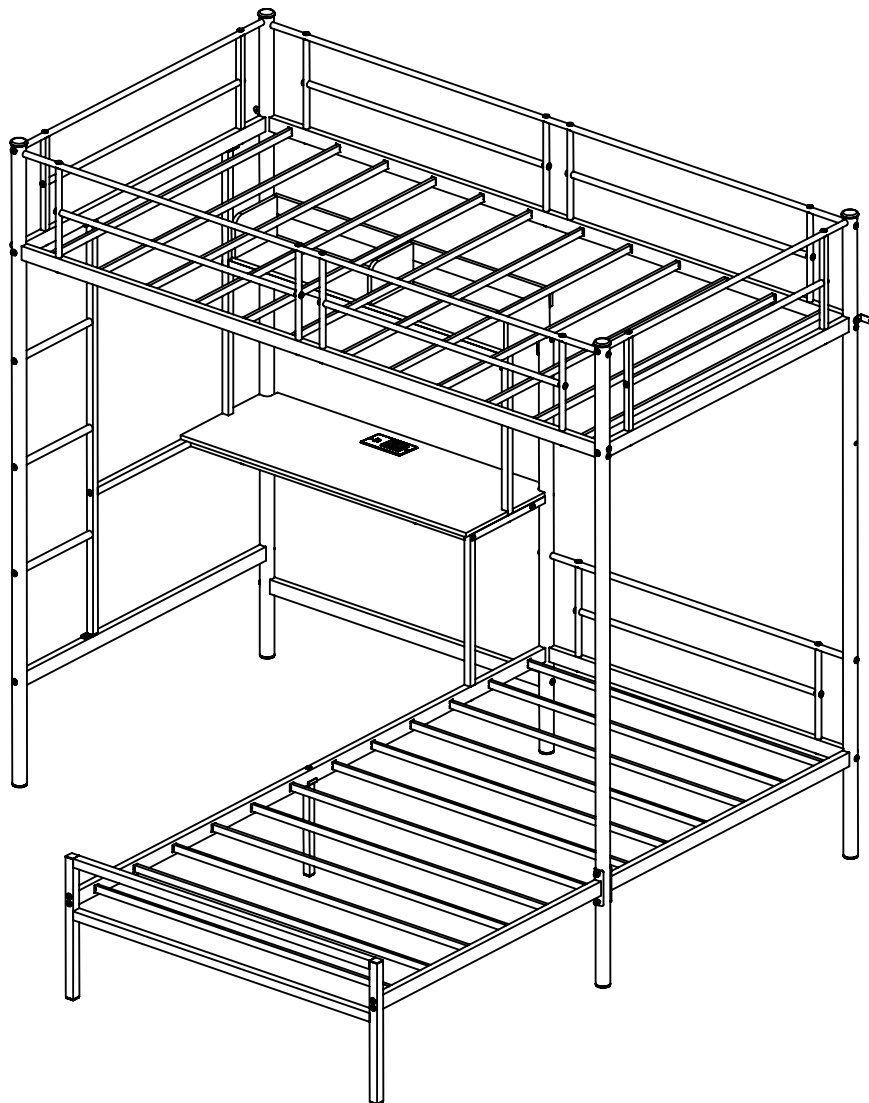

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




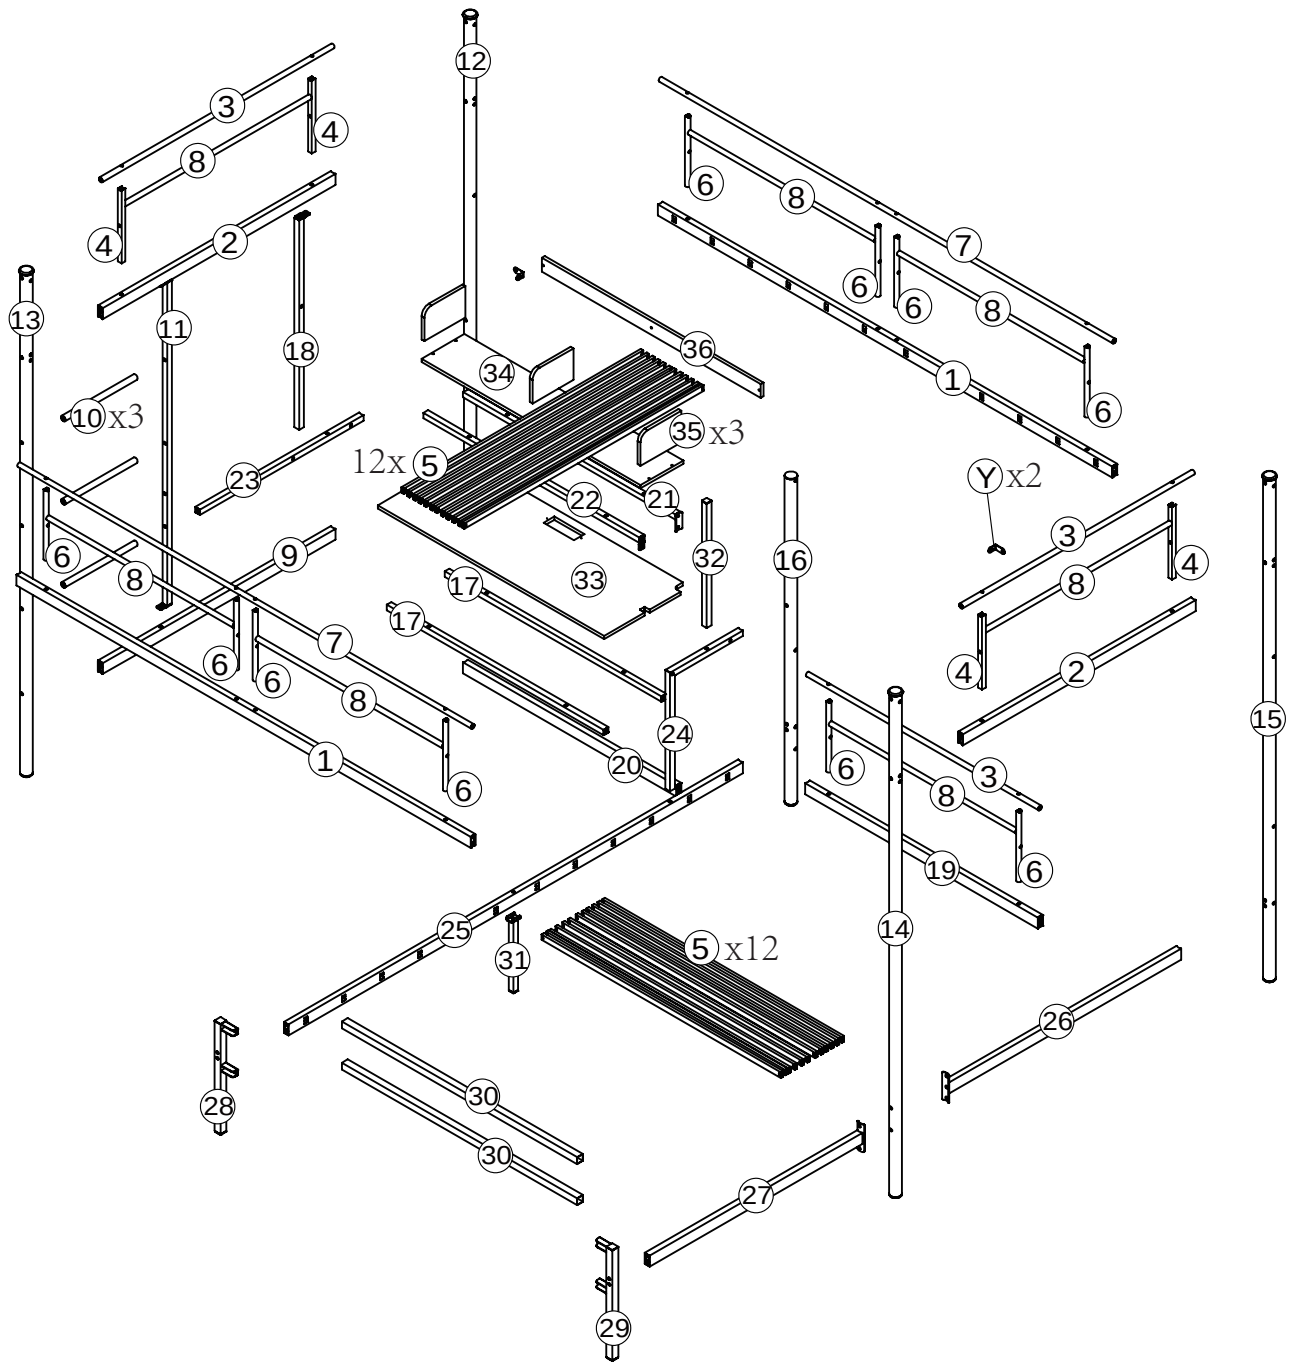


Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

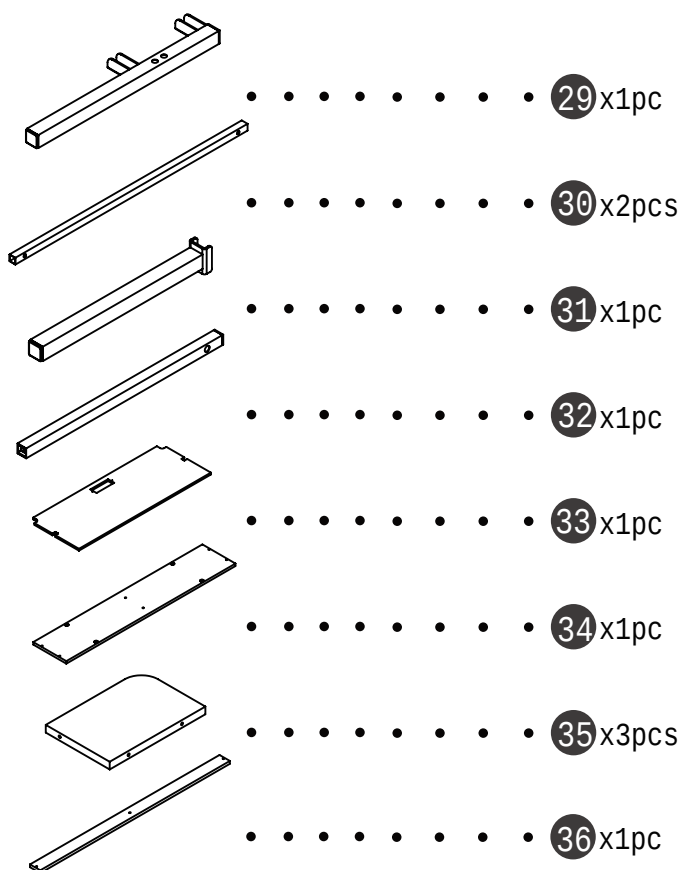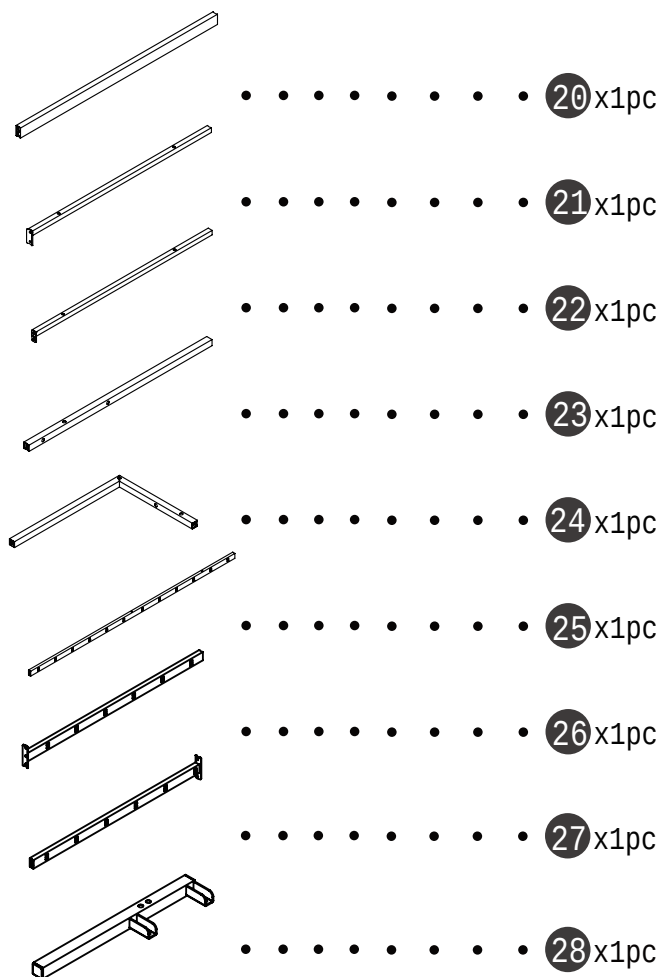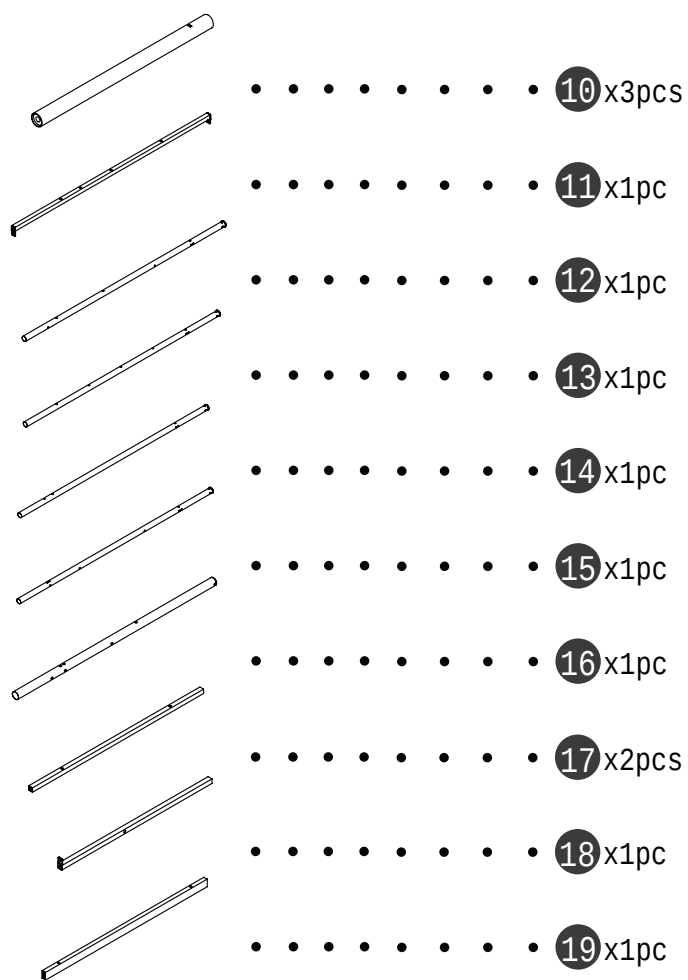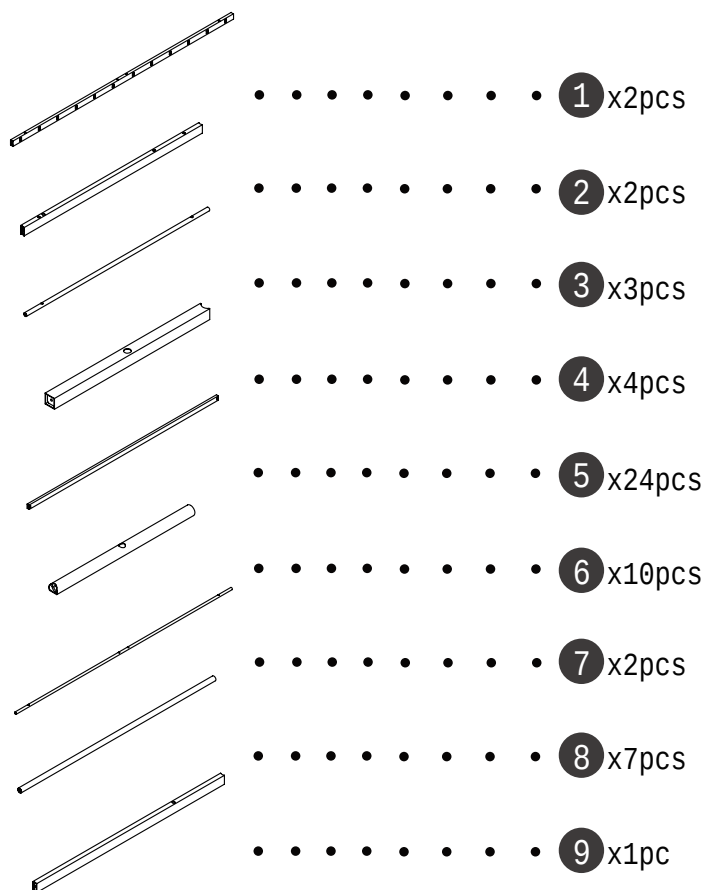

M8x16 • • • • • • • • • • **A** x11pcs

M8x25 • • • • • • • • • • **B** x24pcs

M8x30 white zinc • • • • • • • • • • **C** x8pcs

M8x35 • • • • • • • • • • **D** x19pcs

M8x55 • • • • • • • • • • **E** x54pcs

M5x40 • • • • • • • • • • **F** x9pcs

ST4x14 • • • • • • • • • • **G** x2pcs

M8 • • • • • • • • • • **H** x2pcs

• • • • • • • • • • **I** x48pcs

M8 • • • • • • • • • • **J** x1pc

M5 • • • • • • • • • • **K** x1pc


• • • • • • • • • • **L** x1pc

• • • • • • • • • • **U** x1pc


• • • • • • • • • • **Y** x2pcs

• • • • • • • • • • **Z** x2pcs


TYPE 1

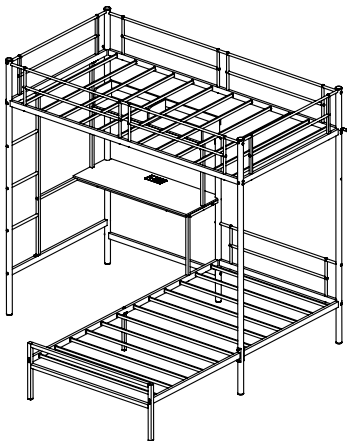

TYPE 2

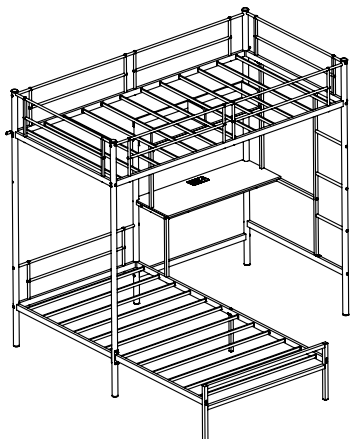


TYPE 1

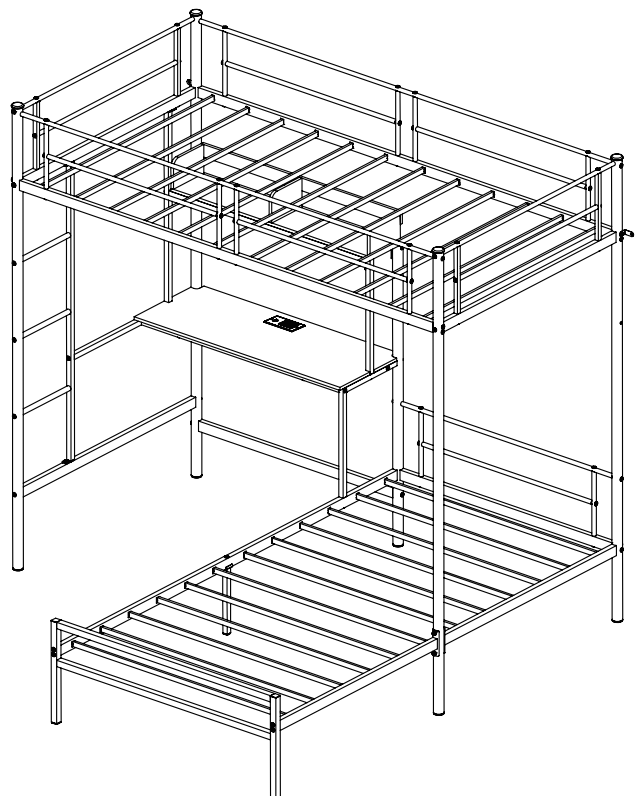

1


x2

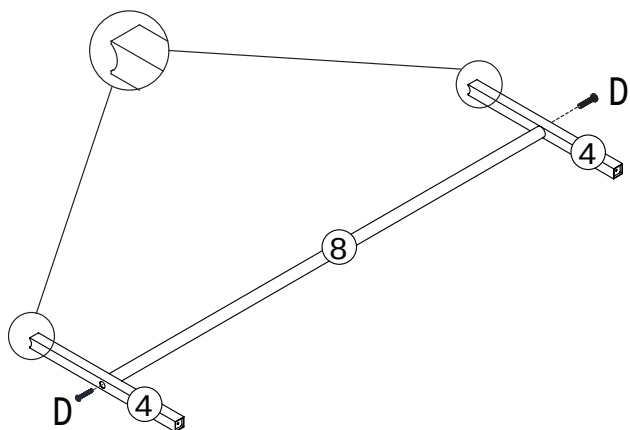

D		4pcs
---	--	------


2

x2

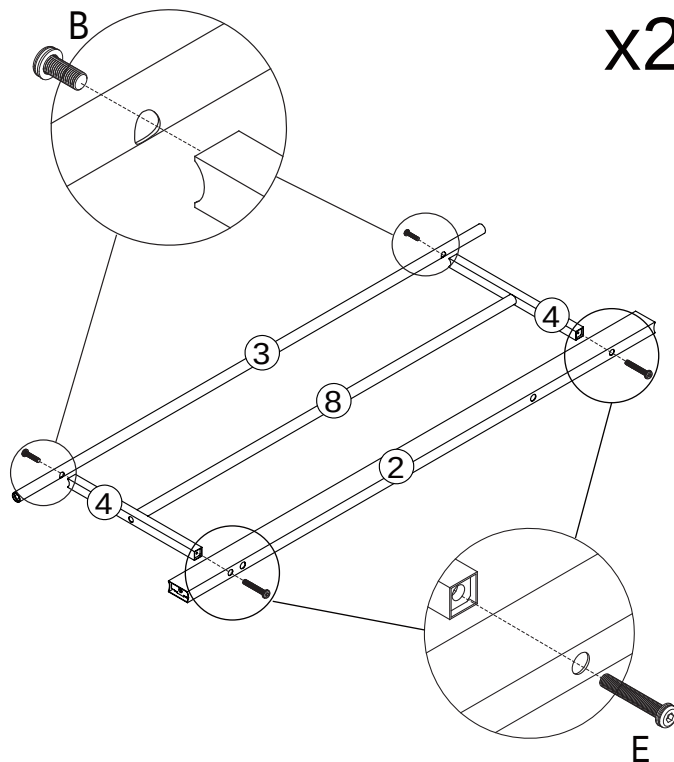

B		4pcs
E		4pcs


3

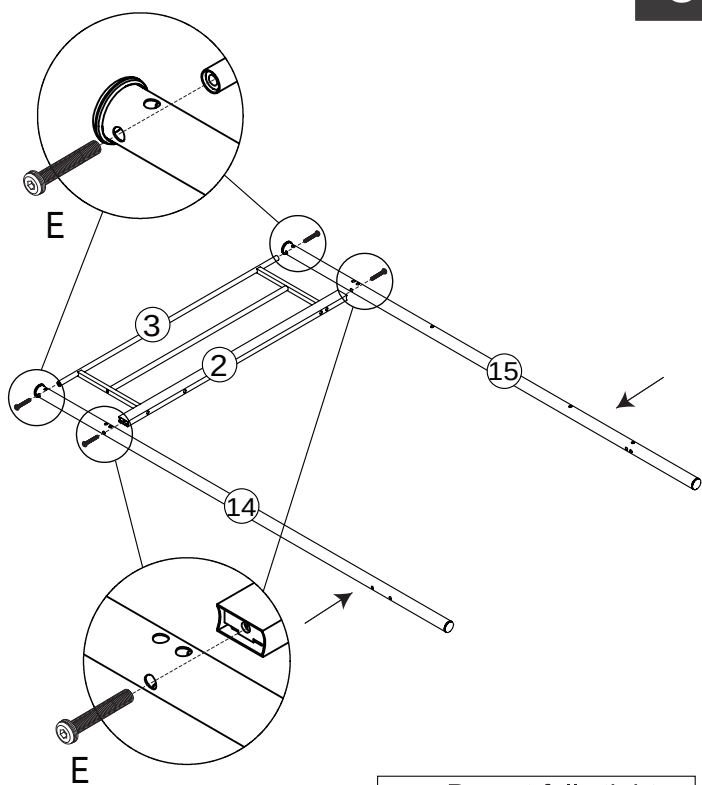

! Do not fully tighten the screws yet.

E		4pcs
---	---	------

4

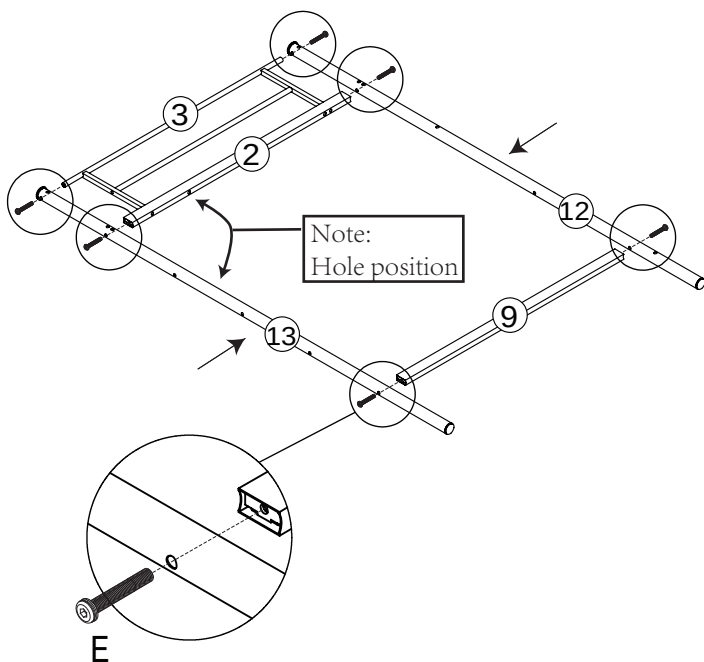


Note:
Hole position

! Do not fully tighten the screws yet.

E		6pcs
---	---	------


5

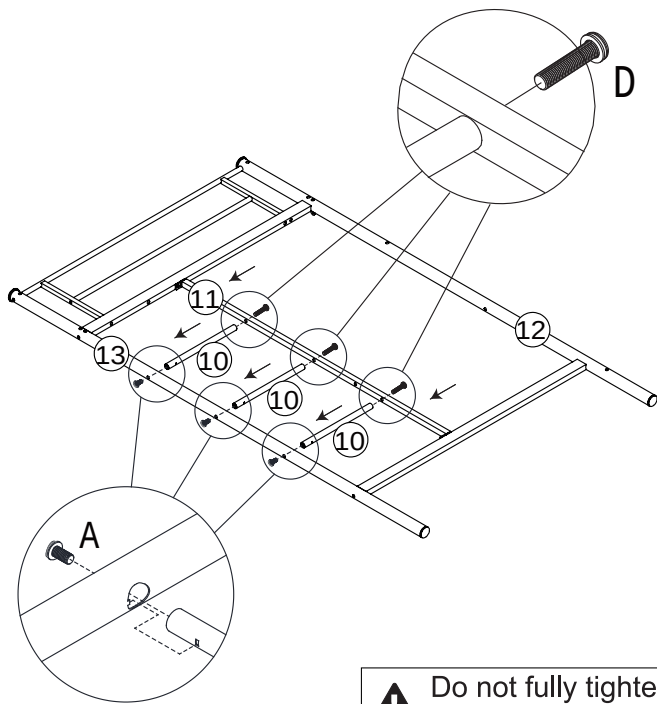

! Do not fully tighten the screws yet.

A	 M8x16	3pcs
D	 M8x35	3pcs


6

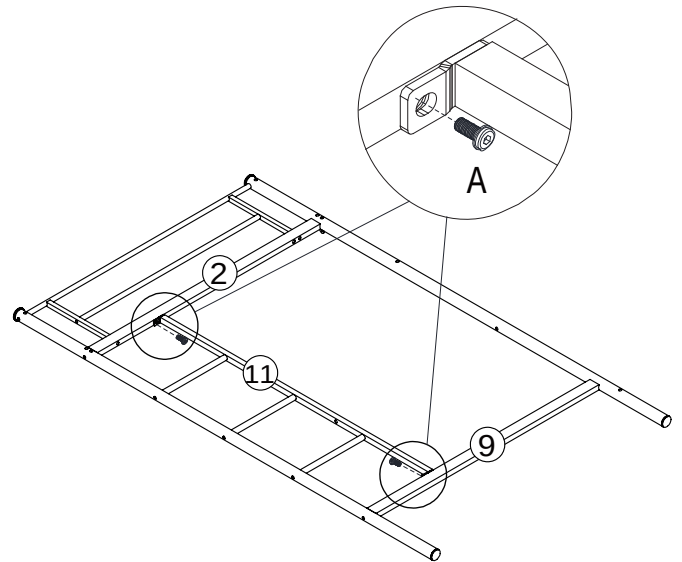

! Do not fully tighten the screws yet.

A	 M8x16	2pcs
---	---	------


7

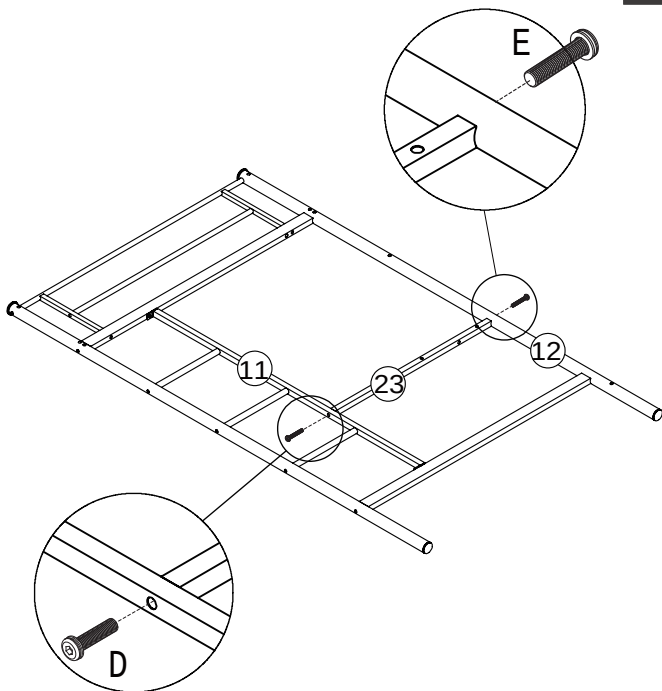

D	 M8x35	1pc
E	 M8x55	1pc

8


x5

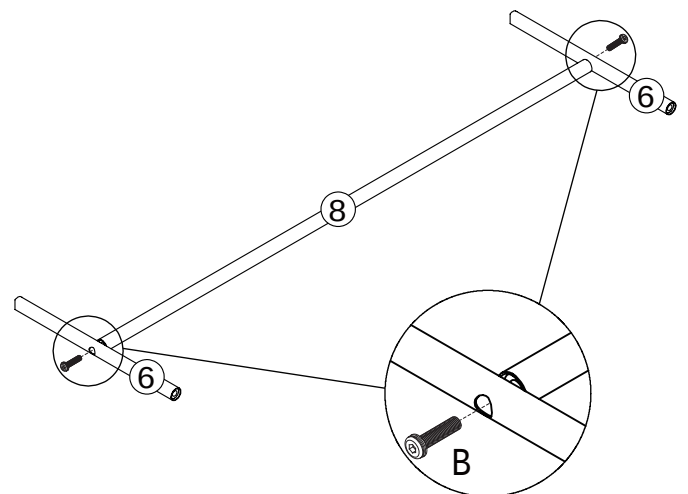

B	 M8x25	10pcs
---	---	-------


9

x2

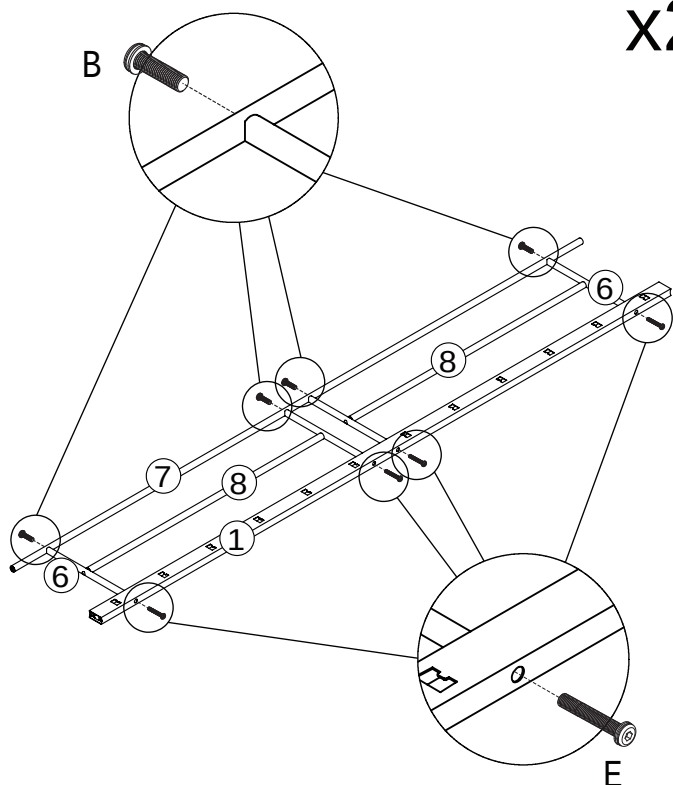

B		8pcs
E		8pcs


10

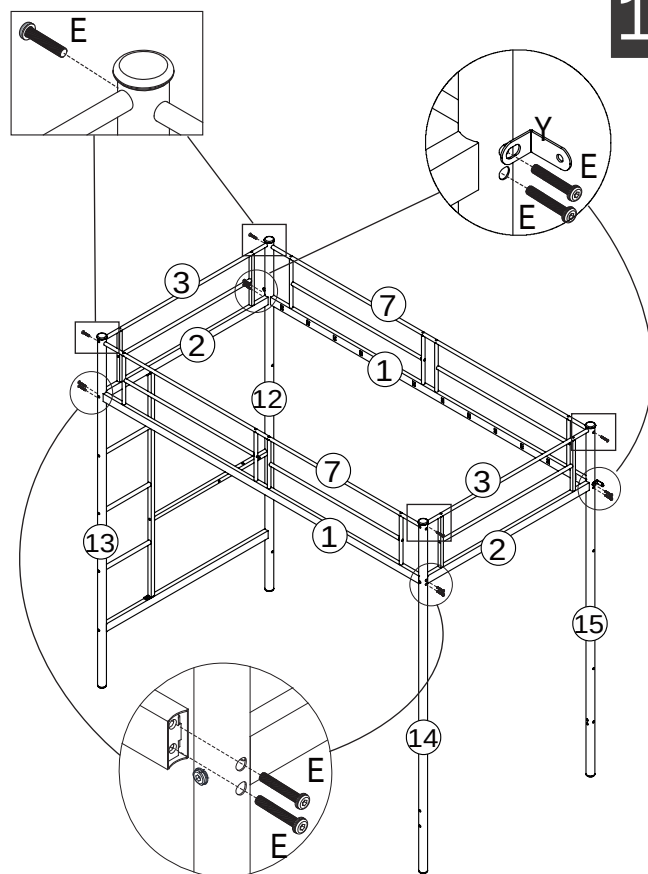

E		12pcs
---	--	-------


! Fully tighten all the screws.

11

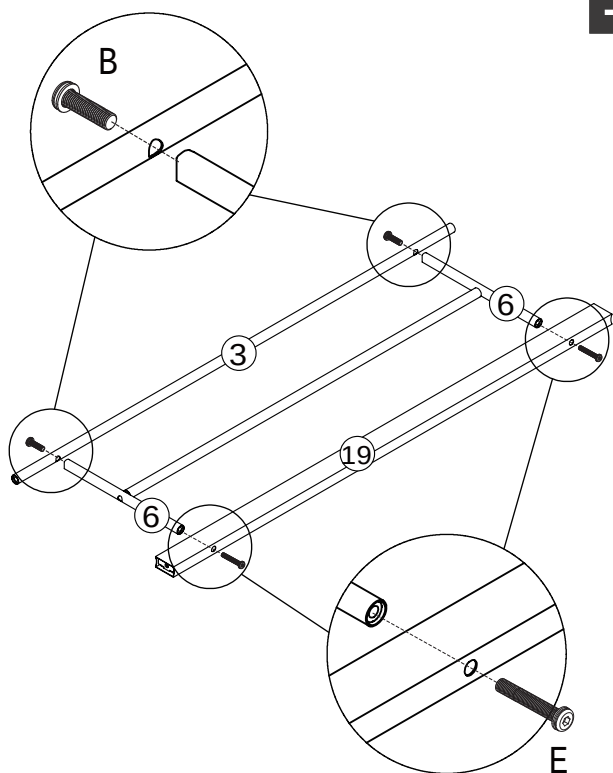


B		2pcs
E		2pcs

12

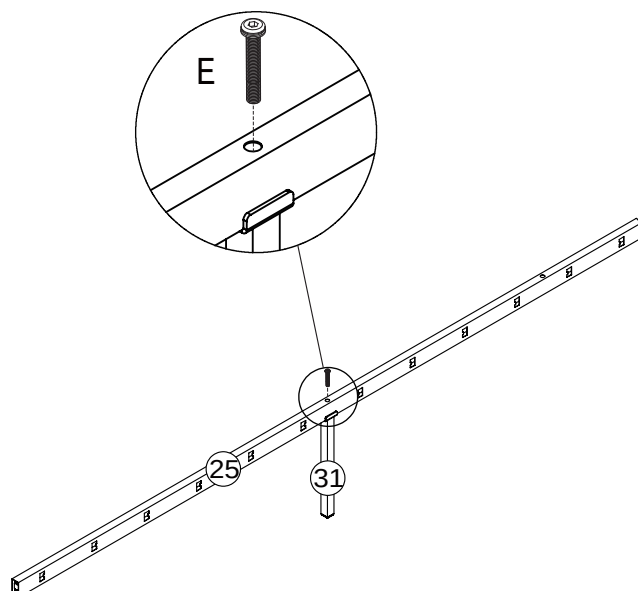


E		1pc
---	--	-----

13

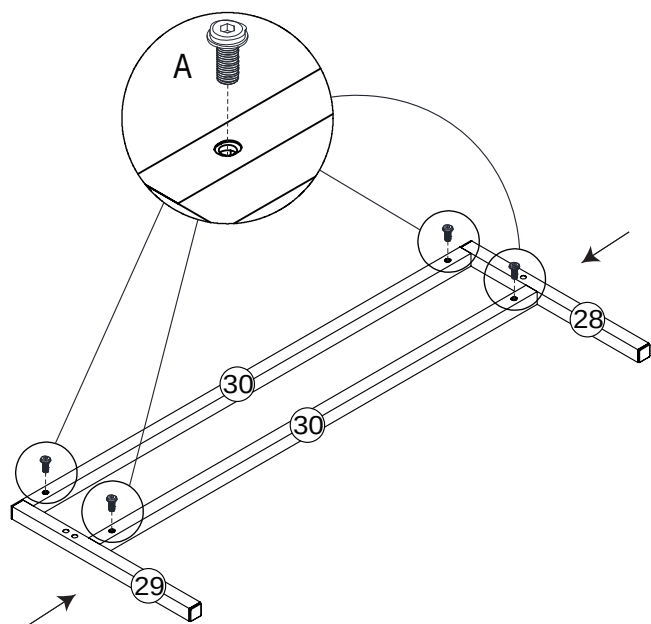

A		4pcs
	M8x16	


14

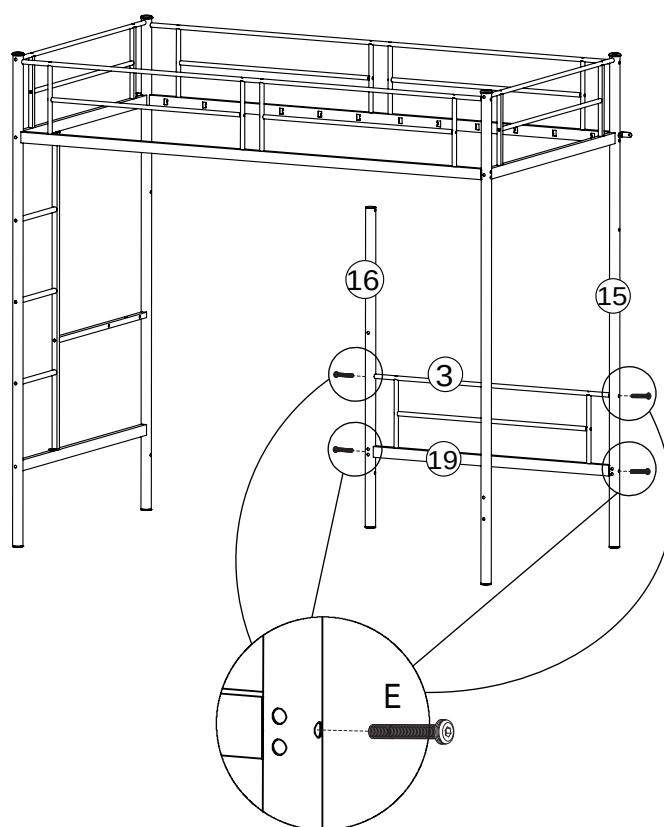

E		4pcs
	M8x55	

! Do not fully tighten the screws yet.


15

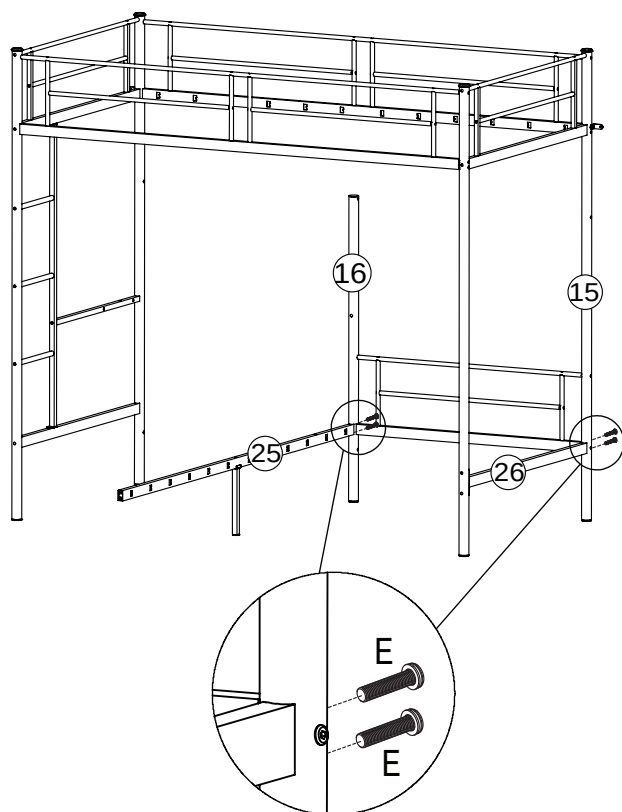

E		4pcs
	M8x55	


! Do not fully tighten the screws yet.

16

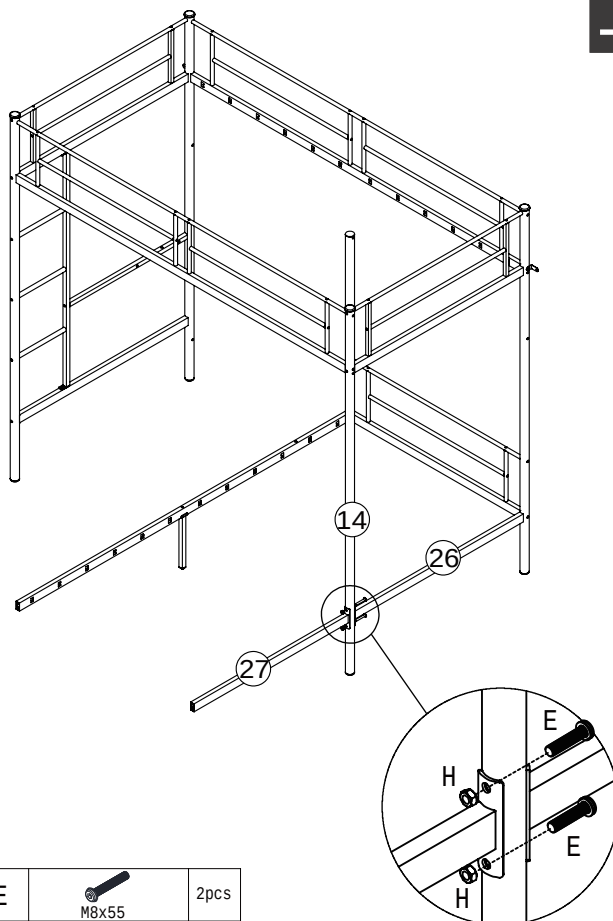

E		2pcs
H		2pcs
	M8x55	


17

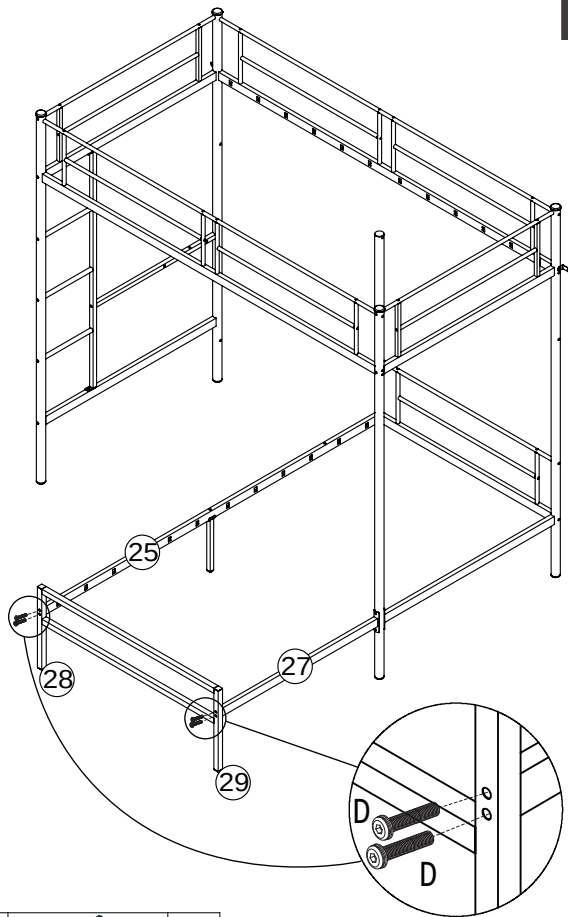

D		4pcs
---	--	------

M8x35

18

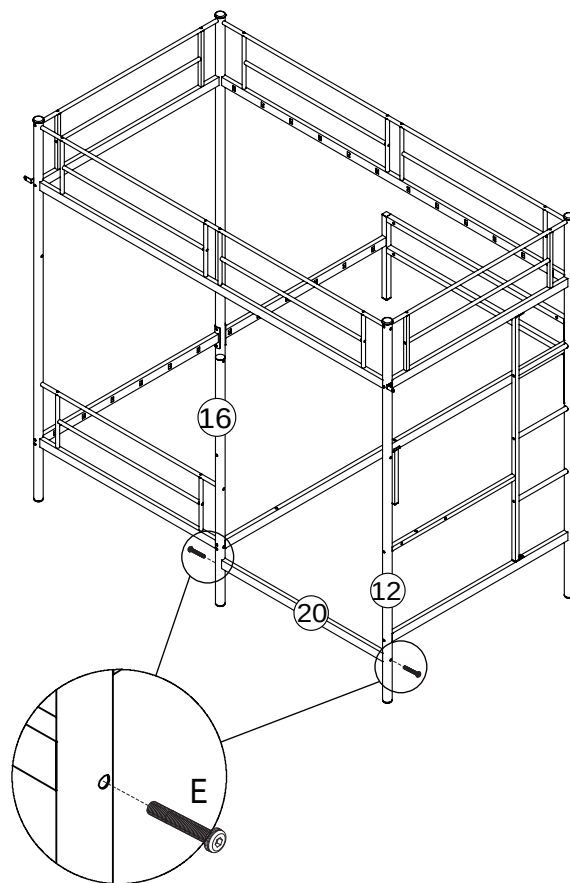


E		2pcs
---	--	------

M8x55

 Do not fully tighten the screws yet.


19

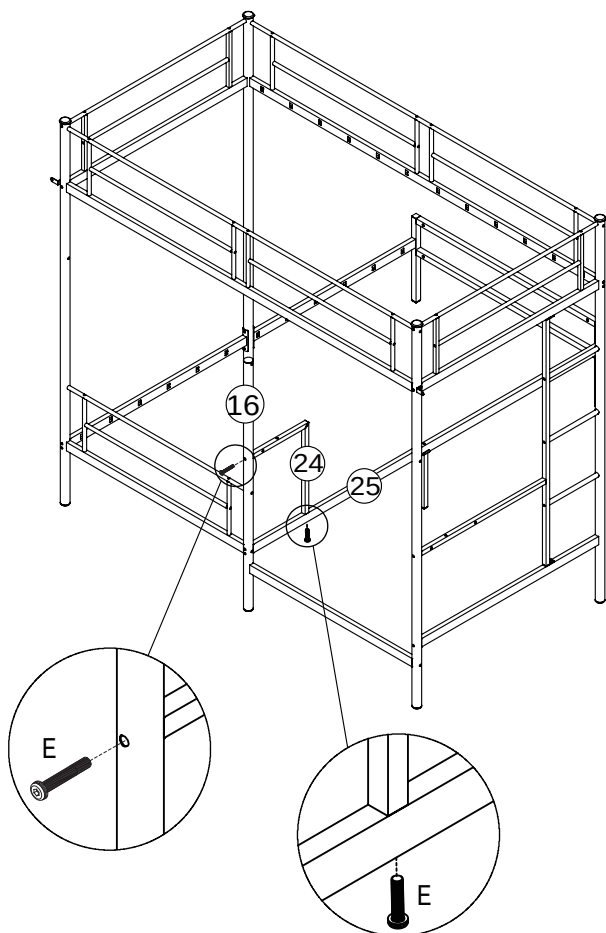

E		2pcs
---	---	------

M8x55

20

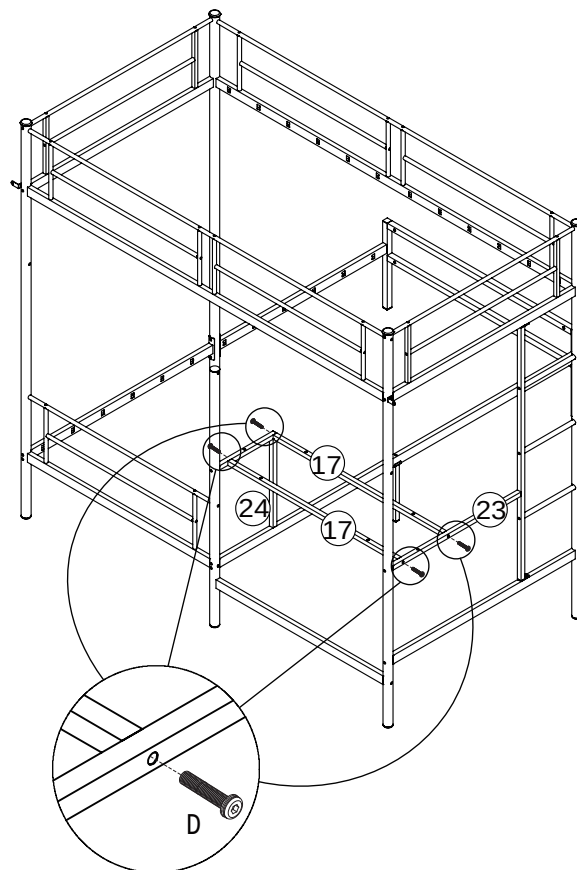


D		4pcs
---	---	------

M8x35

 Do not fully tighten the screws yet.

21

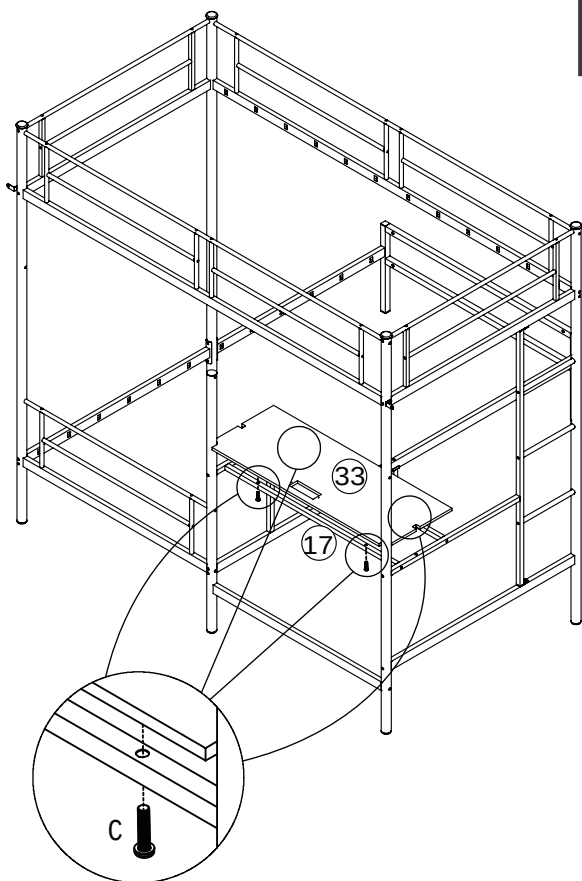


C		4pcs
---	--	------

M8x30

! Do not fully tighten the screws yet.

22

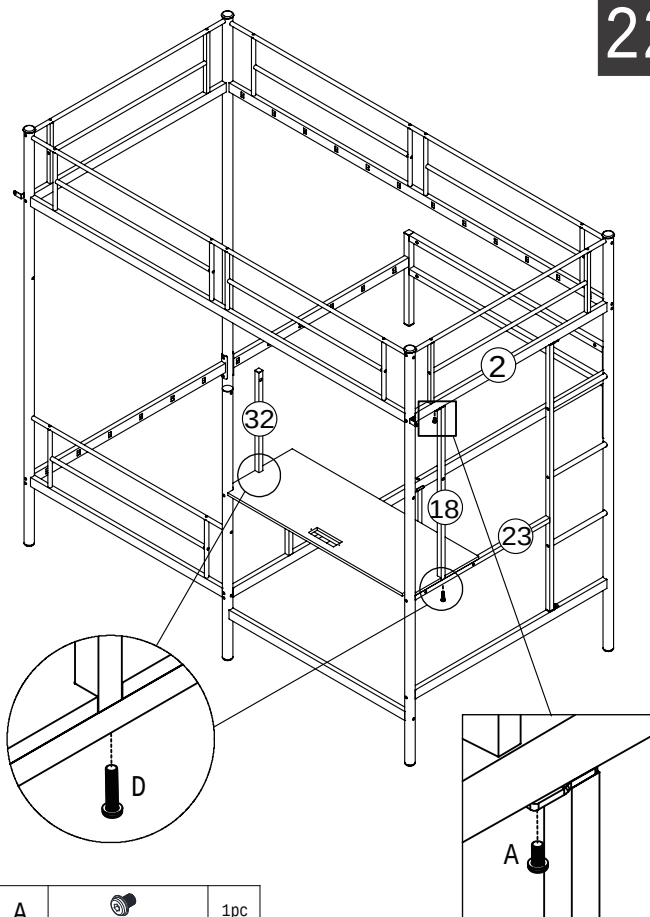

A		1pc
D		2pcs


M8x16

M8x35

A

D

23

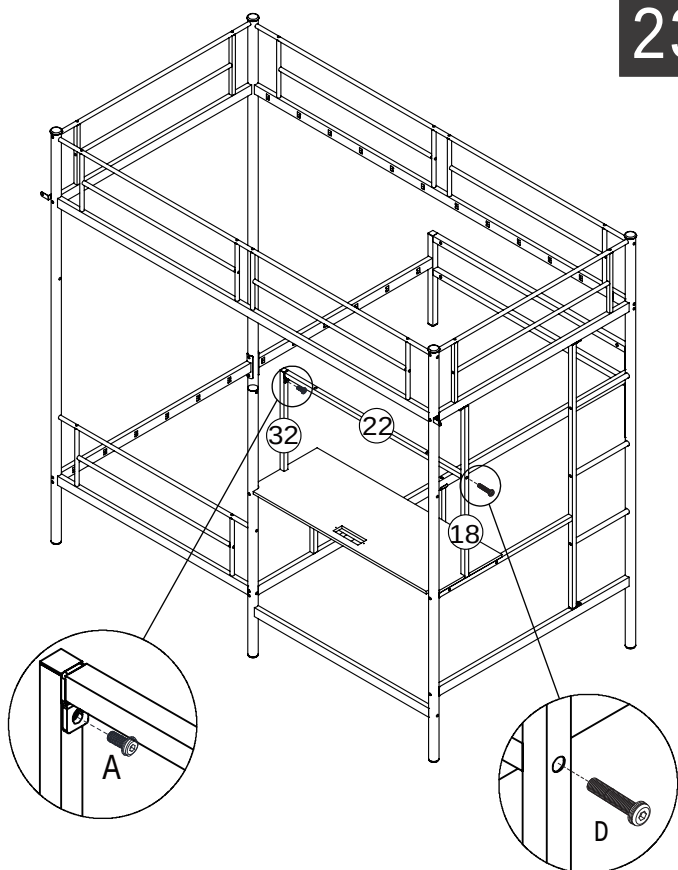


A		1pc
D		1pc

M8x16

M8x35

! Do not fully tighten the screws yet.

24

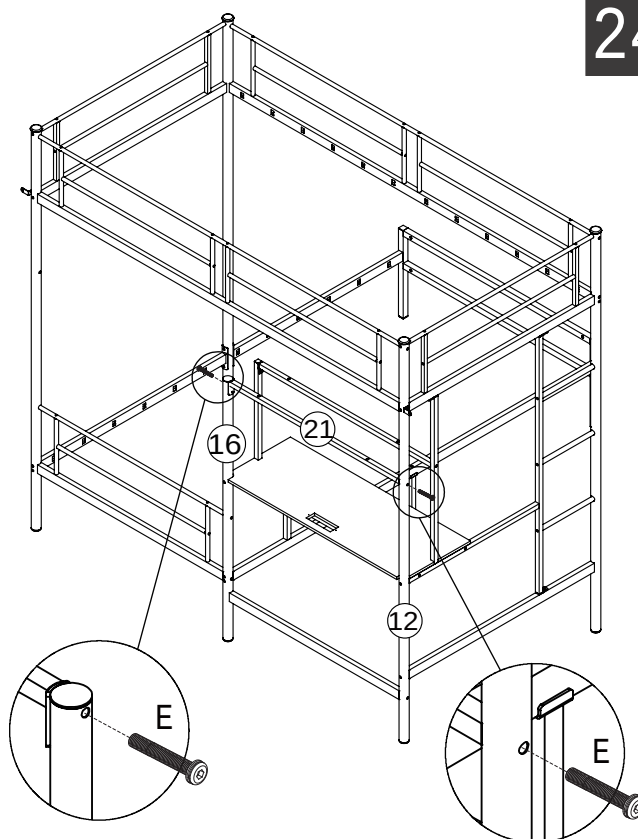


E		2pcs
---	--	------

M8x55

! Do not fully tighten the screws yet.


25

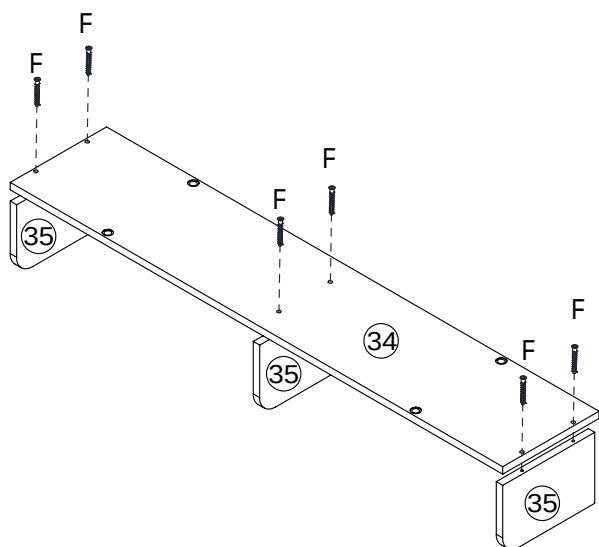

F		6pcs
---	--	------

M5x40


26

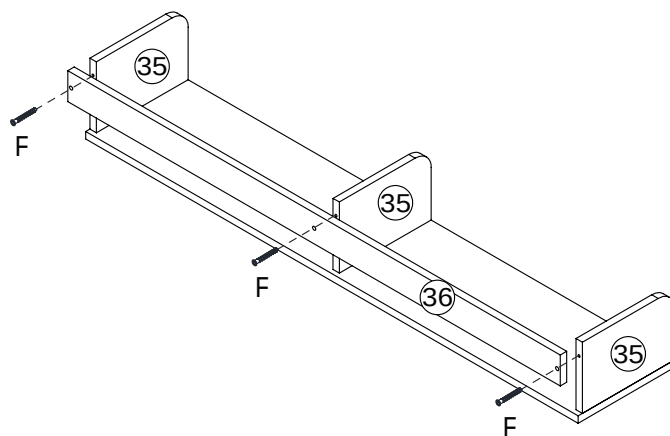

F		3pcs
---	--	------

M5x40

27

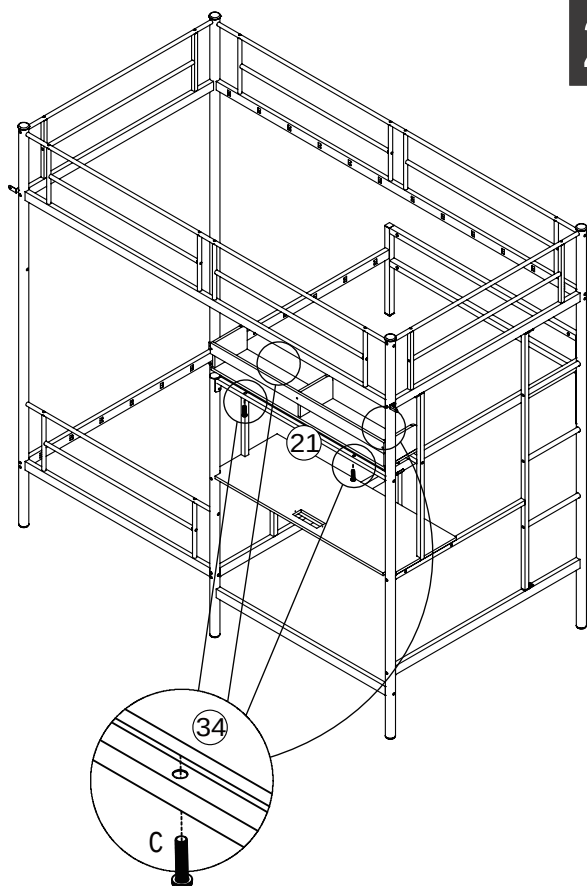


C		4pcs
---	---	------

M8x30

 Fully tighten all the screws.


28

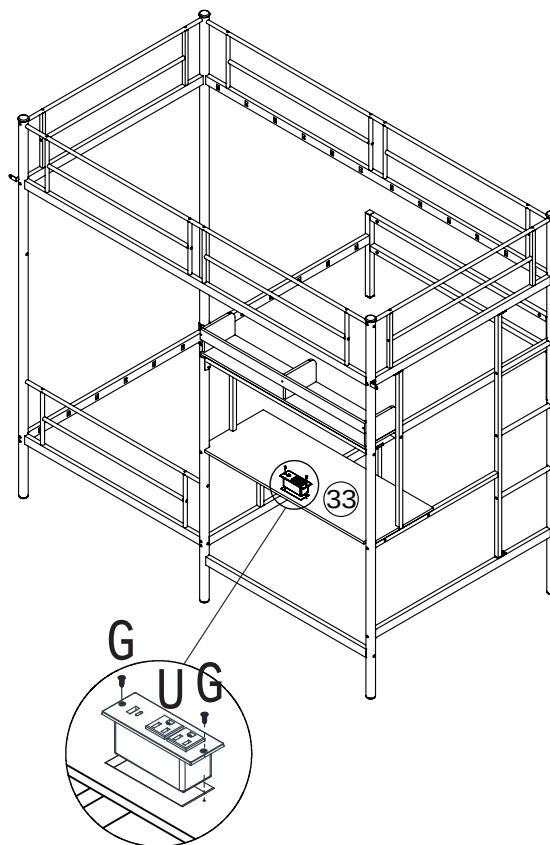

G		2pcs
---	--	------

ST4x14


29

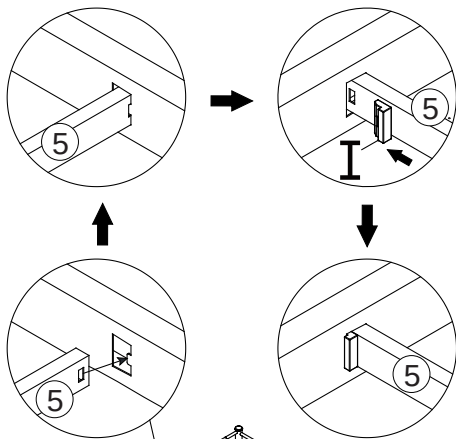

I		48pcs
---	--	-------

30


- 1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required
- 2: Place the expansion tube into the hole
- 3: Screw the screw together with the mounting part into the expansion pipe

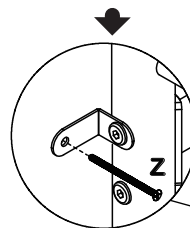

Z		2pcs
---	--	------


Finish

31

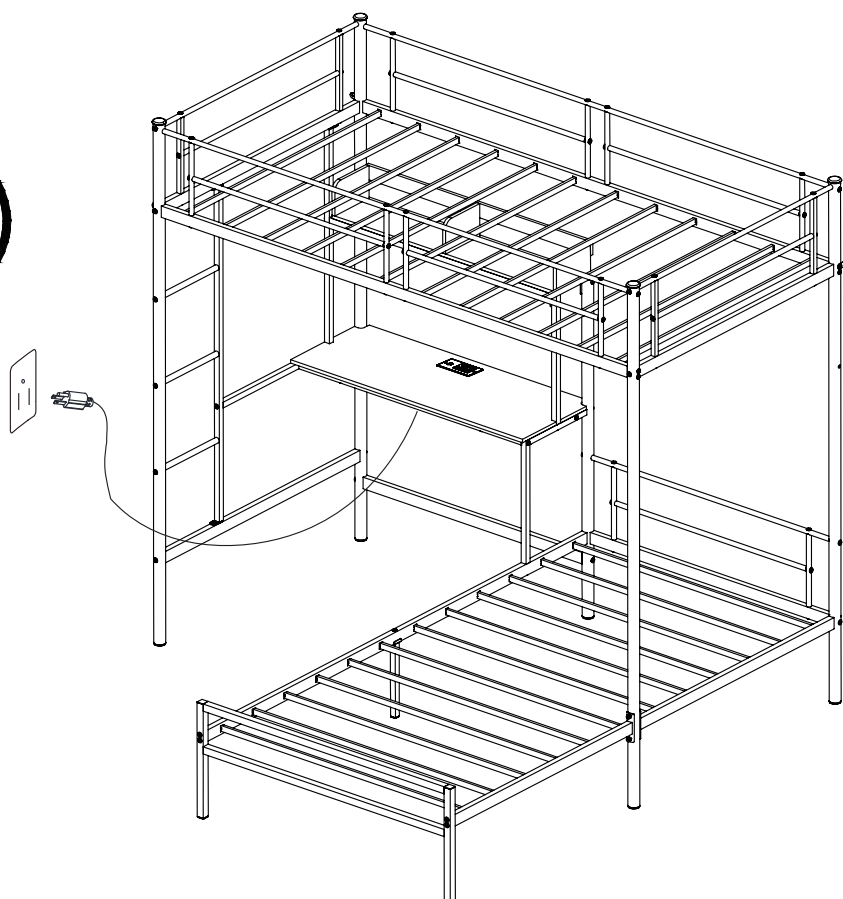


Note: Now you can tighten all the bolts.

TYPE 2

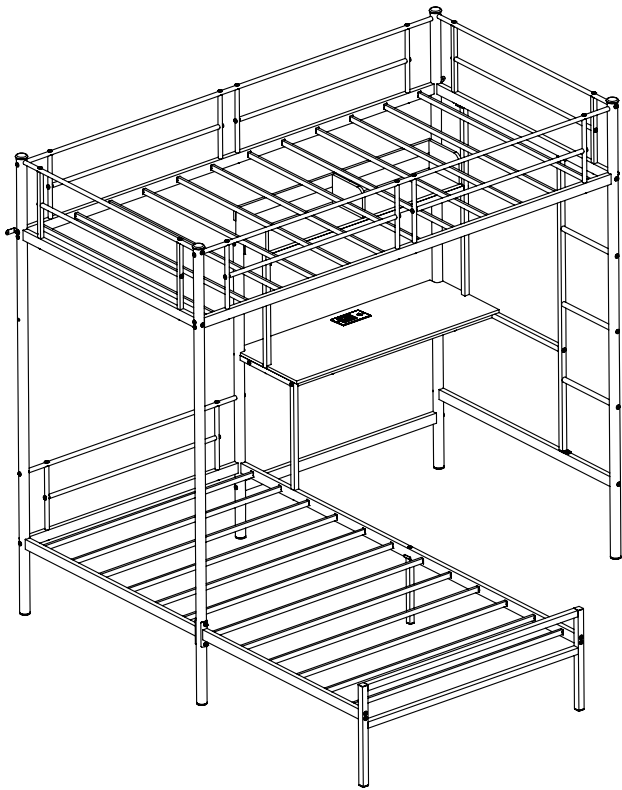


1
x2

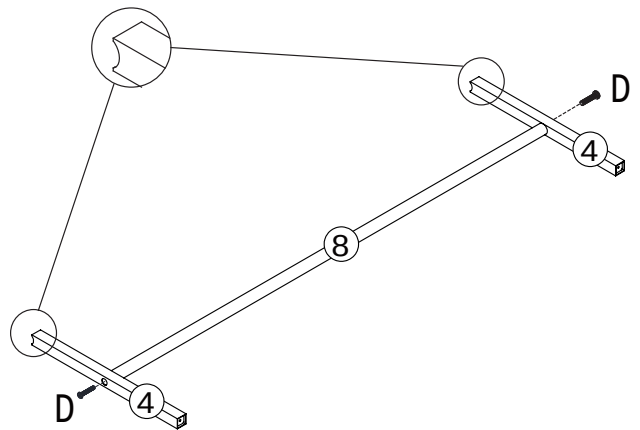


D		4pcs
---	--	------

2
x2

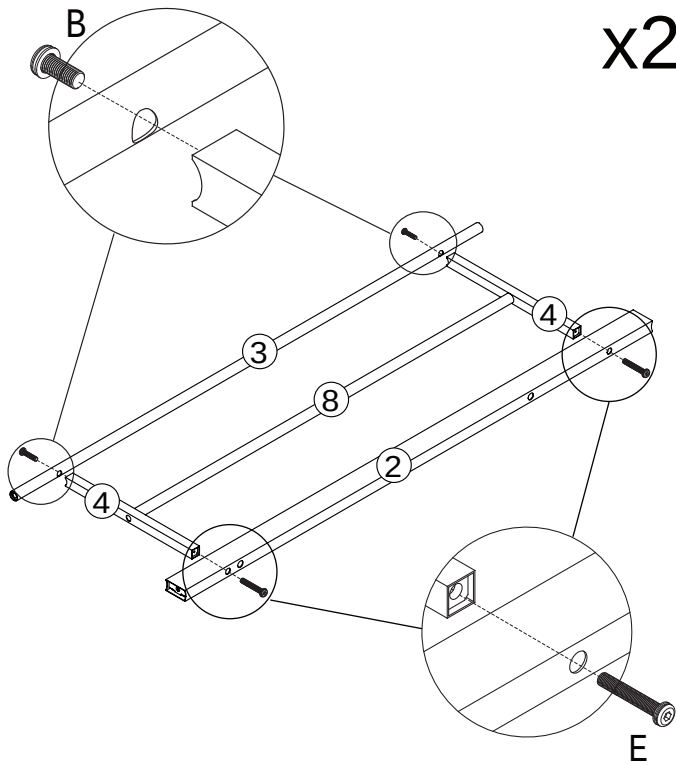

B		4pcs
E		4pcs


3

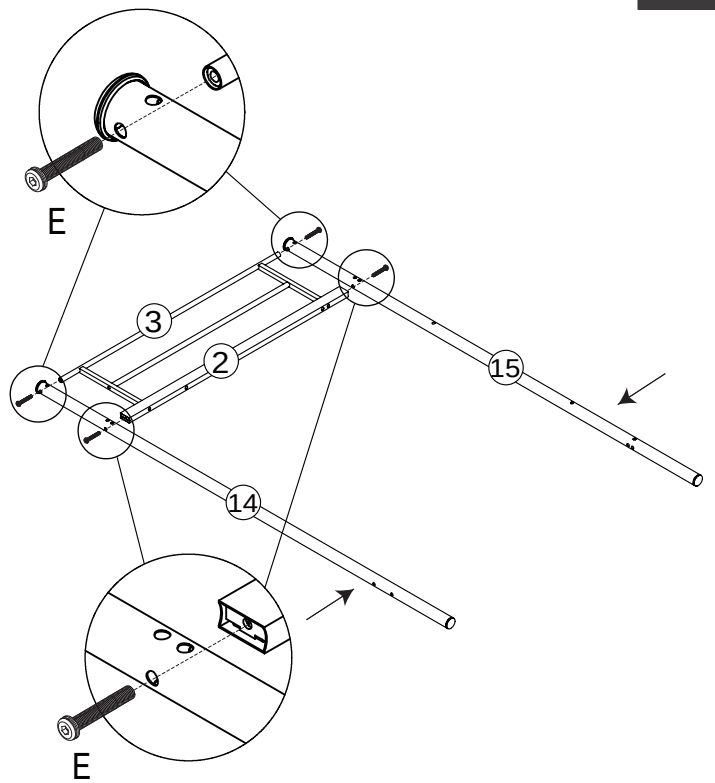

E		4pcs
---	---	------

 Do not fully tighten the screws yet.

4

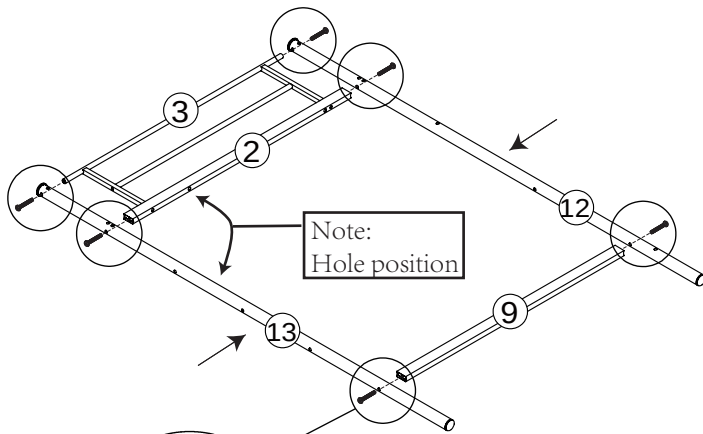


E		6pcs
---	--	------

M8x55

⚠ Do not fully tighten the screws yet.

5

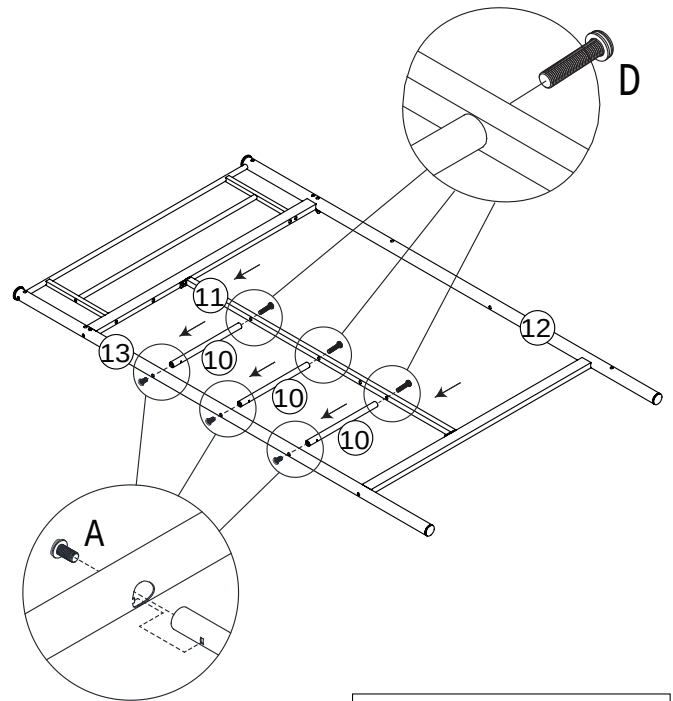

A		3pcs
---	--	------


M8x16

D		3pcs
---	---	------

M8x35

⚠ Do not fully tighten the screws yet.

6

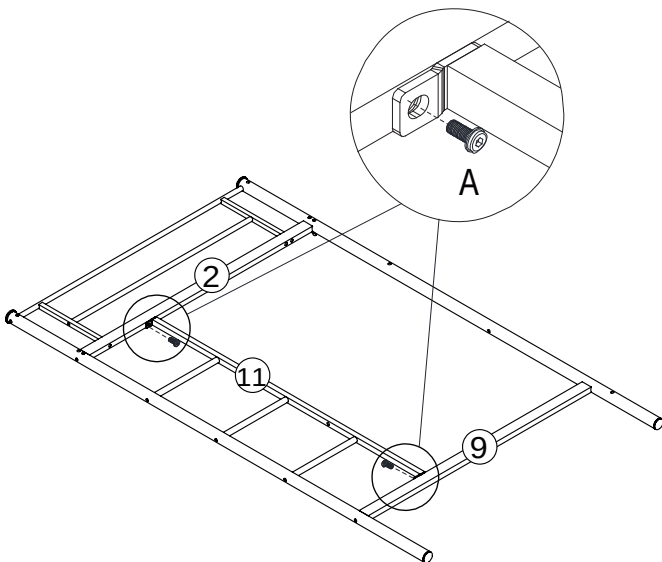


A		2pcs
---	---	------

M8x16

⚠ Do not fully tighten the screws yet.

7

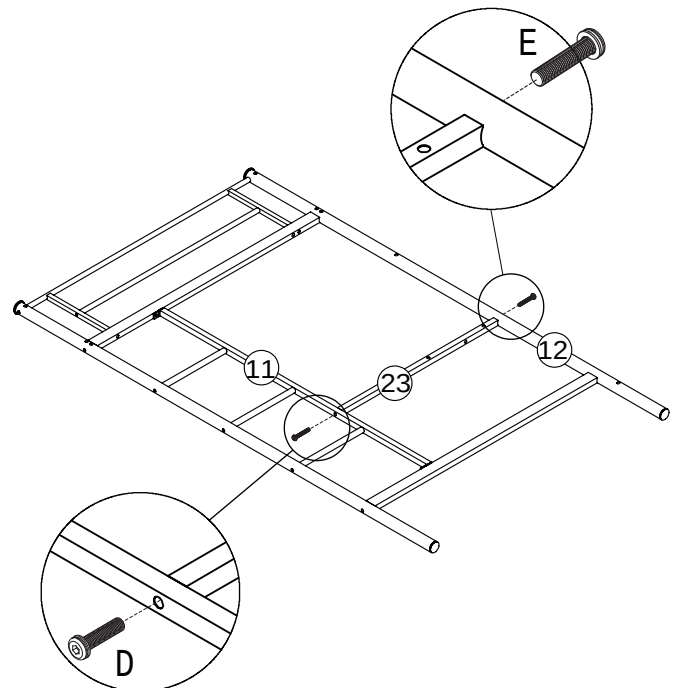

D		1pc
---	--	-----


M8x35

E		1pc
---	--	-----

M8x55

8


x5

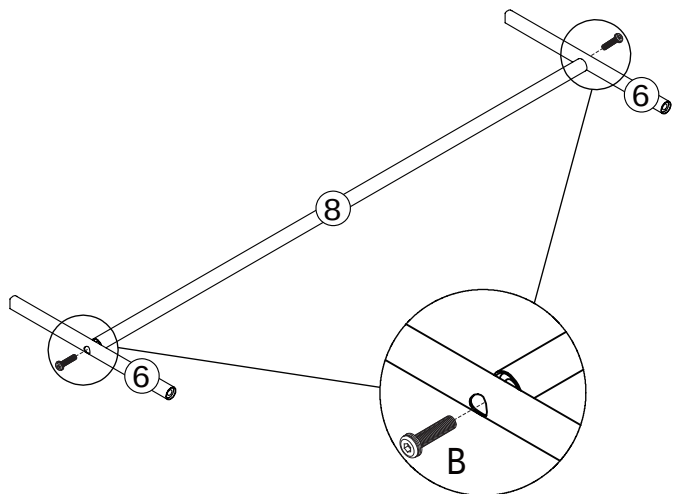

B		10pcs
	M8x25	


9

x2

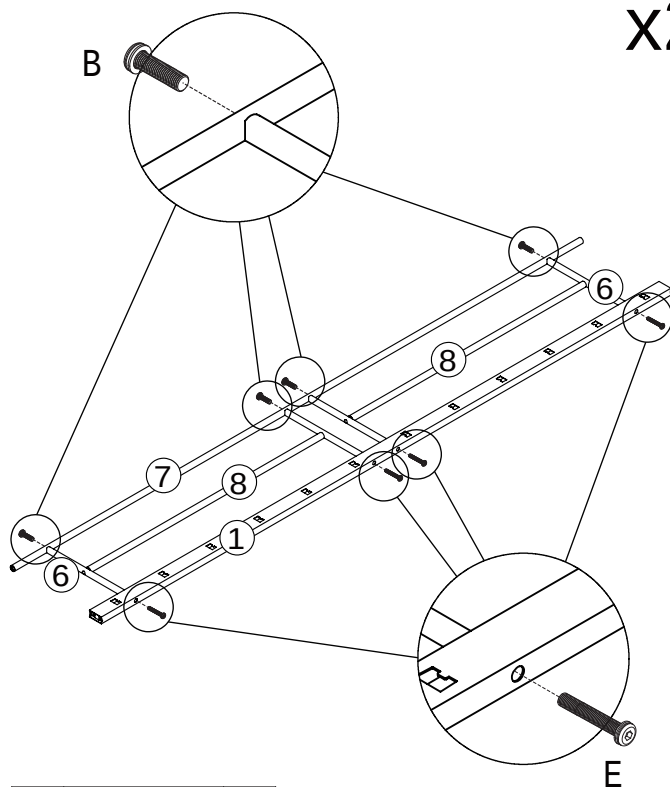

B		8pcs
	M8x25	
E		8pcs
	M8x55	


10

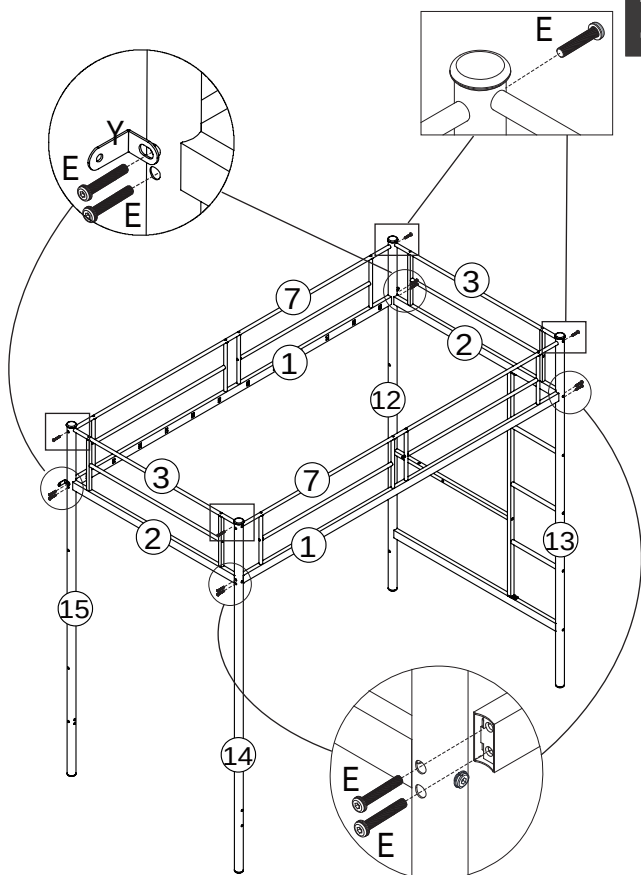

E		12pcs
	M8x55	


 Fully tighten all the screws.

11

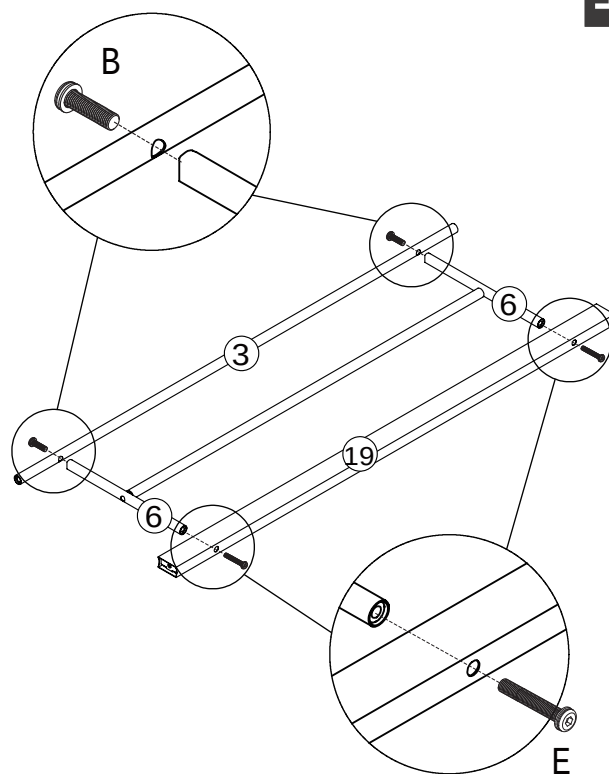


B		2pcs
	M8x25	
E		2pcs
	M8x55	

12

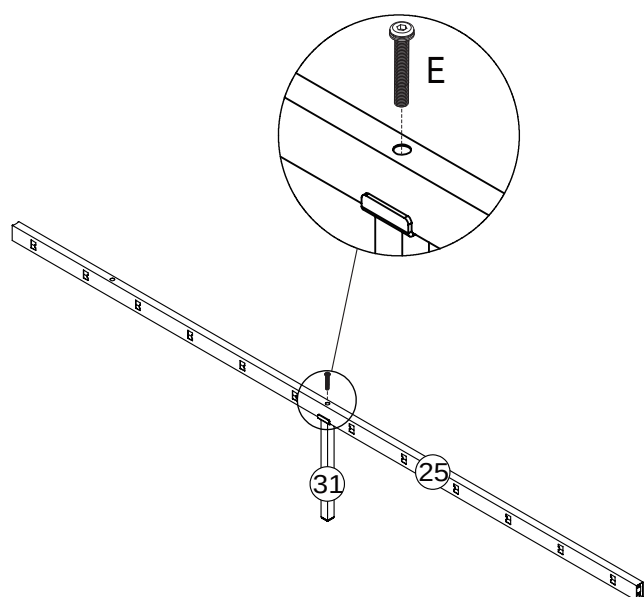


E		1pc
M8x55		

13

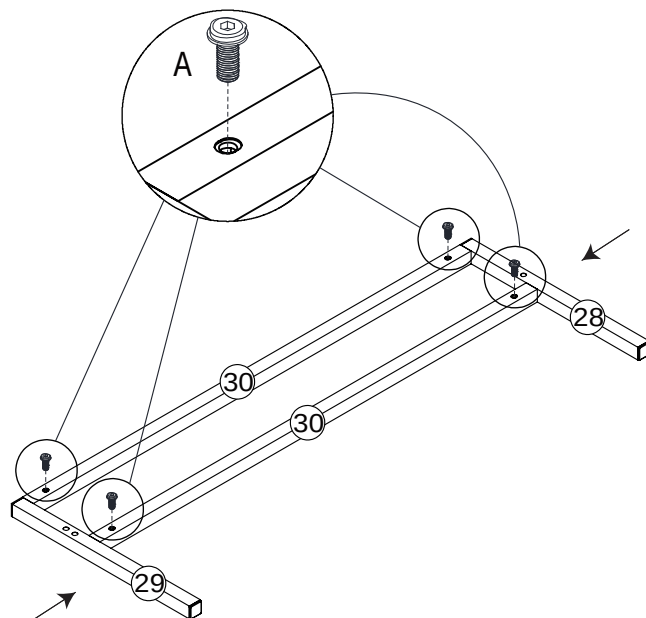

A		4pcs
M8x16		


14

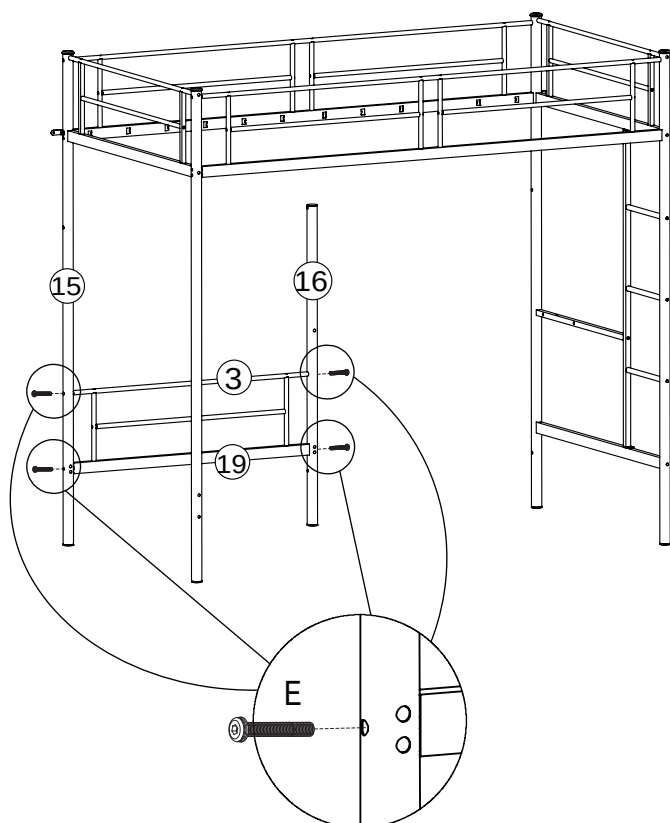

E		4pcs
M8x55		

! Do not fully tighten the screws yet.


15

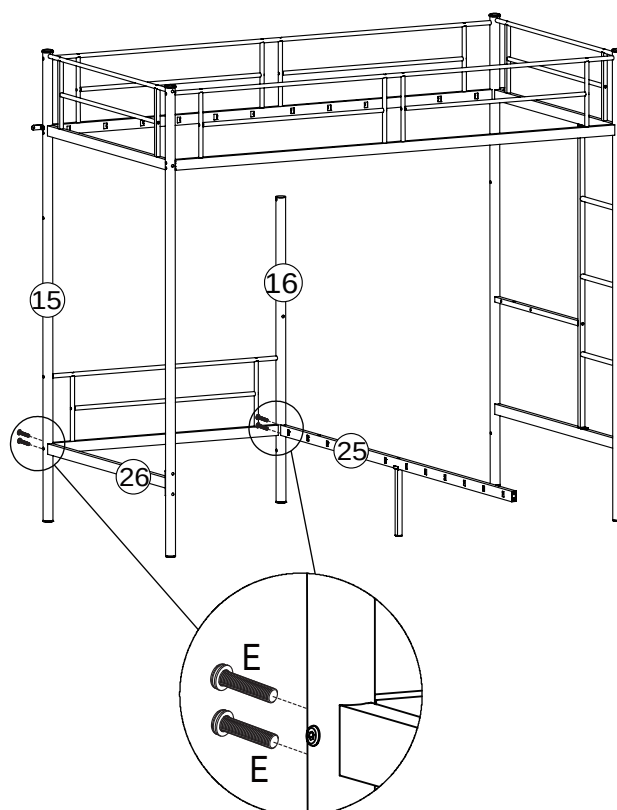


E		4pcs
M8x55		

! Do not fully tighten the screws yet.


16

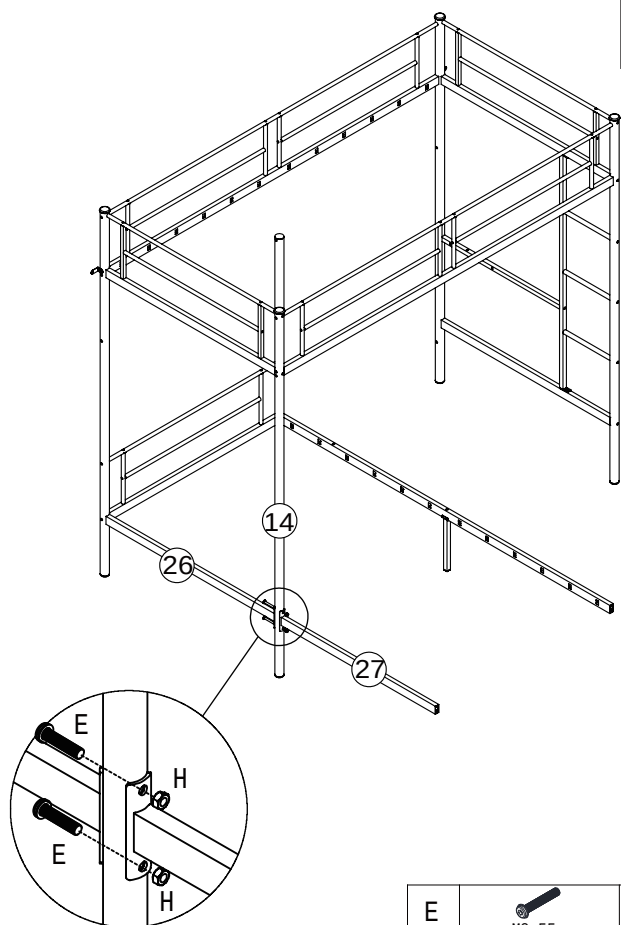

17

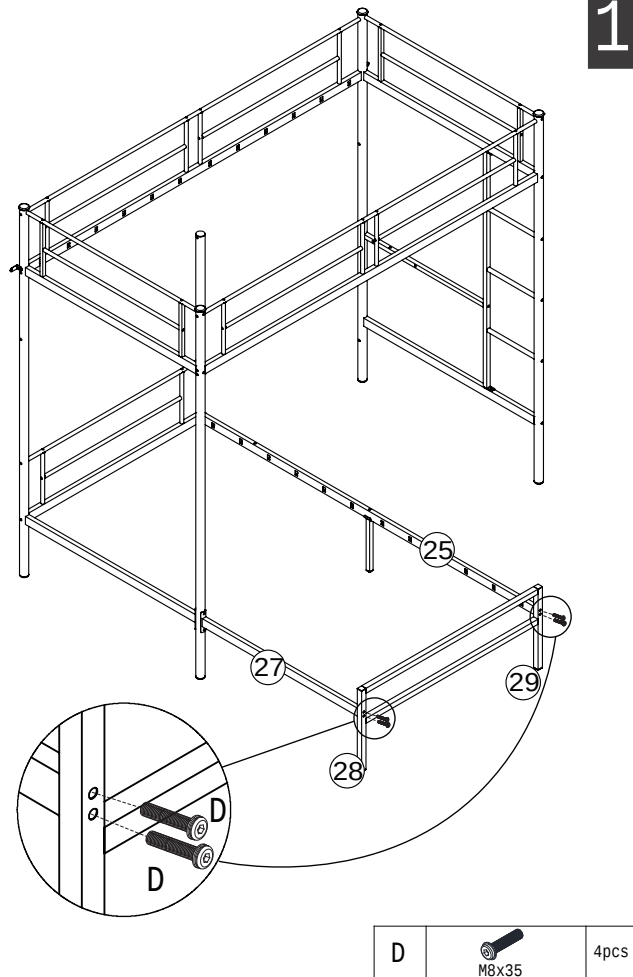


18

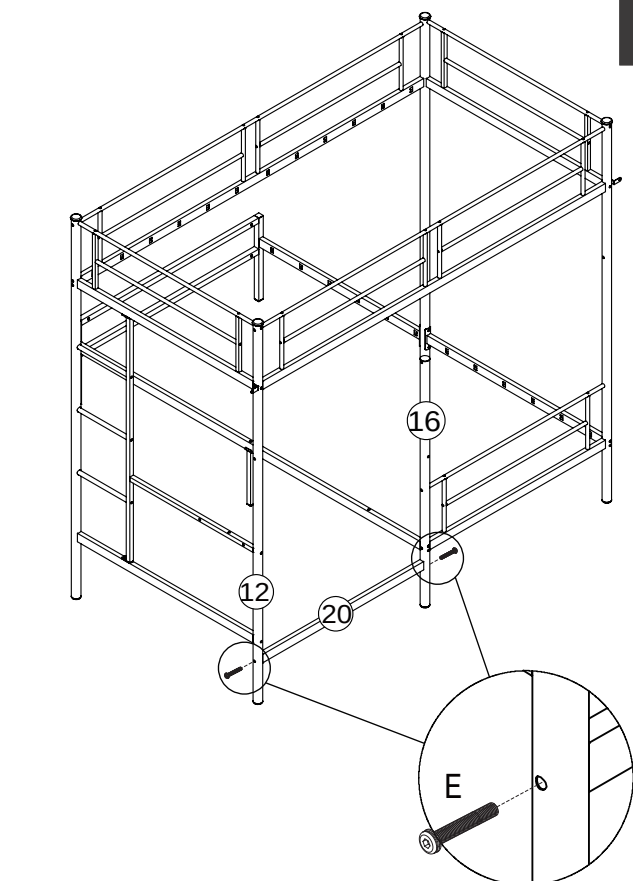


 Do not fully tighten the screws yet.

19

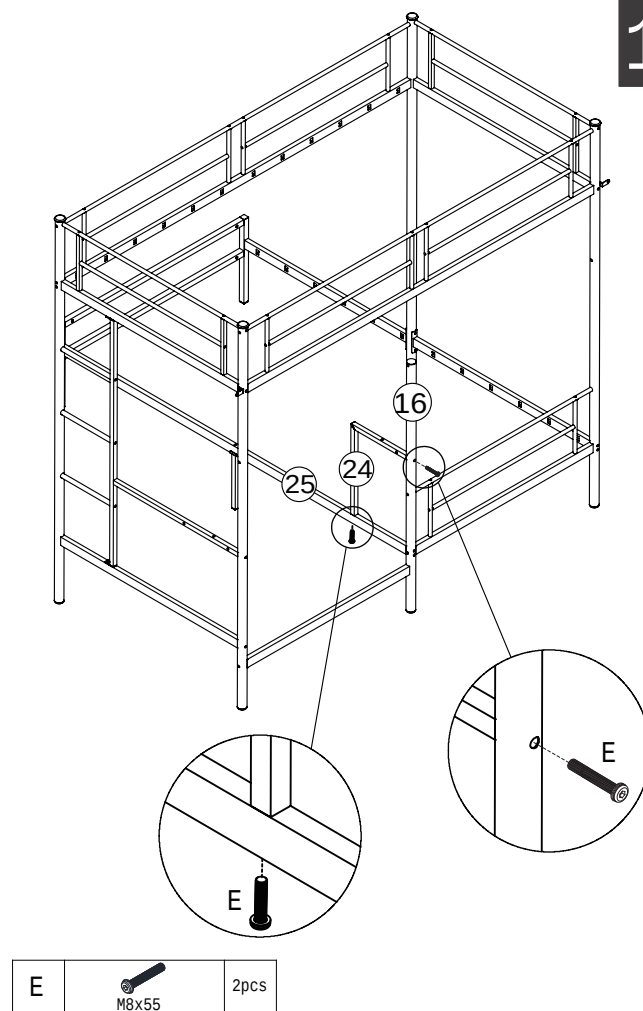


20

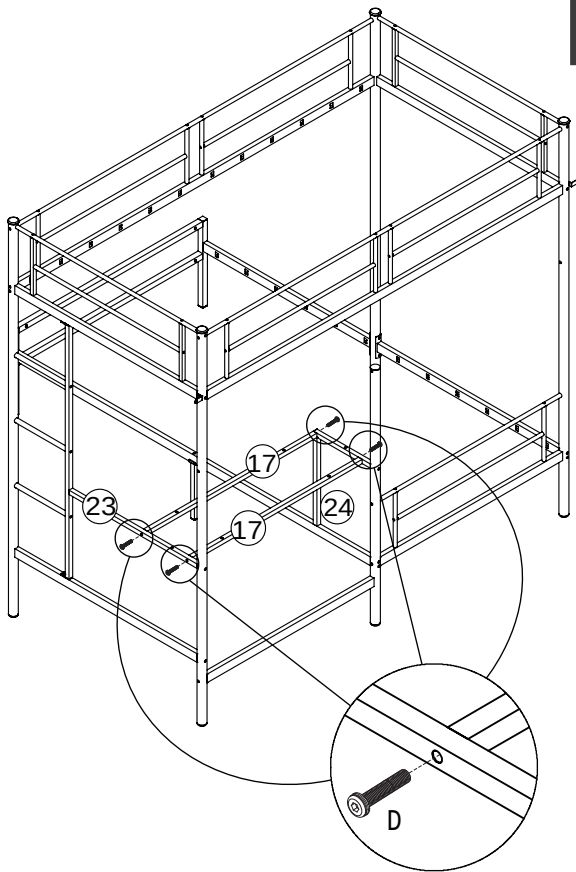

D		4pcs
---	--	------

! Do not fully tighten the screws yet.


21

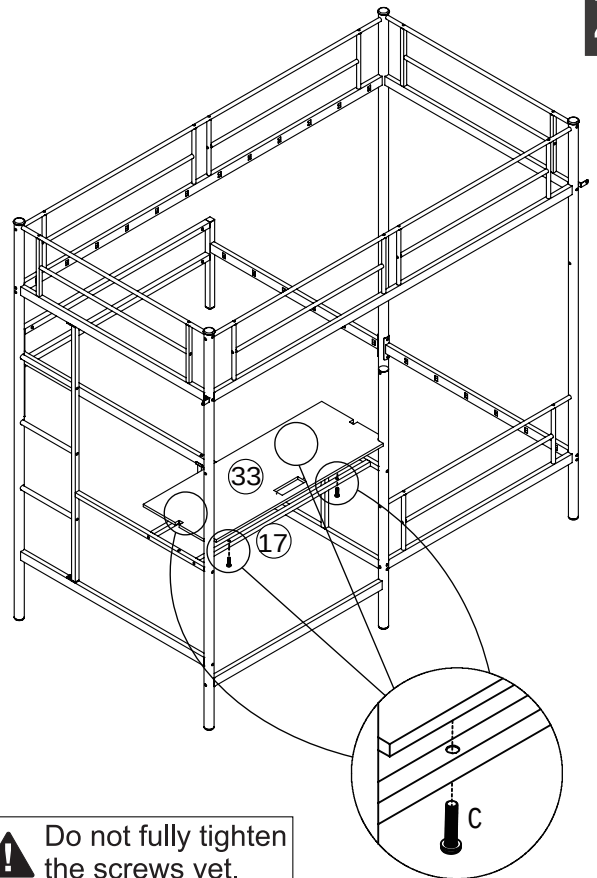

! Do not fully tighten the screws yet.


C		4pcs
---	--	------

22

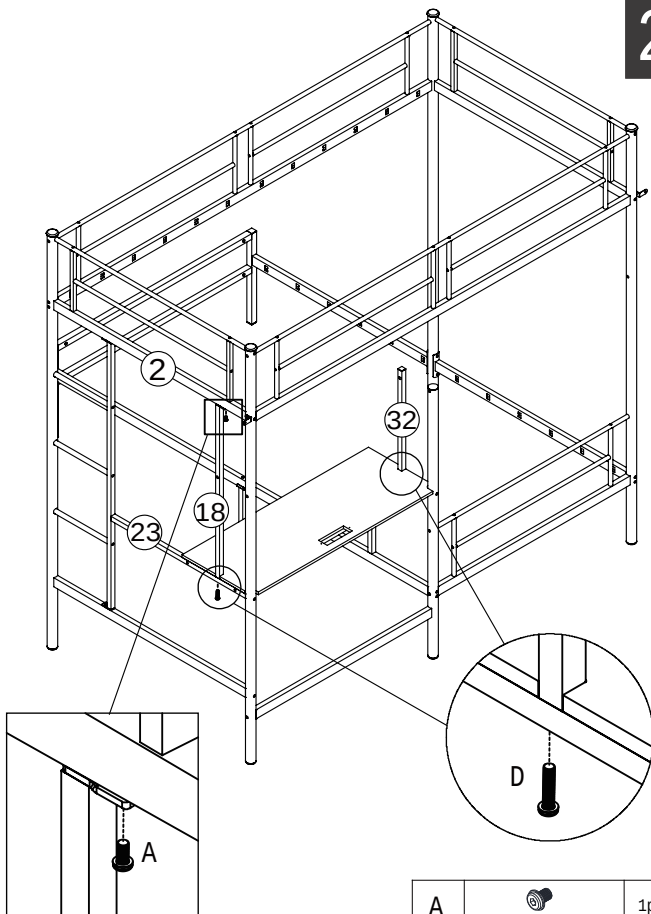

A		1pc
D		2pcs


23

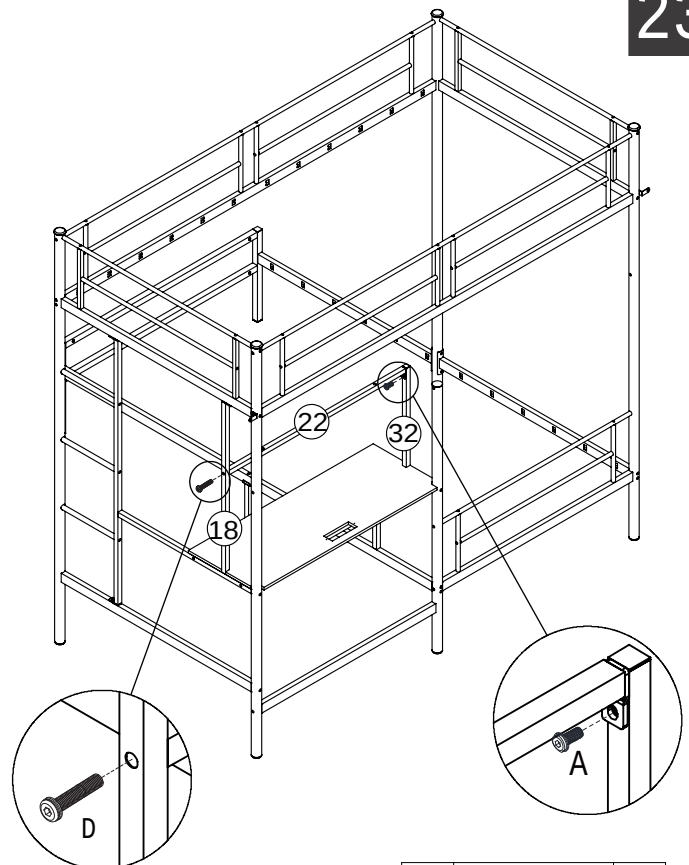

! Do not fully tighten the screws yet.

A		1pc
D		1pc

24

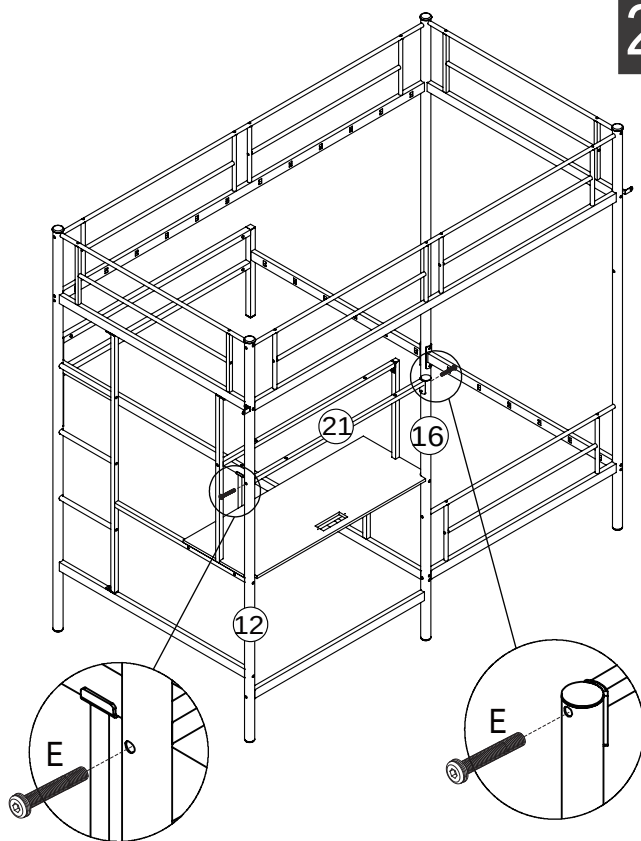


E		2pcs
---	--	------

M8x55

! Do not fully tighten the screws yet.


25

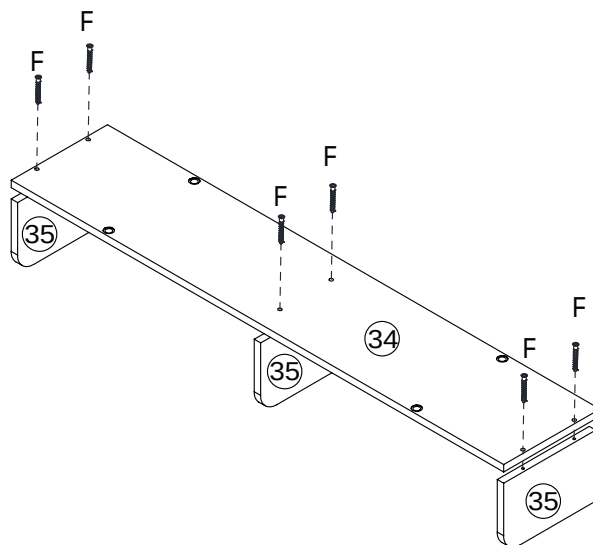

F		6pcs
---	--	------

M5x40


26

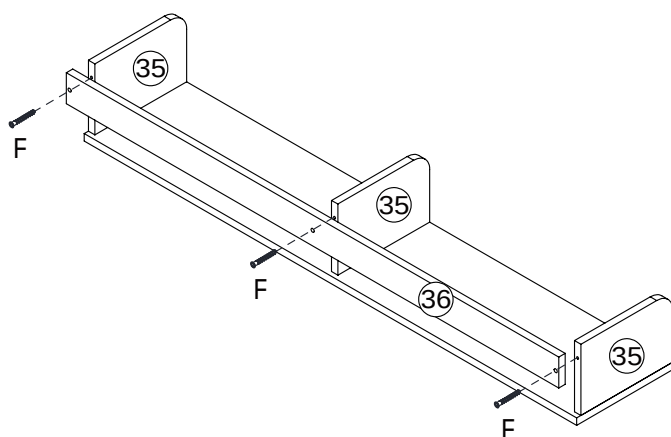

F		3pcs
---	---	------

M5x40

27

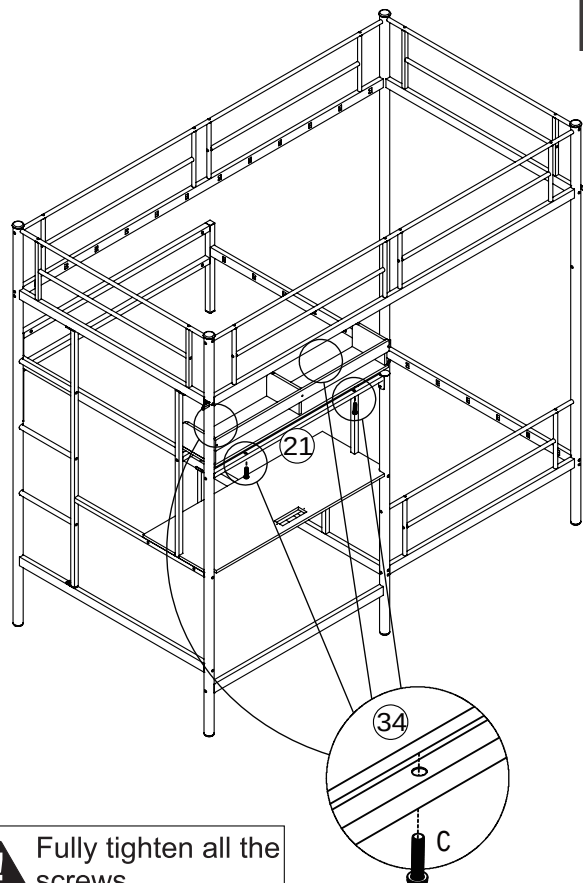


! Fully tighten all the screws.

C		4pcs
---	---	------

M8x30


28

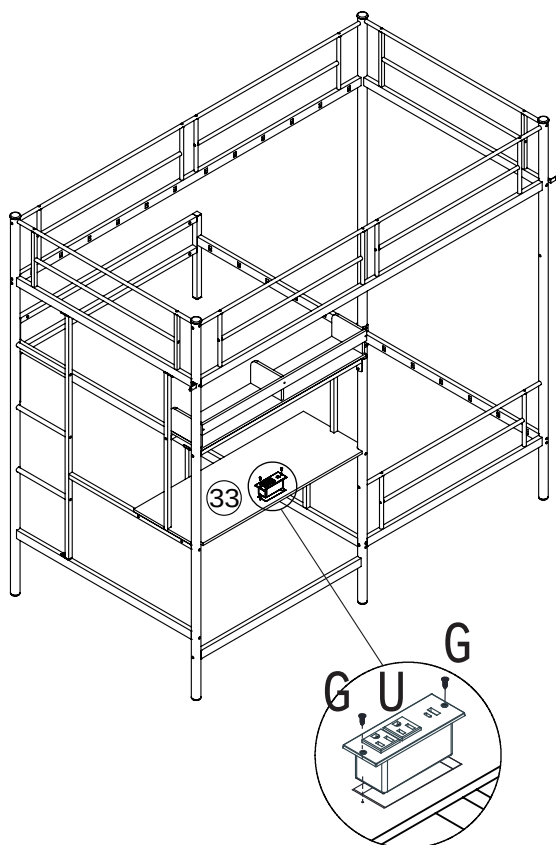

G		2pcs
---	--	------

ST4x14


29

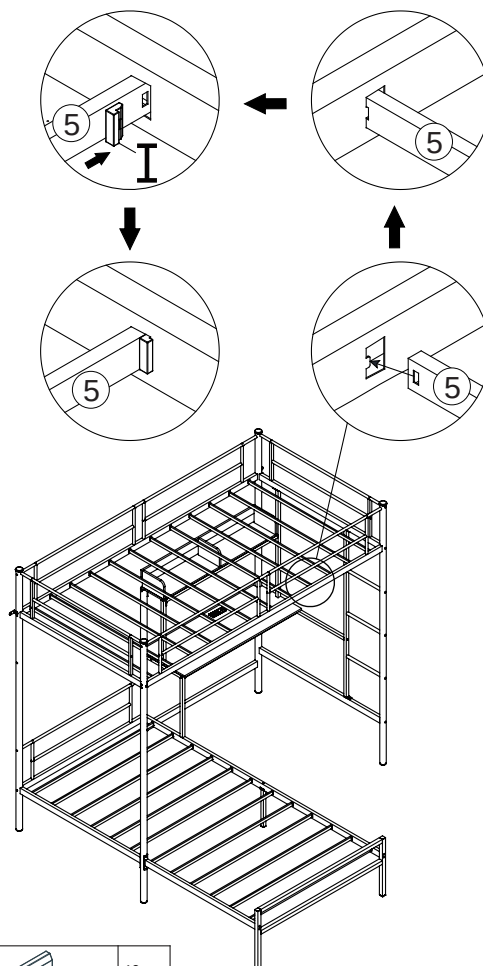

I		48pcs
---	--	-------

30


- 1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required
- 2: Place the expansion tube into the hole
- 3: Screw the screw together with the mounting part into the expansion pipe

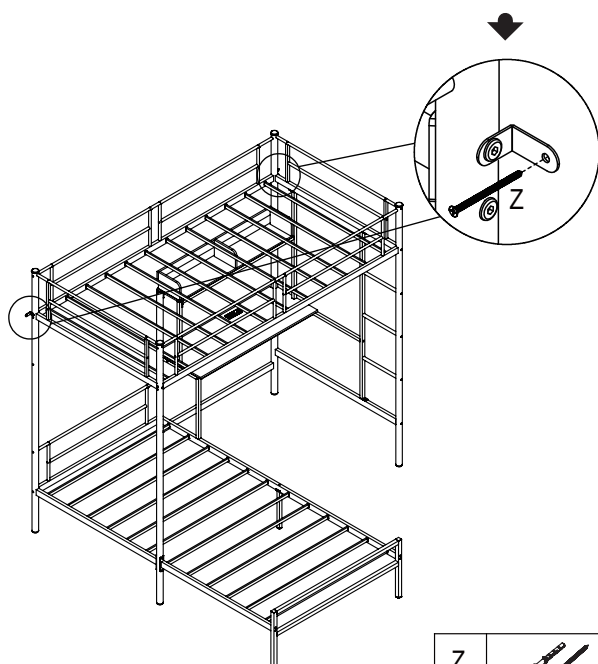

Z		2pcs
---	---	------

Finish

31

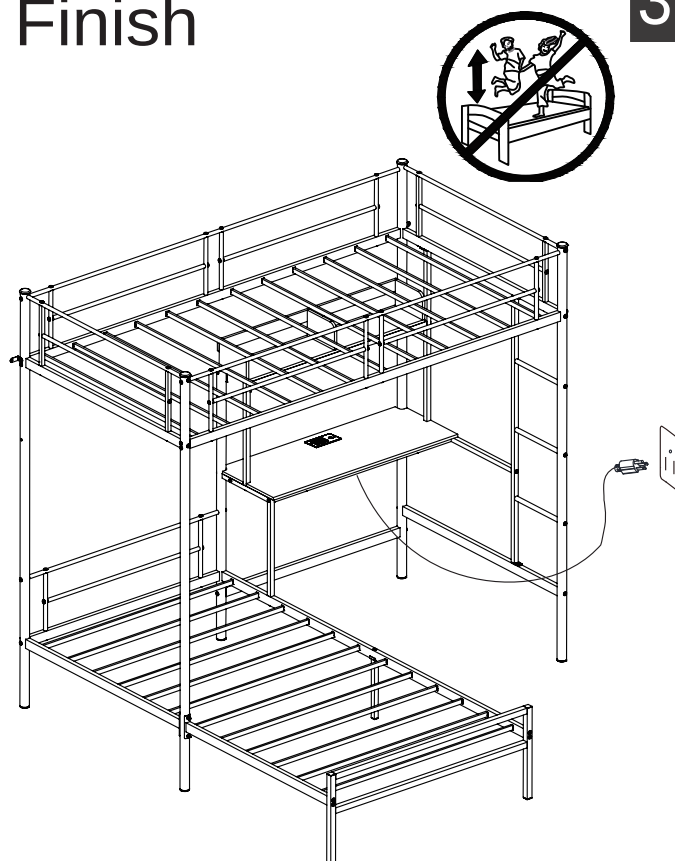

Note: Now you can tighten all the bolts.