Installation & Assembly




Before You Start

- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away fr om babies and children as they potentially pose a serious choking hazard.


Assembly Instructions














We have designed our furniture with you,the customer in mind.Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.






Completed Assembly

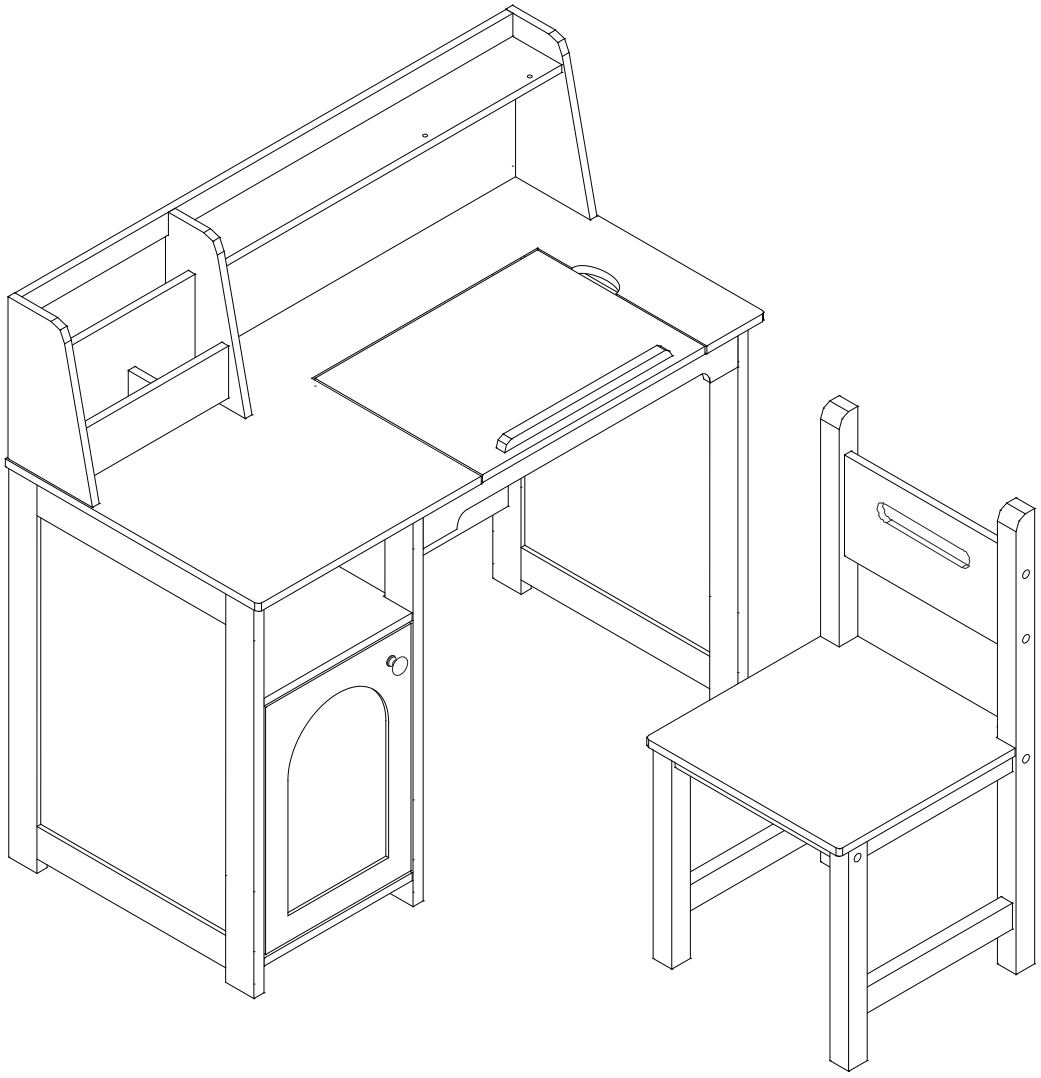

Parts Description

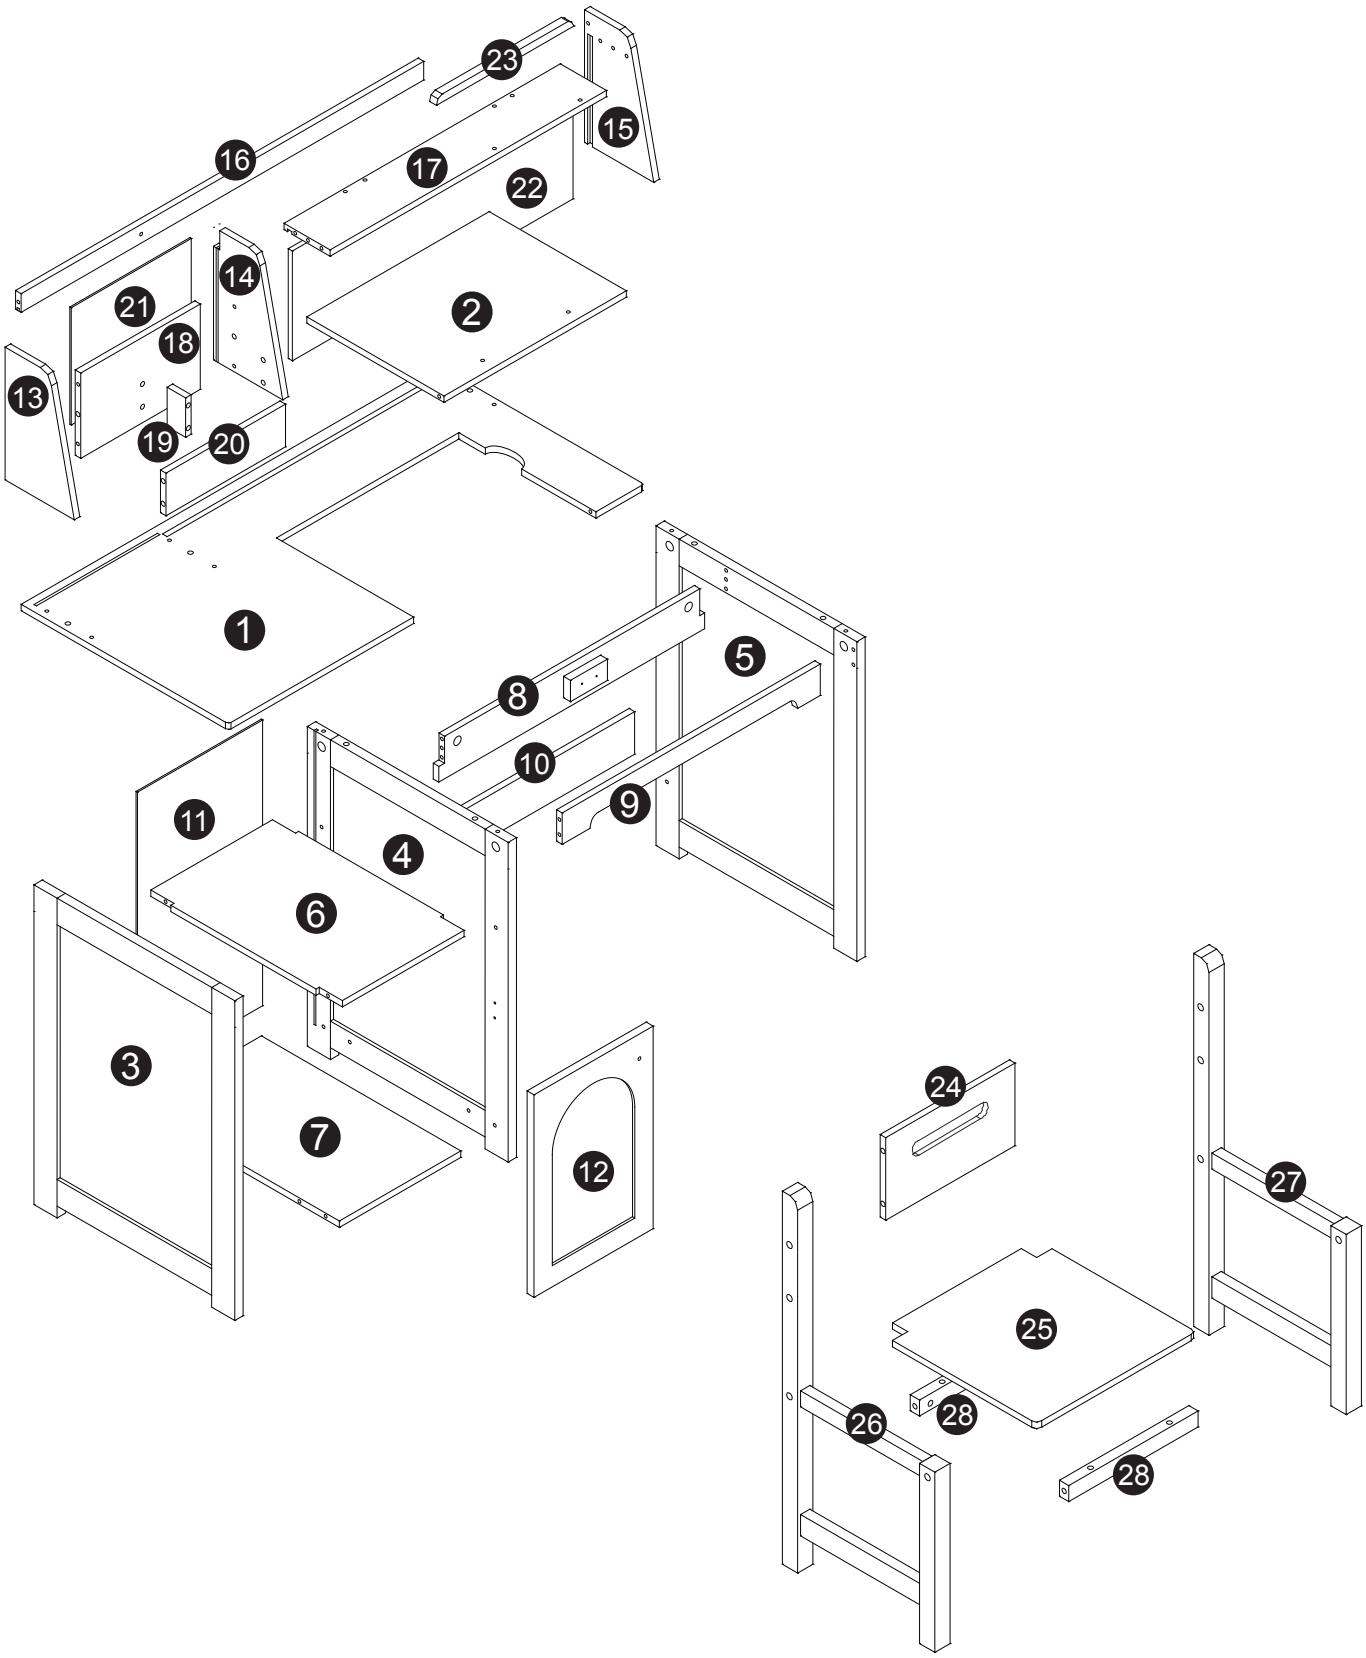

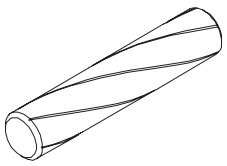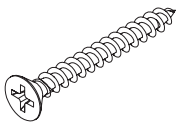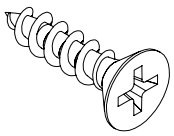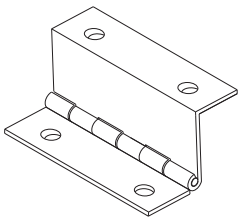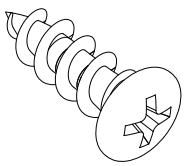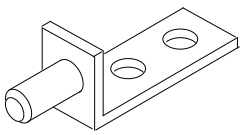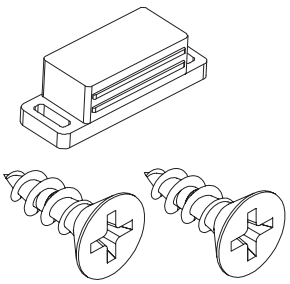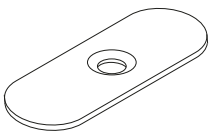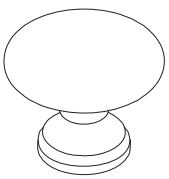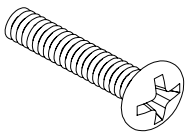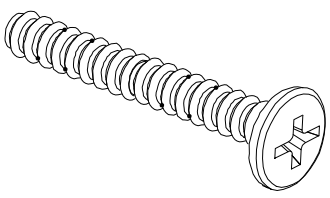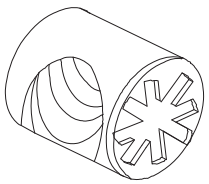A  Cam Bolt 30+2	B  Cam Lock 30+2	C  8x30mm Wooden Dowel 35+2
D  4x35mm Screw 11+1	E  3x12mm Screw 13+1	F  Metal Hinge 2
G  4x12mm Screw 6	H  Folding Support Rod 1	J  2
K  3x14mm 1	L  Metal Plate 1	M  Knob 1
N  4X20mm Bolt 1	Q  6X60mm Bolt 8	R  Lock Nut 8

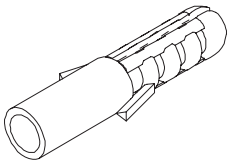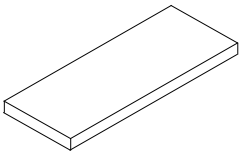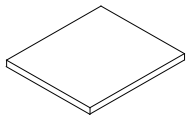S  6X30mm Bolt 4	T  Anti-tip Bracket 2	U  Anchor 2
V  Iron Sheet 2	W  Foot Pad 6	Y  Foot Pad 4



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock




CAM BOLT




CAM LOCK


Cam Bolt


Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

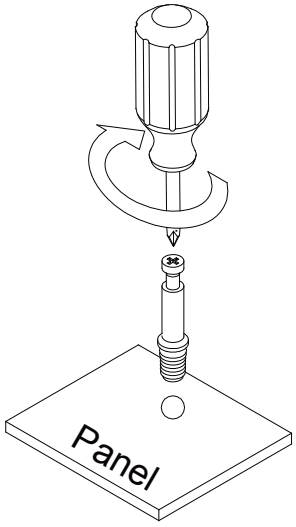

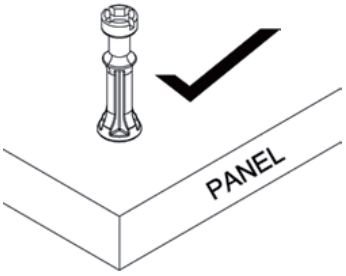


Shoulder is flushed (on the same level) with the panel.

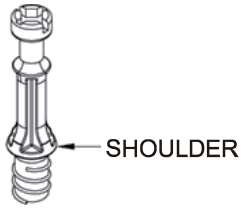


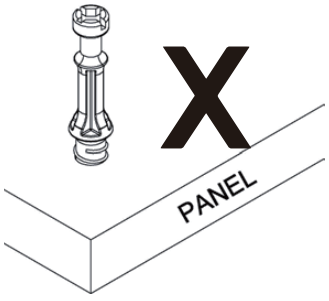

Shoulder is above the panel.


CAM-LOCK
Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock.

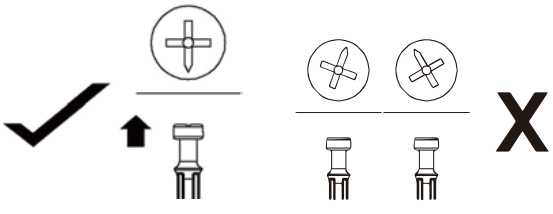

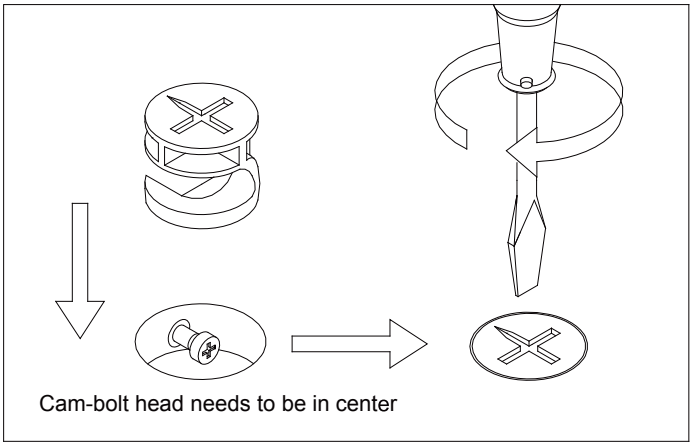


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

Step 1

Hardware Needed		
A		X8
W		X4


Step 2


Hardware Needed		
B		X2

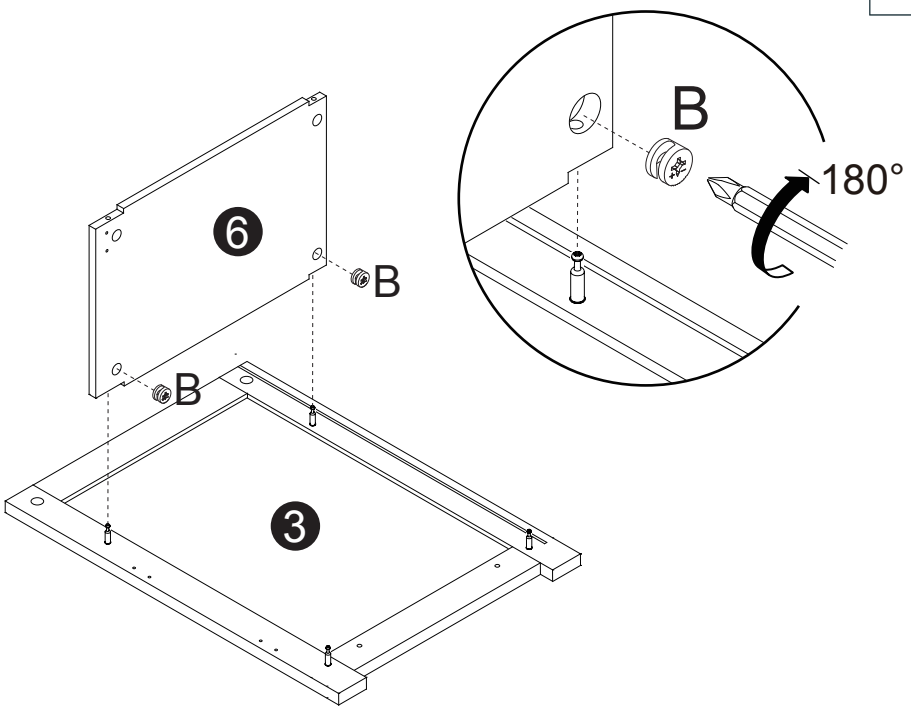

Step 3


Hardware Needed		
B		X2
C		X2

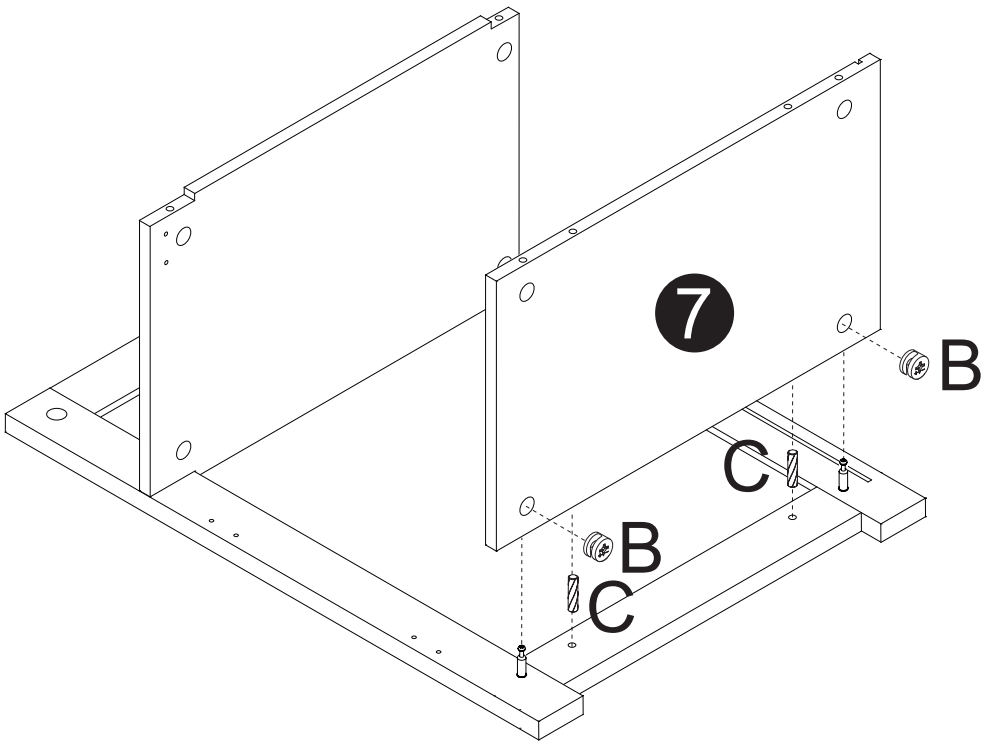

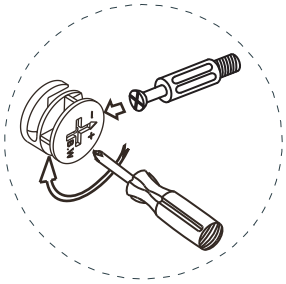


Step 4


Hardware Needed		
B		X4
C		X2

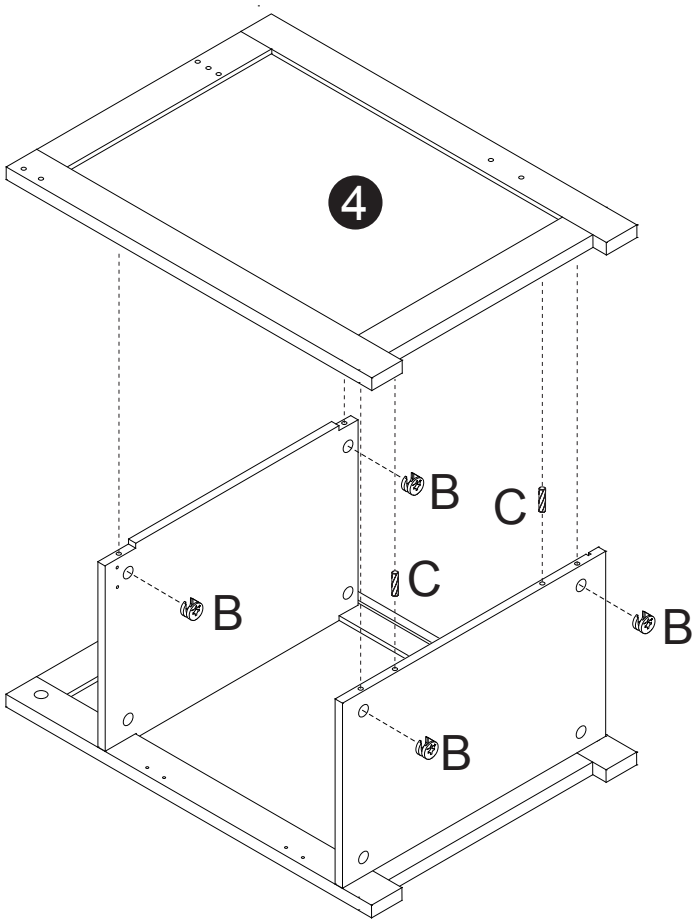


Step 5


Hardware Needed		
K		X1

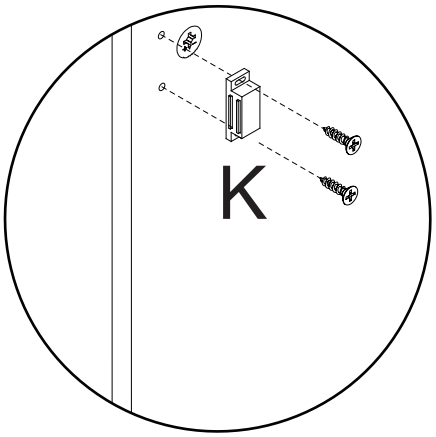


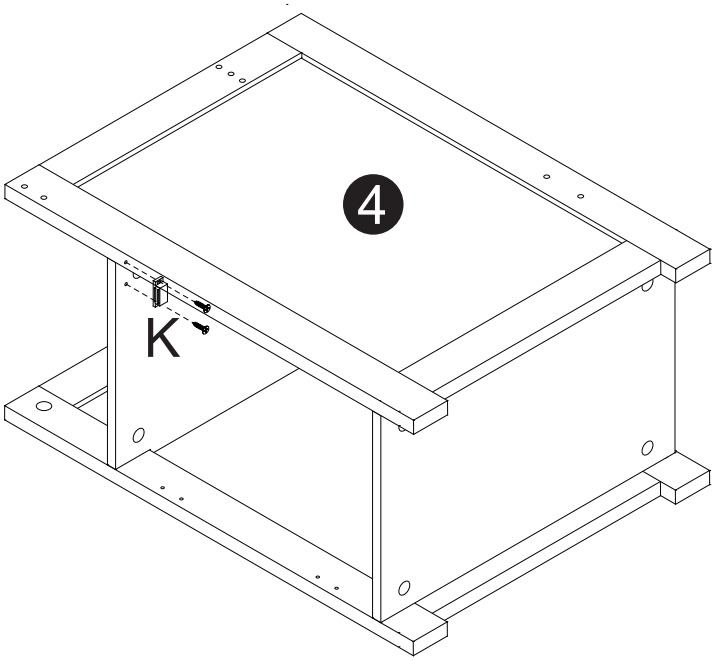


Step 6


Hardware Needed		
A		X4

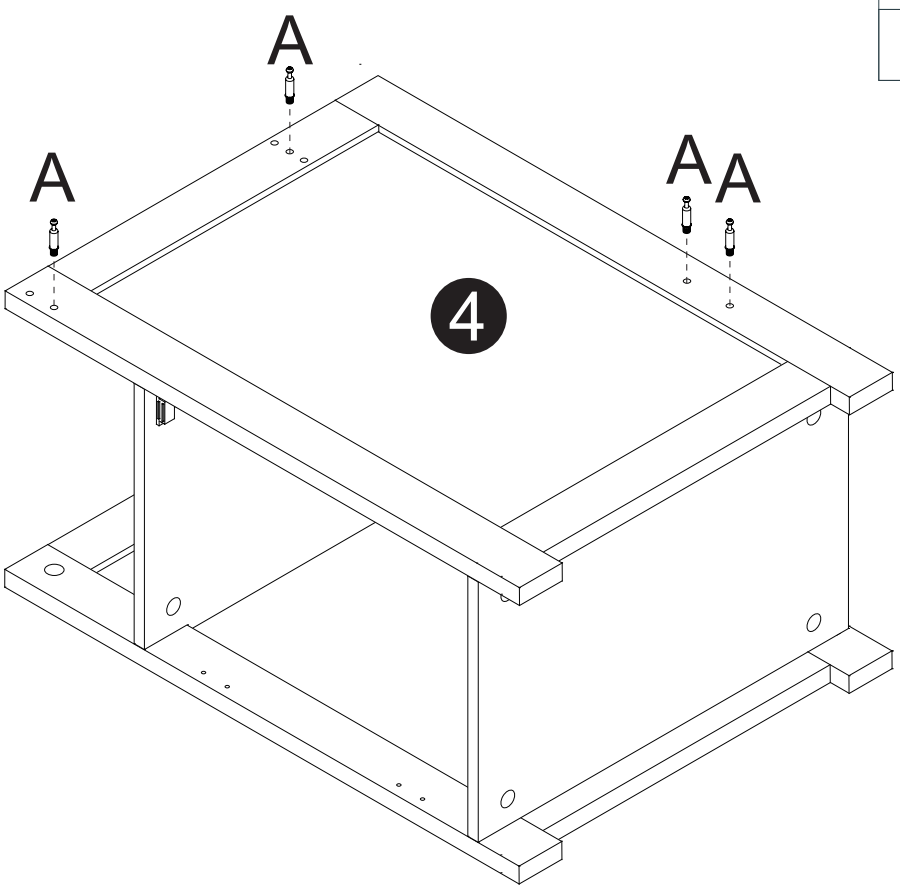


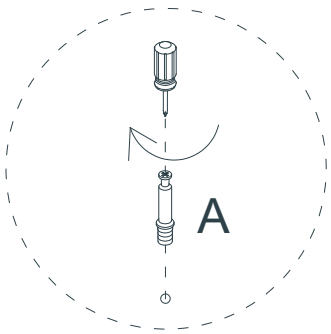

Step 7

Hardware Needed		
A		X4
W		X4

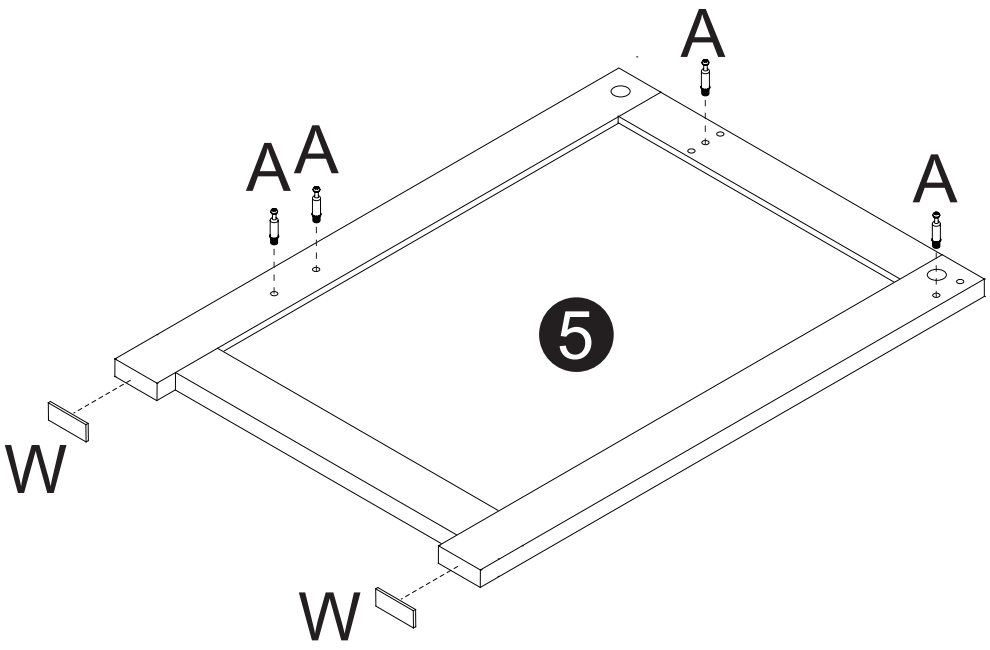


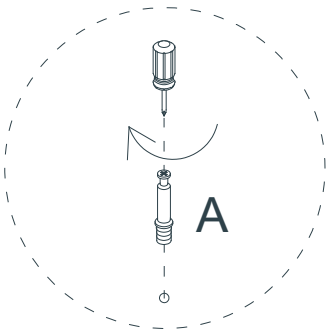


Step 8

Tip:
When installing, please note that the holes of the cam locks(B) of the plates (9) and (10) are facing inwards.

Hardware Needed		
B		X8
C		X6

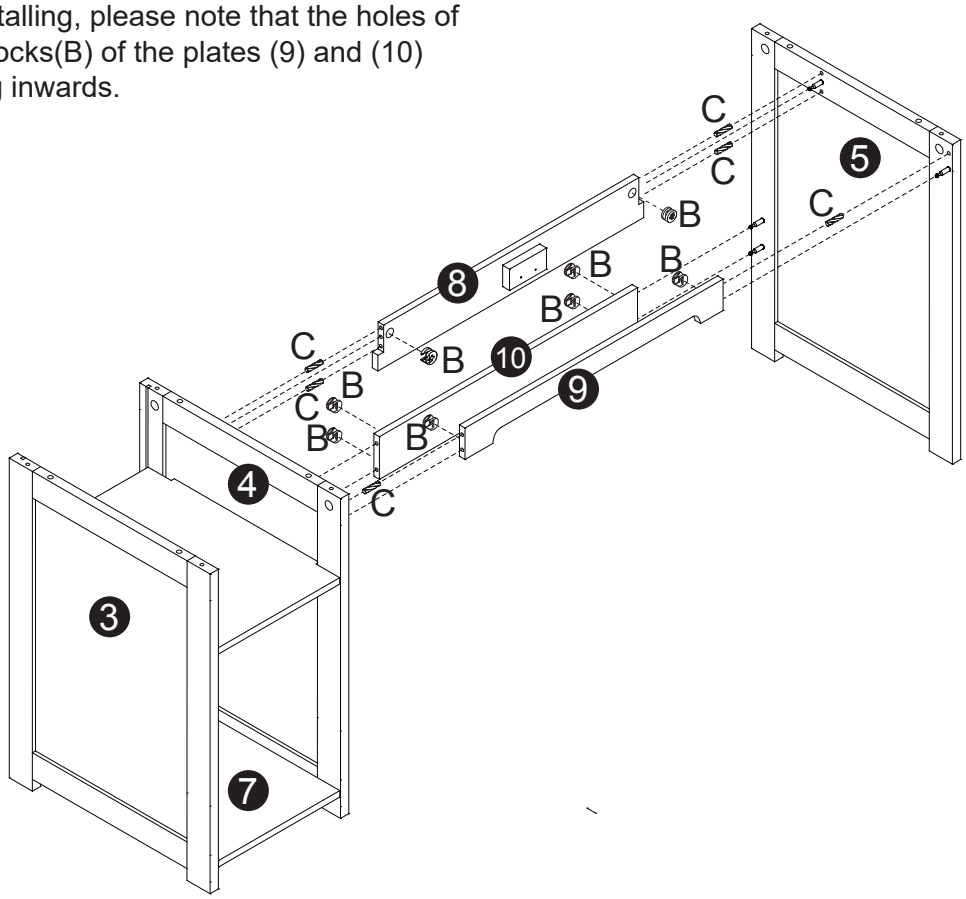


Step 9

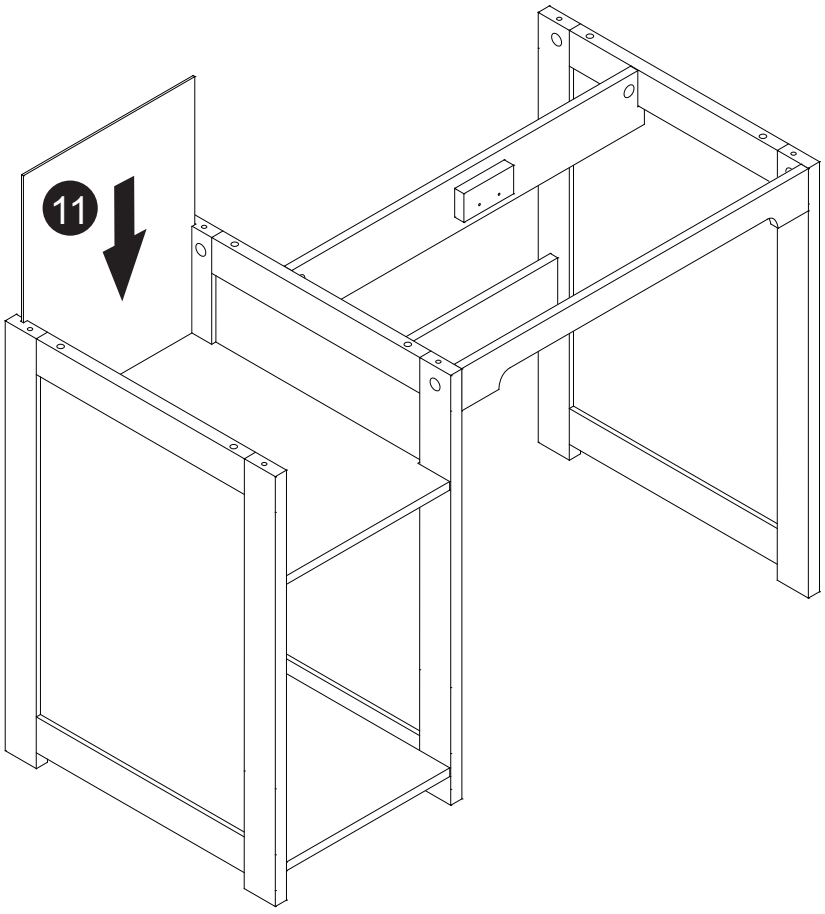



Step 10


Hardware Needed		
C		X4

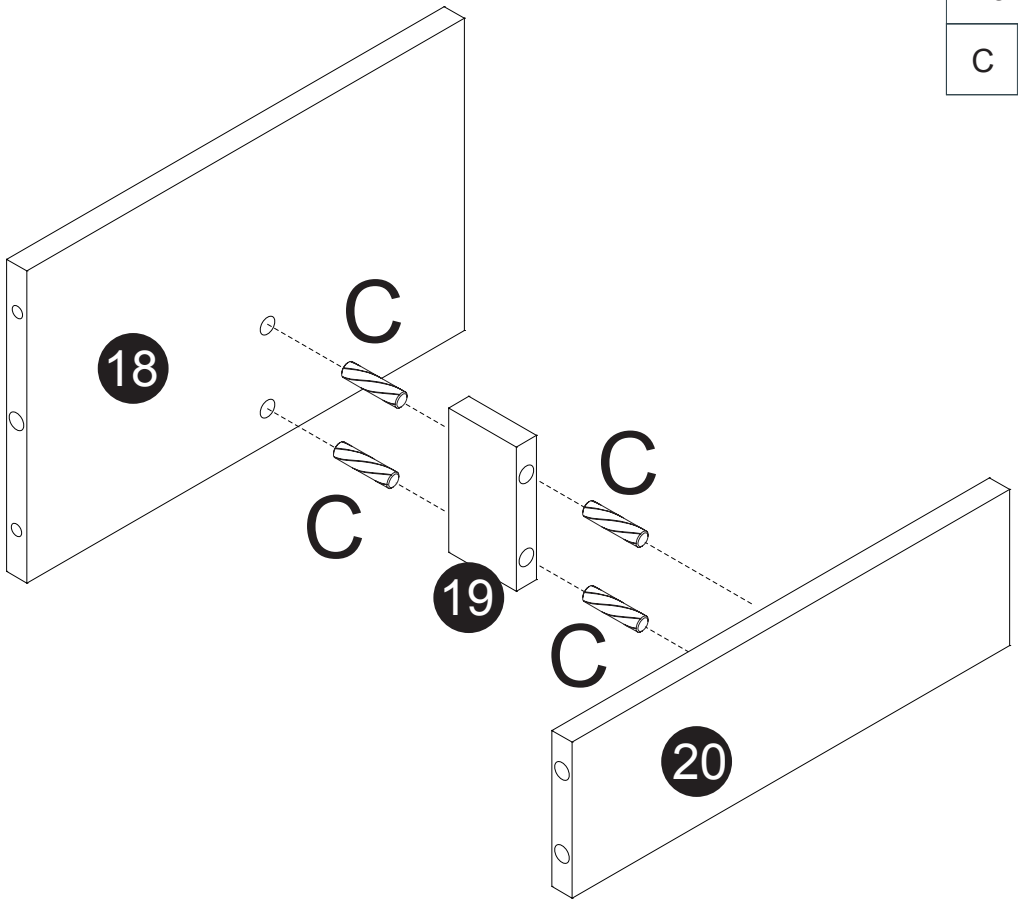

Step 11


Hardware Needed		
A		X7

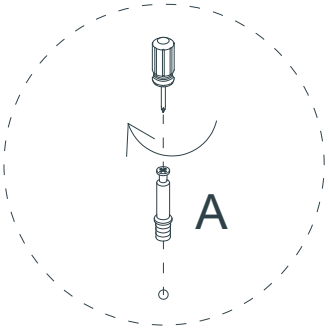


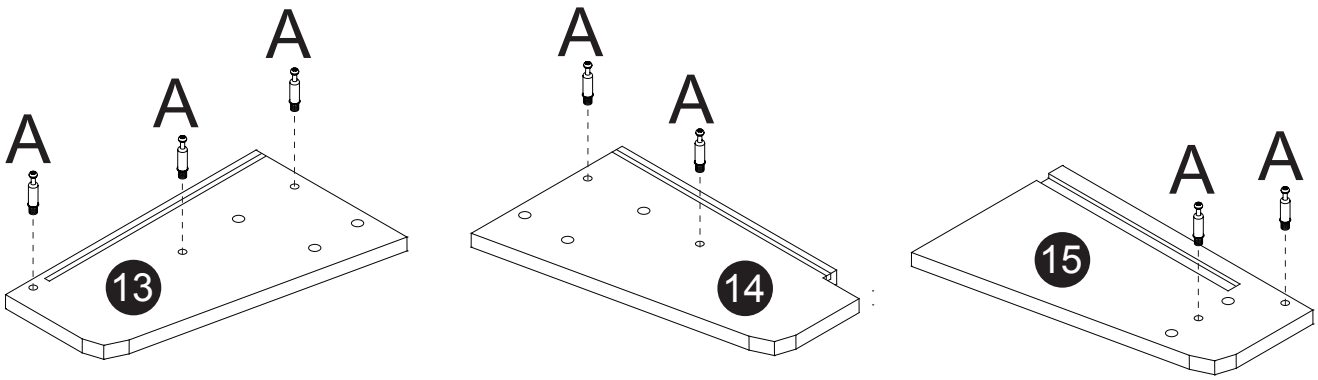


Step 12


Hardware Needed		
B		X4
C		X6

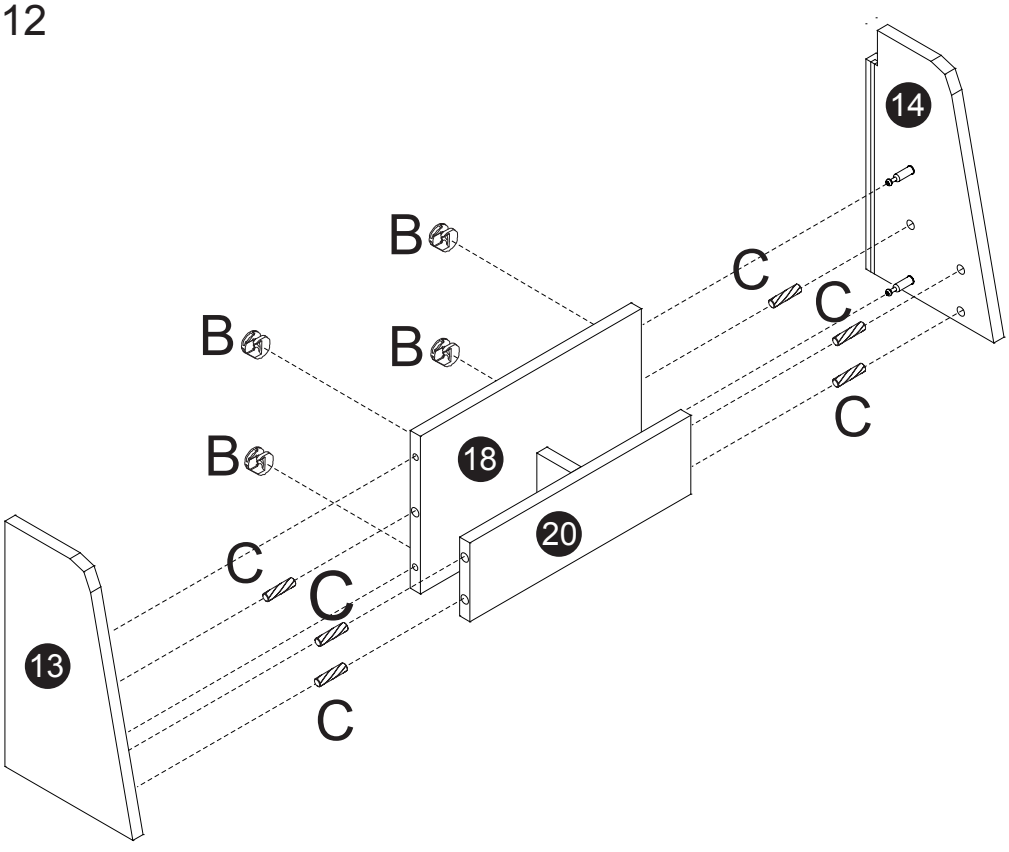

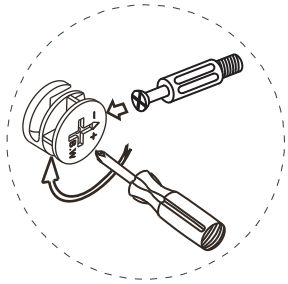


Step 13


Hardware Needed		
A		X1

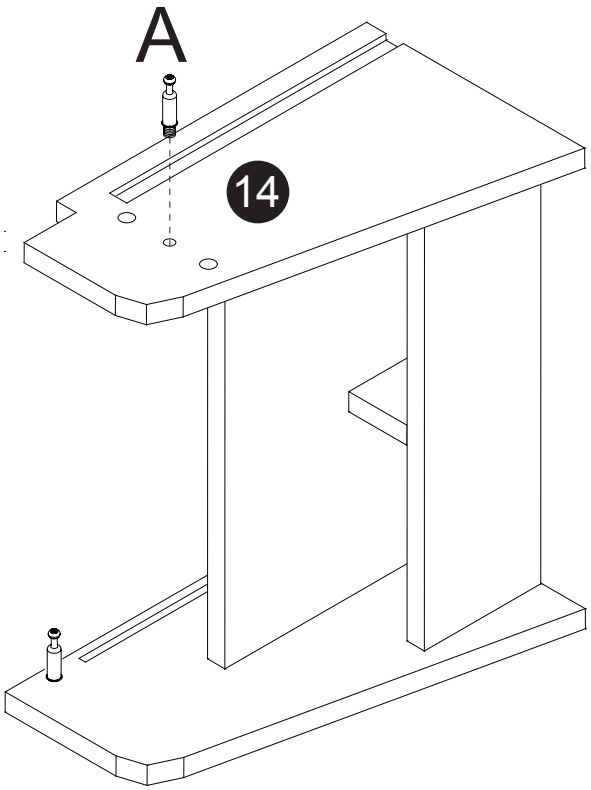

Step 14


Hardware Needed		
C		X2
D		X2

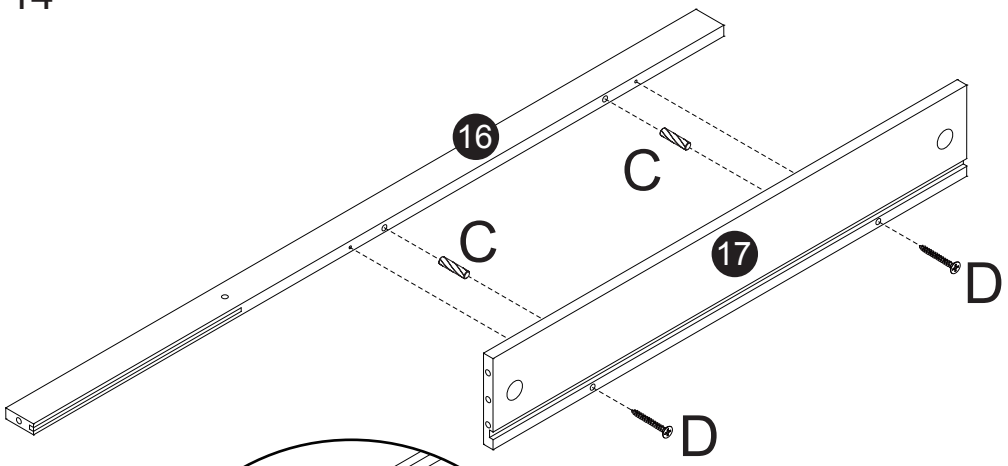


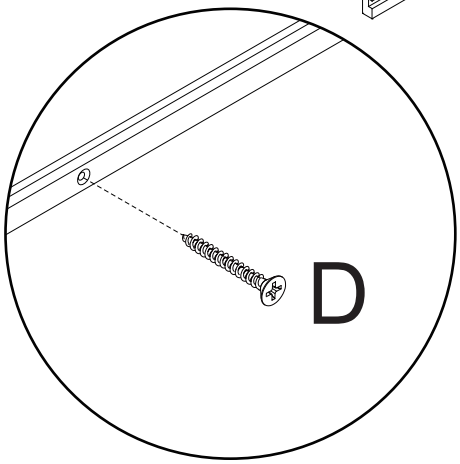

Step 15


Hardware Needed		
B		X2
C		X2

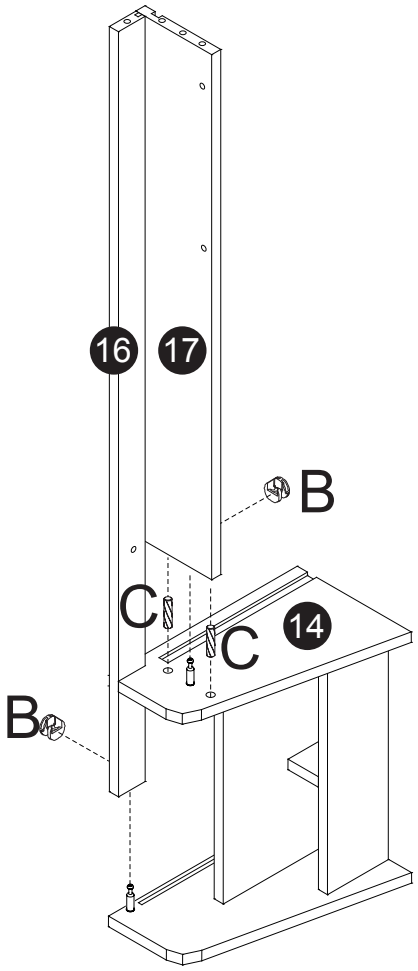

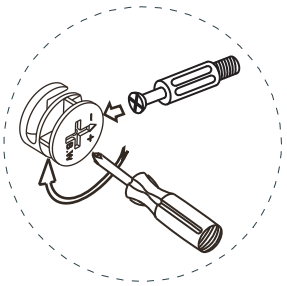



Step 16

Hardware Needed		
D		X1

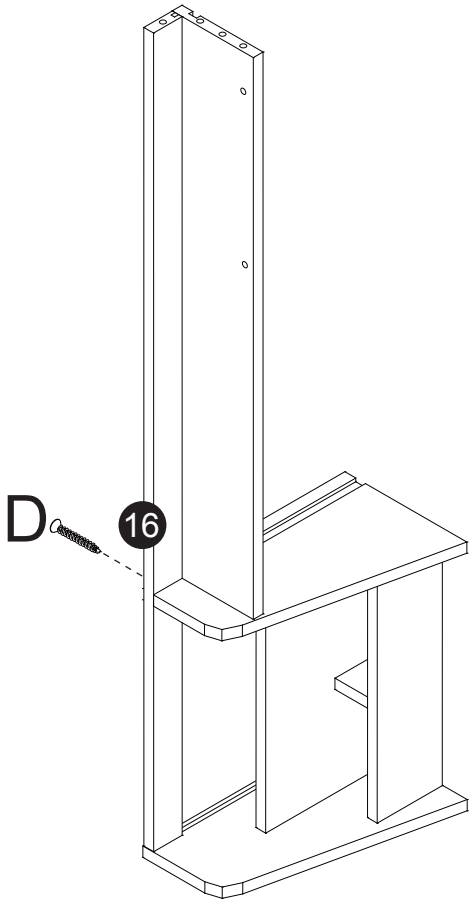


Step 17

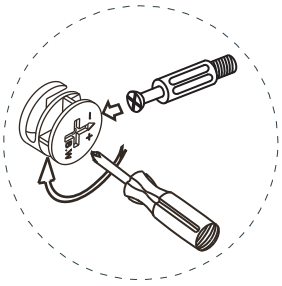

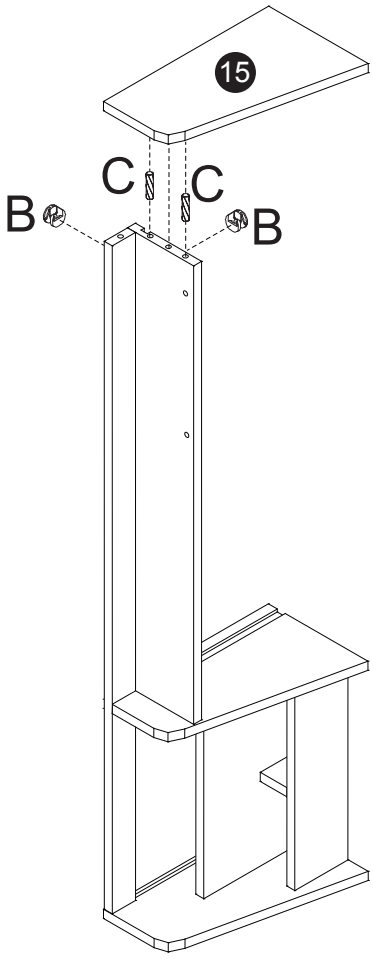

Hardware Needed		
B		X2
C		X2


Step 18

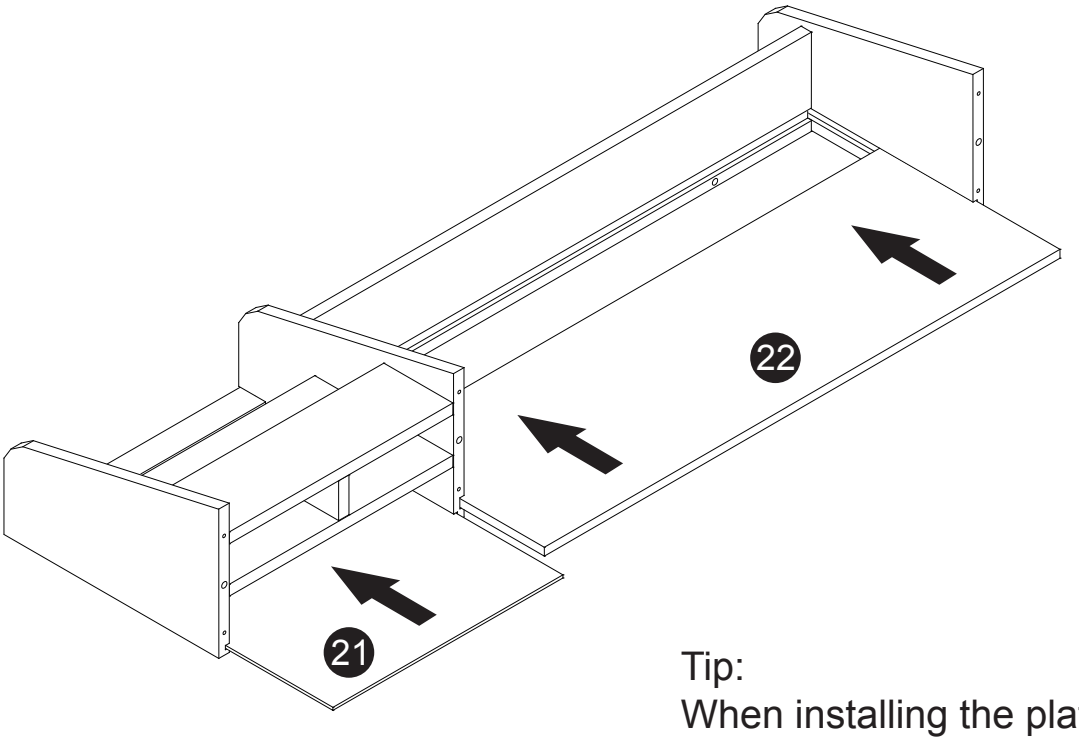

Tip:
When installing the plate (22), the cork board side faces upward.


Step 19

Hardware Needed		
A		X6

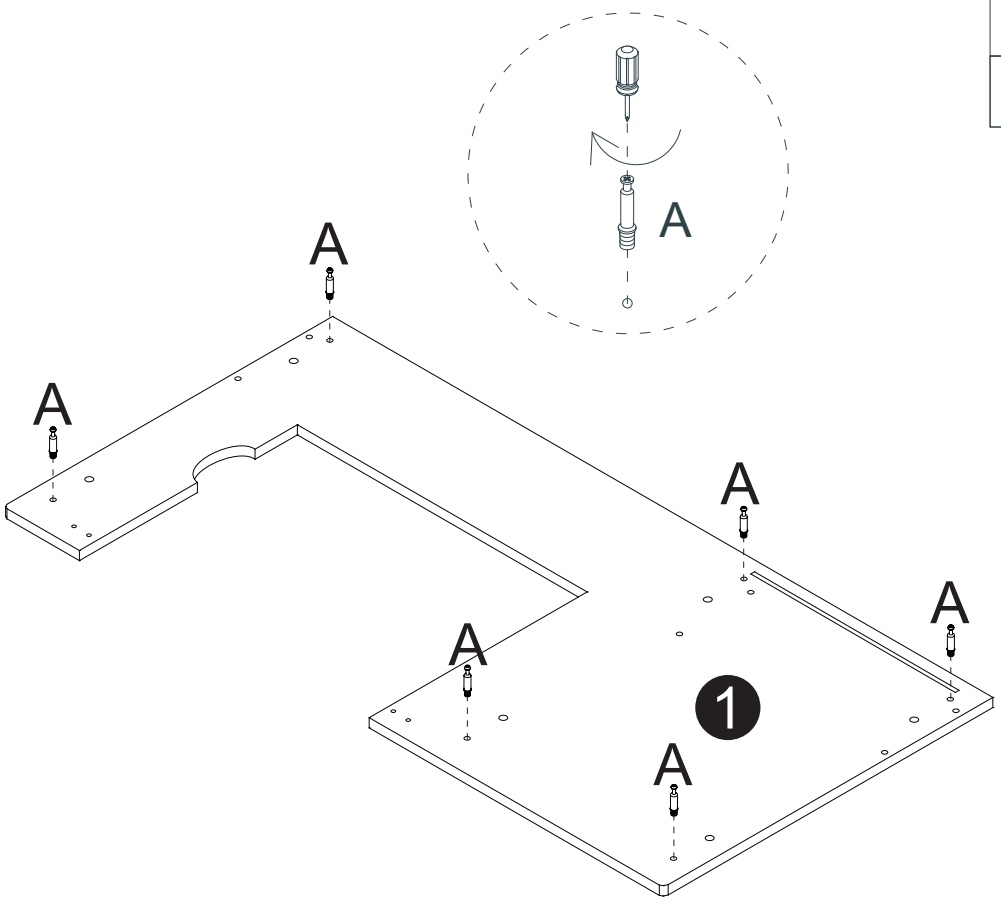


Step 20

Hardware Needed		
C		X3
D		X6

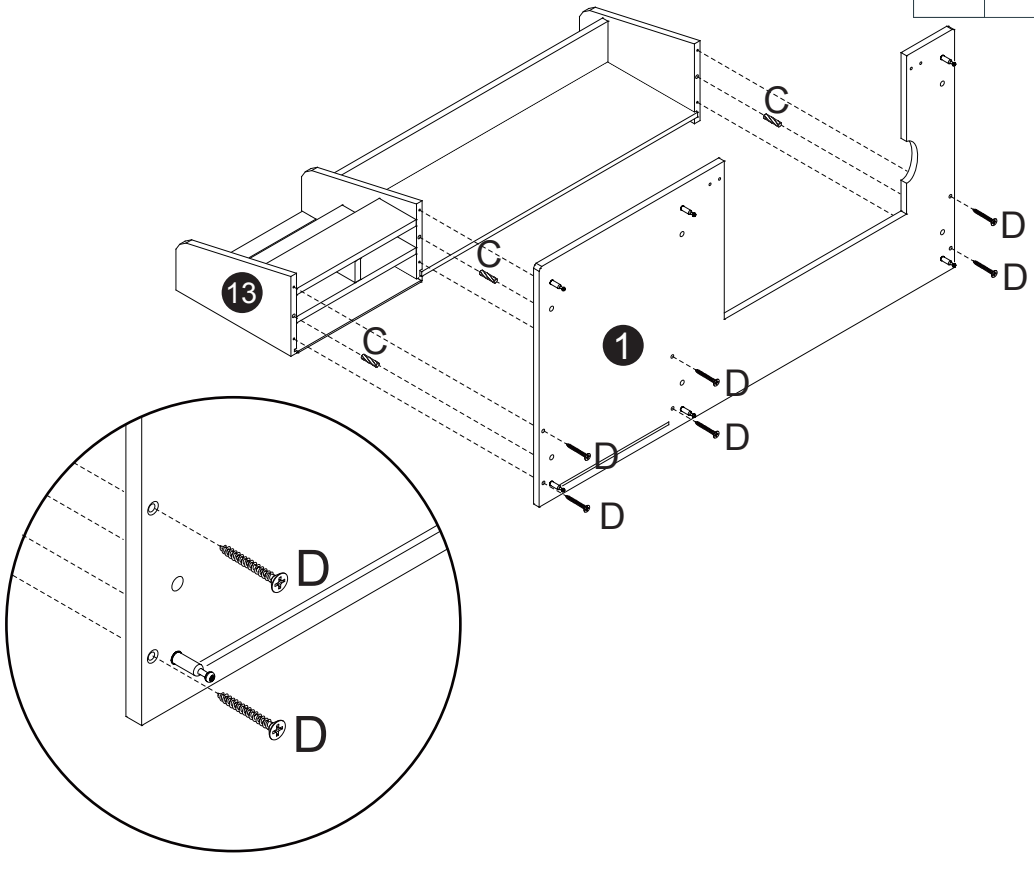


Step 21

Tip：This step is recommended for two people to install

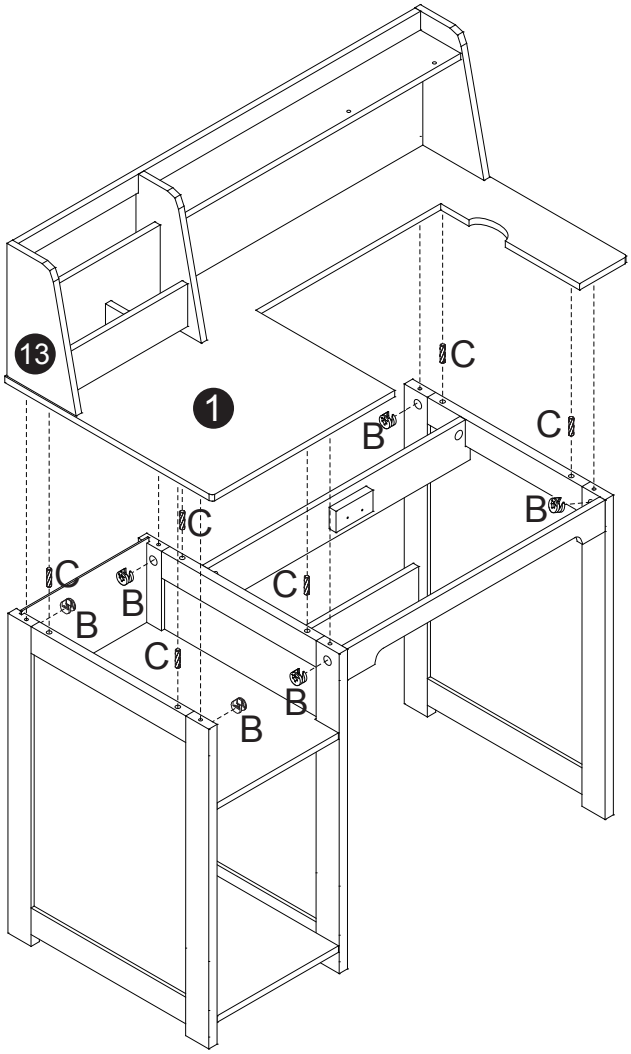


Hardware Needed		
B		X6
C		X6

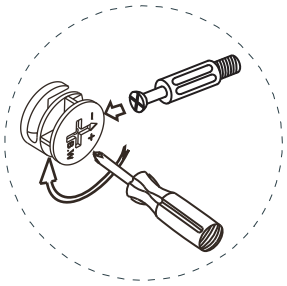

Step 22

Hardware Needed		
G		X2
H		X1
J		X2

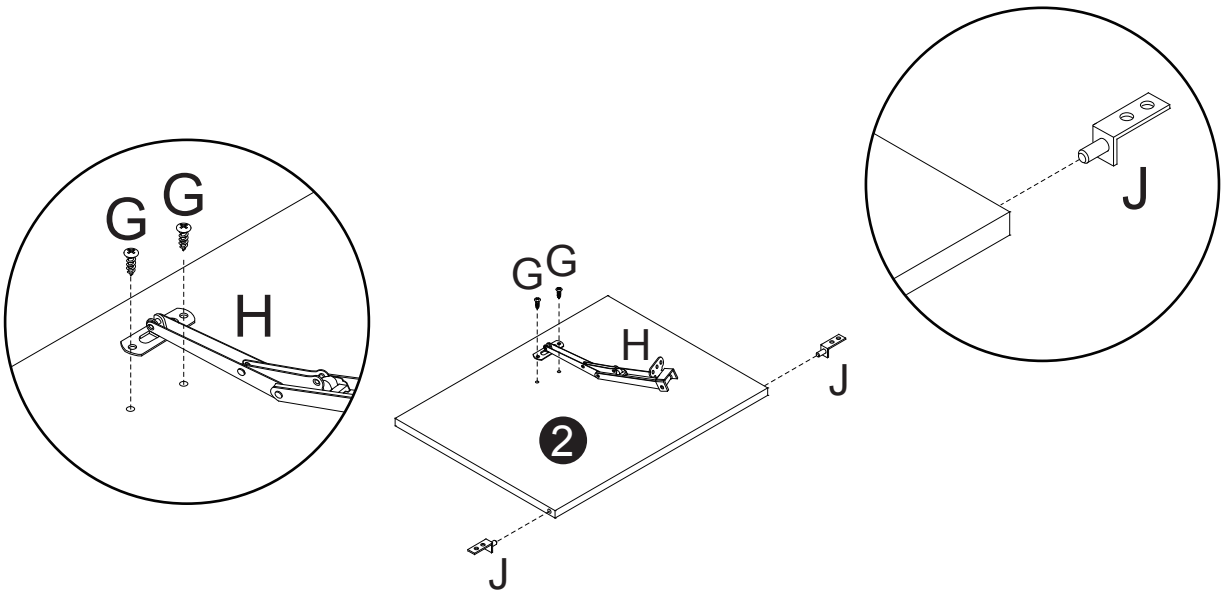

Step 23


Hardware Needed		
E		X4


Step 24

Hardware Needed		
G		X2

Step25


Hardware Needed		
E		X4
F		X2

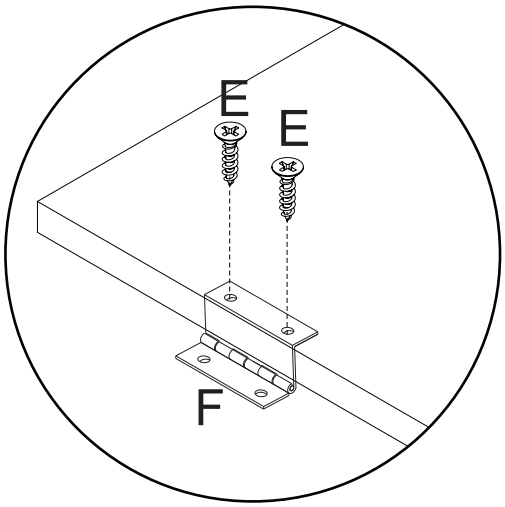


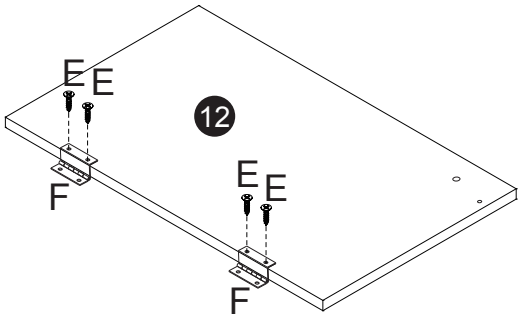

Step26


Hardware Needed		
E		X1
L		X1

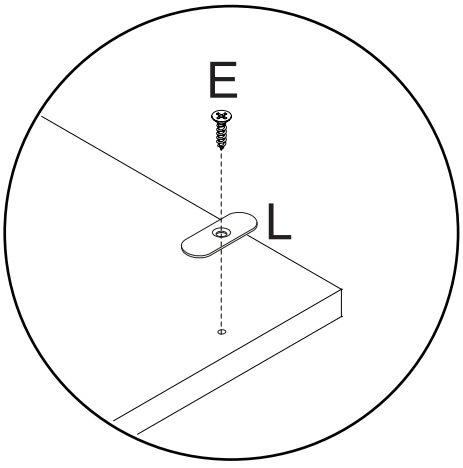

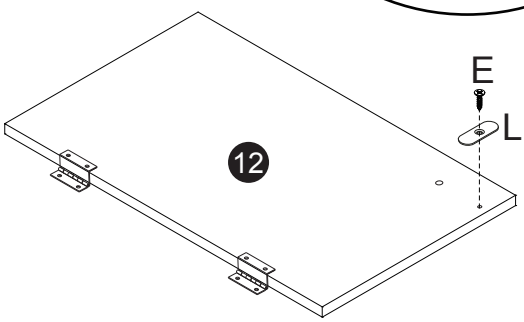


Step27

Hardware Needed		
E		X4

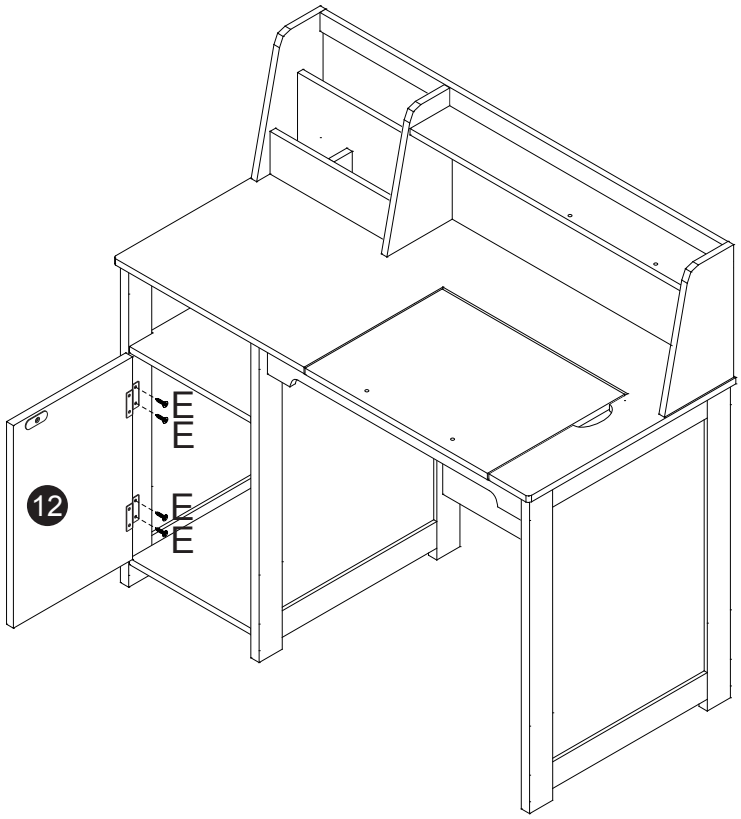


Step28

Hardware Needed		
M		X1
N		X1

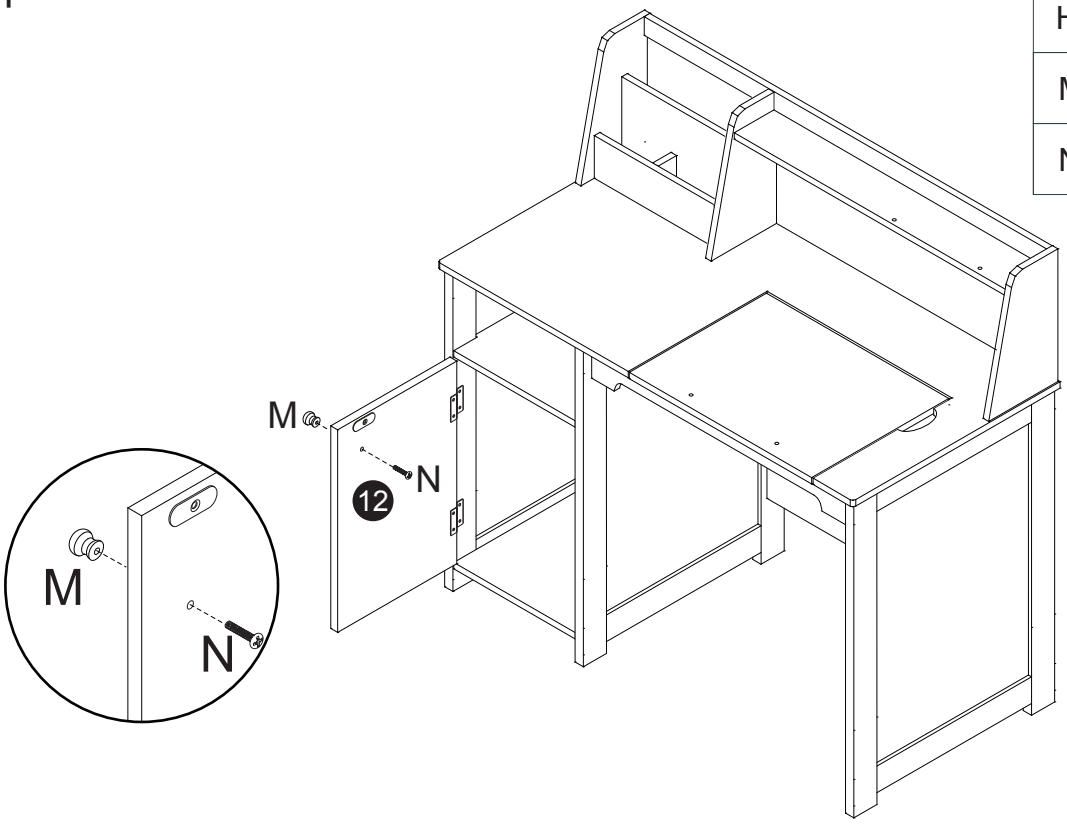


Step29

Scenario 1: When the stop bar (23) is not needed, it can be placed in the reserved hole of the upper layer board

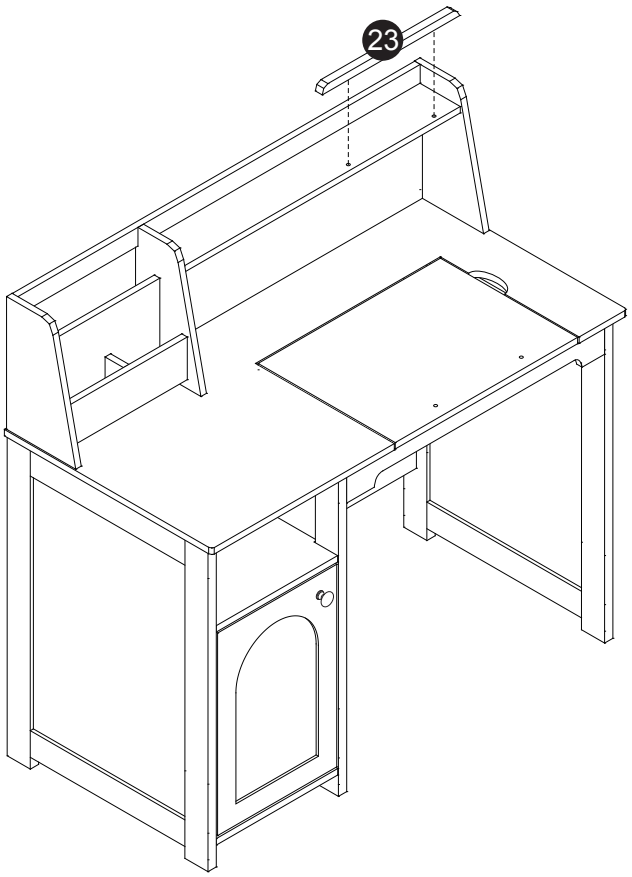


OR


Scenario 2: When the desktop is raised for use, the stop bar (23) can be placed in the reserved hole of the desktop to prevent objects on the desktop from sliding down;

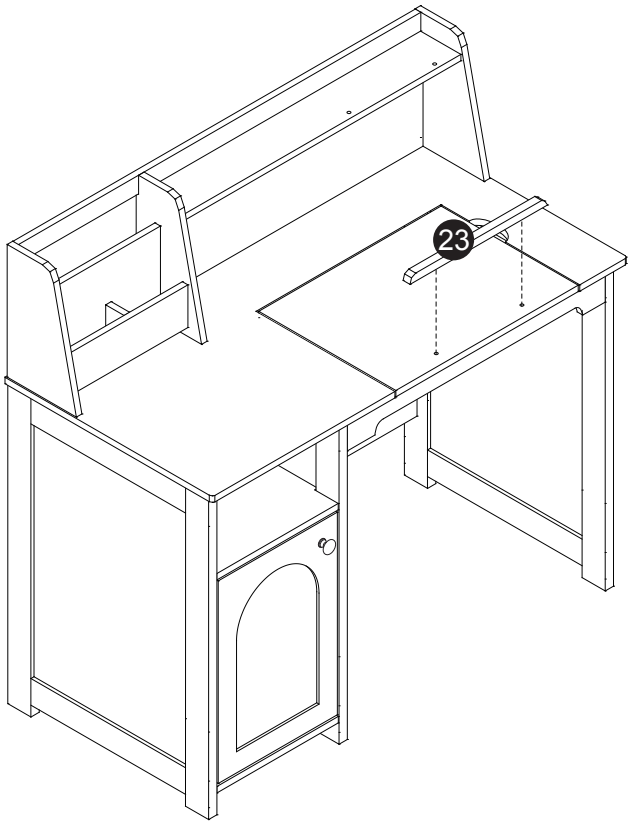

Step 30


Hardware Needed		
G		X2
T		X2

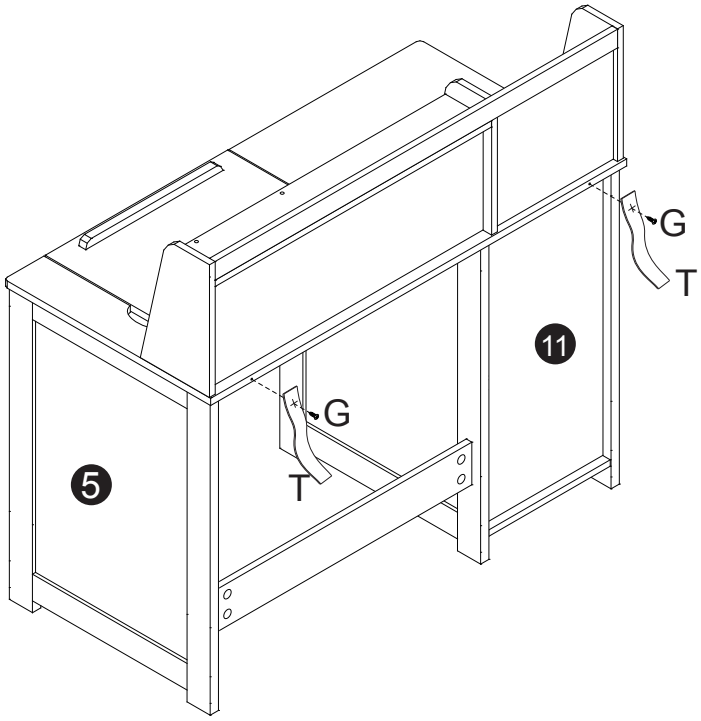


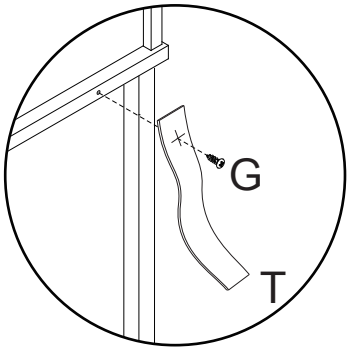



Step 31

Hardware Needed		
D		X2
U		X2
V		X2

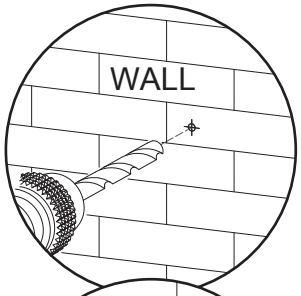

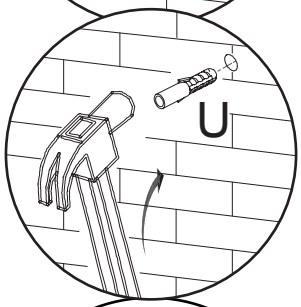


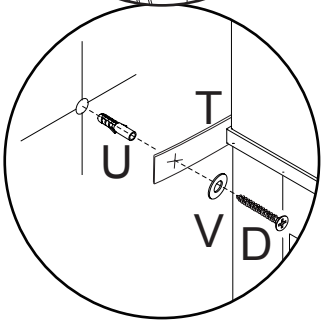

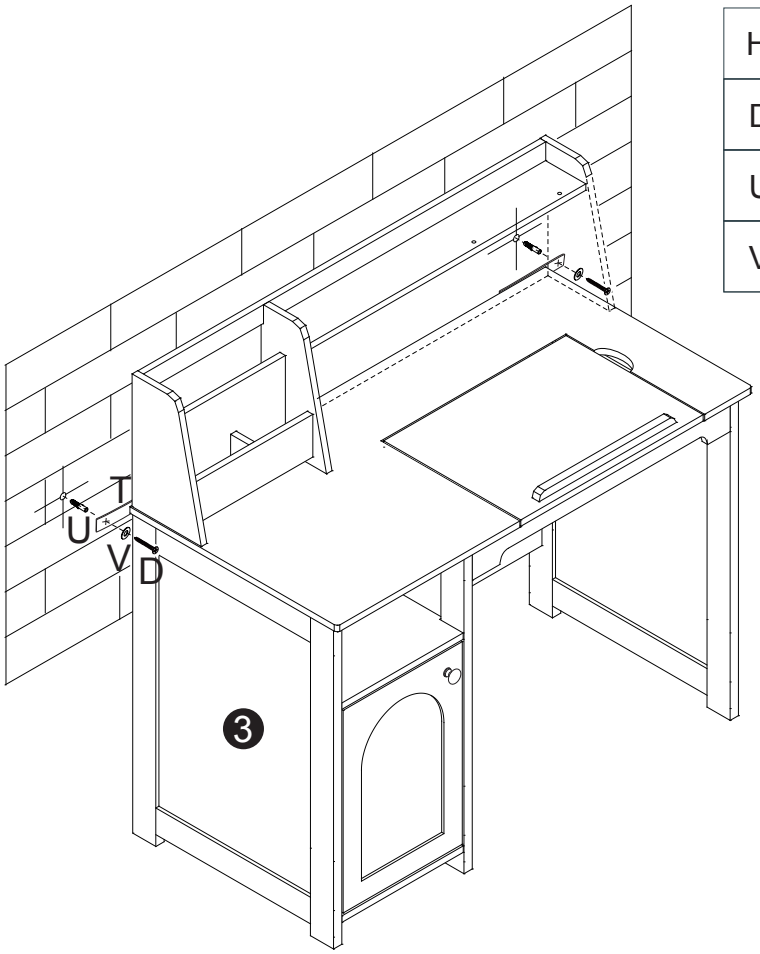


Step 32

Hardware Needed		
Q		X8
R		X8

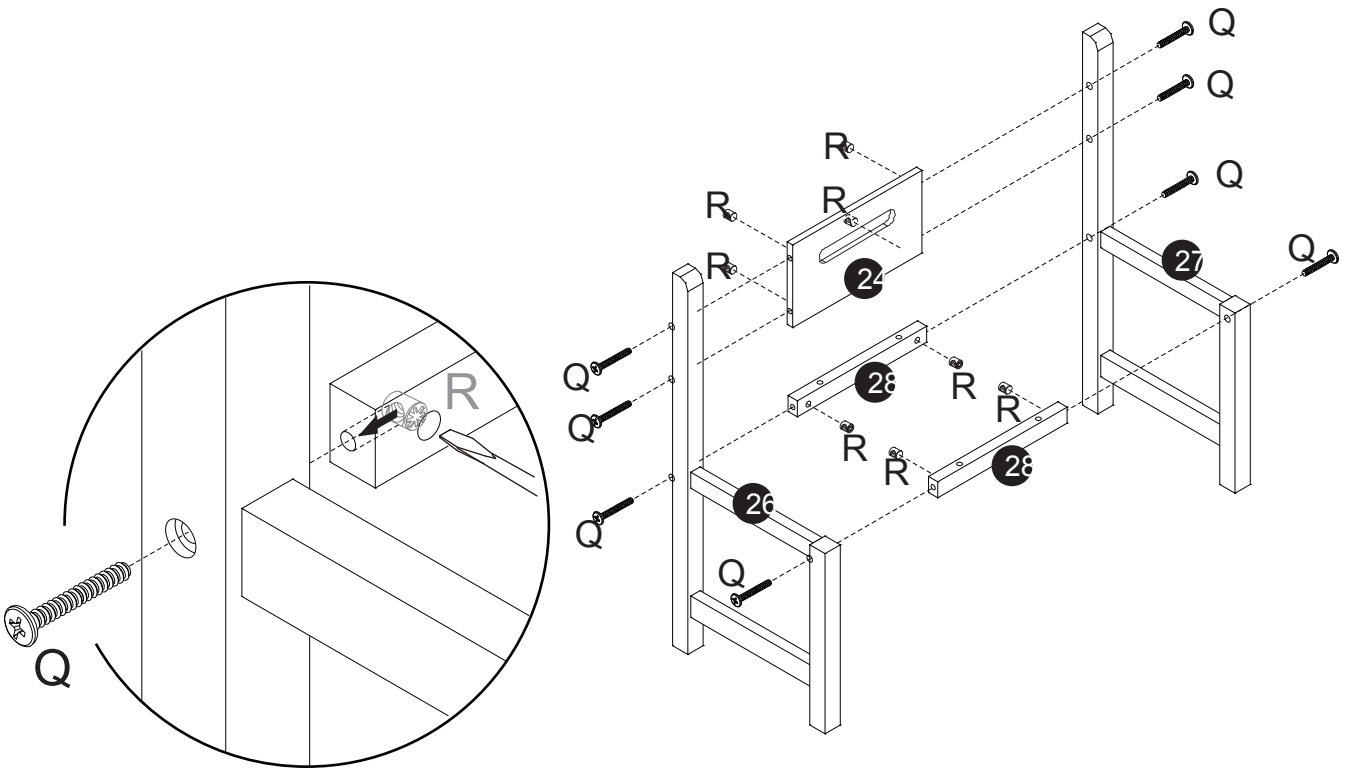


Step 33

Hardware Needed		
S		X4

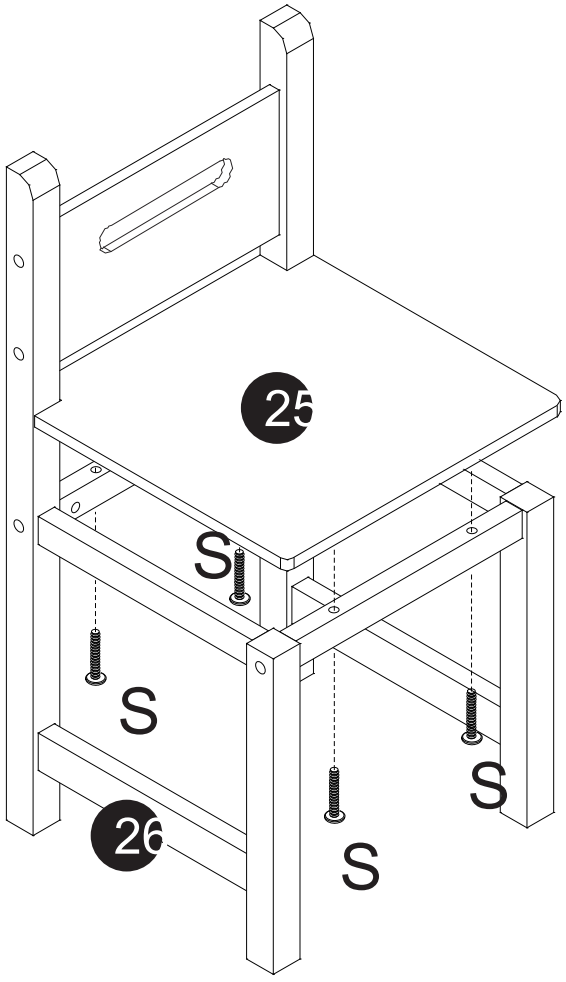

Step 34

Hardware Needed		
Y		X4

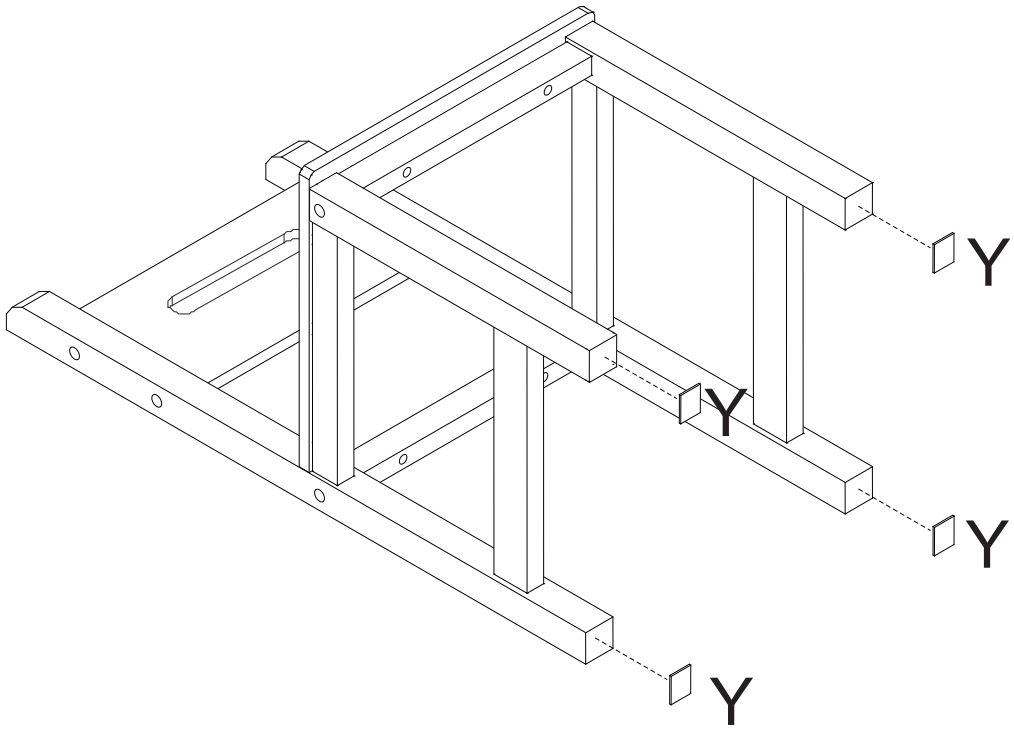

Step 35

