


Three Drawer Door Cabinet

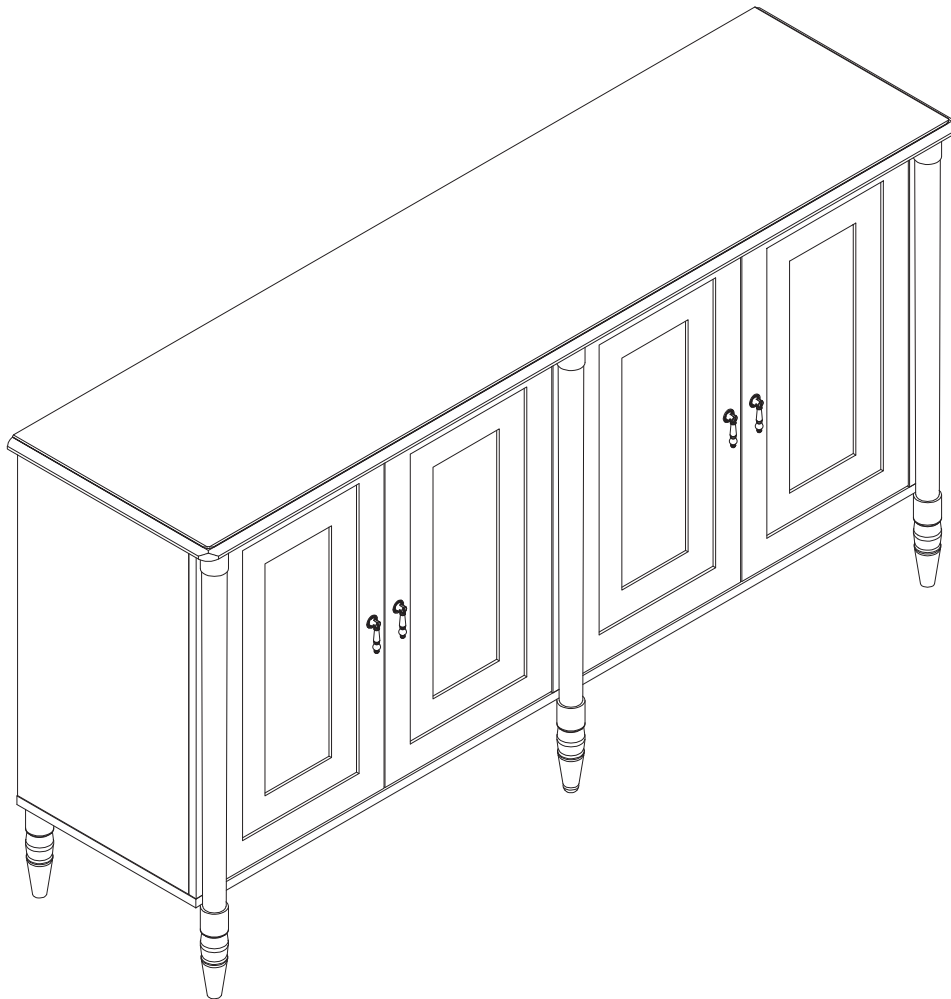

Please make sure to read the instruction manual carefully before installing the product.

Do Not Return This Product!

Contact our customer service team
for help first.

WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to)
- Do Not allow children to climb on unit.
- put heavy items on lower shelves or drawers.

**PEOPLE NEEDED
FOR ASSEMBLY:2**

MEXXD202511001

CONTACT US!

Do NOT return this product!

Contact our friendly customer service team first for help.


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push,pull,or drag your furniture.












BEFORE YOU START

- ☒ Read through each step carefully and follow the proper order
- ☒ Separate and count all your parts and hardware
- ☒ Give yourself enough room for the assembly process
- ☒ Have the following tools:Flat Head Screwdriver,#2 Phillips Head Screwdriver and Hammer
- ☒ Caution: IF using a power drill or power screwdriver for screwing,please be aware to slow down and stop when screw is tight.Failure to do so may result in stripping the screw.








BOARD IDENTIFICATION

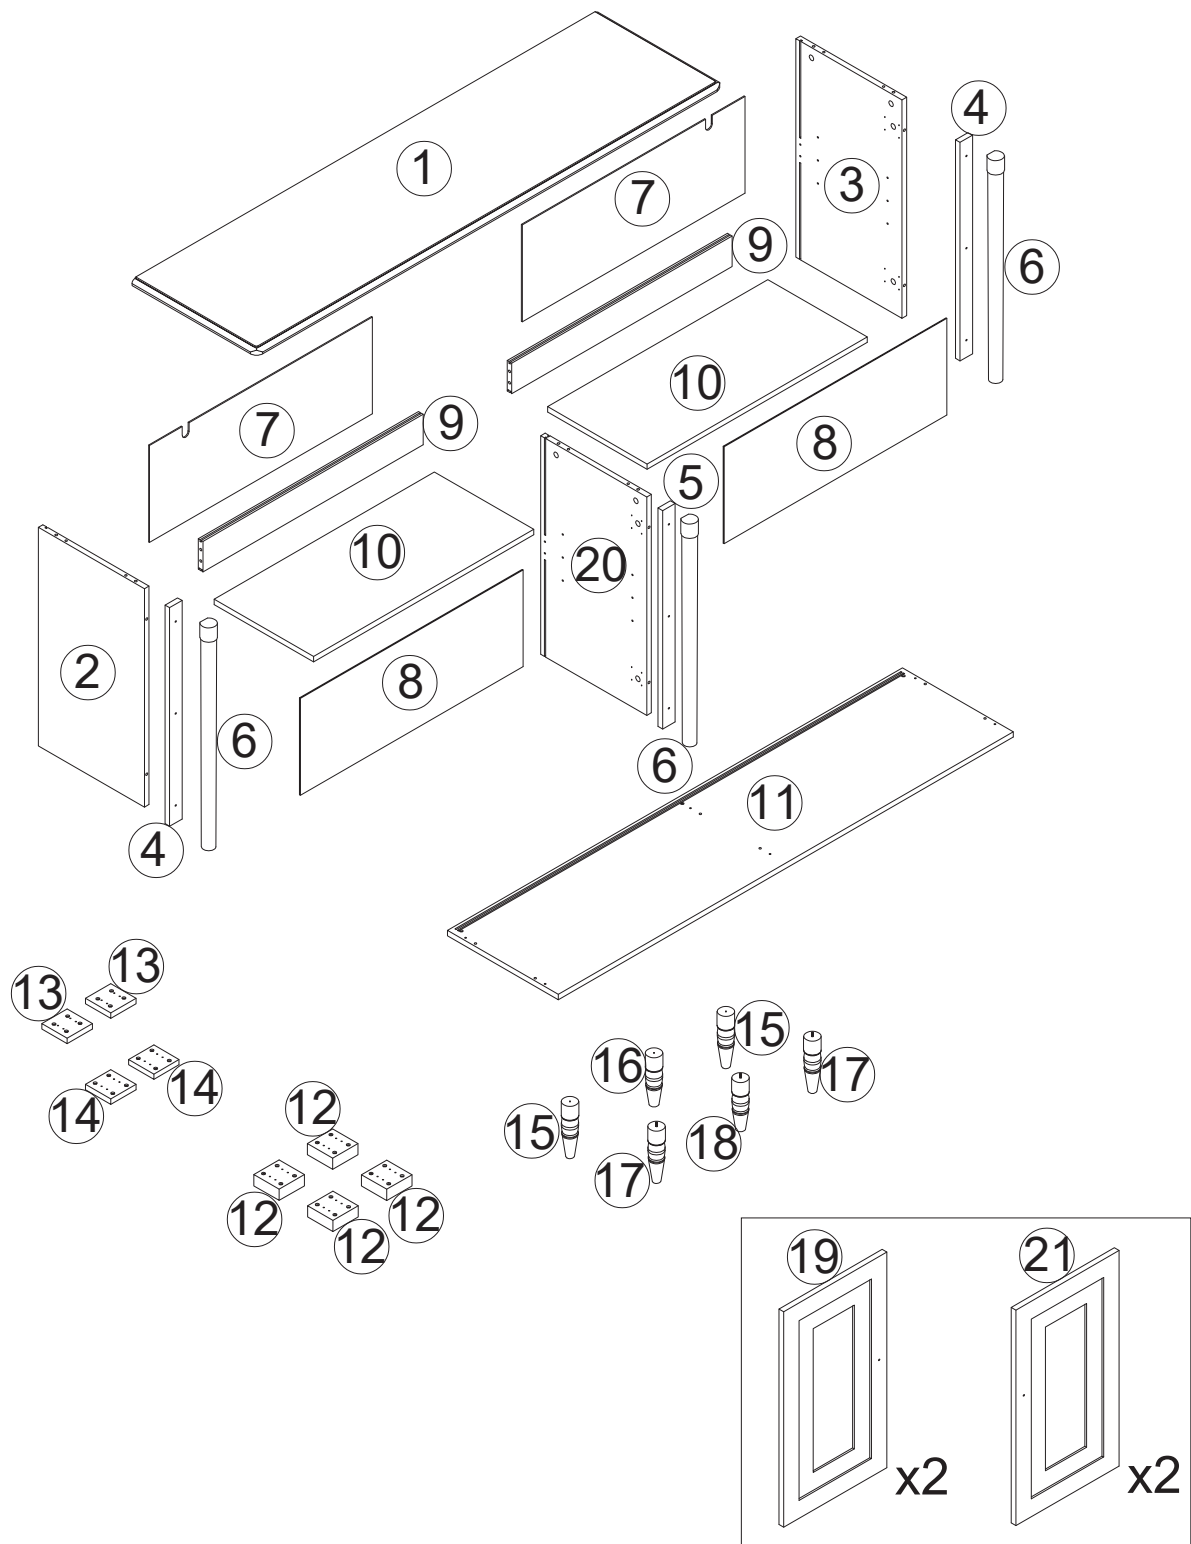


BOARD IDENTIFICATION

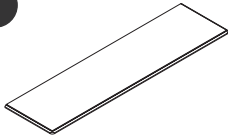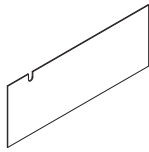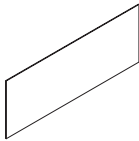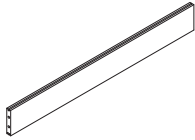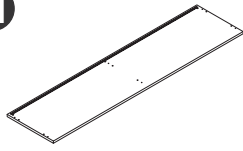1  1PC	2  1PC	3  1PC	4  2PCS
5  1PC	6  3PCS	7  2PCS	8  2PCS
9  2PCS	10  2PCS	11  1PC	12  4PCS
13  2PCS	14  2PCS	15  2PCS	16  1PC
17  2PCS	18  1PC	19  2PCS	20  1PC
21  2PCS			

THE HARDWARE

A x20  Cam Bolt Ø6x35mm	B x20  Cam Lock Ø15x9mm	C x12  Wood Dowel Ø6x30mm	D x4  Screw Ø3x12mm	E x16  Screw Ø3x14mm
F x2  Screw Ø4x12mm	G x48  Screw Ø4x12mm	H x24  Screw Ø4x35mm	I x2  L wall fixing	J x3  Screw Ø5x45mm
K x1  L fitting	L x9  Screw Ø6x25mm	M x8  Iron Tenon	N x2  30mm Wall Plug Ø6x30mm	O x16  Back Bracket
P x2  Plastic Baffle	Q x16  Screw Ø4x18mm	R x2  Chair Mat	S x8  Hinge	T x4  Screw Ø4x18mm
U x4  Handle				

IMPORTANT :




Phillips Screwdriver Power Tool NOT Recommended

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.


CAM LOCK FASTENING SYSTEM

This Cam Lock Fastening System will be used throughout the assembly process.

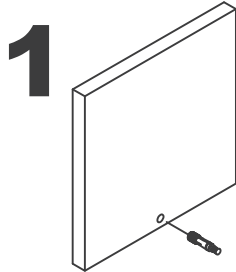


Press CAM BOLT into hole.

2

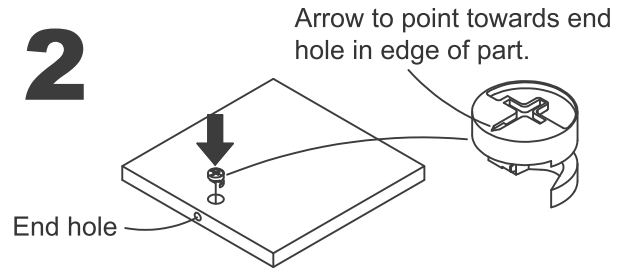


Press CAM LOCK into hole.

3

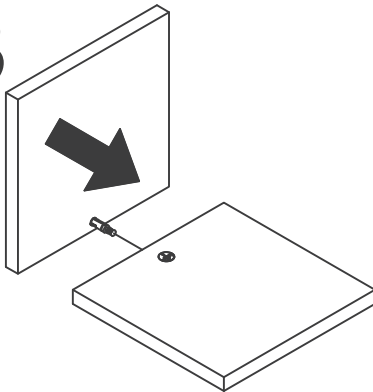


Press parts together so CAM BOLT inserts into edge hole.






4

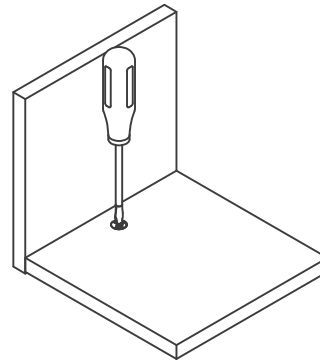

Using a screwdriver, turn the CAM LOCK clockwise to lock the CAM LOCK and CAM BOLT into their holes and fastening parts together.

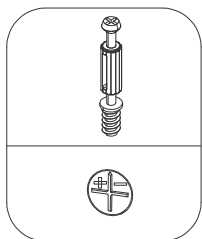

Notice: Proper orientation of CAM LOCK

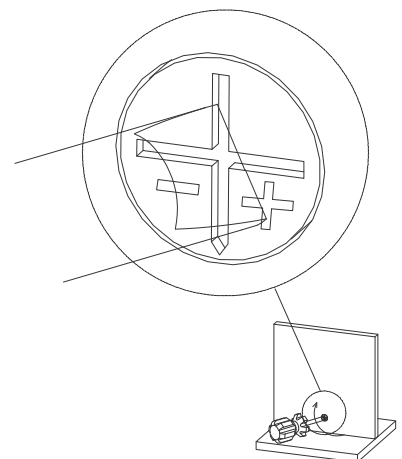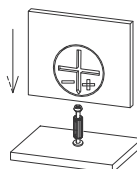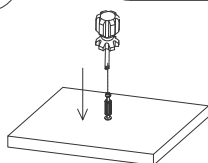
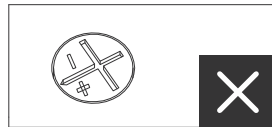
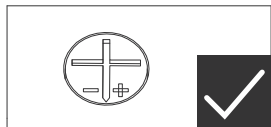




STEP 1

INSTALLATION STEPS

A x12 	D x4 	F x2 	I x2 	P x2 
Cam Bolt Ø6x35mm	Screw Ø3x12mm	Screw Ø4x12mm	L wall fixing	Plastic Baffle

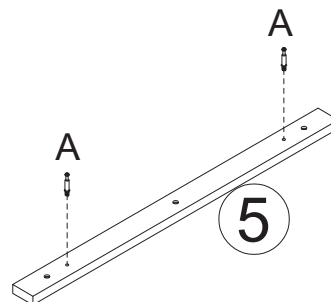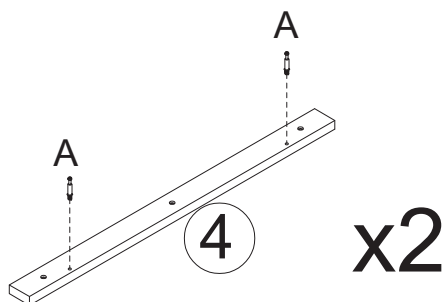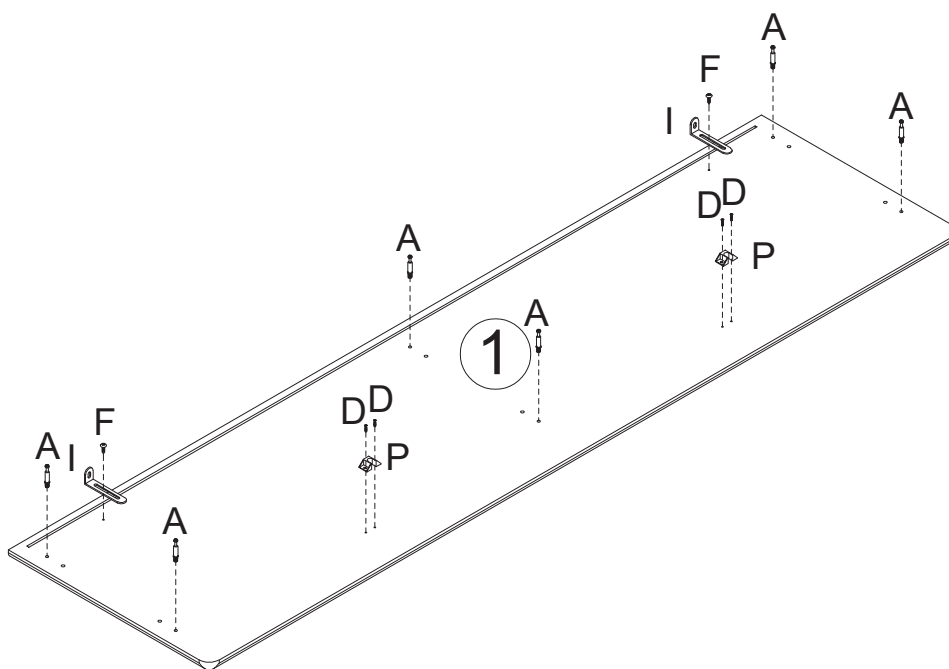



STEP 2

INSTALLATION STEPS

K x1






L fitting

L x9



Screw


Ø6x25mm

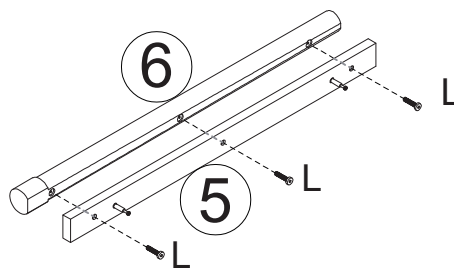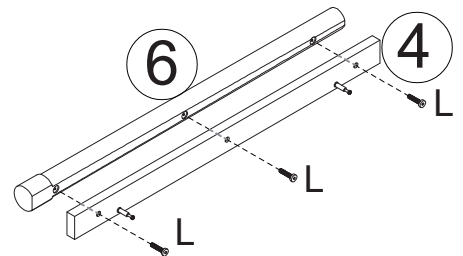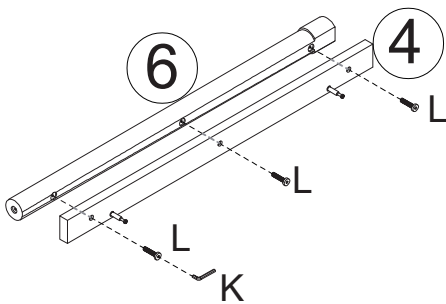

STEP 3

INSTALLATION STEPS

A x2	B x2	H x8
		
Cam Bolt Ø6x35mm	Cam Lock Ø15x9mm	Screw Ø4x35mm

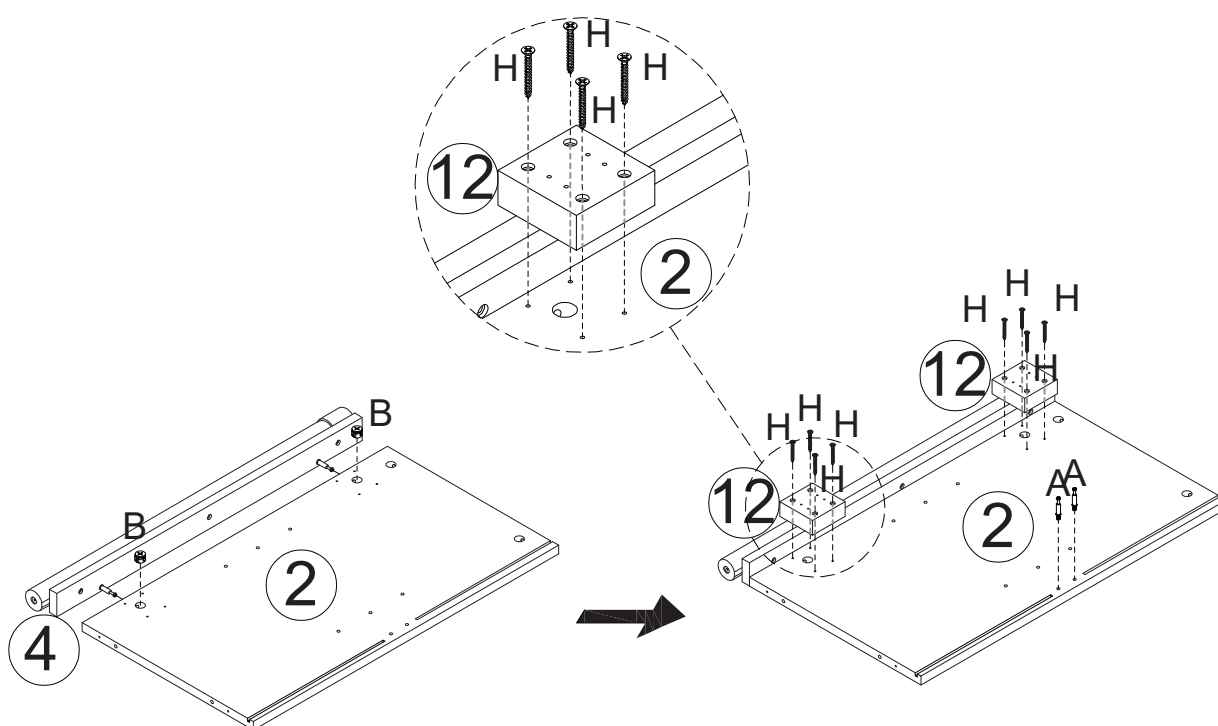




STEP 4

INSTALLATION STEPS


A x4	B x2	Q x16
		
Cam Bolt Ø6x35mm	Cam Lock Ø15x9mm	Screw Ø4x18mm

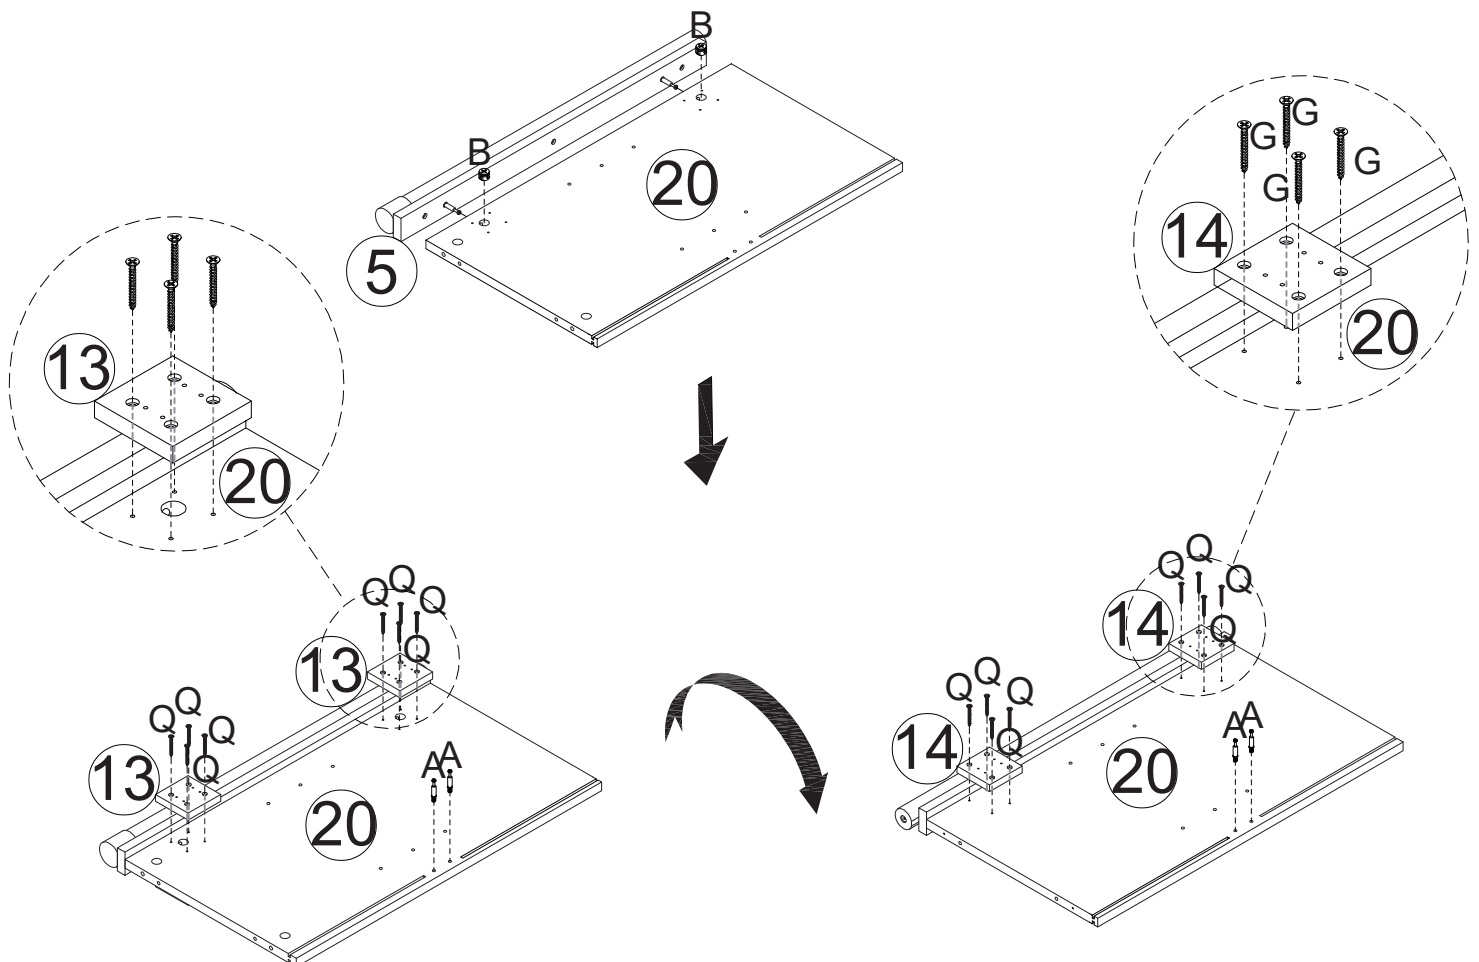

STEP 5

INSTALLATION STEPS

A x2	B x2	H x8
		
Cam Bolt Ø6x35mm	Cam Lock Ø15x9mm	Screw Ø4x35mm

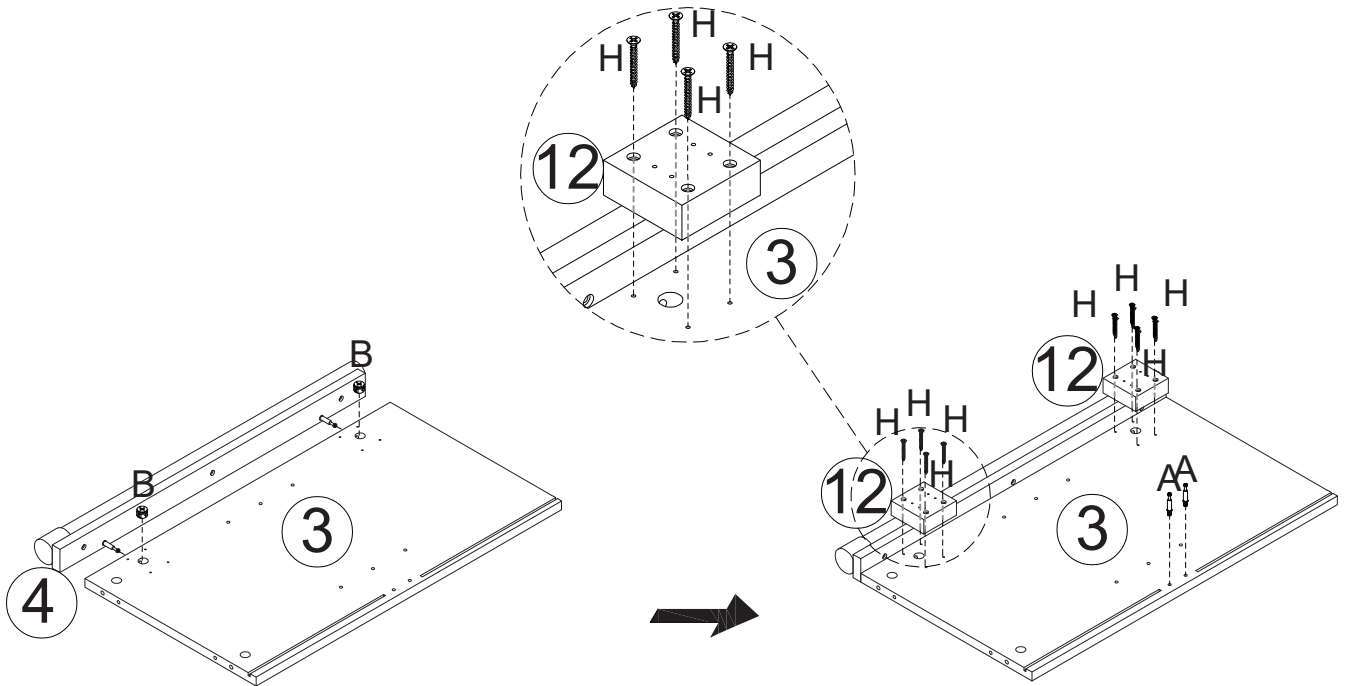




STEP 6


INSTALLATION STEPS

B x8
Cam Lock
Ø15x9mm

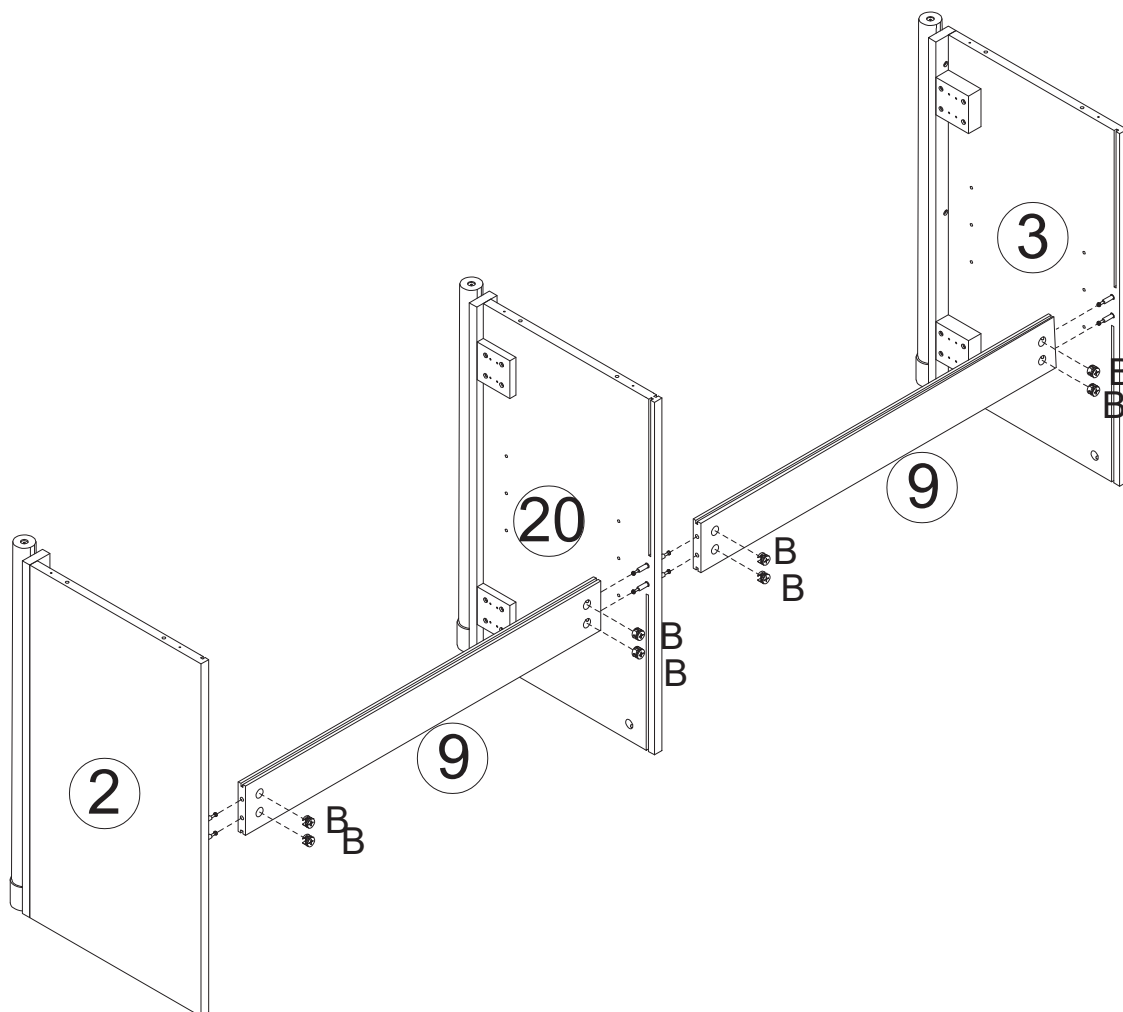

 STEP 7

INSTALLATION STEPS

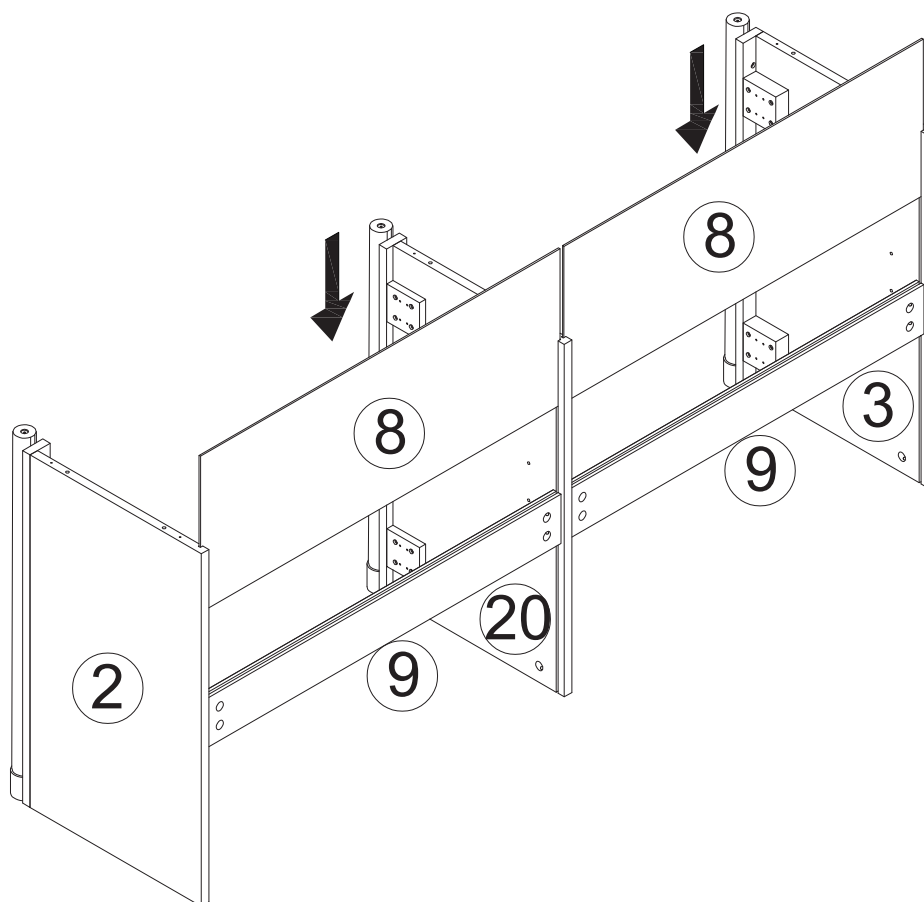




INSTALLATION STEPS

J x3




Ø5x45mm

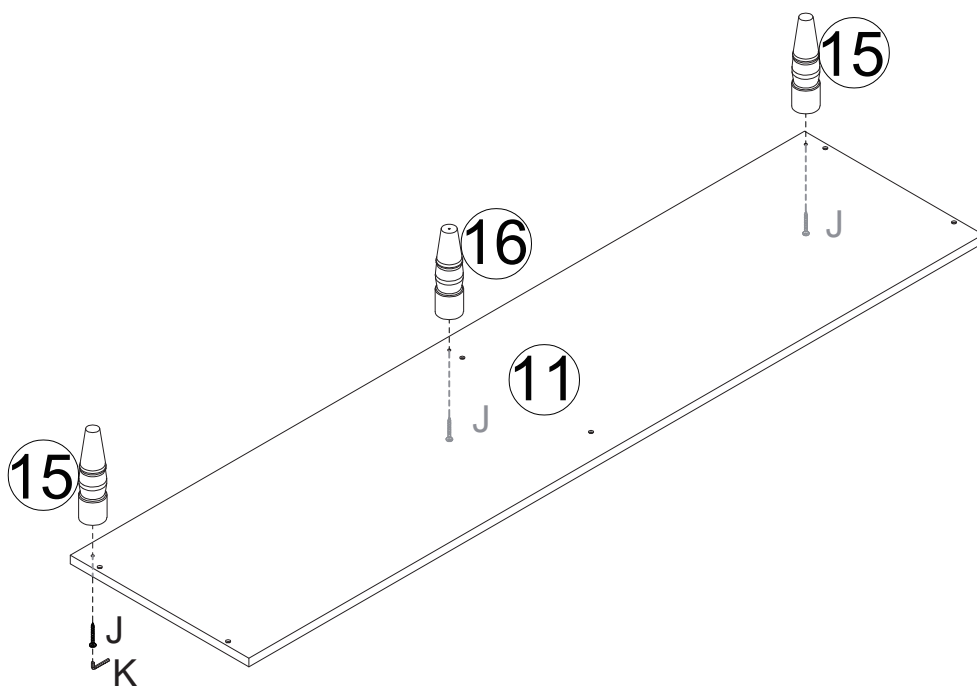

 STEP 9


STALLATION STEPS

C x6	H x6
	
Wood Dowel Ø6x30mm	Screw Ø4x35mm

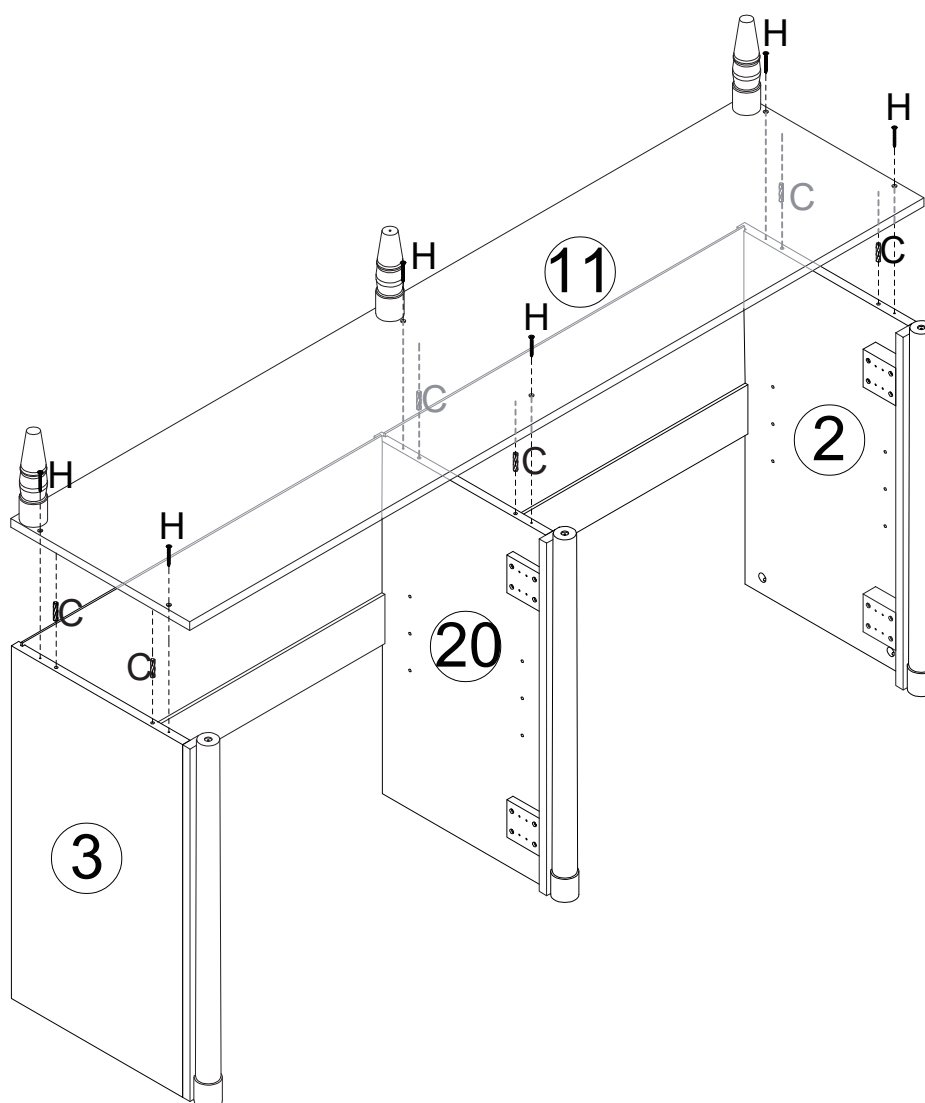

 STEP 12

STALLATION STEPS

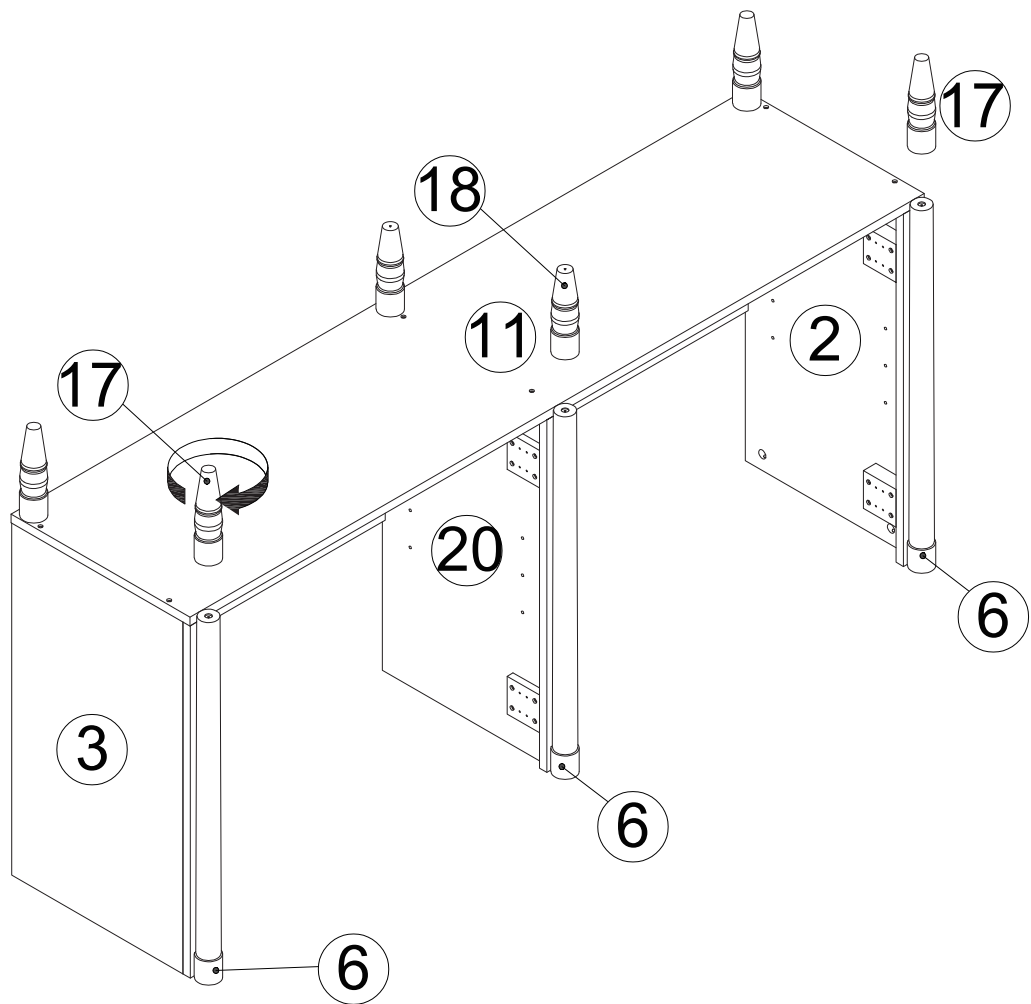




STEP 13

STALLATION STEPS

R x2


Chair Mat

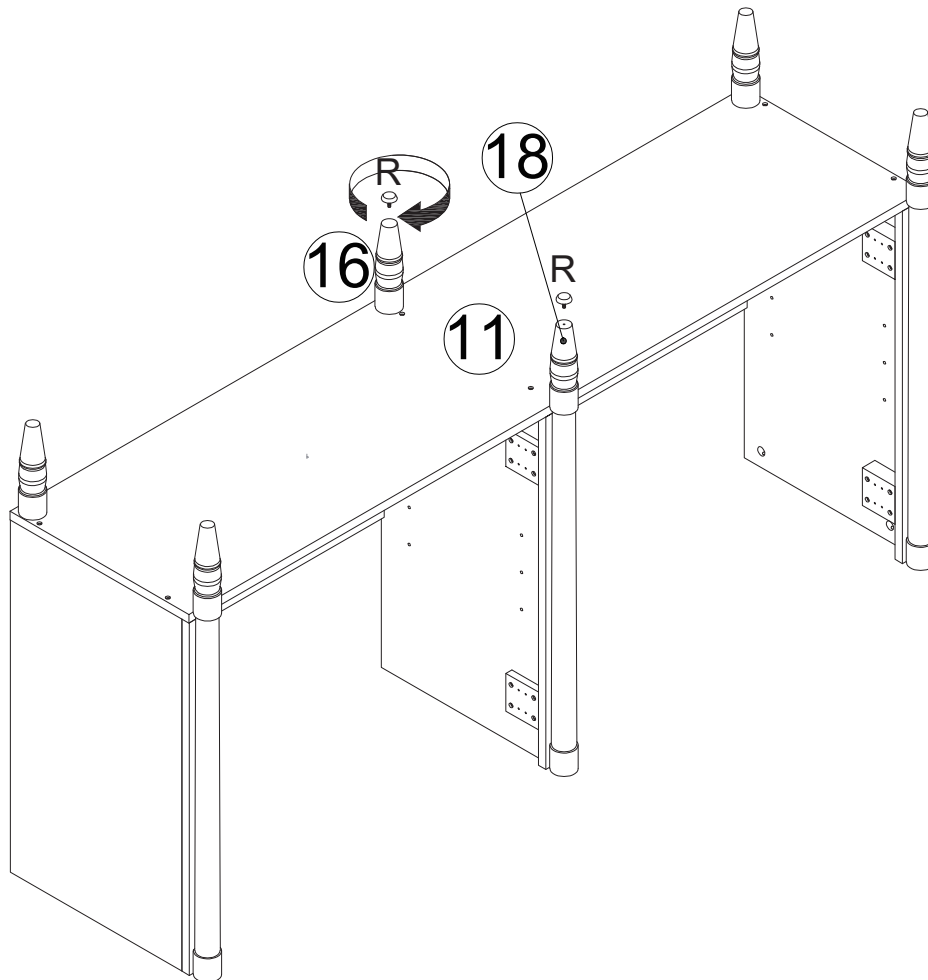



STEP 14

STALLATION STEPS

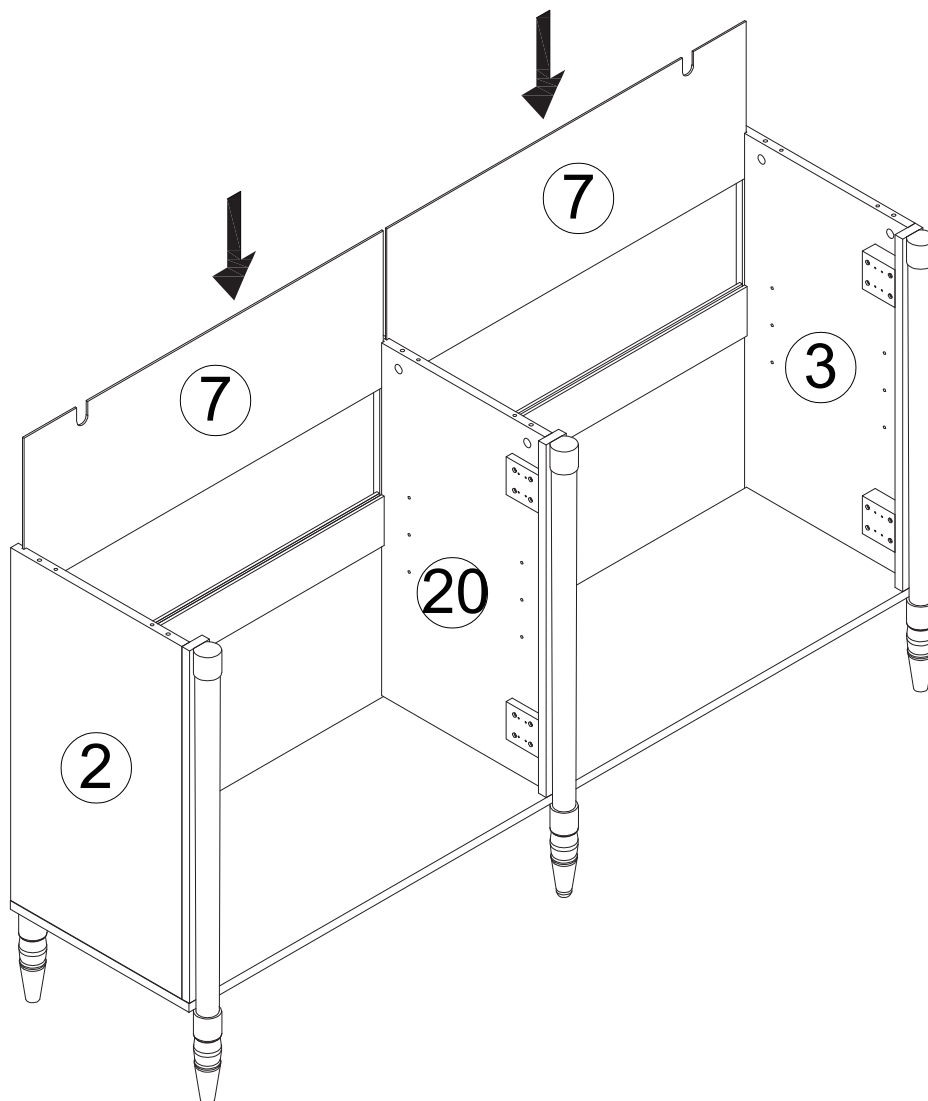




STEP 15

STALLATION STEPS

B x6	C x6
	
Cam Lock Ø15x9mm	Wood Dowel Ø6x30mm

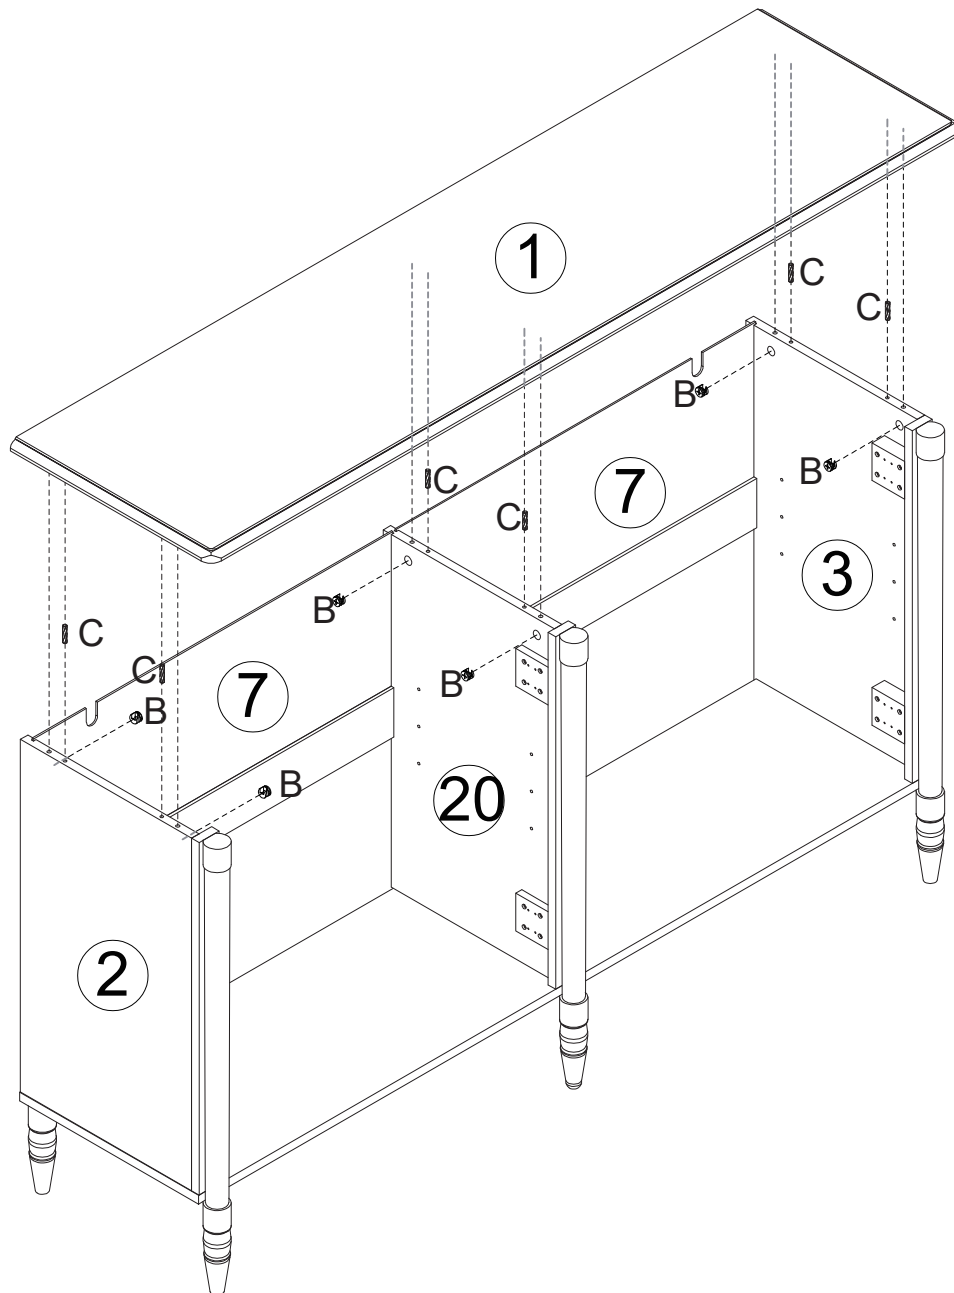




STEP 16

STALLATION STEPS

M x8
Iron Tenon


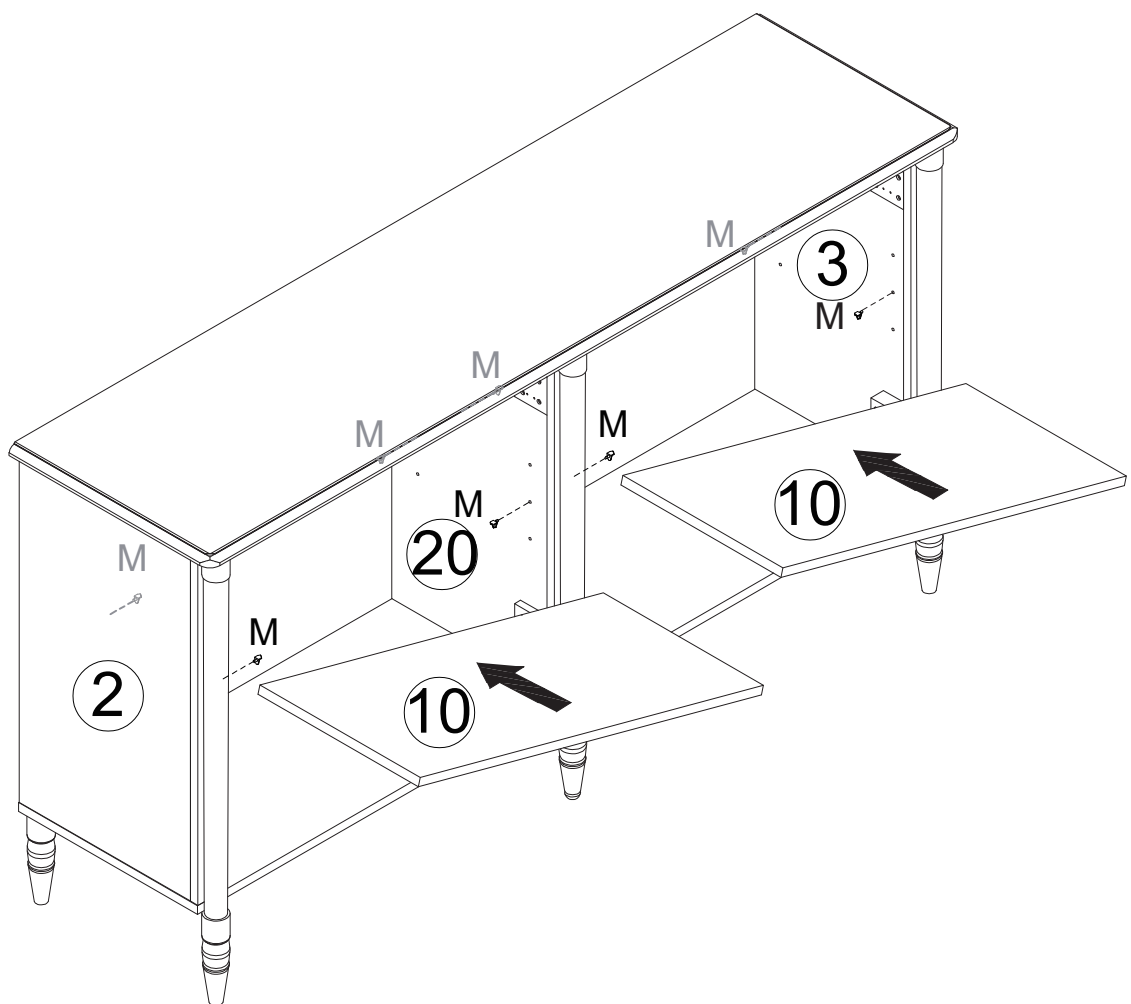




STEP 17

STALLATION STEPS

E x6	O x6
	
Screw	Back Bracket
Ø3x14mm	

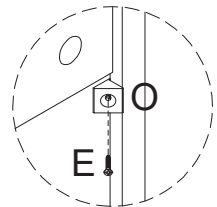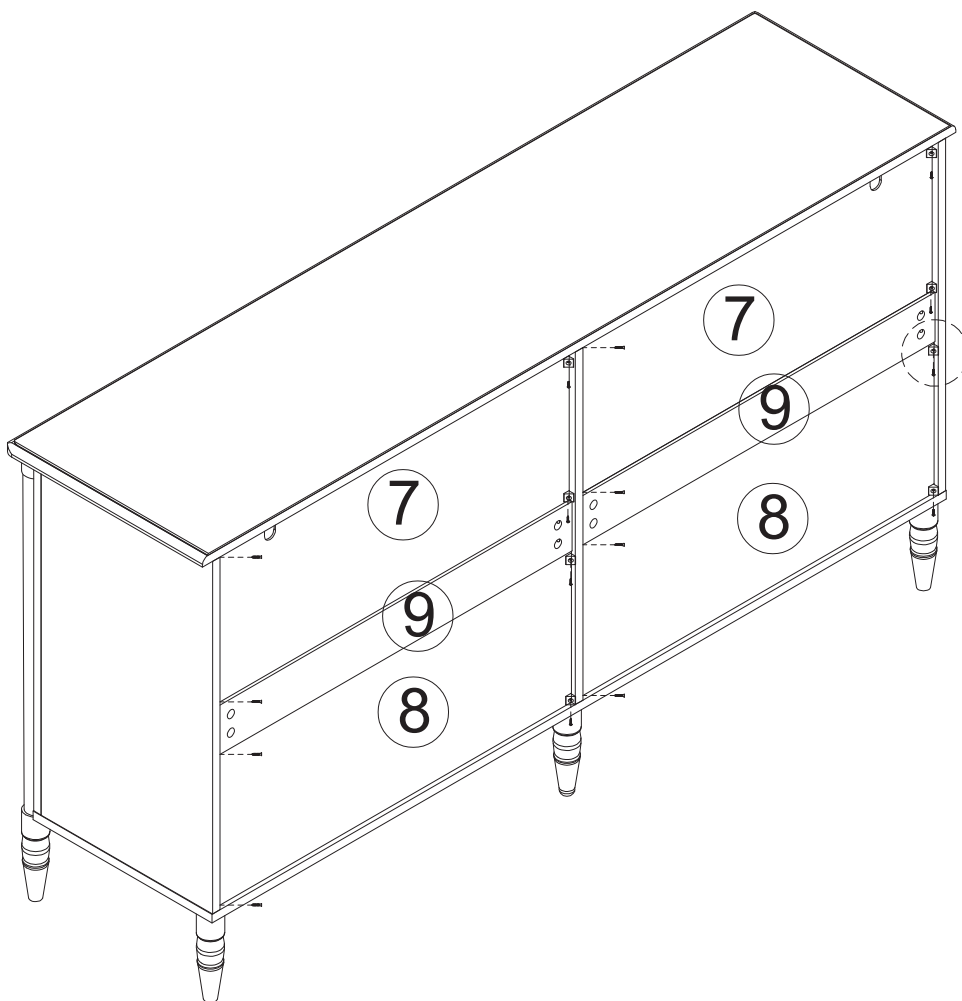






STEP 18

STALLATION STEPS

H x2	N x2
	
Screw	30mm Wall Plug
Ø4x35mm	Ø6x30mm

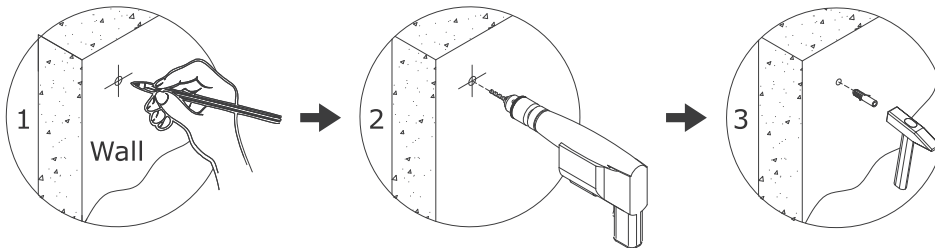


Tips: This step is to install the anti-tipping device system, which requires drilling holes in the wall

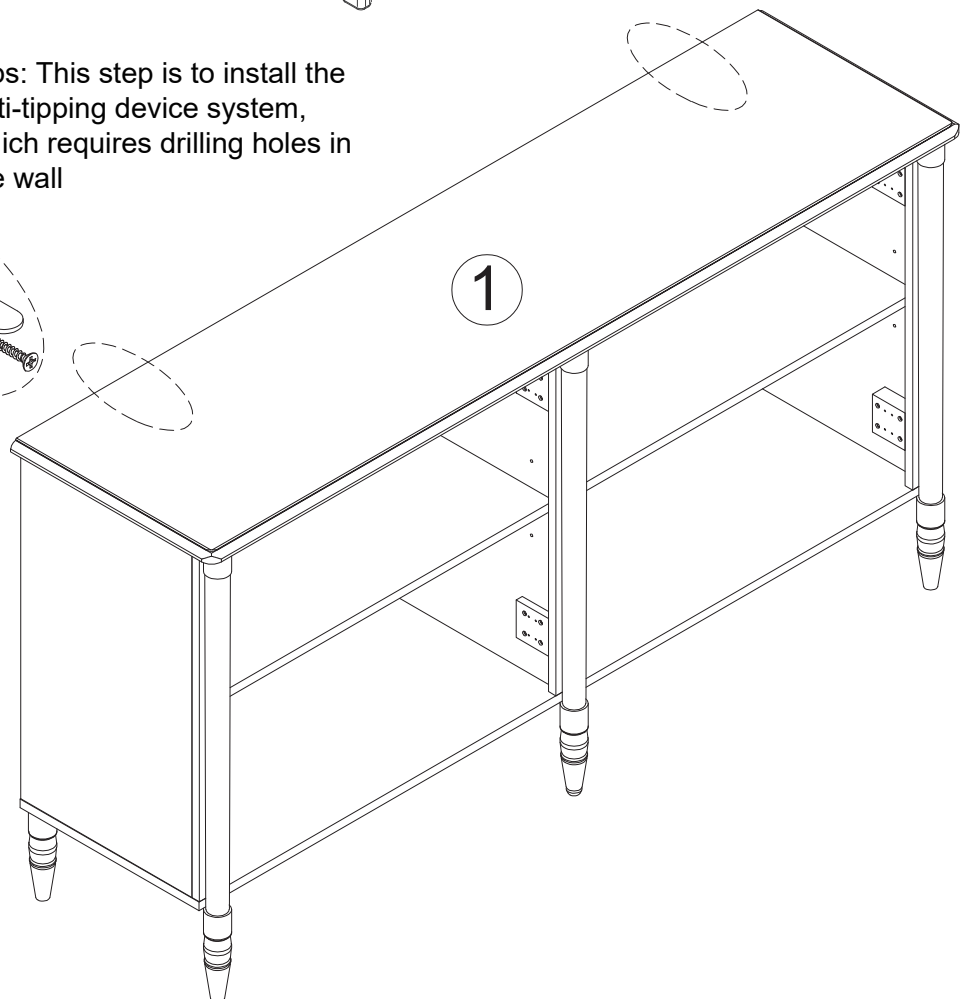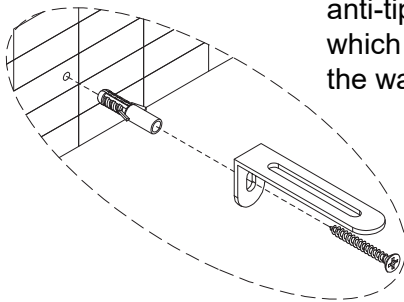

STEP 19

STALLATION STEPS

G x16	S x8	T x4	U x4
			
Screw	Hinge	Screw	Handle
Ø4x12mm		Ø4x18mm	

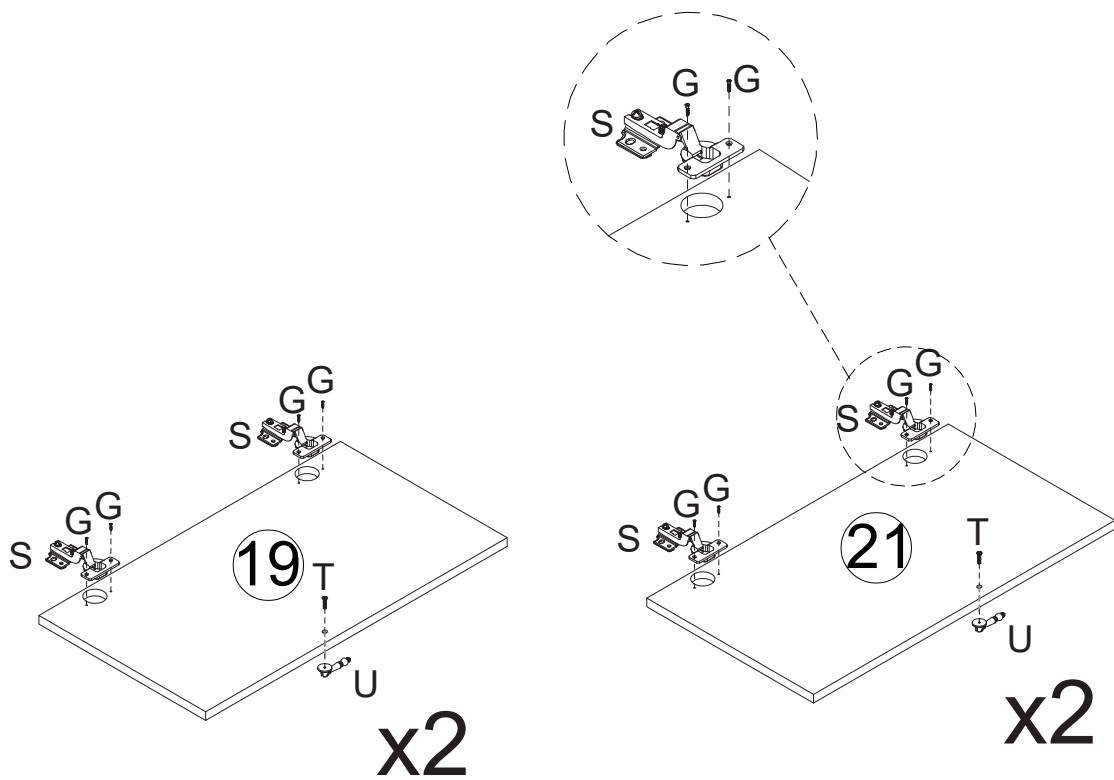



STEP 20

STALLATION STEPS

G x32

Screw
Ø4x12mm

