



ANCTOR

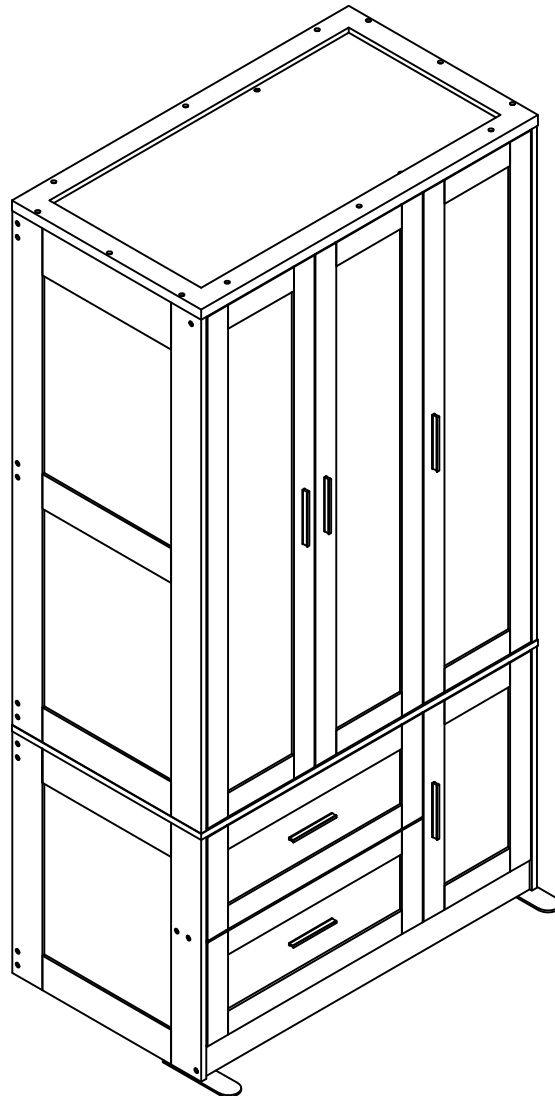

Installation Instruction

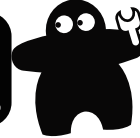

WARDROBE

PUZZEL YOUR HOUSE

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.


CATALOG:

Part List.....	3-5.
Accessories List.....	6-7.
Assemble.....	8-29.


Foreword:

Thank you for choosing our product! We hope you have a good shopping experience!


We aim to provide a 100% satisfaction product and customer service.

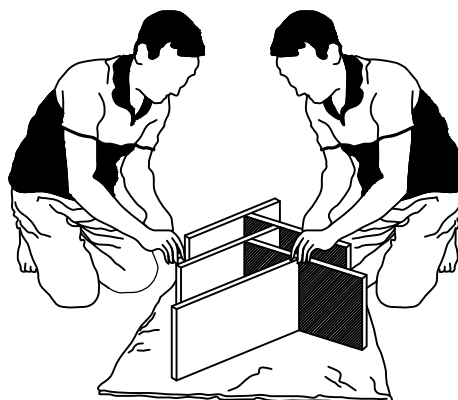

Requires 2 people to assemble
the product more easily

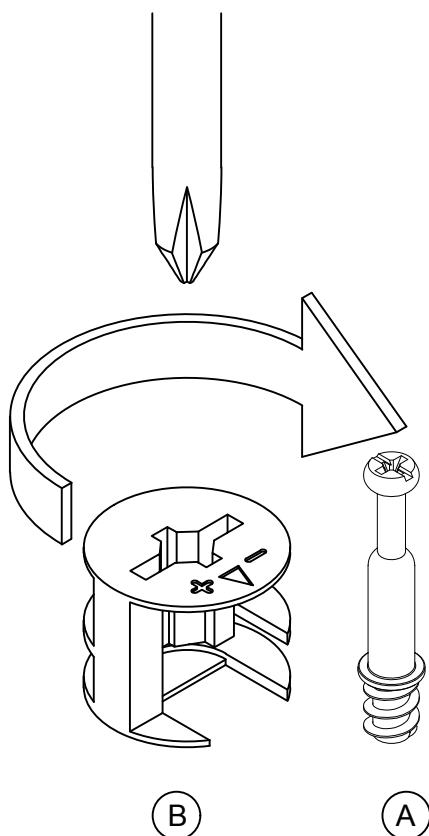

Only slight turn of cams required.
Do **NOT** overturn.

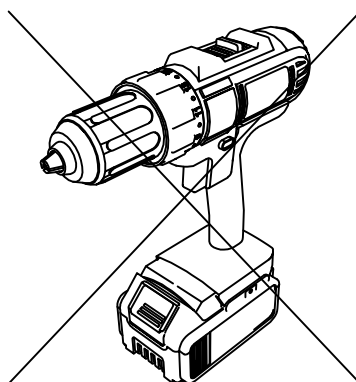


*Power Tool **NOT**
Recommended for **A-B** hardware
assembly




TOOL REQUIRED
Phillips Screwdriver

PARTS LIST

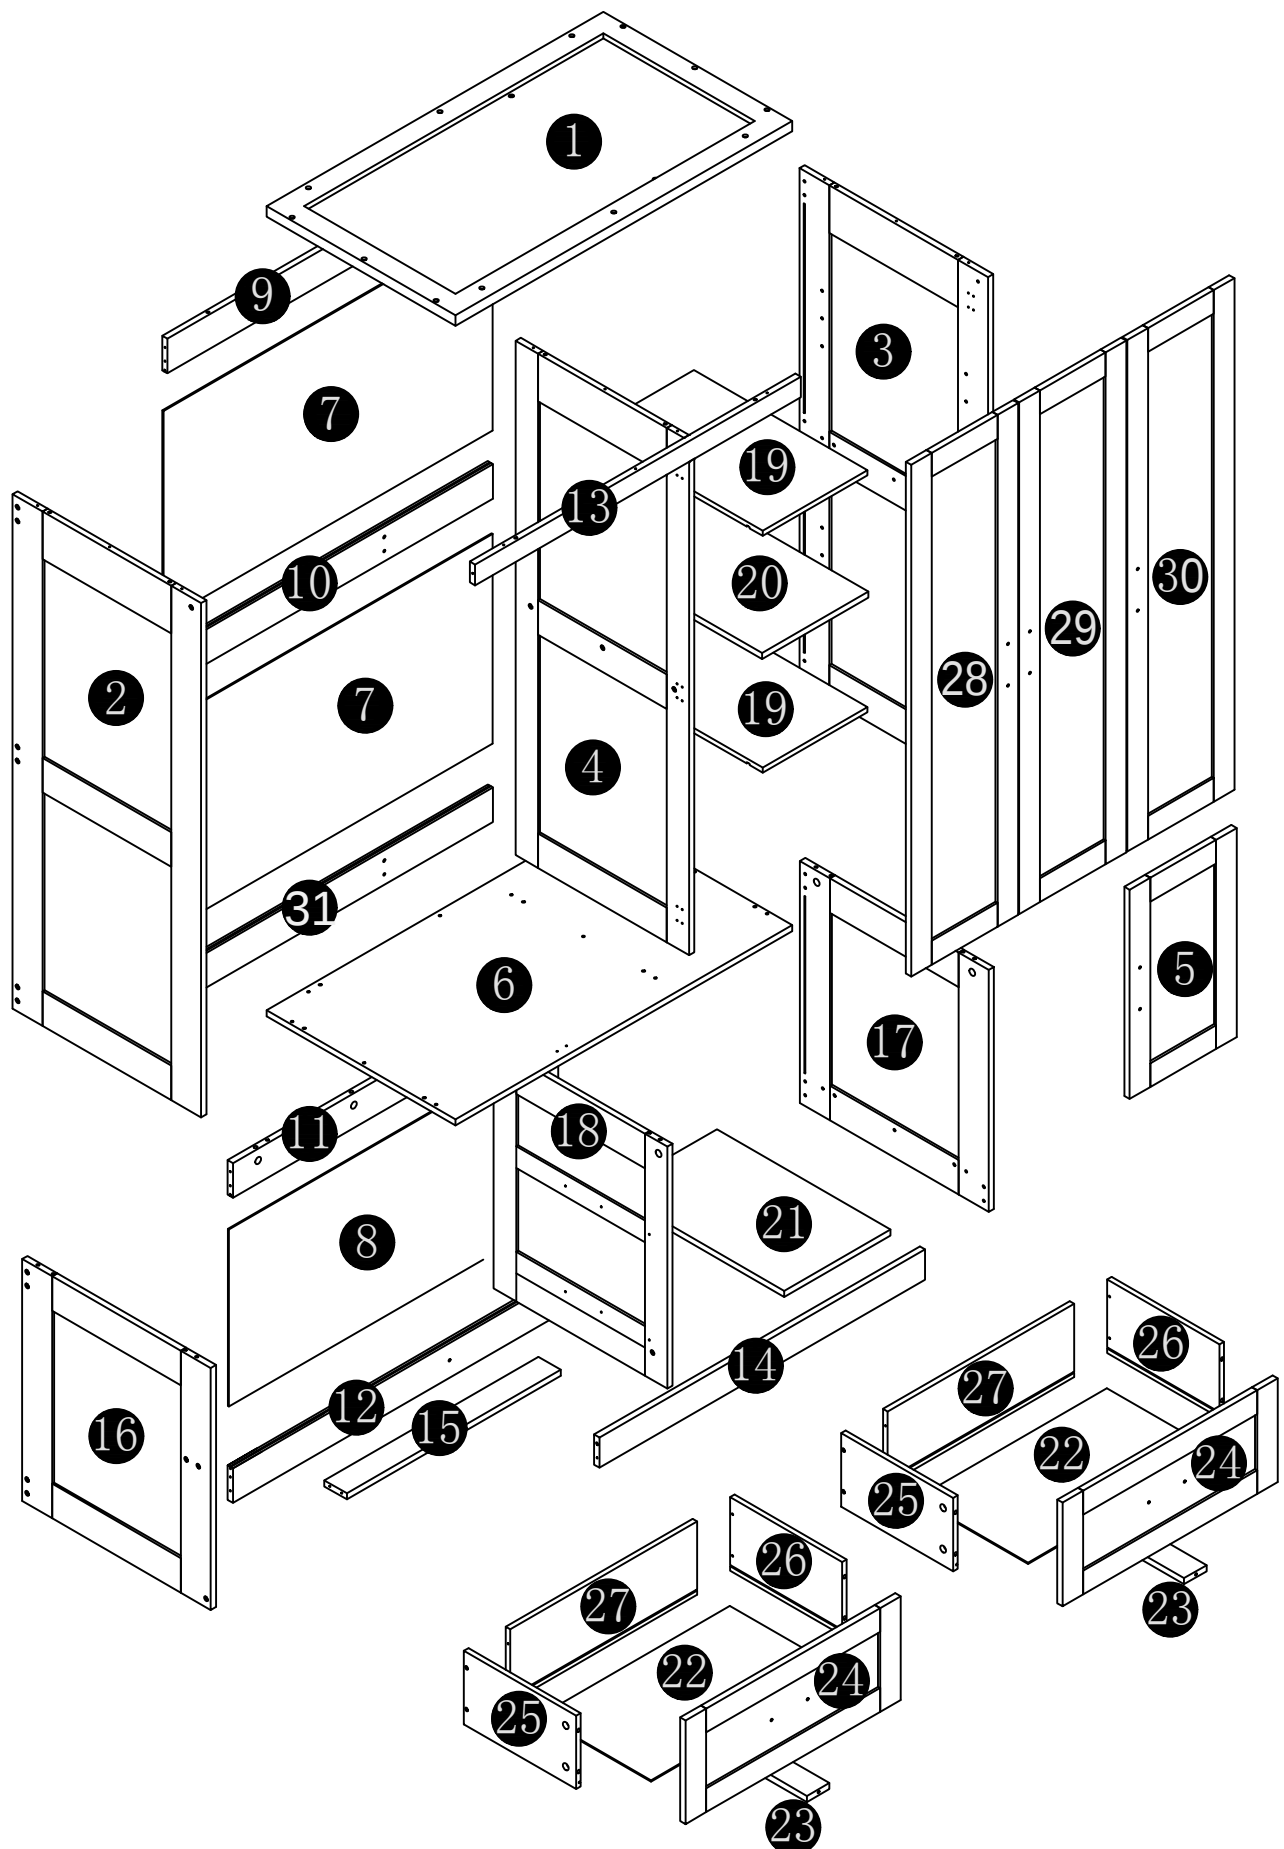


PARTS LIST

1

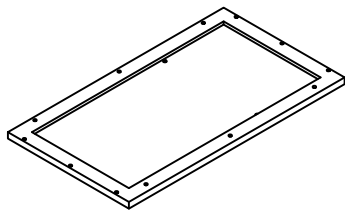


1PC

2




1PC

3




1PC

4




1PC

5

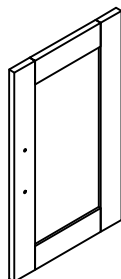


1PC

6

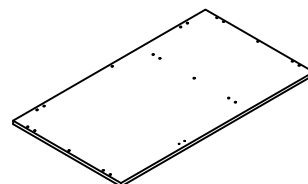


1PC

7

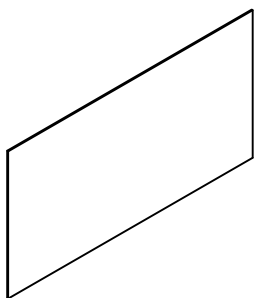


2PCS

8

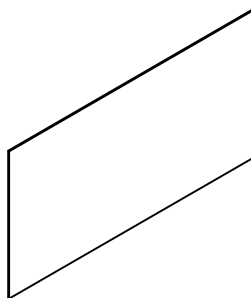


1PC

9

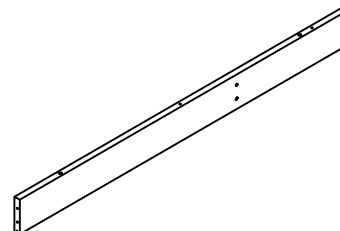


1PC

10

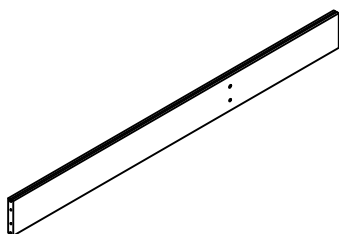


1PC

11

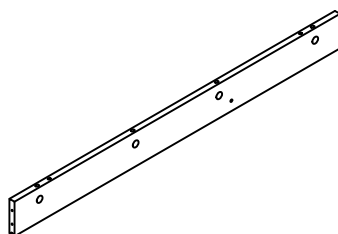


1PC

12

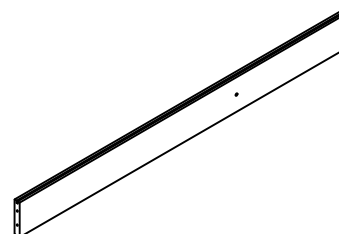


1PC

13

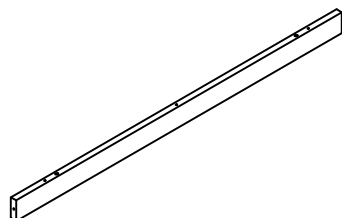


1PC

14

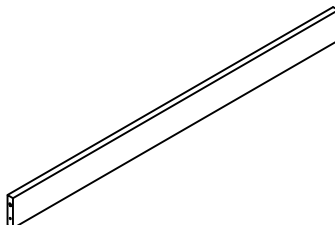


1PC

15

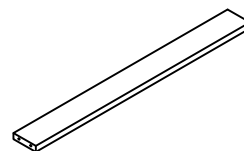


1PC

16

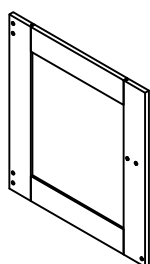


1PC

17

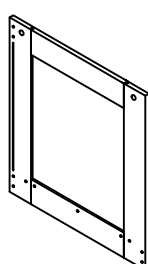

1PC


18

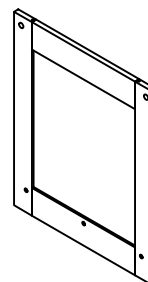

1PC


PARTS LIST

19

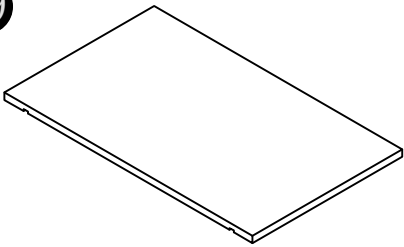


2PCS

20

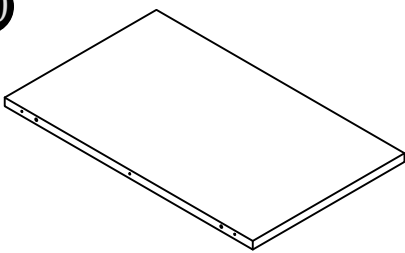


1PC

21

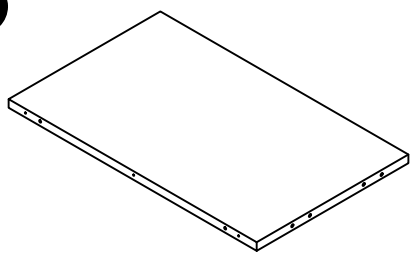


1PC

22

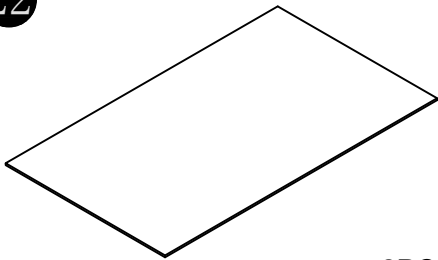


2PCS

23




2PCS

24

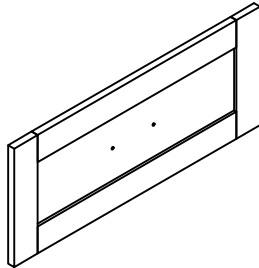


2PCS

25

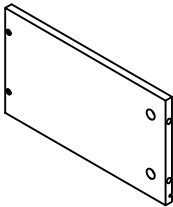


2PCS

26

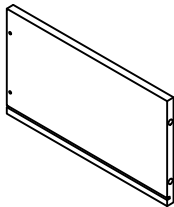


2PCS

27

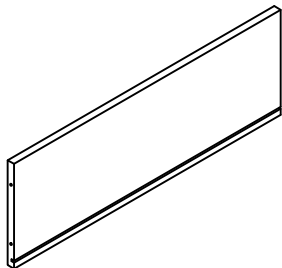

2PCS

28




1PC

29




1PC

30







1PC

31

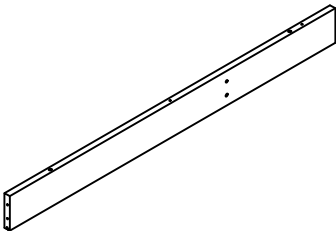


1PC

ACCESSORIES LIST (Unit: mm)

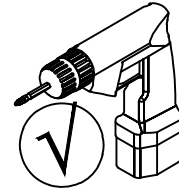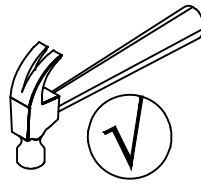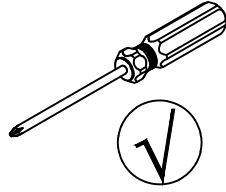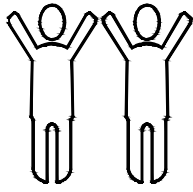

A

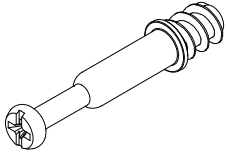

Ø6x25mm

22+2PCS


B



Ø15x9.5mm

22+2PCS


C

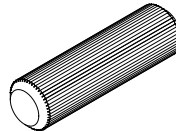

Ø6x25mm

41+2PCS


D

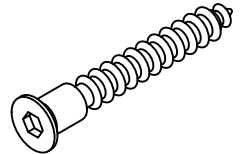

Ø9.5*M5*46mm

72+2PCS

E




2PCS

F




8PCS

G




8PCS

H



3PCS


I



#7*Ø3.5*15mm

86+2PCS


J

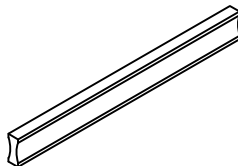

L104*18*10mm

6PCS


K

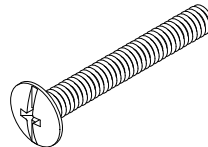

M4x19mm

12+2 PCS


L

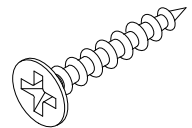


#8*Ø4*30mm

10+2 PCS


M 12"(300mm)

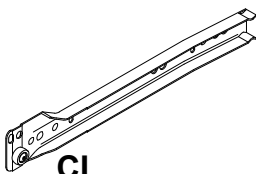


CL

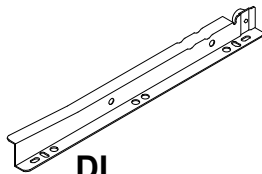

DL

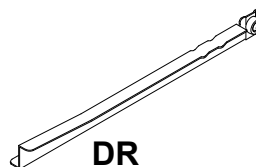


DR

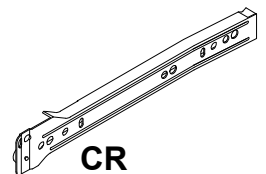

CR

2 SET


N



#6*Ø3.5x10mm


24+2PCS

O

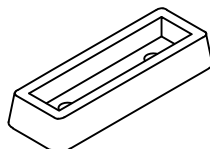


1PC

P

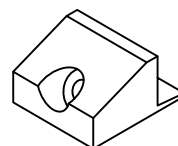

12PCS





Q



#6*Ø3*19mm

12+2PCS

ACCESSORIES LIST (Unit: mm)

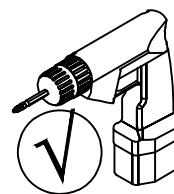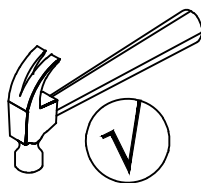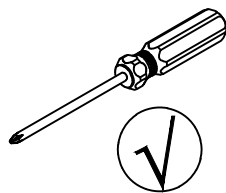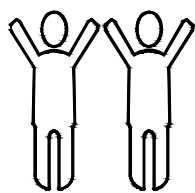


R




32+2PCS

S

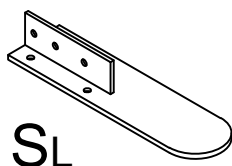


SL

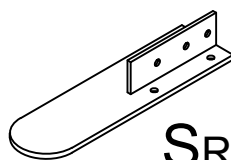

SR


1 SET

T




1PC

U

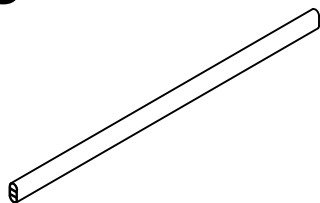


1PC

V

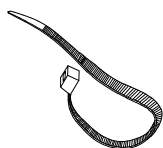


2PCS

W

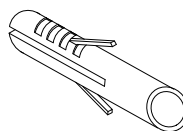

4PCS


X



#8*Ø3.5*38mm

4PCS


Y



4PCS


INSTALLATION INSTRUCTION

STEP1

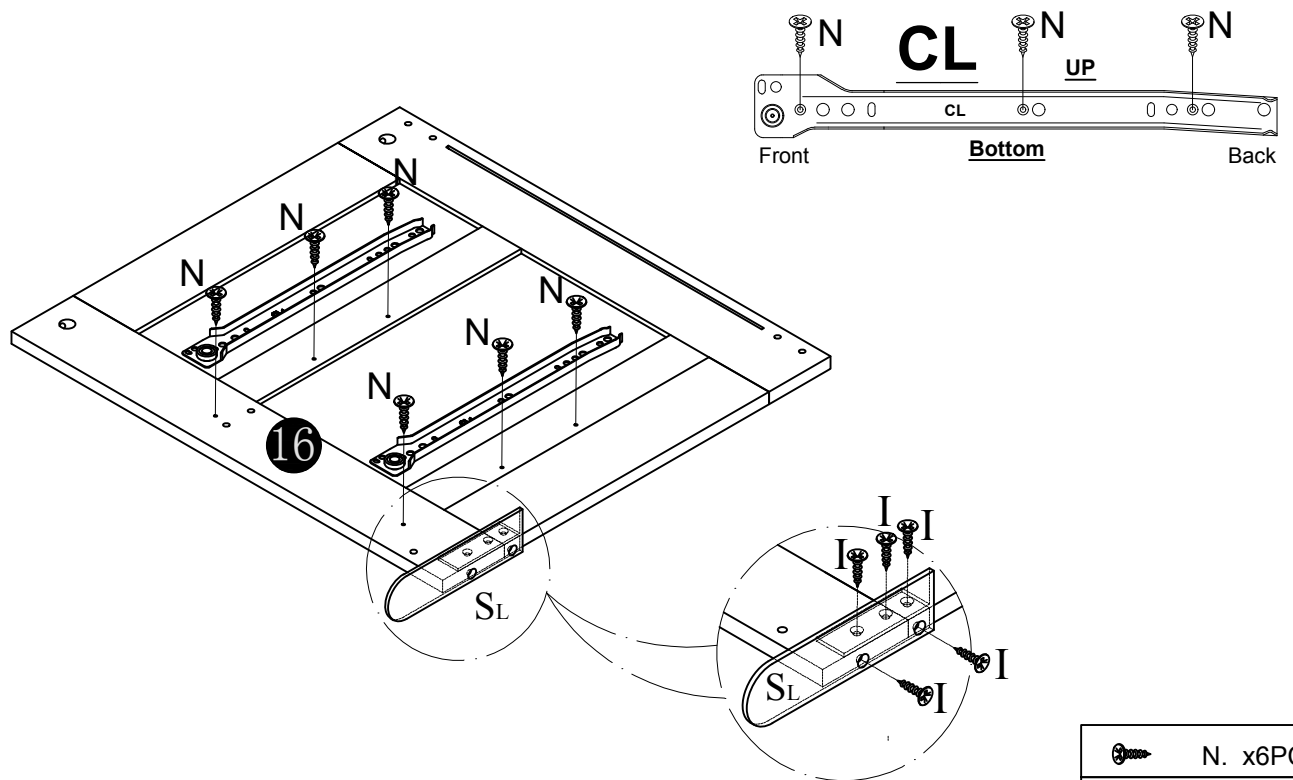

	N. x6PCS
	M(CL).x2PCS
	S(L). x1PC
	I. x5PCS


STEP2

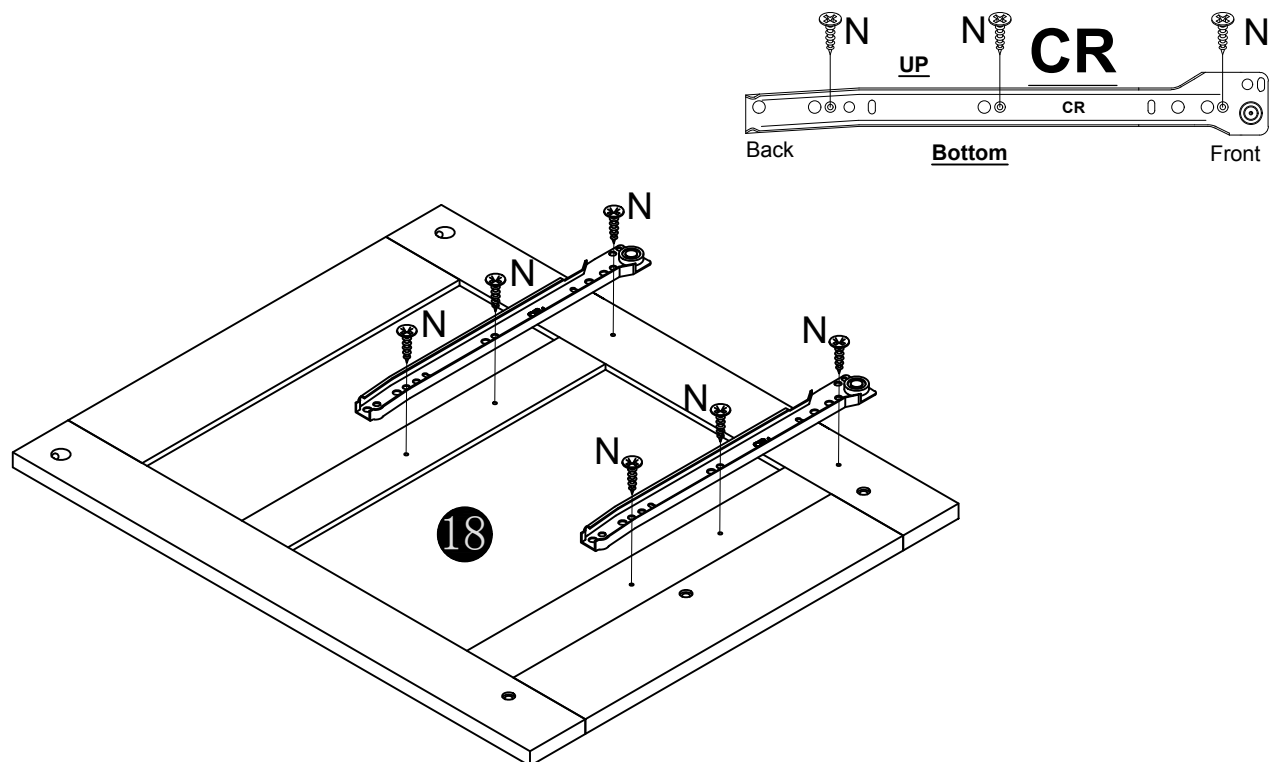

	N. x6PCS
	M(CR).x2PCS

INSTALLATION INSTRUCTION


STEP3

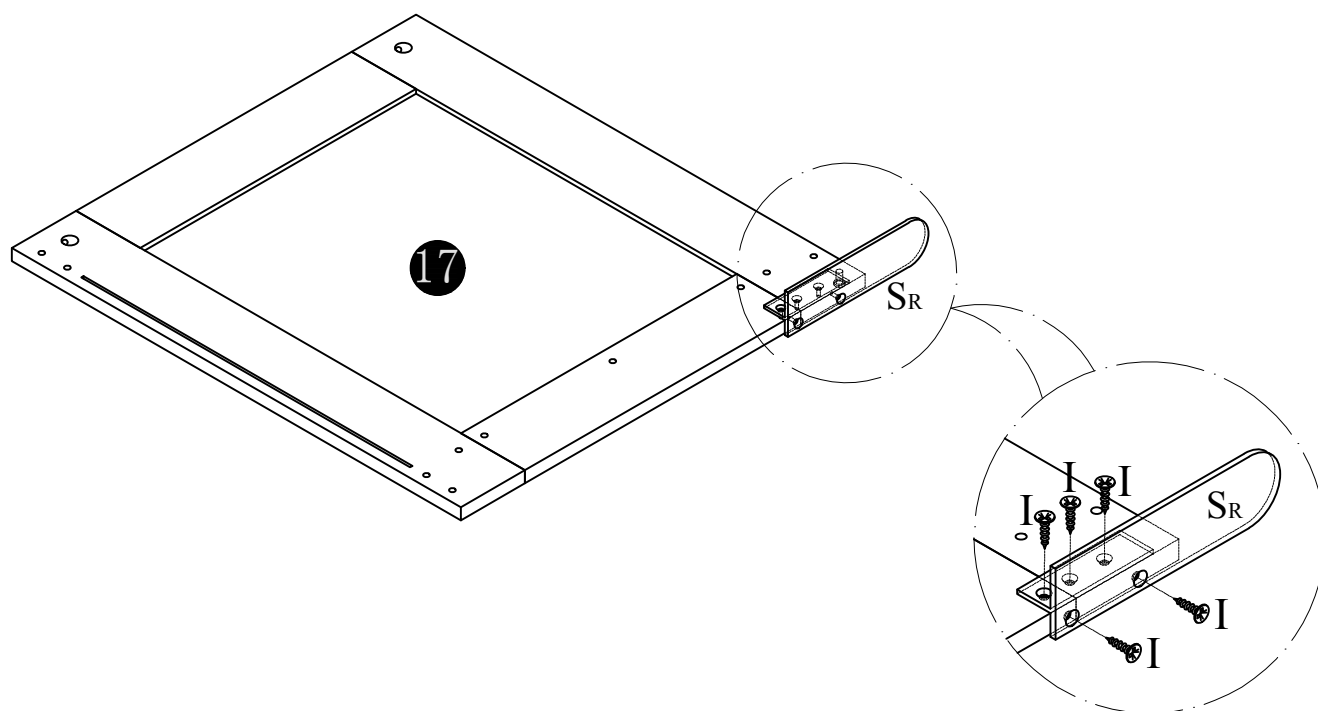

 S(R). x1PC

 I. x5PCS

STEP4


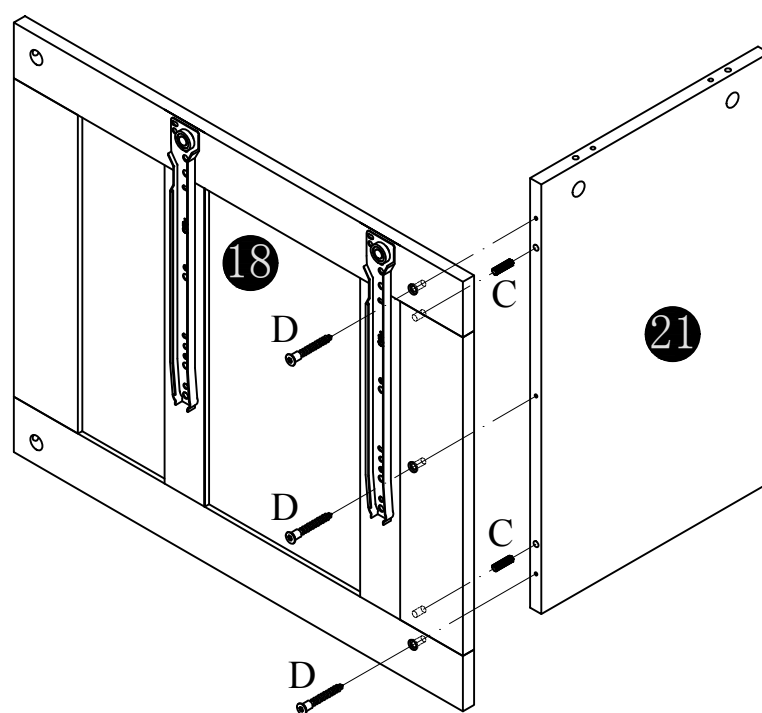


 C. x2PCS

 D. x3PCS


INSTALLATION INSTRUCTION

STEP5

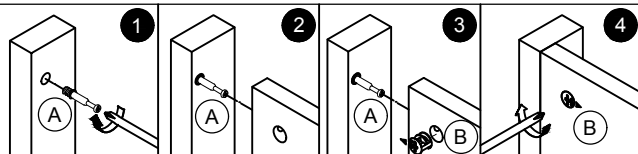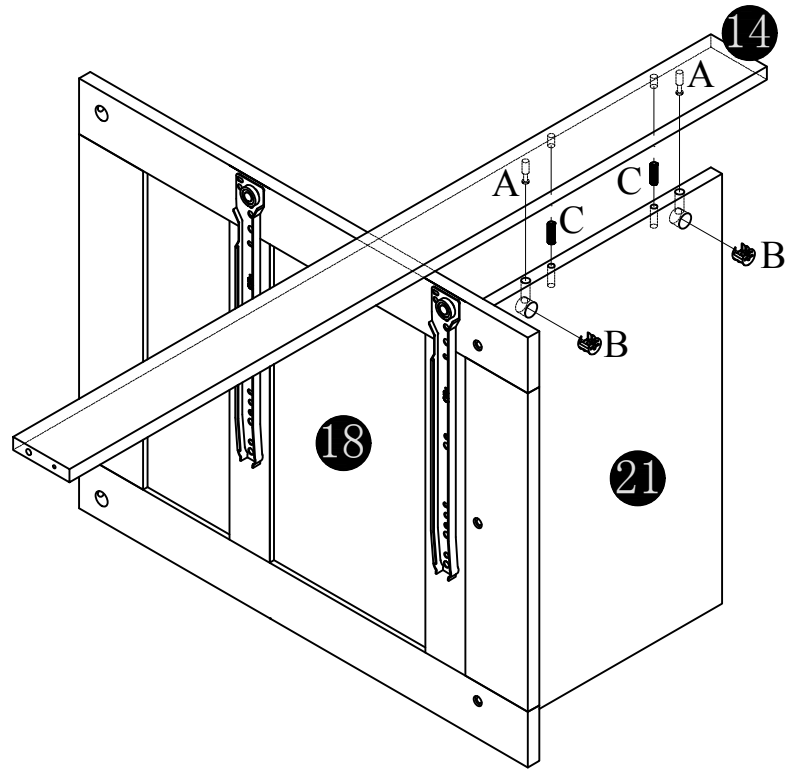


- | | |
|---|----------|
|  | A. x2PCS |
|  | B. x2PCS |
|  | C. x2PCS |

STEP6

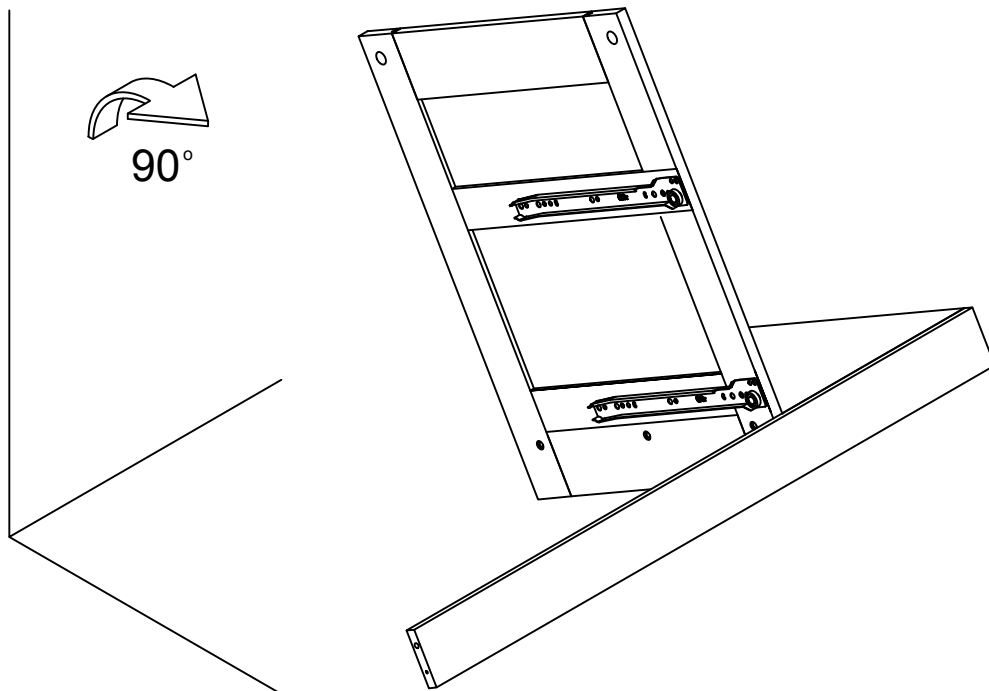


INSTALLATION INSTRUCTION

STEP7

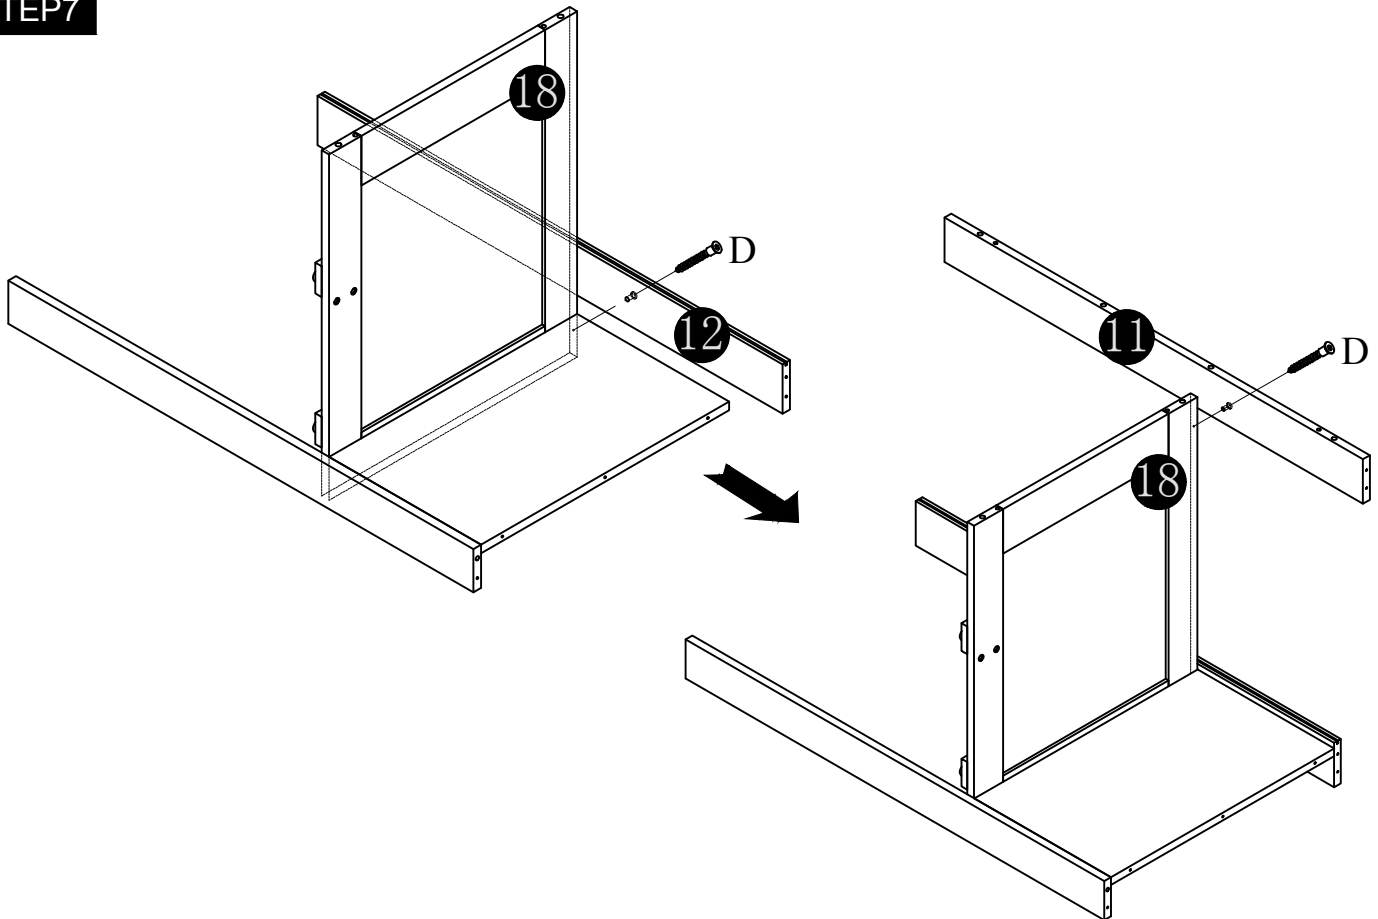

D. x2PCS

STEP8

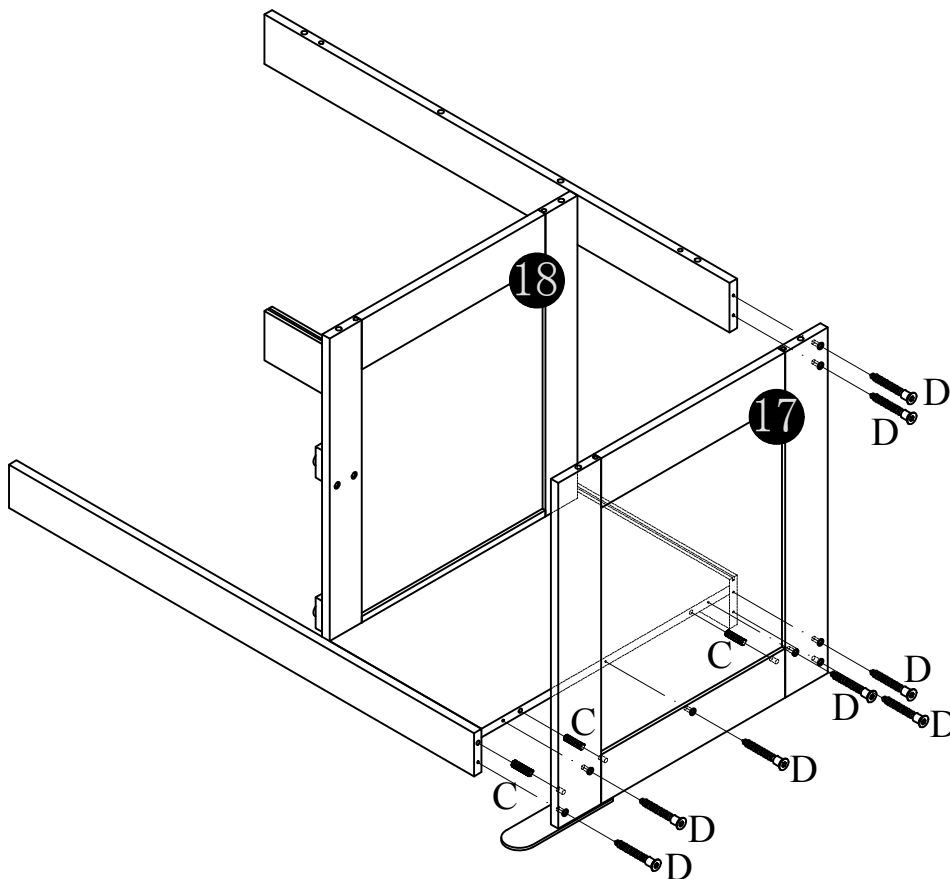


C. x3PCS




D. x8PCS

INSTALLATION INSTRUCTION

STEP9

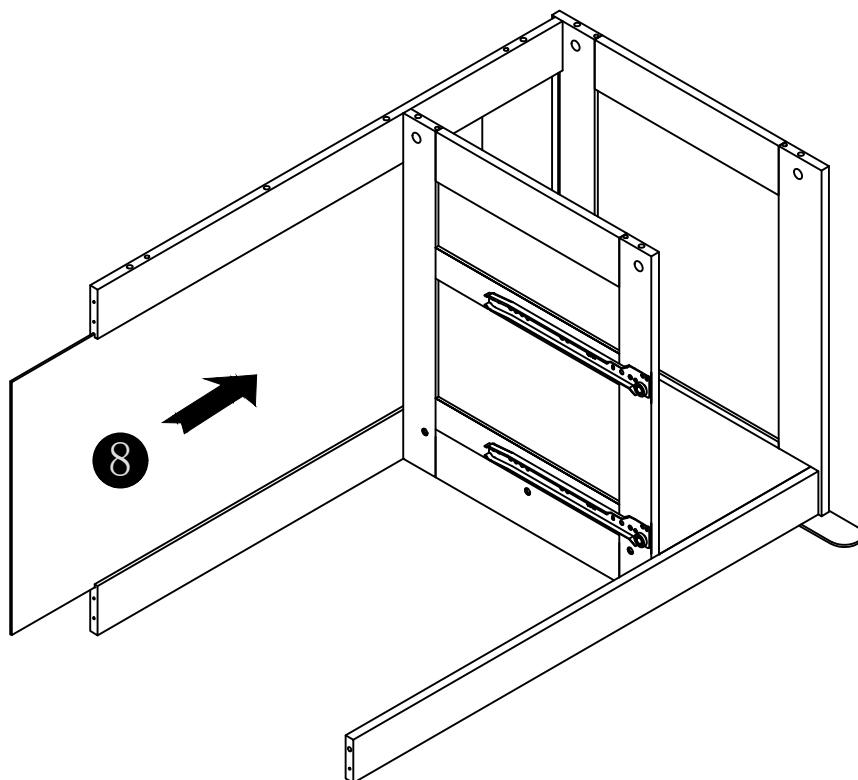


STEP10

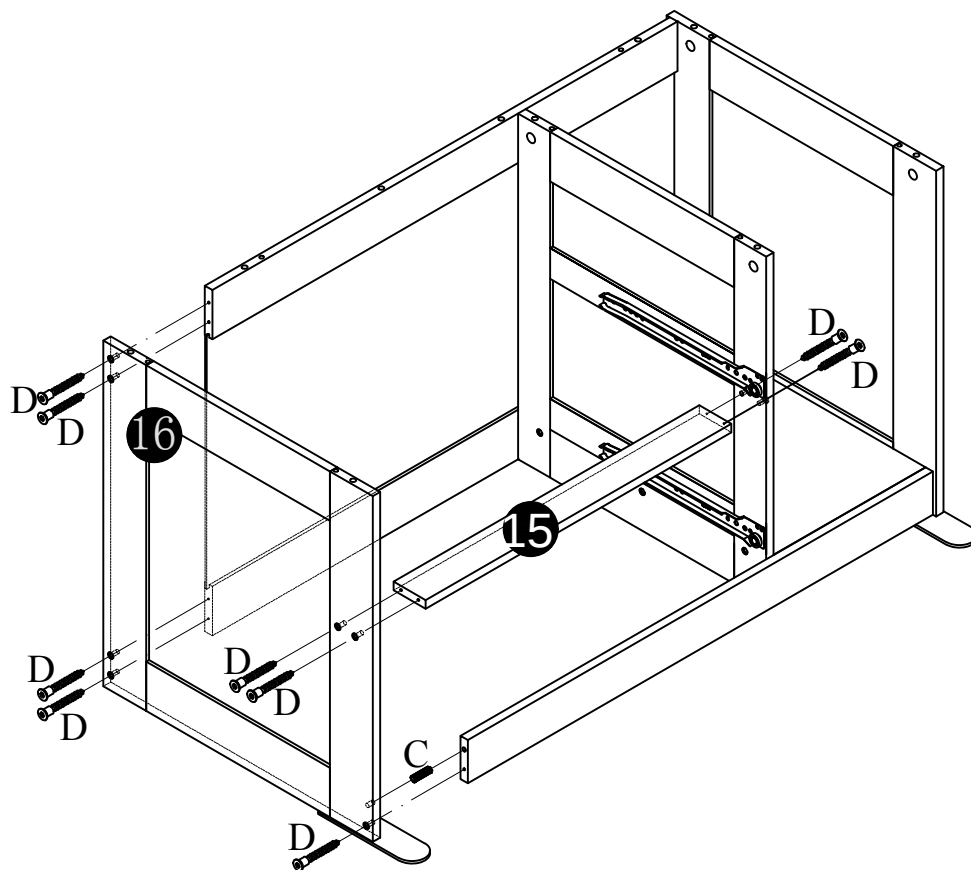

- | | |
|---|----------|
|  | C. x1PCS |
|  | D. x9PCS |

INSTALLATION INSTRUCTION

STEP11

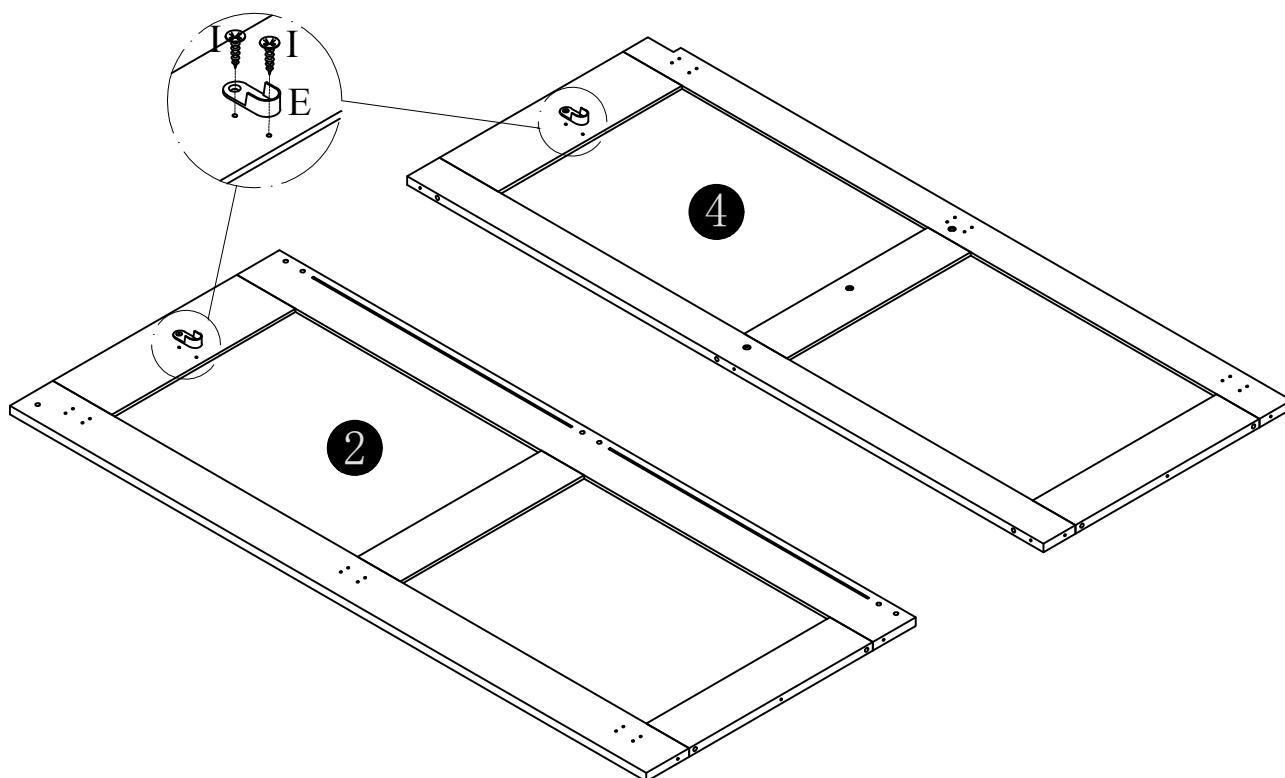


E. x2PCS



I. x4PCS

STEP12

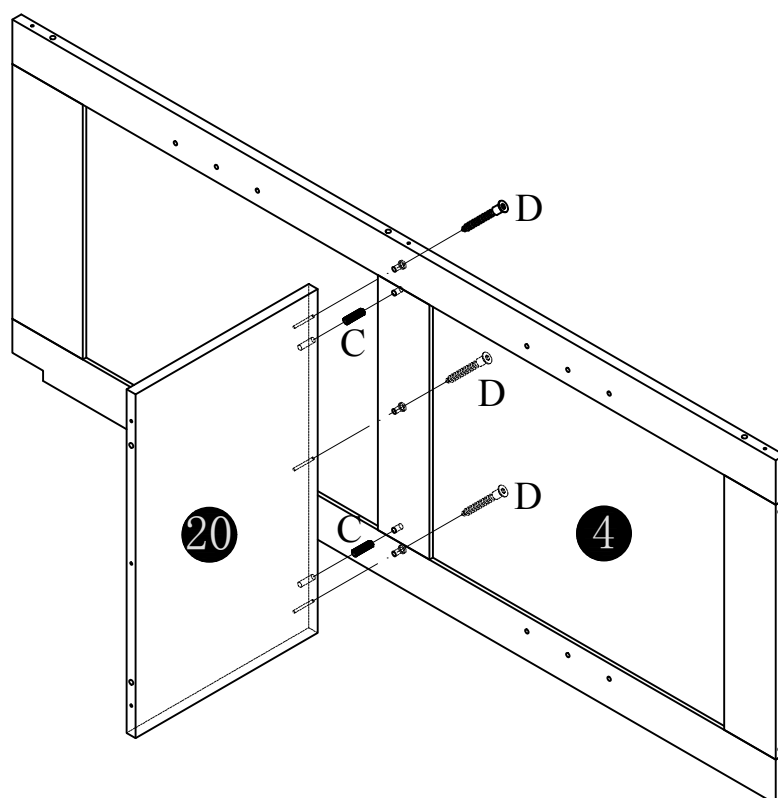


C. x2PCS



D. x3PCS


INSTALLATION INSTRUCTION

STEP13

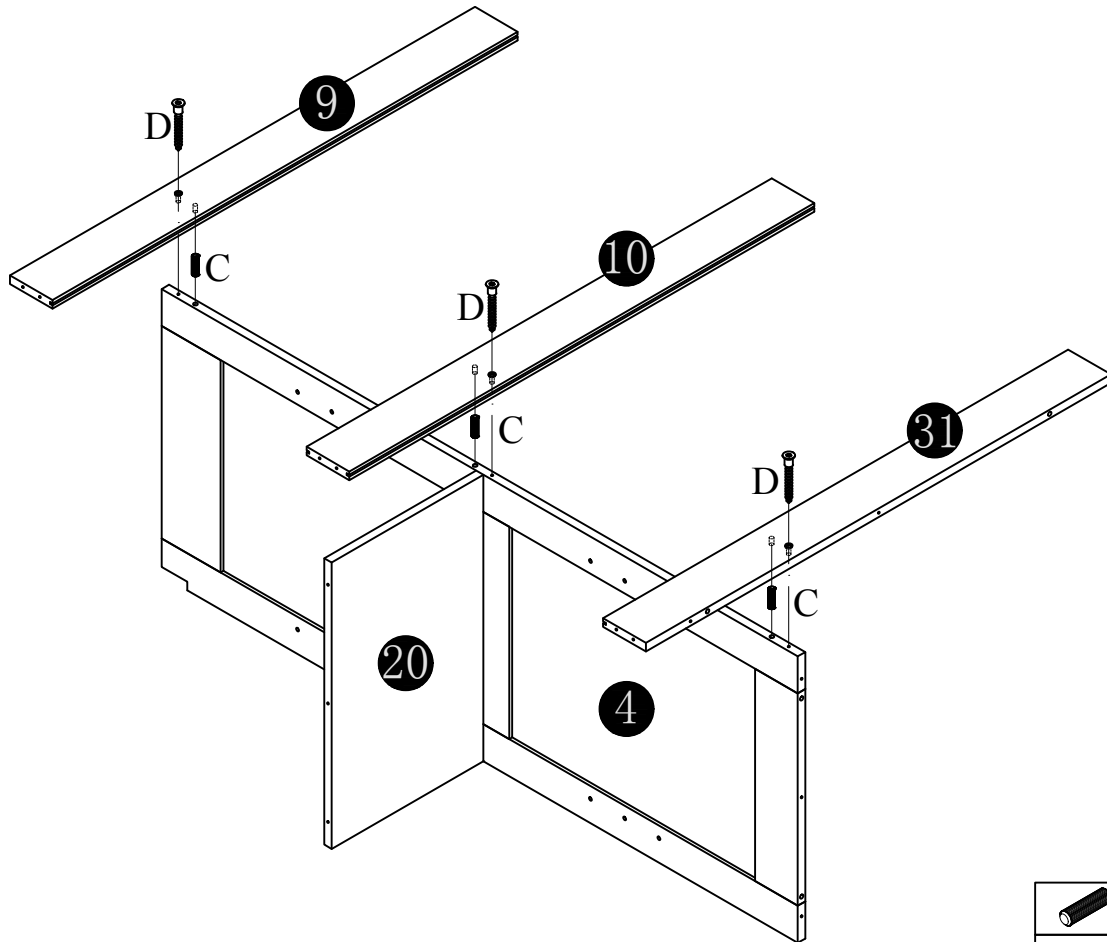


- C. x3PCS
- D. x3PCS

STEP14

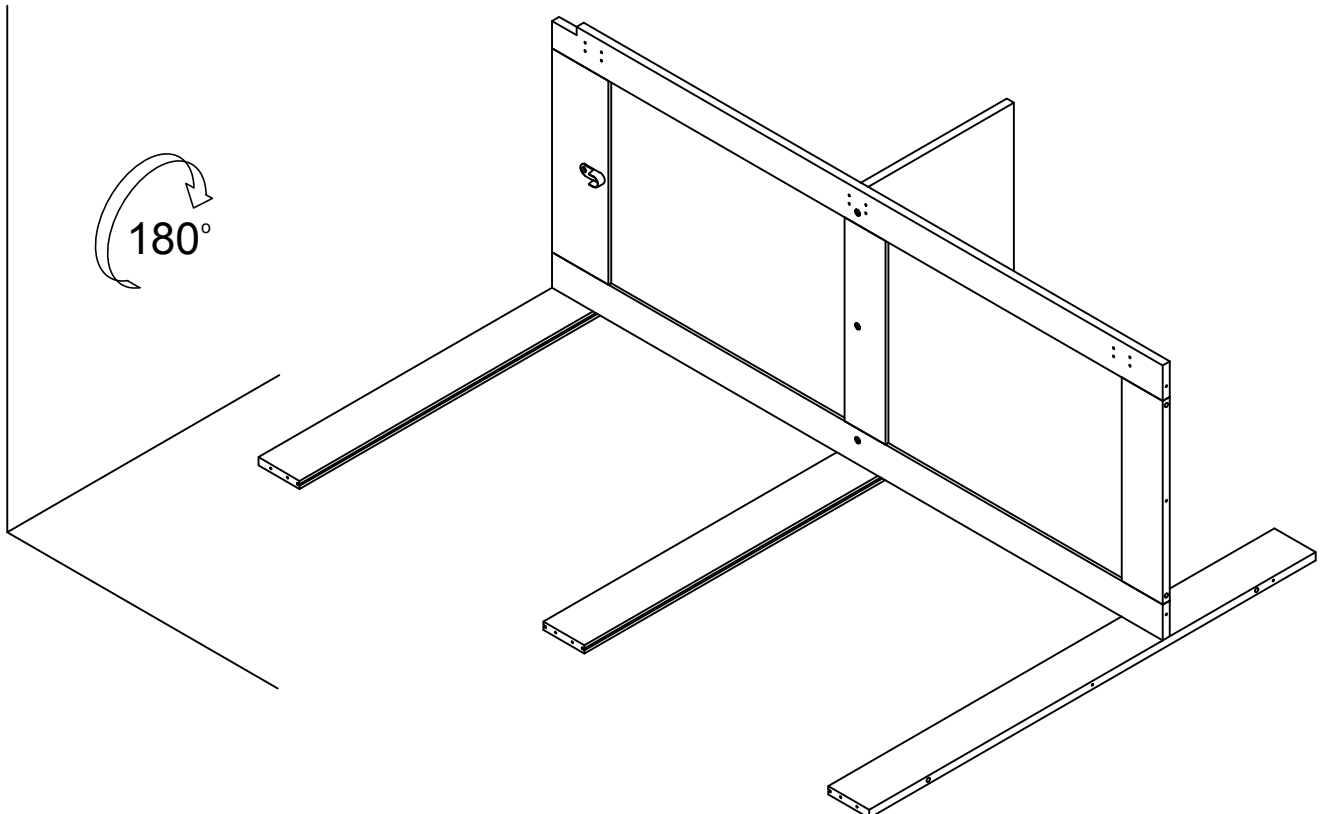


INSTALLATION INSTRUCTION

STEP15

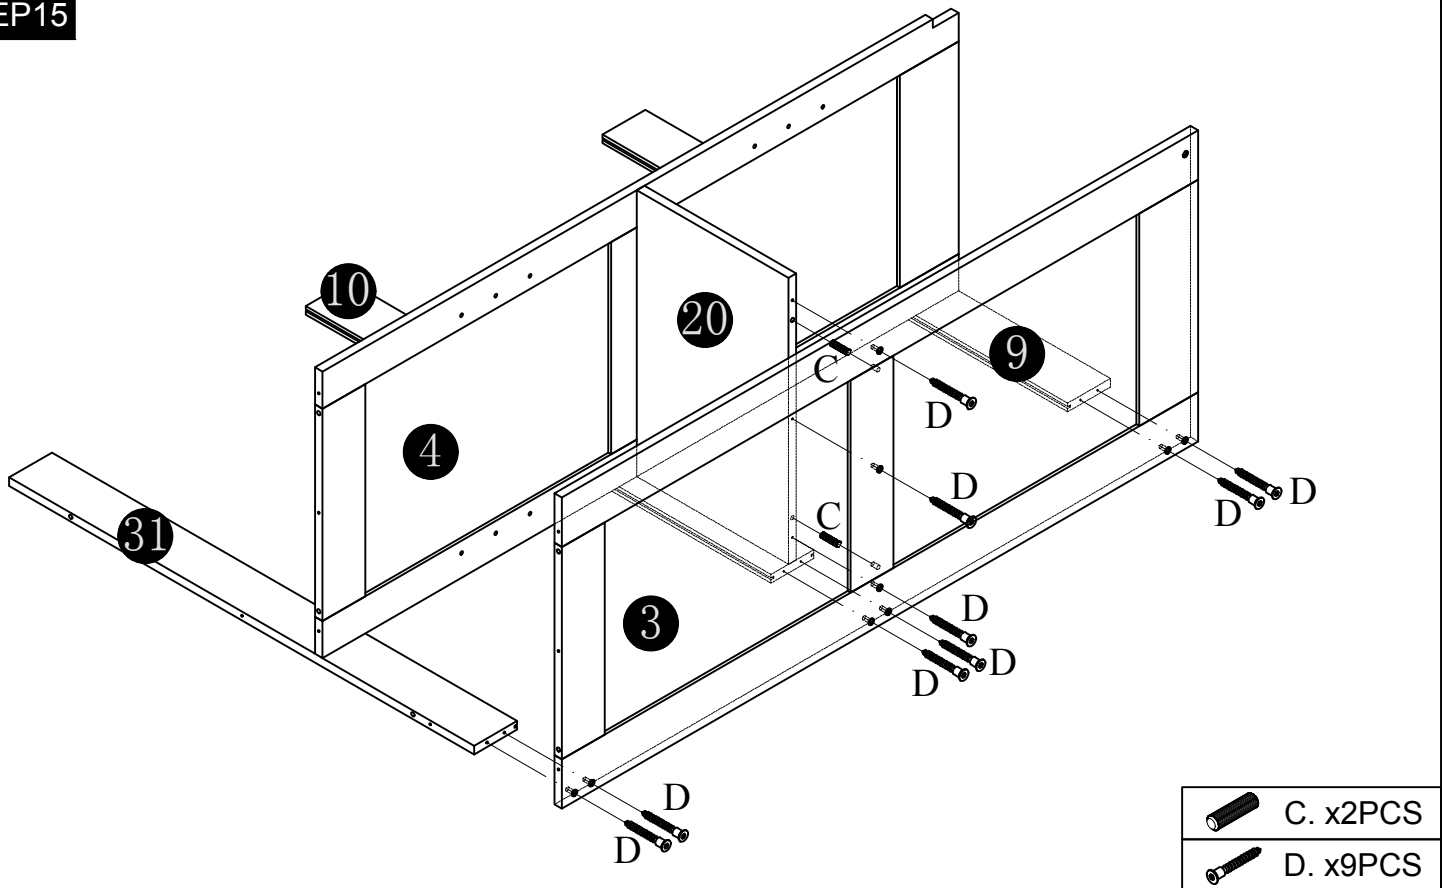


STEP16

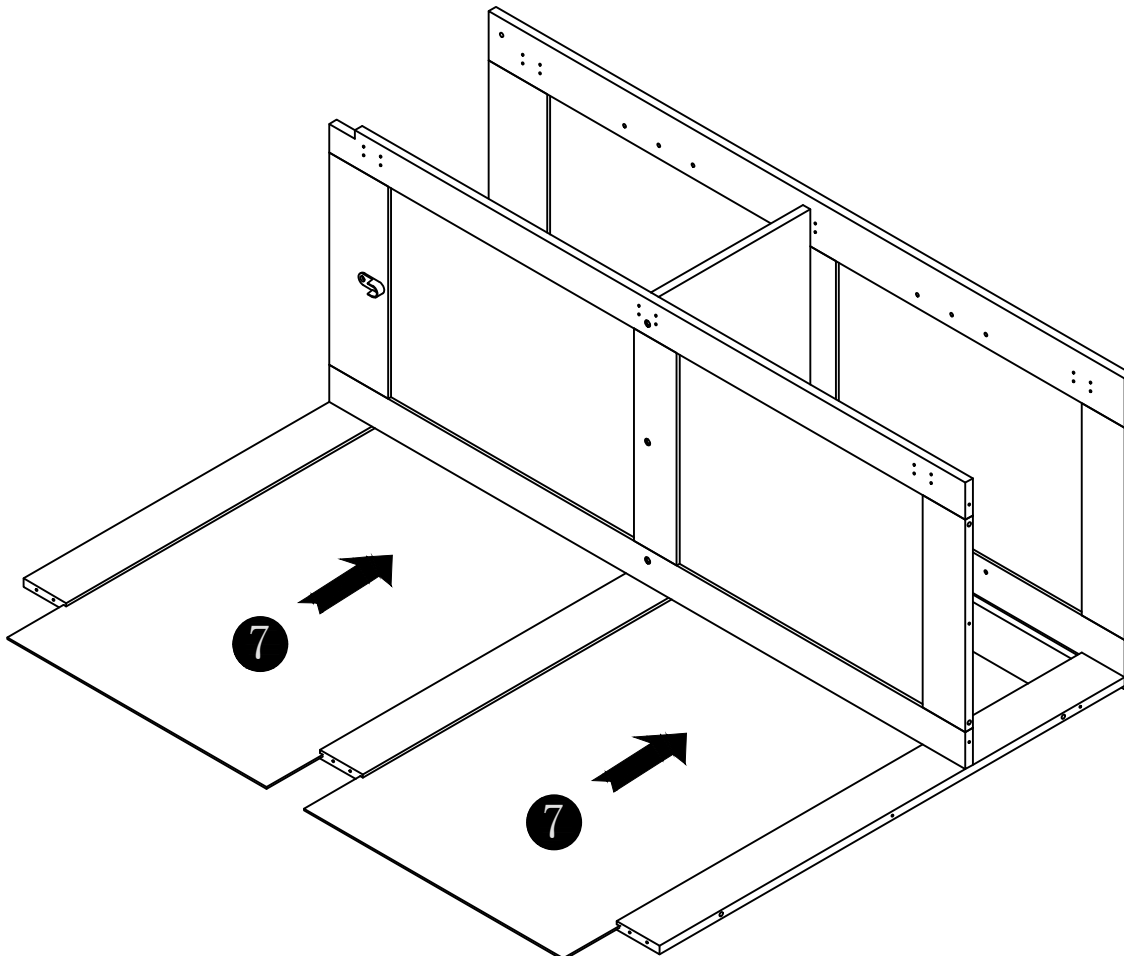


INSTALLATION INSTRUCTION

STEP17

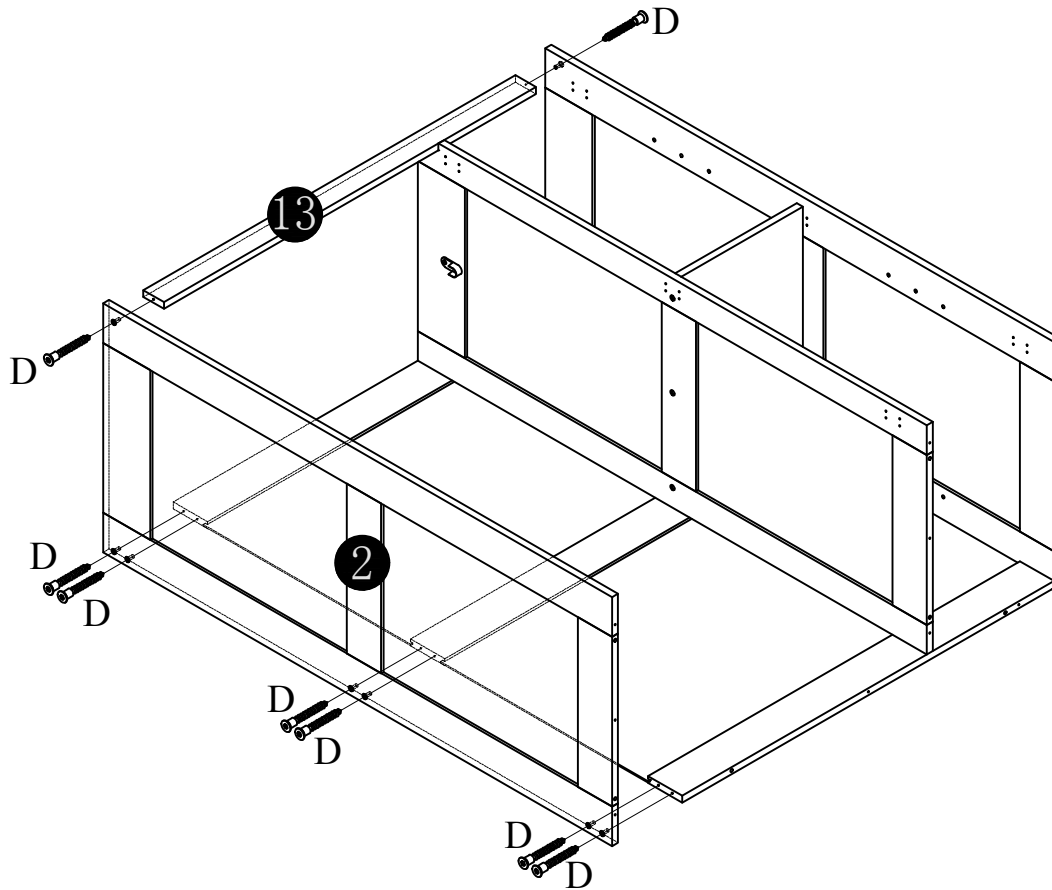

 D. x8PCS


STEP18

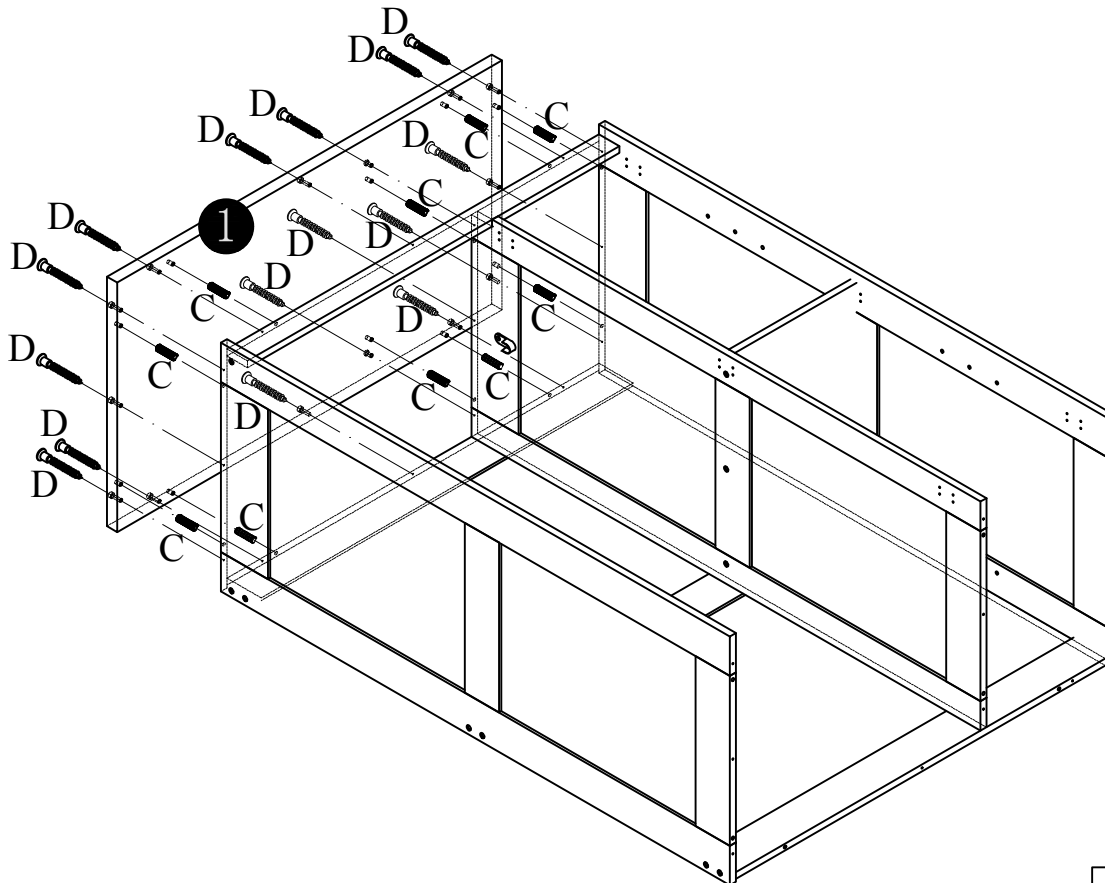

 C. x10PCS
 D. x15PCS


INSTALLATION INSTRUCTION

STEP19

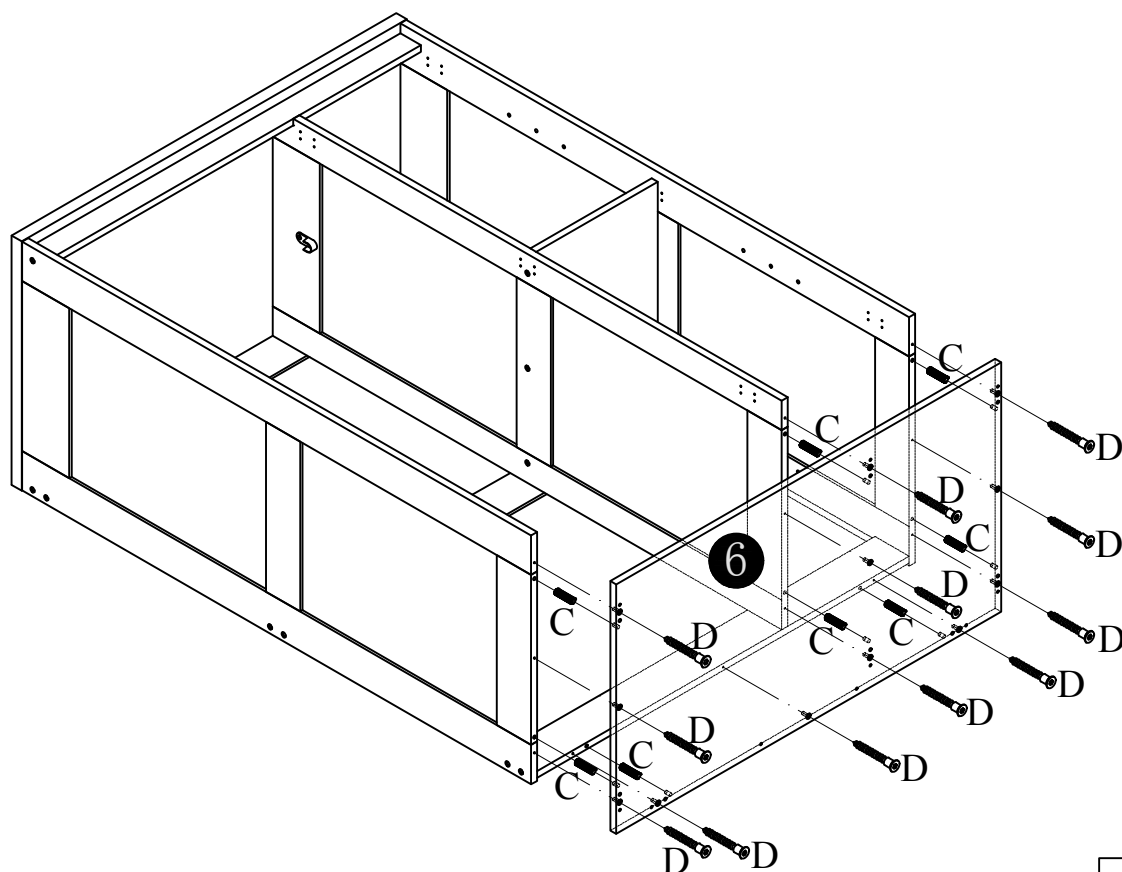

- C. x8PCS
- D. x12PCS



STEP20

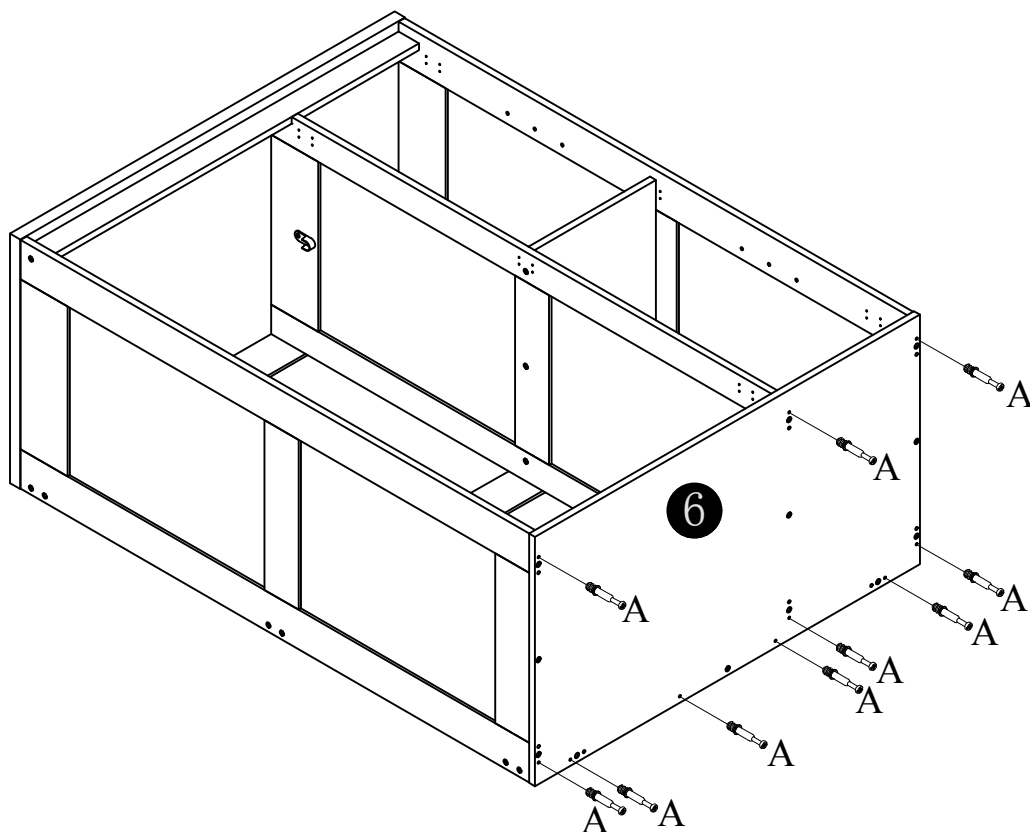

- A. x10PCS

INSTALLATION INSTRUCTION


STEP21

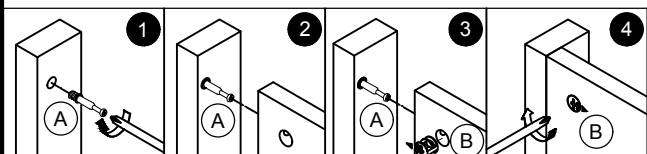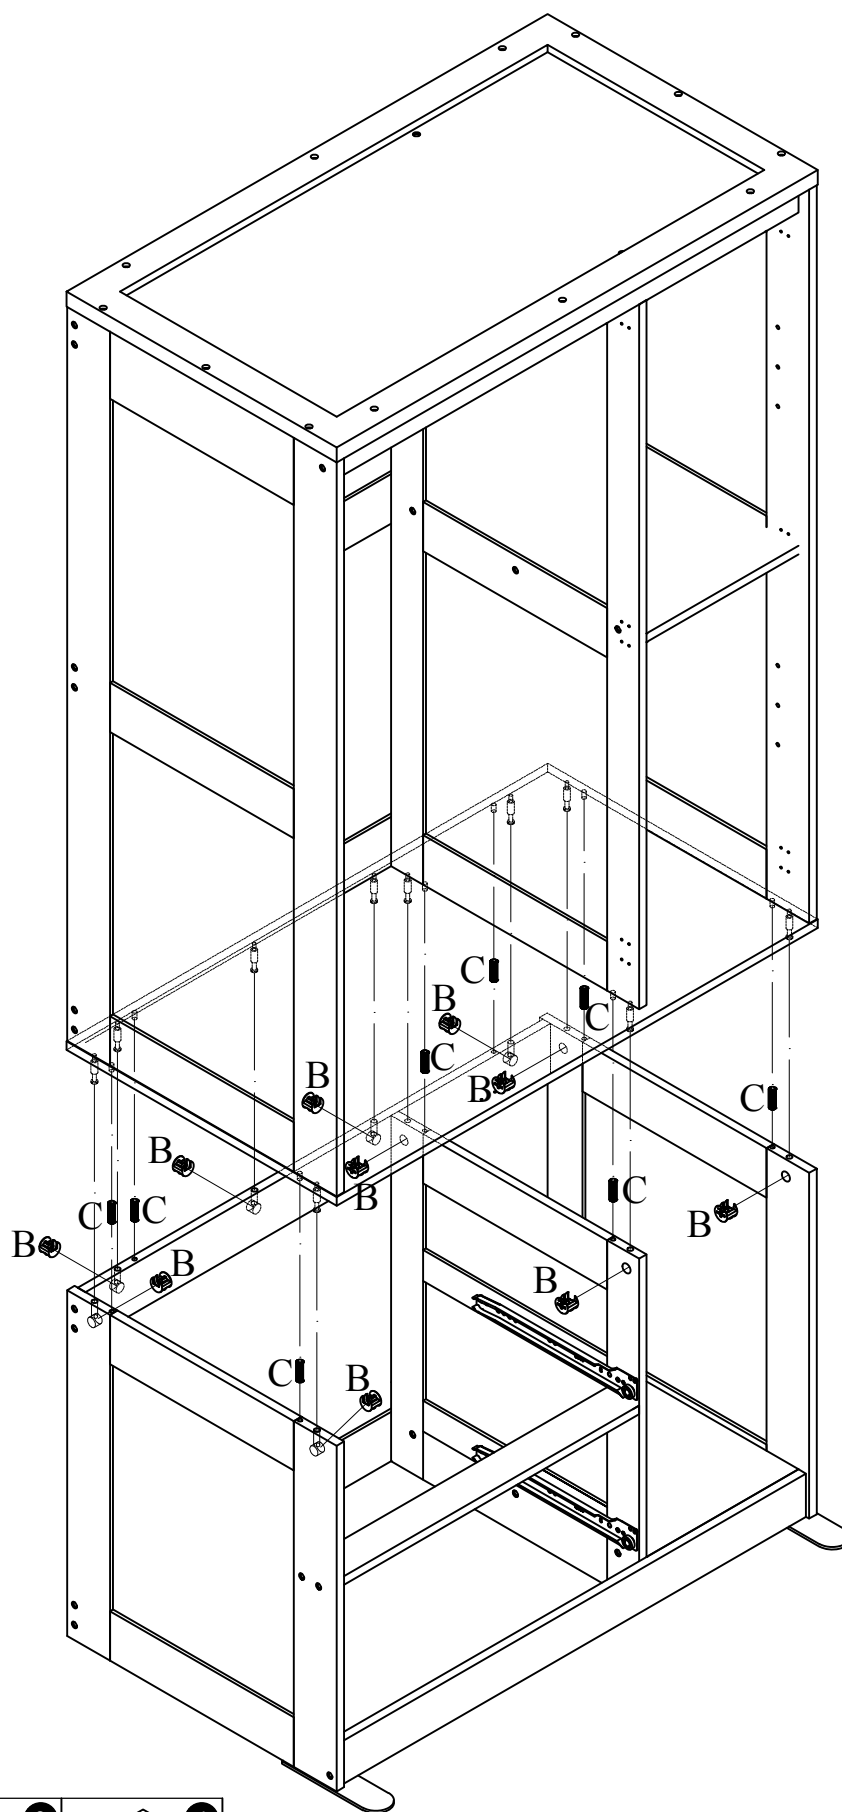

 B. x10PCS
 C. x8PCS


INSTALLATION INSTRUCTION

STEP22

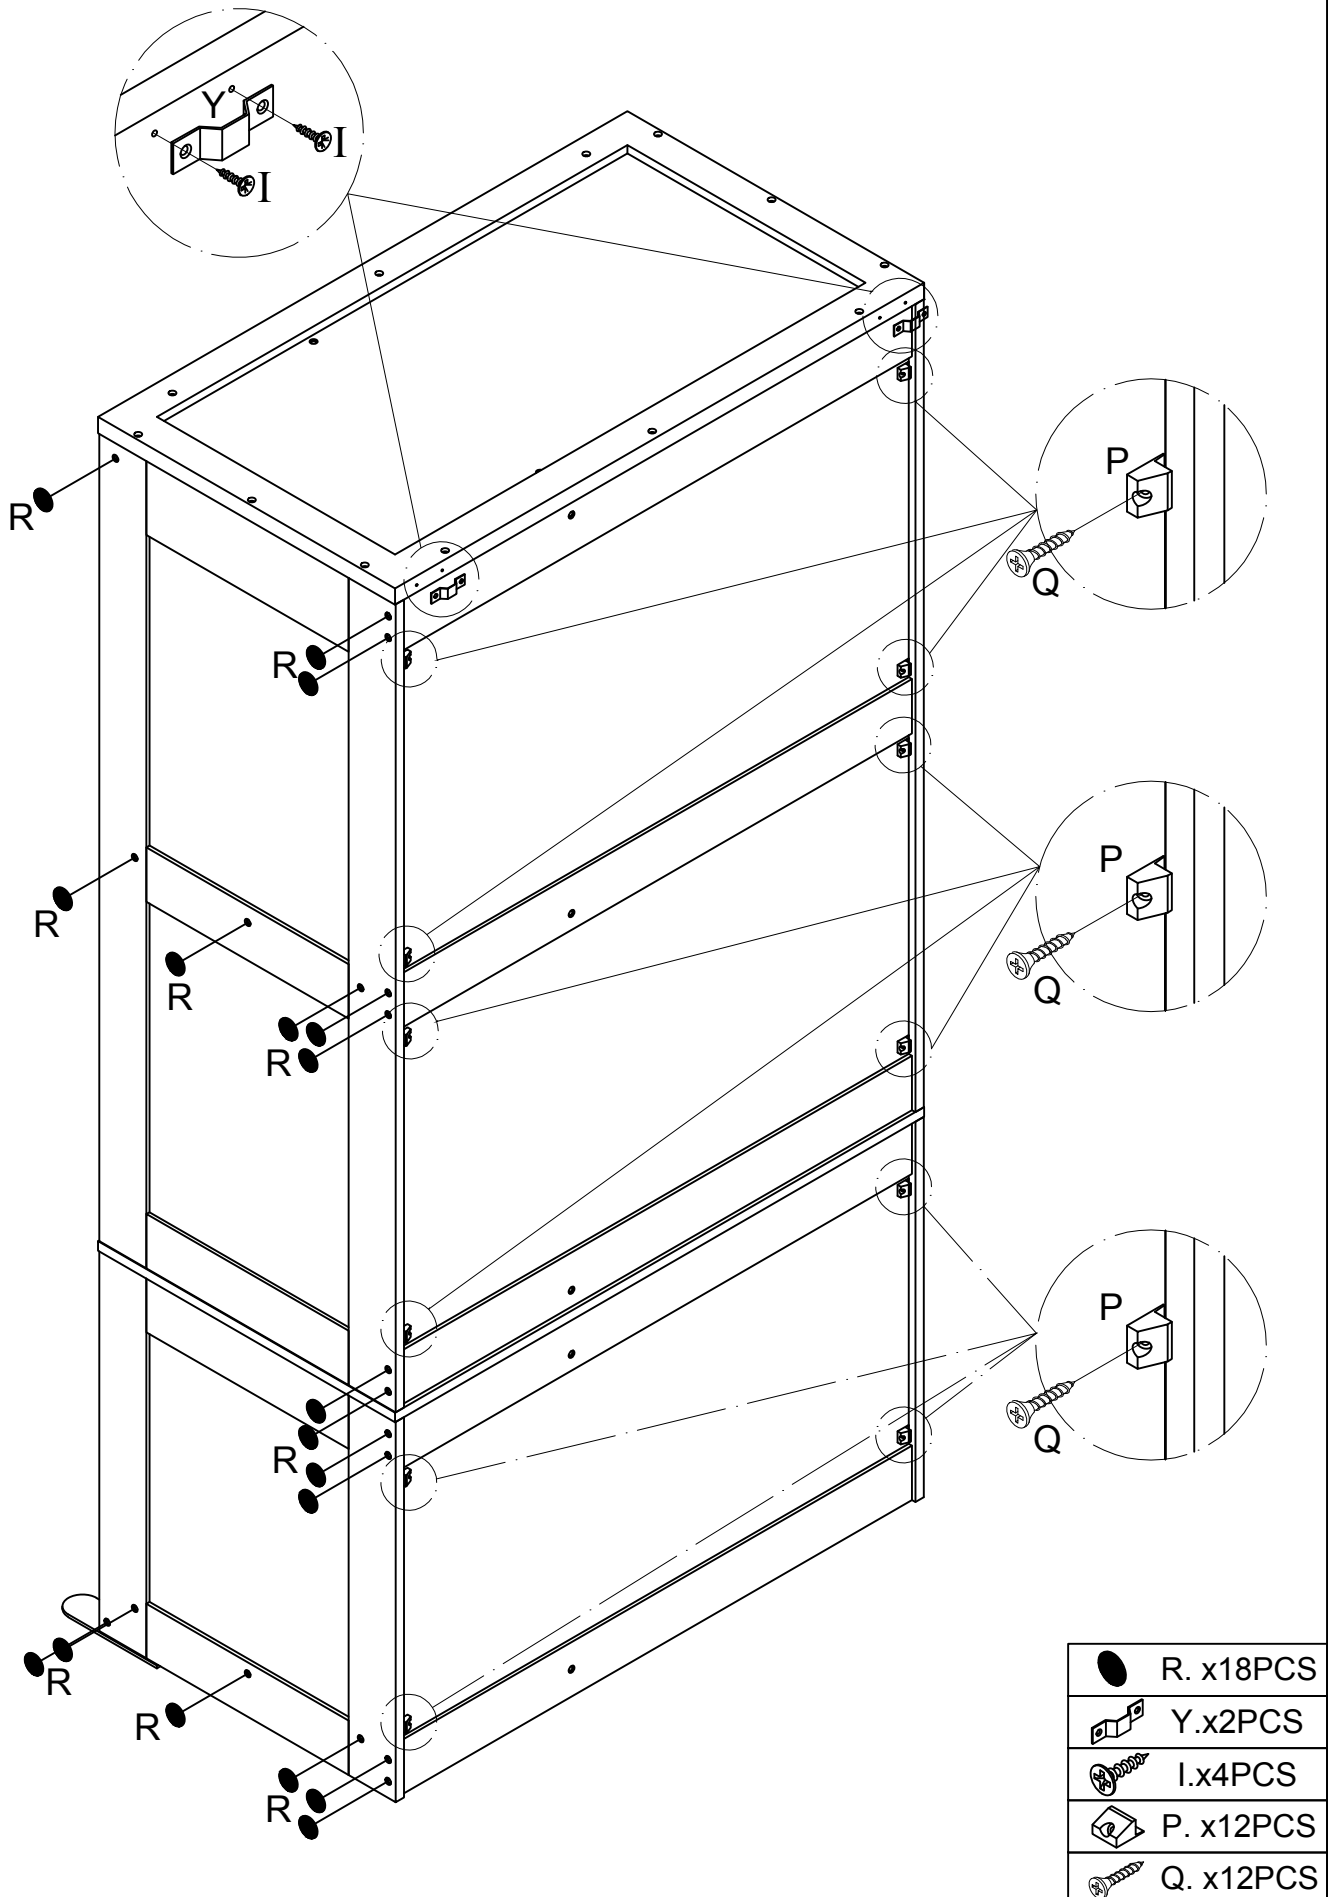

INSTALLATION INSTRUCTION


STEP23

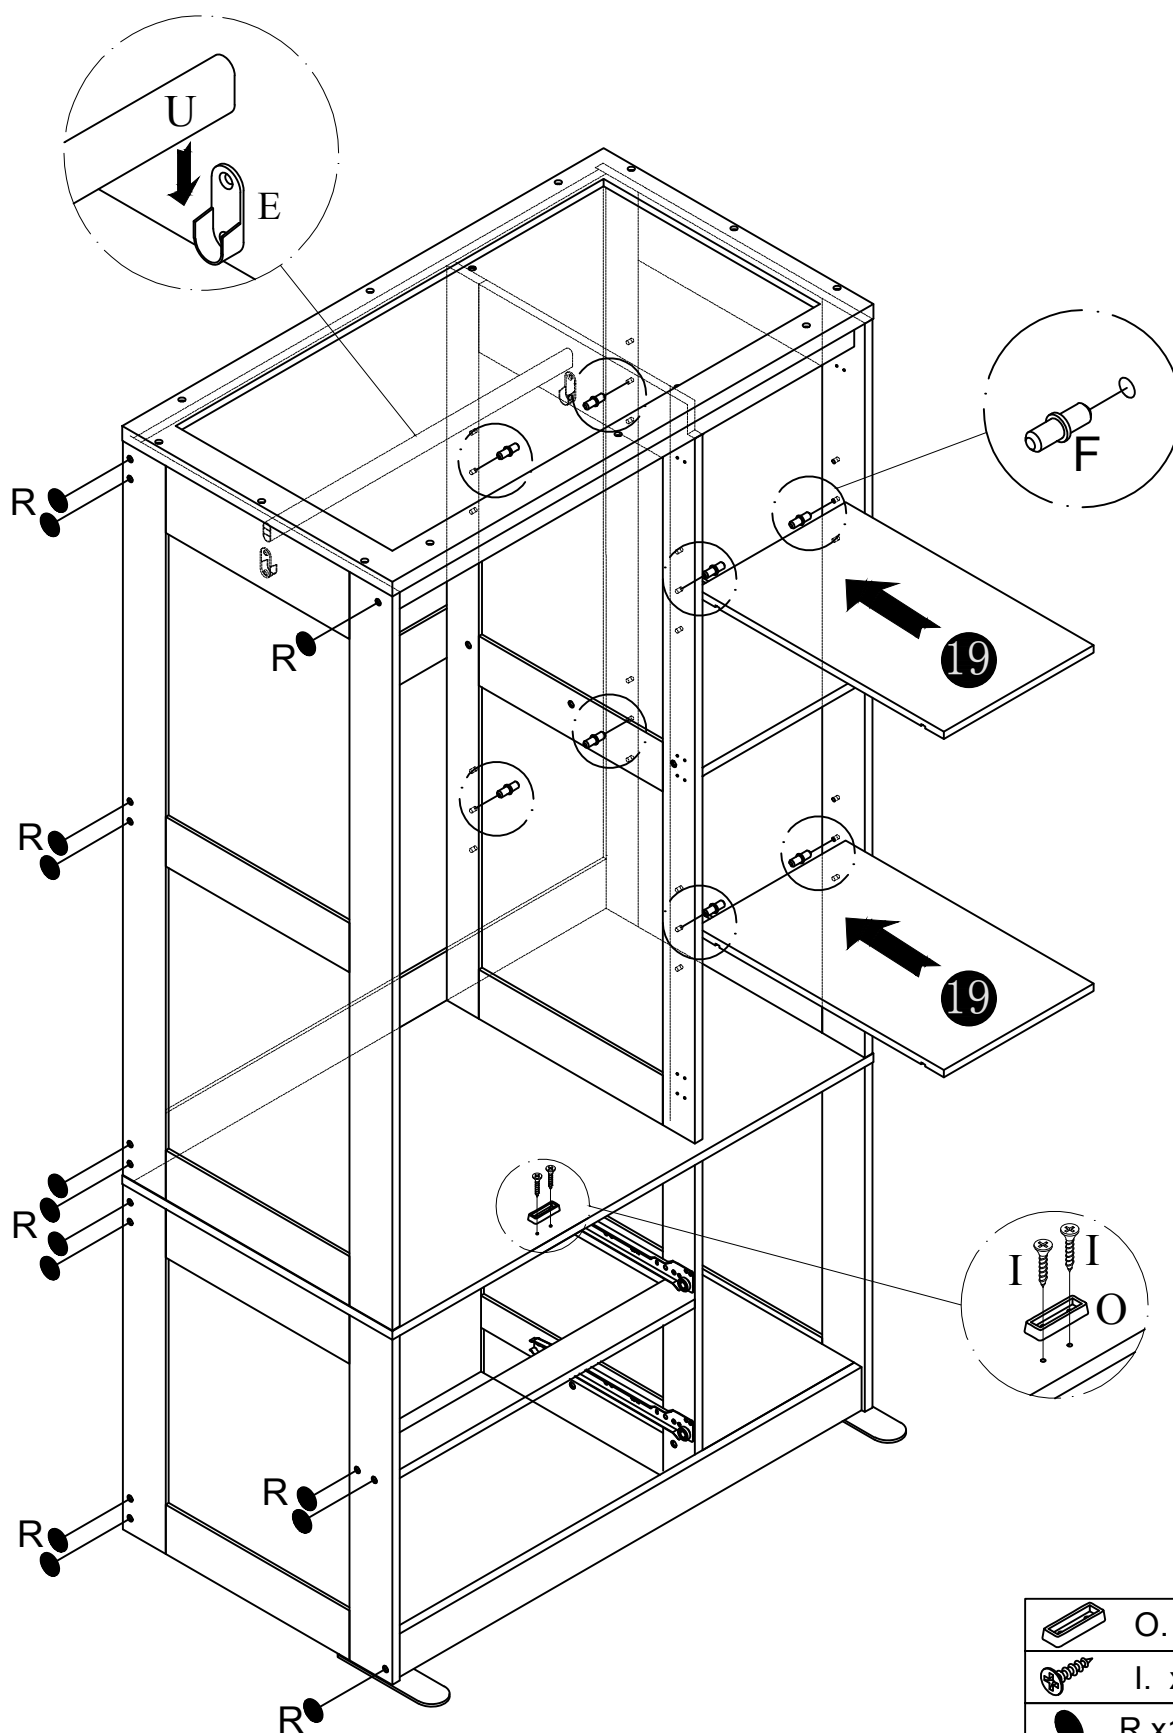

	O. x1PC
	I. x2PCS
	R.x14PCS
	U. x1PC
	F. x8PCS


INSTALLATION INSTRUCTION

STEP24

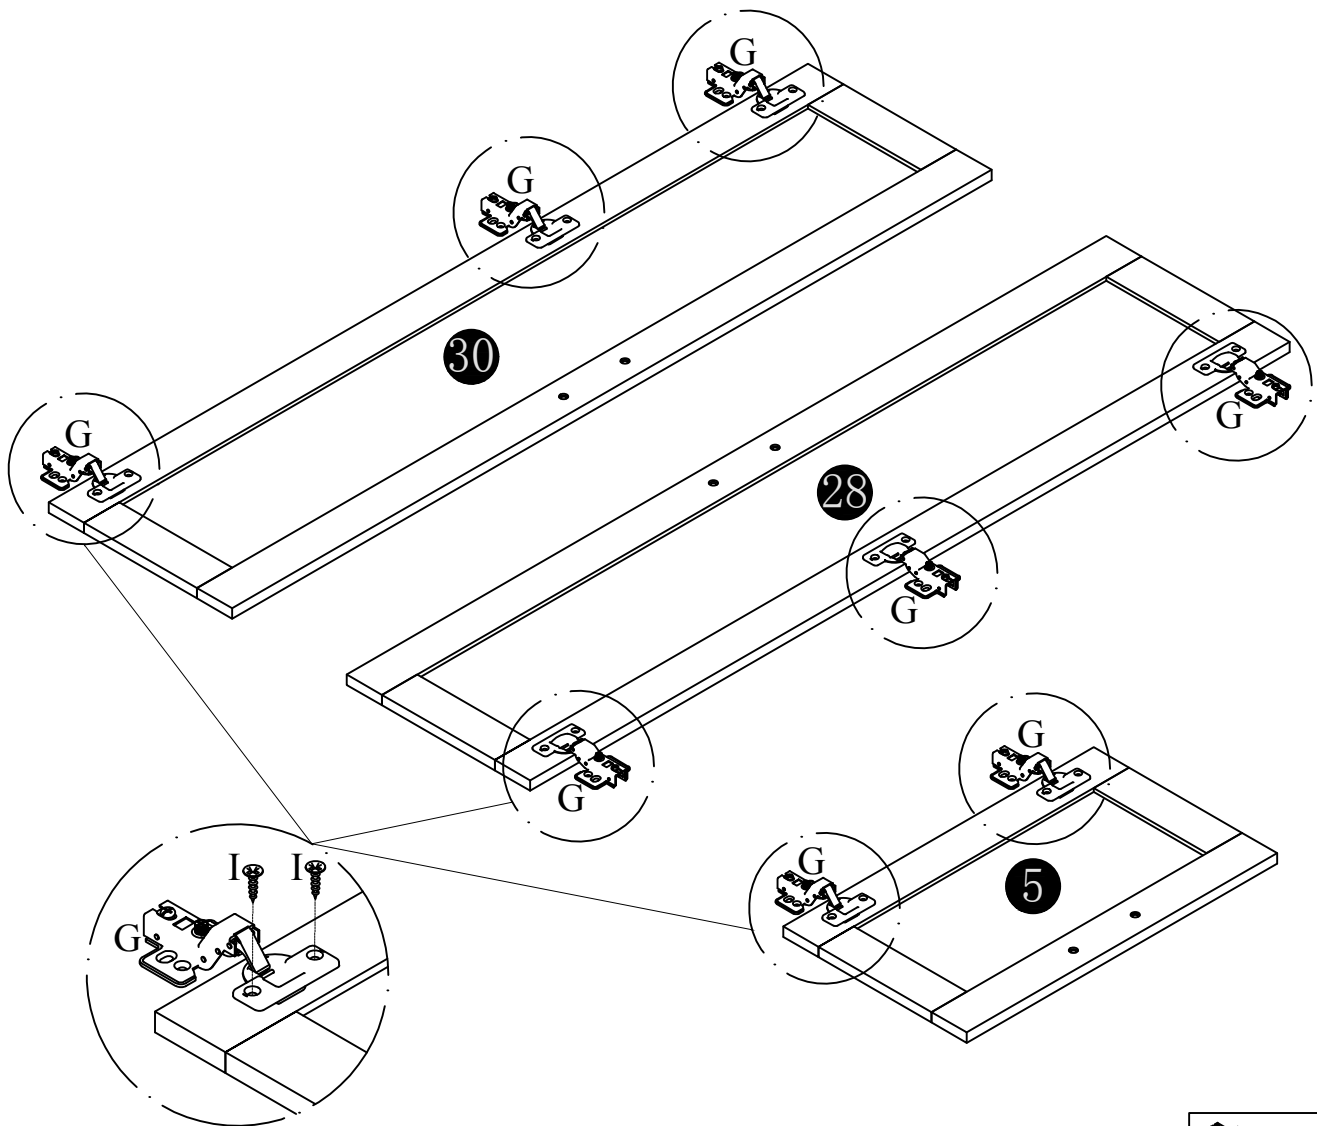

G.x8PCS
I.x16PCS


STEP25

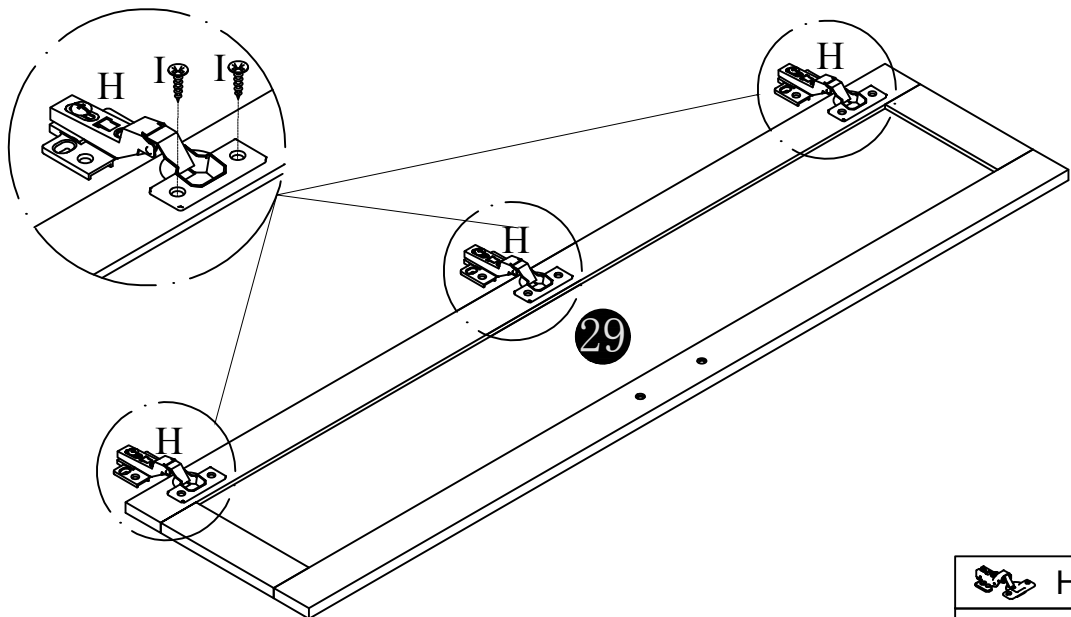

H.x3PCS
I.x6PCS

INSTALLATION INSTRUCTION


STEP26

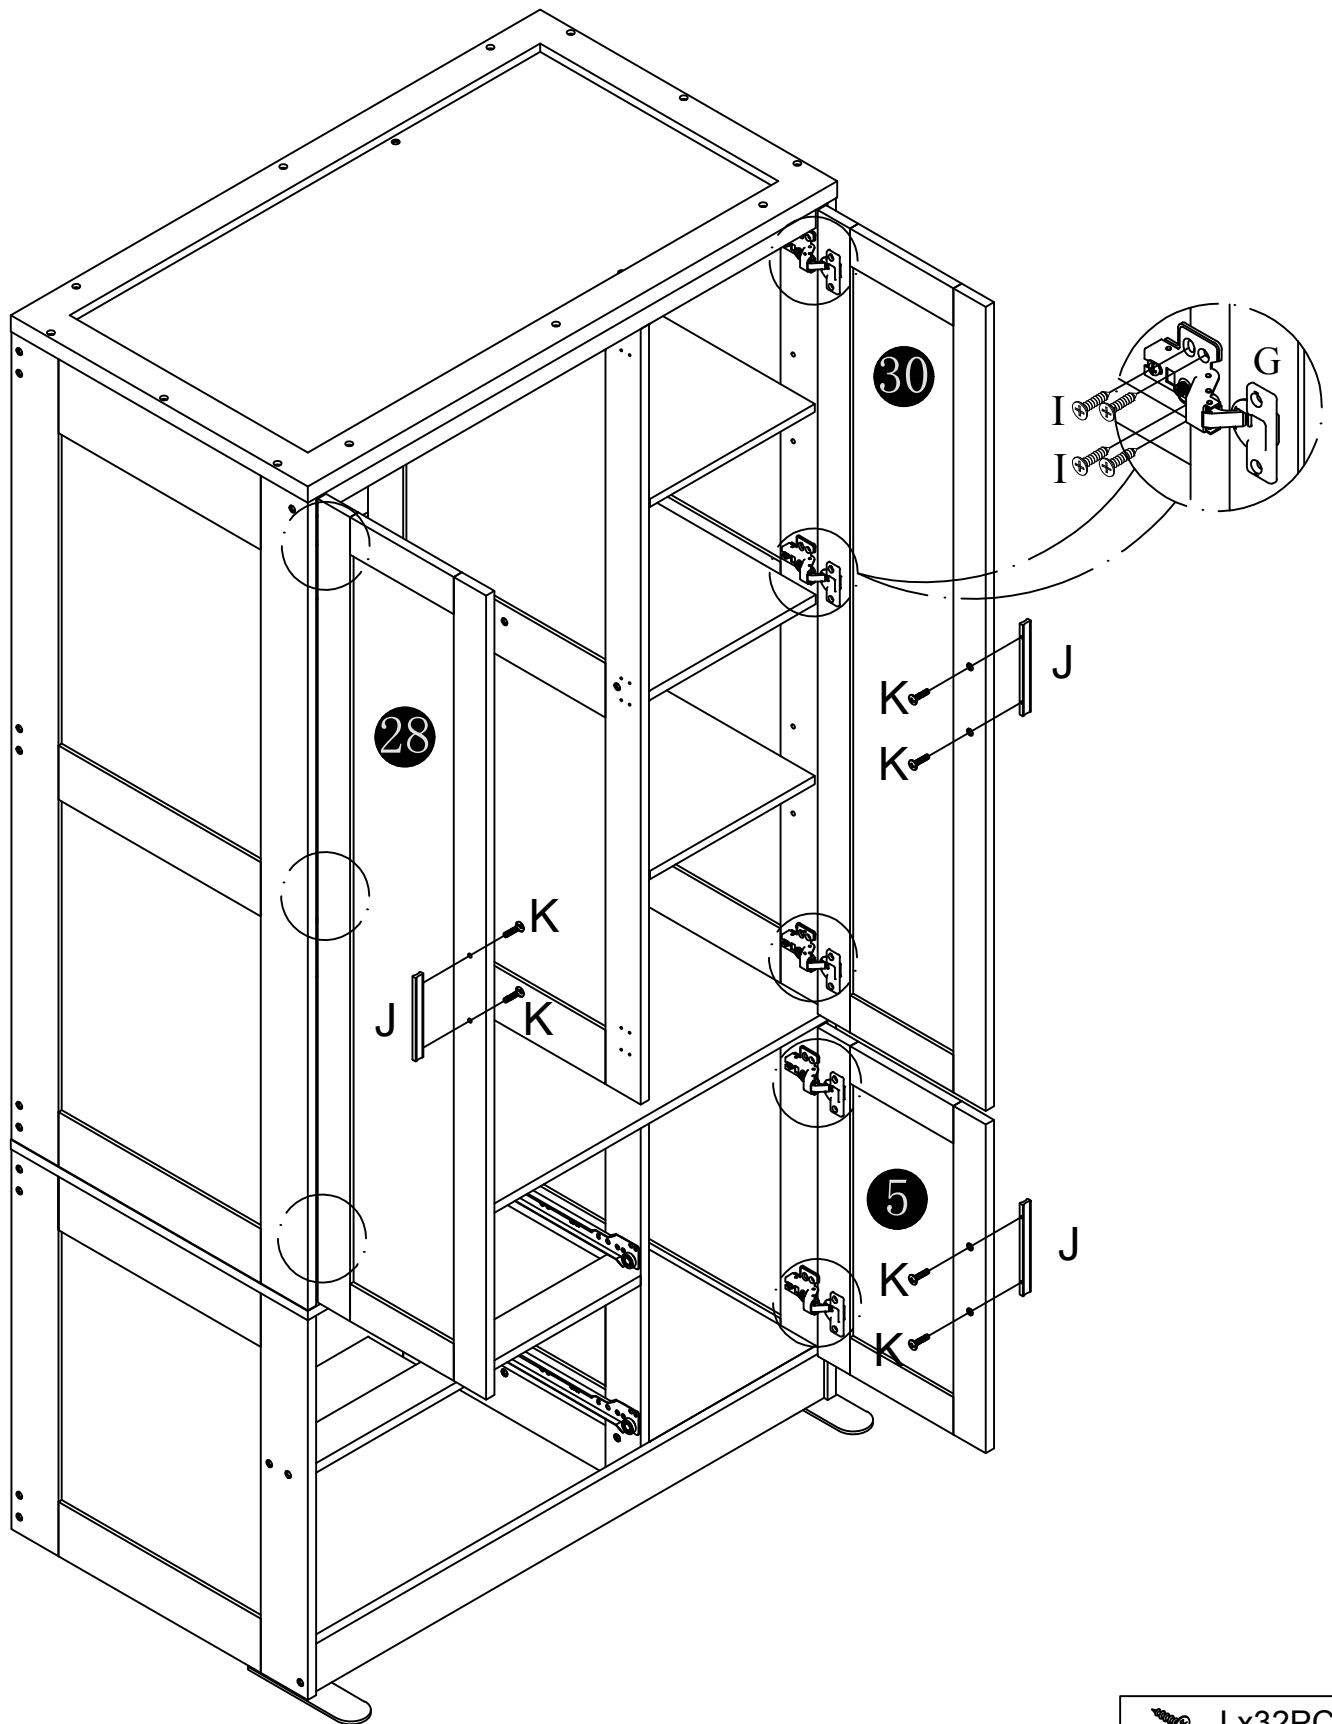

	I.x32PCS
	J.x3PCS
	K.x6PCS

INSTALLATION INSTRUCTION


STEP27

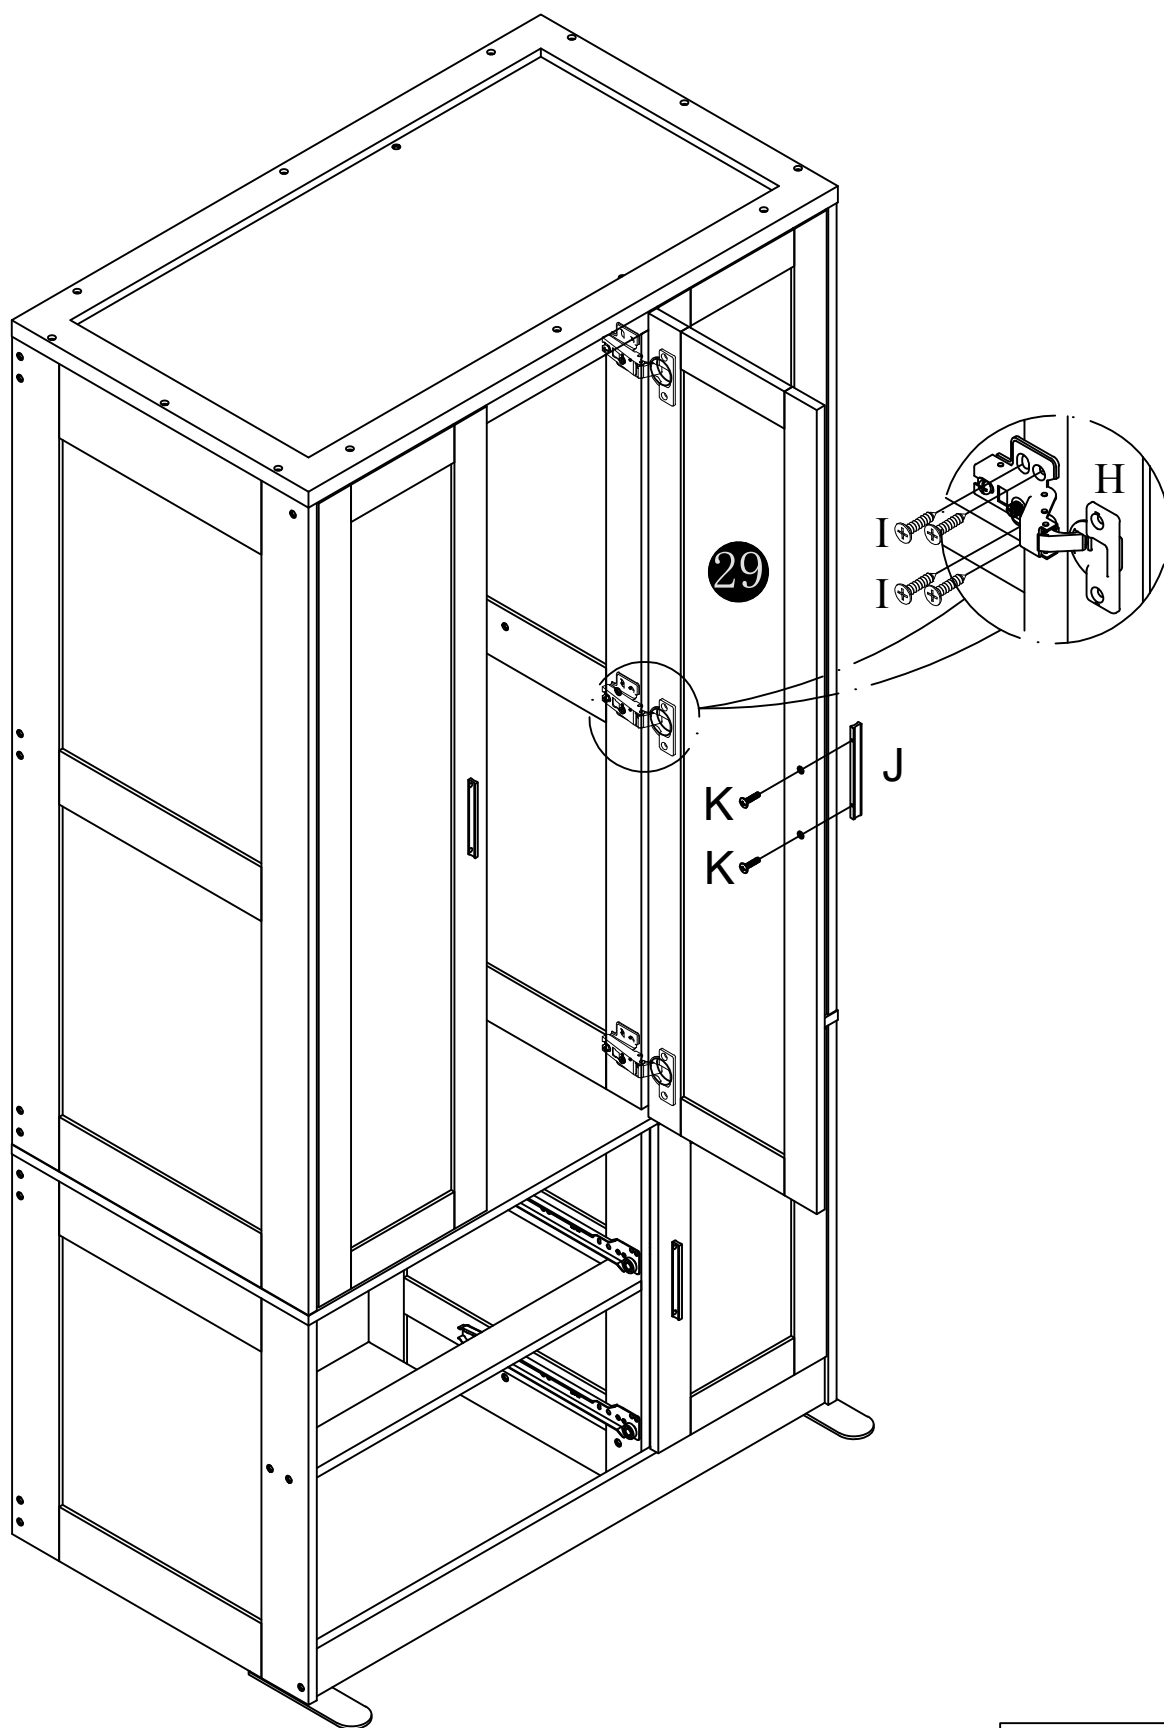

- I.x12PCS
- J.x1PC
- K.x2PCS


INSTALLATION INSTRUCTION

STEP28

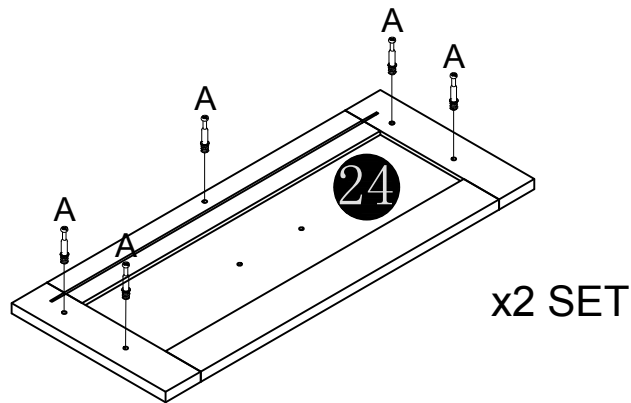



 A. x10PCS

STEP29

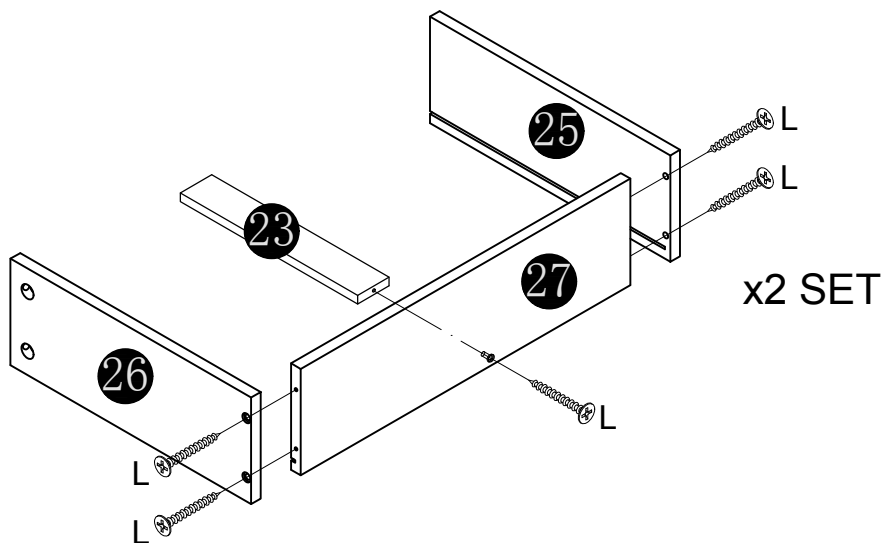

 L. x10PCS


STEP30

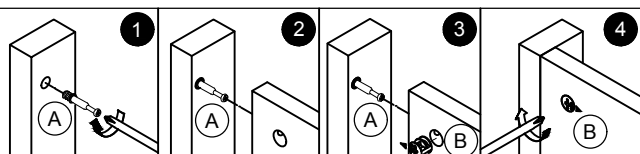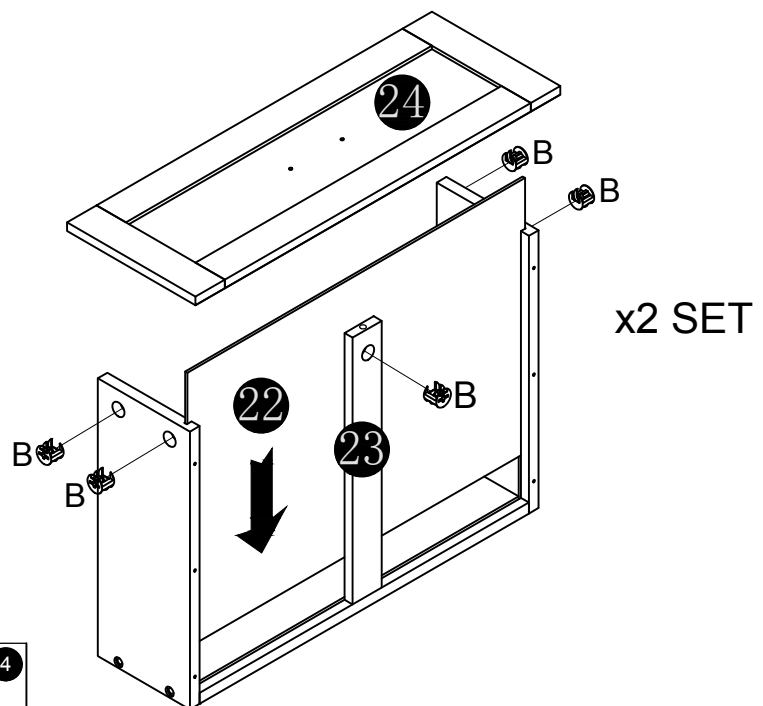

 B. x10PCS

INSTALLATION INSTRUCTION


STEP31

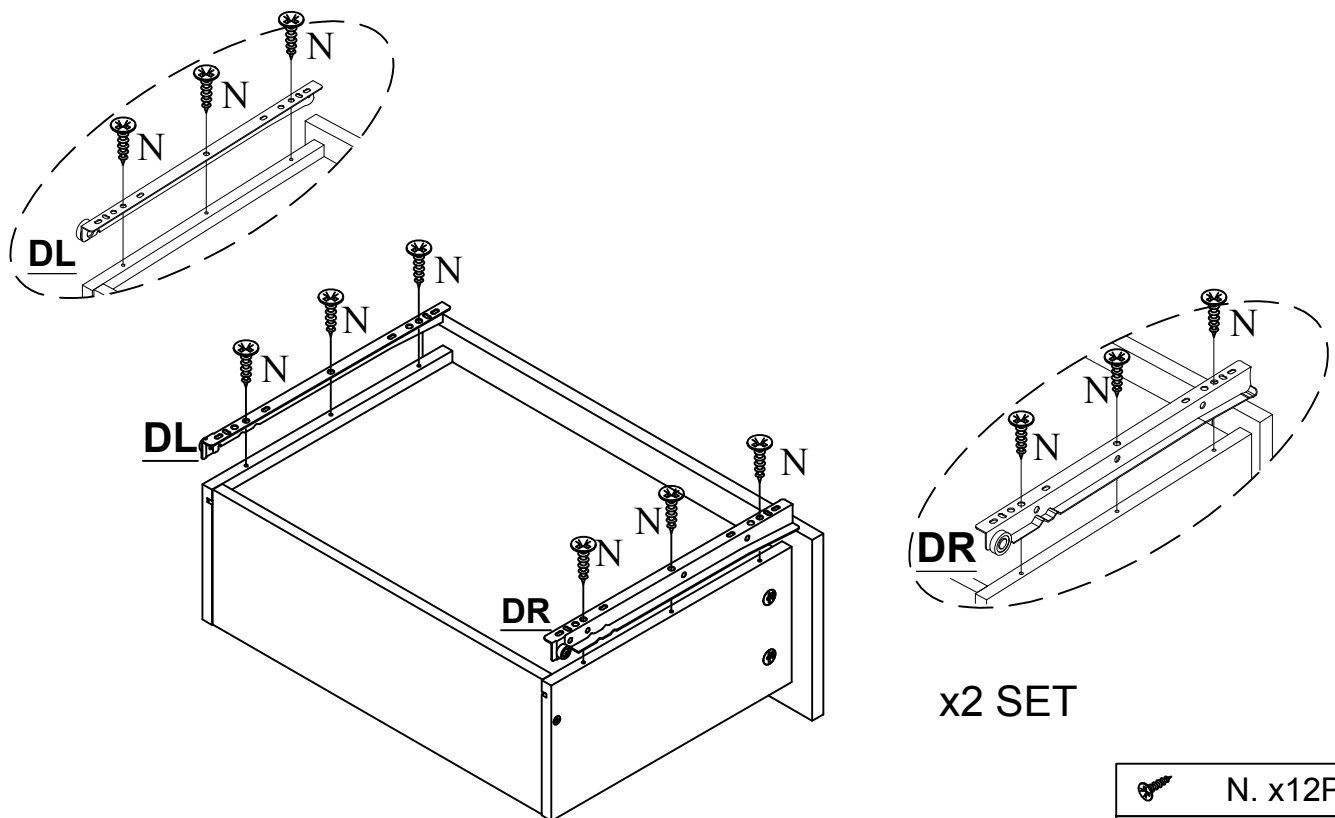

x2 SET

	N. x12PCS
	M(DL).x2PCS
	M(DR).x2PCS

STEP32


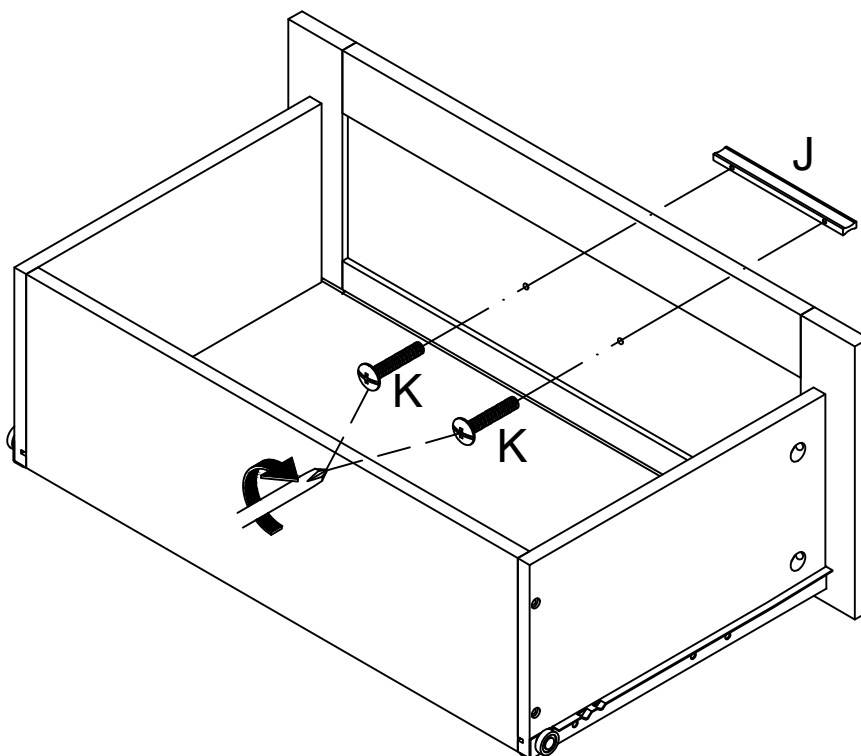


x2 SET

	J. x2PCS
	K. x4PCS

INSTALLATION INSTRUCTION

STEP33

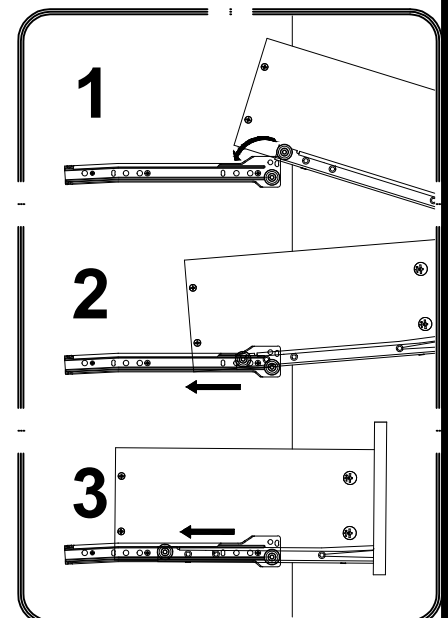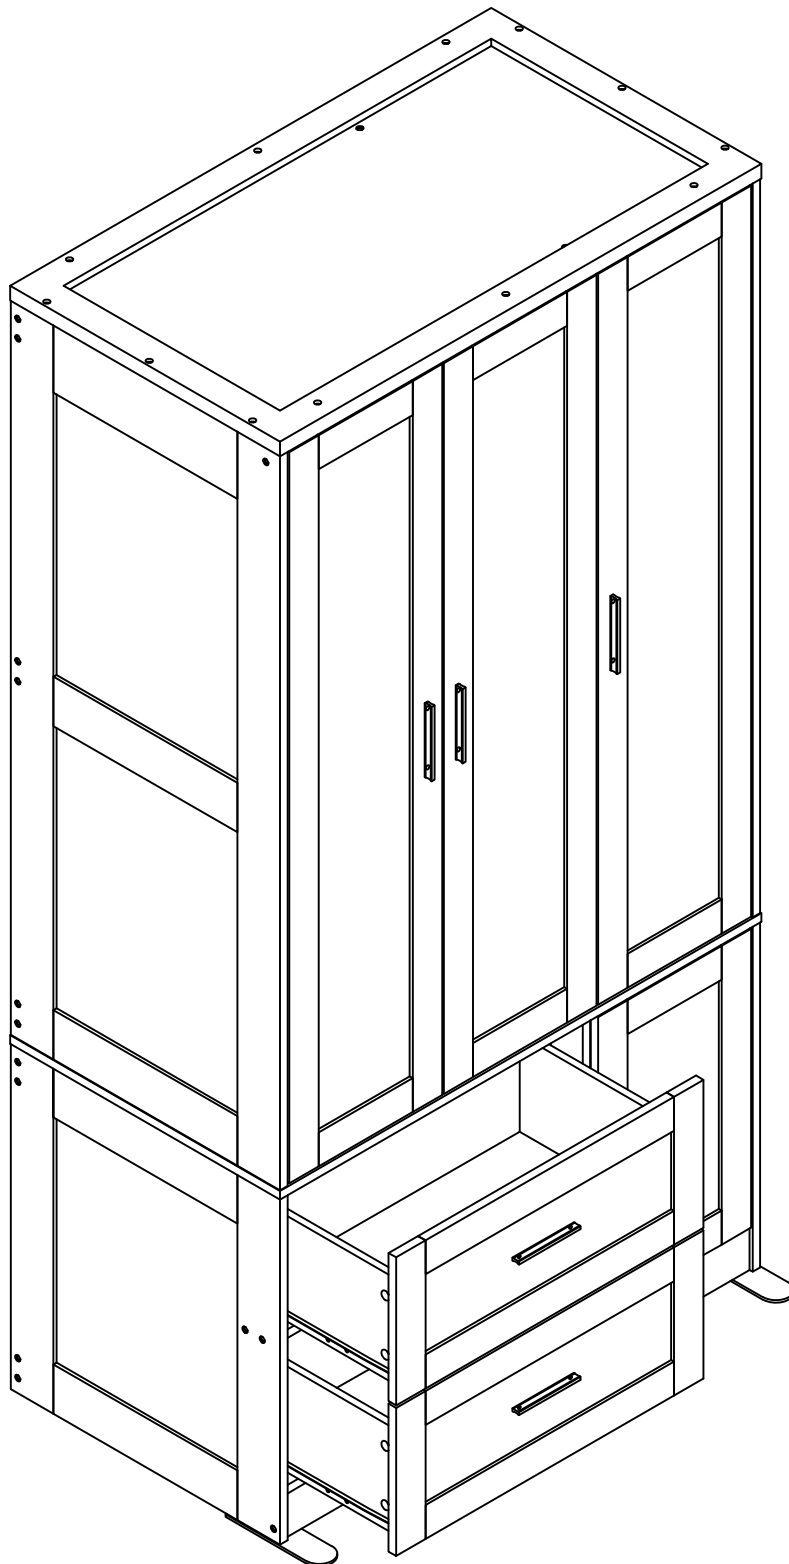


INSTALLATION INSTRUCTION

STEP34


Step1: Determine the location of the anti-overturning on the wall and then mark the position

Step 2: Drill the hole and then fixed the wall plug (W) on the wall

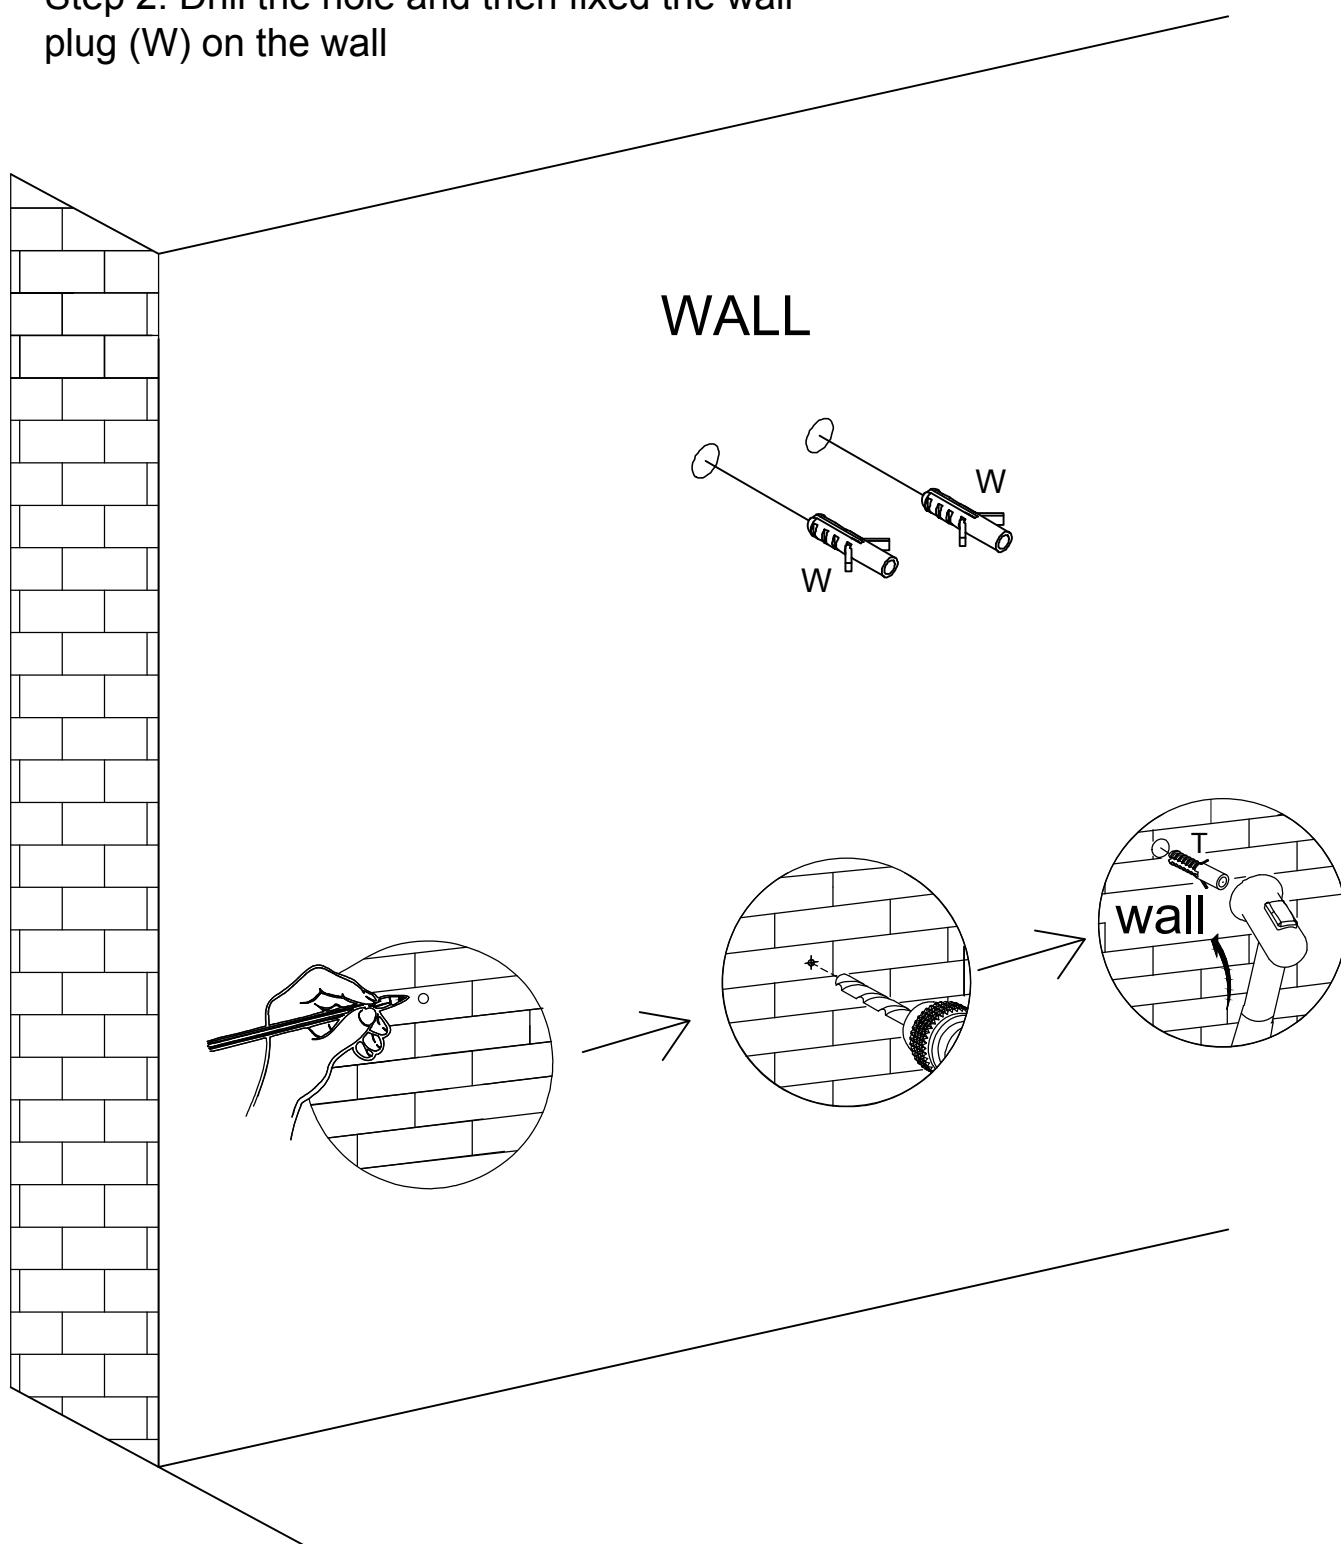

INSTALLATION INSTRUCTION


STEP35

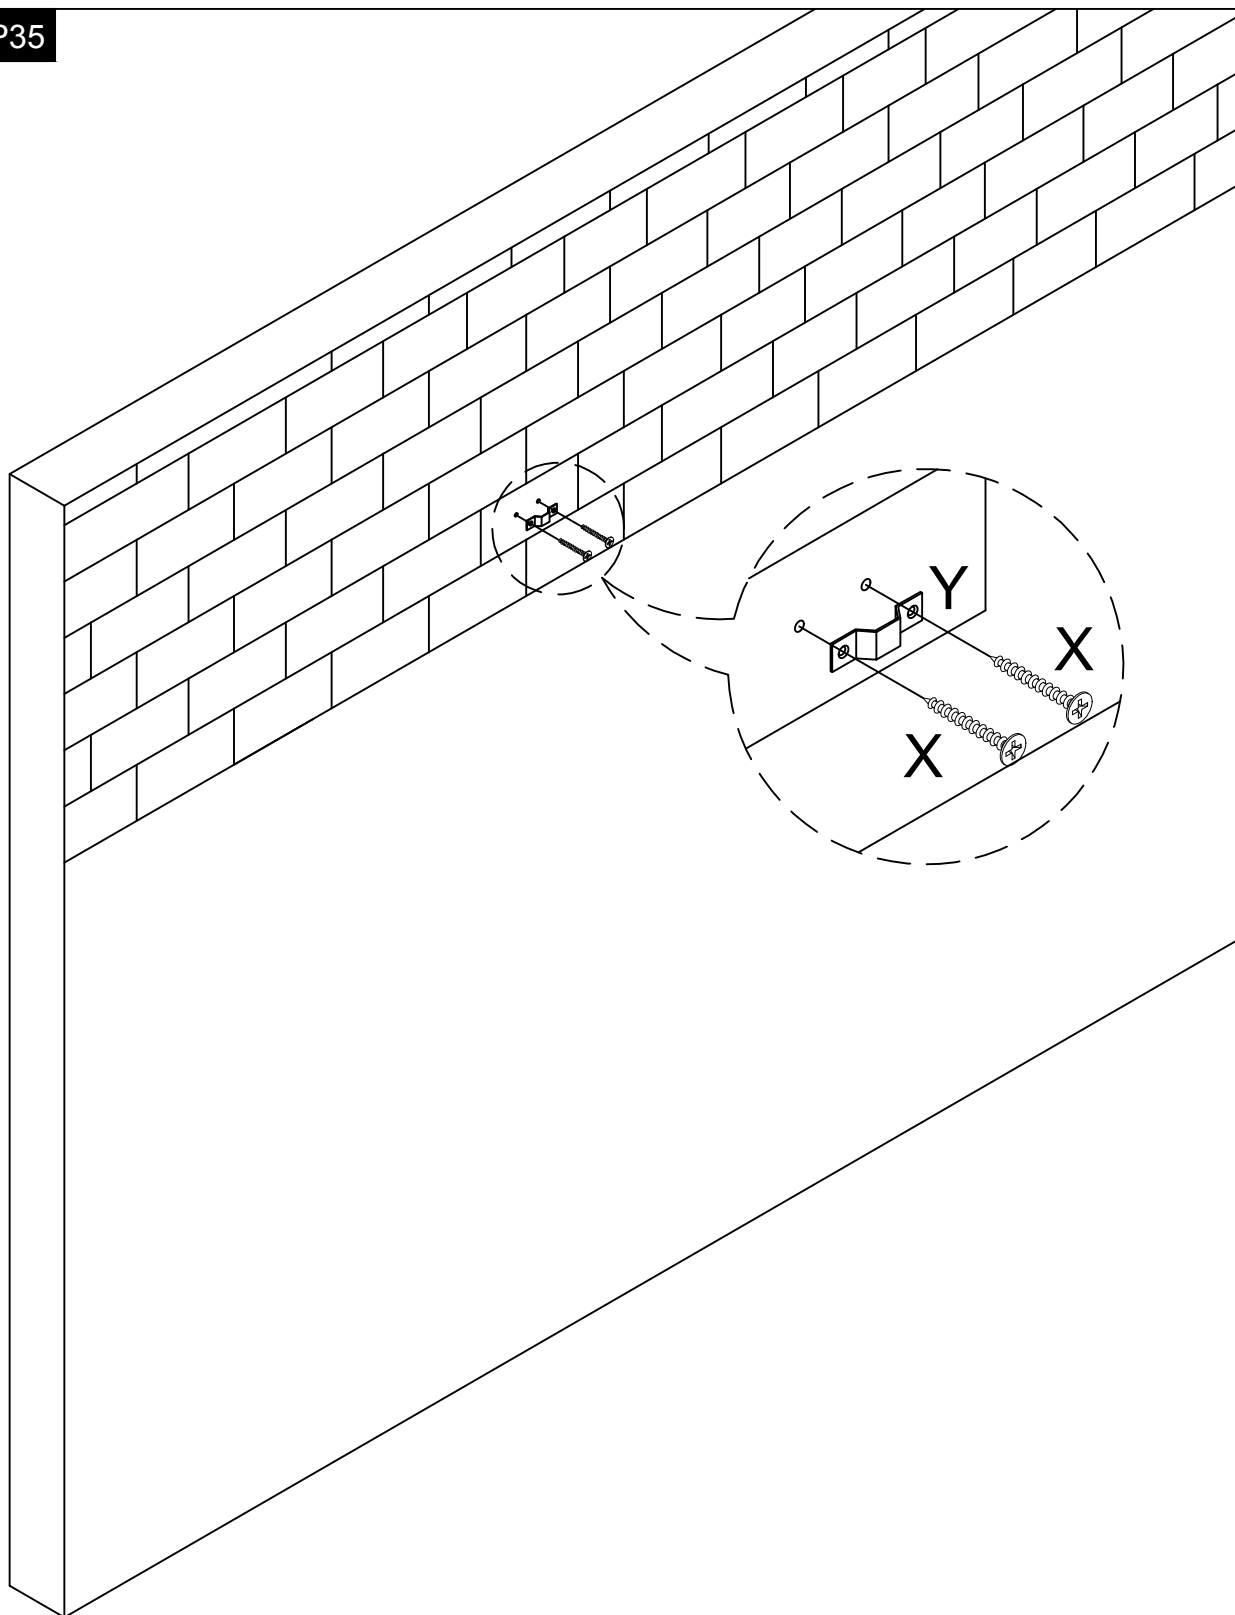

Step 3: use screw (X) to fix (Y) on the wall

INSTALLATION INSTRUCTION

STEP36

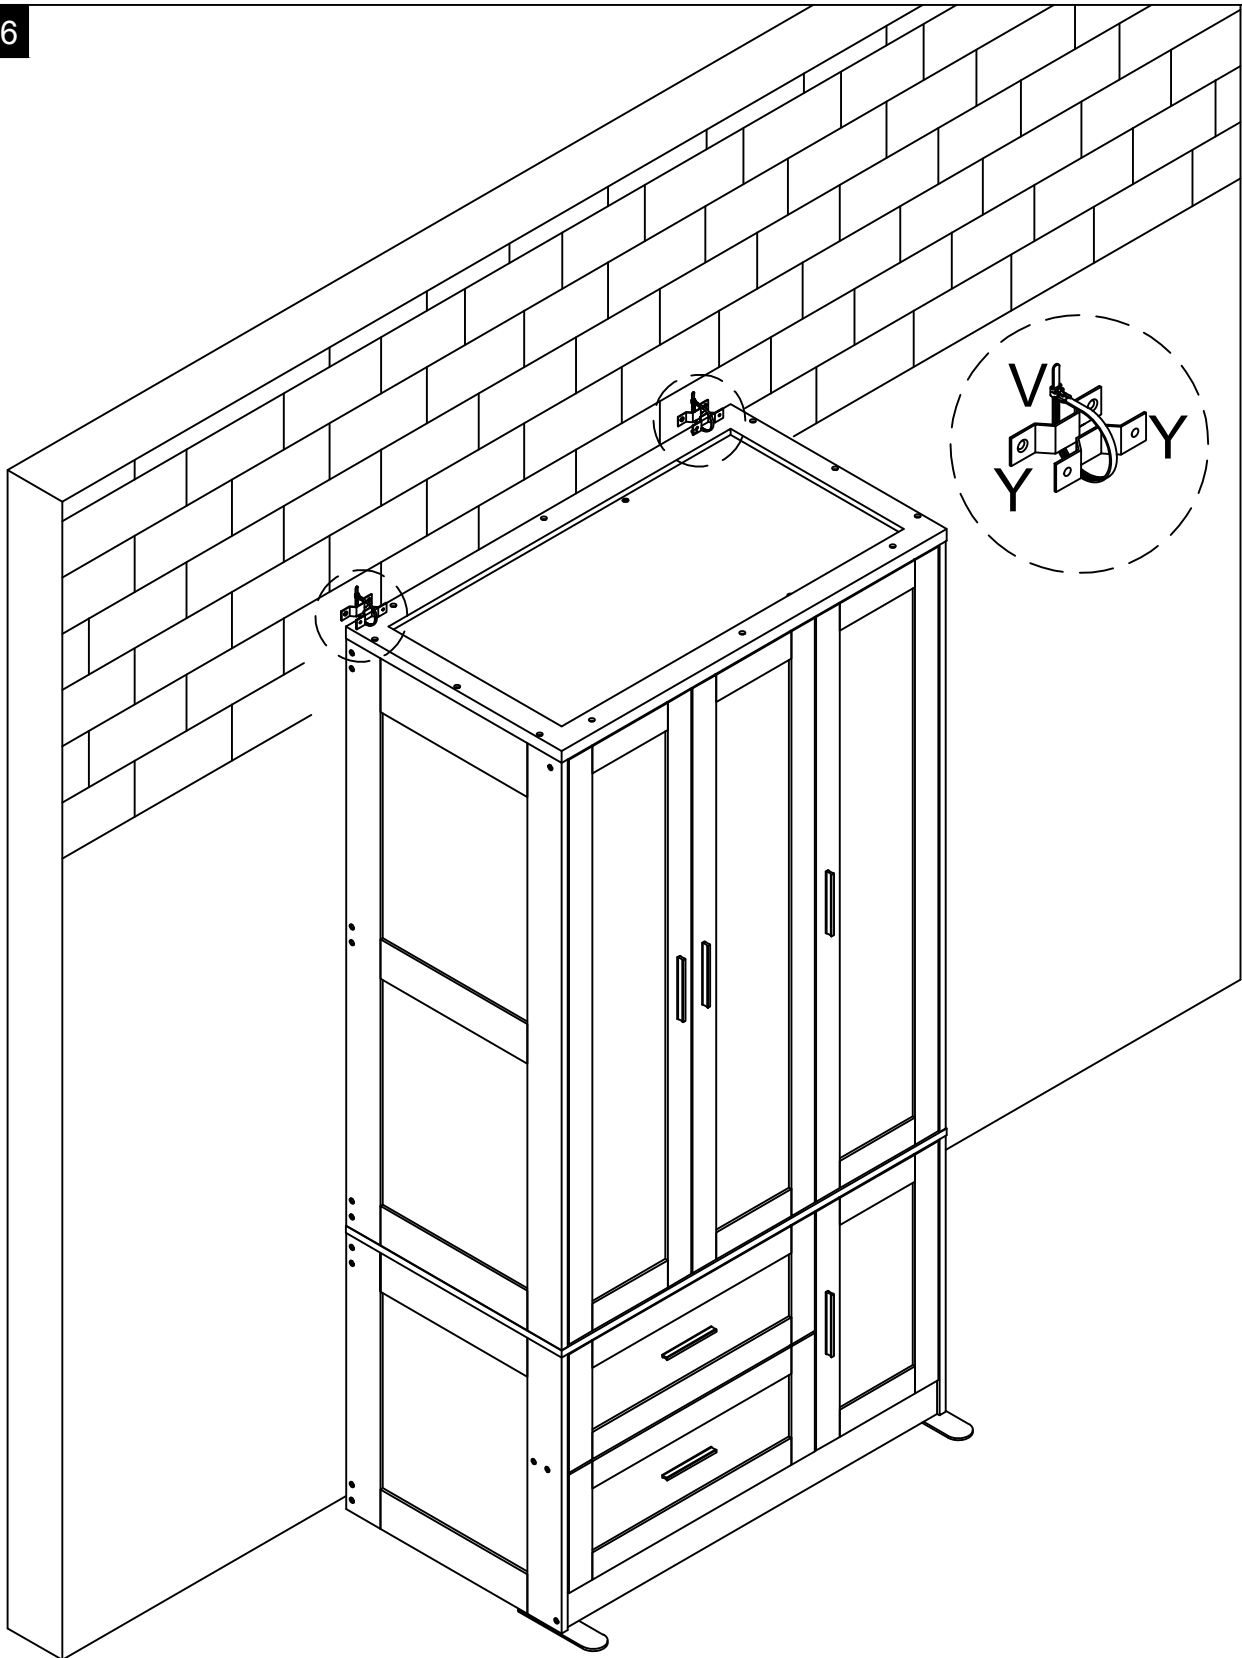


Step 3: use cable tie (V) to fix (Y) and (Y)

KING YUAN TONG WOOD CO., LTD.

N3 & N4 road, Nam Tan Uyen Industrial Park expansion, Hoi Nghia wards, Tan Uyen City
Binh Duong, VN.

Date of manufacture :2025/02

FURNITURE INSTRUCTION

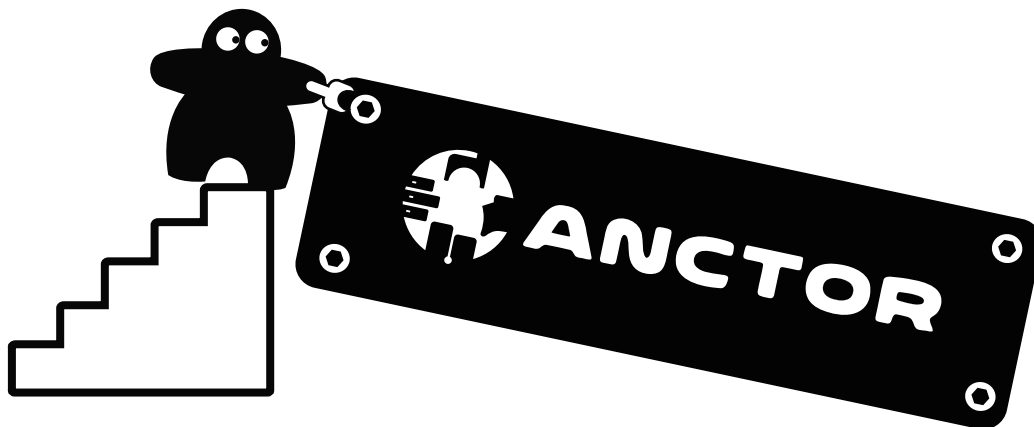

PUZZEL YOUR HOUSE

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.