

# KINCAID®

—SOLID WOOD SINCE 1946—

www.kincaidfurniture.com

phone :828-728-3261.

## ASSEMBLY INSTRUCTION




111-1500

DRISCOLL HALL TREE TOP

111-1499

DRISCOLL HALL TREE BASE

### HARDWARE LIST 111-1500

A		Bolt	Ø1/4"*1-1/4"	10 PCS
B		Lock Washer	Ø1/4"	10 PCS
C		Flat Washer	Ø1/4"*19D	10 PCS
D		Allen Key	100*50*4mm	1 PCS


### IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children

### INSTRUCTION:

STEP 1. Put the Hall tree top onto the top of the base, back edge is flush with each other.

STEP 2. Assemble the Driscoll Hall Tree support on the back with bolt (A), lock washer (B), flat washer (C) and tighten with allen key (D). See Figure 1.

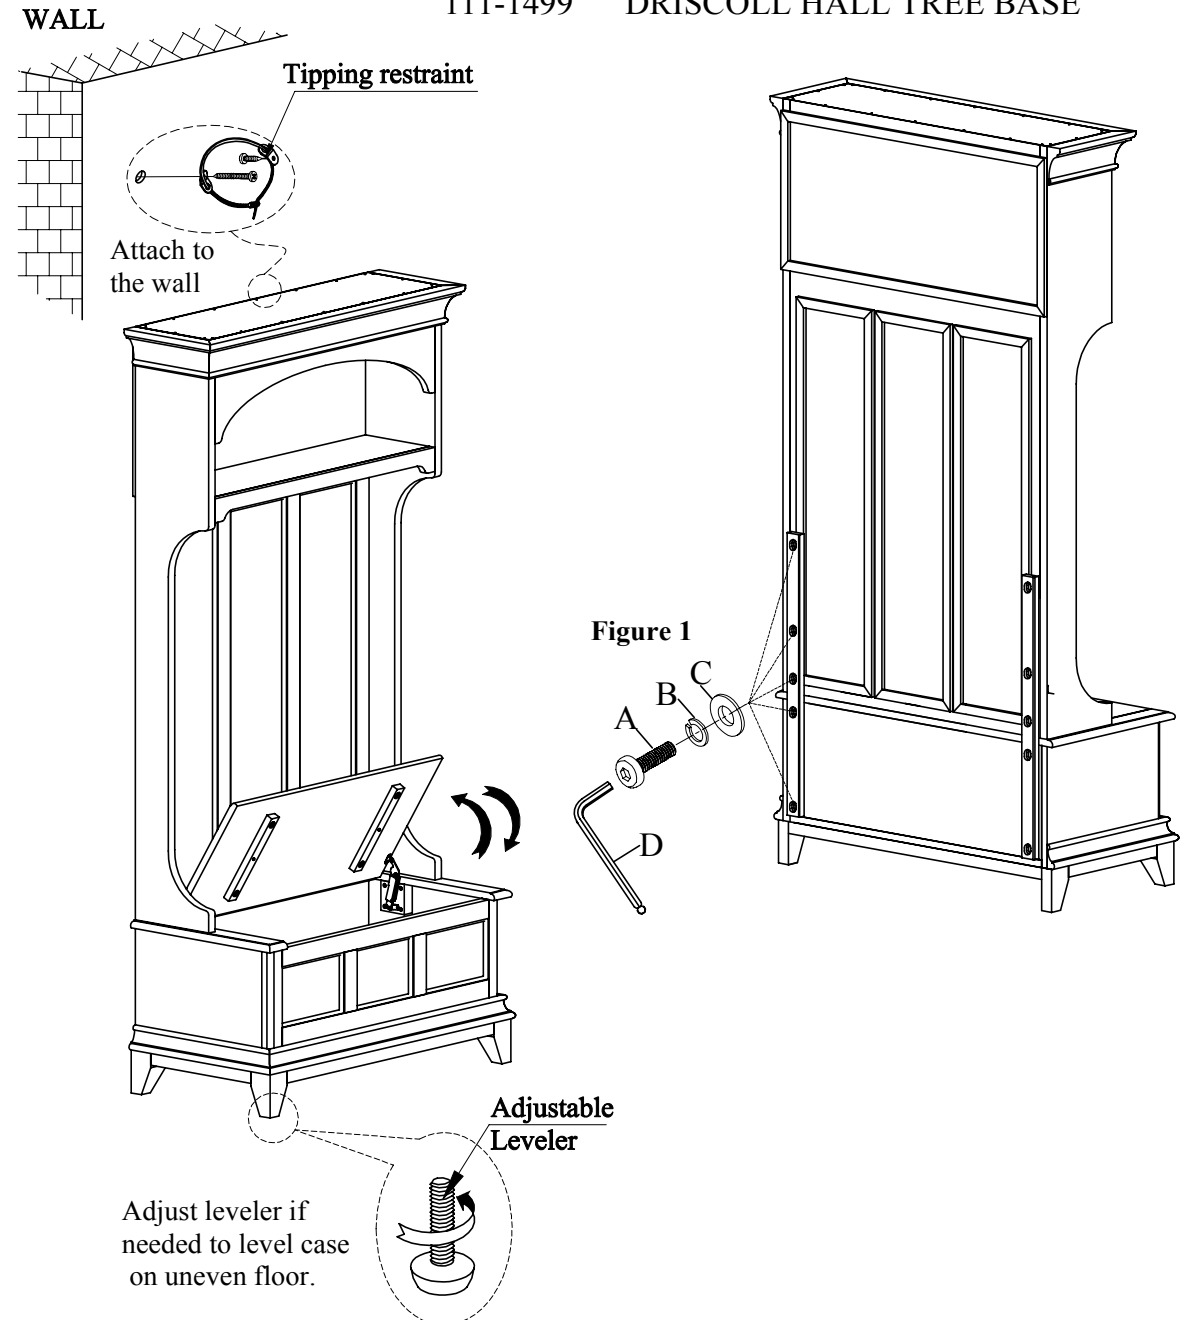

MADE IN VIETNAM

# KINCAID®





—SOLID WOOD SINCE 1946—

www.kincaidfurniture.com

phone :828-728-3261.

## TIPPING RESTRAINT ASSEMBLY INSTRUCTIONS

111-1500 DRISCOLL HALL TREE TOP  
111-1499 DRISCOLL HALL TREE BASE

HARDWARE LIST			
CODE	DESCRIPTION		QTY
A	 Brackets		2
B	 Screw Ø8*5/8"		1
C	 Screw Ø8 *2"		1
D	 Nylon Strap		1


### IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children

### INSTRUCTION:

This tip restraint must be attached to a wall stud using the 2" screw enclosed

1. Attach a bracket (A) to the back top rail of the furniture using the 5/8" screw (B) provided,
2. Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw (C) provided, through the smaller hole.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end draw it though until all slack is removed.
5. Confirm that the strap is securely laced and locked.

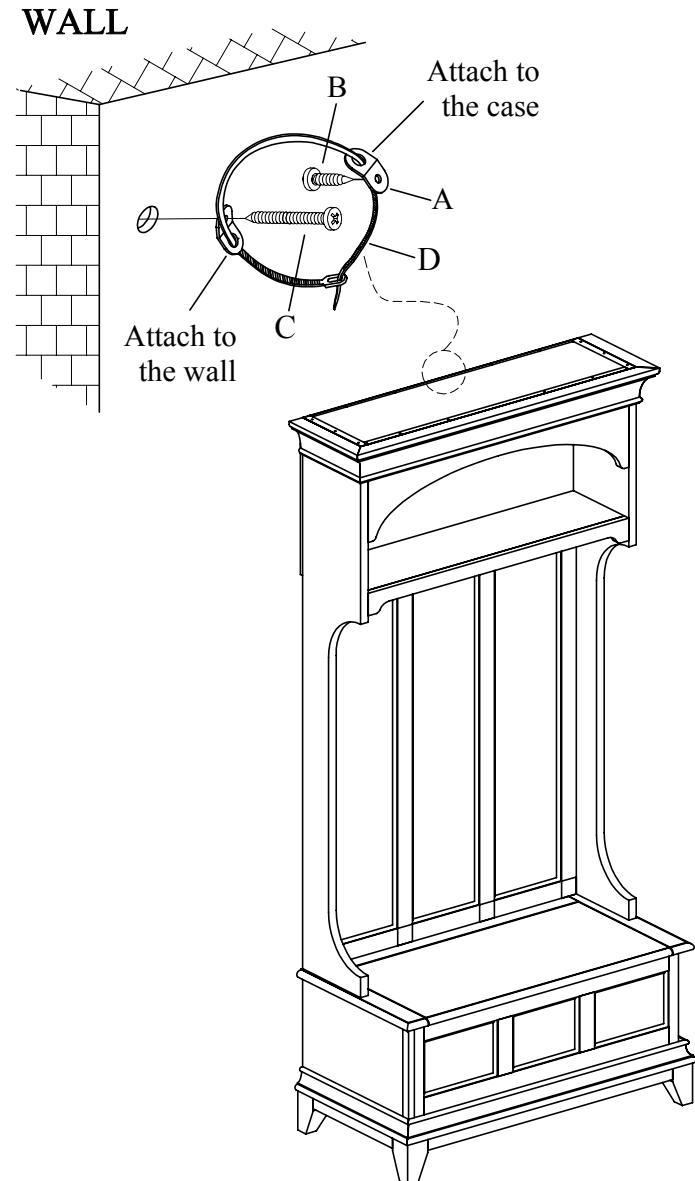

MADE IN VIETNAM