







Assembly Instructions

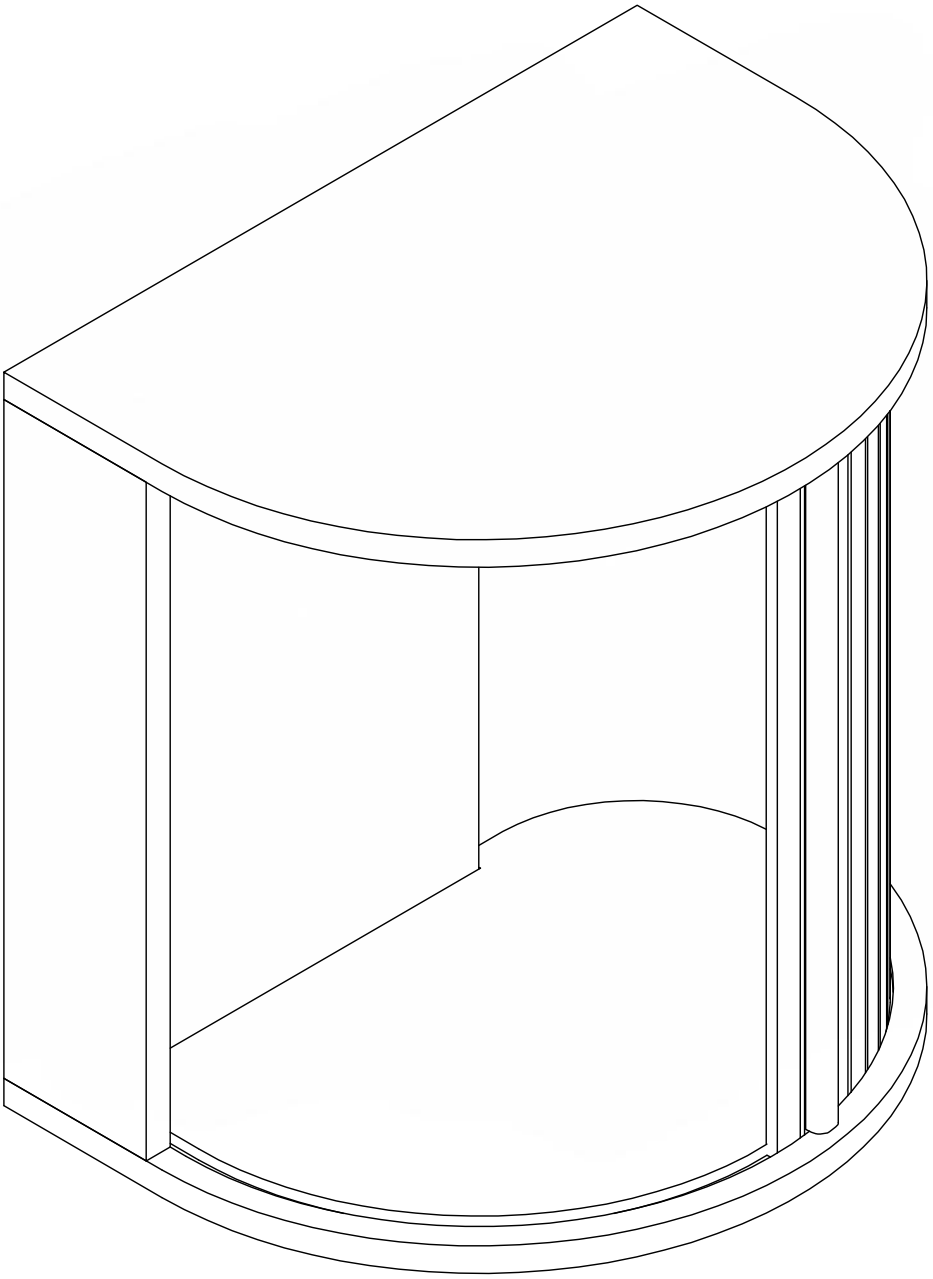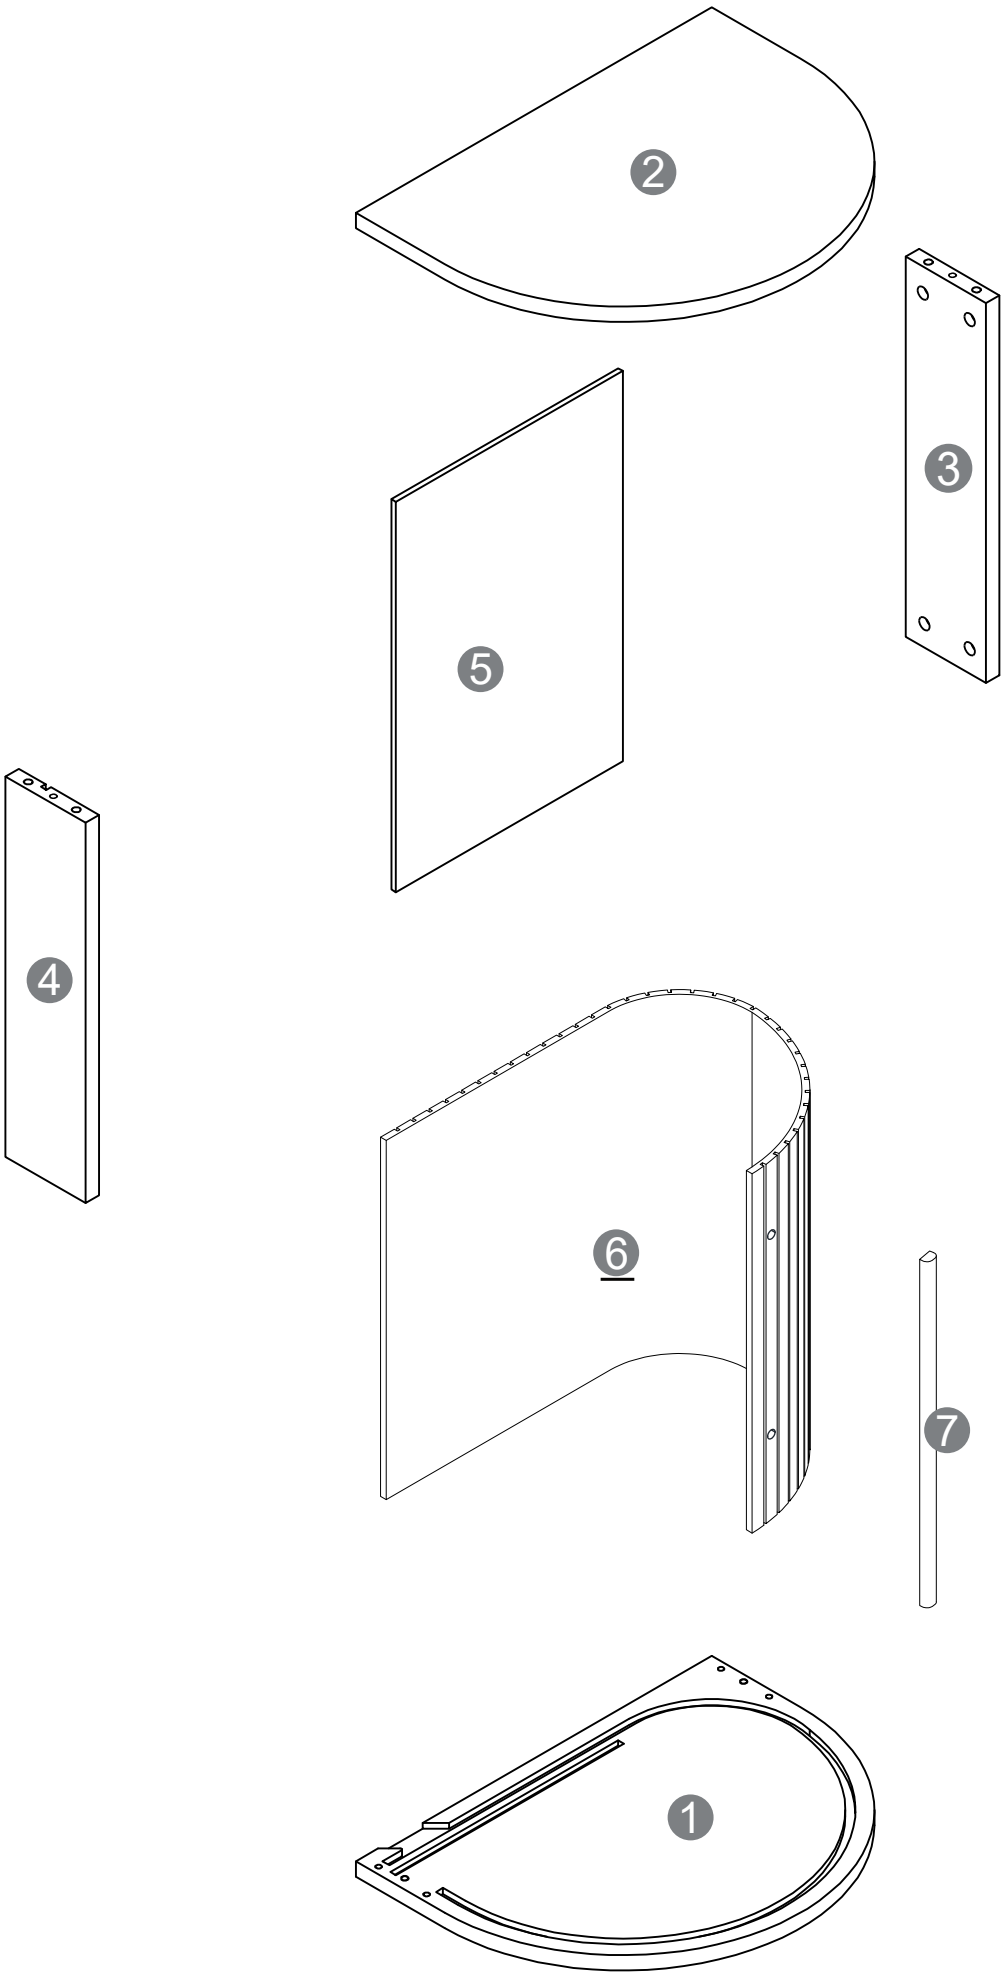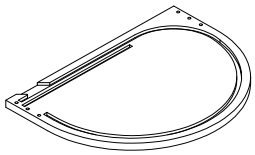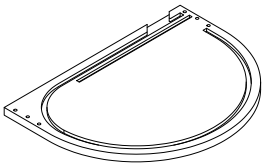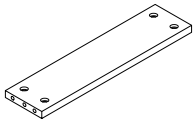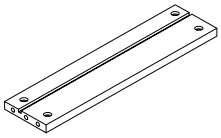
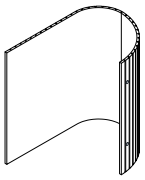


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE


We will stand behind we sell. If you have any questions about this item, please do not hesitate to contact us



2
3
5
4
6
7
1


Item no.	Reference Image	Qty.
1		X1
2		X1
3		X1
4		X1
5		X1
6		X1
7		X1


Item no.	Reference Image	Qty.
A	 Cam Bolt Ø6x35mm	X8
B	 Cam Lock Ø15x10mm	X8
C	 Screw M4x16mm	X4
D	 Screw M4x35mm	X3
E	 Wood Dowel Ø8x30mm	X4
F	 M5x14mm	X2
G		X3
H	 Screw M4x14mm	X2
I		X1
J		X2

STEP 1

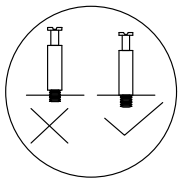





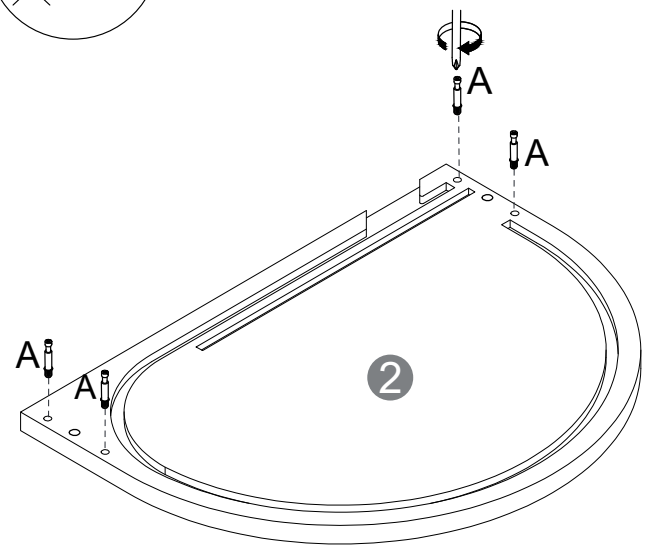


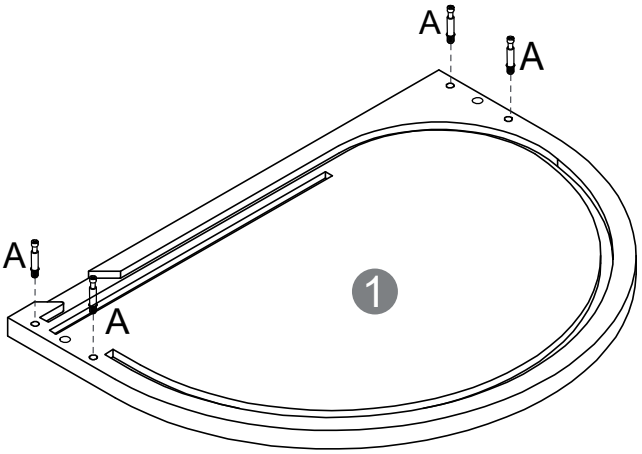


STEP 2

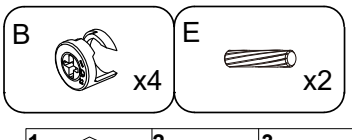

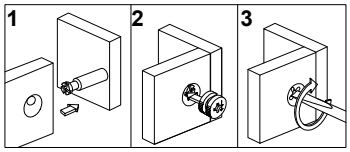


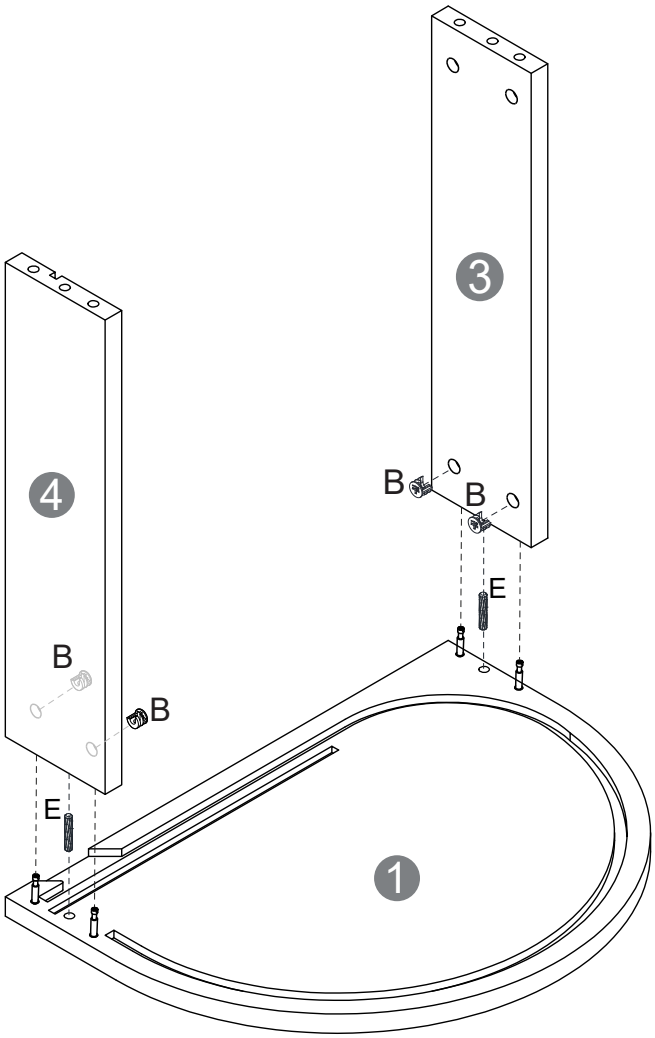


STEP 3

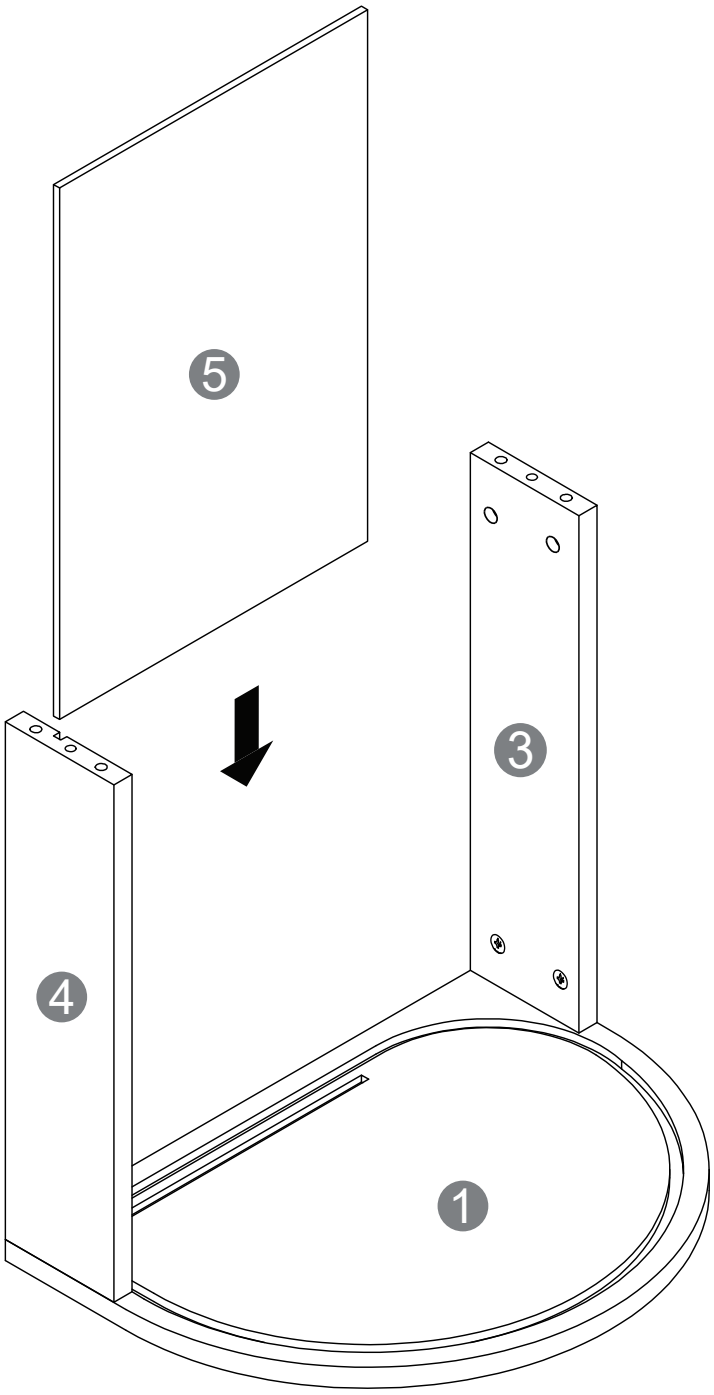



STEP 4

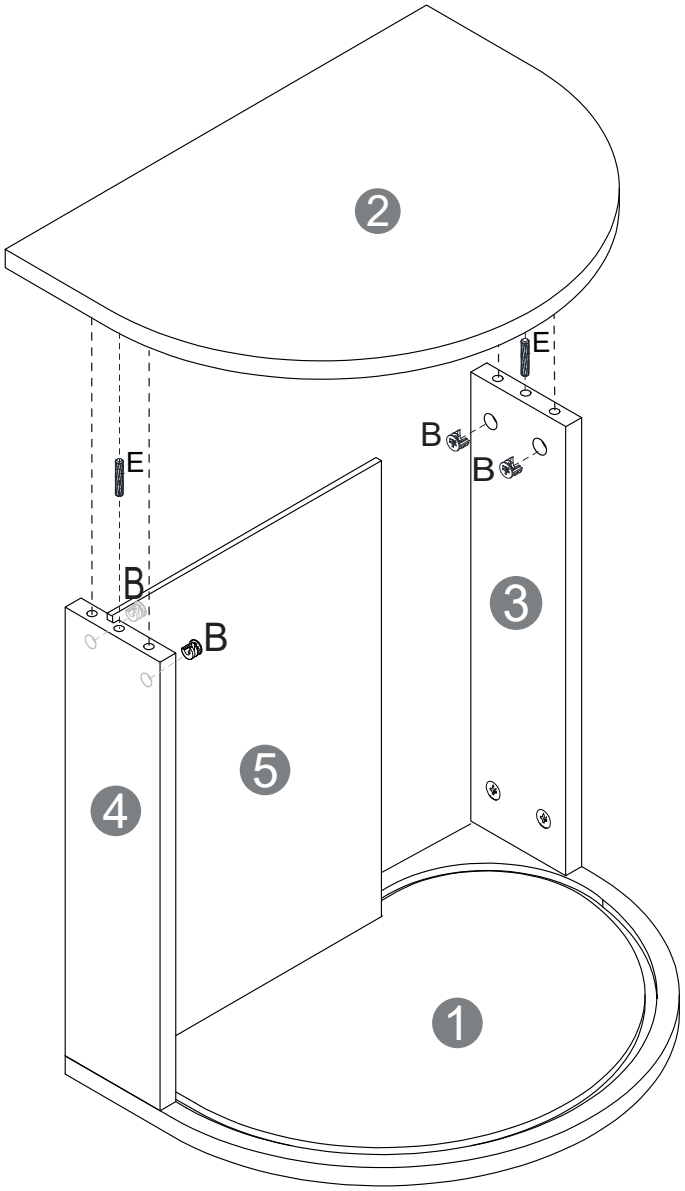

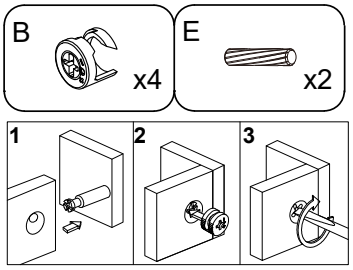



STEP 5

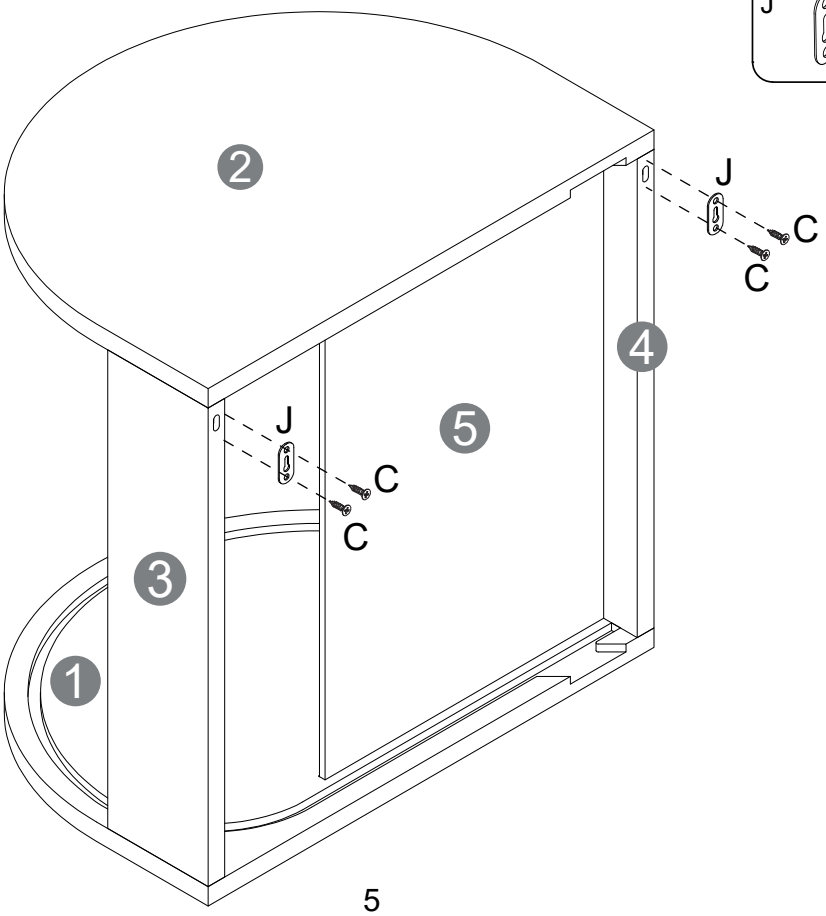

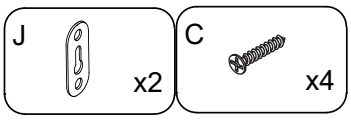


STEP 6



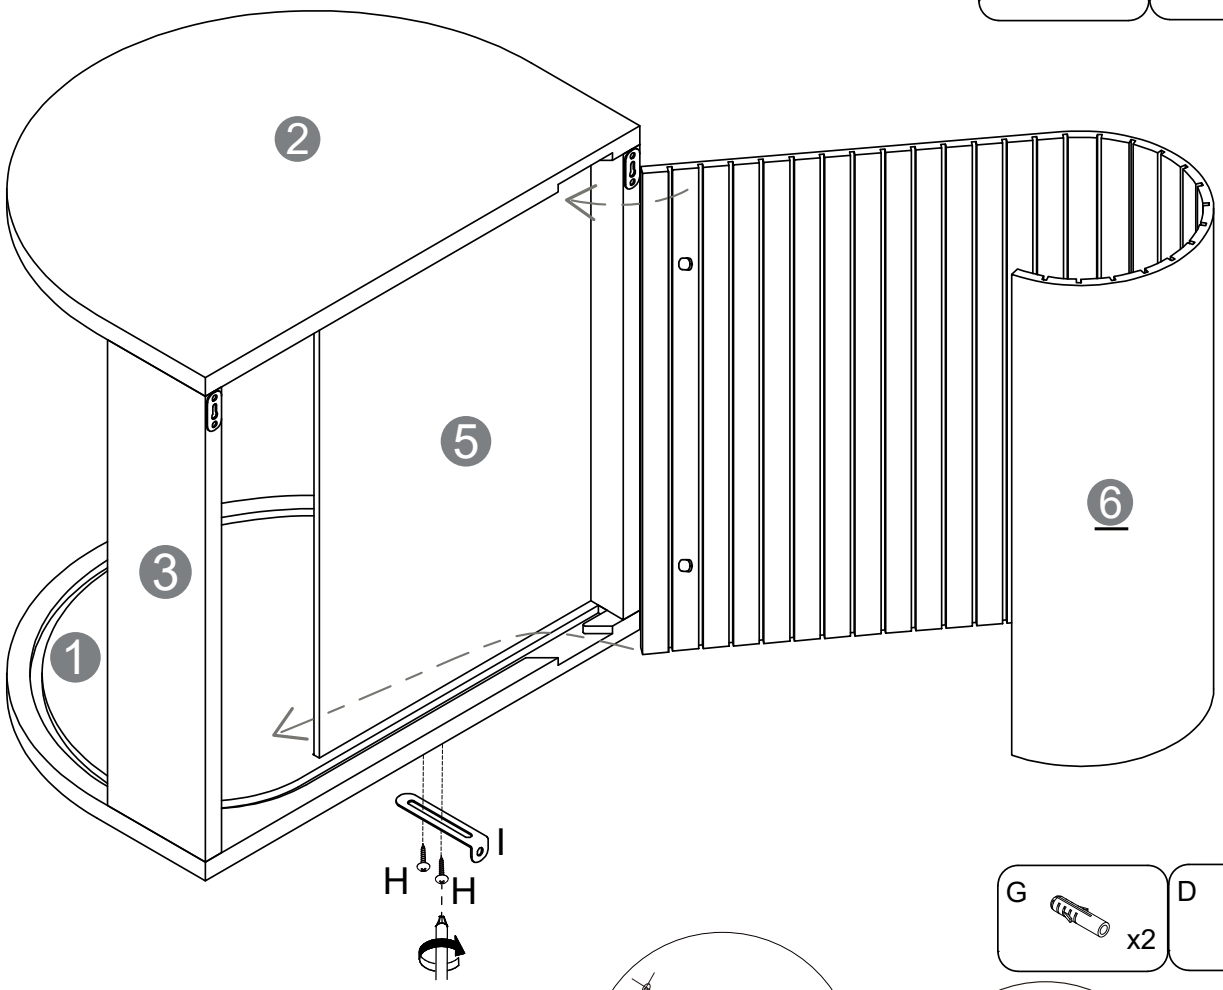

STEP 7

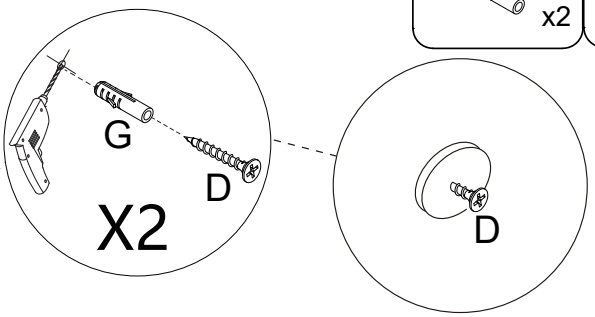

leaving 0.32" of the screws exposed.

STEP 8

