
Make Up Tabble

Assembly Instructions - Please keep for future reference

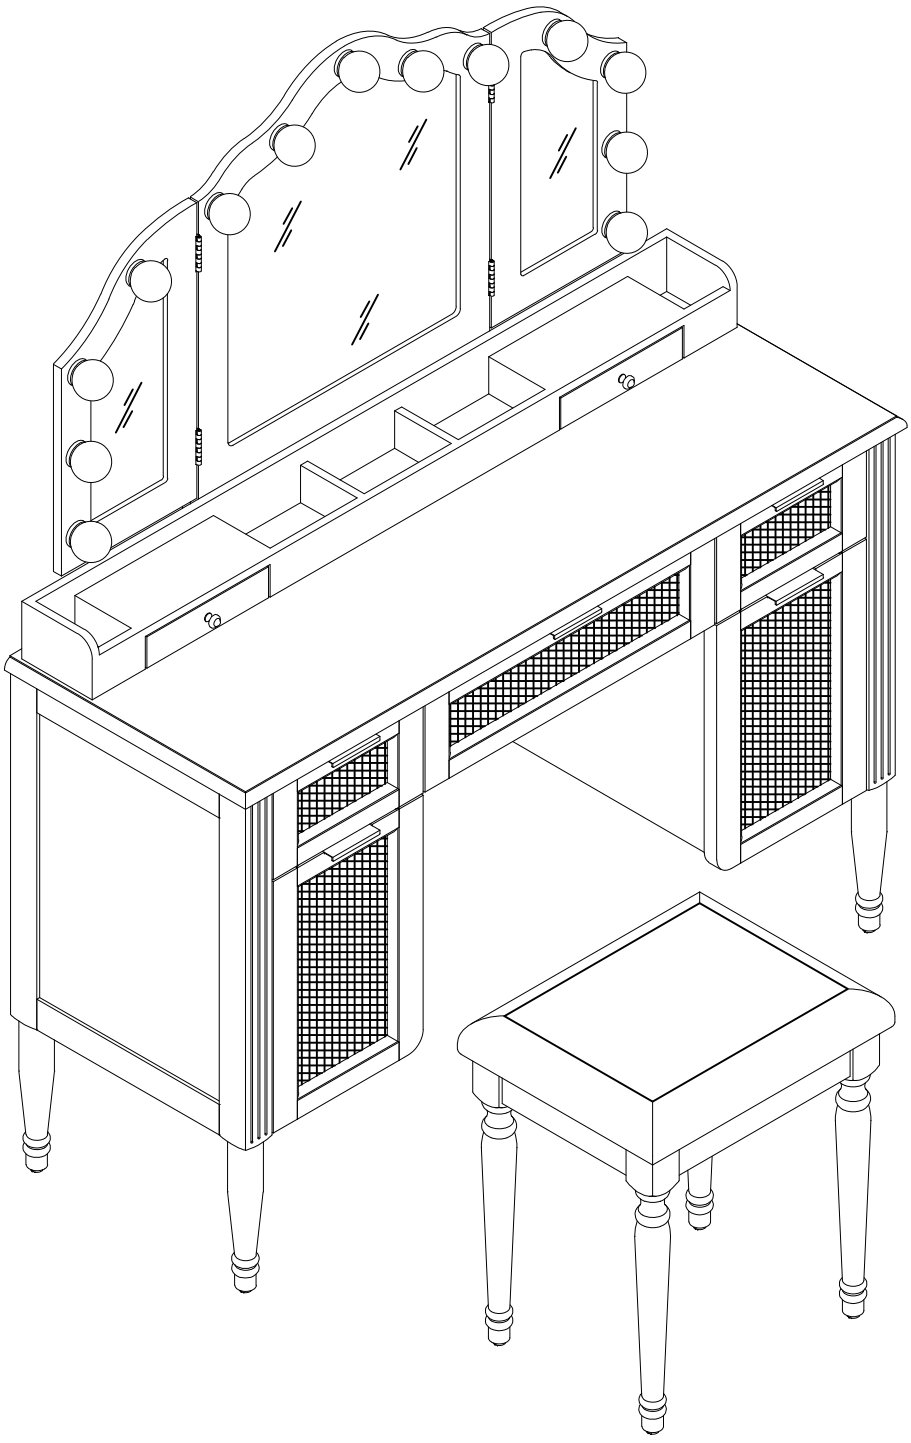

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions


















To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings

Please check you have all the panels listed below








Note:The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

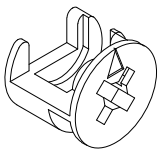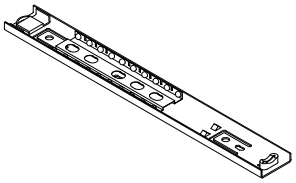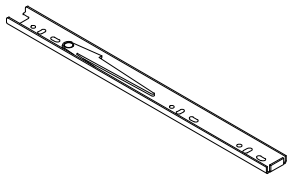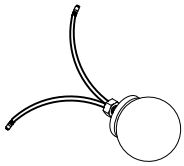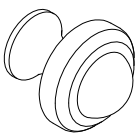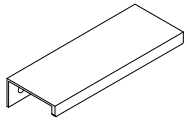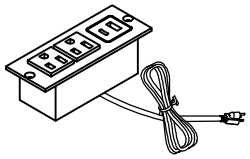A QTY: 40 	B QTY: 40 	C QTY: 21  Ø8*30mm	D QTY: 36  Ø6*12mm
CAM BOLT	CAM LOCK	WOOD DOWEL	FLAT HEAD SCREW
E1 QTY: 6  L=300*35mm	E2 QTY:6  L=300*35mm	F QTY: 30  Ø6*12mm	G QTY: 4 
BALL BEARING GLIDE	BALL BEARING GLIDE	FLAT HEAD SCREW	HINGES
H QTY: 6  Ø8*19mm	I QTY:13 	J QTY: 13 	K QTY: 1 
FLAT HEAD SCREW	LIGHT BULB	HEX NUT	LED CONTROLLER
L QTY: 1 	M QTY: 2 	N QTY: 2  Ø8*12mm	O QTY: 5 
WRENCH	HANDLE	BOLT	HANDLE
P QTY: 1 	Q QTY: 8  Ø8*25mm	R QTY: 21  Ø8*35mm	S QTY: 4 
POWER OUTLET	FLAT HEAD SCREW	FLAT HEAD SCREW	HOOK

Components - Fittings

Please check you have all the panels listed below


Note:The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

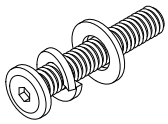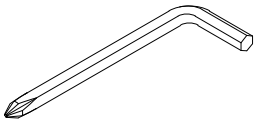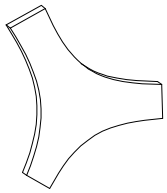T QTY: 28  Ø7*12mm	U QTY: 8  Ø1/4*32mm	V QTY: 8  Ø5/16*50mm	X QTY: 4 
FLAT HEAD SCREW	BOLT	BOLT	ANCHOR
Y QTY: 2 	Z QTY: 1 	W QTY: 1 	
METAL TIES	HEX KEY	CAM TOOL	

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

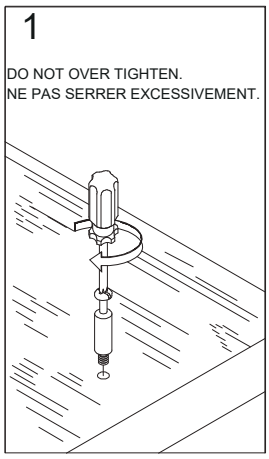

Step 2


Push the male camlock into the entry hole.

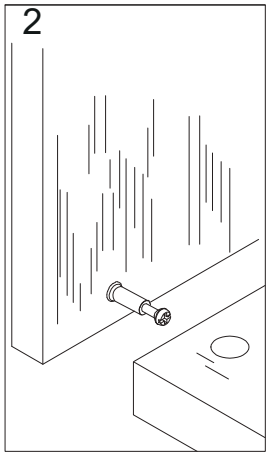

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

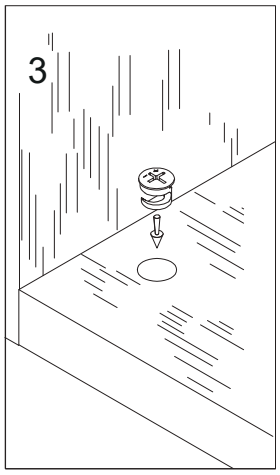


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

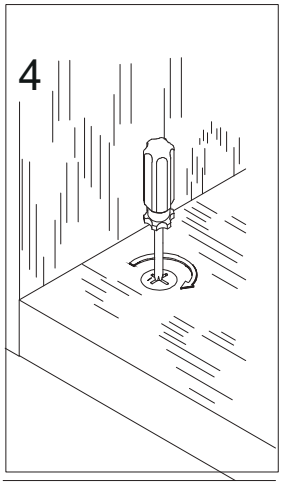


COMPONENTS - KEY DIAGRAM

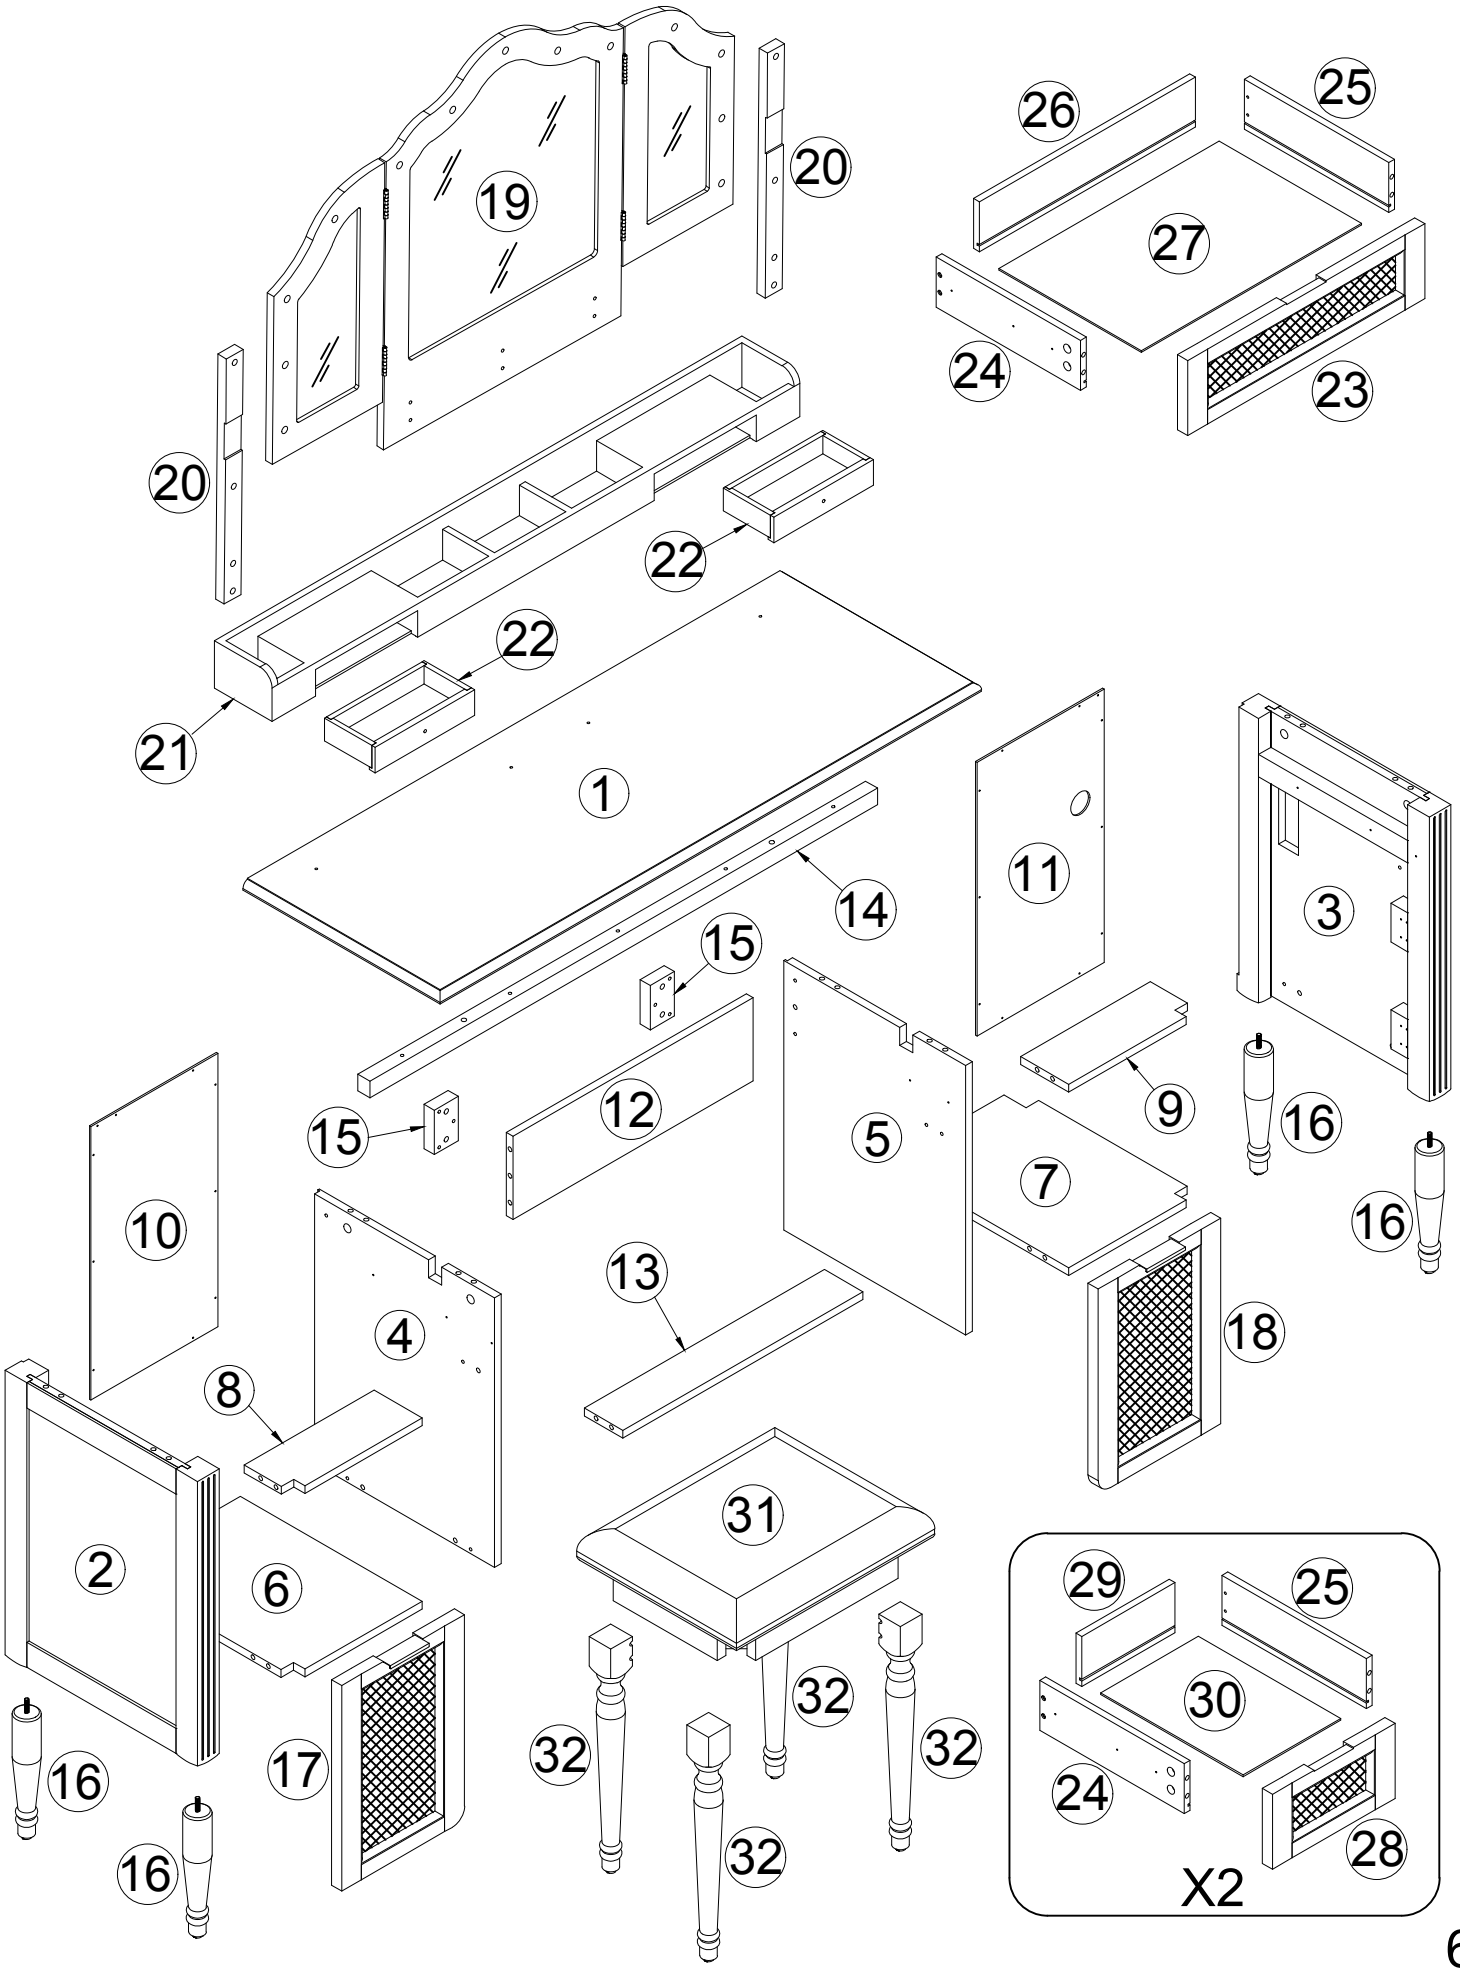


COMPONENTS - KEY DIAGRAM

1

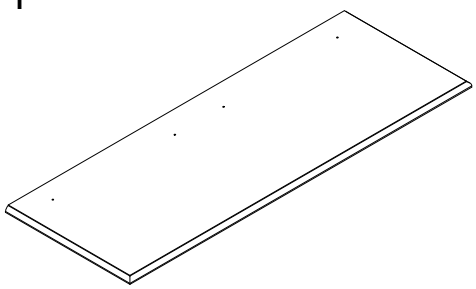


TOP PANEL QTY: 1

2

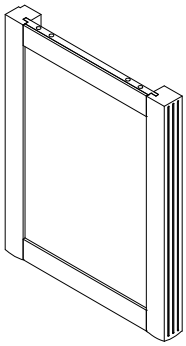


LEFT SIDE FRAME QTY: 1

3

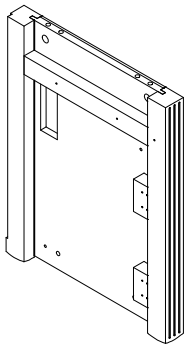


RIGHT SIDE FRAME QTY: 1

4

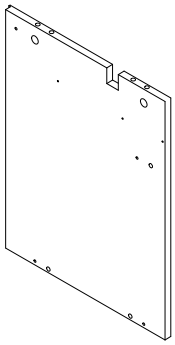


LEFT PARTITION QTY: 1

5

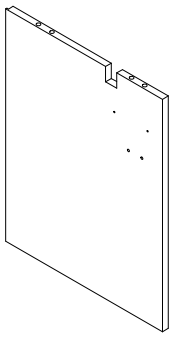


RIGHT PARTITION QTY: 1

6

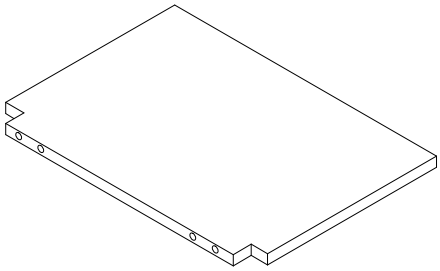


LEFT BOTTOM PANEL QTY: 1

7

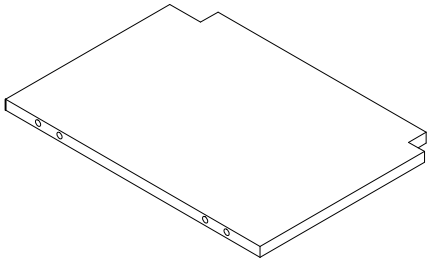


RIGHT BOTTOM PANEL QTY: 2

8

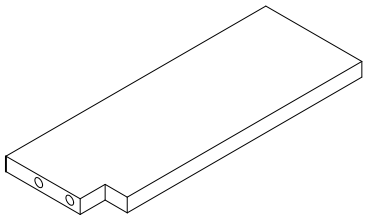


LEFT FRONT RAIL QTY: 1

9

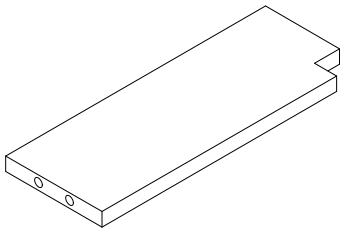


RIGHT FRONT RAIL QTY: 1

10

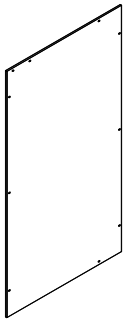


LEFT BACK PANEL QTY: 1

11

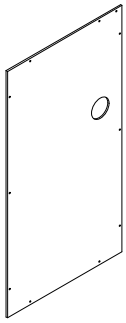


RIGHT BACK PANEL QTY: 1

12

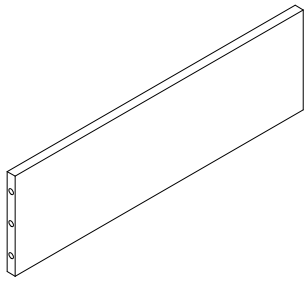


BACK RAIL QTY: 1

13

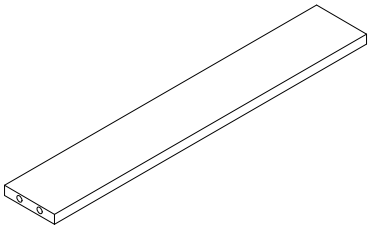


MIDDLE FRONT RAIL QTY: 1

14

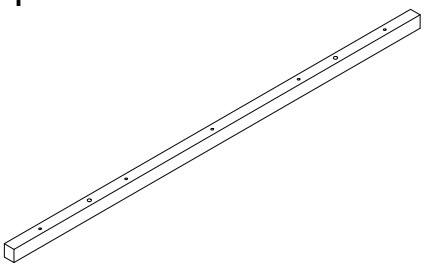

TOP PANEL SUPPORT RAIL QTY: 1


15



CORNER BLOCK QTY: 2


COMPONENTS - KEY DIAGRAM

16




CABINET LEG QTY: 4

17

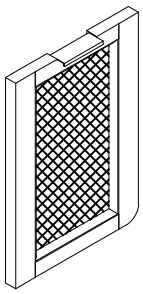


LEFT DOOR QTY: 1

18

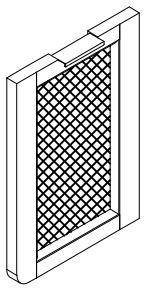


RIGHT DOOR QTY: 1

19

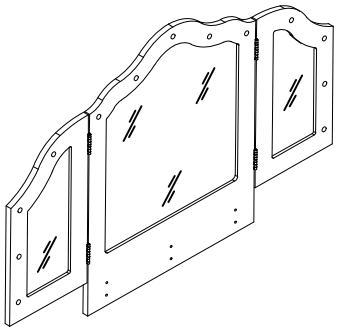


MIRROR FRAME QTY: 1

20




MIRROR SUPPORT RAILS QTY: 2

21

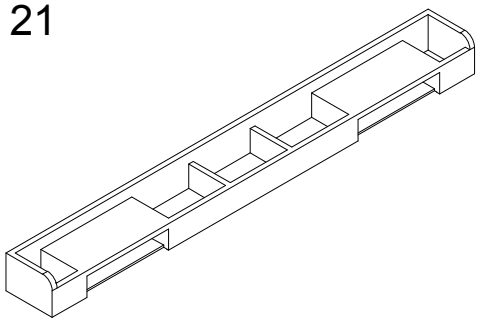


TOP STORAGE FRAME QTY: 1

22

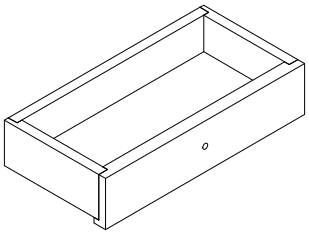


SMALL TOP DRAWER QTY: 2

23

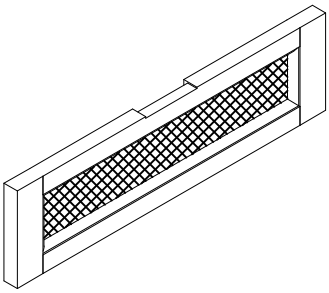


DRAWER FRONT - LARGE QTY: 1

24

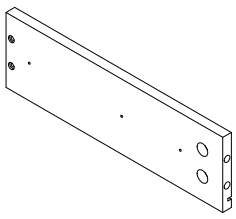


LEFT DRAWER SIDE QTY: 3

25

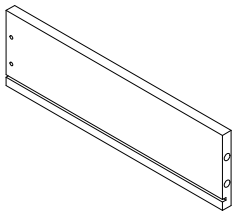


RIGHT DRAWER SIDE QTY: 3

26

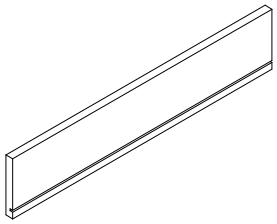


DRAWER BACK - LARGE QTY: 1

27

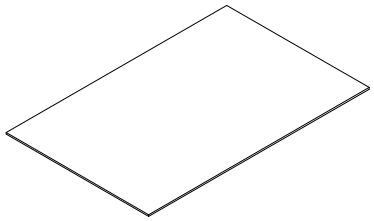


DRAWER BOTTOM - LARGE QTY: 1

28

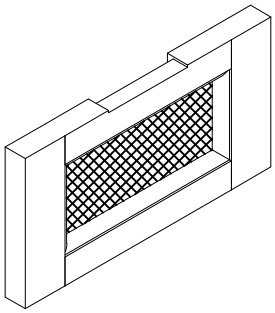


DRAWER FRONT - SMALL QTY: 2

29

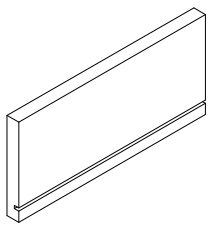


DRAWER BACK - SMALL QTY: 2

30

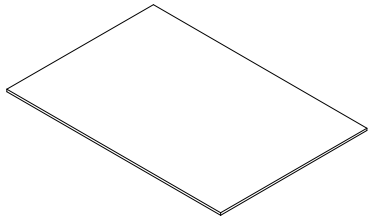


DRAWER BOTTOM - SMALL QTY: 2

COMPONENTS - KEY DIAGRAM

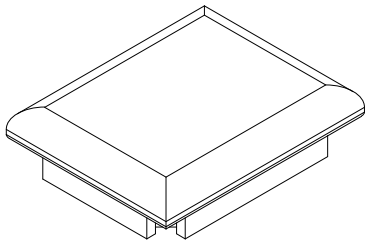
31	32	
		
STOOL SEAT FRAME QTY: 1	STOOL LEG QTY: 4	

Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.


Pay attention when connecting !
The sliding module must be at the front end.

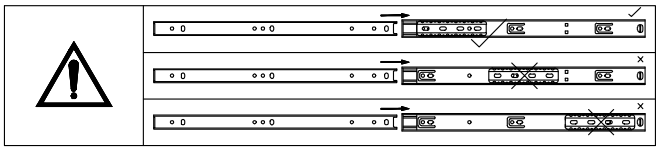


STEP 1 : Extend Slide
Extender la diapositiva

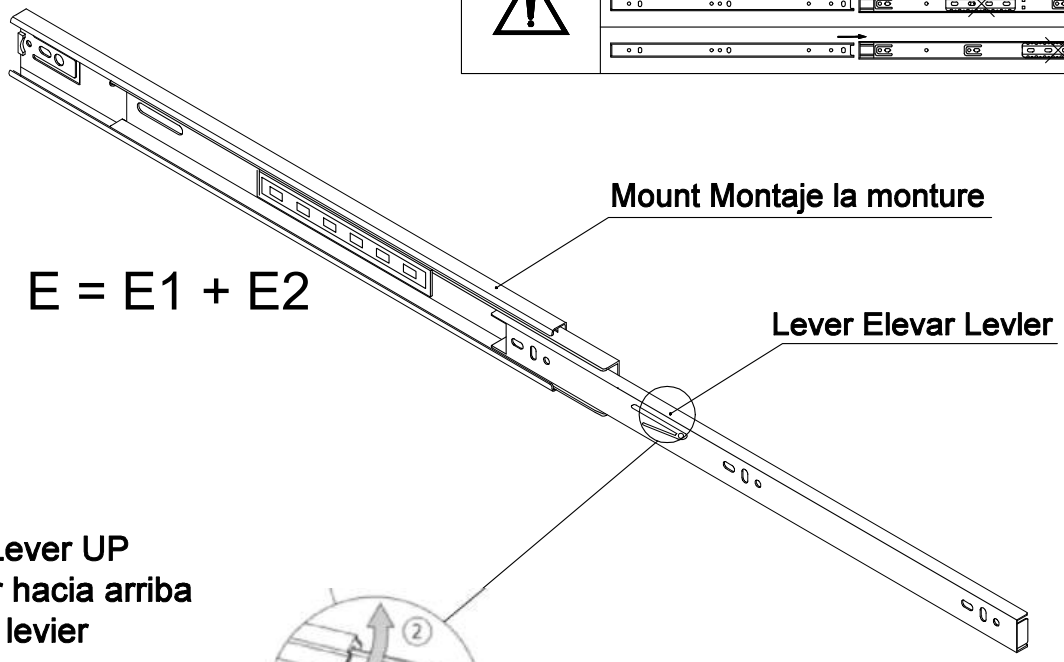

STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

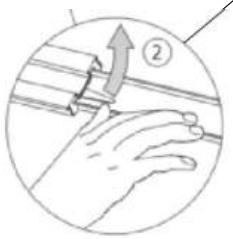


Push lever for the left of drawer ,
press the lever for the right of drawer.

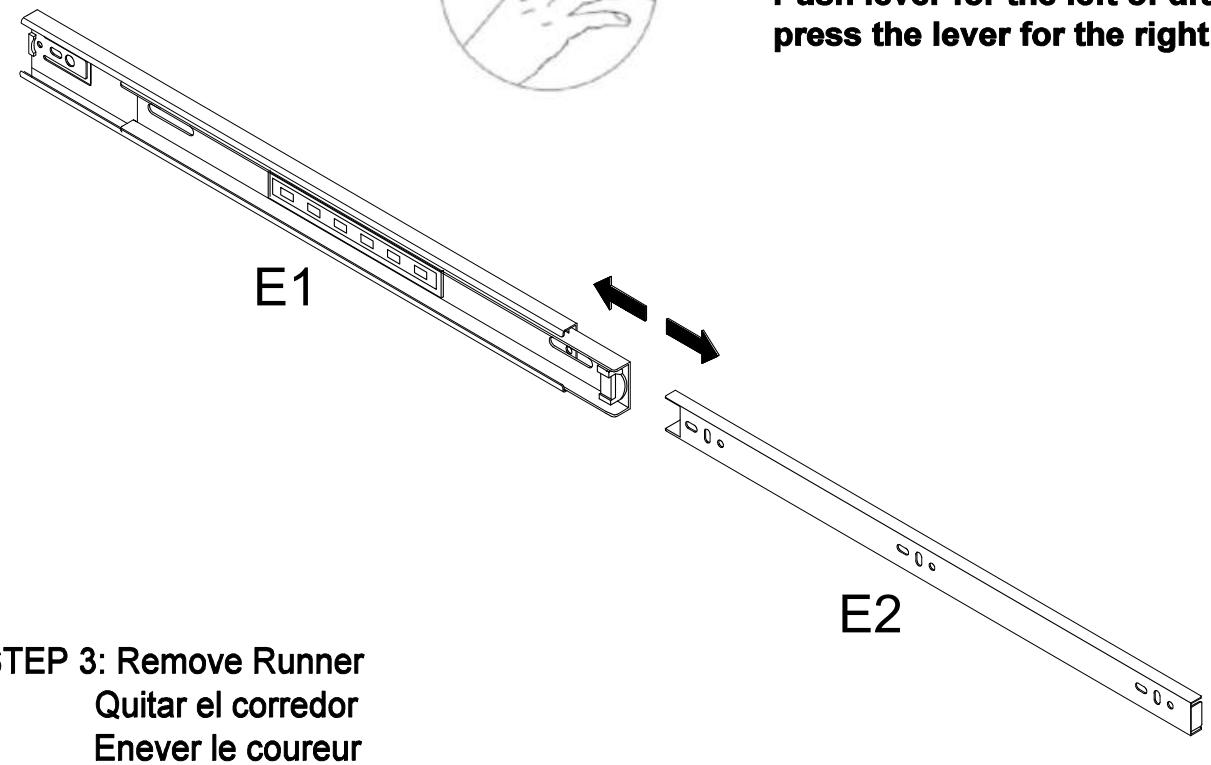



STEP 3: Remove Runner
Quitar el corredor
Enever le coureur

ASSEMBLY INSTRUCTIONS


STEP 1

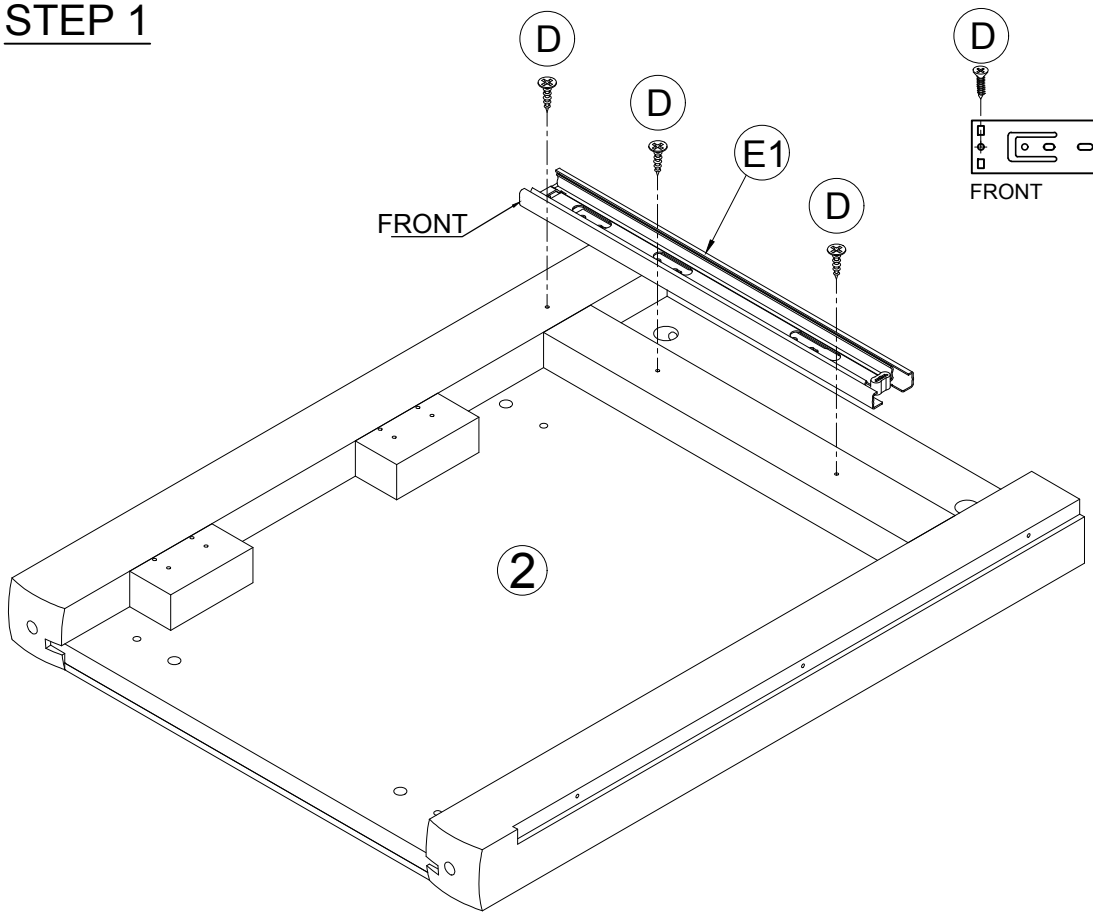


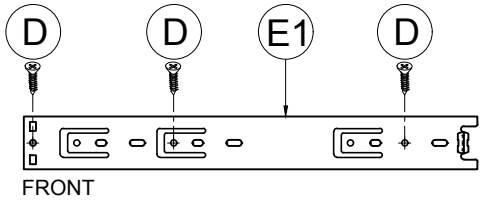


E1		1PC
D		3PCS

STEP 2

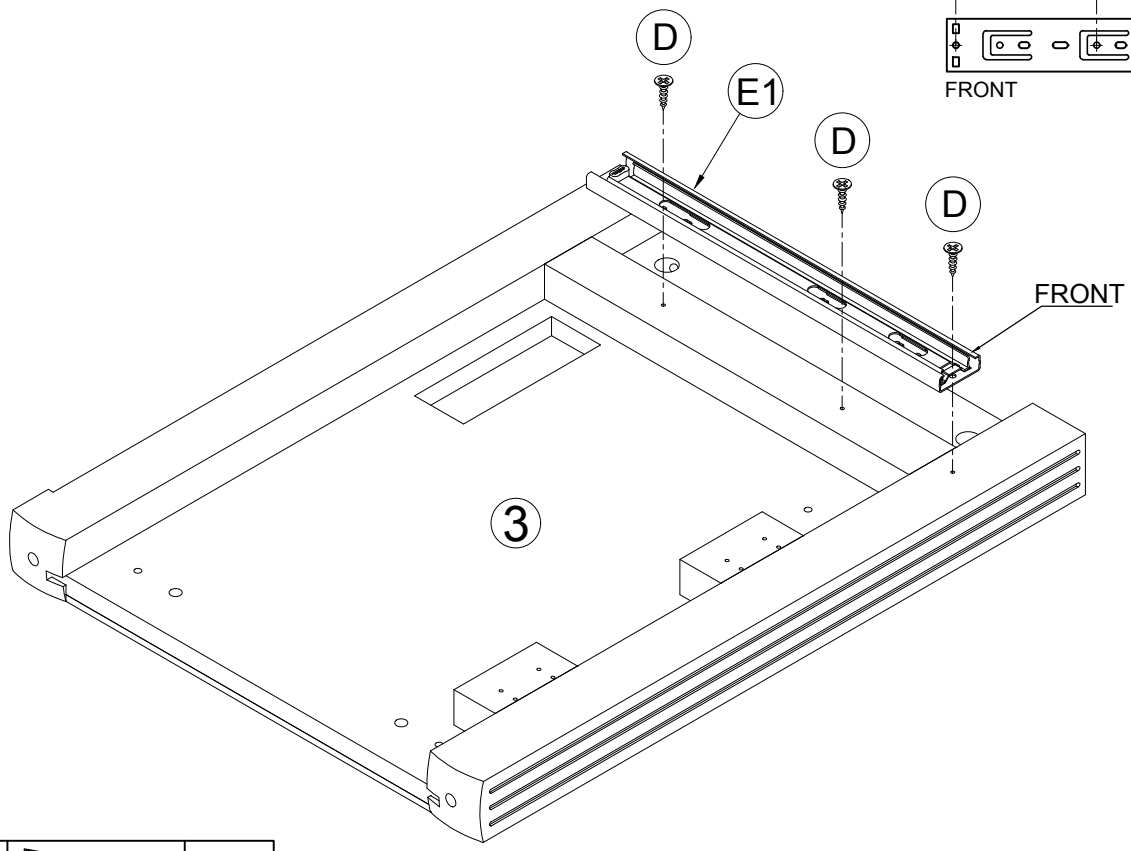


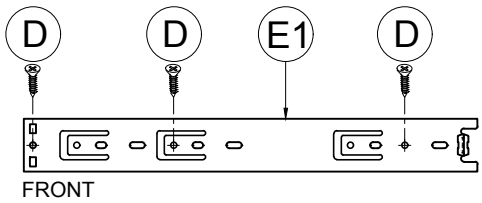

E1		1PC
D		3PCS


ASSEMBLY INSTRUCTIONS


STEP 3

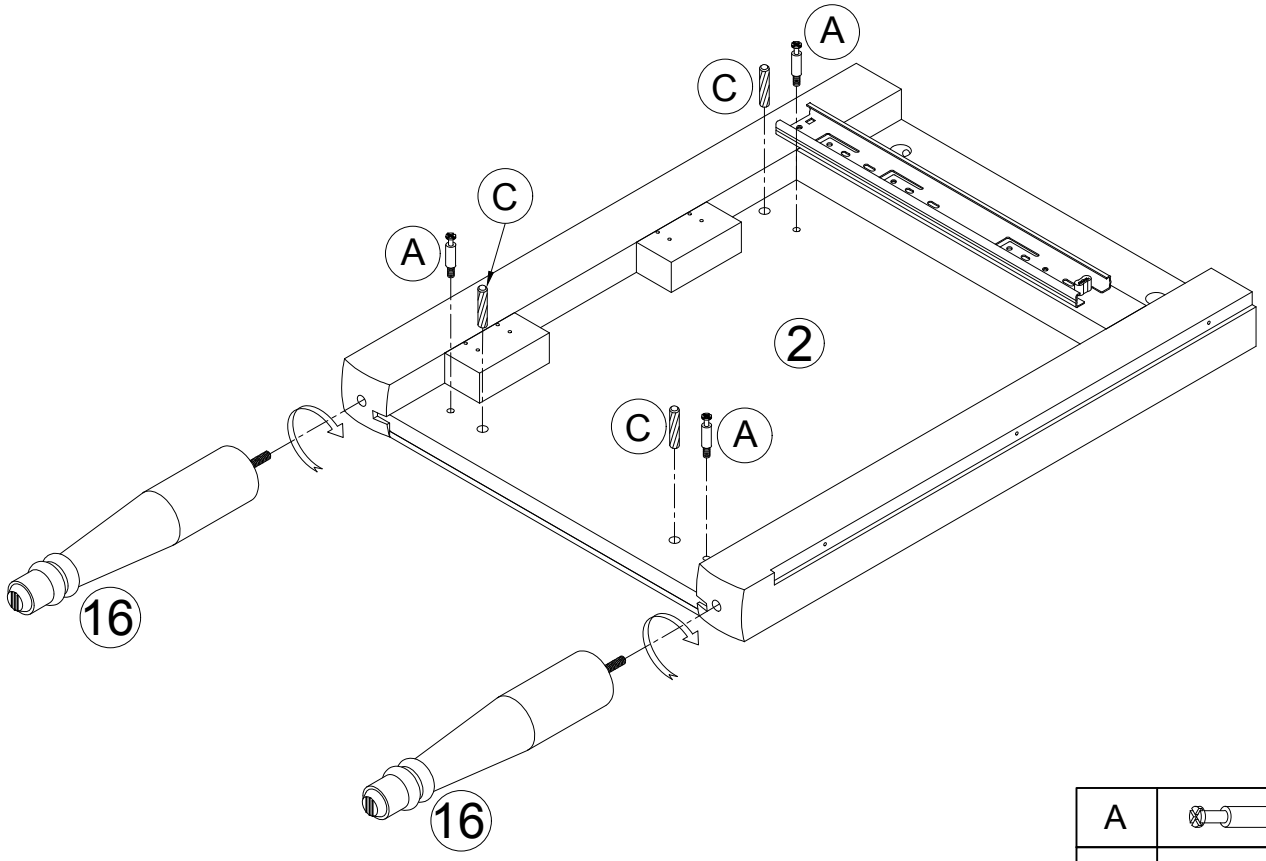

A		3PCS
C		3PCS


STEP 4

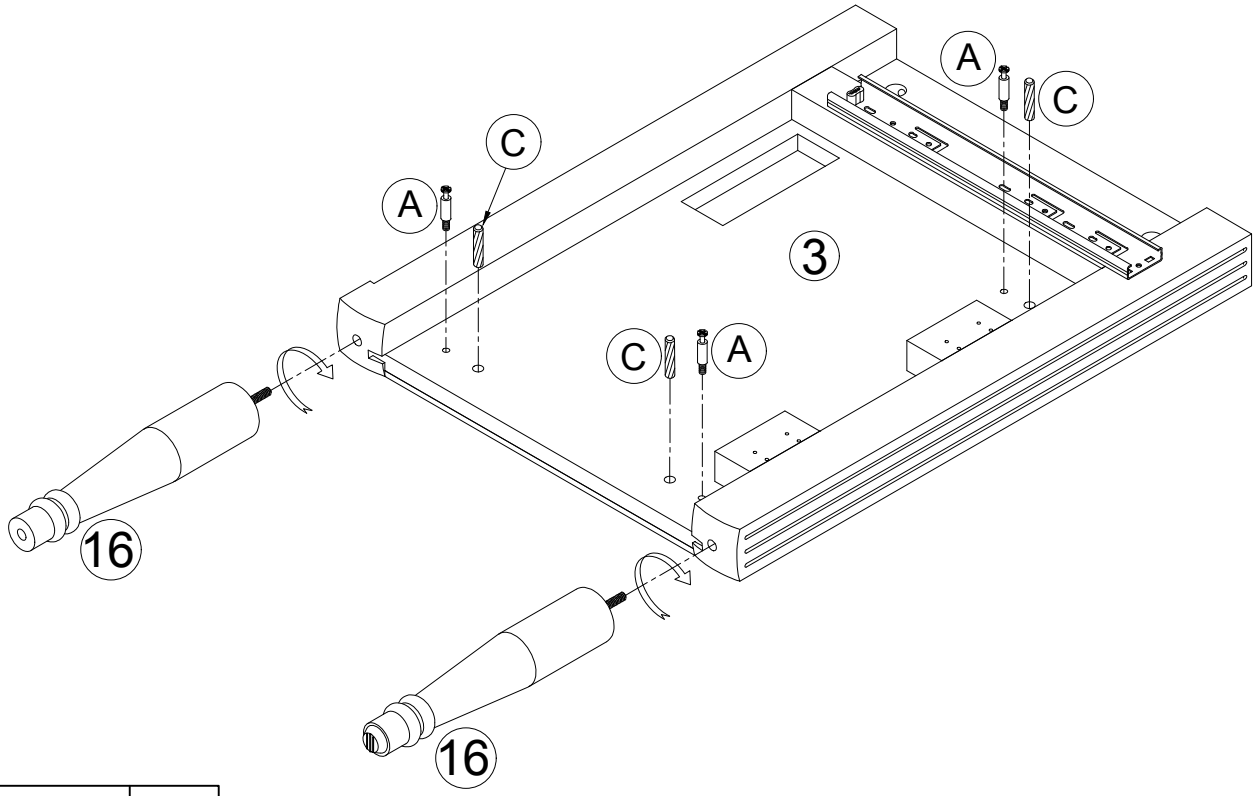

A		3PCS
C		3PCS


ASSEMBLY INSTRUCTIONS

STEP 5

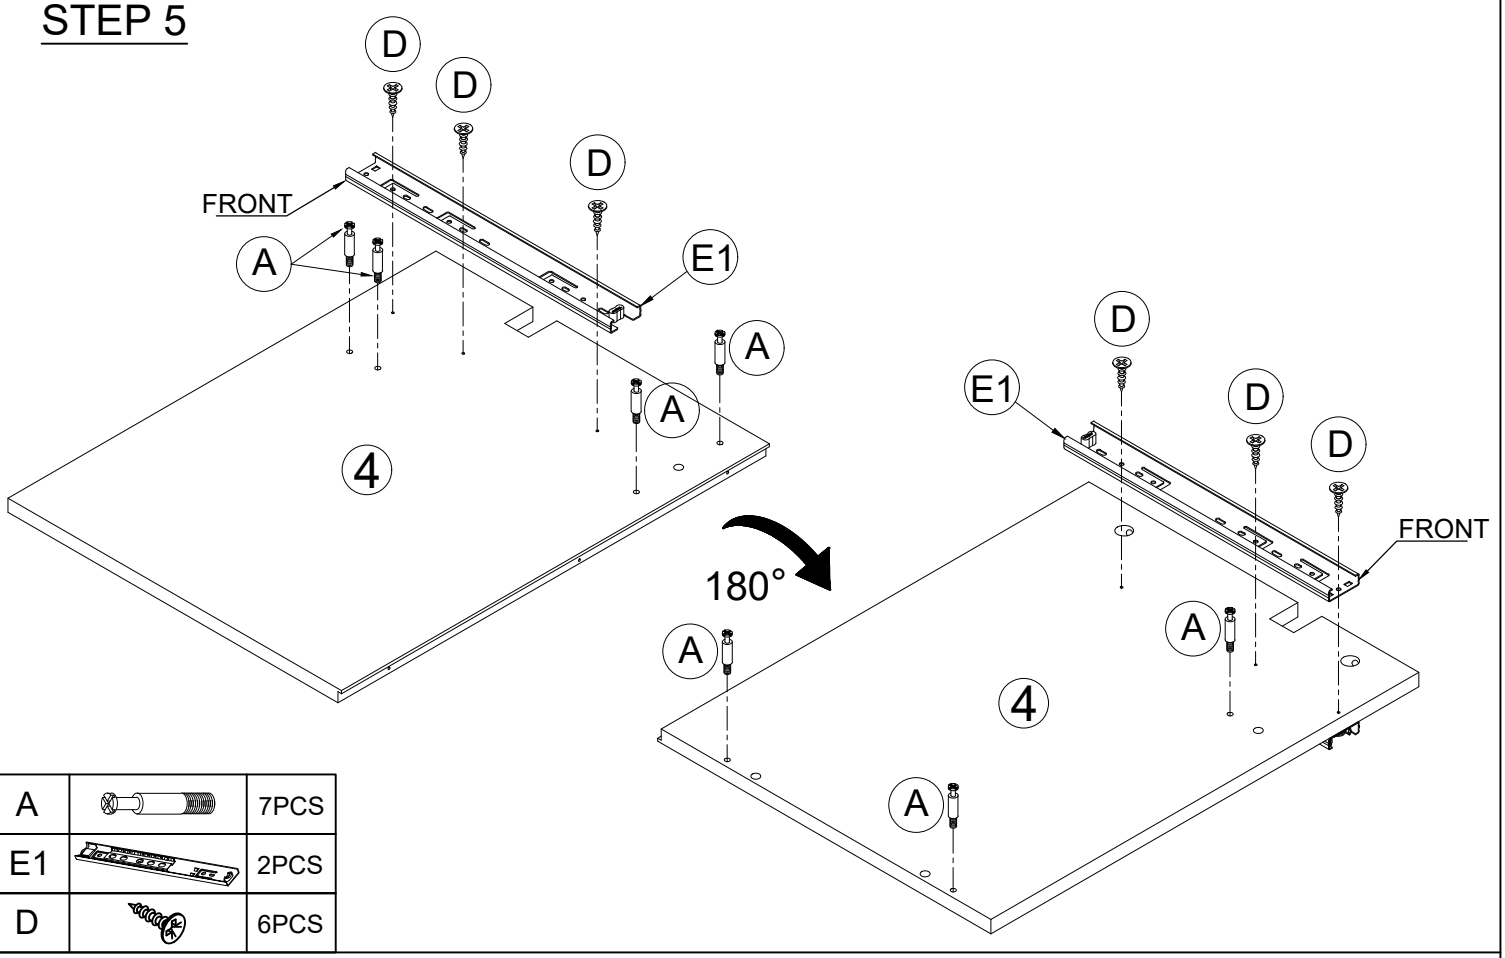

A		7PCS
E1		2PCS
D		6PCS


STEP 6

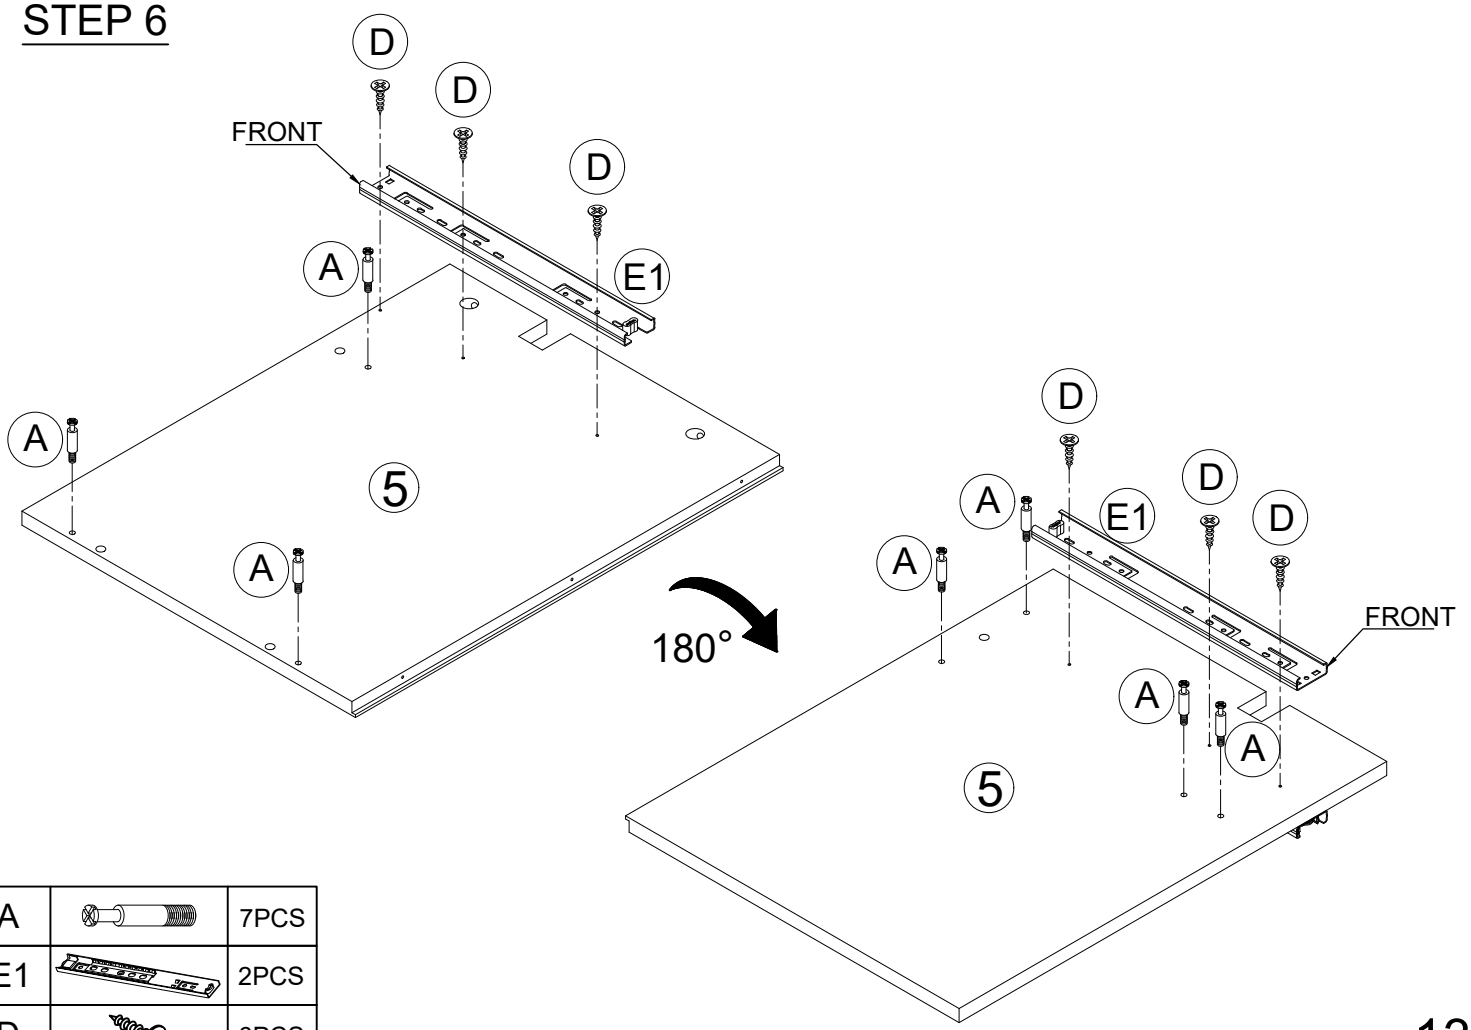

A		7PCS
E1		2PCS
D		6PCS


ASSEMBLY INSTRUCTIONS

STEP 7

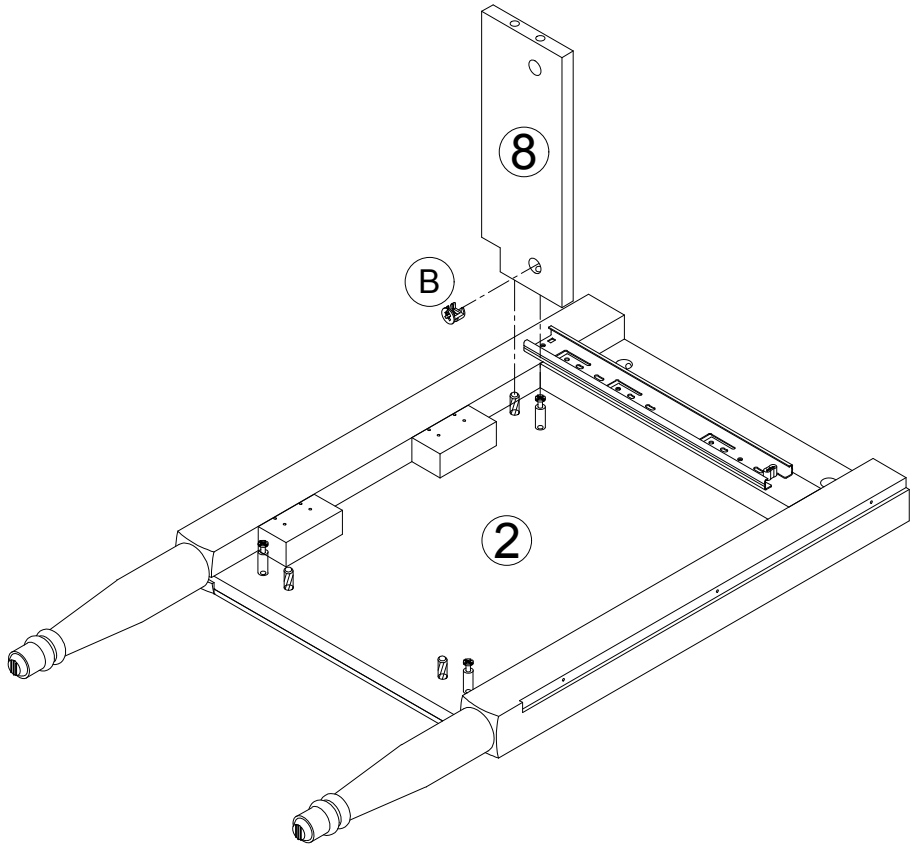

B		1PC


STEP 8

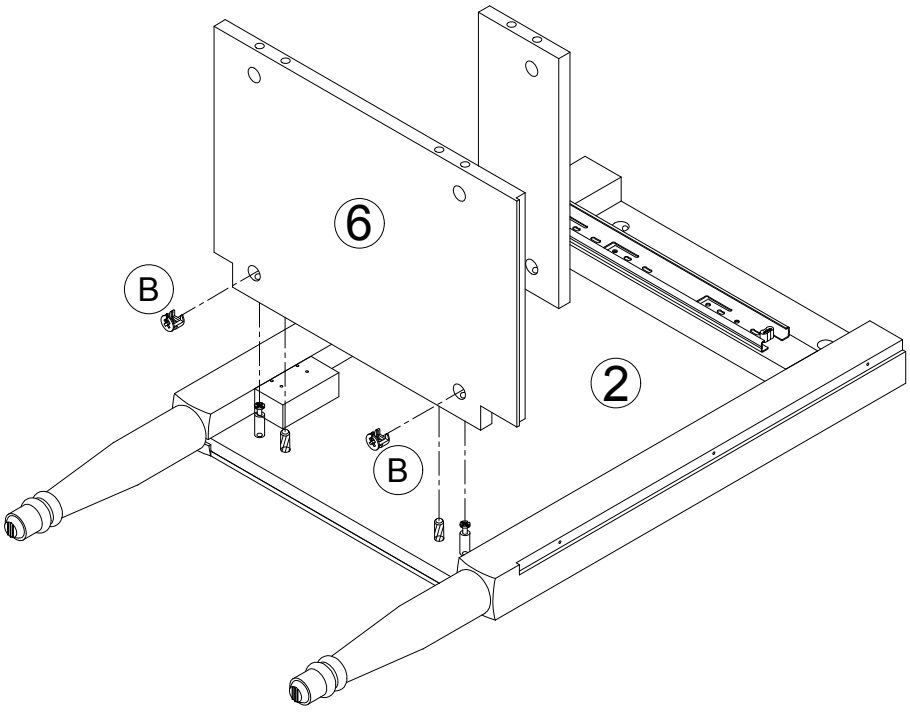

B		2PCS


ASSEMBLY INSTRUCTIONS

STEP 9

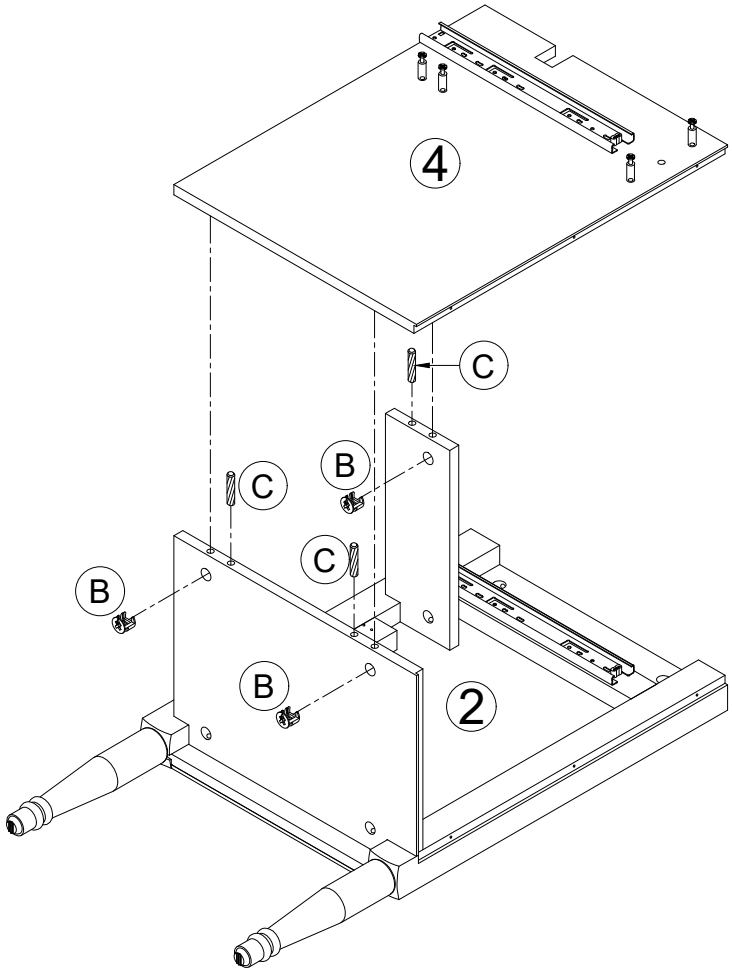

B		3PCS
C		3PCS


STEP 10

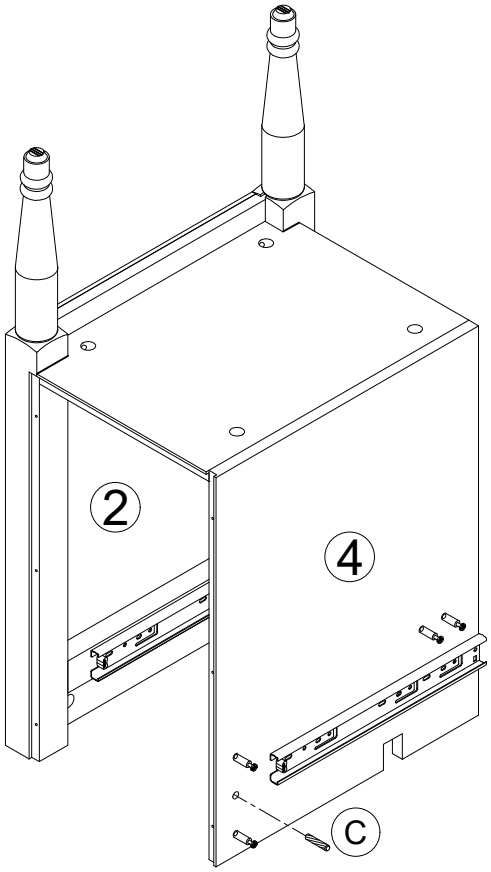

C		1PC


ASSEMBLY INSTRUCTIONS

STEP 11

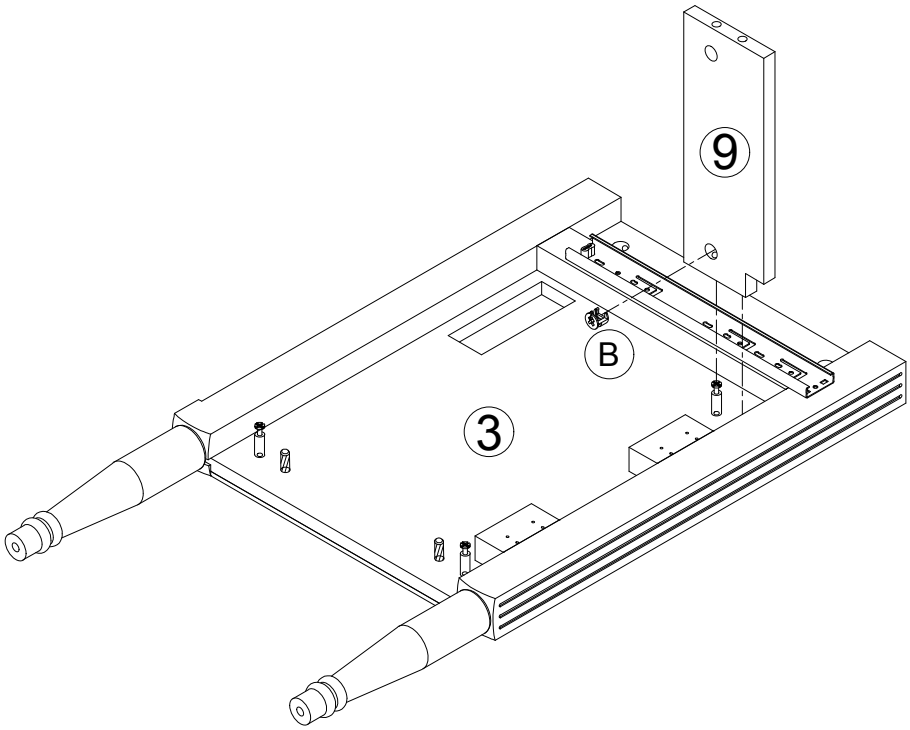

B		1PC


STEP 12

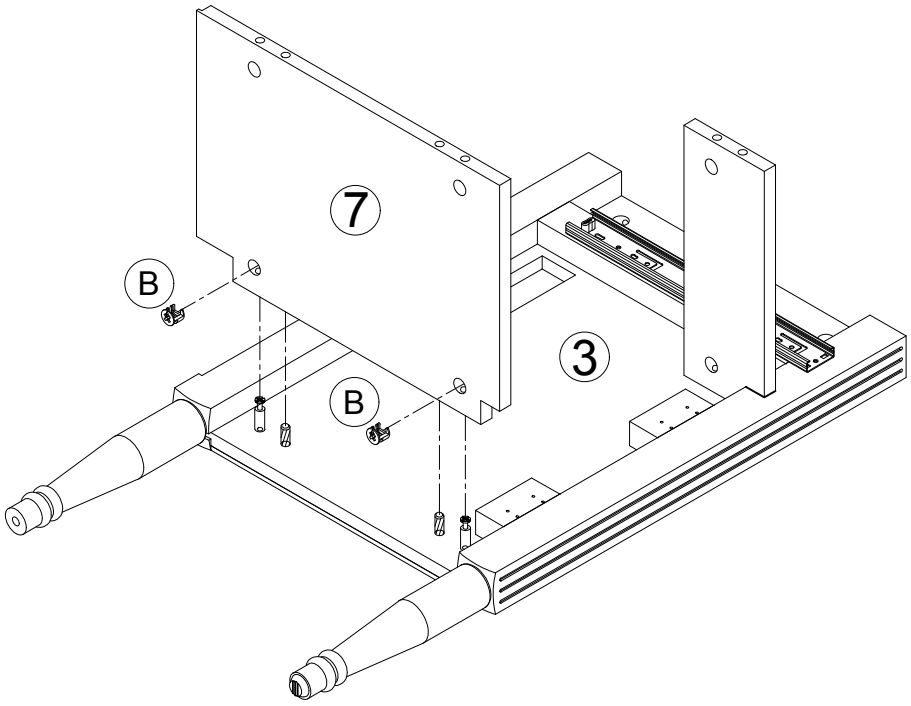

B		2PCS


ASSEMBLY INSTRUCTIONS

STEP 13

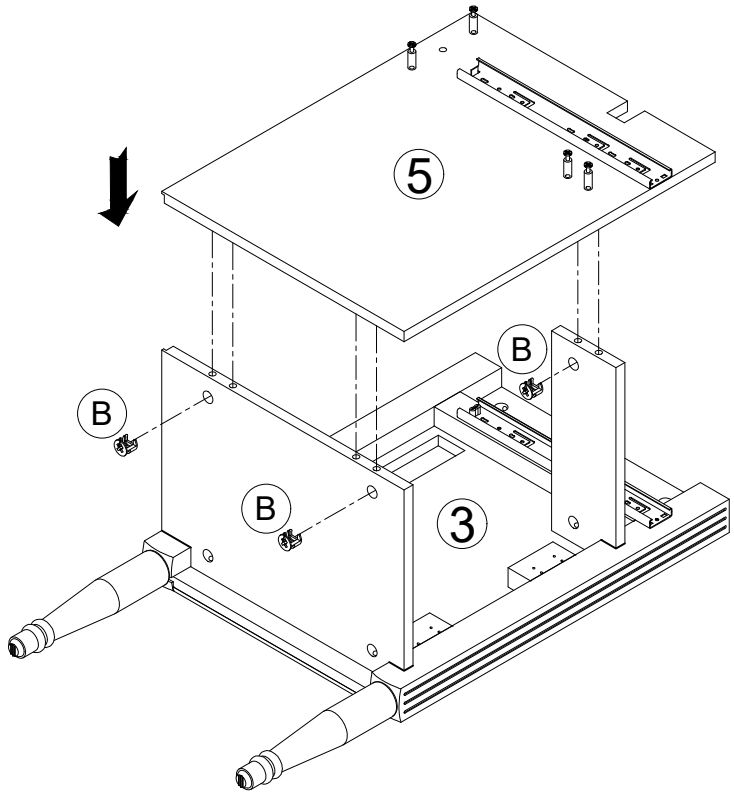

B		3PCS


STEP 14

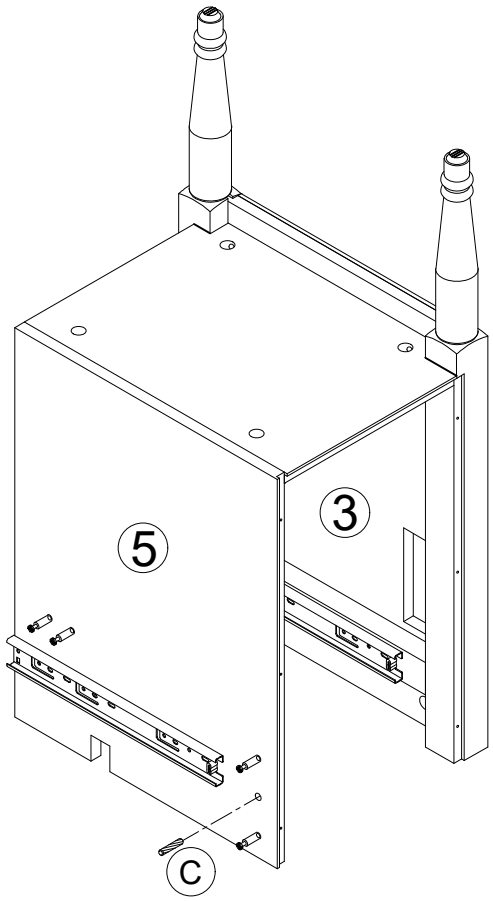


C		1PC


ASSEMBLY INSTRUCTIONS

STEP 14

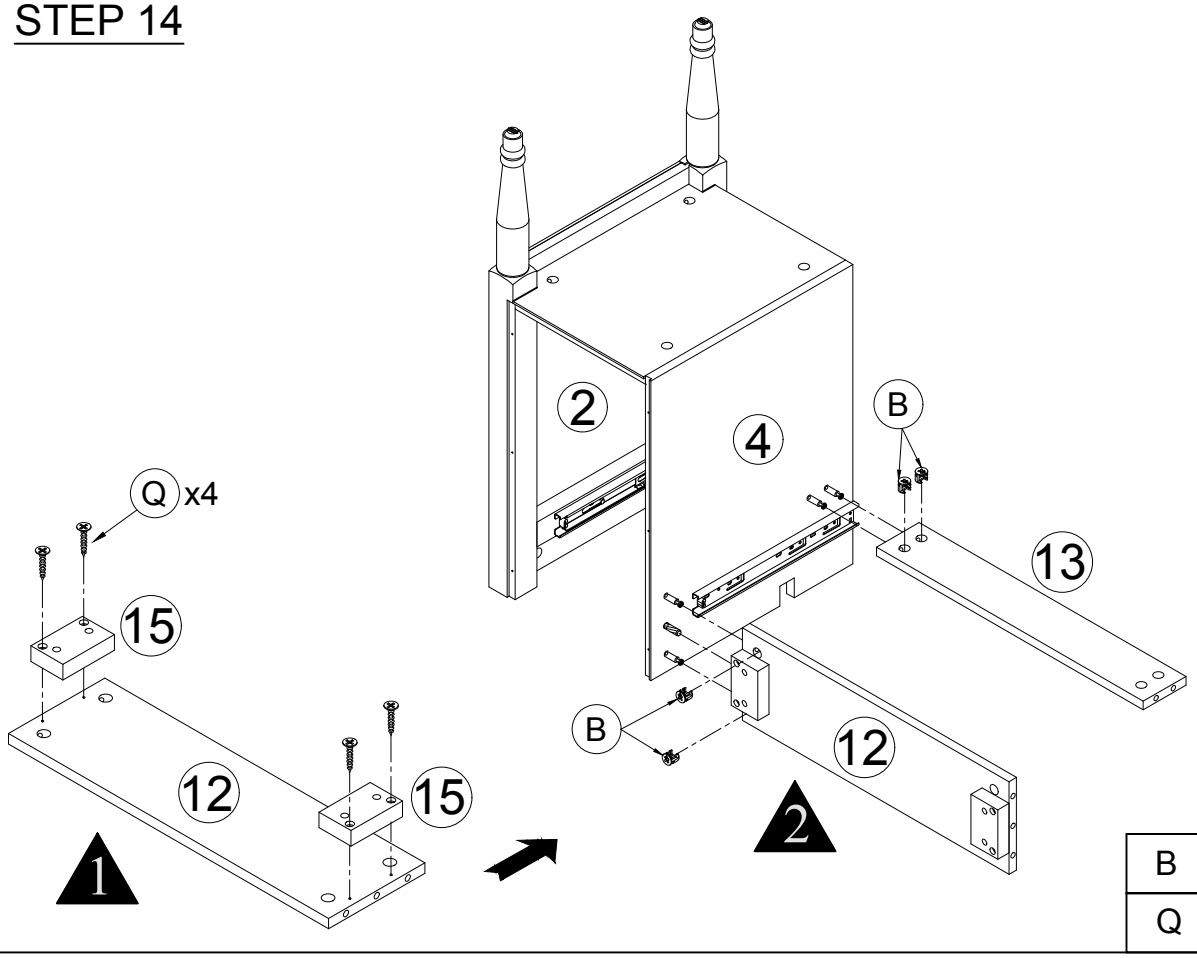

B		4PCS
Q		4PCS


STEP 15

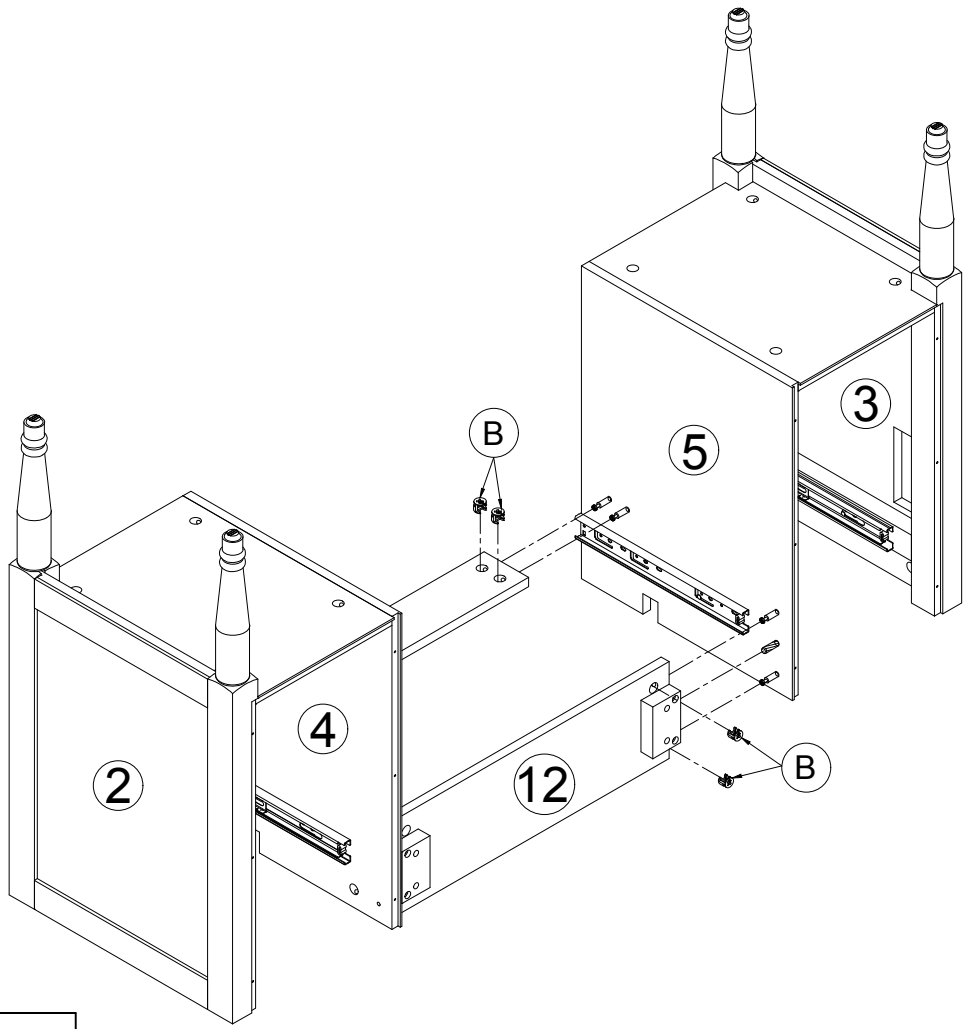


B		4PCS

ASSEMBLY INSTRUCTIONS

STEP 15

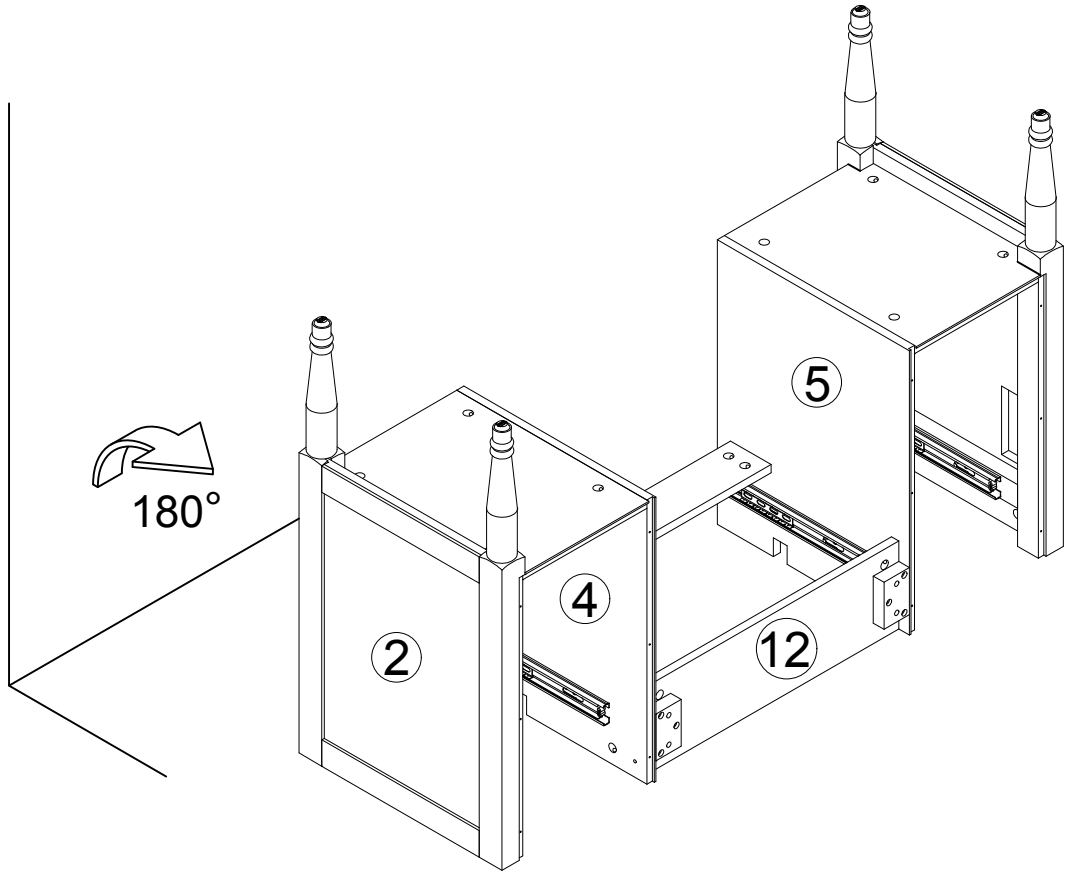


STEP 16

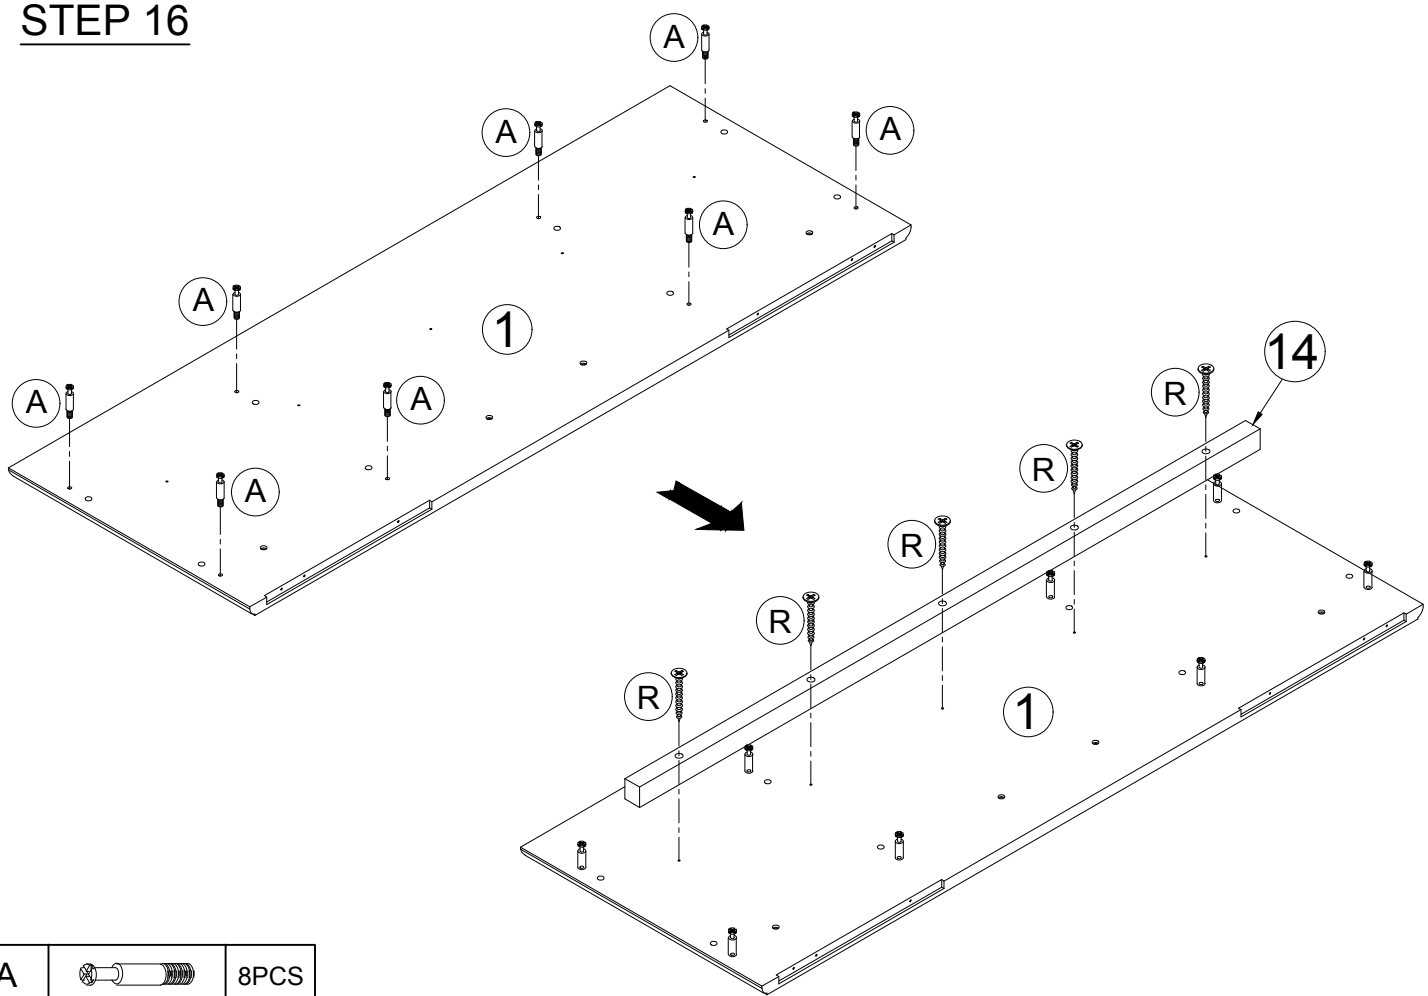

A		8PCS
R		5PCS

ASSEMBLY INSTRUCTIONS


STEP 17

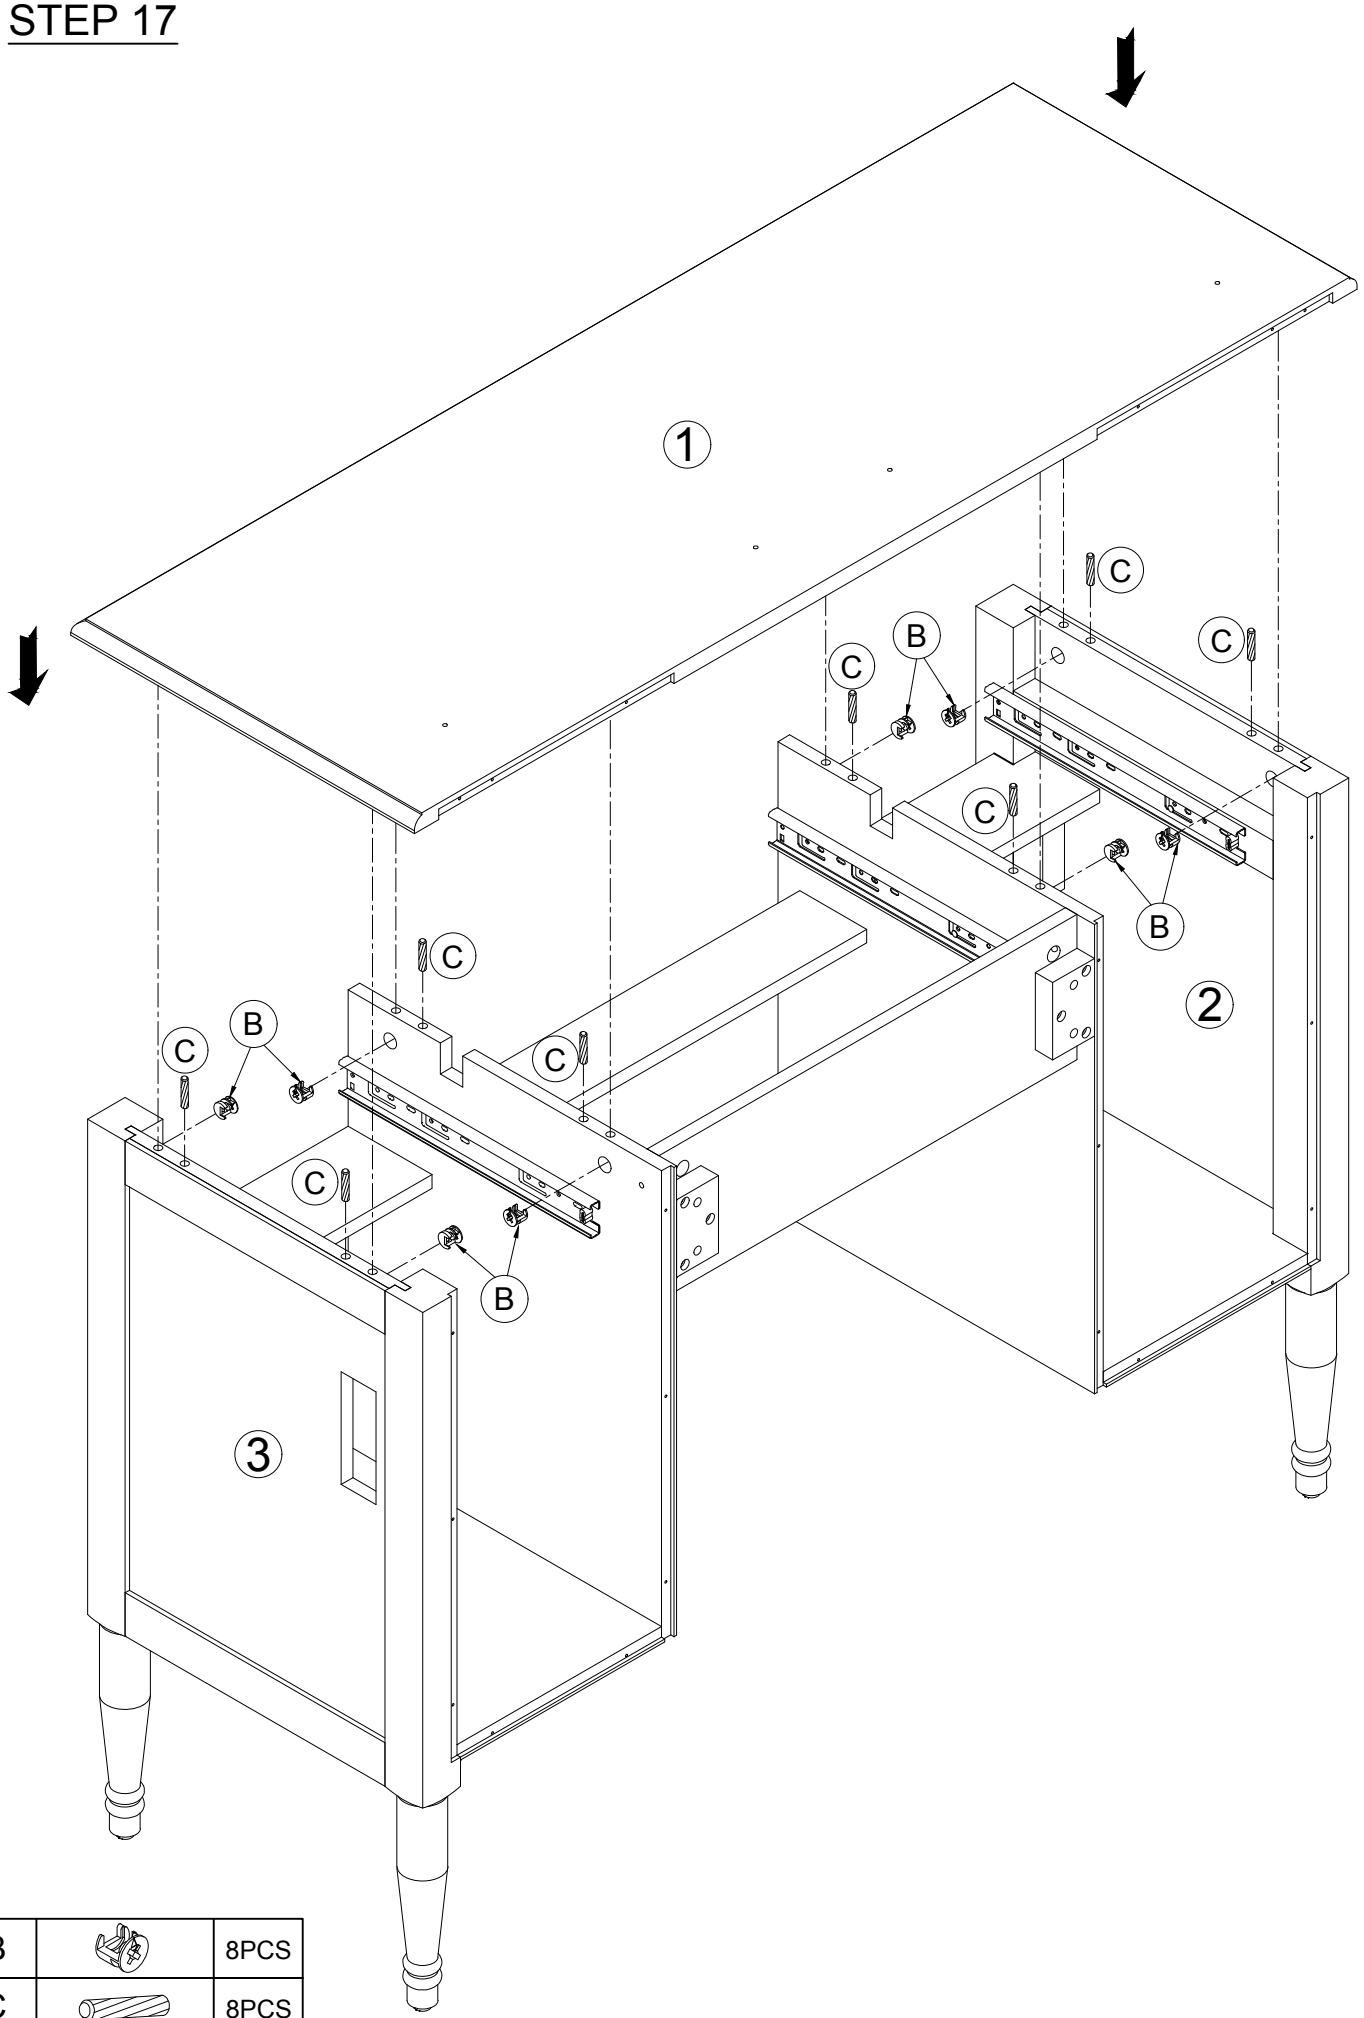


B		8PCS
C		8PCS

ASSEMBLY INSTRUCTIONS


STEP 18

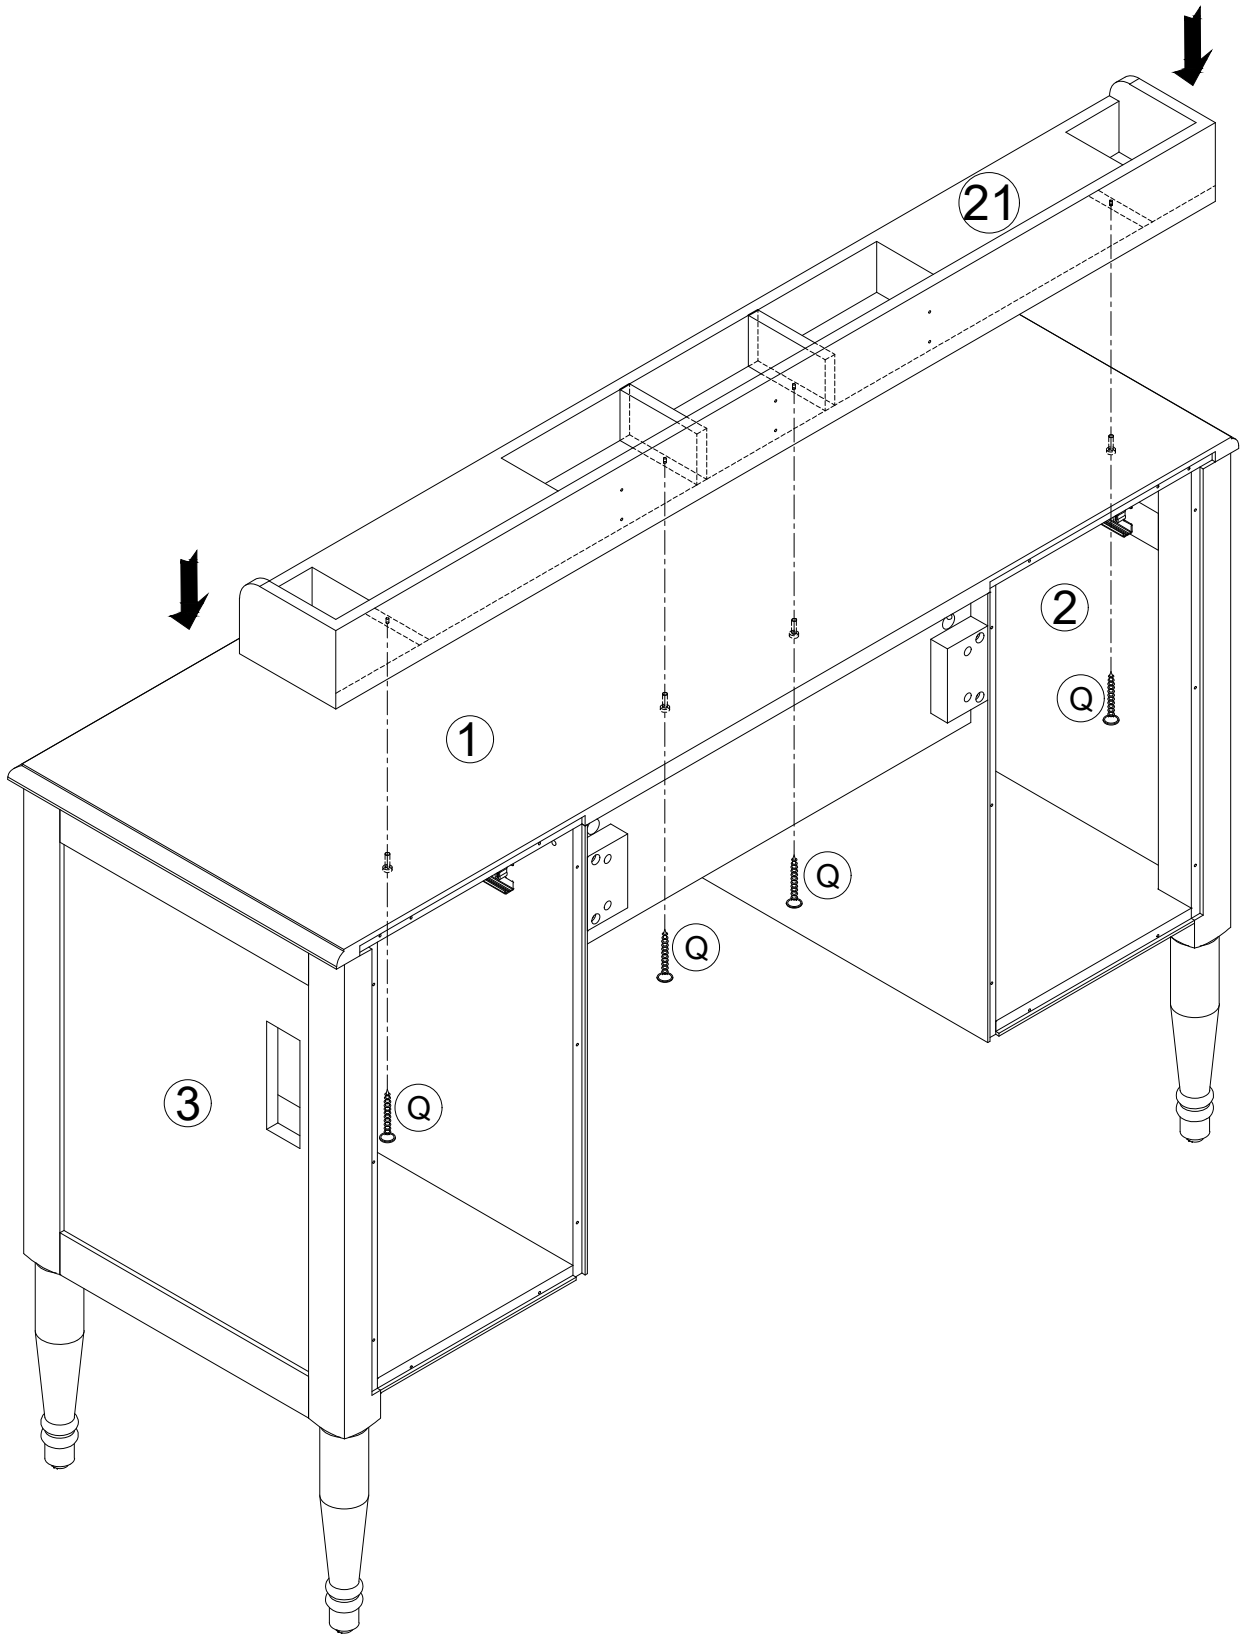


Q		4PCS


ASSEMBLY INSTRUCTIONS

STEP 19

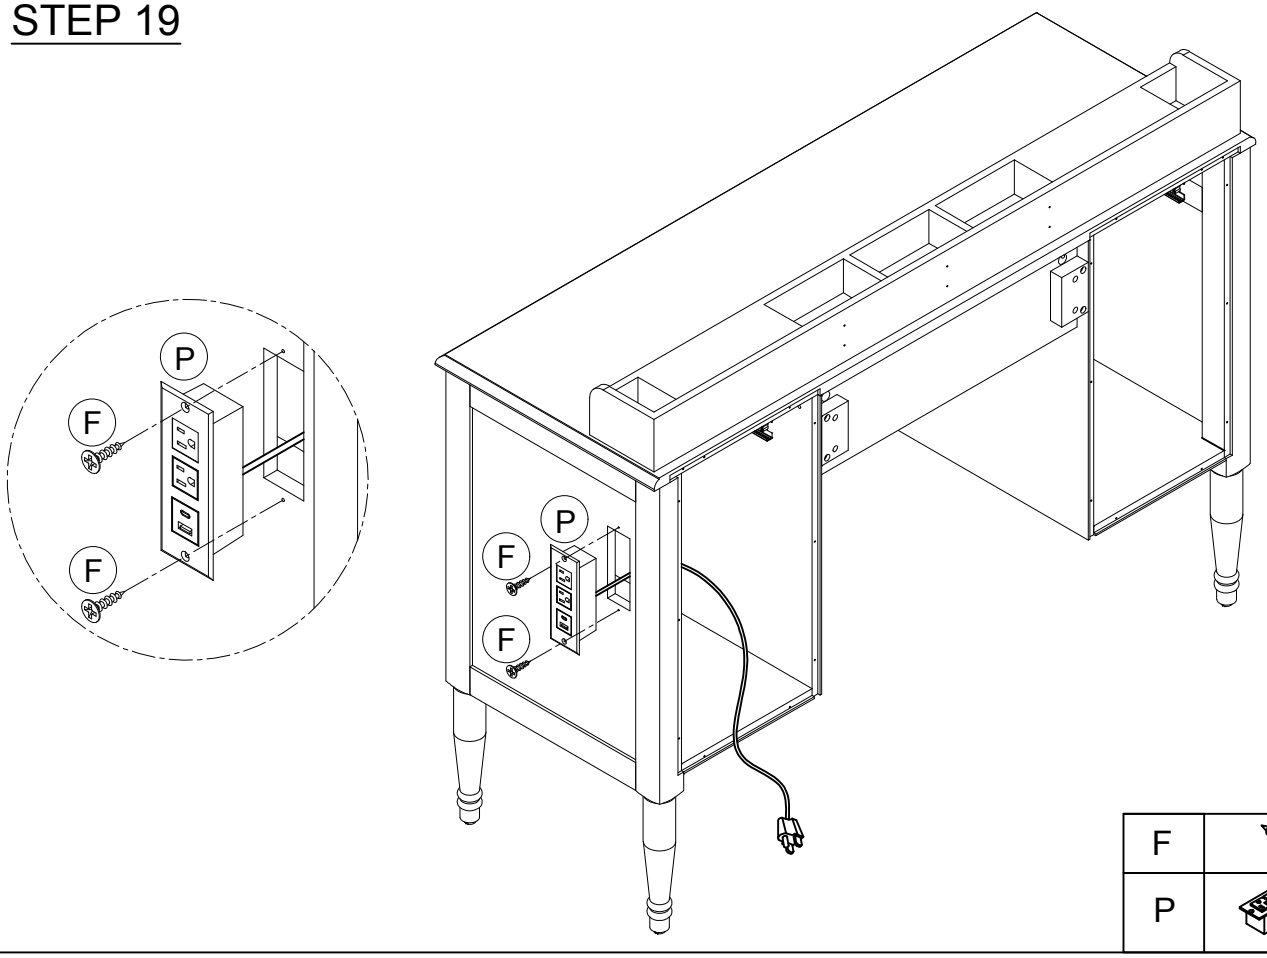

F		2PCS
P		1PC


STEP 20

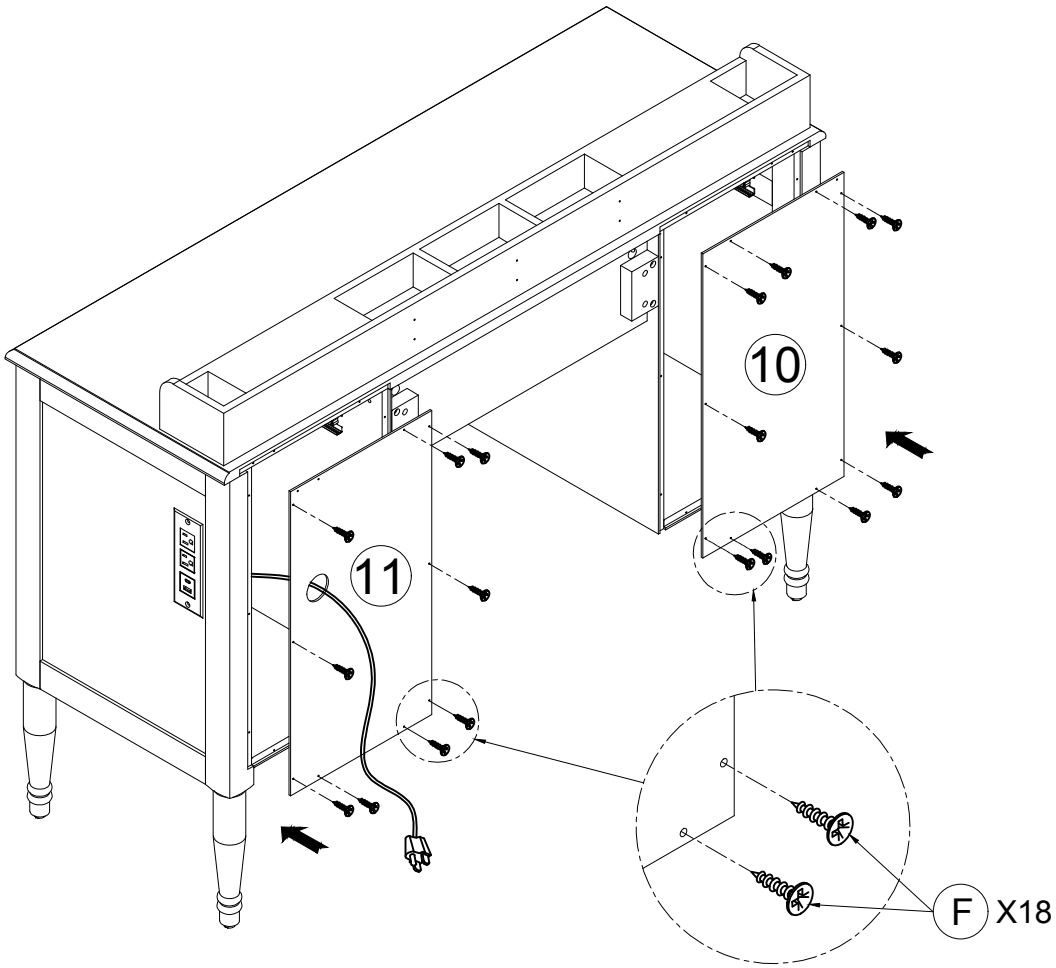

F		18PCS


ASSEMBLY INSTRUCTIONS

STEP 21

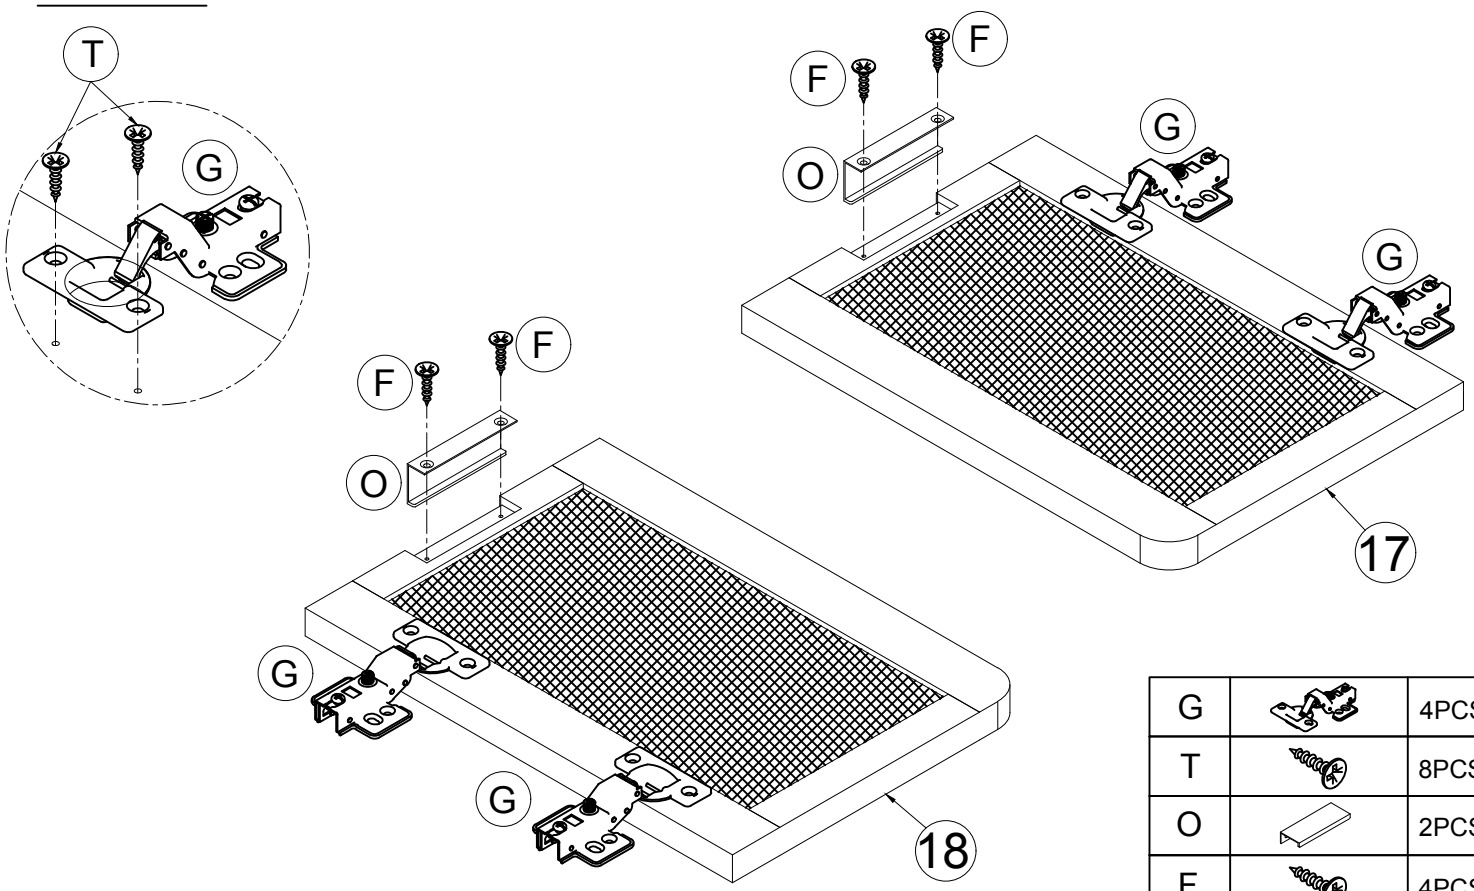

G		4PCS
T		8PCS
O		2PCS
F		4PCS


STEP 22

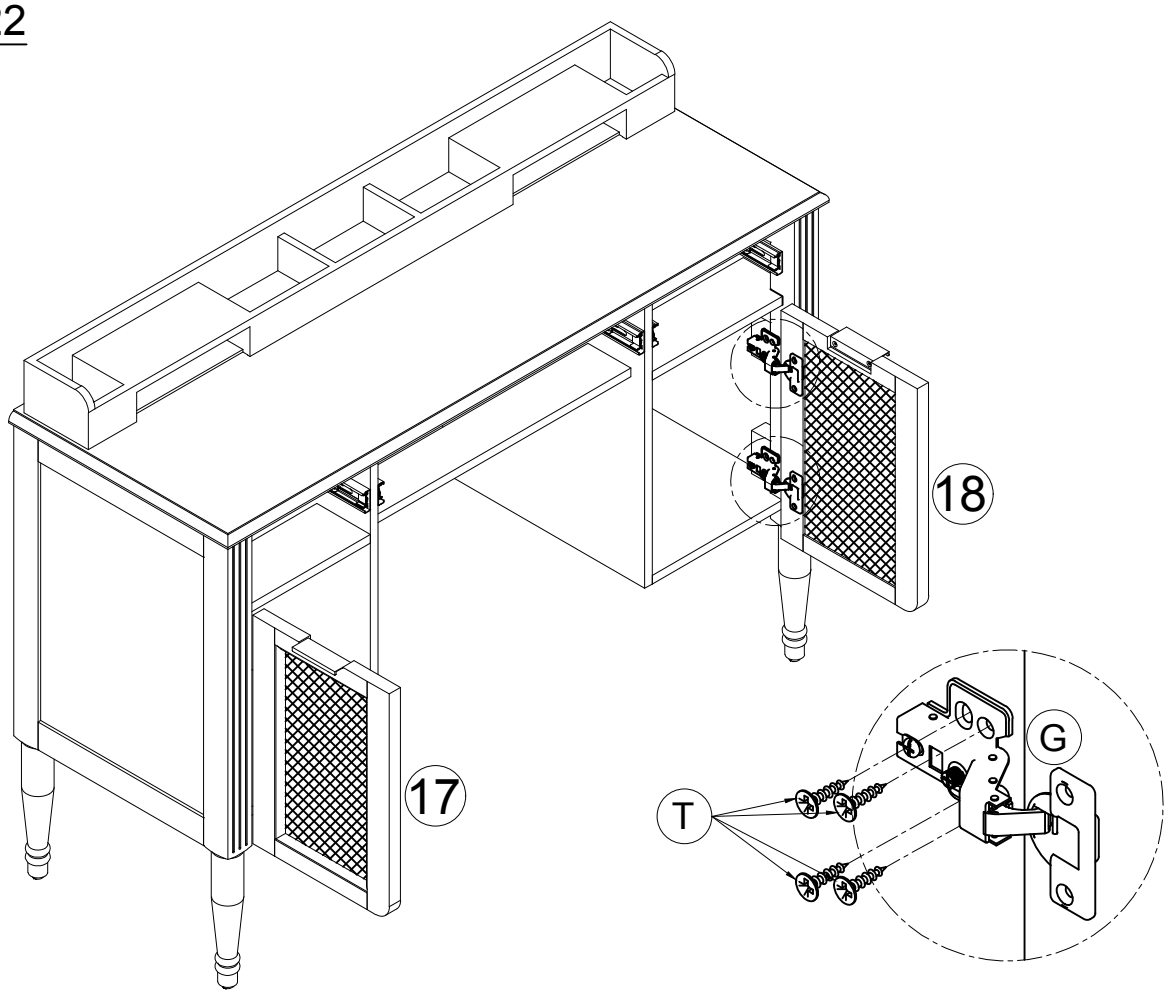

T		16PCS


ASSEMBLY INSTRUCTIONS


STEP 23

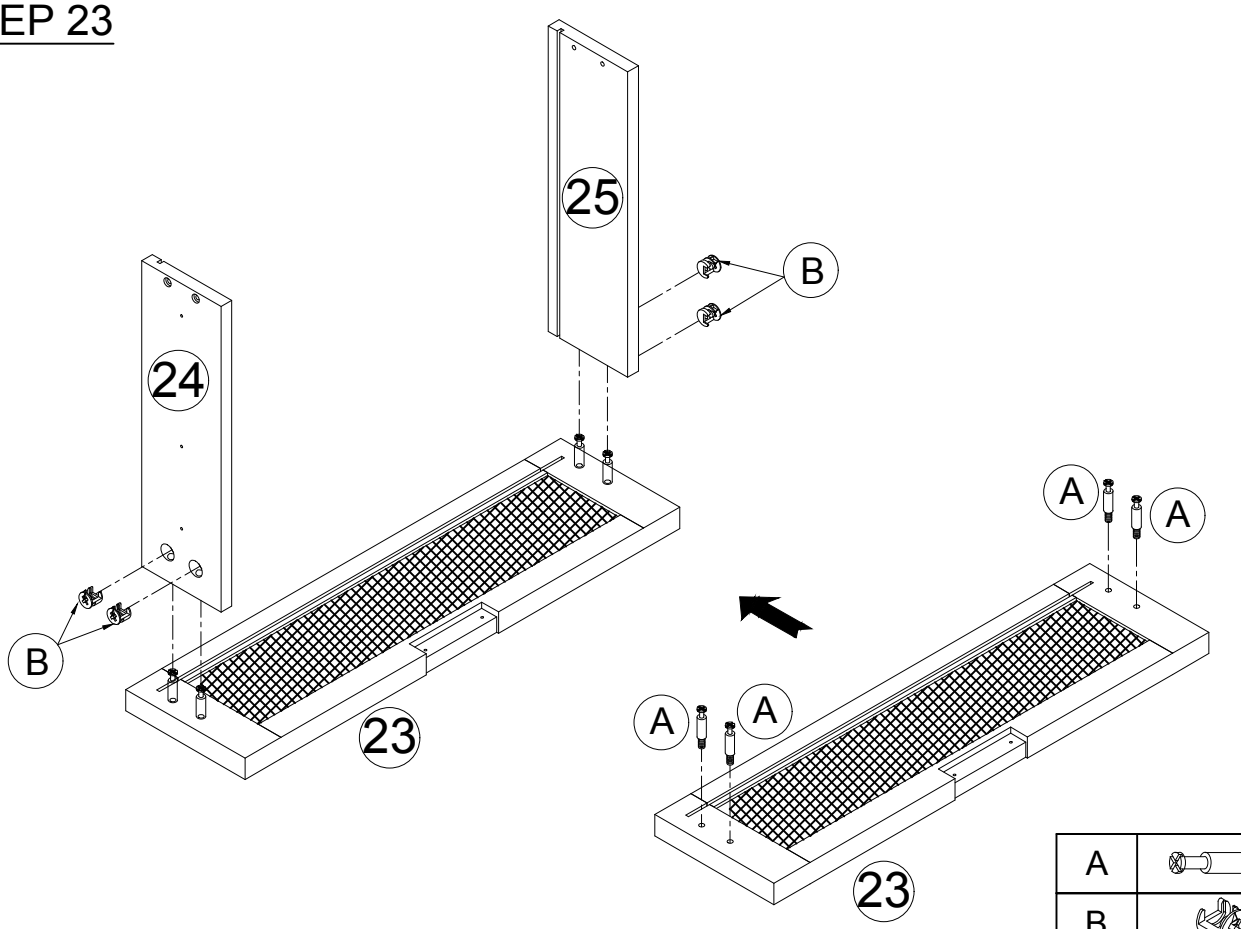

A		4PCS
B		4PCS


STEP 24

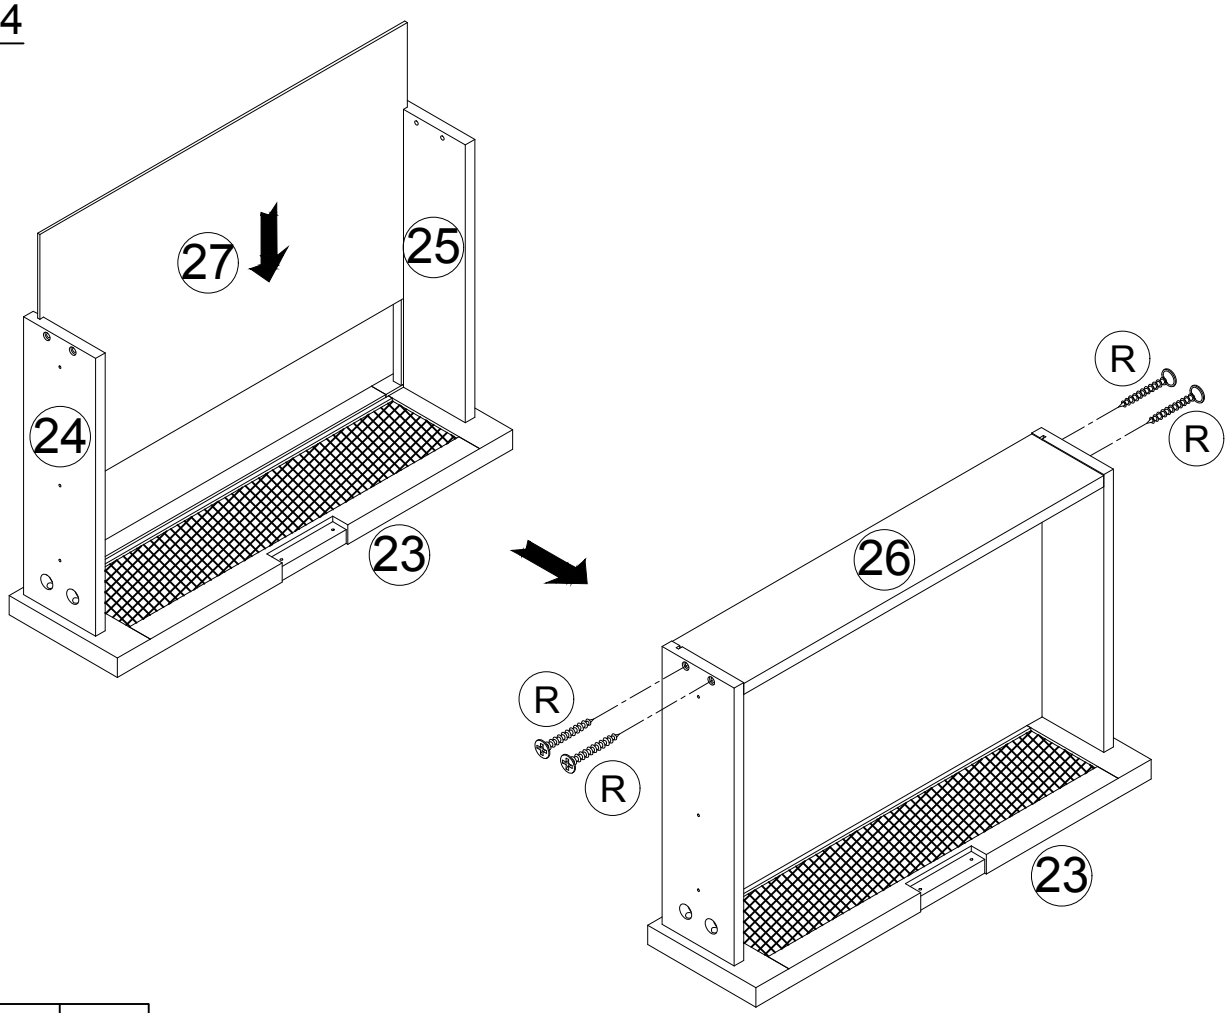

R		4PCS


ASSEMBLY INSTRUCTIONS

STEP 25

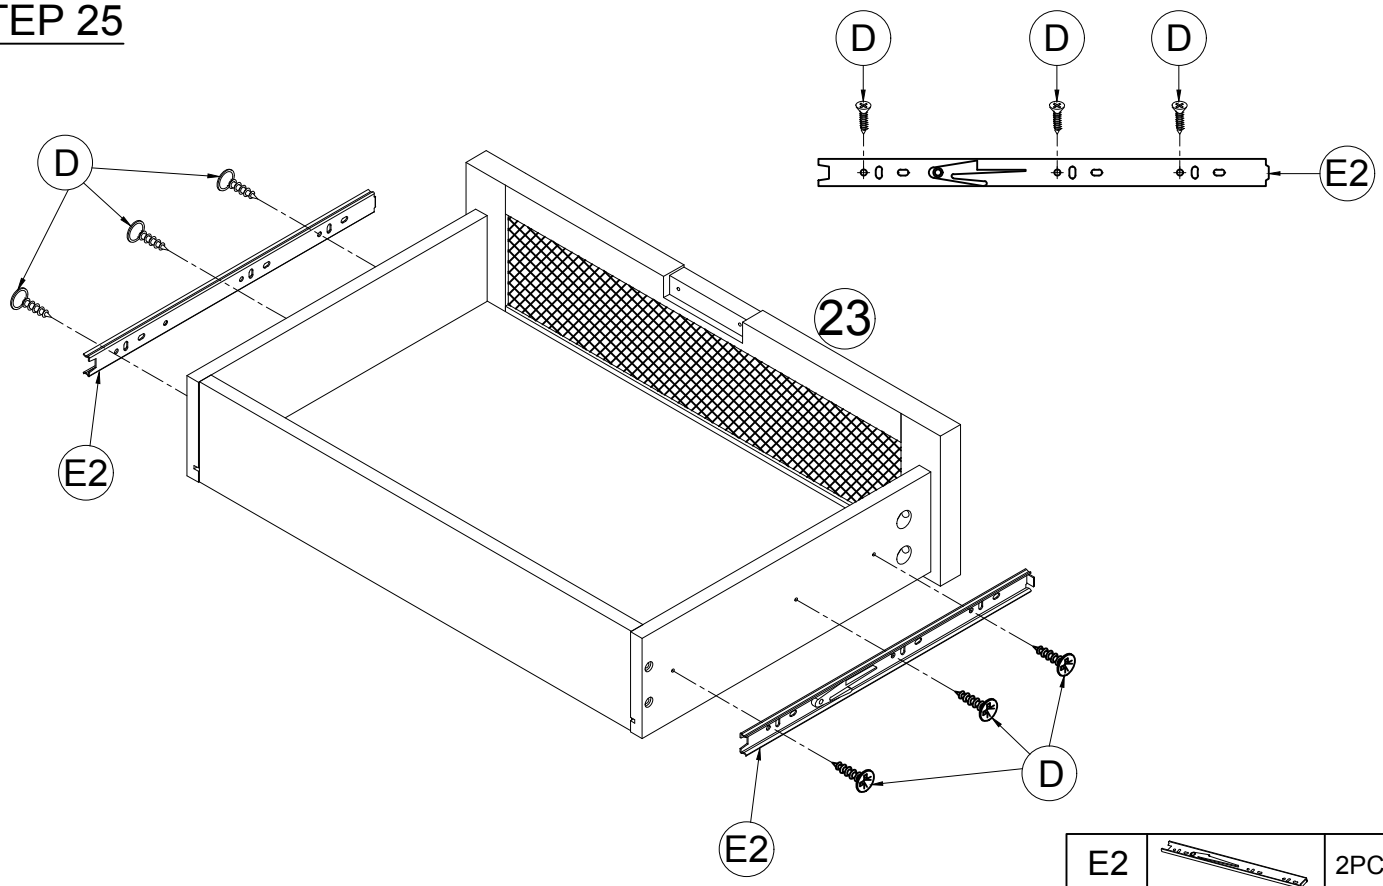

E2		2PCS
D		6PCS


STEP 26

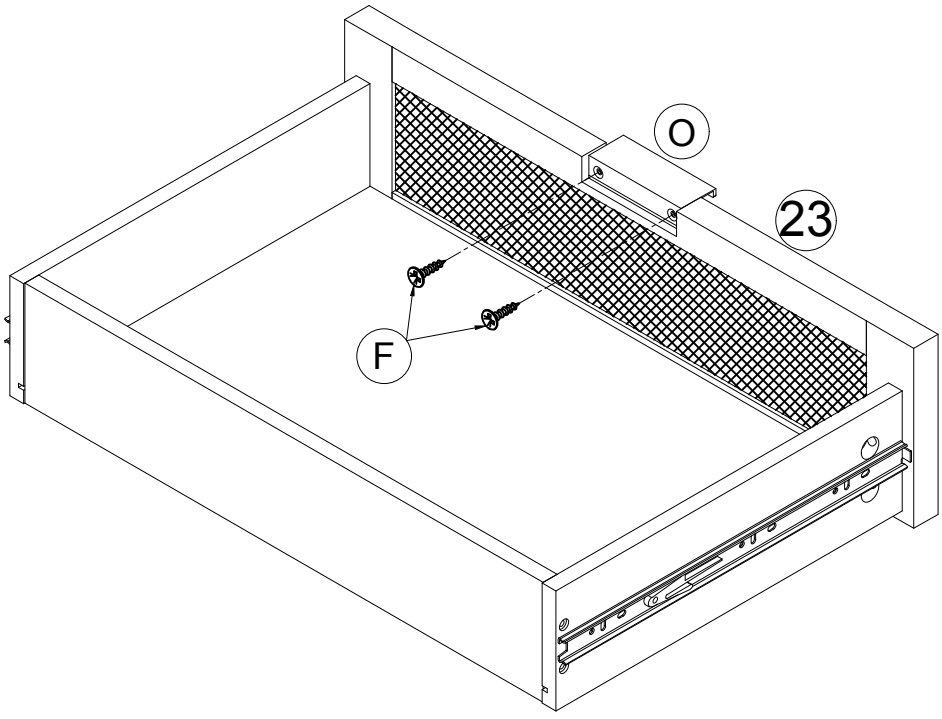

F		2PCS
O		1PC


ASSEMBLY INSTRUCTIONS

STEP 27 x2 Set

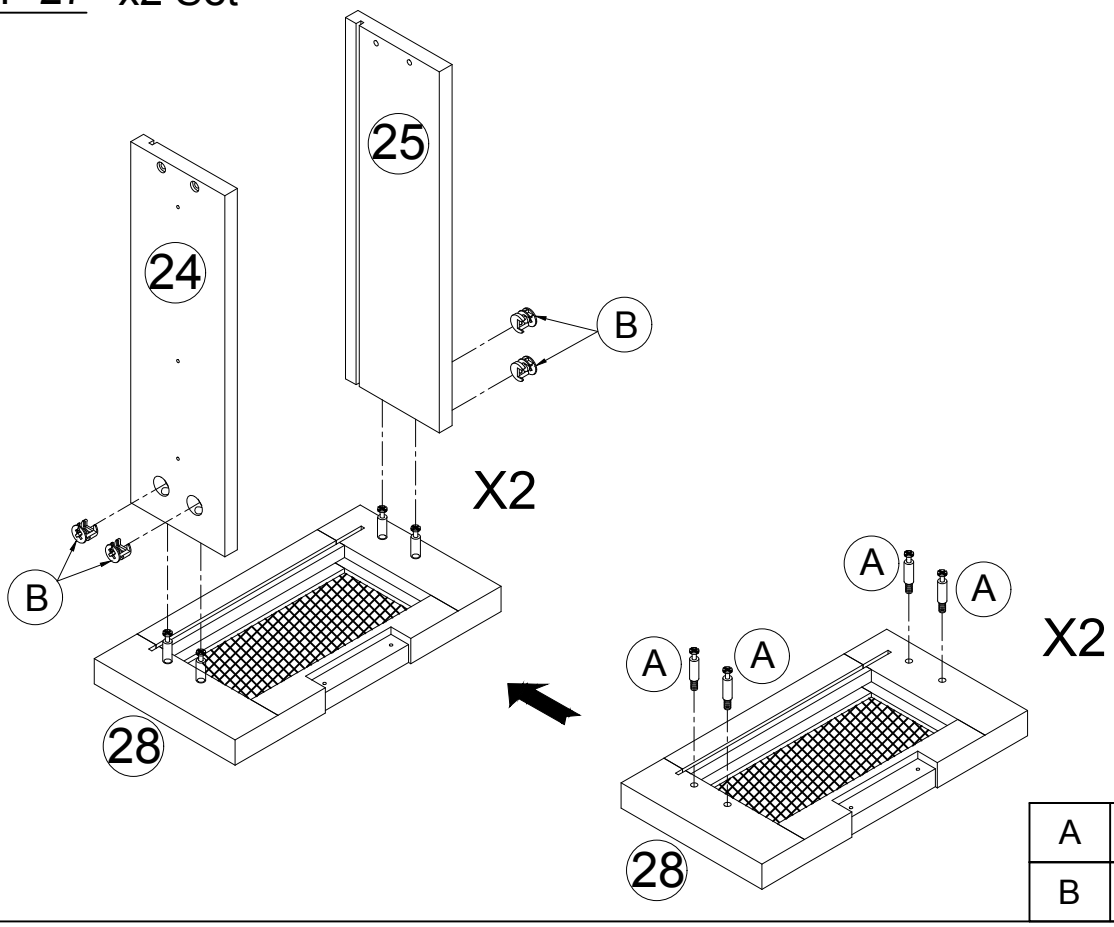

A		8PCS
B		8PCS


STEP 28 x2 Set

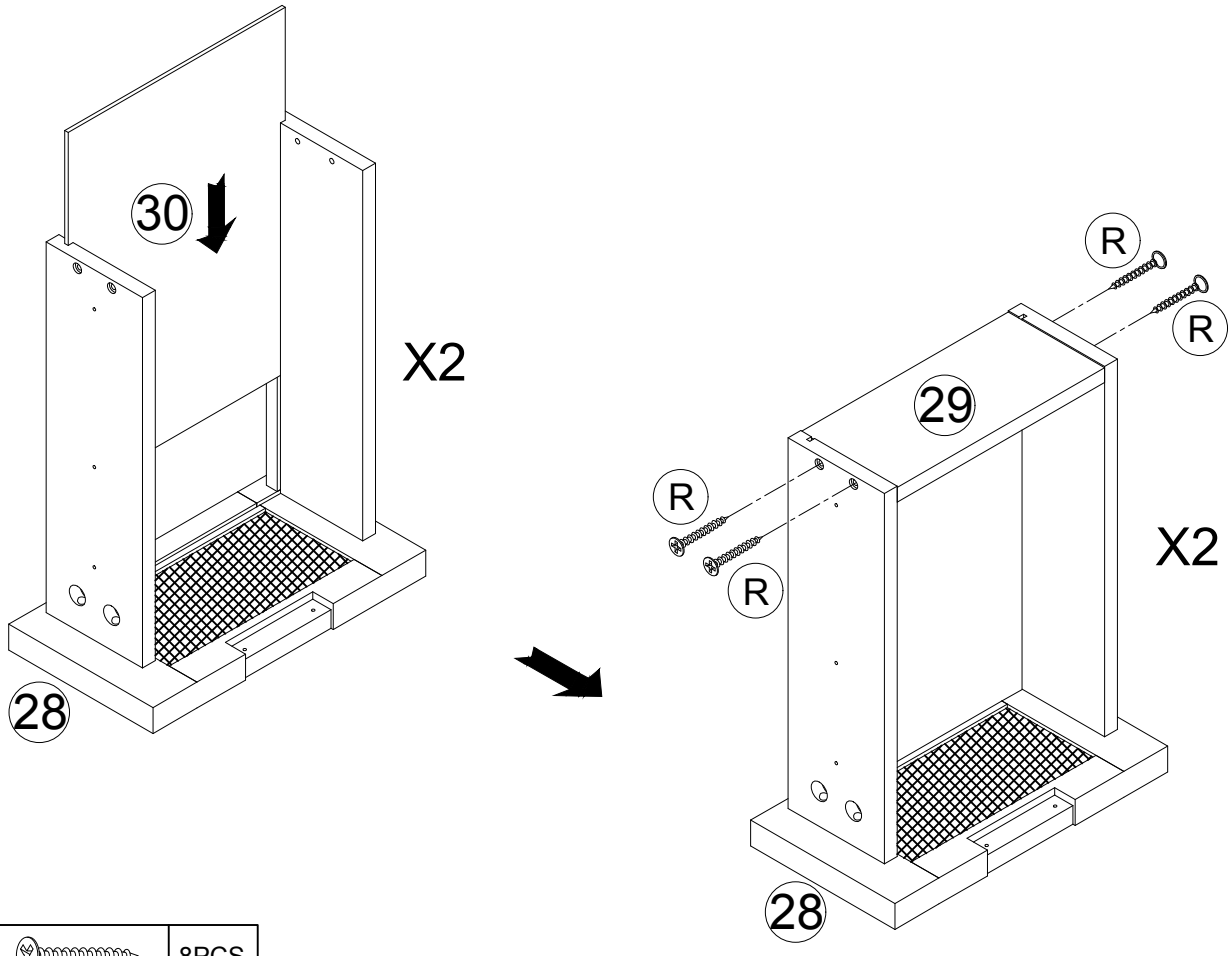


R		8PCS

ASSEMBLY INSTRUCTIONS


STEP 29 x2 Set

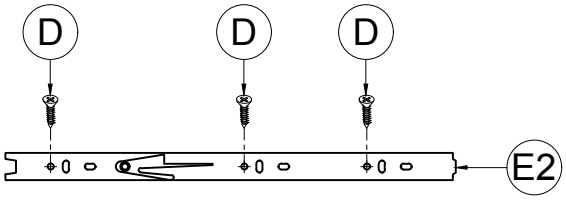

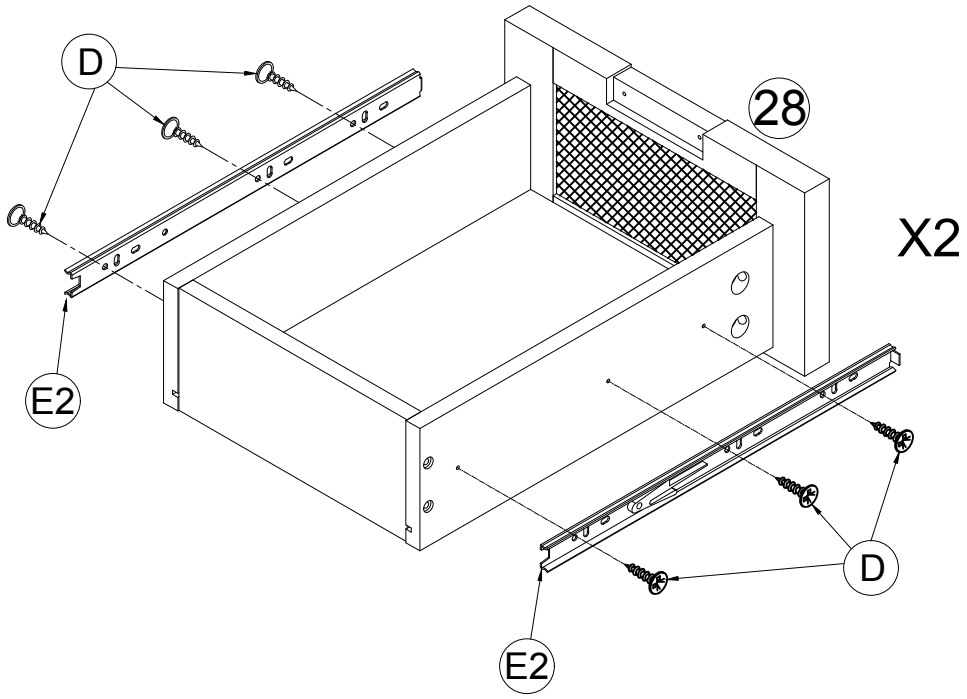

E2		4PCS
D		12PCS


STEP 30 x2 Set

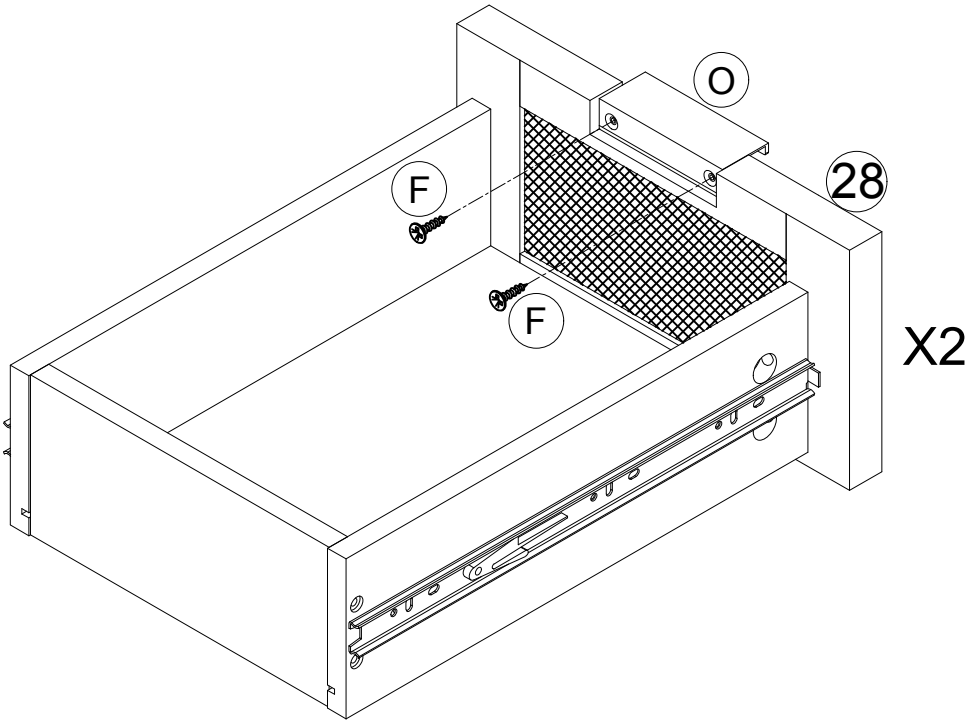


F		4PCS
O		2PCS

ASSEMBLY INSTRUCTIONS


STEP 31

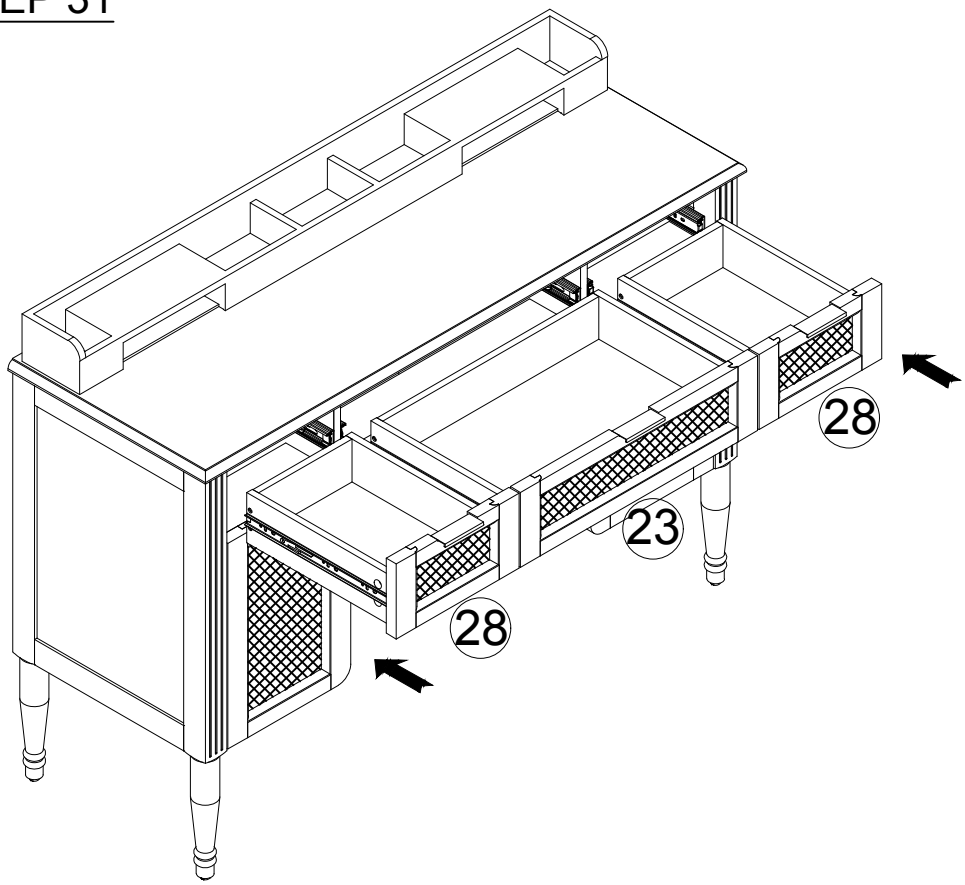

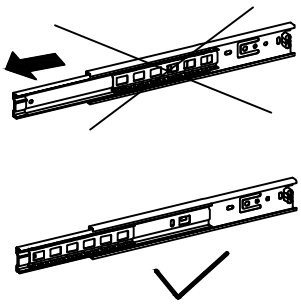

NOTE: Pull the inner ball bearing slides on each side all the way out till it stops. (may be slightly greasy)


STEP 32

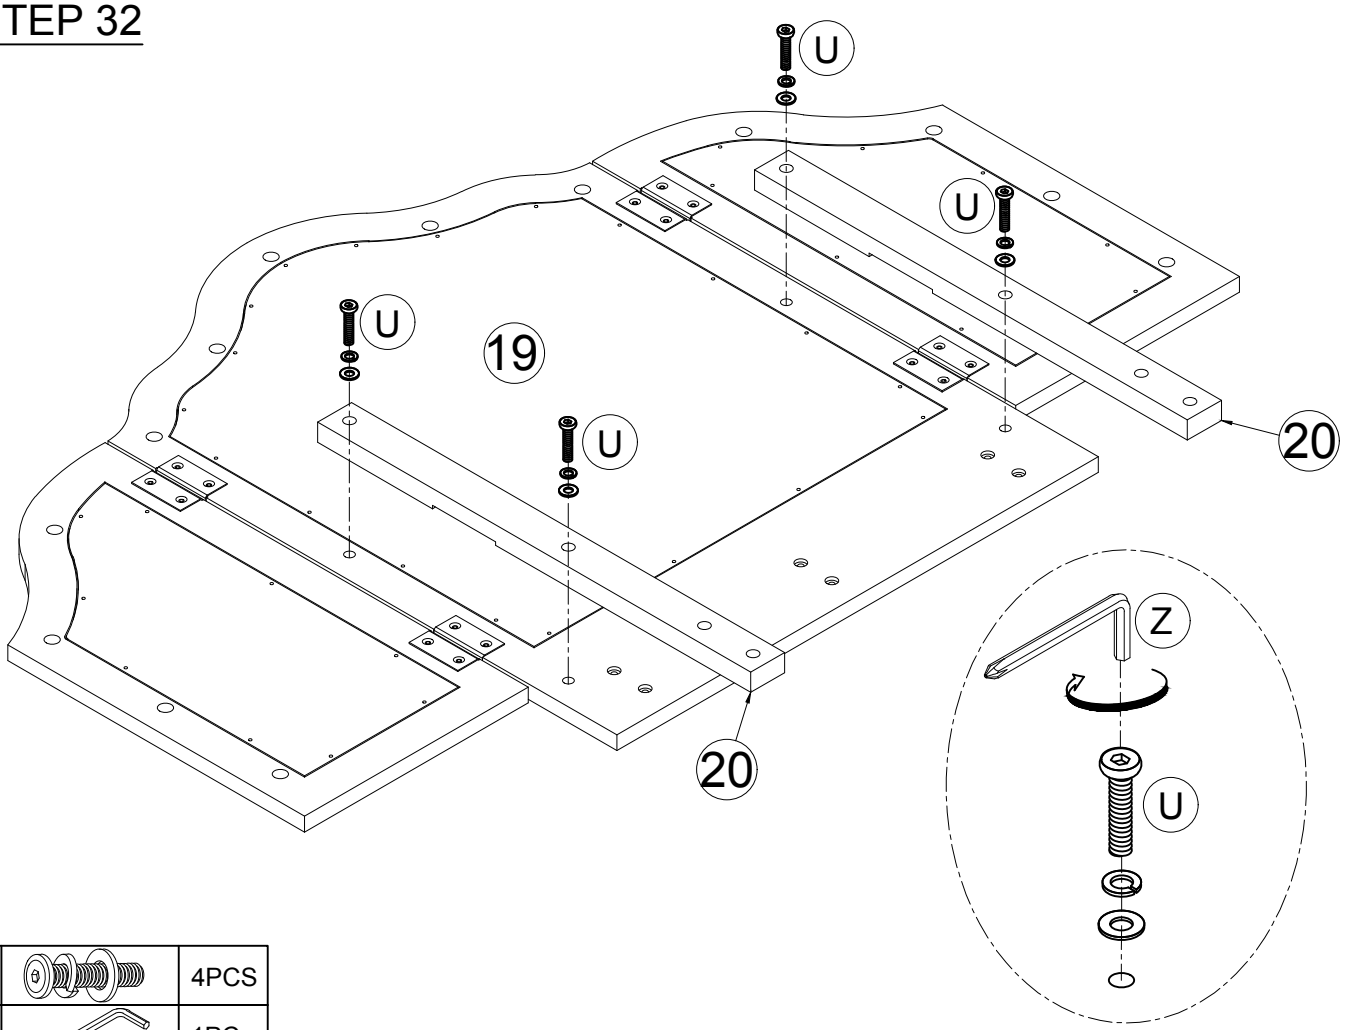


U		4PCS
Z		1PC

ASSEMBLY INSTRUCTIONS


STEP 33

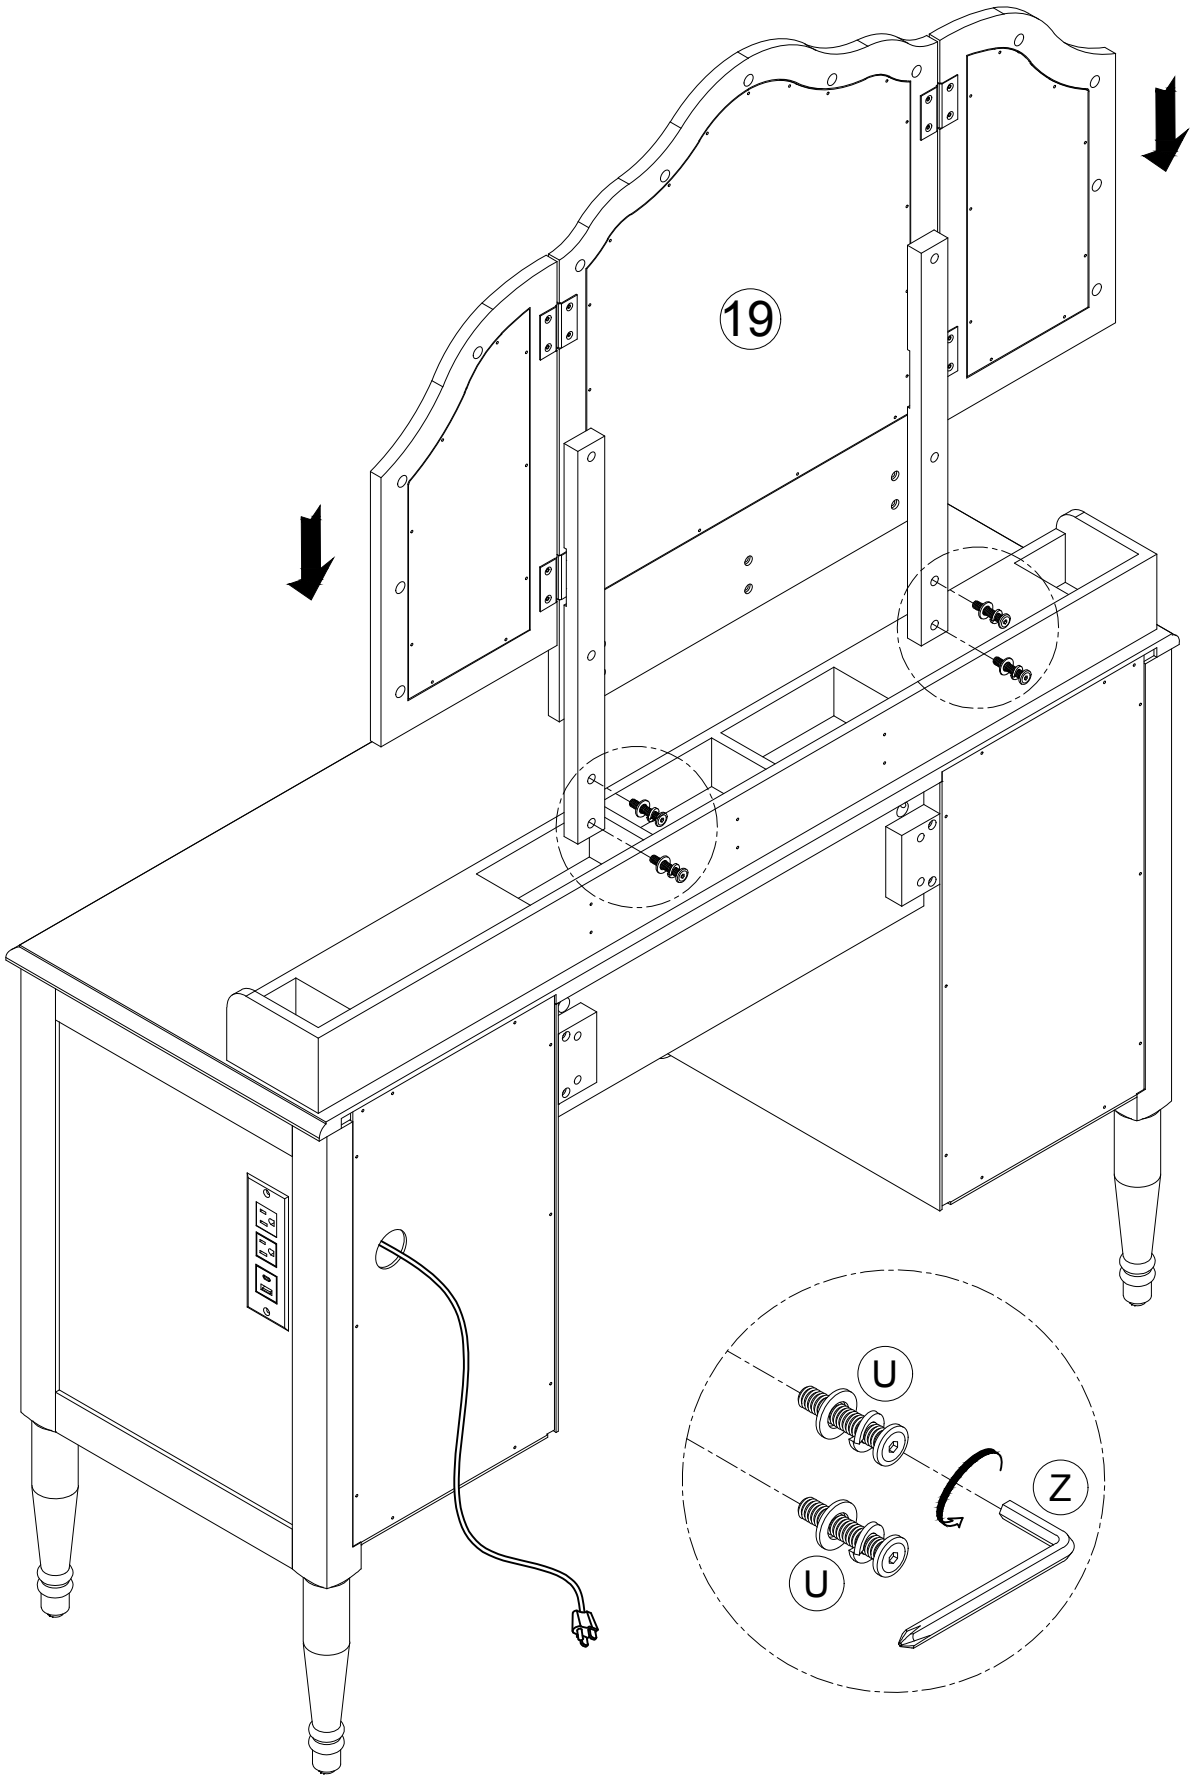

U		4PCS
Z		1PC

ASSEMBLY INSTRUCTIONS


STEP 34

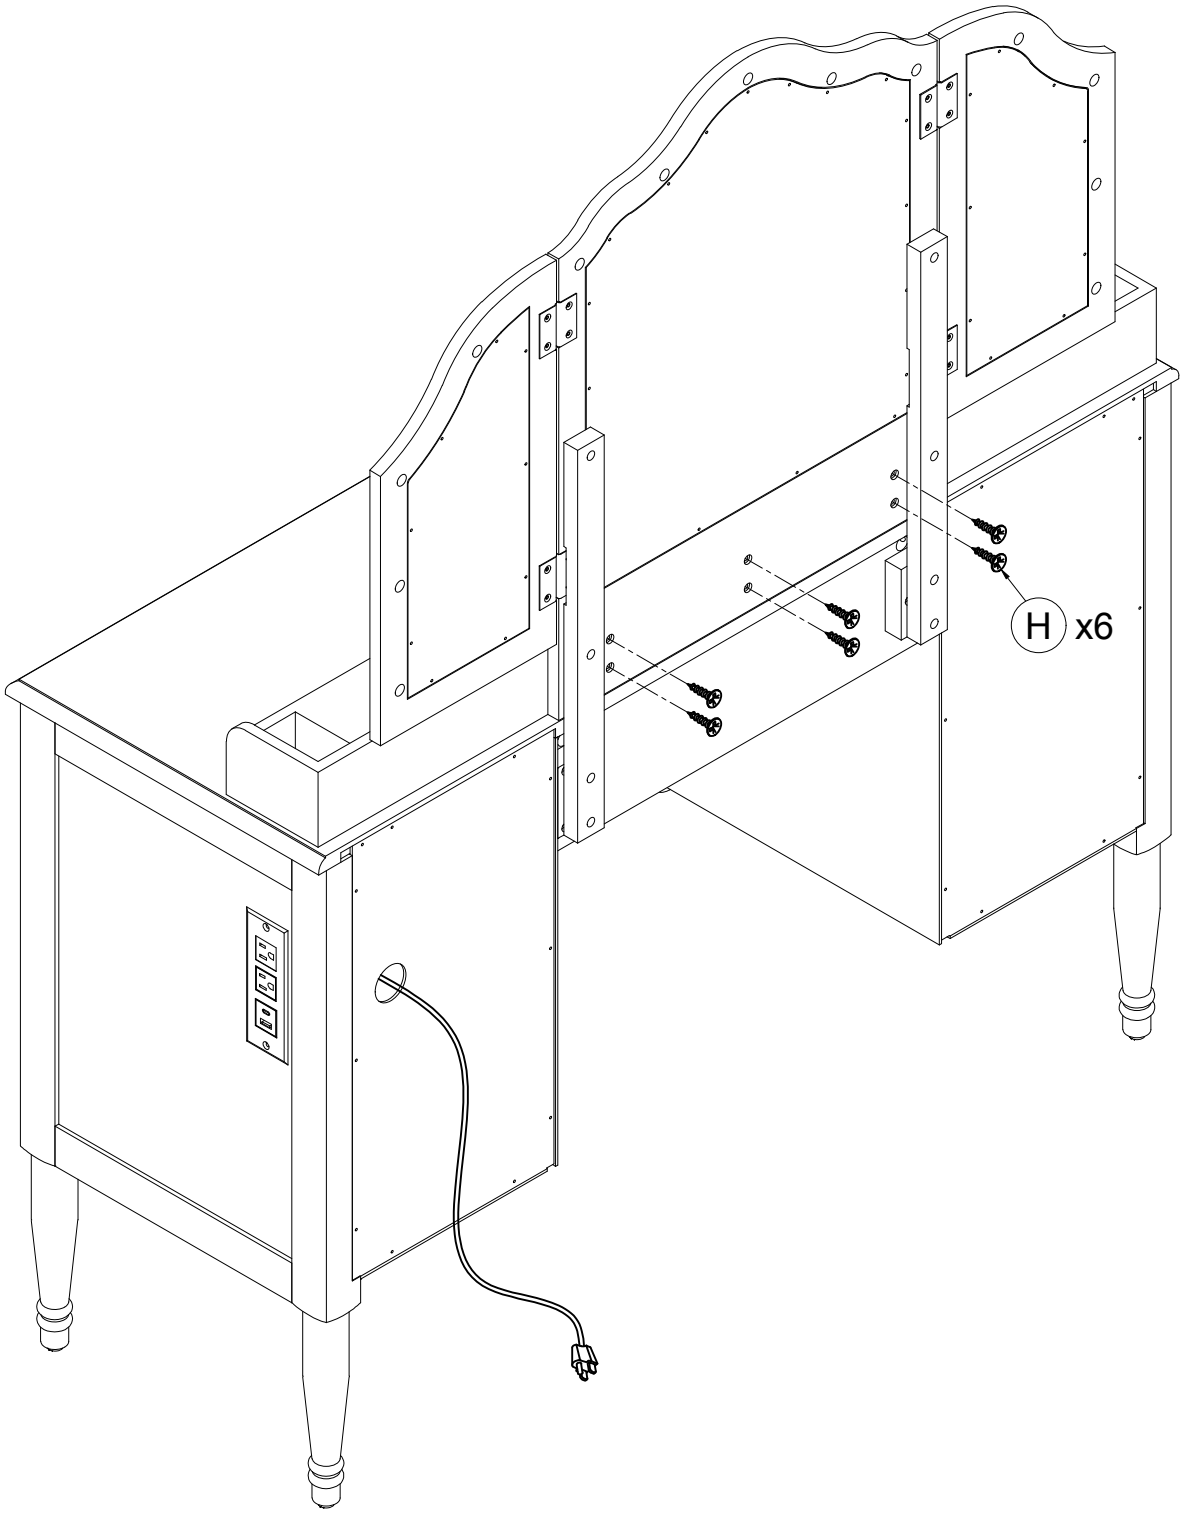

H		6PCS

ASSEMBLY INSTRUCTIONS


STEP 35

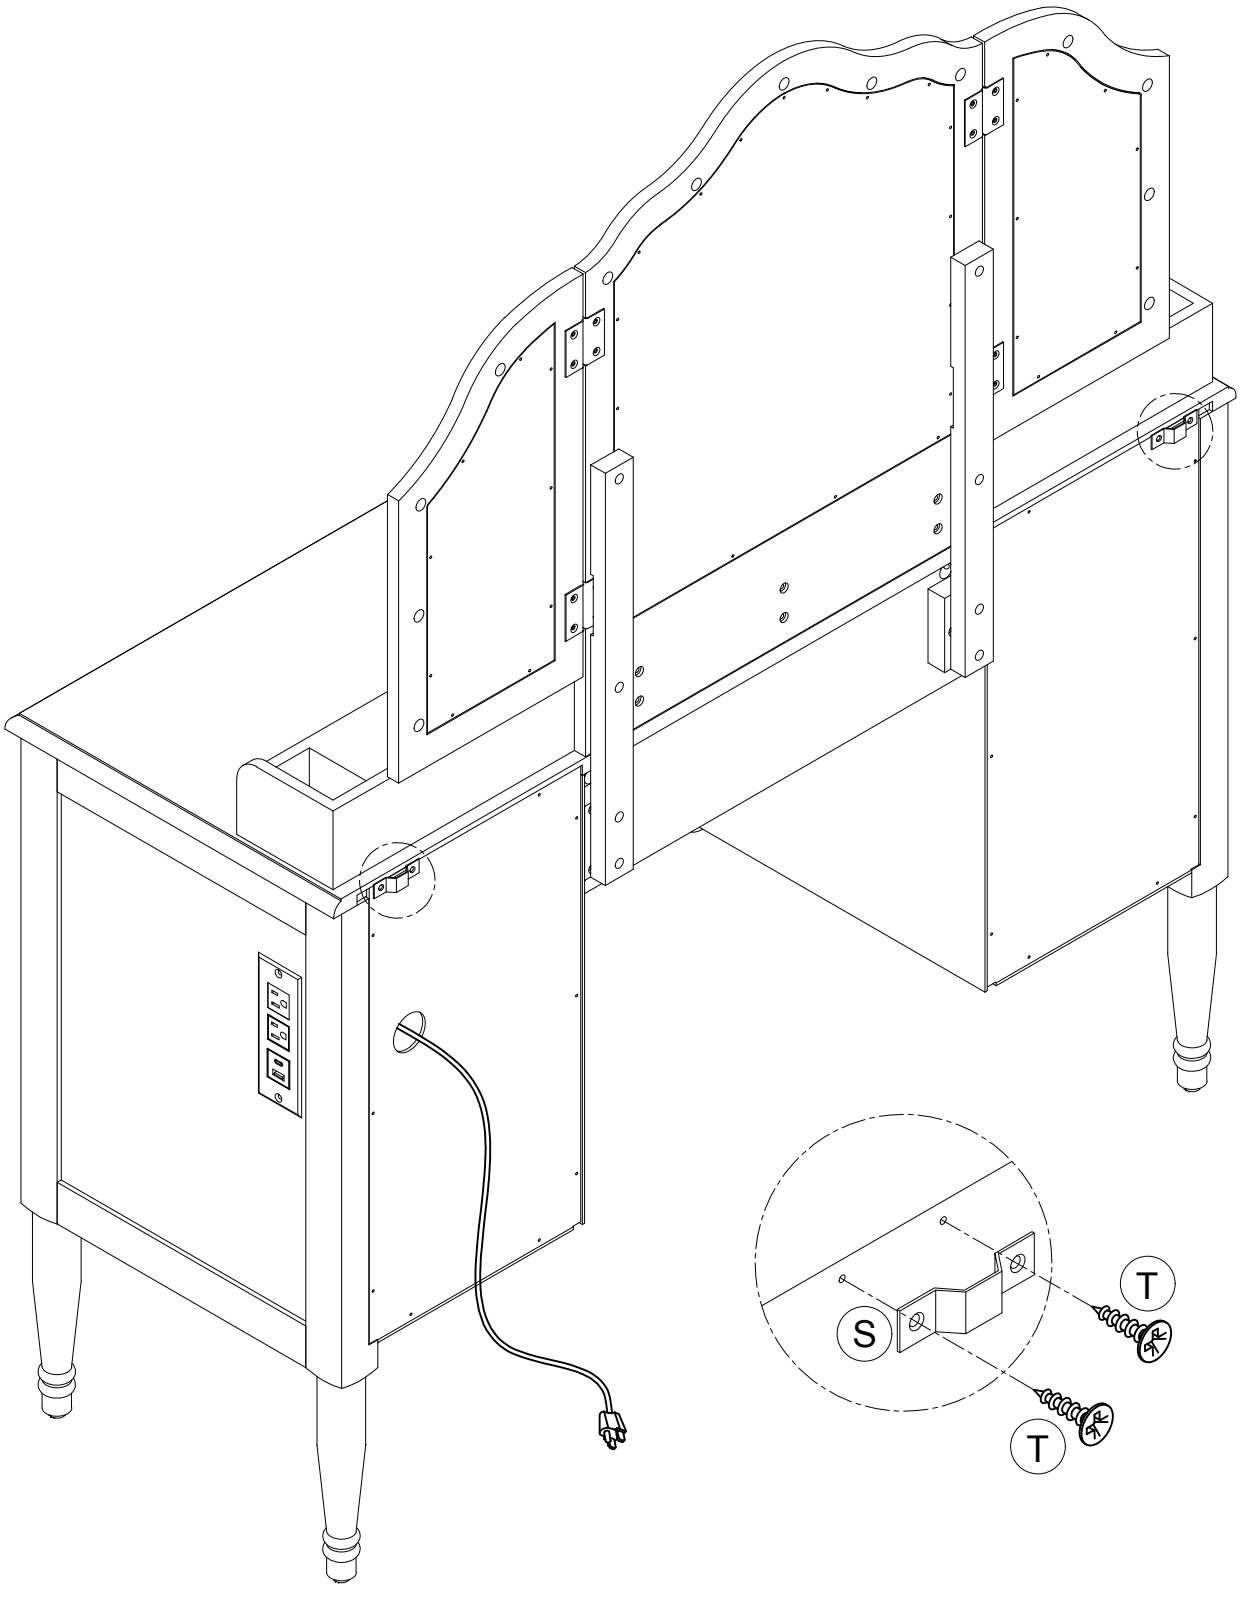

S		2PCS
T		4PCS

ASSEMBLY INSTRUCTIONS


STEP 36

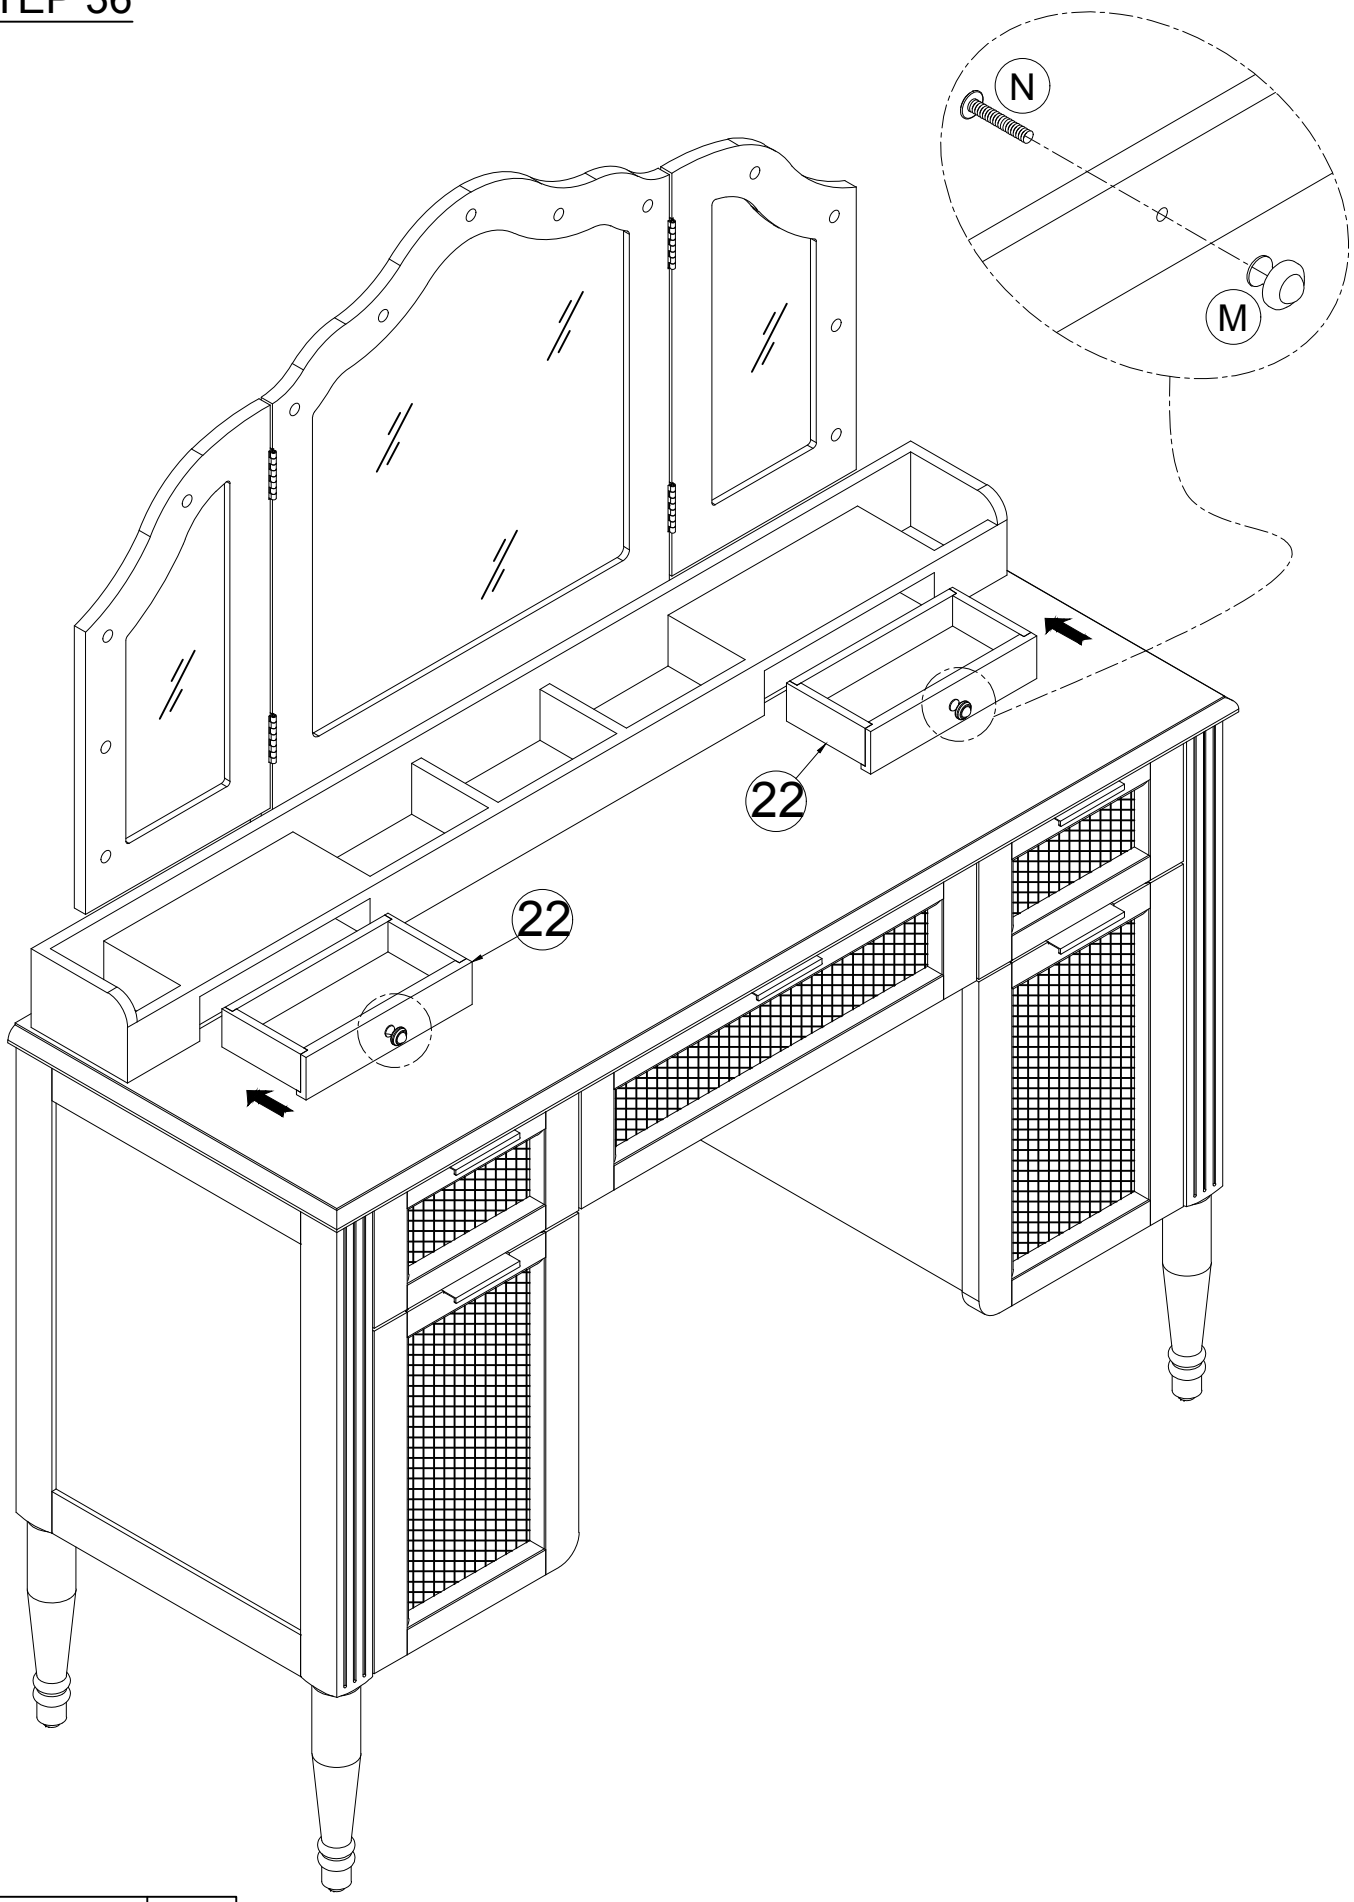

M		2PCS
N		2PCS

ASSEMBLY INSTRUCTIONS


STEP 37

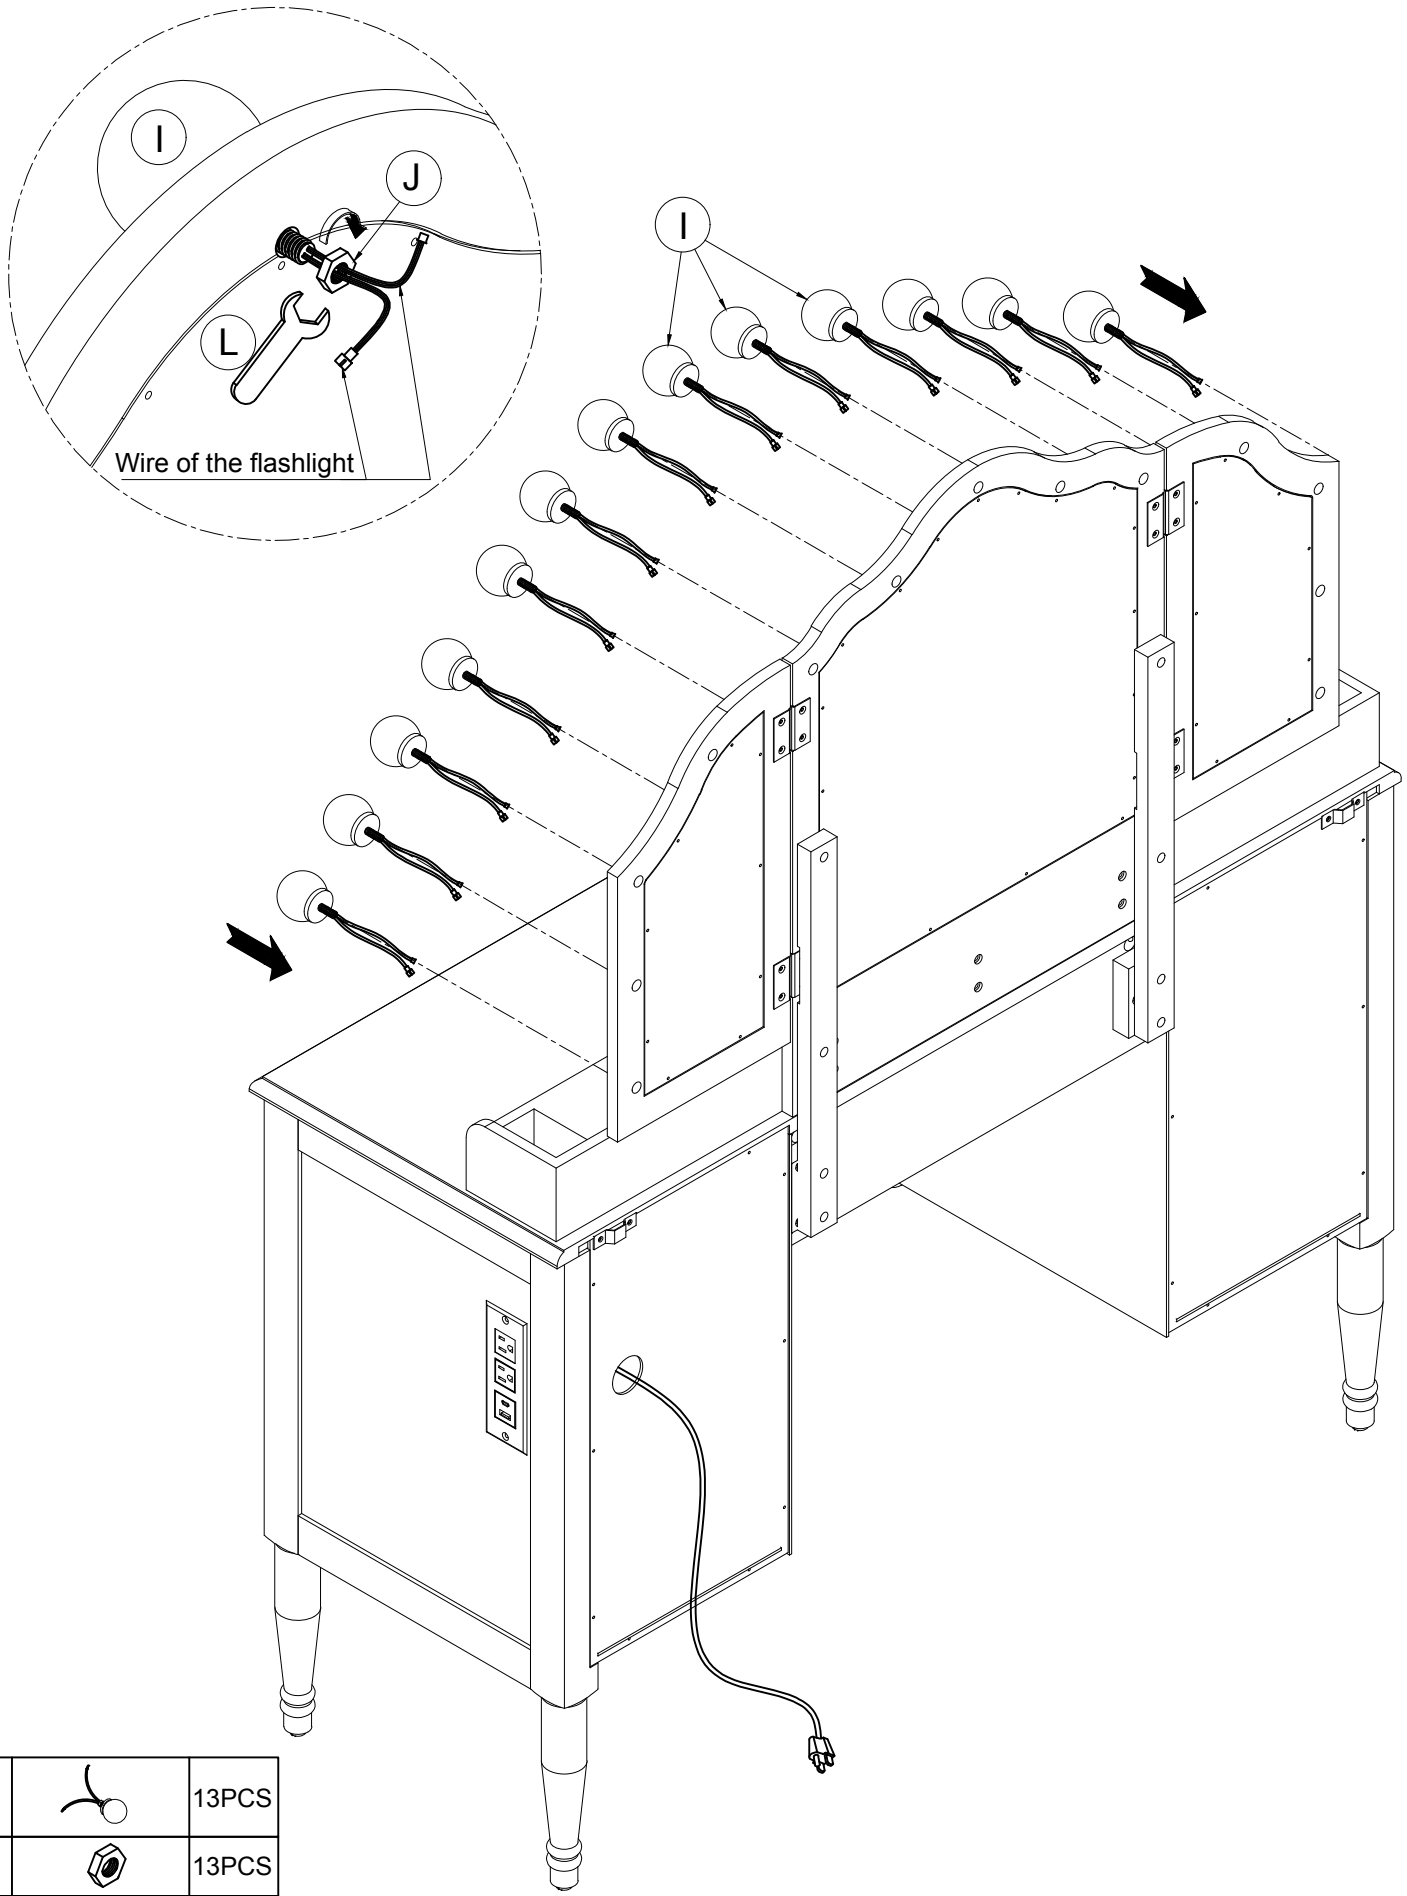


I		13PCS
J		13PCS
L		1PC

ASSEMBLY INSTRUCTIONS


STEP 38

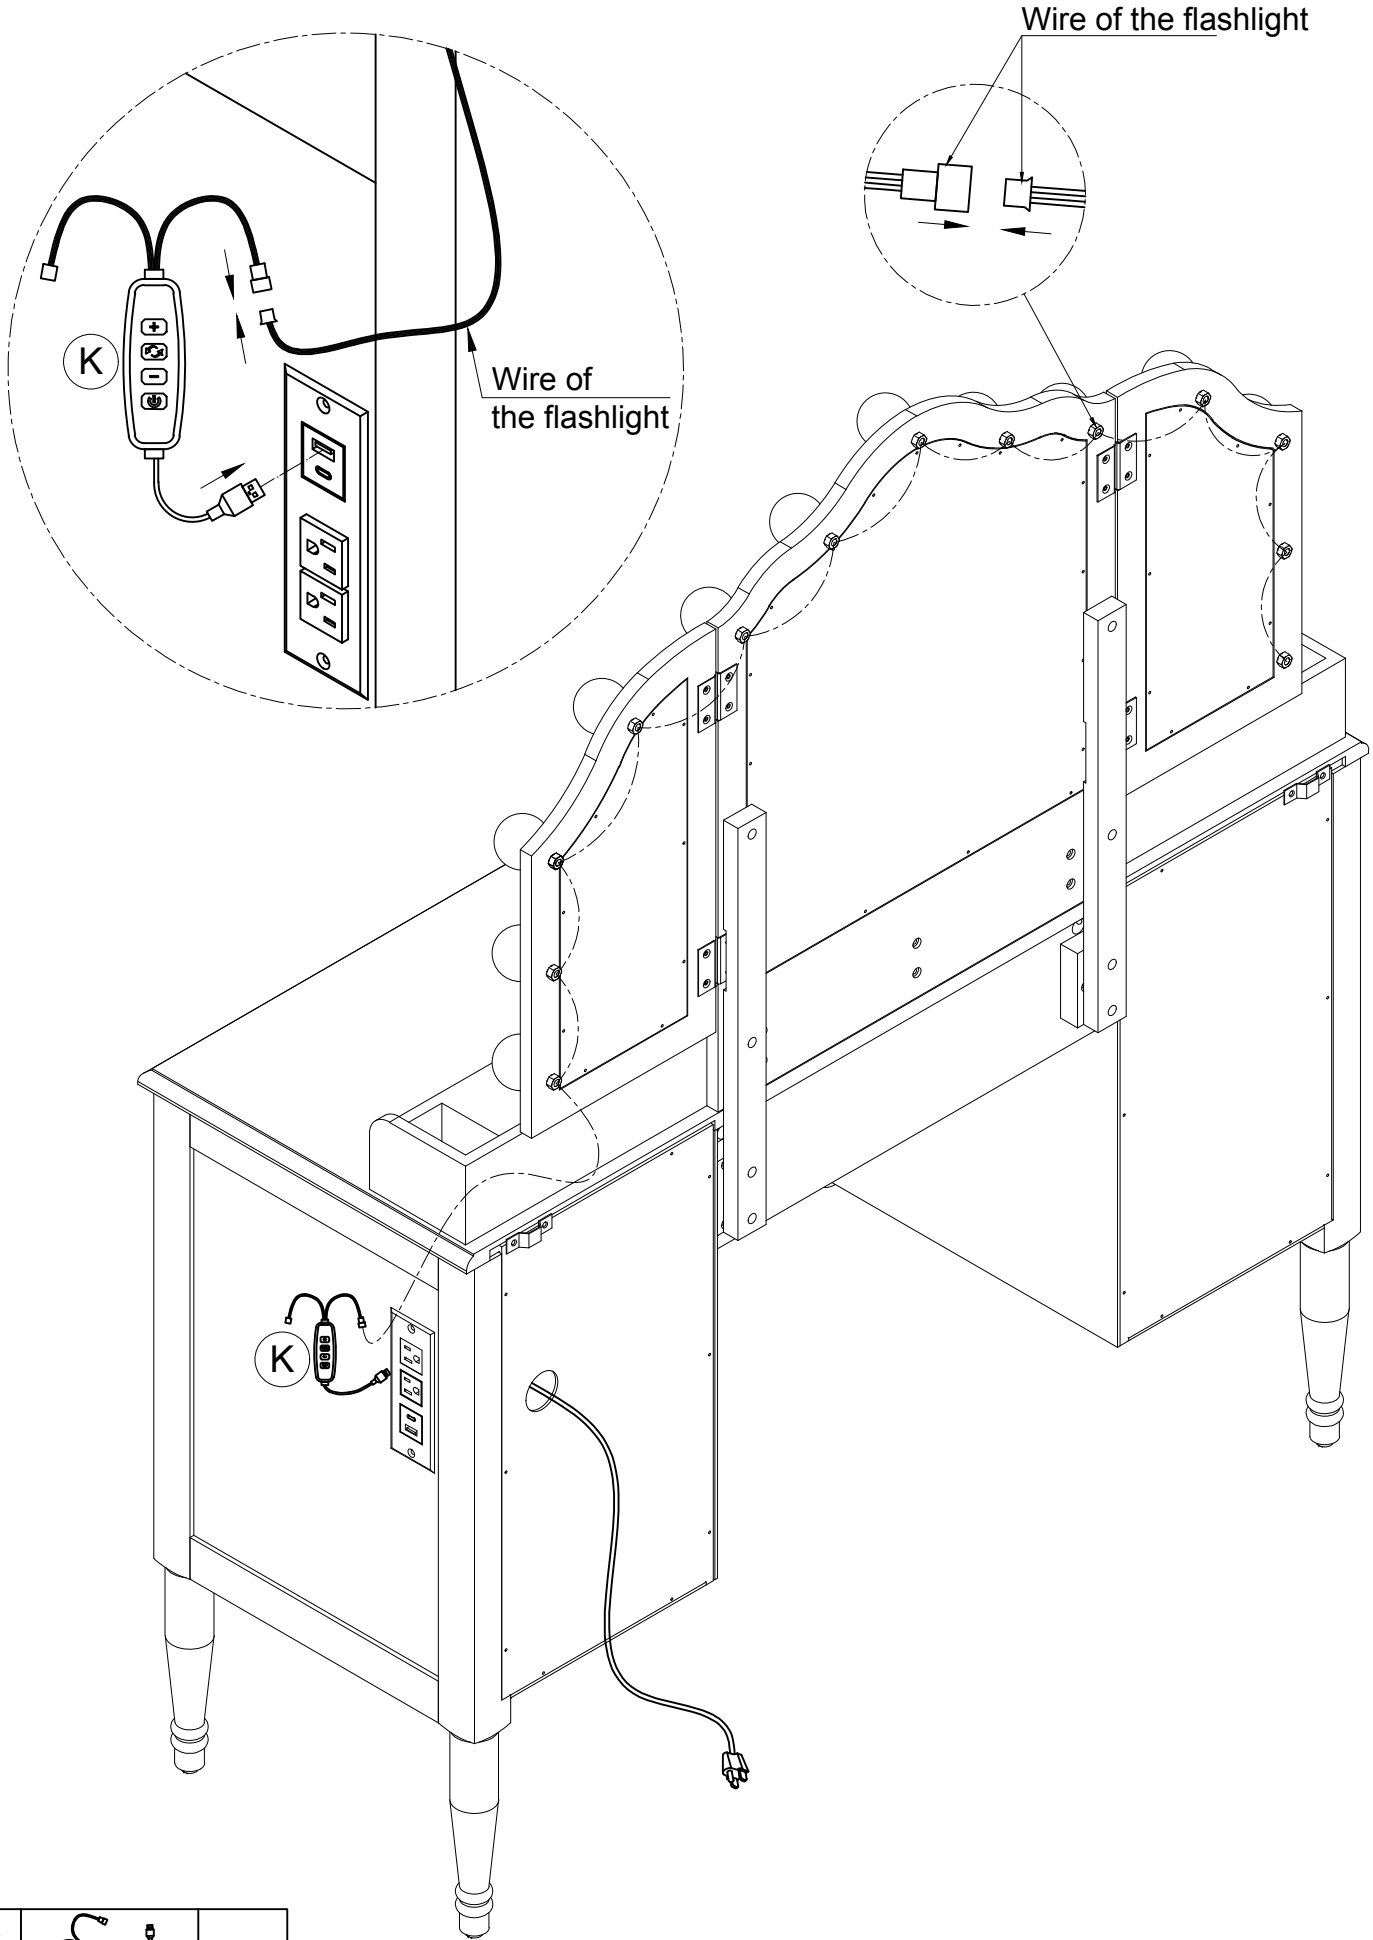

K		1PC

ASSEMBLY INSTRUCTIONS


STEP 39

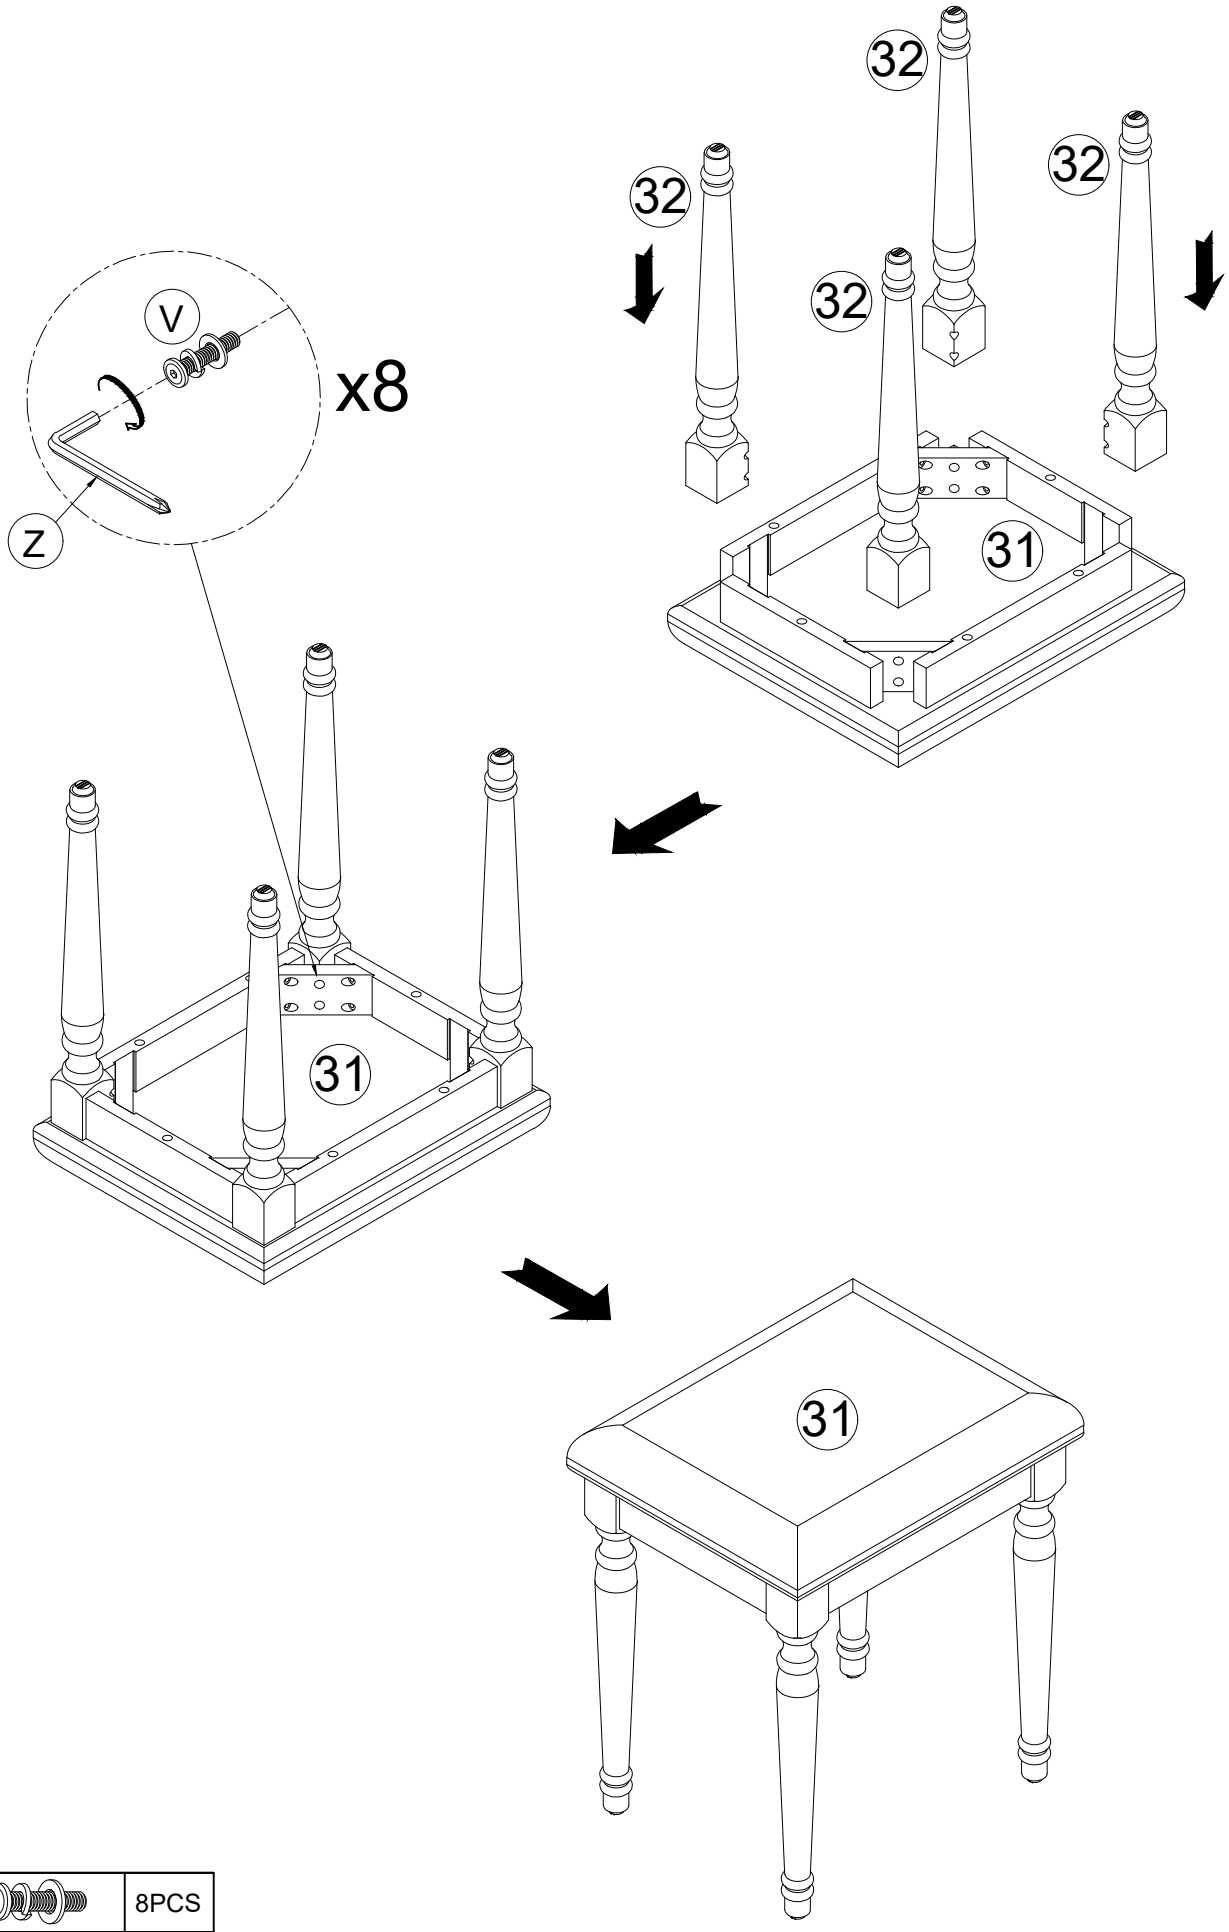

V		8PCS
Z		1PC

ASSEMBLY INSTRUCTIONS


STEP 40

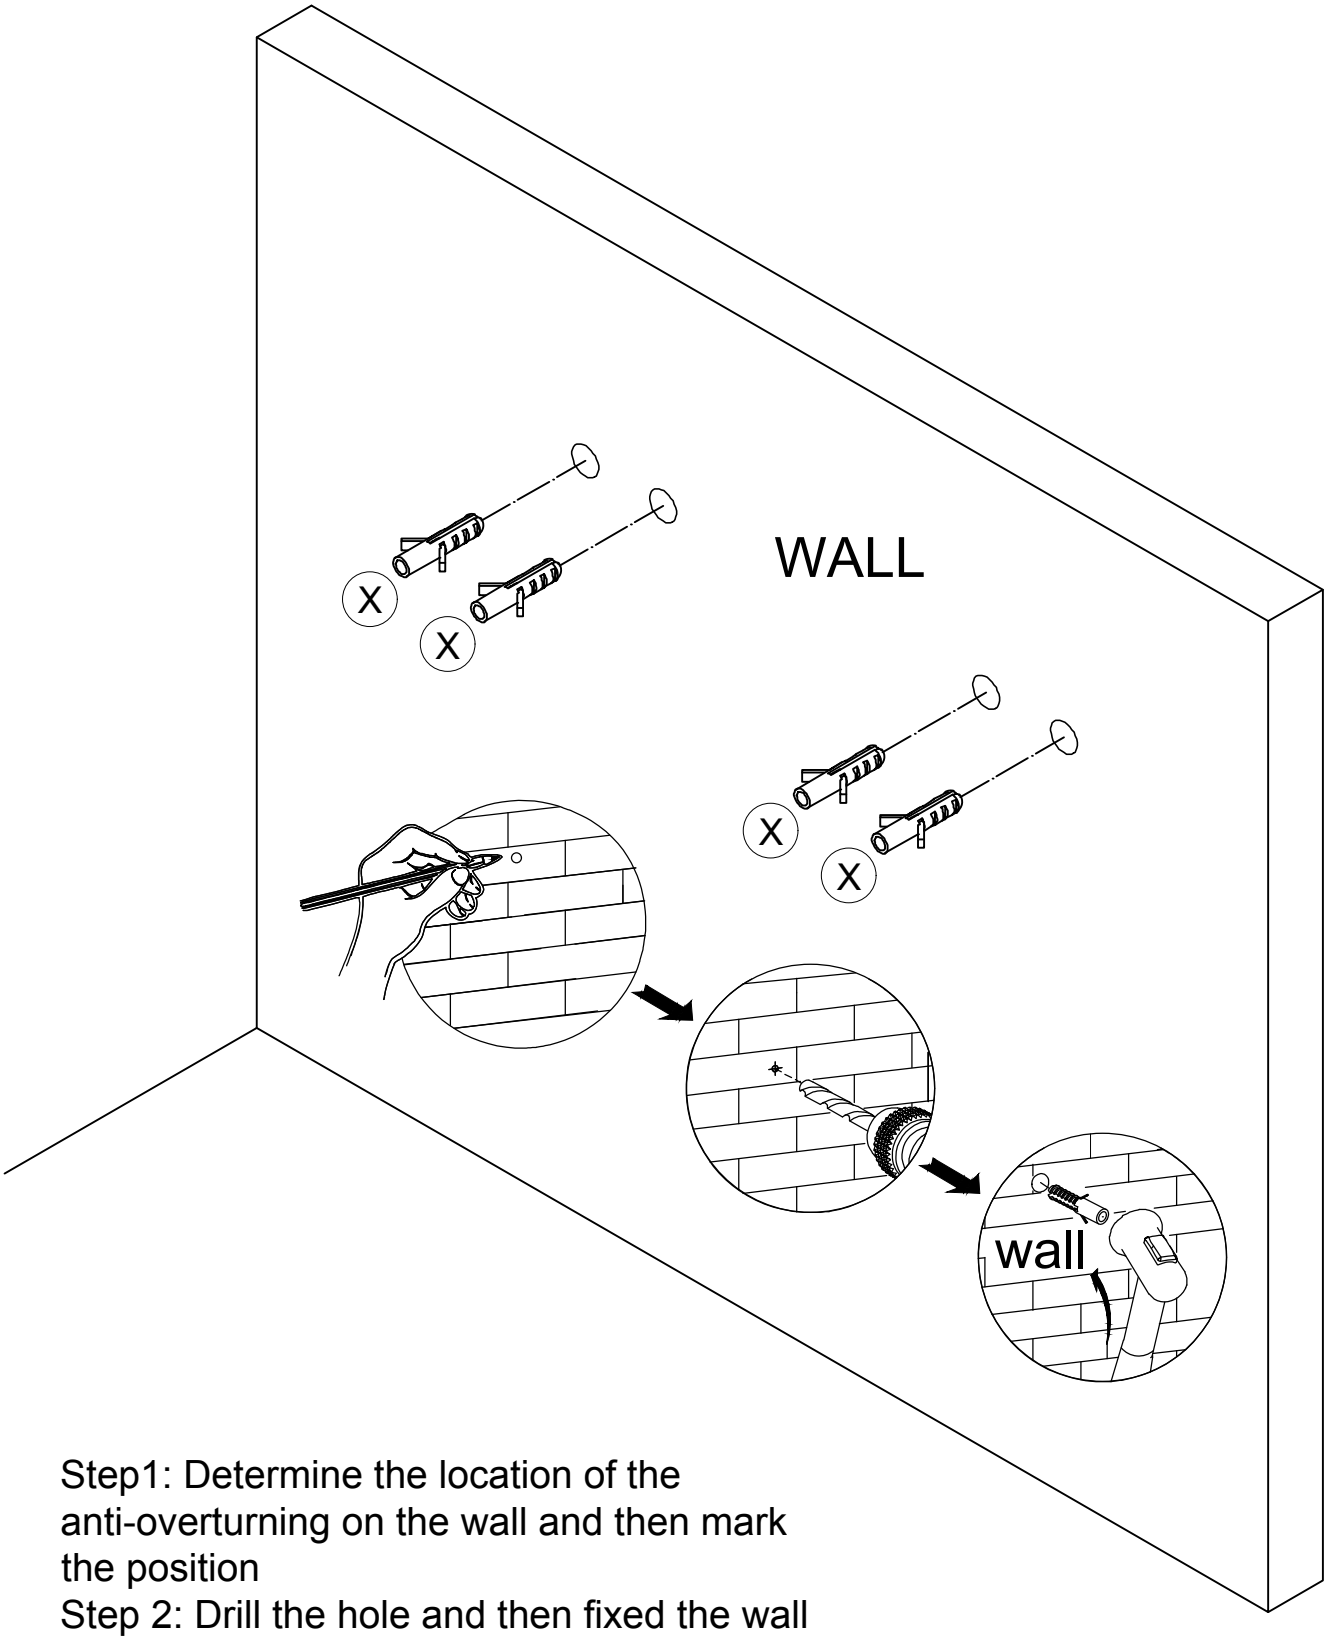


Step1: Determine the location of the anti-overturning on the wall and then mark the position
Step 2: Drill the hole and then fixed the wall plug (X) on the wall

X		4PCS

STEP 41

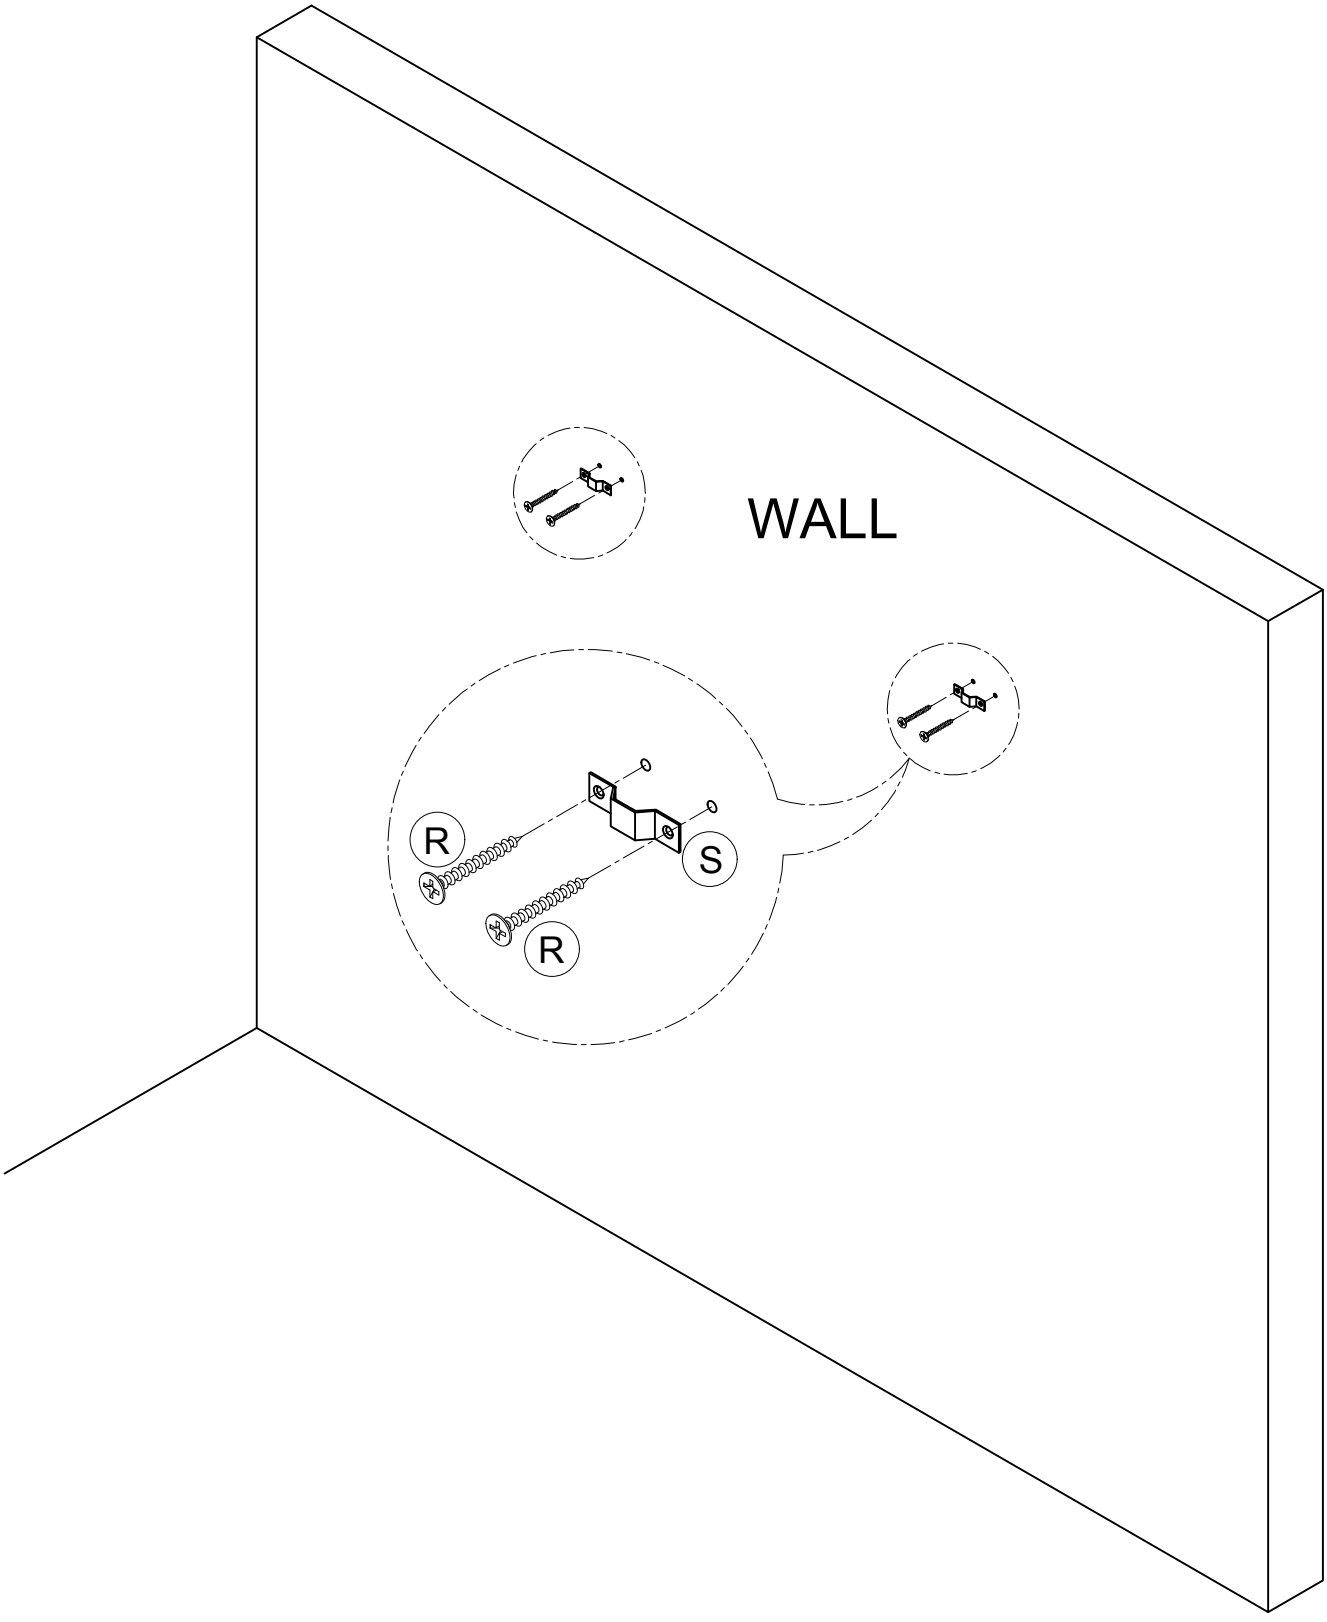


Step 3: use screw (**R**) to fix (**S**) on the wall

S		2PCS
R		4PCS

ASSEMBLY INSTRUCTIONS

STEP 42

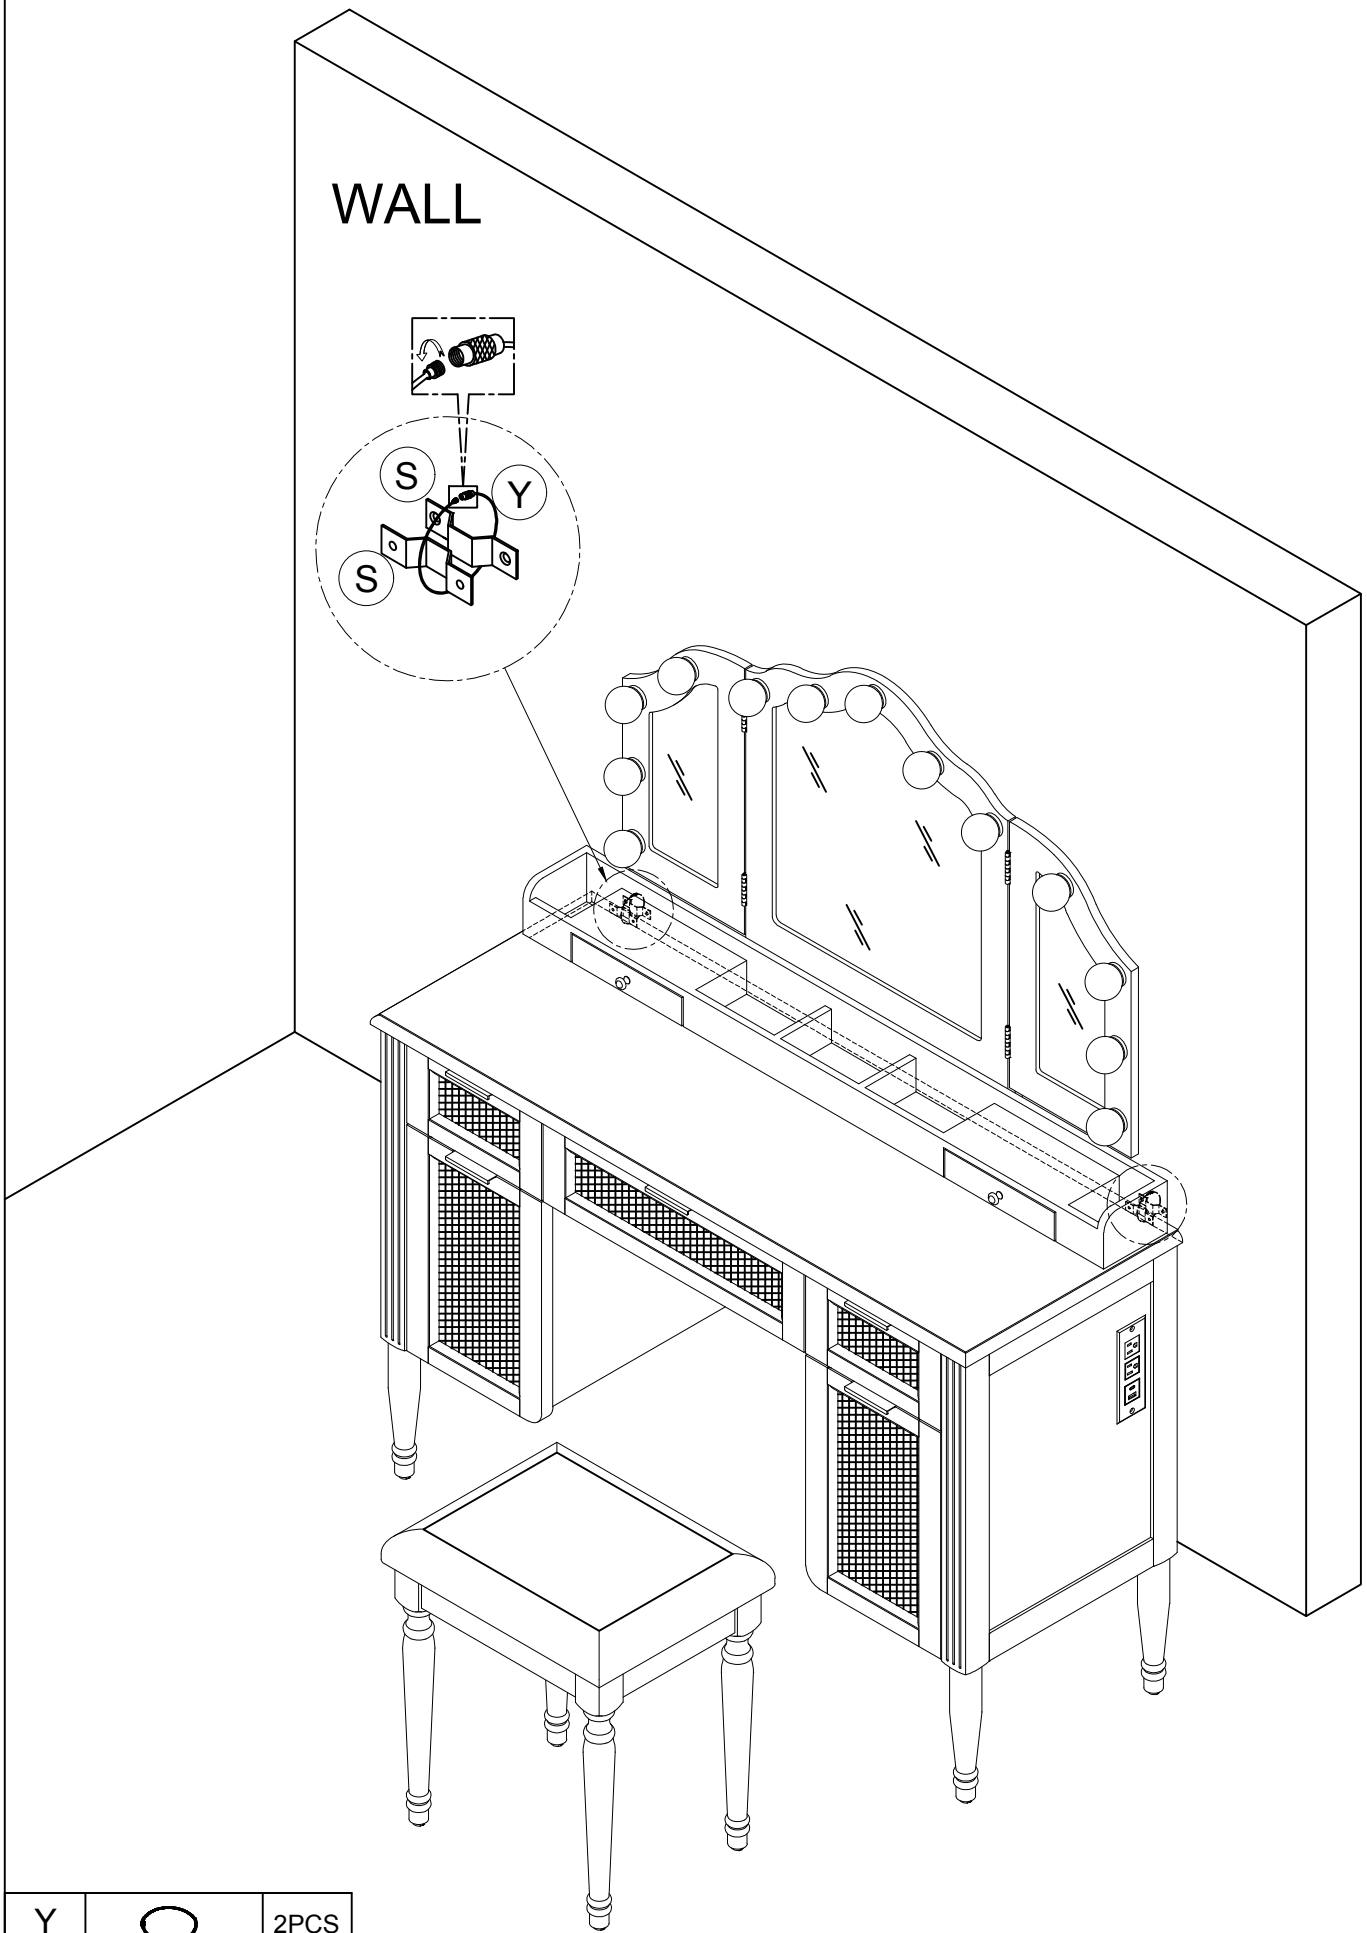

Y	⬭	2PCS