

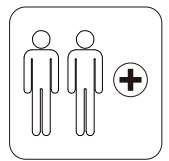
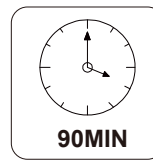
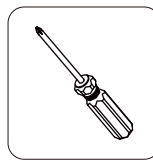
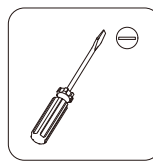


HLG047


Version : 2.0

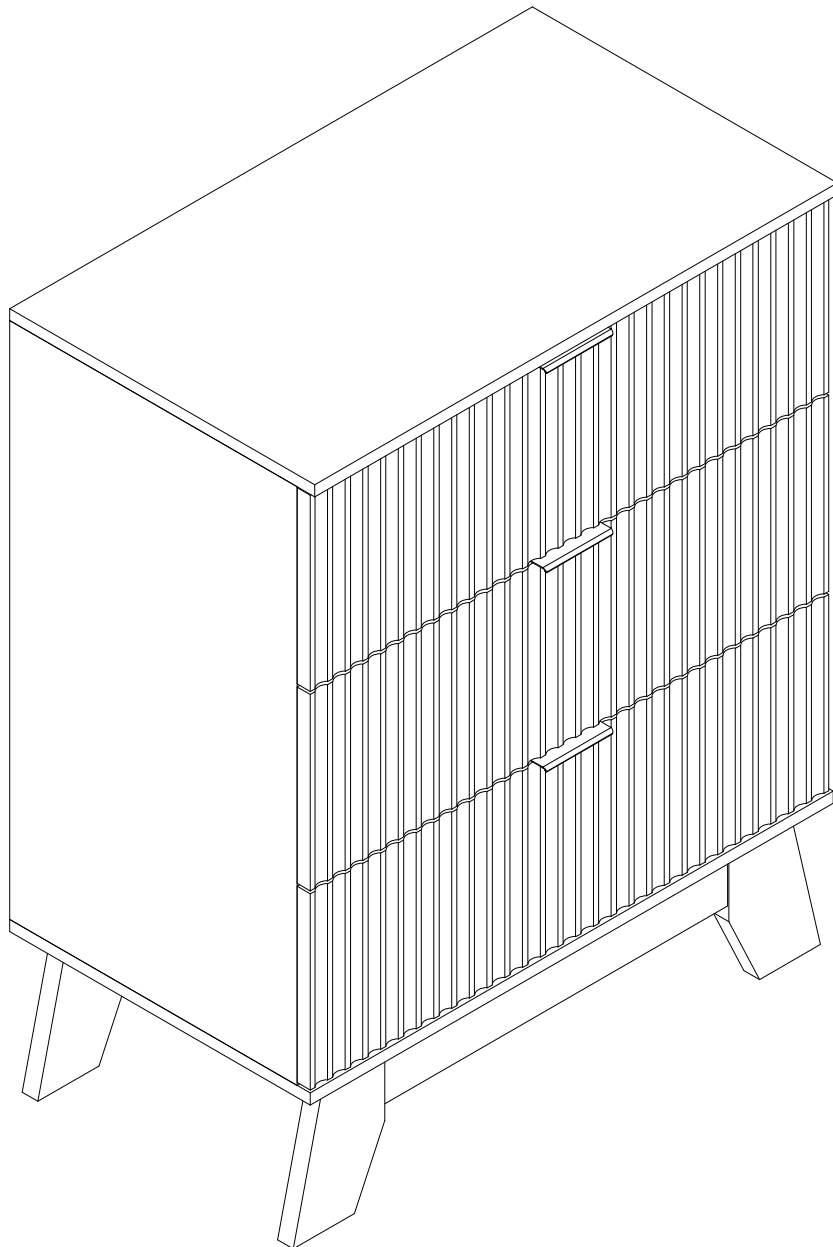


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

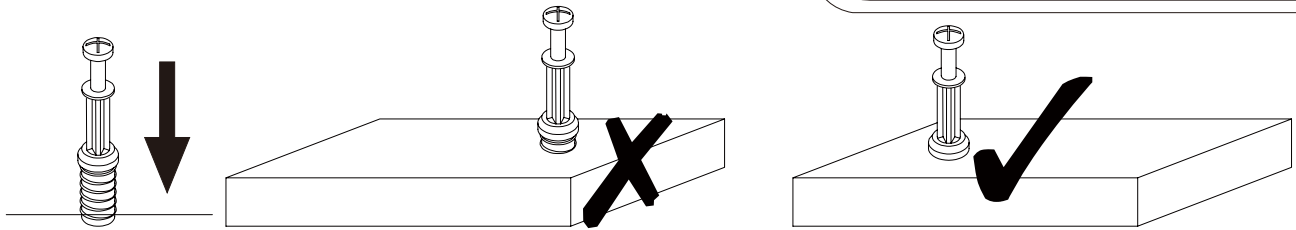


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

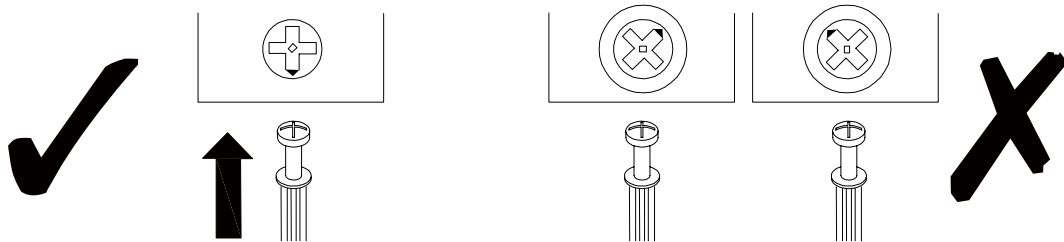

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











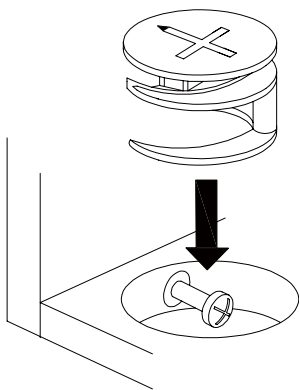









EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



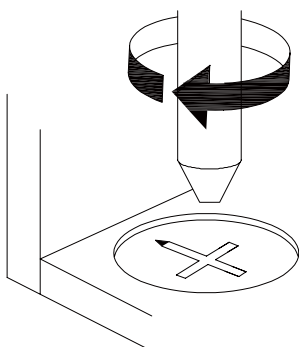


EN_Turn cam lock clockwise to tighten.

PACKING DELALS

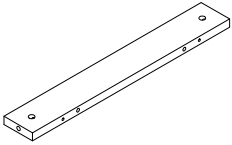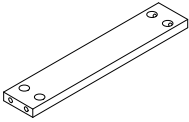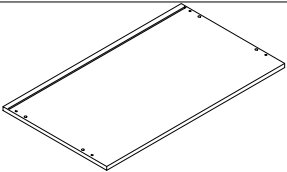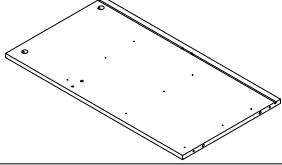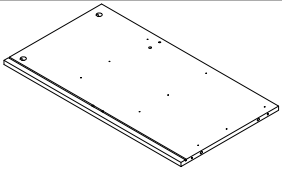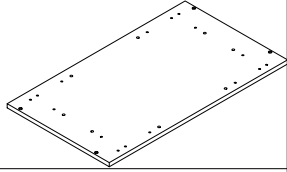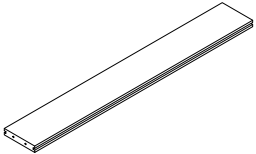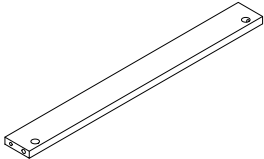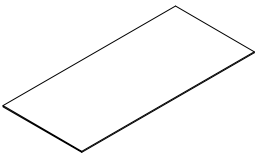NO.	PARTS	QTY	SPARE
①		x2	
②		x2	
③		x2	
④		x2	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	
⑪		x2	

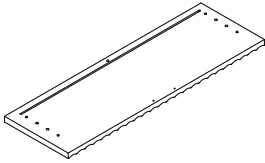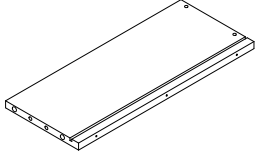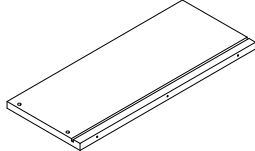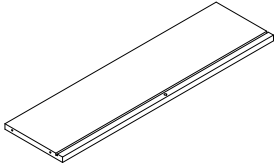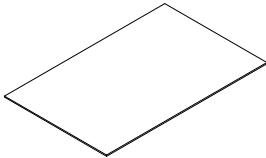
NO.	PARTS	QTY	SPARE
⑫		x3	
⑬		x3	
⑭		x3	
⑮		x3	
⑯		x3	
⑰		x3	
			
	Hardware Kit		

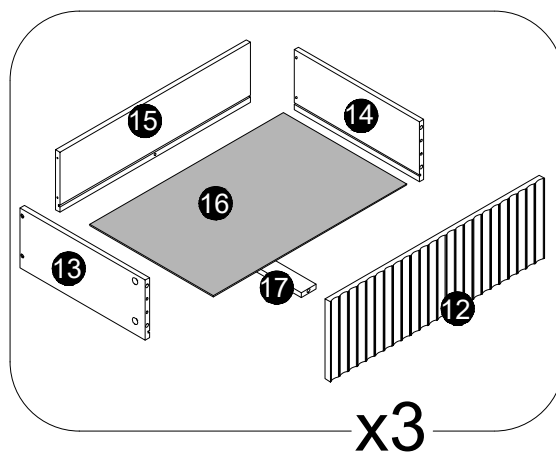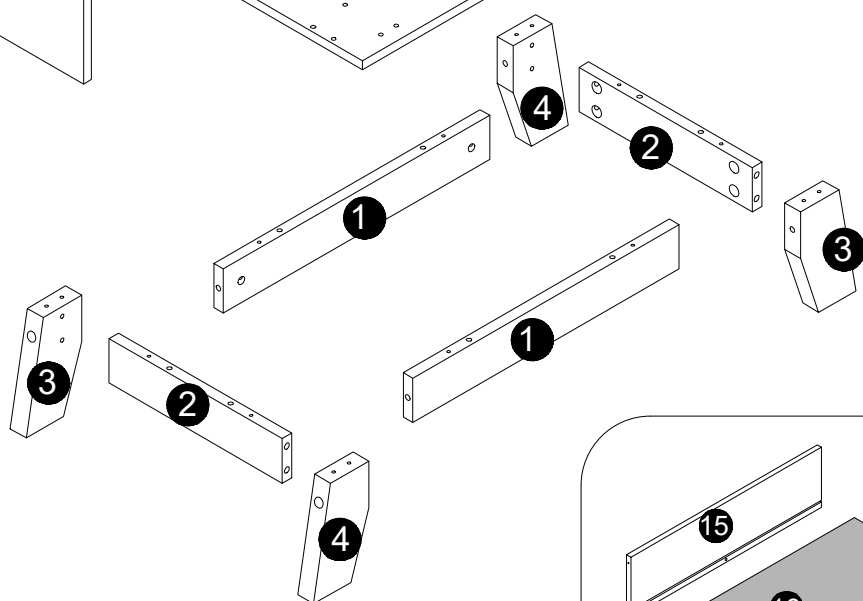
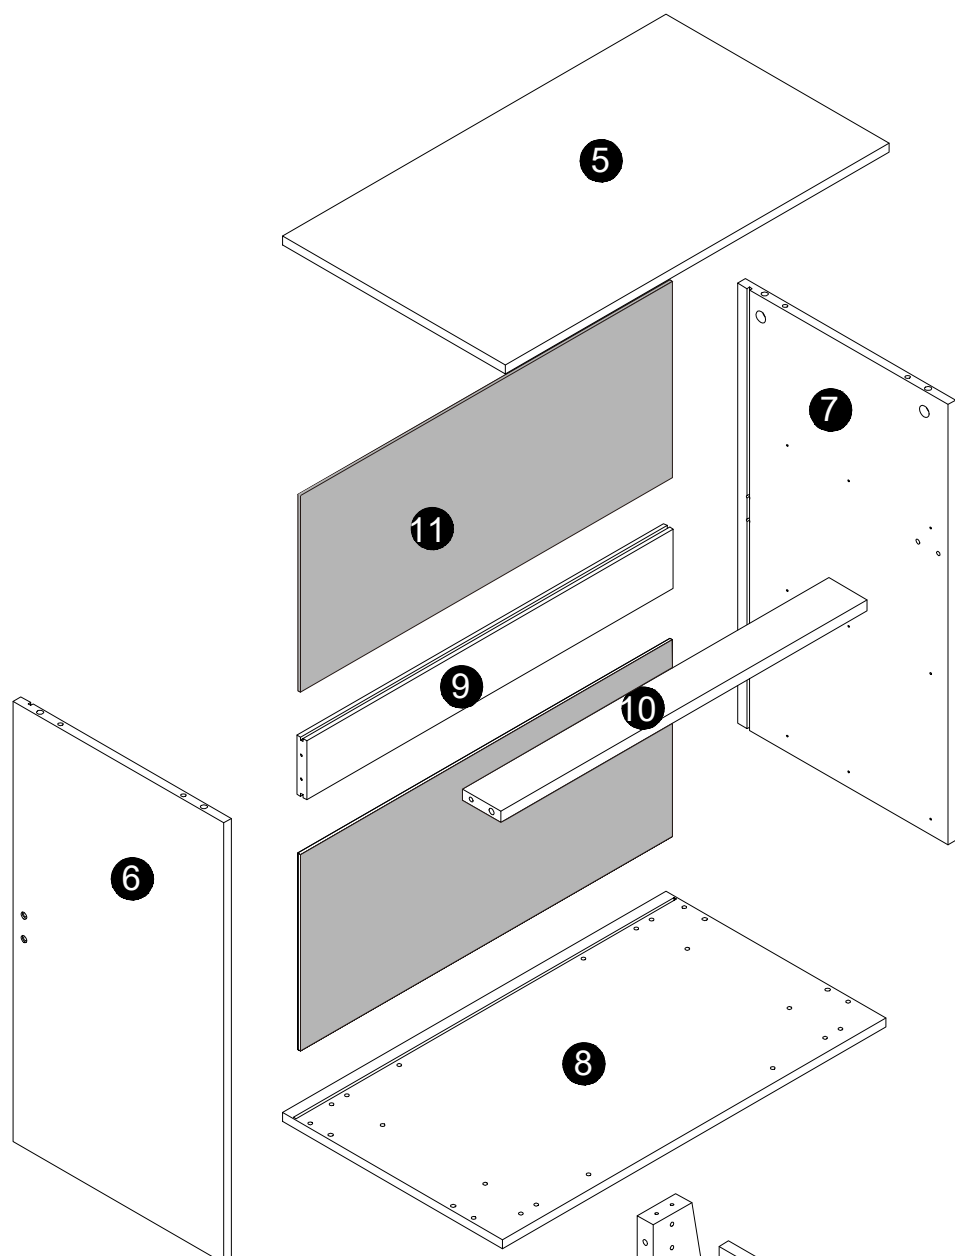


A x29 Ø6x35mm +2(spare)	B x29 Ø15x10mm +2(spare)	C x30 Ø6x30mm +3(spare)	D x23 Ø4x35mm +2(spare)	E x36 Ø3.5x12mm +3(spare)	F x3 F1 F2
G x2	H x8 Ø3x16mm H1 H2	I x2 Ø6x30mm I1 I2	J x2 Ø4x14mm	K x16 Ø5x35mm +1(spare)	L x4
CL x3 L300mm	CR x3 L300mm	DL x3 L300mm	DR x3 L300mm	M x4 M1 M2	N x8

A x15	B x15	D x15	C x12
--------------	--------------	--------------	--------------



x3 **01**

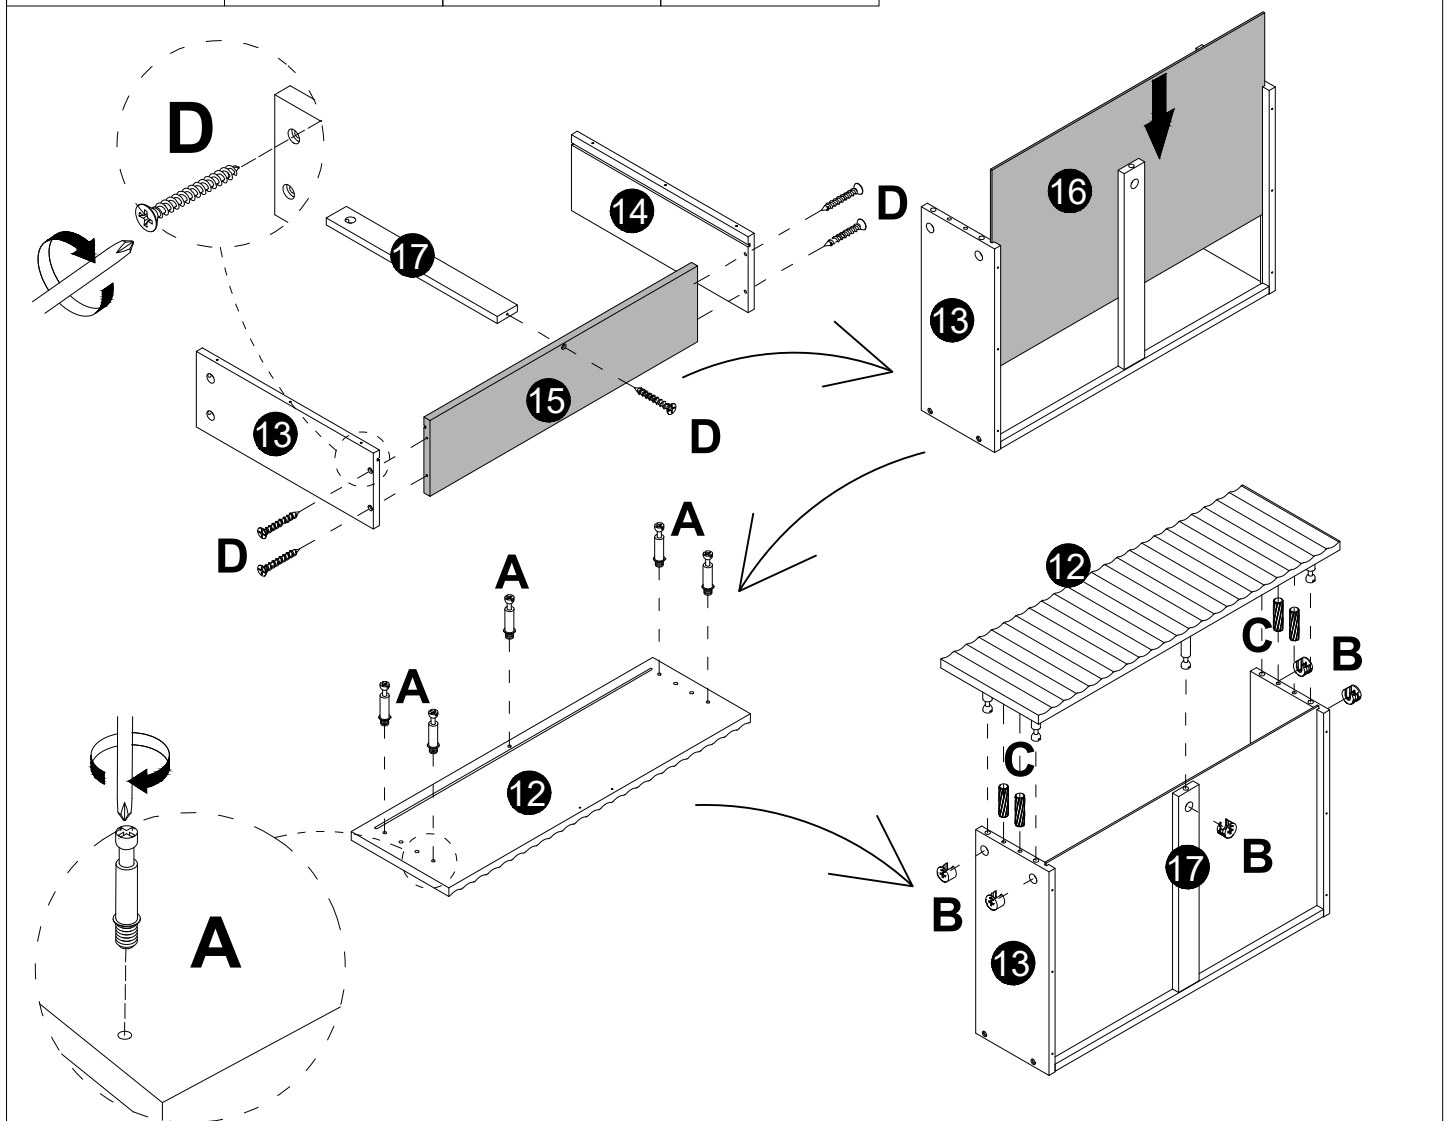

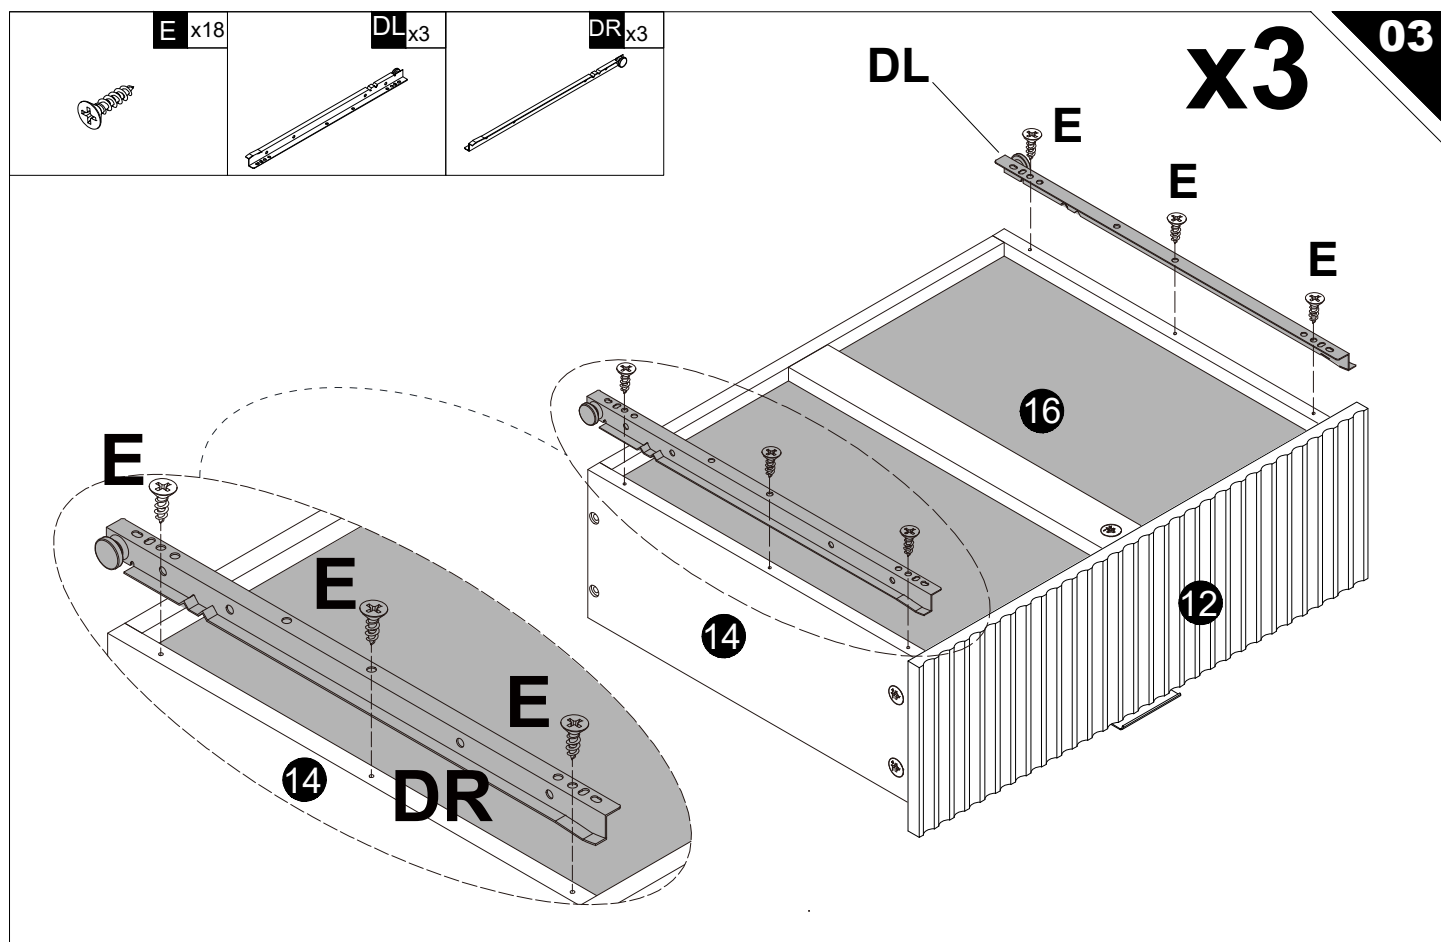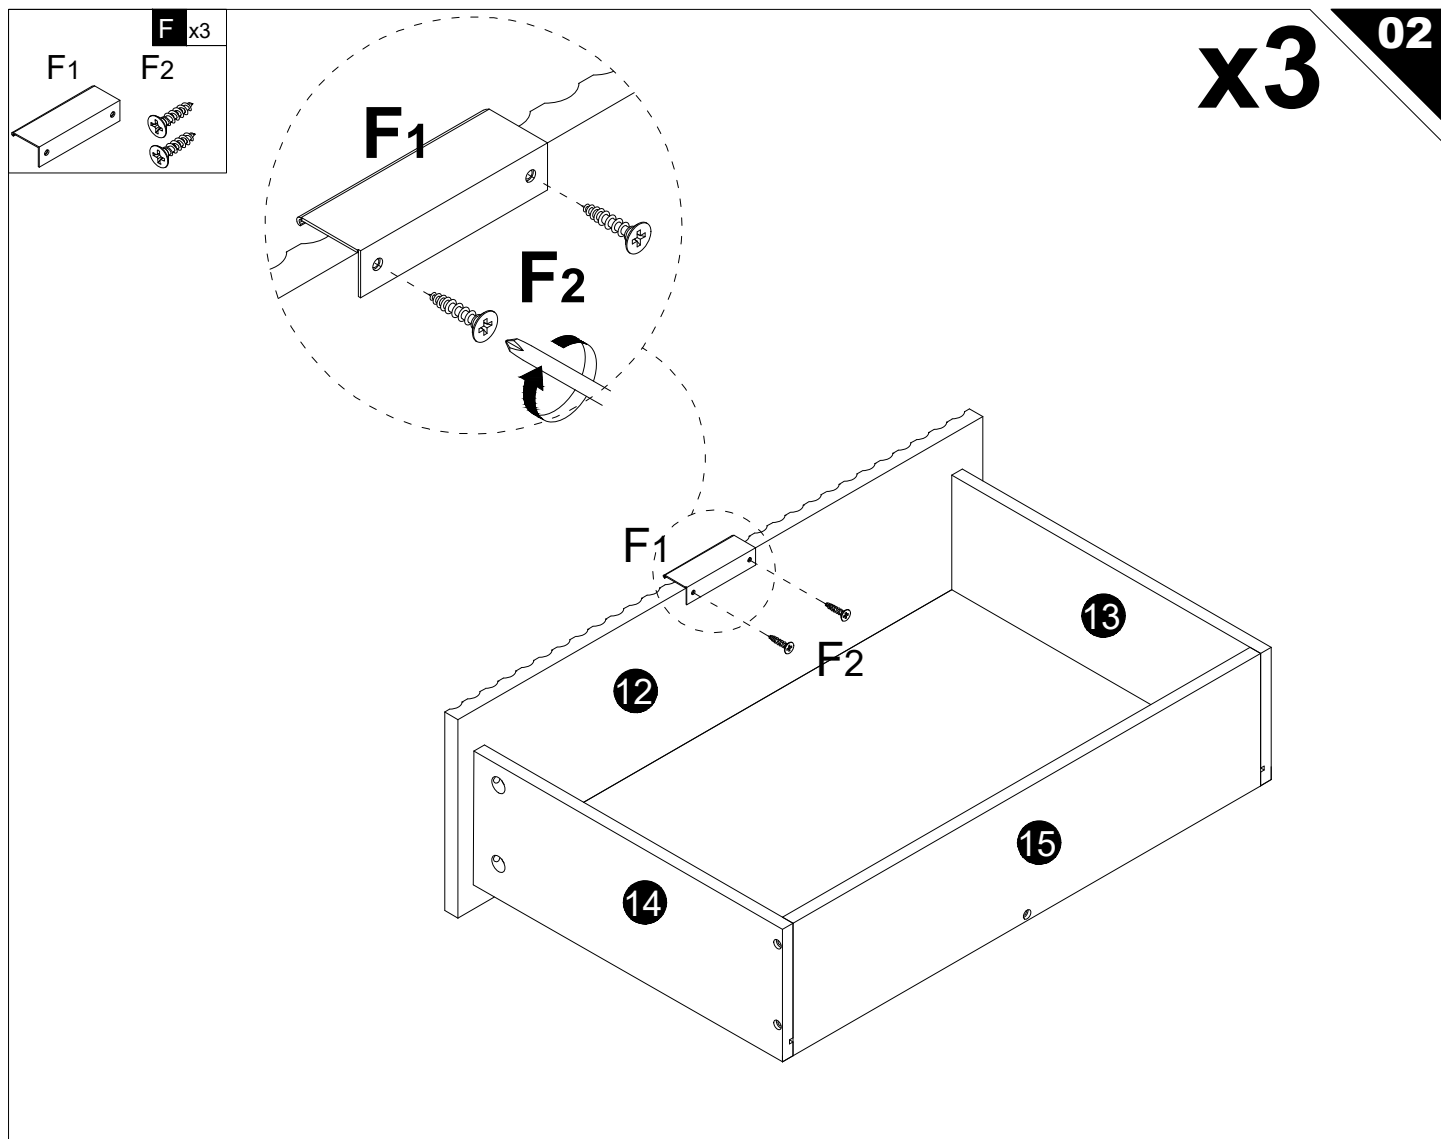

A x8

B x8

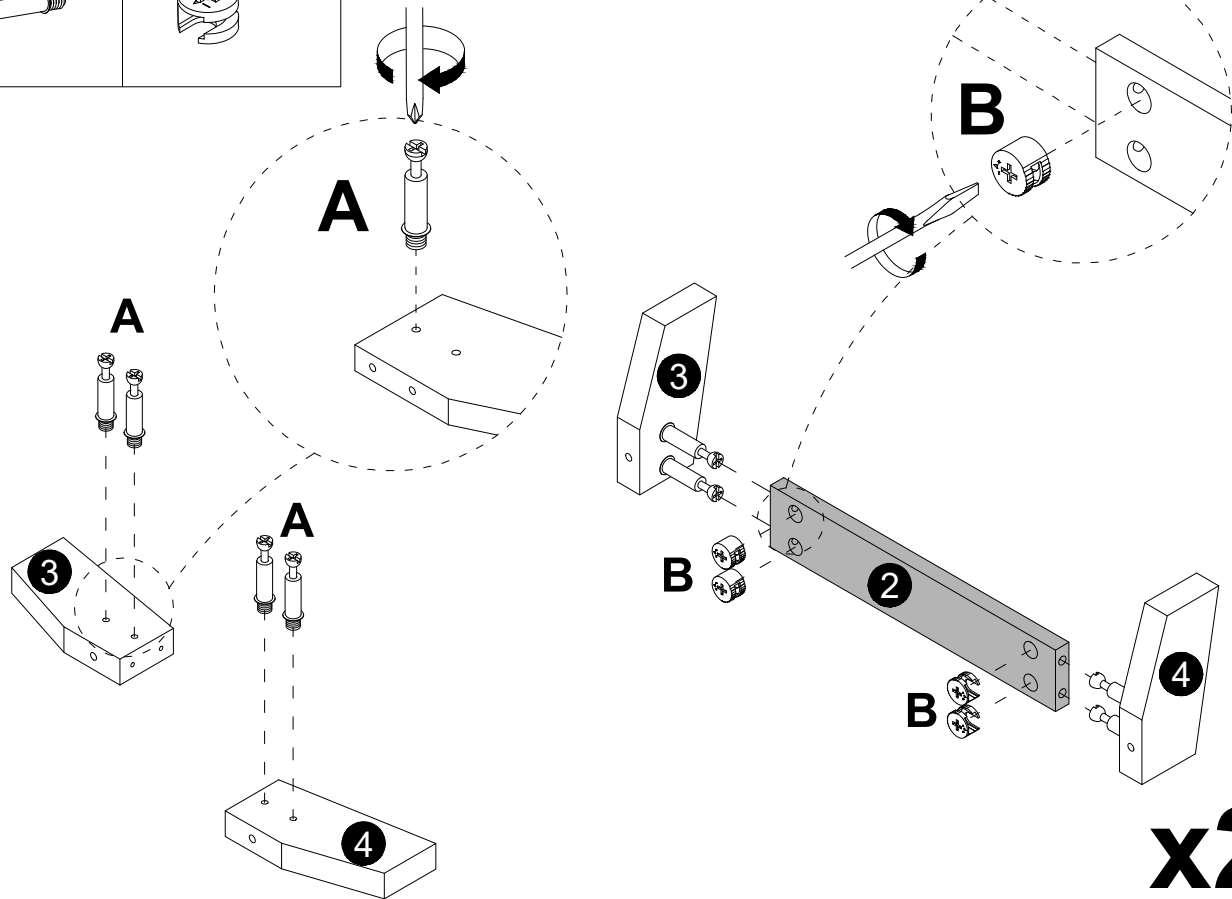


x2

M x4

M1

M2


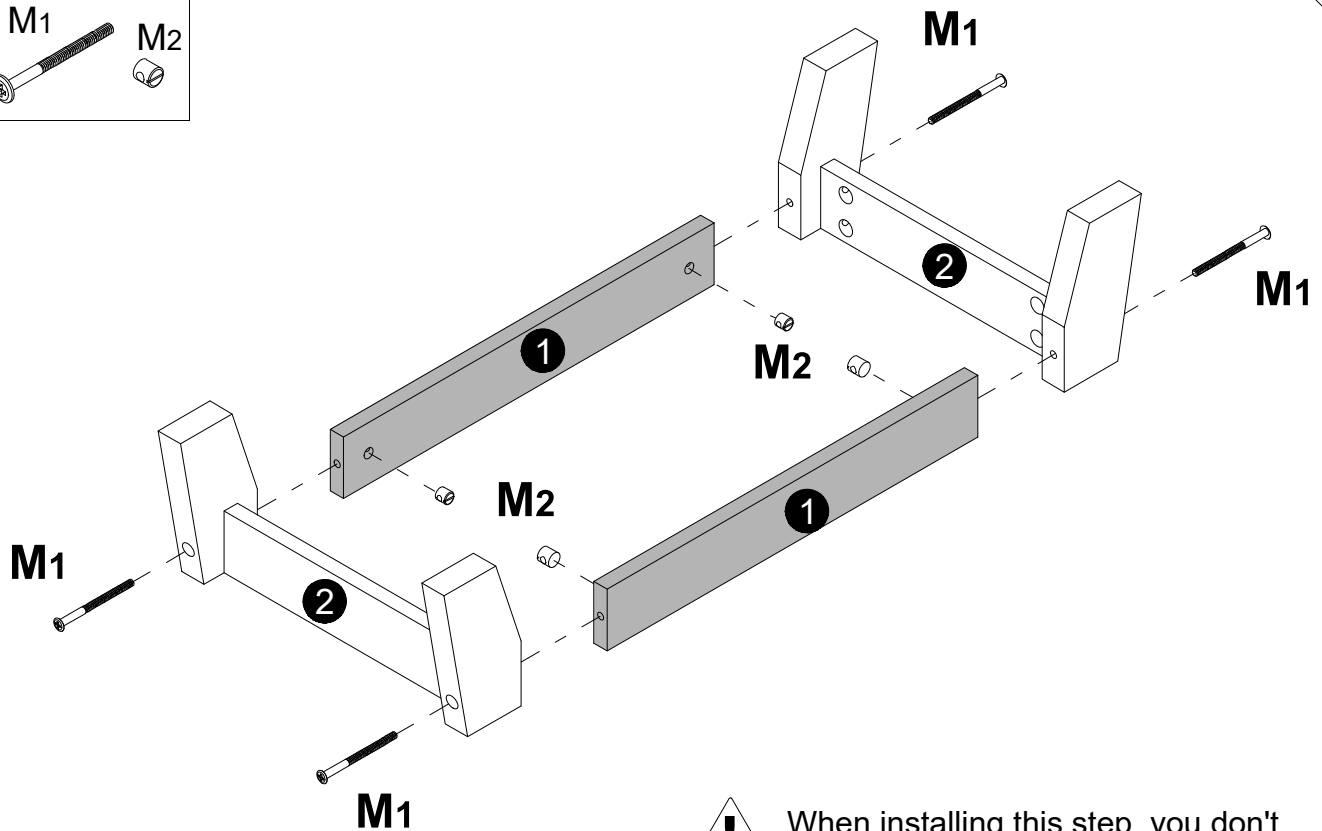


When installing this step, you don't need to lock it too tightly

C x8


K x16



Ø5x35mm

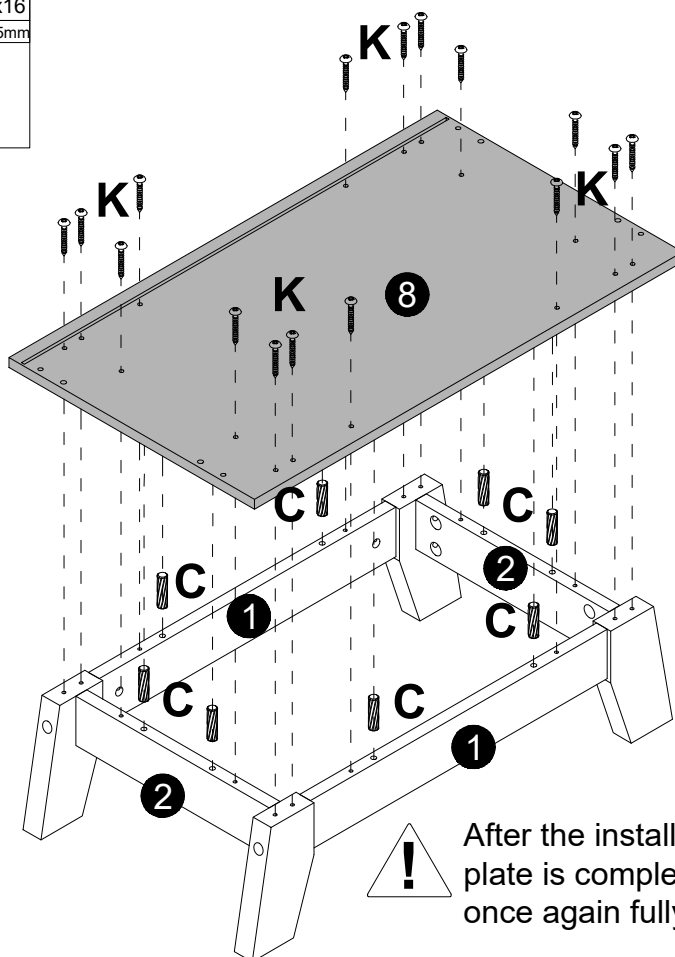

After the installation of the No. 8 base plate is completed, the lock M bolt is once again fully fixed on the leg

L x4


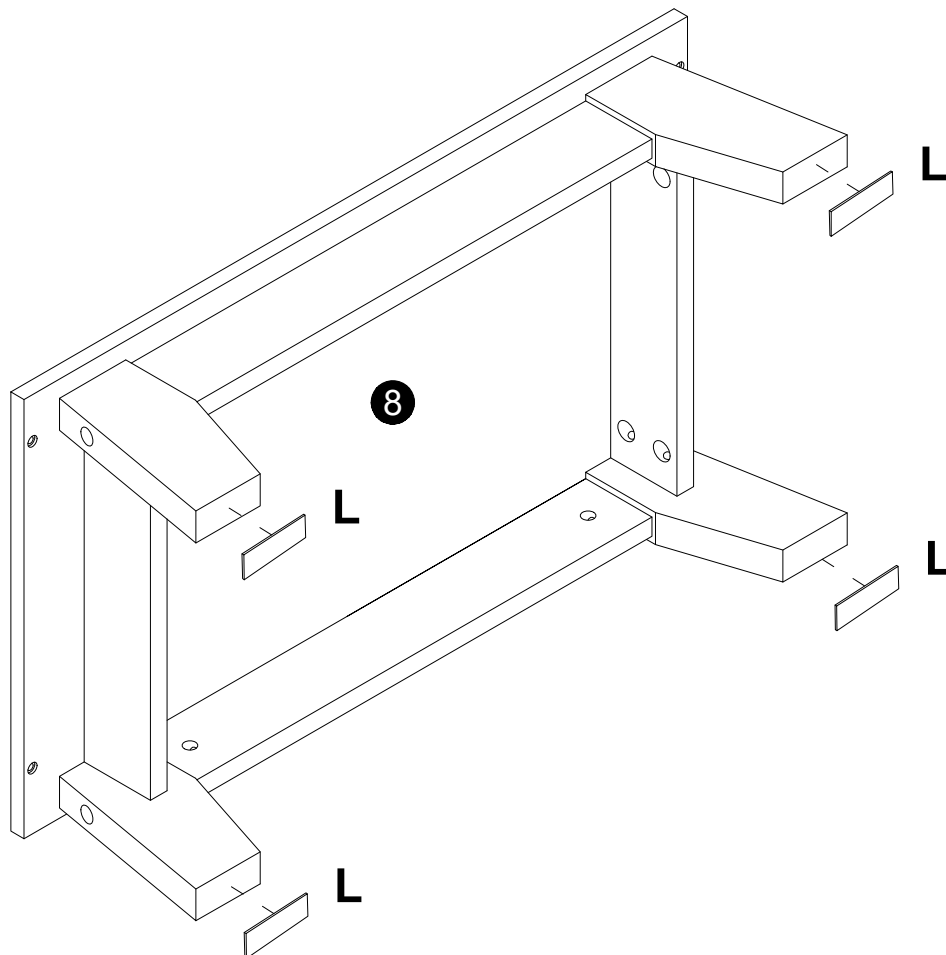


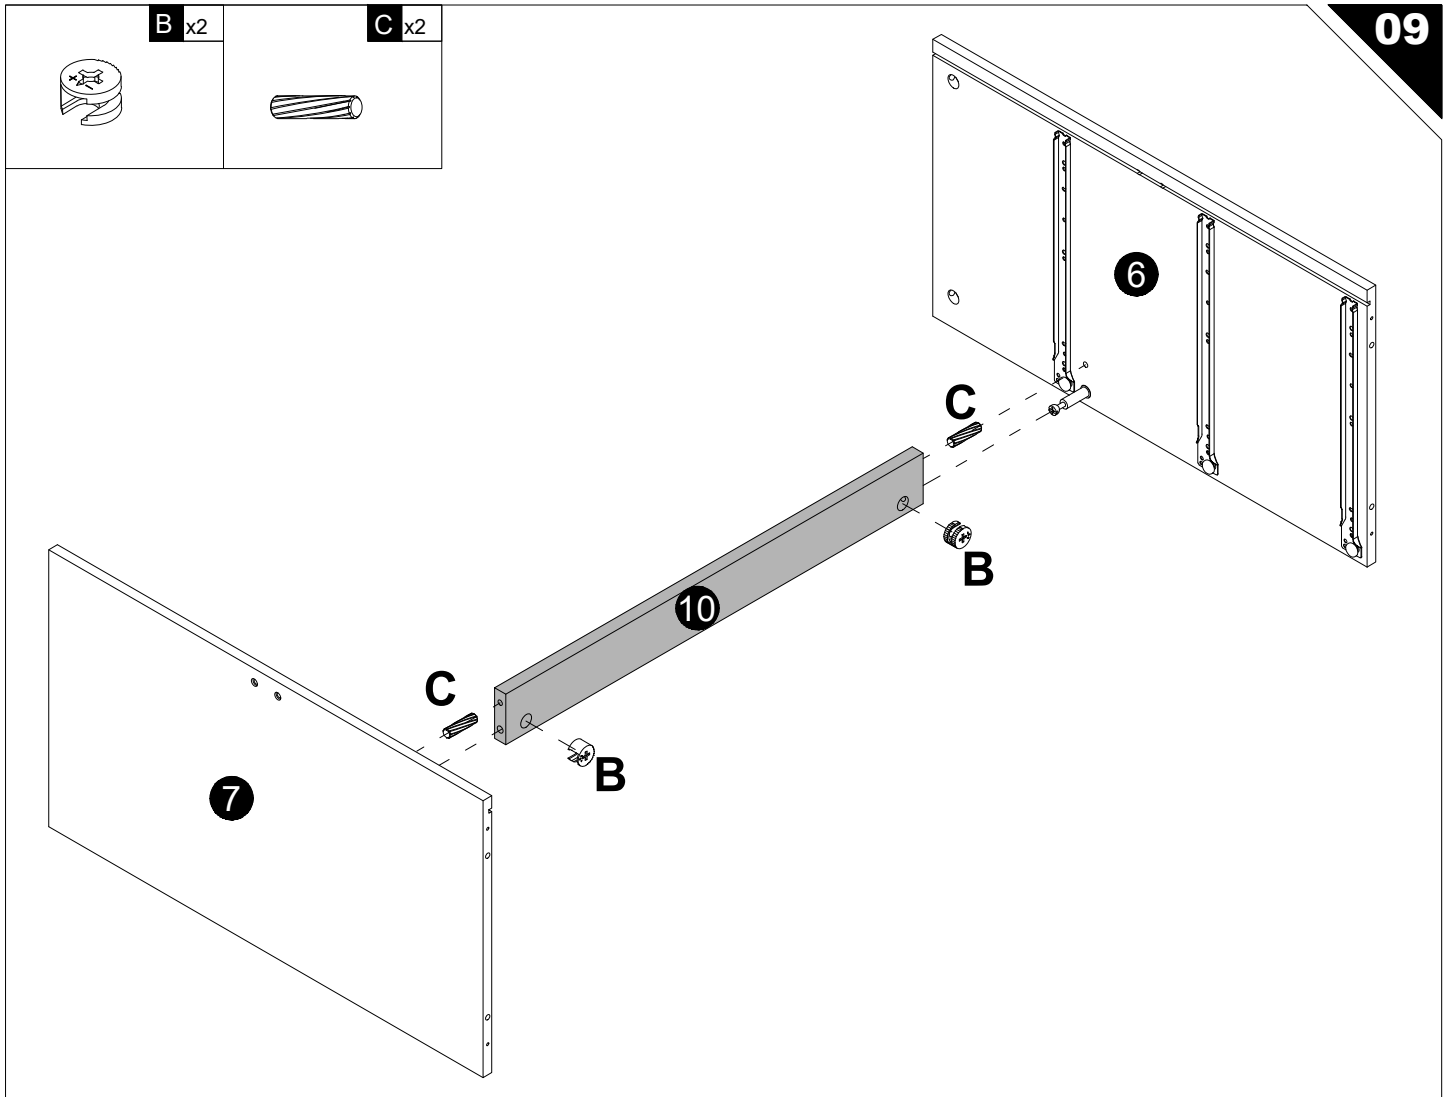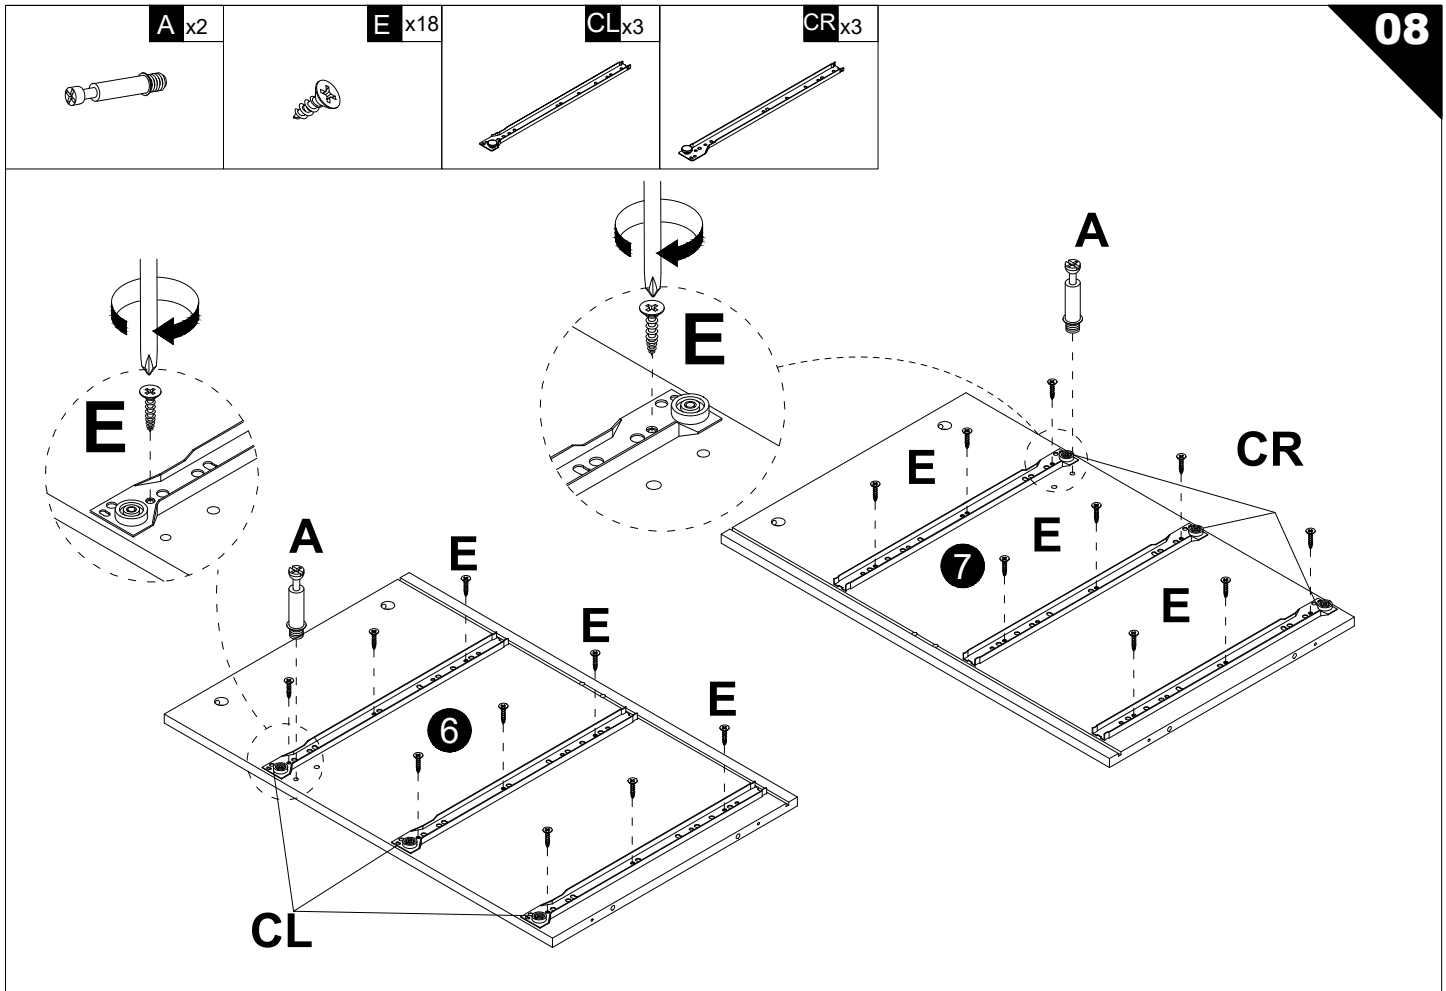


10

D x4


C x4

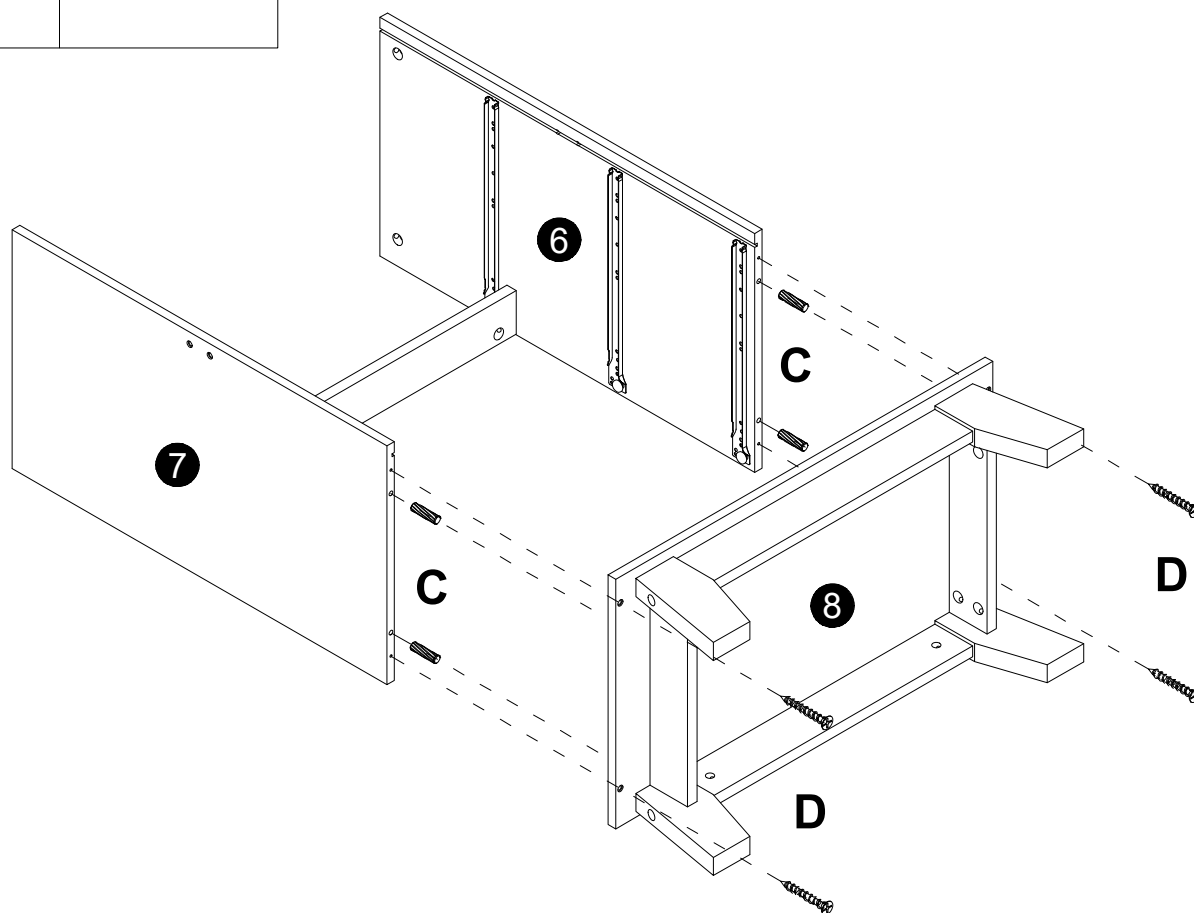


11

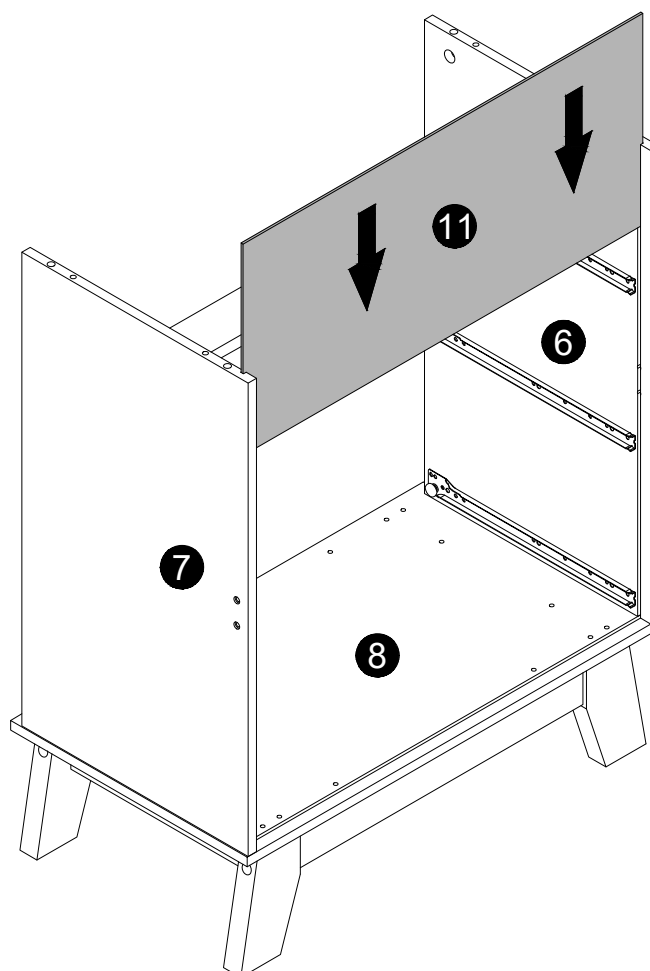


D x4



12

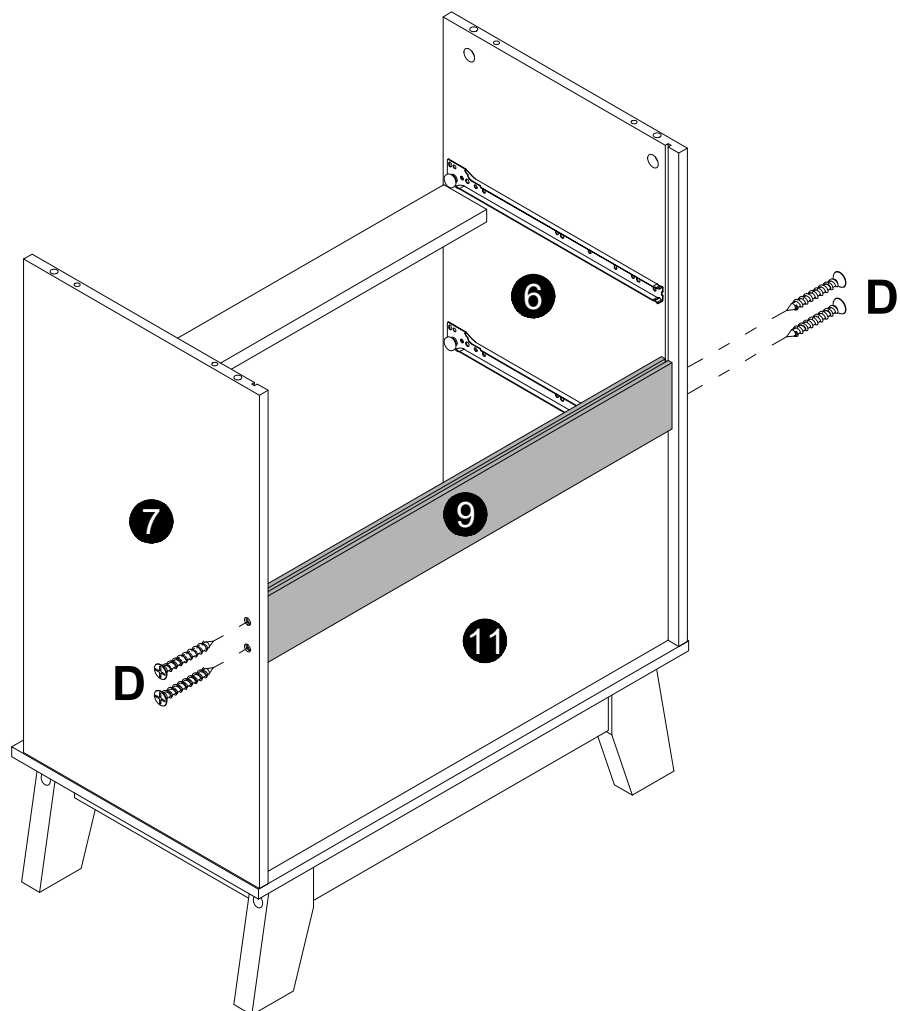


13

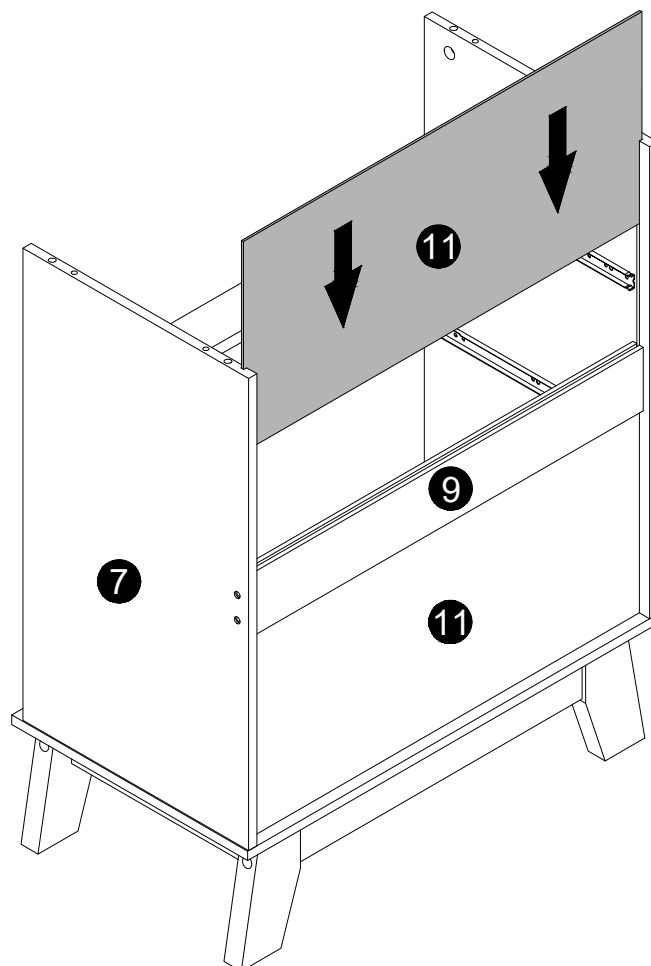

A x4



14

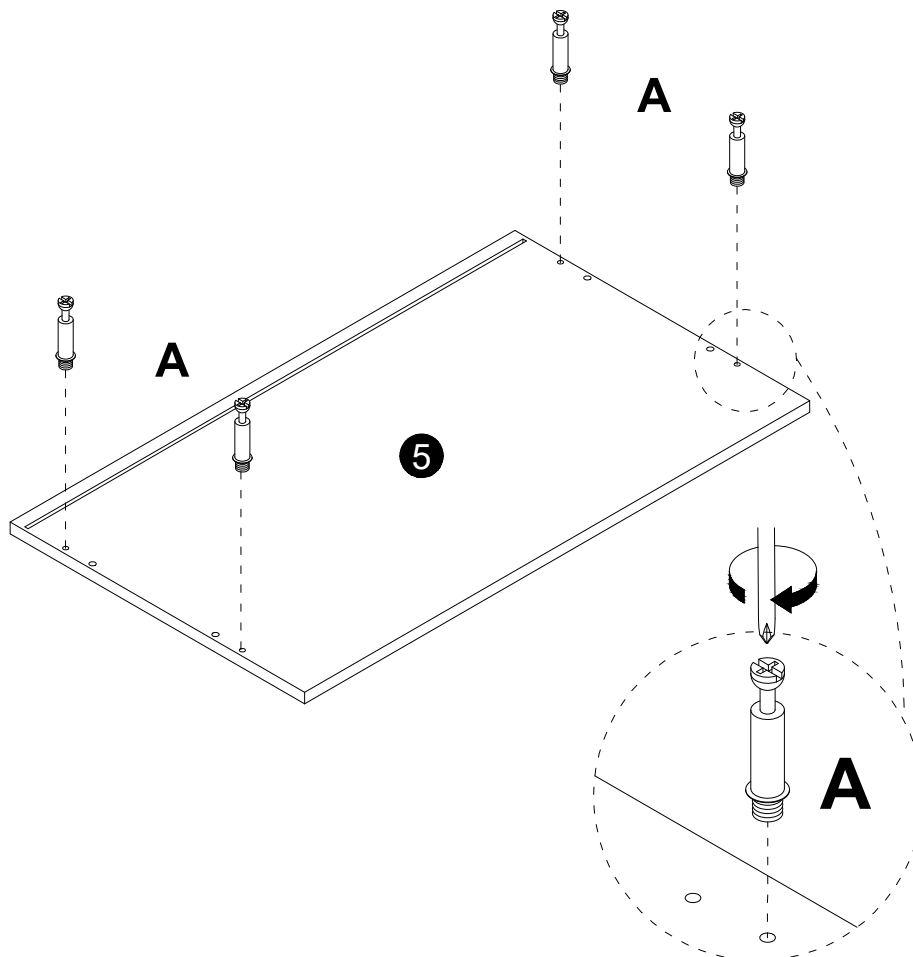

B x4




C x4




The backplate slots
are rearward



15


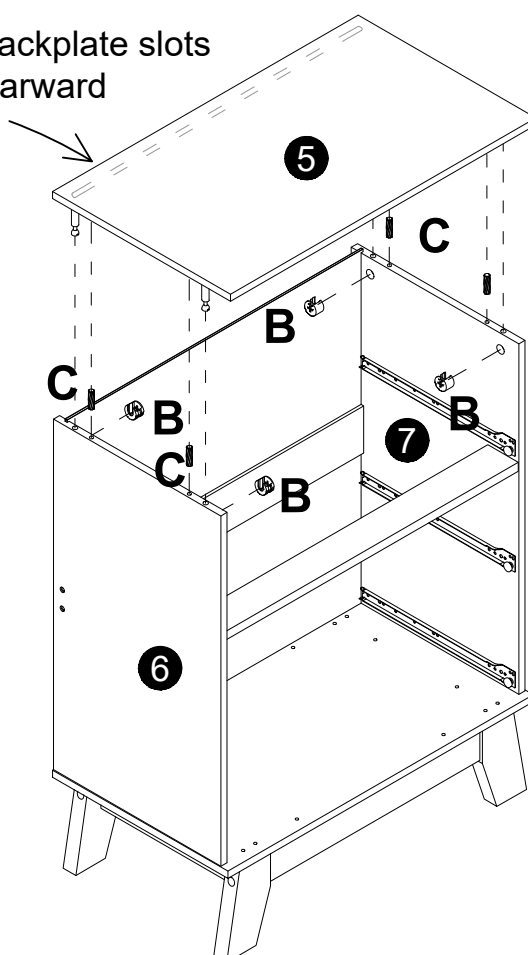


H x8


N x8

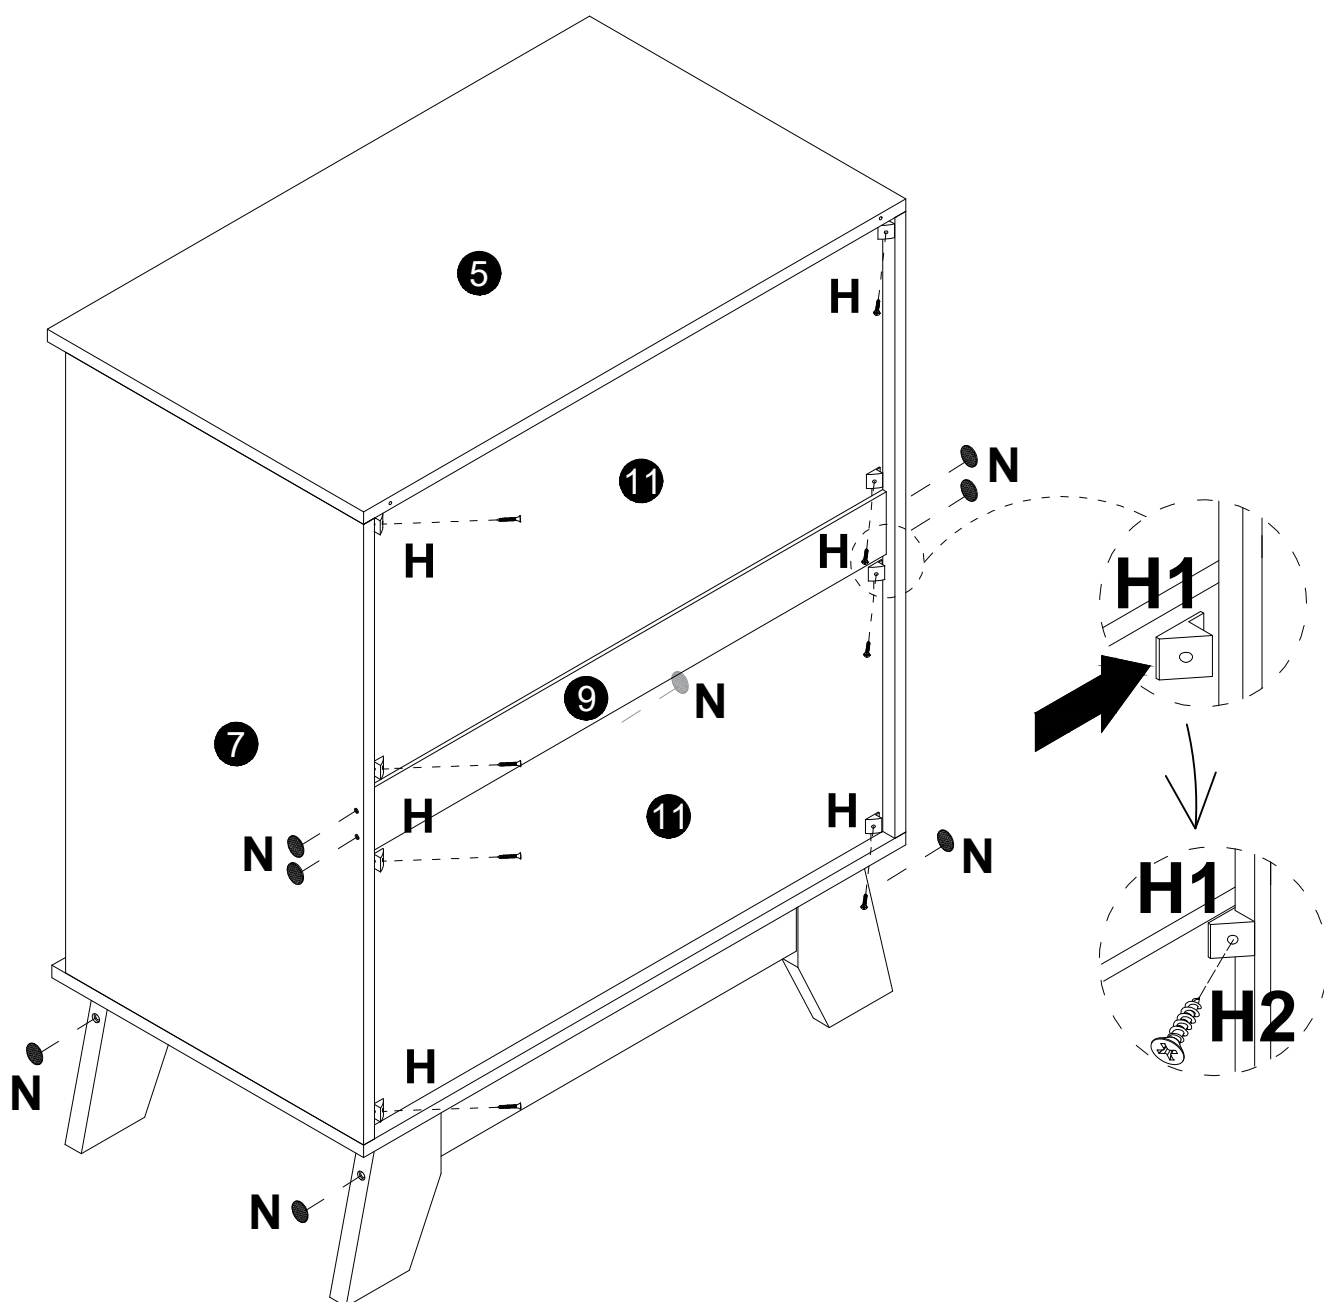

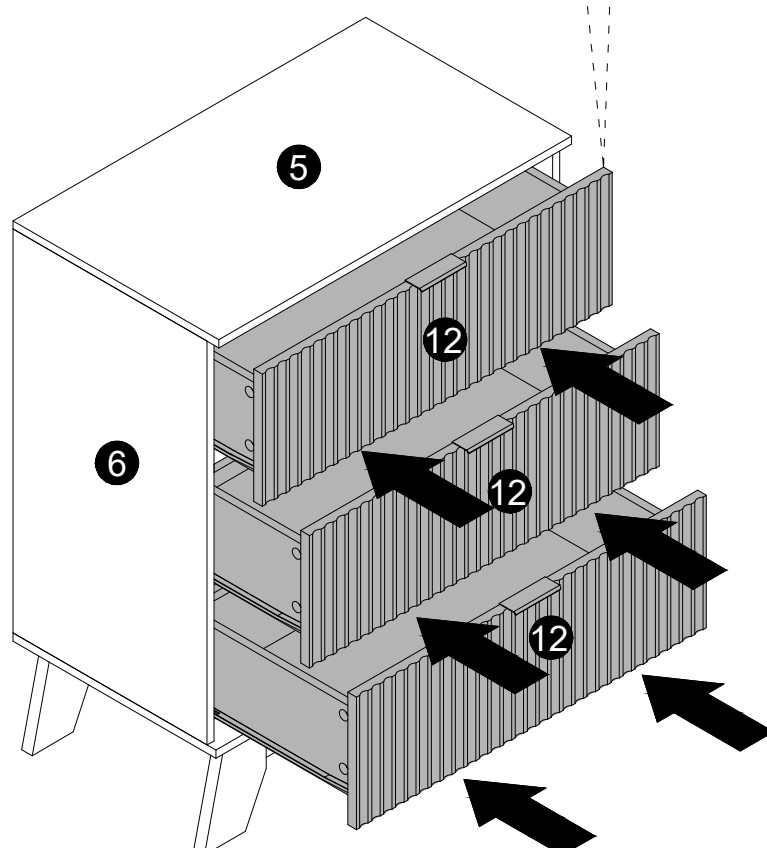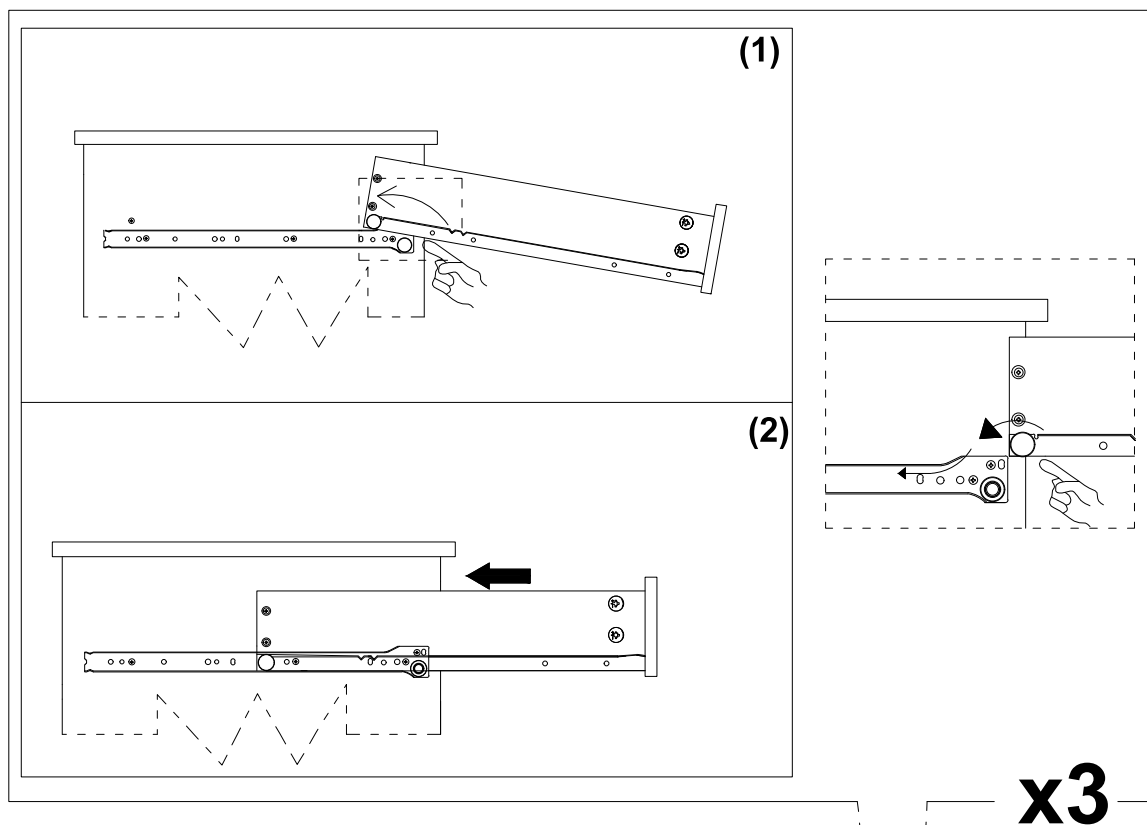


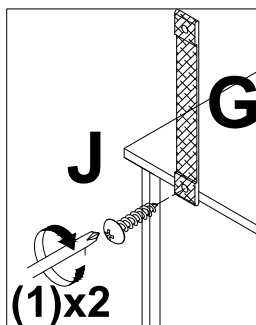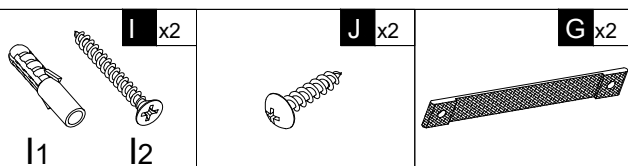


First fix the anti-rewind screw in the reserved hole of the product.

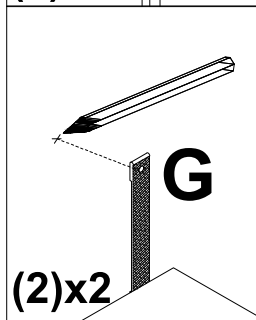

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

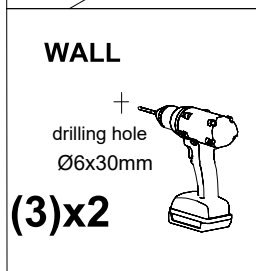


Then use a tape drill to make holes in the wall that are suitable for the product screws.

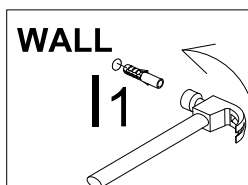

Then, put the expansion bolt into the hole

(4)x2

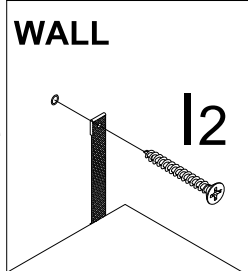

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

