



ASSEMBLY INSTRUCTIONS

FULL BED WITH TRUNDLE + 3 DRAWERS

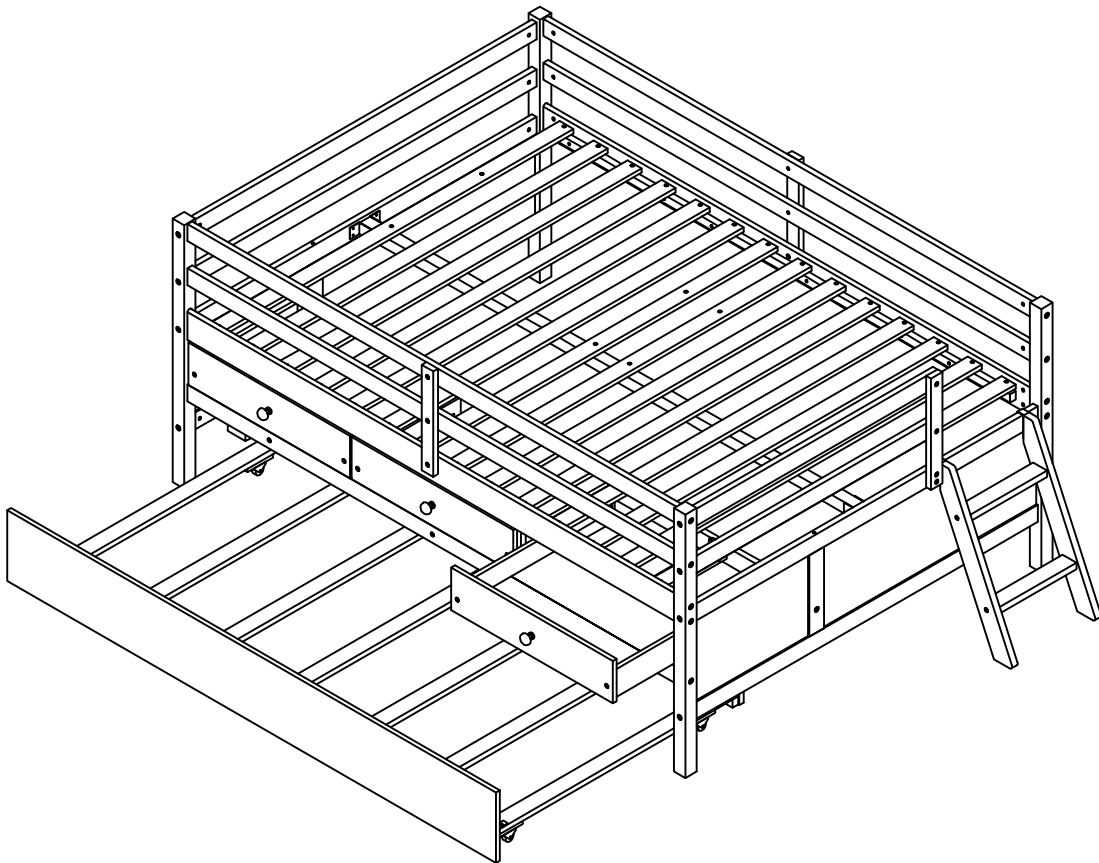












WF296598/WF296599

Detail View

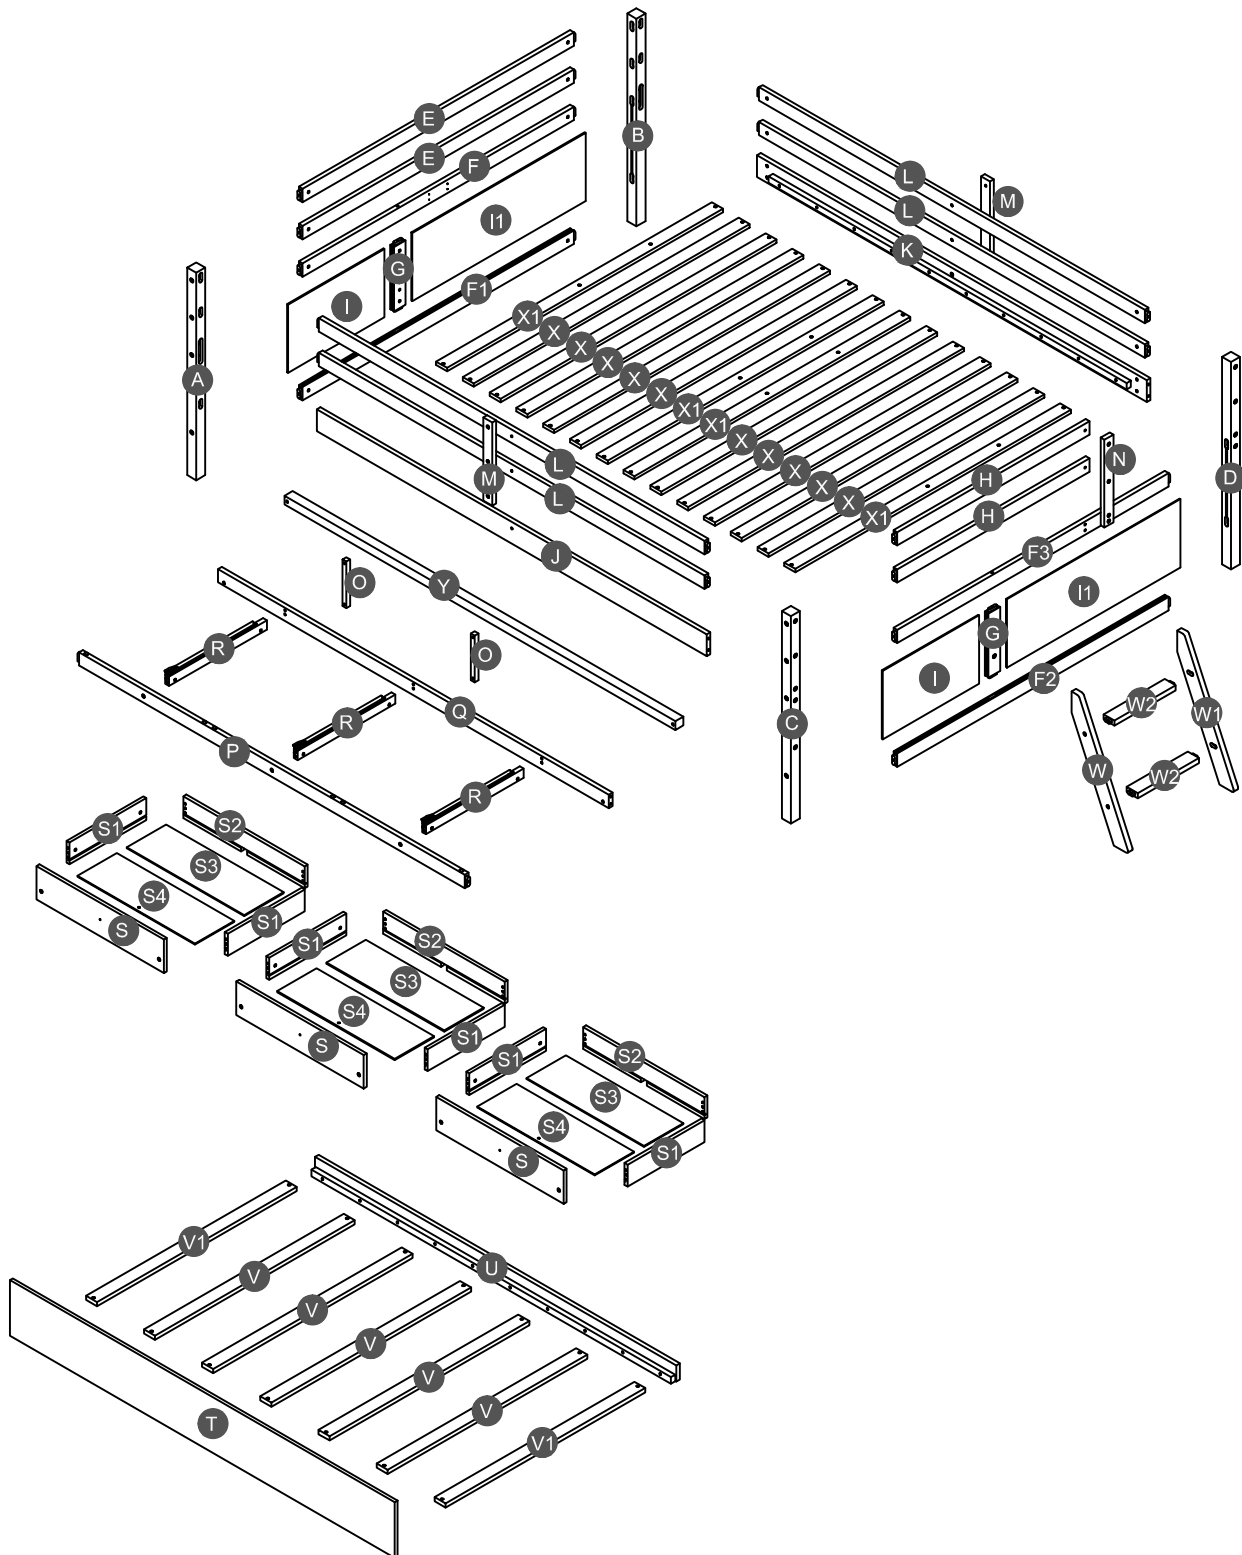









Part List

Hardware List WF296598








A  Leg HB (left-front)-1pc	B  Leg HB (left-back)-1pc	C  Leg FB (right-front)-1pc
D  Leg FB (right-back)-1pc	J  Side rail (front) - 1pc	K  Side rail (back) - 1pc
L  Long guard rail - 4pcs	P  Lower horizontal bar (front) - 1pc	Q  Lower horizontal bar (back) - 1pc
R  Support drawer - 3pcs	S3  Drawer bottom - 3pcs	S4  Drawer bottom - 3pcs
T  Front panel of Trundle - 1pc	U  Back panel side rail of Trundle -1pc	V  Slats - 5pcs
V1  Slats - 2pcs	Y  Lower support slat - 1pc	

Part List


WF296599

E  Horizontal bar HB - 2pcs	F  Horizontal bar HB - 1pc	F1  Horizontal bar HB - 1pc
F2  Horizontal bar FB - 1pc	F3  Horizontal bar FB - 1pc	G  Vertical bar HB & FB - 2pcs
H  Horizontal bar FB - 2pcs	I  Side panel HB & FB - 2pcs	I1  Side panel HB & FB - 2pcs
M  Vertical guard rail - 2pcs	N  Vertical guard rail FB - 1pc	O  Support vertical - 2pcs
S  Drawer front - 3pcs	S1  Drawer (left/right) - 6pcs	S2  Drawer back - 3pcs
W  Ladder (left) - 1pc	W1  Ladder (right) - 1pc	W2  Step ladder - 2pcs
X  Slats - 10pcs	X1  Slats - 4pcs	

Hardware List WF296598


1	 Ø8*30mm Wood dowel (26pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (22pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (14pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (24pcs)	5	 (Ø12)1/4"*30mm Hex-Head bolts (14pcs)	6	 Ø4*30mm Wood screws (58pcs)
7	 400*30mm Upper slider drawer (3pcs)	8	 1/4"*15 (9.5mm) Horizontal-Hole bolts(60pcs)	9	 95*95*18*3mm Metal bracket (2pcs)
10	 81*26*21*(2.5mm) Hooks (2pcs)	11	 Ø4*19mm Wood screws (6pcs)	12	 100*63*20mm Wheels (4pcs)
13	 Ø3.5*15mm Wood screws (33pcs)	14	 (1/4")4.5*58mm Allen key (2pcs)	15	 40*18*18*2mm Metal bracket (2pcs)
16	 Ø38*31mm Pine Knob (3pcs)	17	 3/16"*25mm Ph zinc(Knob) (3pcs)	18	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)
19	 116*40*27mm Metal bracket (2pcs)	20	 (Ø13)1/4"*14mm Connect bolt (2pcs)	21	 Stopper (2pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

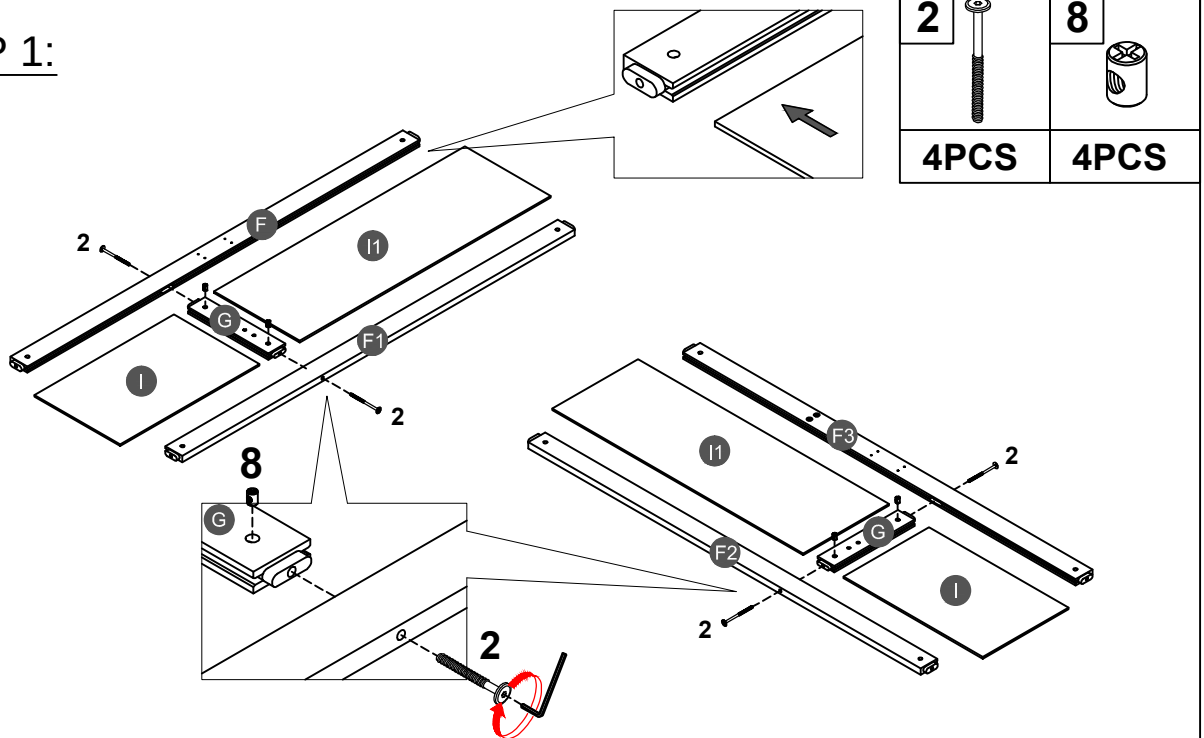

STEP 2:

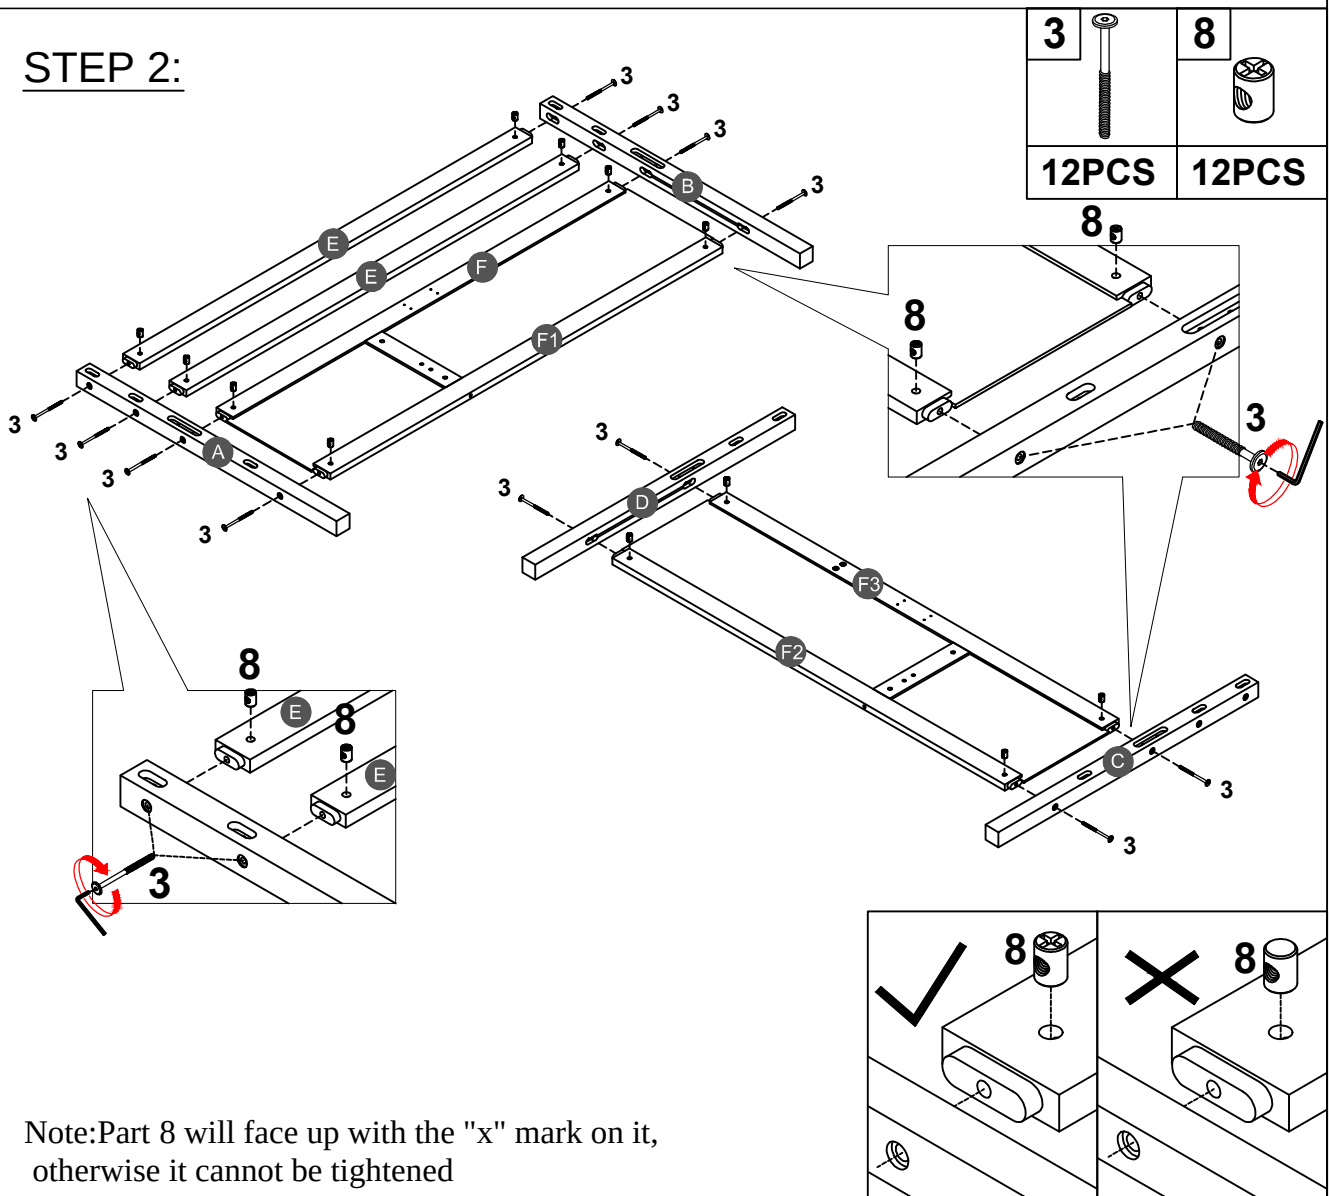


STEP 3:

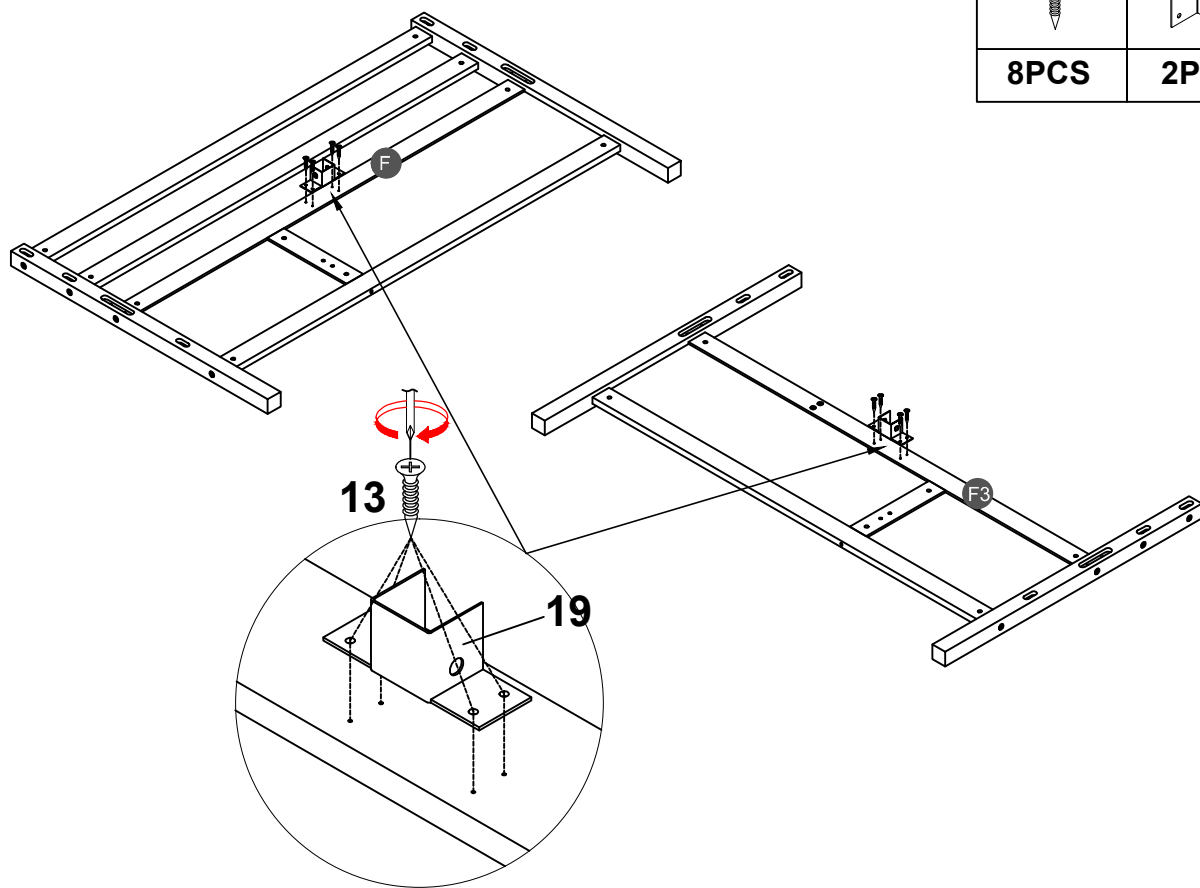


13		19	
8PCS		2PCS	

STEP 4:

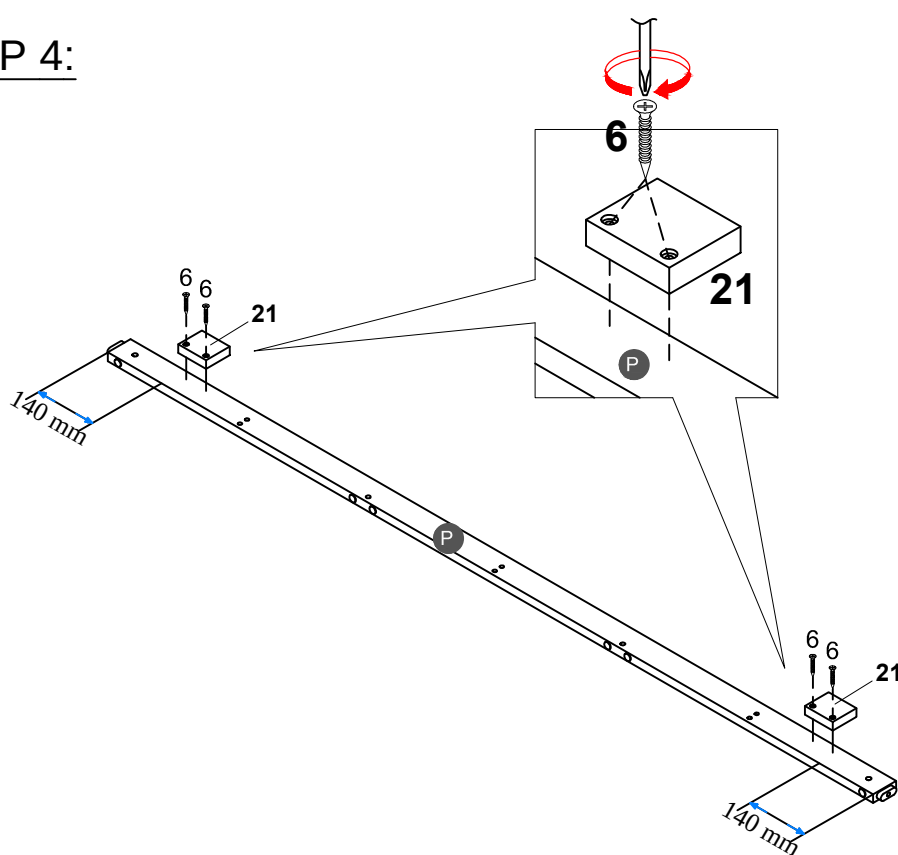


6		21	
4PCS		2PCS	


STEP 5:

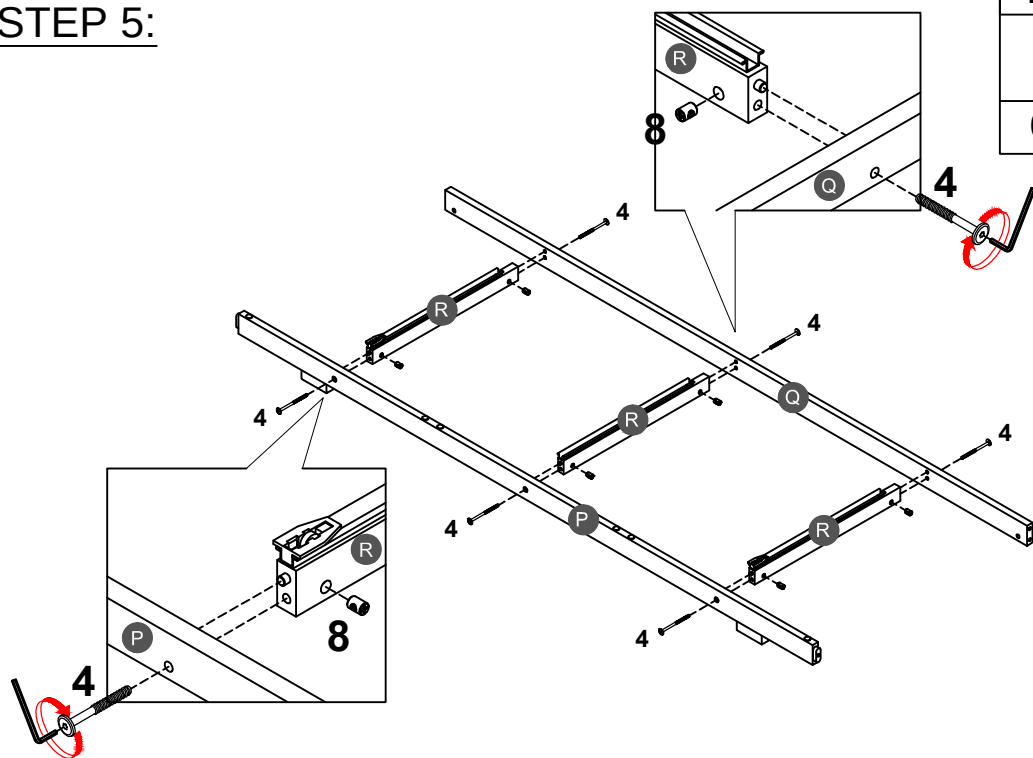


4	8
	
6PCS	6PCS

STEP 6:

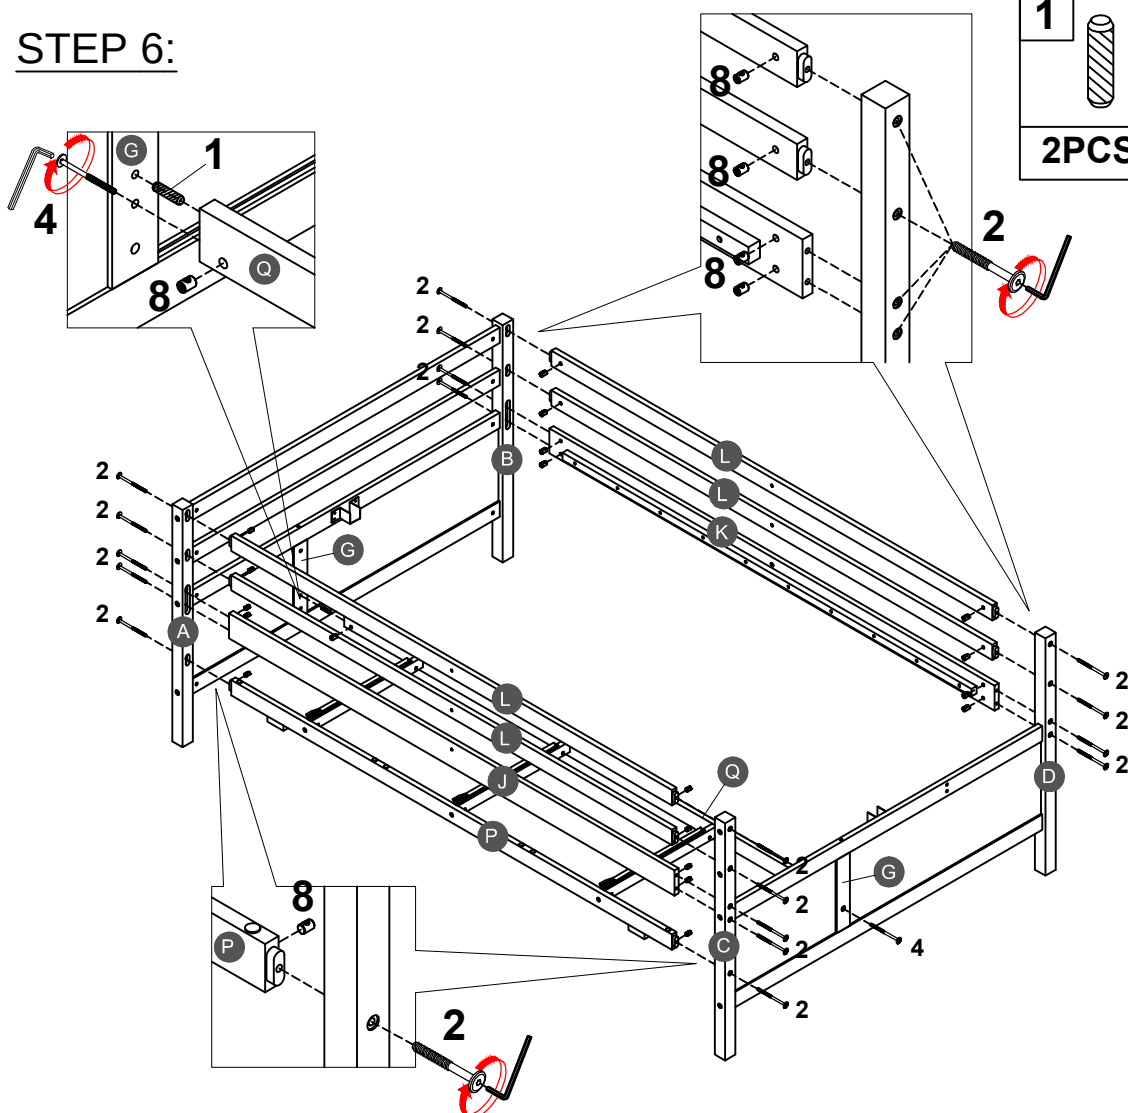

1	2
	
2PCS	18PCS
	8
	
	20PCS
4	
	
2PCS	

STEP 7:

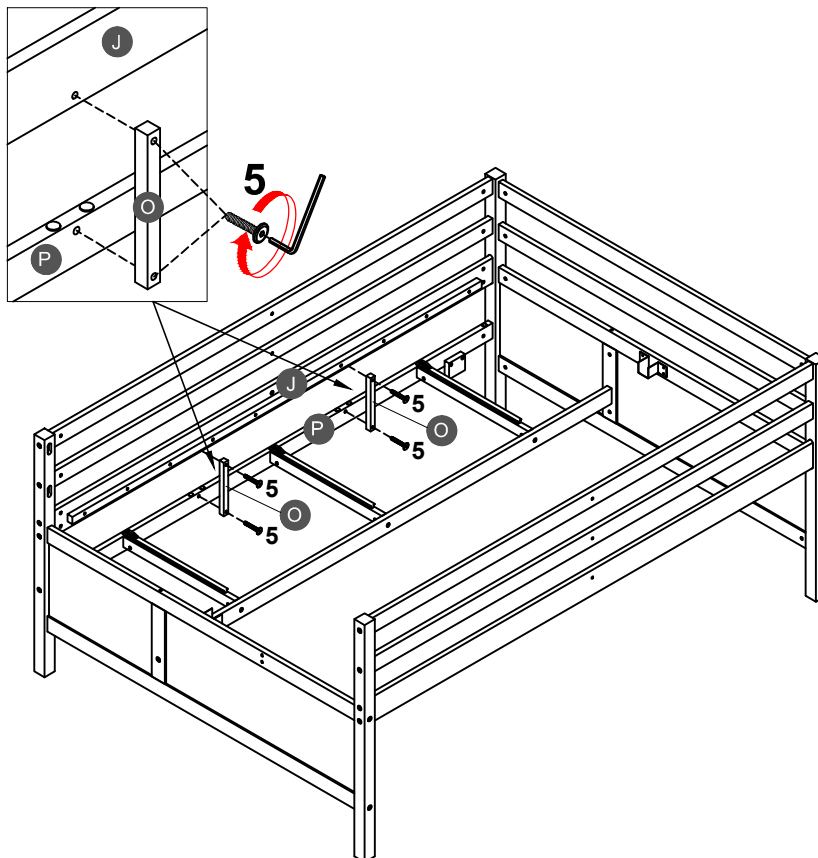


5



4PCS

STEP 8:

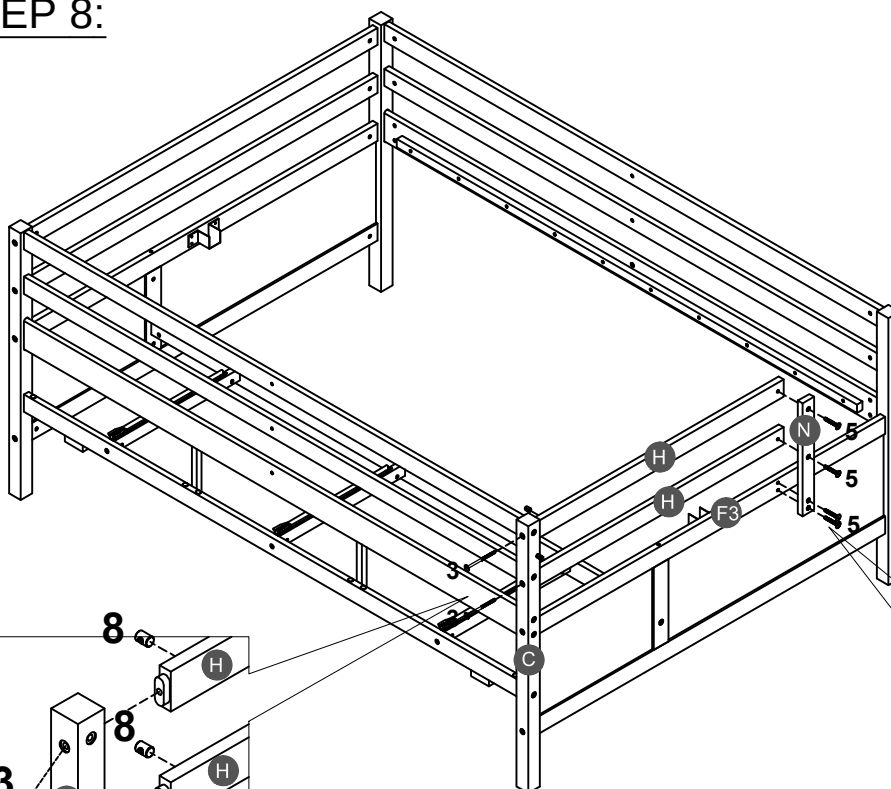

3



2PCS

8





2PCS

5



4PCS

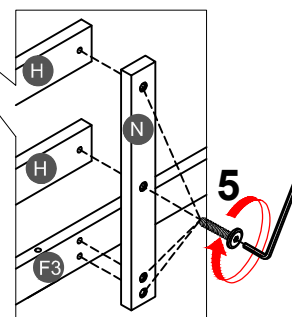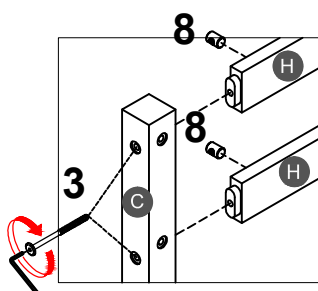


STEP 9:

5



6PCS

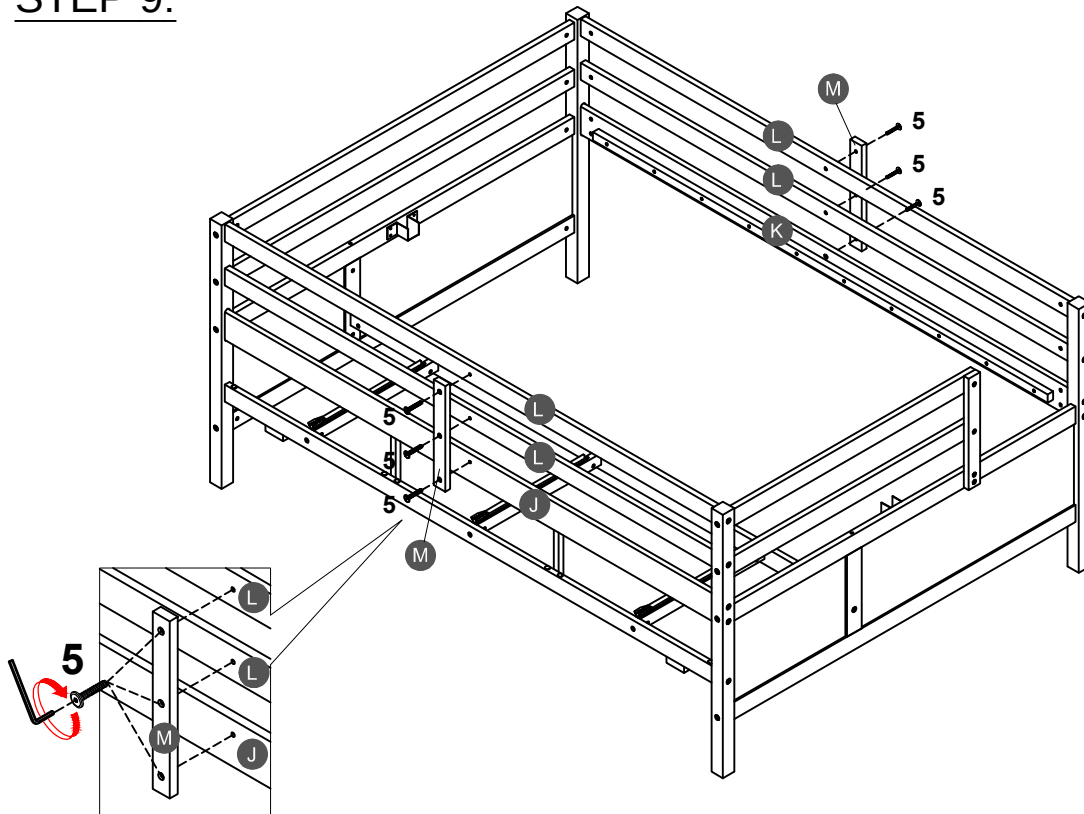

STEP 10:

1



12PCS

4




6PCS

8




6PCS

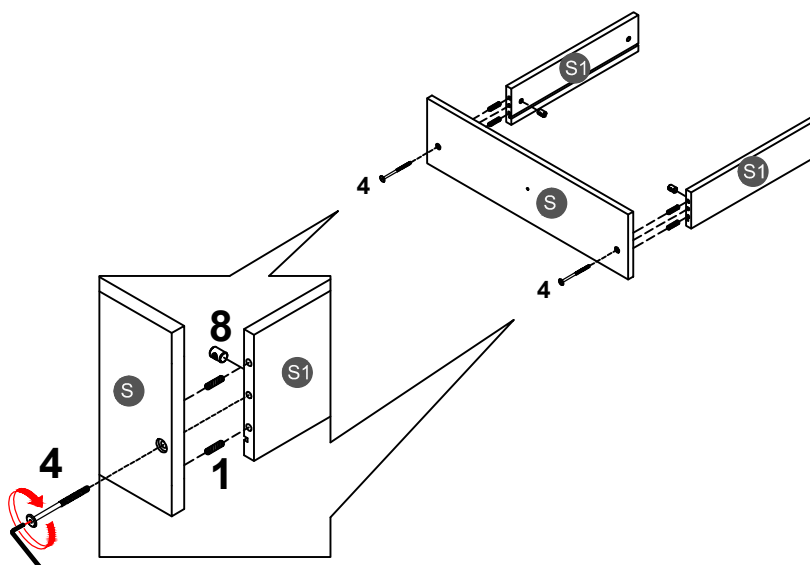

x 3


STEP 11:

1		4		8	
12PCS		6PCS		6PCS	

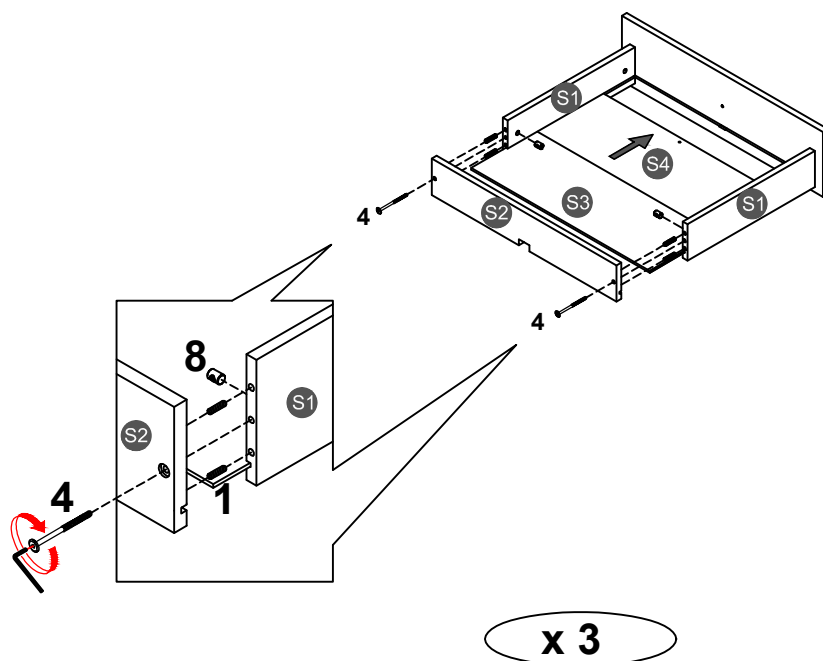


STEP 12:

7		13	
3PCS		9PCS	

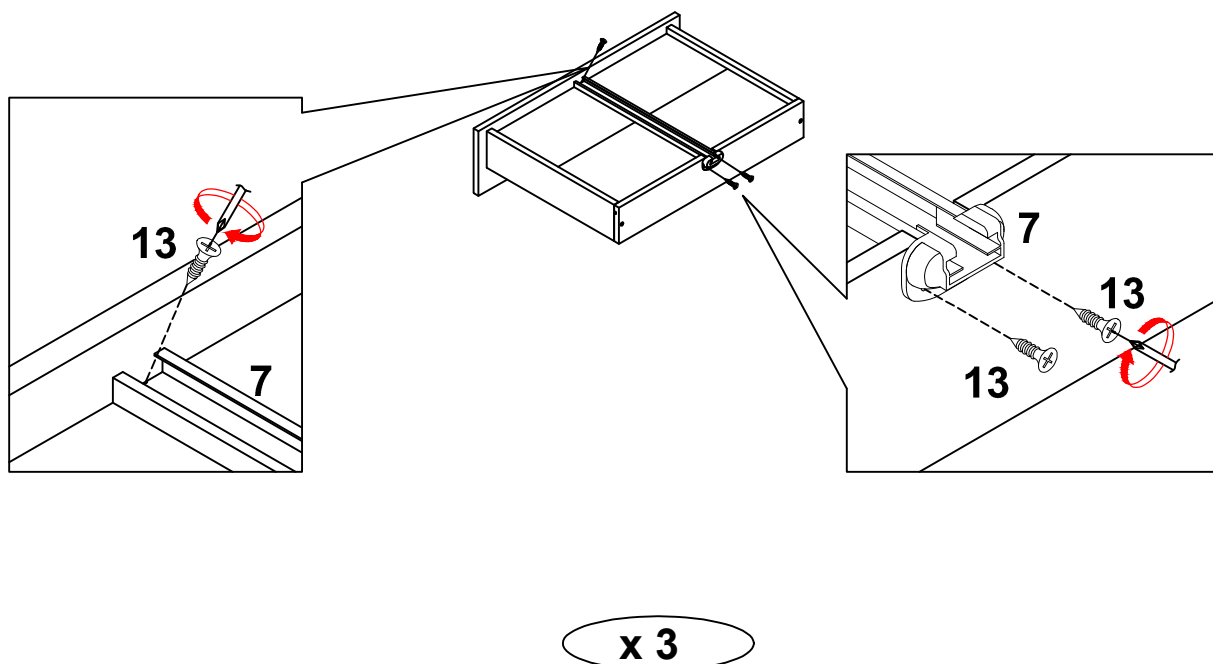


STEP 13:

16	17
	
3PCS	3PCS

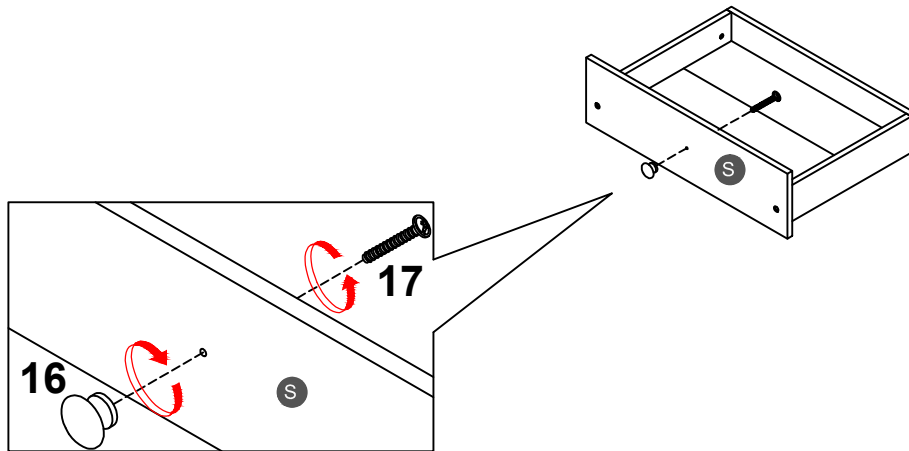


x 3

STEP 14:

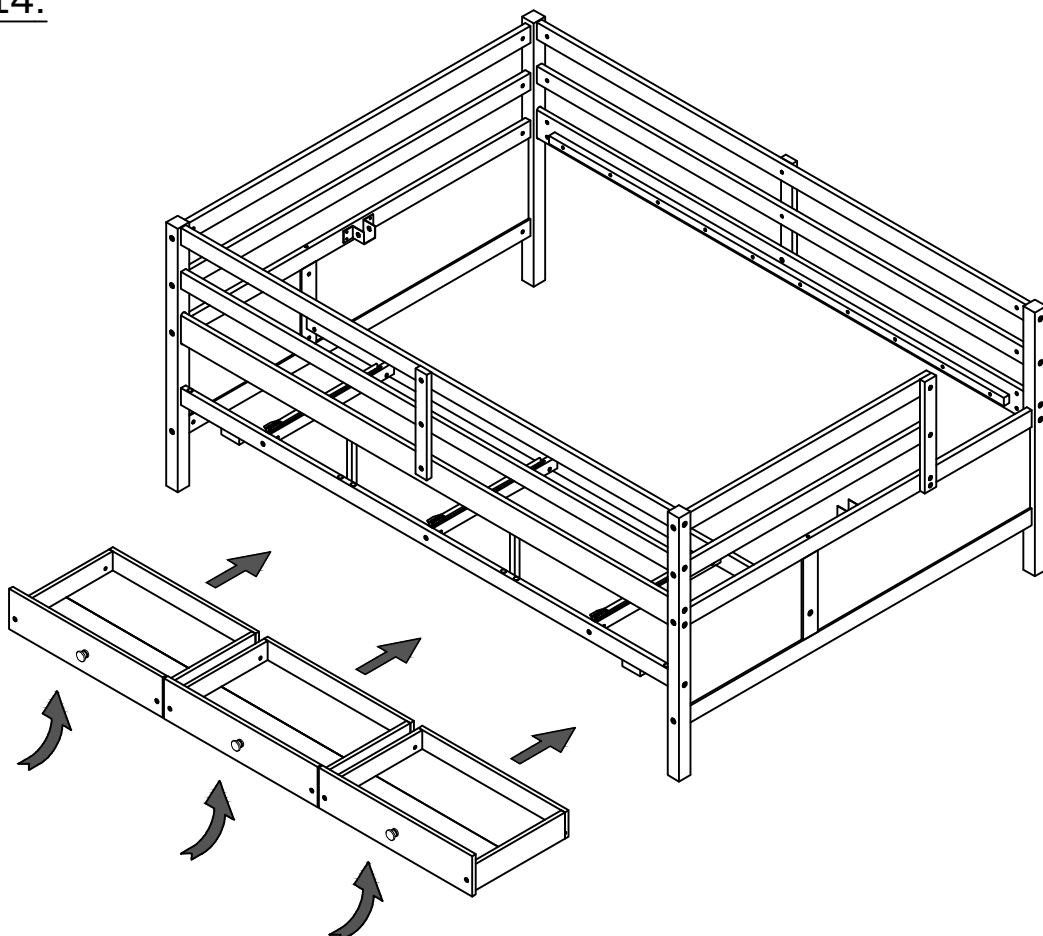



STEP 15:

18		20	
2PCS		2PCS	

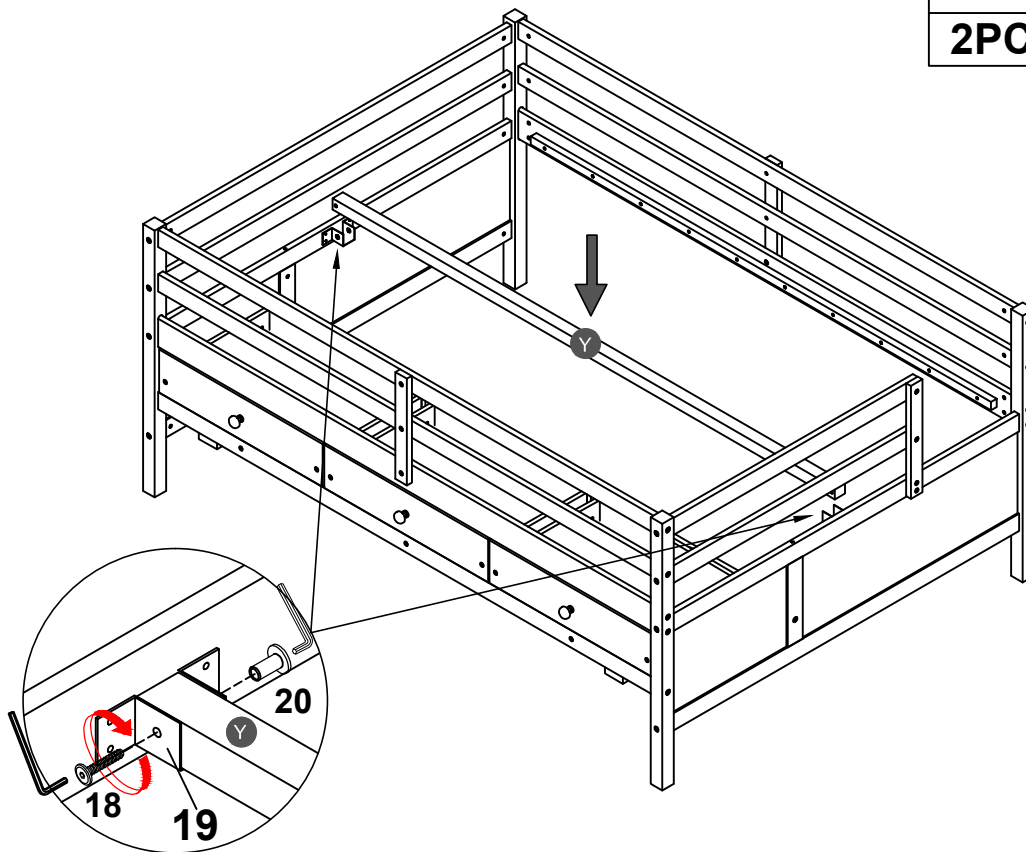

STEP 16:

4		8		10		11	
4PCS		4PCS		2PCS		4PCS	

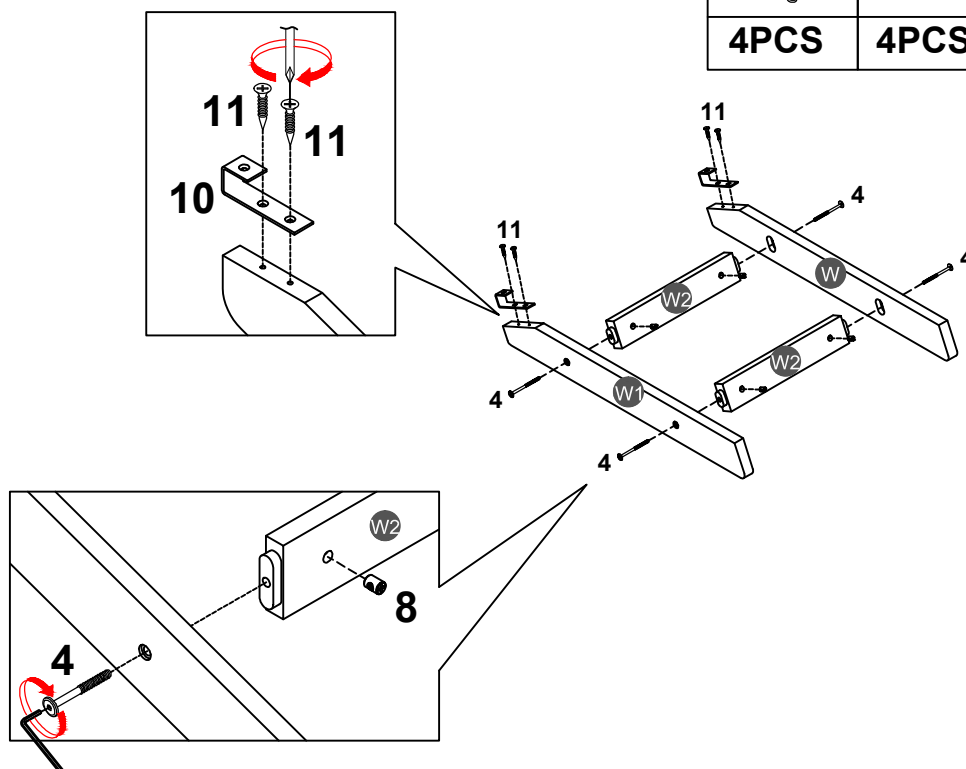


STEP 17:

11



2PCS

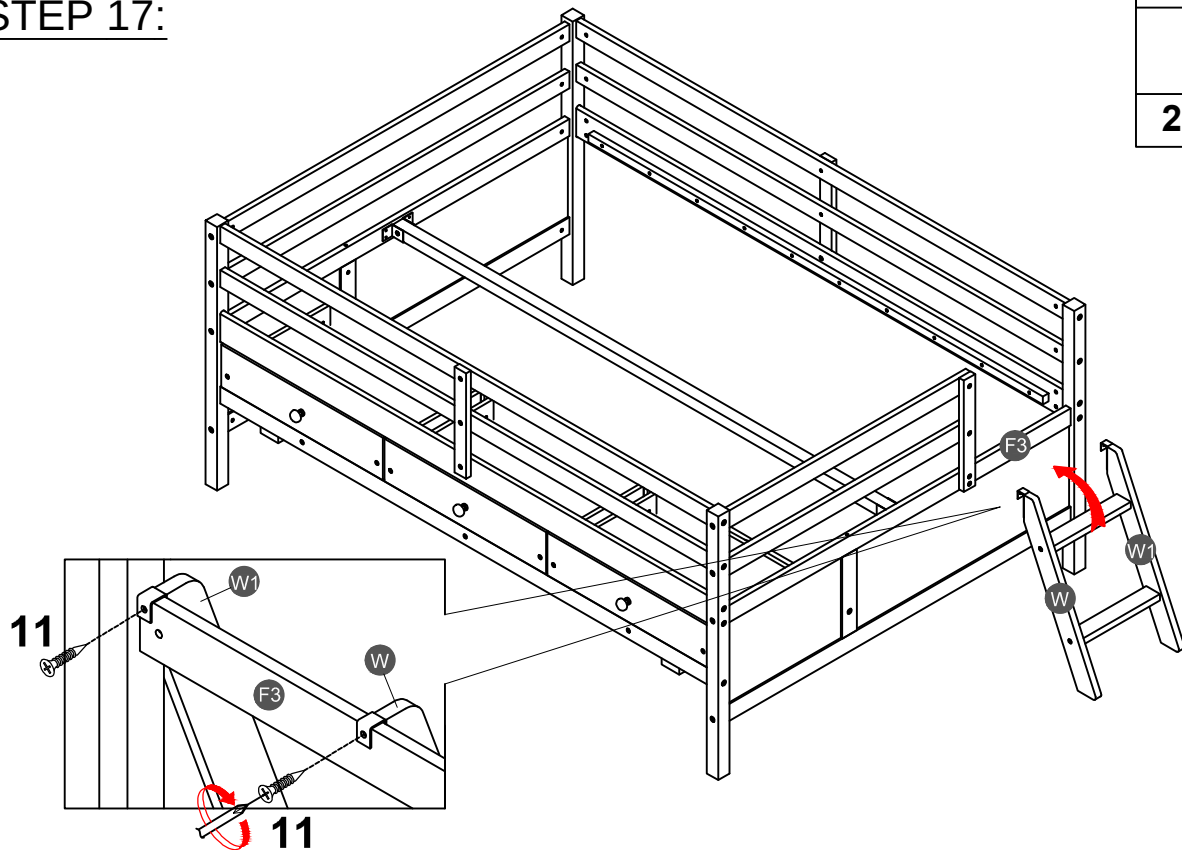


STEP 18:

6




32PCS

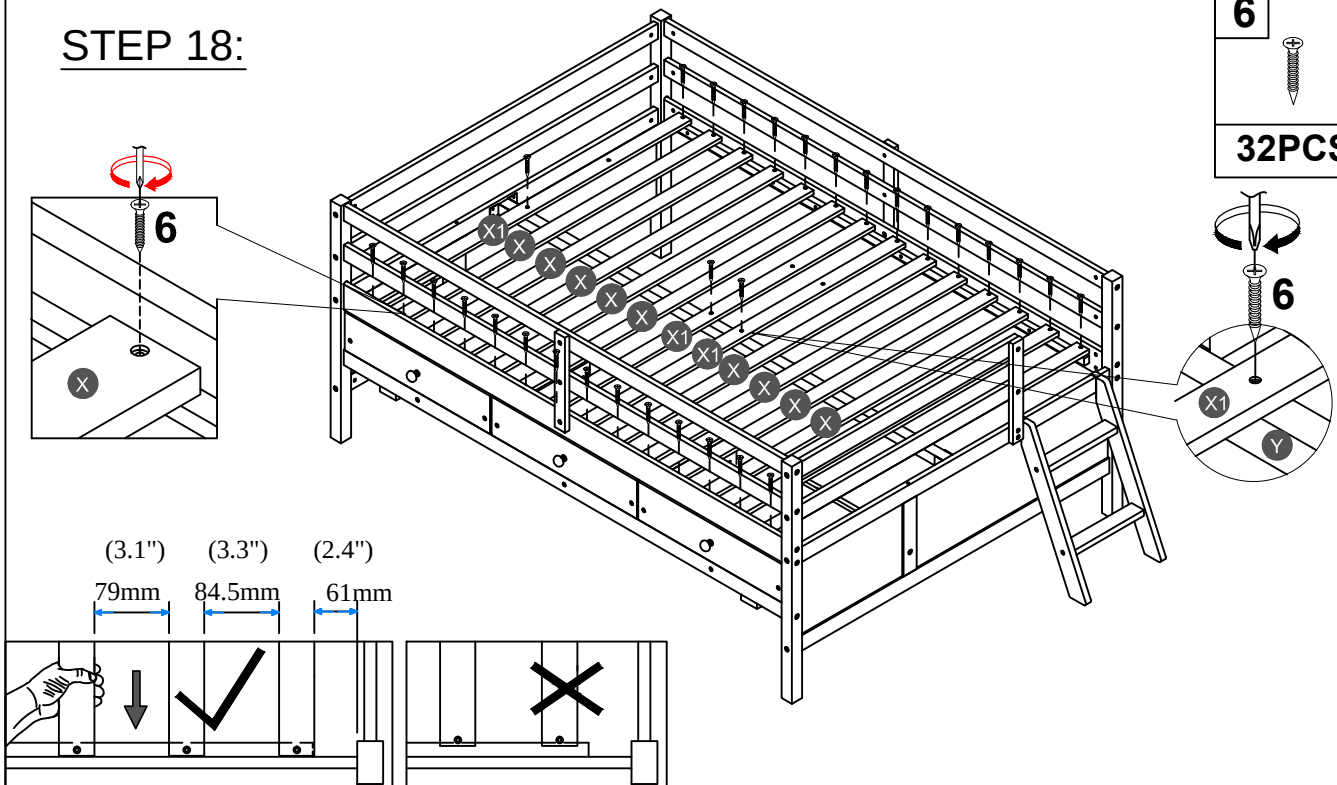


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 19:

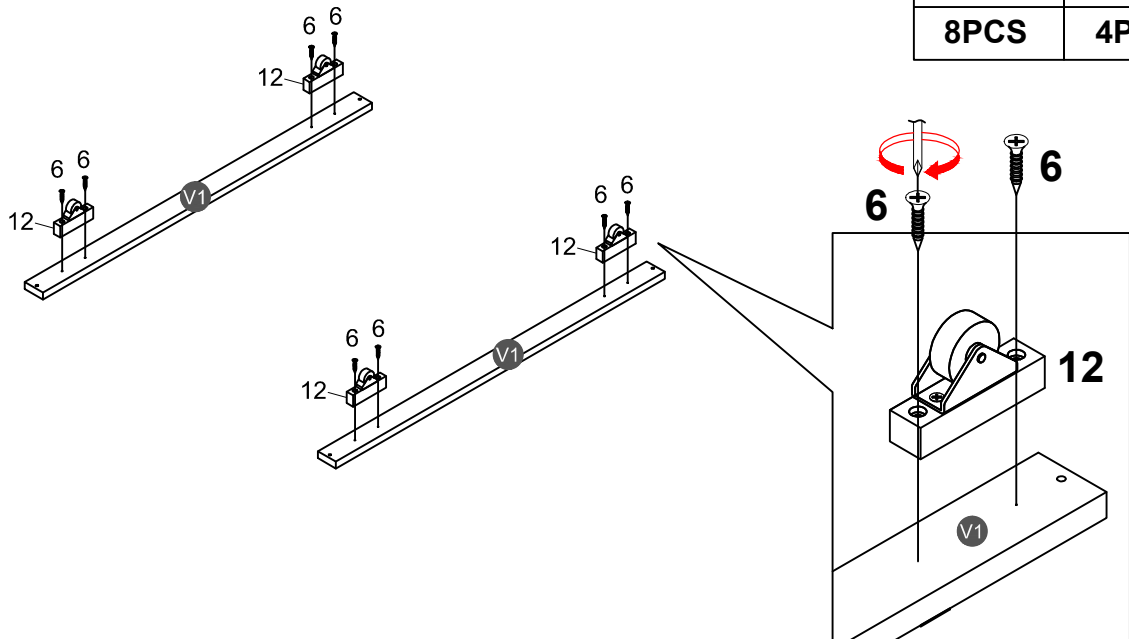


6	12
	
8PCS	4PCS

STEP 20:

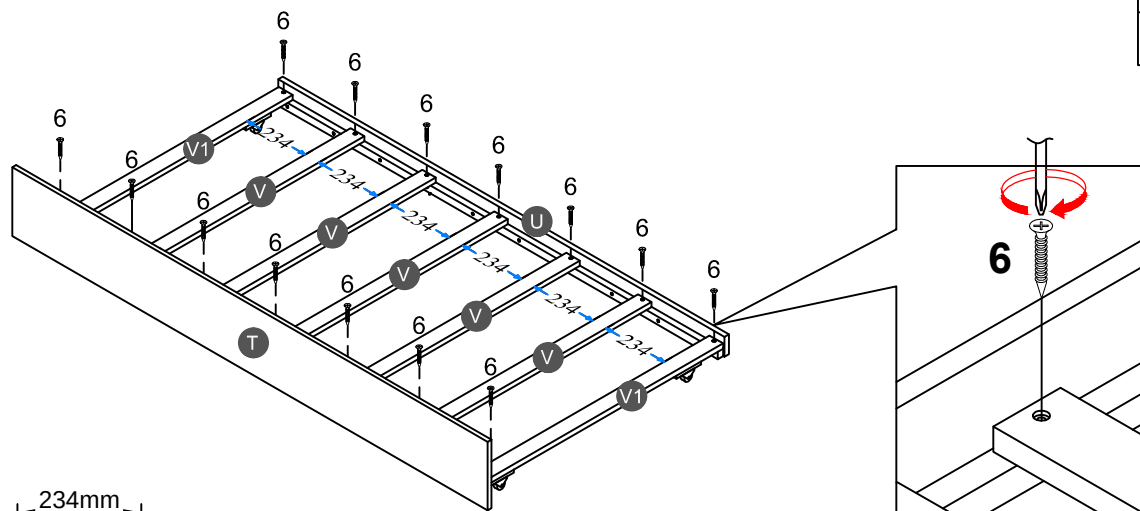

6

14PCS

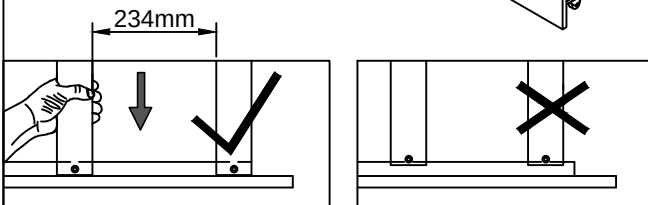


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 21:

9	13
	
2PCS	8PCS

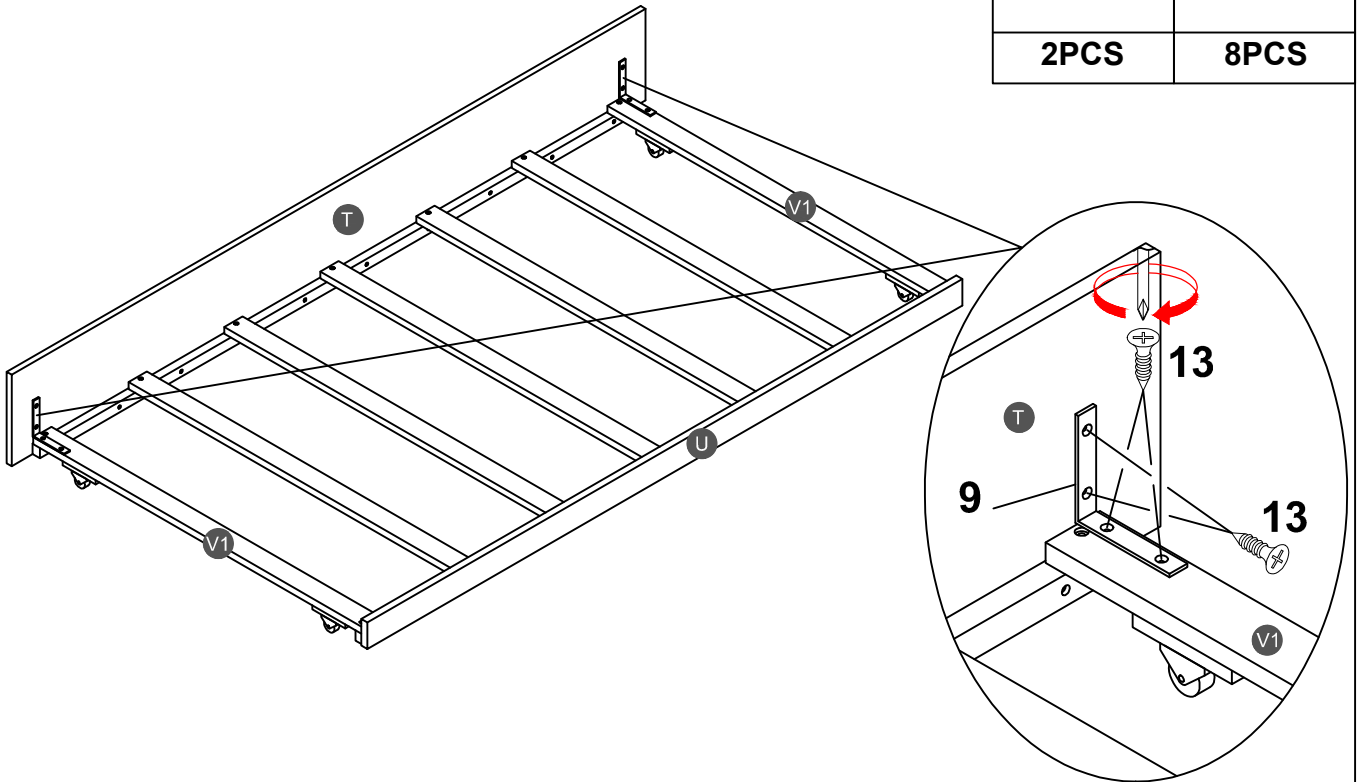


STEP 22:

13	15
	
8PCS	2PCS

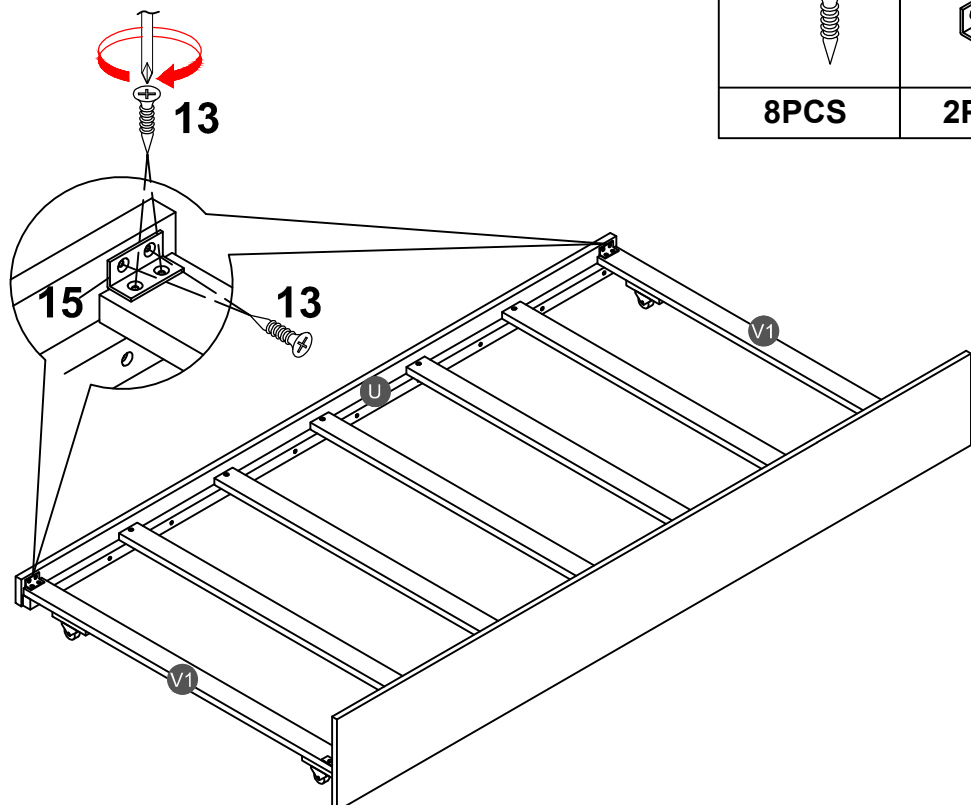

STEP 23:

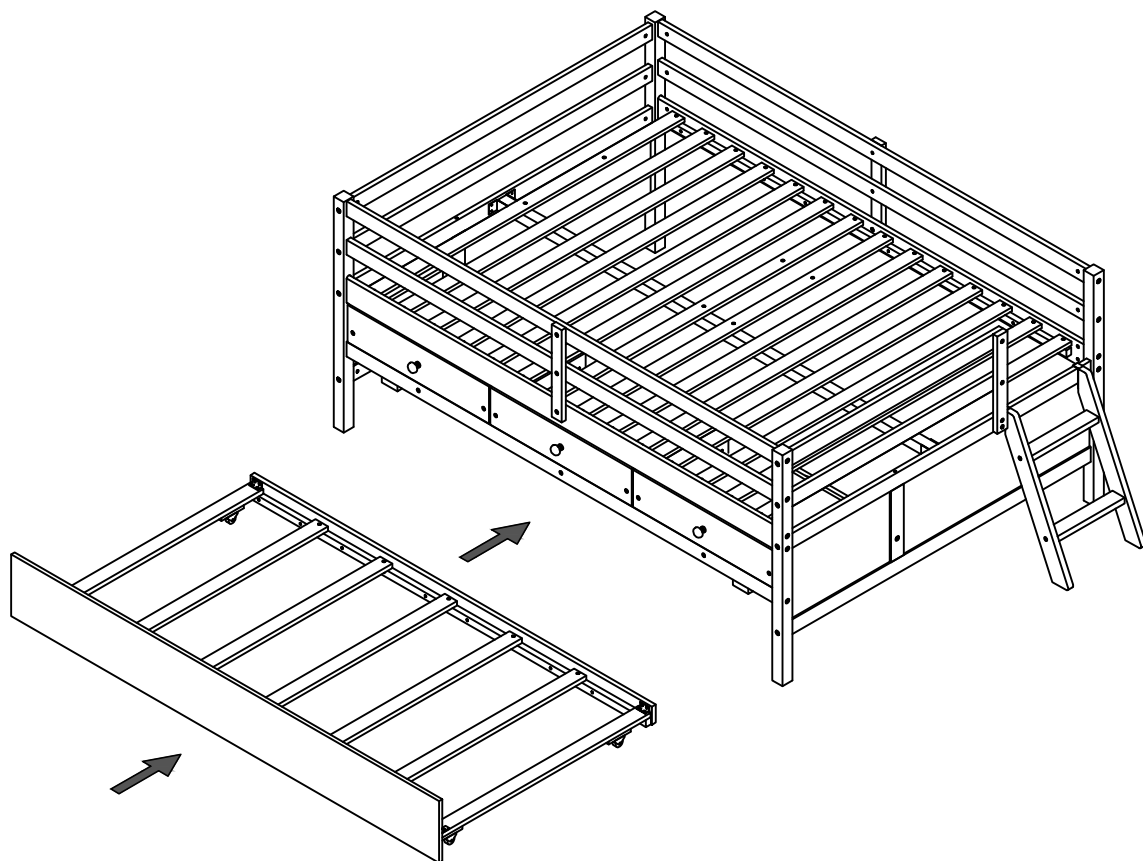

Push Trundle and Drawer under the bottom of Bunkbed.

