




INSTALLATION NOTES



Step 1

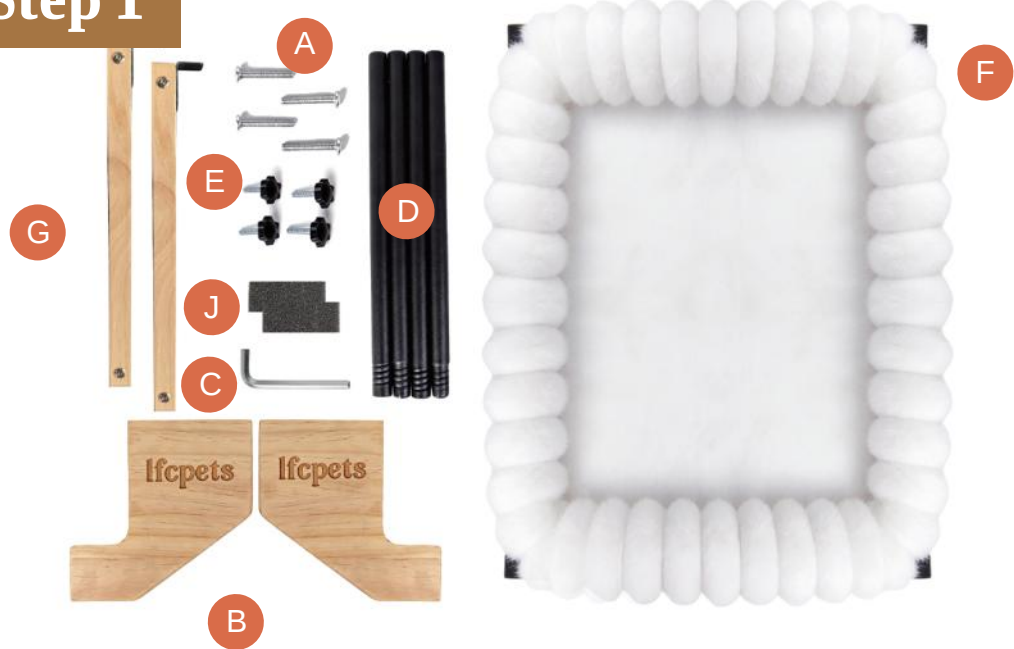

A.screw*4 B. wood support rail*2 C.wrench*1
D.pipe*4 E.thumb screw*4 F.mat*1
G.wood crosspiece*2 J.non-slip pad*2

Step 2



Simultaneously rotate both hands and connect the four straight pipes.

Step 3



Thread the two connected straight pipes through the holes.

Step 4



Use the wrench to twist the two screws to connect two straight pipes to the crosspiece.

Step 5



Use two thumb screws to connect the crosspiece and support.

Step 6



Attach the frame to the window rotate the thumb screws to adjust the position of the bracket and complete the installation