

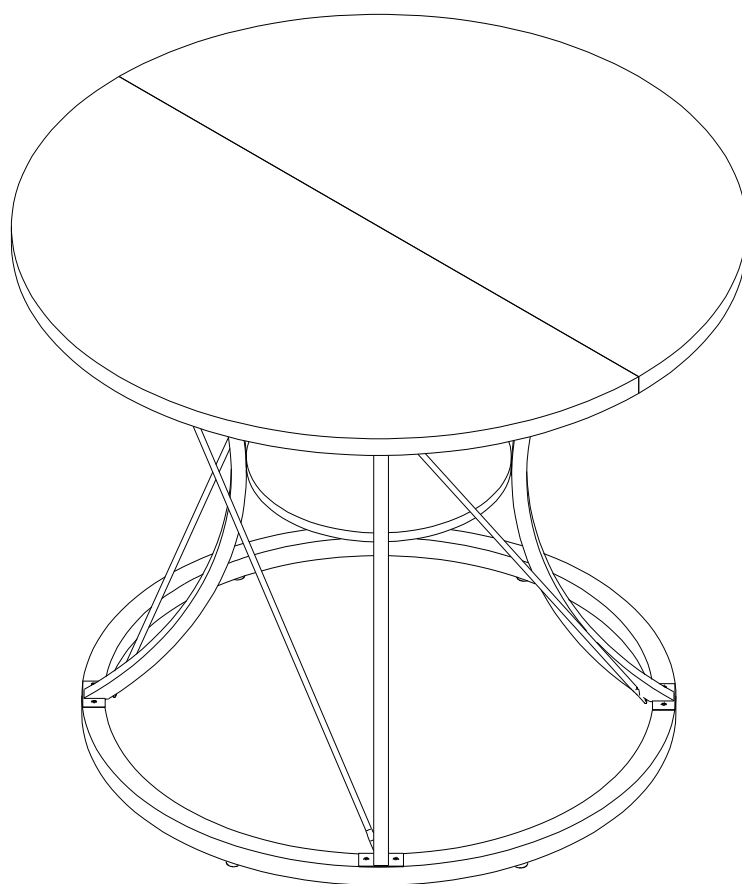
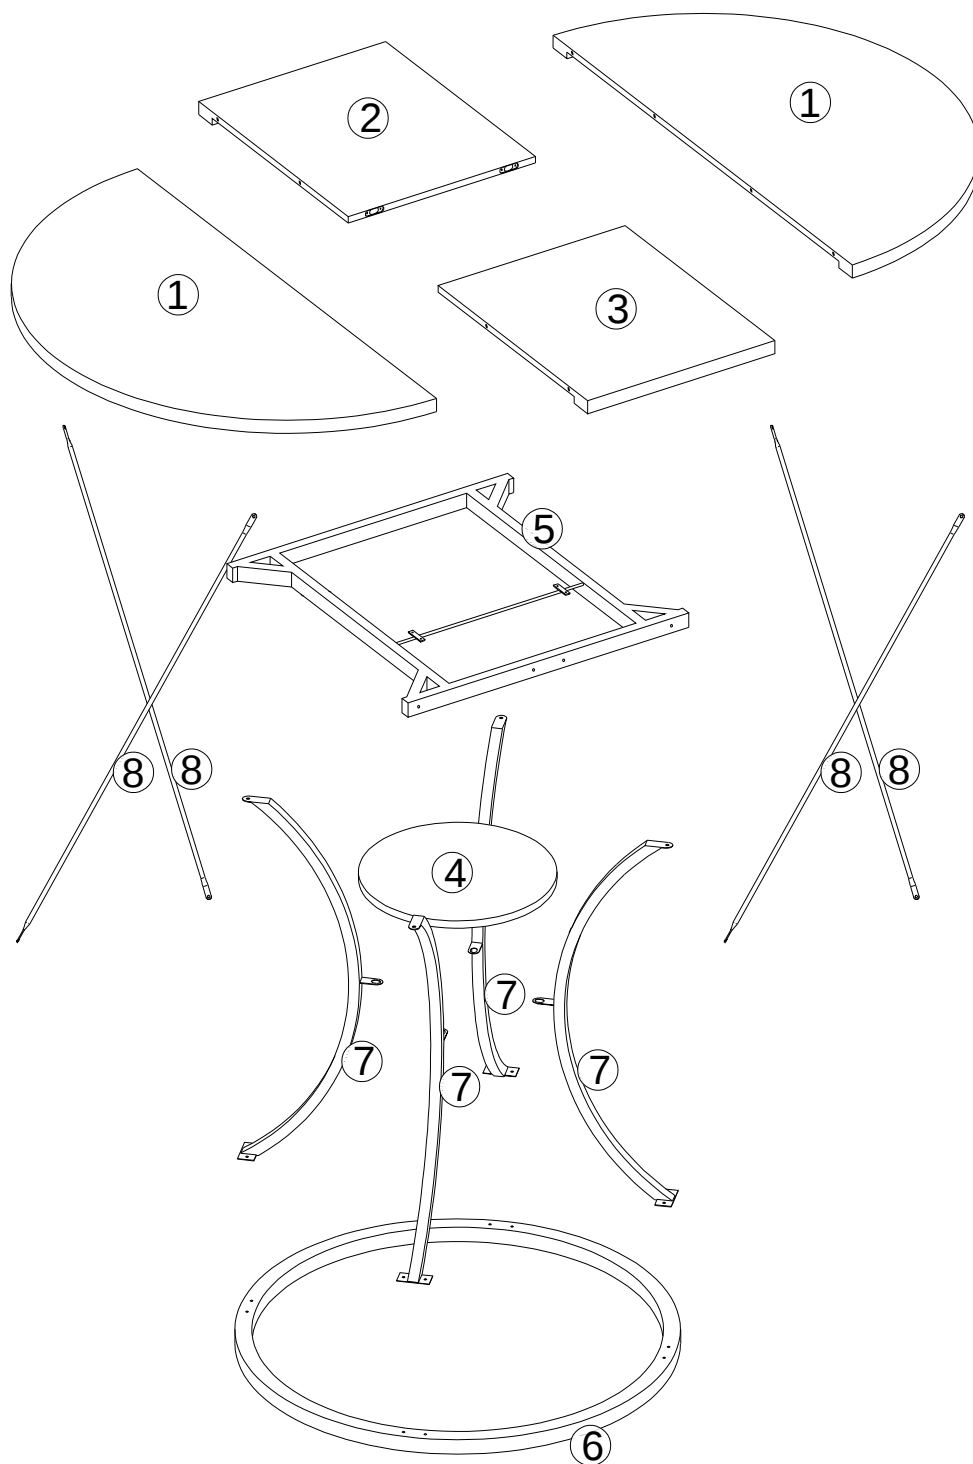
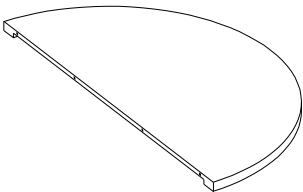
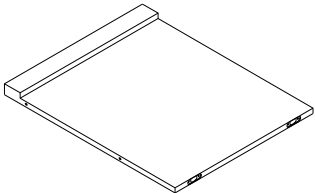

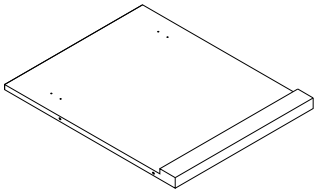
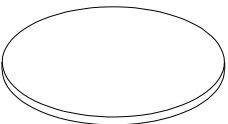
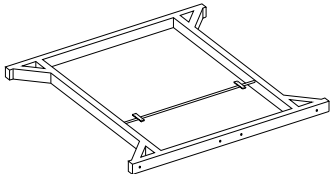

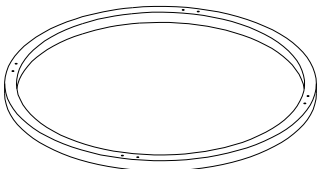
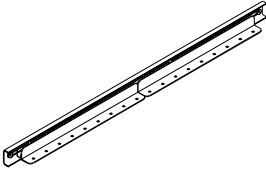
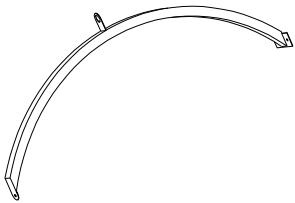



ASSEMBLING INSTRUCTION

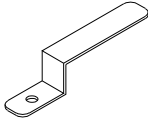



①		X2	B	 M6*16mm	X22
②		X1	C		X2
③		X1	D	 6*12mm	X6
④		X1	E	 M3.5*14mm	X24
⑤		X1	F	 M7*30mm	X8
⑥		X1	G		X2
⑦		X4	H		X2
⑧		X4	I	 M3.5*20mm	X12
A	 8*30mm	X8			
Page 3					


Step:1

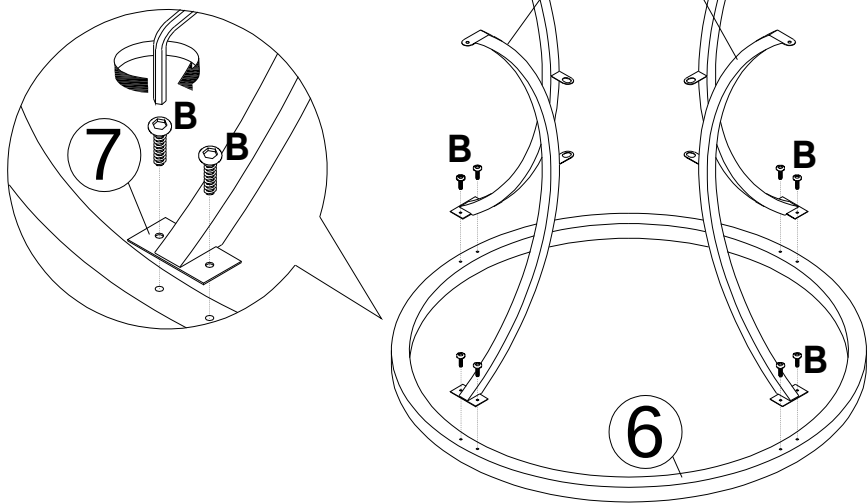

B		x8
		

Don' t lock these parts (⑤, ⑥, ⑦, ⑧) too tightly;
After completing the assembly, tighten the screws again.

Step:2

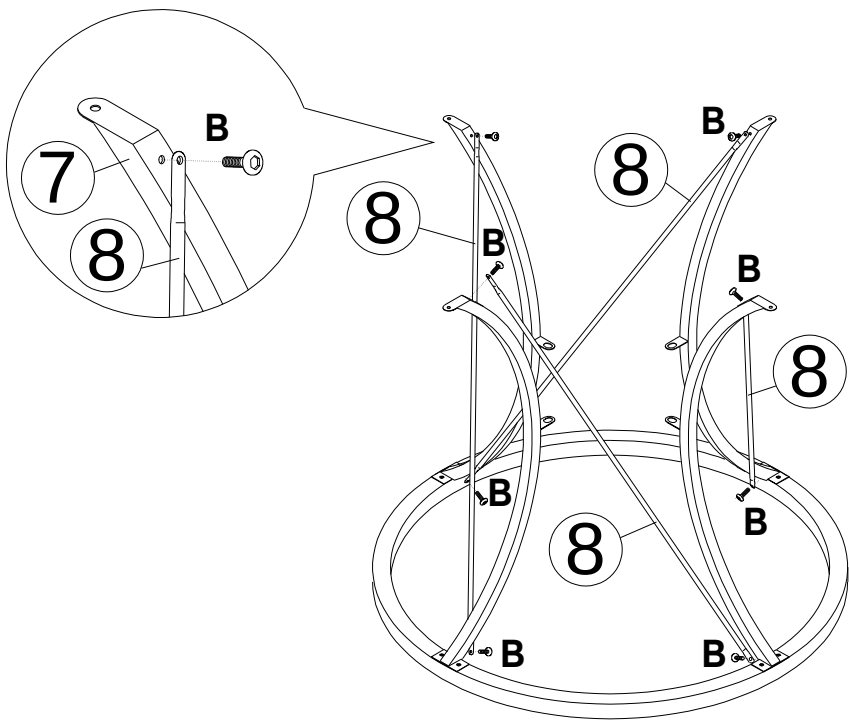


B		x8
		

Don' t lock these parts (⑤, ⑥, ⑦, ⑧) too tightly;
After completing the assembly, tighten the screws again.

Step:3


B		X6
H		X2
		

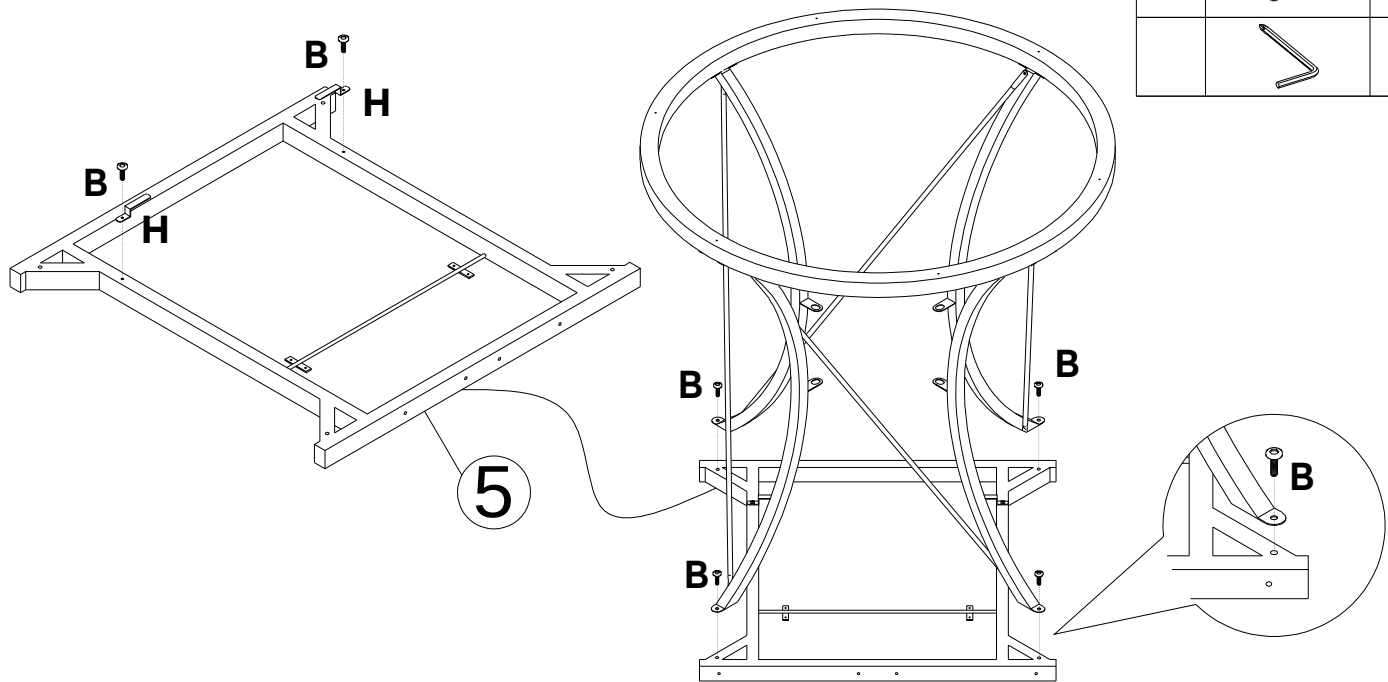

Don' t lock these parts (⑤, ⑥, ⑦, ⑧) too tightly;
After completing the assembly, tighten the screws again.


Step:4

E		X4
---	---	----

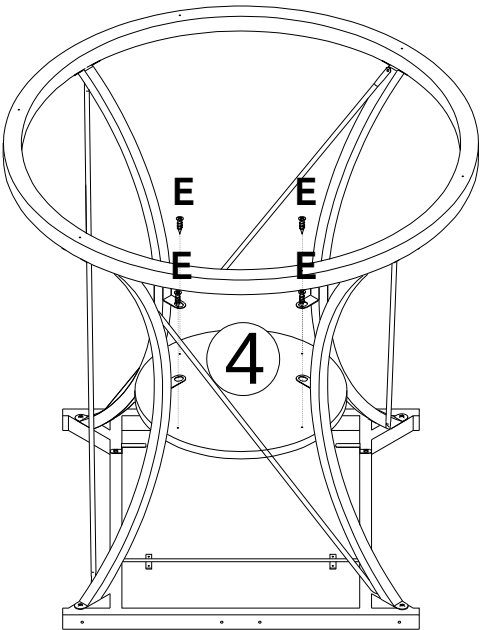

Step:5


D		x6
---	---	----

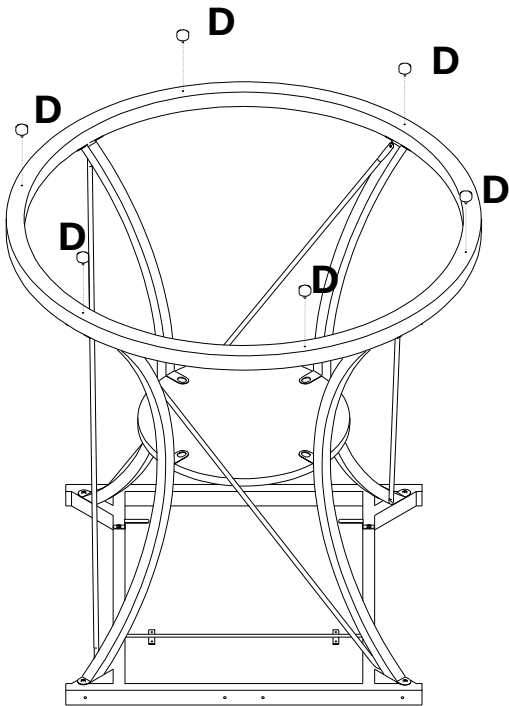

180°



Step:6

I		x4
G		x2

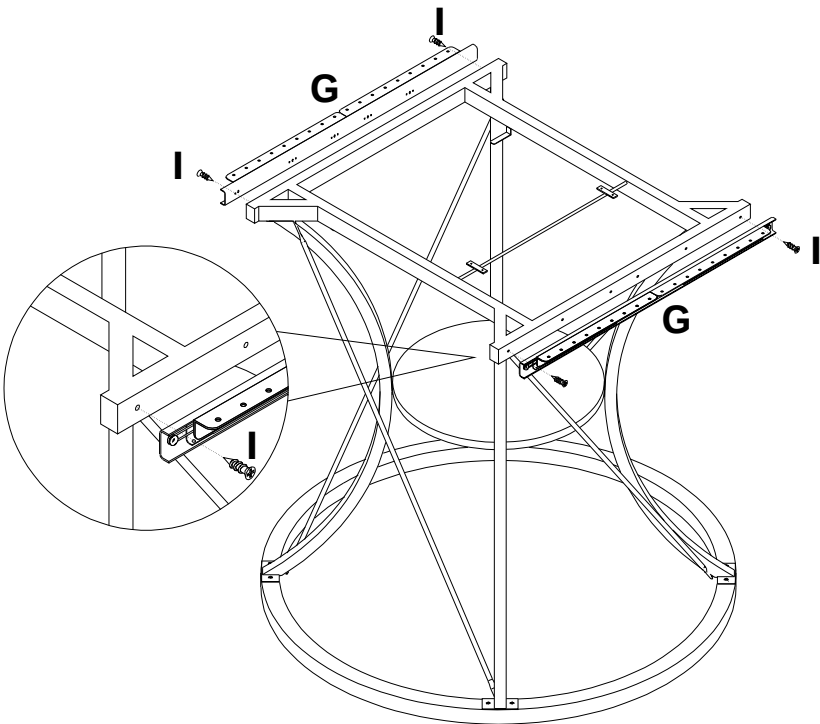

Step:7


I		X8
---	---	----

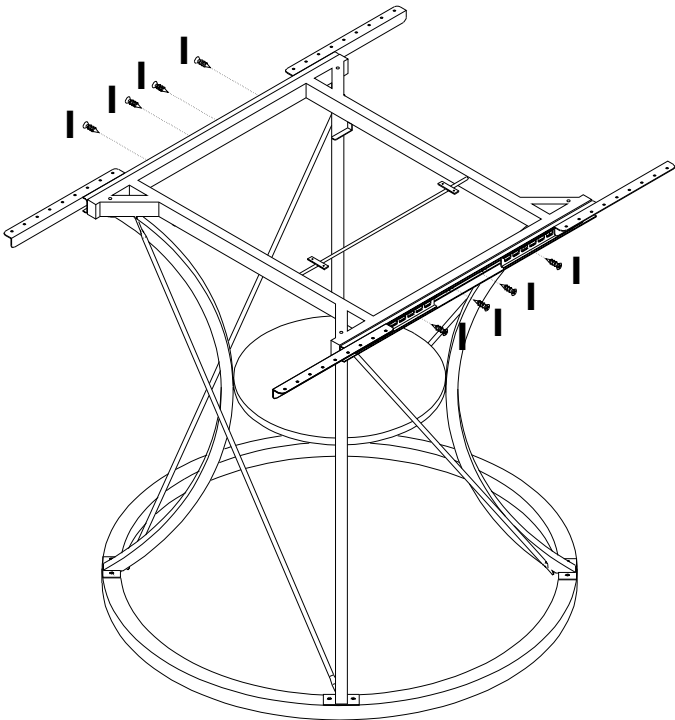


180°



Step:8

E		X16
---	---	-----

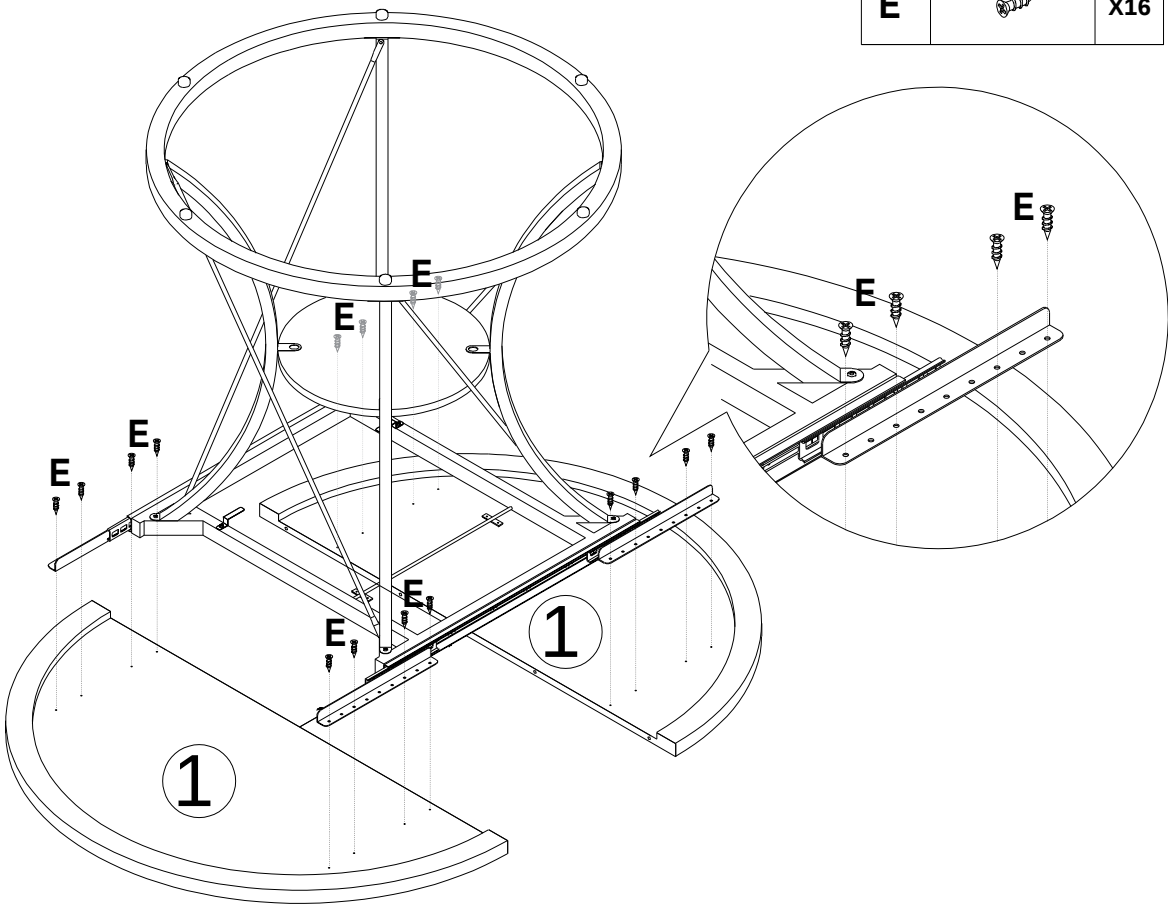


Step:9

C		x2
F		x8

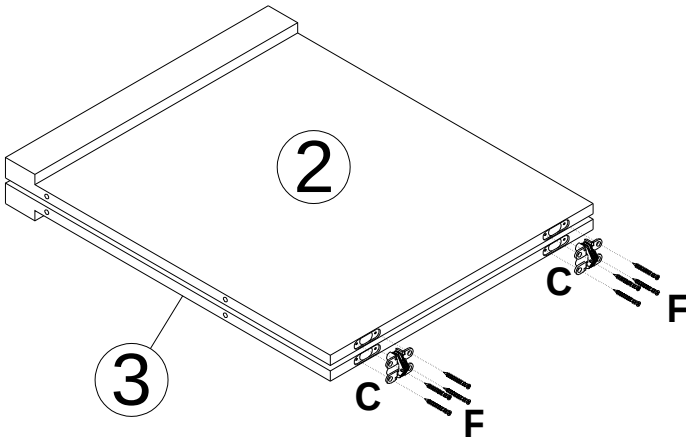

Step:10

E		x4
---	---	----

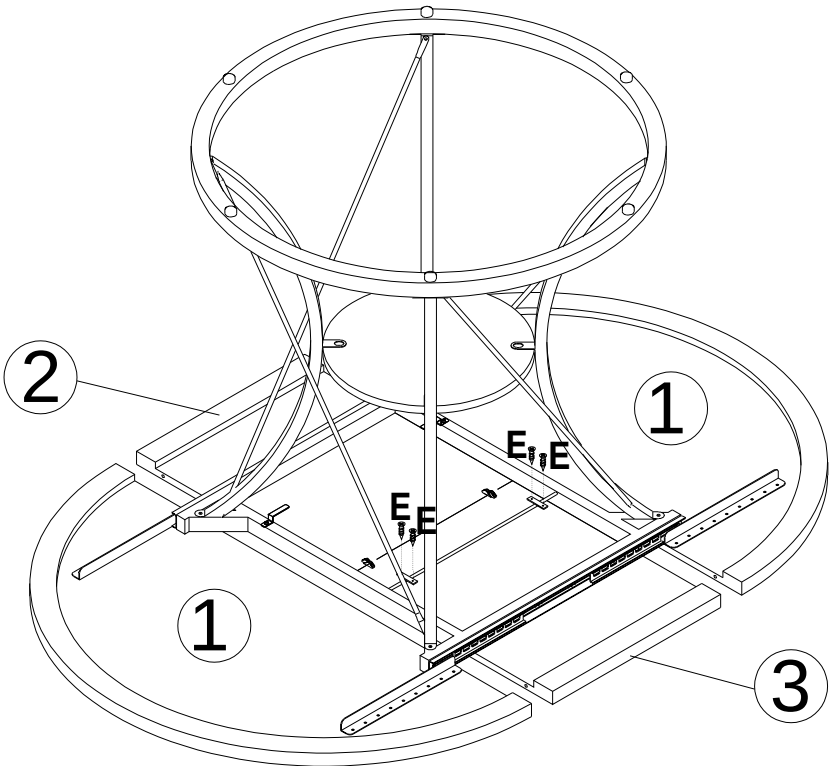


180°




Step:11


A		x8
---	---	----

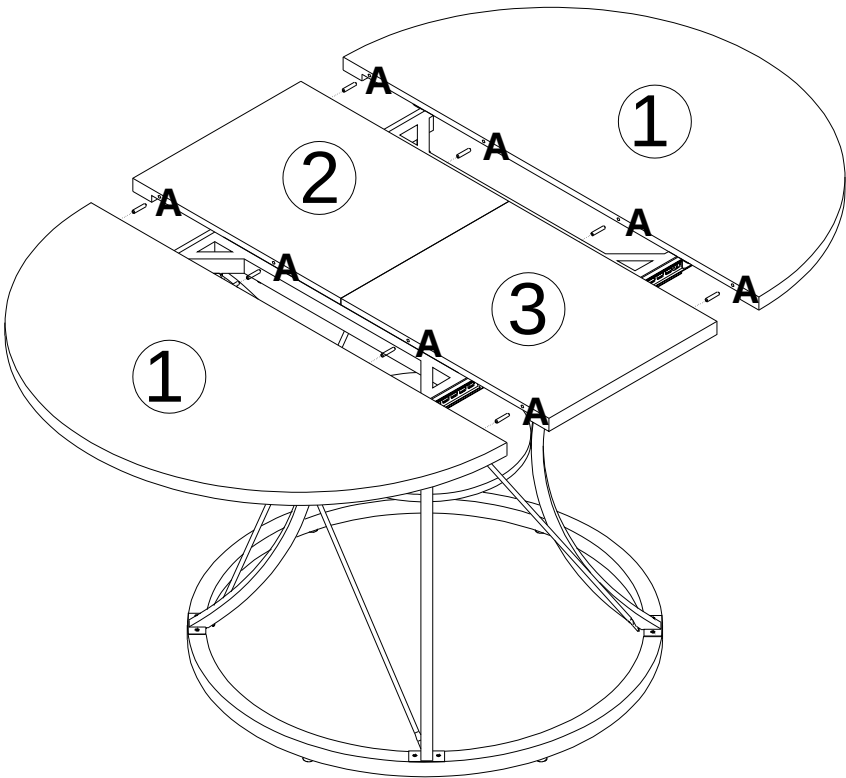


Step:12

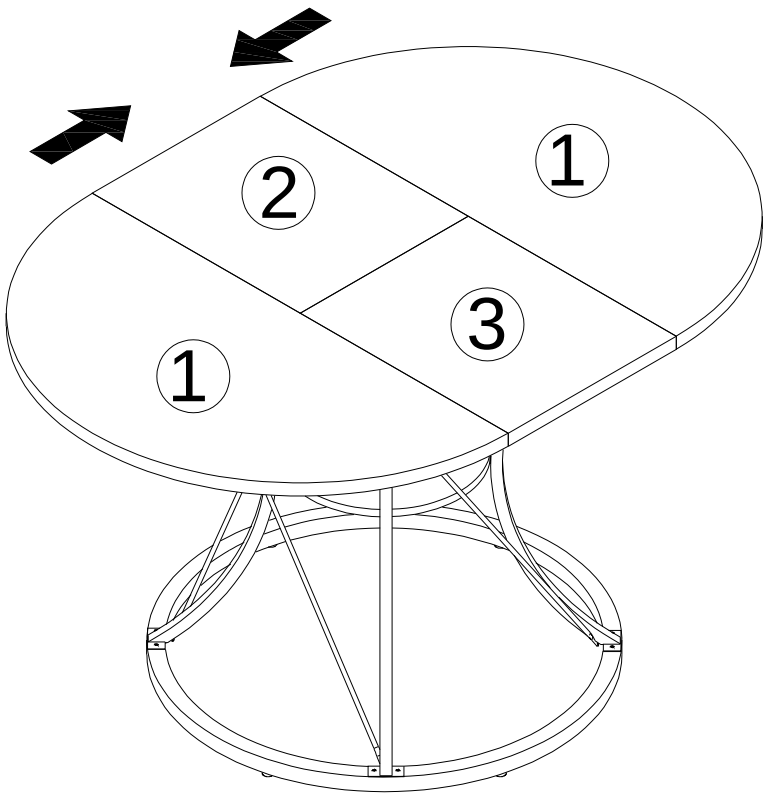


Step:13

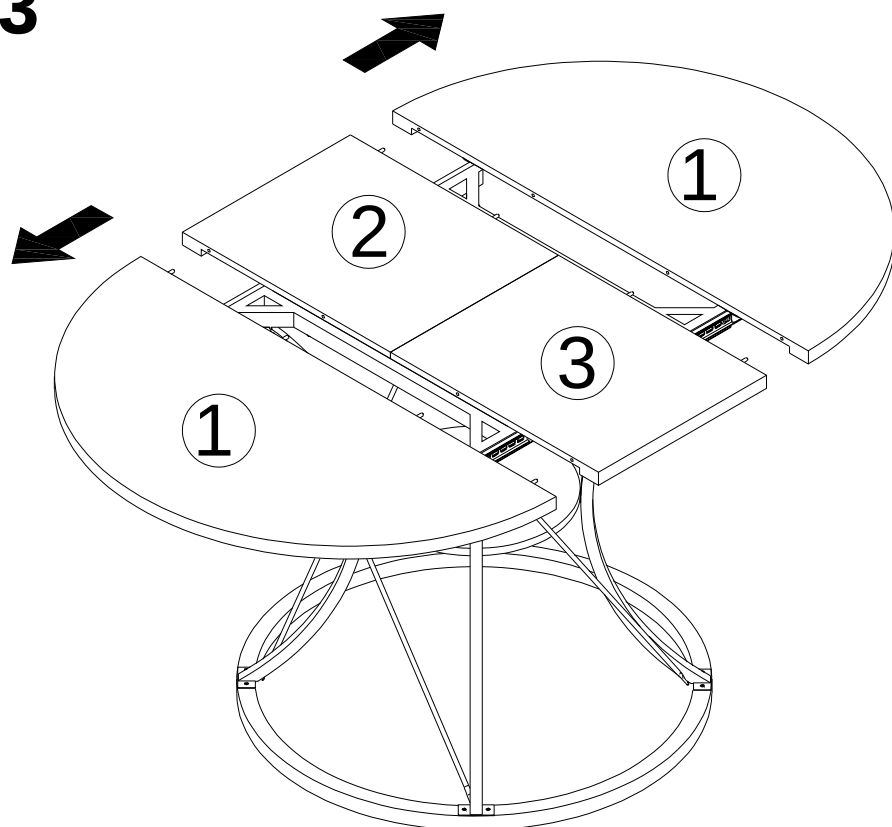

Step:14

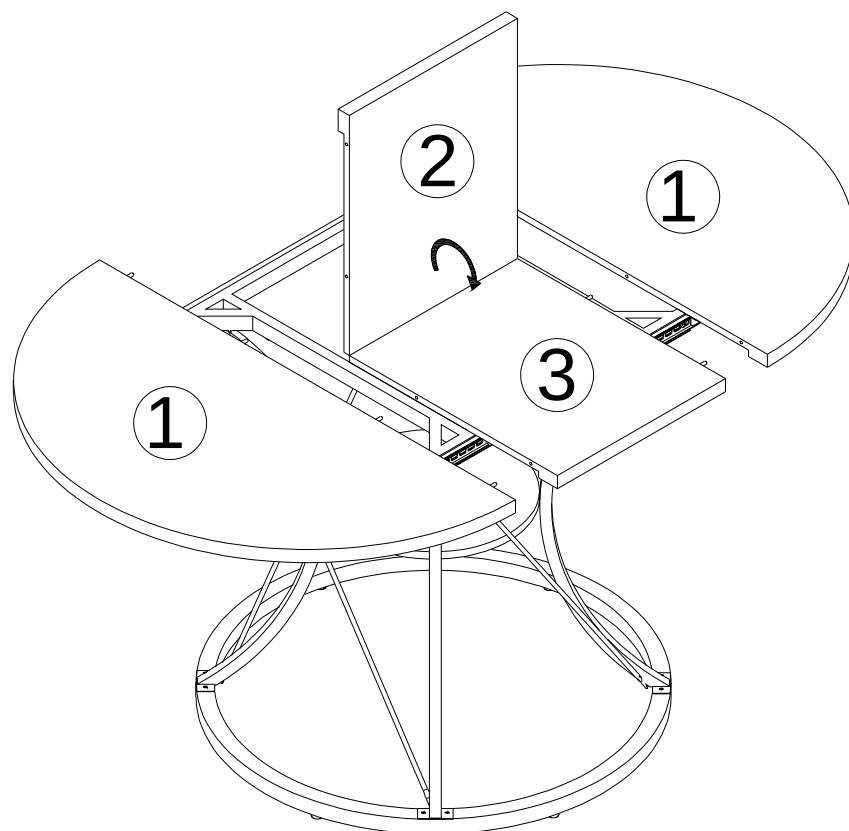

Step:15

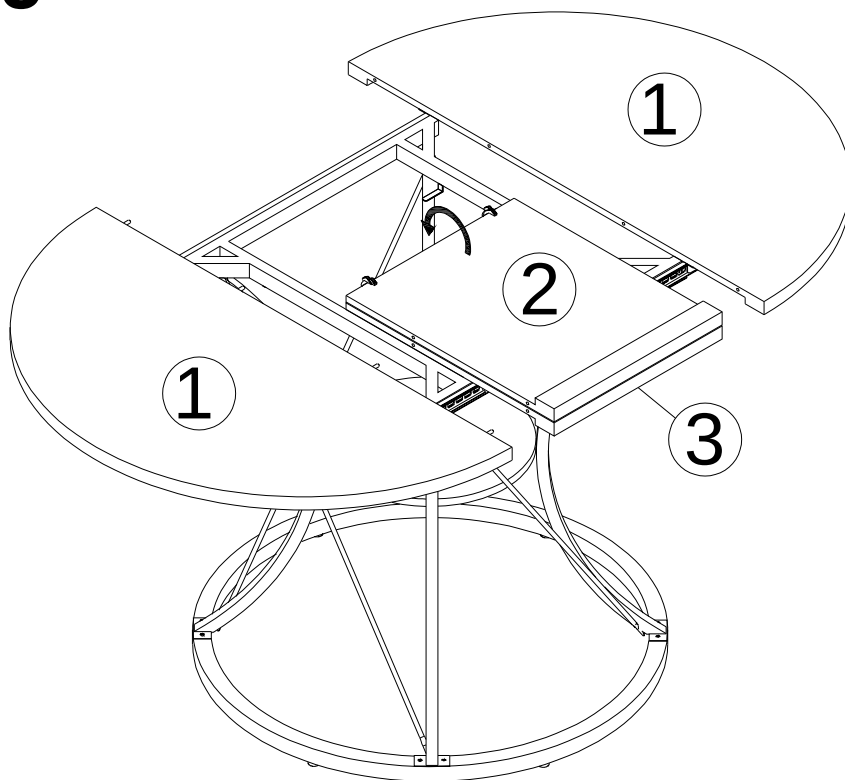

Step:16

