


TWIN - BK

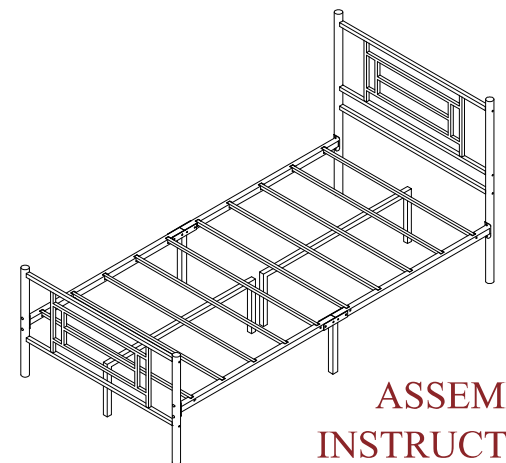

ASSEMBLY
INSTRUCTION

Important! ⚠️ WARNINGS

Read carefully, keep for future reference

Before assembling, check whether all parts listed in the part list have been delivered. Do not start assembling if parts are missing or damaged.

Before assembling, make sure there is on enough flat space for the procedure.

Keep children staying away from the assembly zone.


Follow each step of the assembly instructions.

The product is designed for indoor use only.

For your safety, please do not jump or horseplay on the bed.

Check regularly that all assembly fastenings are properly tightened, do not use the product if any structural part is broken or missing.

Keep the assembly instructions available at times for future disassembling or reassembling.

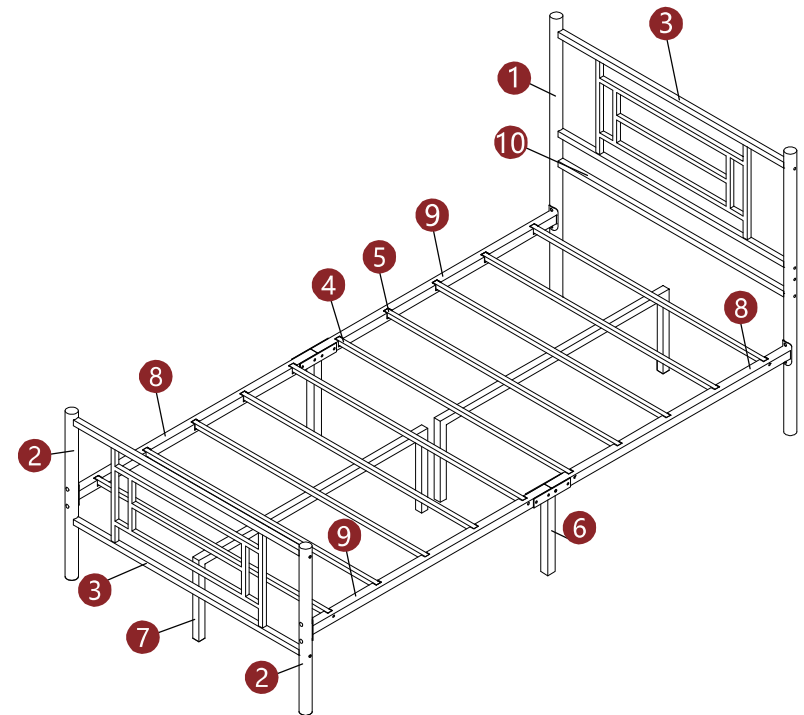

Parts List

⚠ Check all the components & hardwares before assembly.

Do not install in case any part missing.

◆ Components

① Headboard Bar X2	② Footboard Bar X2	③ Headboard/ Footboard Frame X2	④ Slat With Hole X4	⑤ Slat X6
⑥ Side Rail Support Bar X2	⑦ Support Frame X2	⑧ Side Rail X2	⑨ Side Rail X2	⑩ Headboard Tube X1

◆ Hardwares and tool

A M6×60 X10	D M6×27 X8	H Plastic Cap X20
B M8×27 X8	E M6×25 X8	I M6×35 X8
C M8×30 X8	F M6×45 X4	X1



⚠ Do not completely tighten all the hardwares until the final step.

Assembly Steps



Step 1 Connet headboard bar ① to frame ③ and Headboard Tube ⑩ with bolt A.

①	X2	⑩	X1
③	X1		



A	M6×60 X6
---	----------

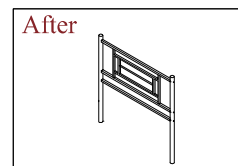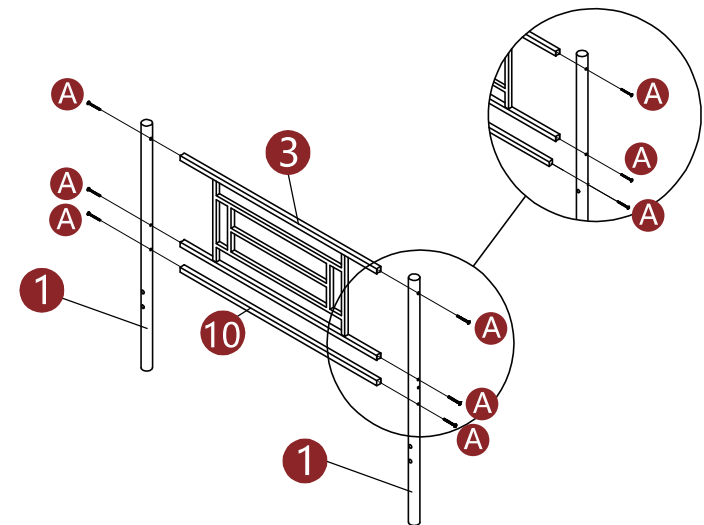




Step 2 Attach 8, 9 to headboard bar with bolt C and nut B.

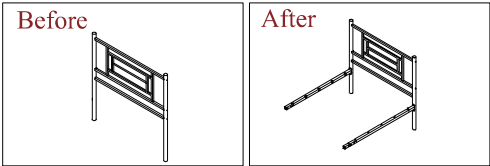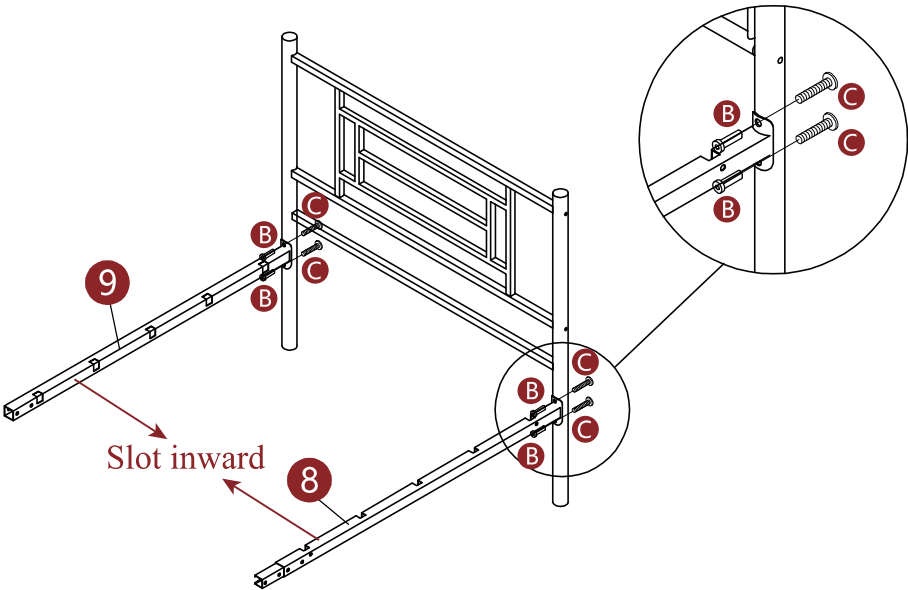

Step 3 Connect footboard bar 2 to footboard frame 3 with bolt A.

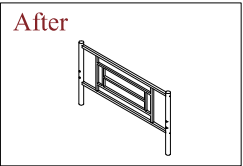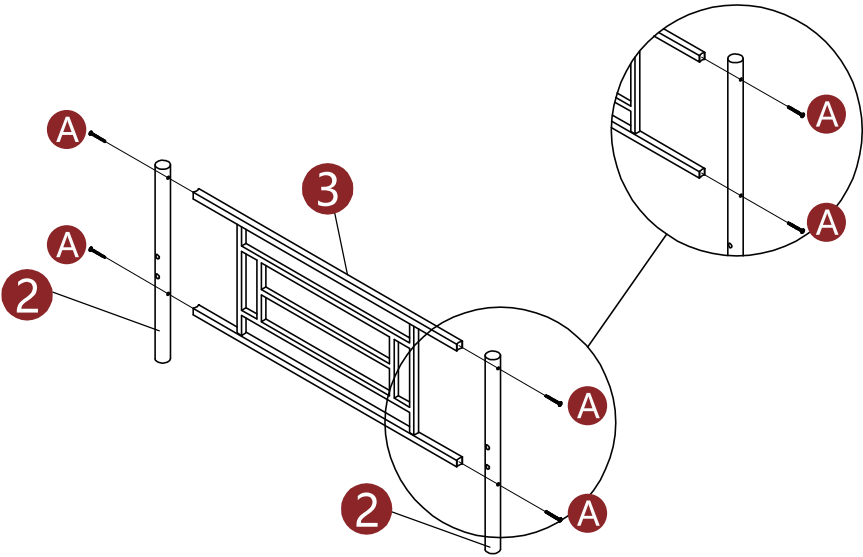





Step 4 Attach side rail ⑧ & ⑨ to footboard.

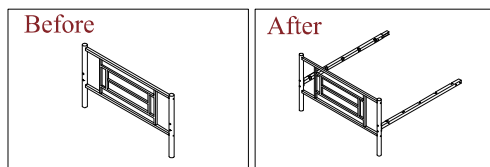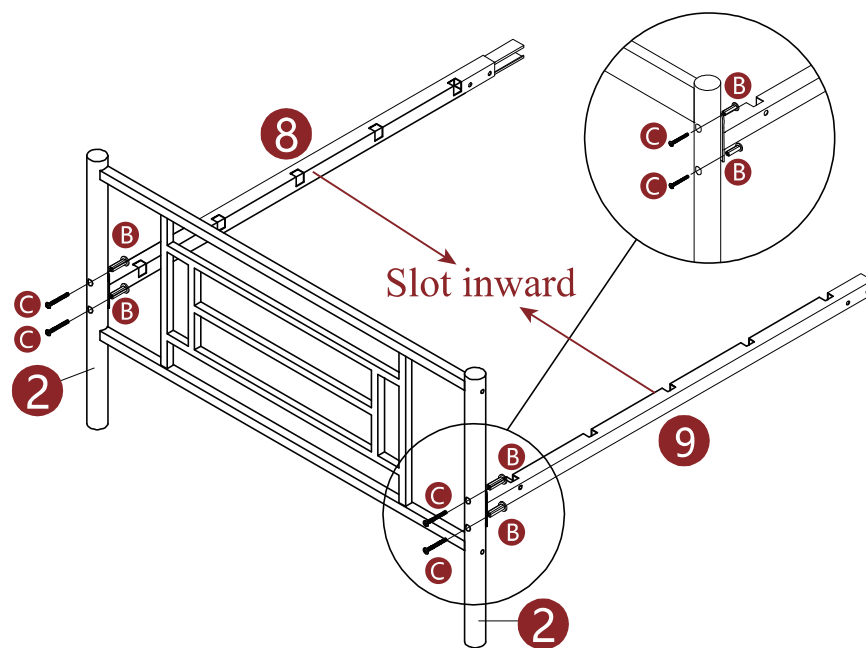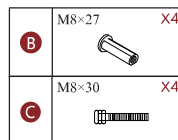

7/14







Step 5 Insert side rail ⑧ into ⑨, support with side rail support bar ⑥. Fix the side rail with bolt Ⓓ and nut Ⓔ on both sides.

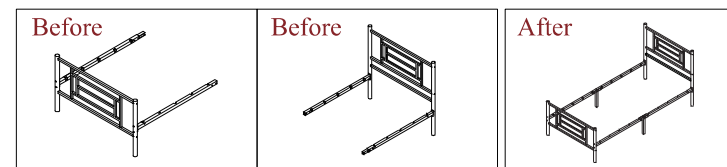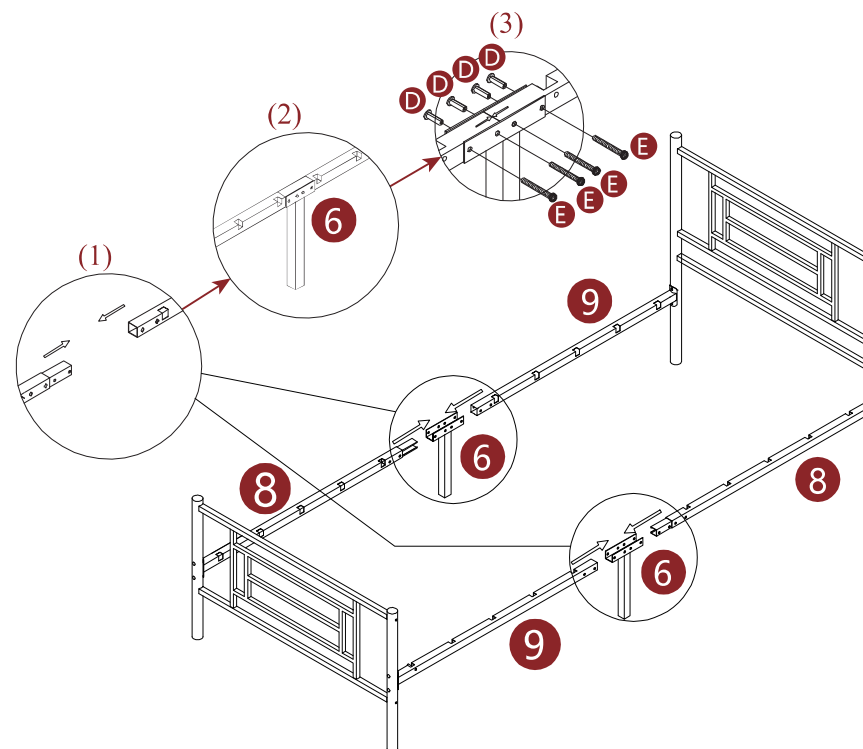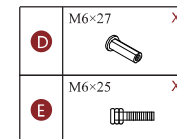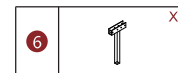





8/14







- Step 6** (1) Insert plastic cap **H** into both end of each slats **4**.
 (2) Completely insert slat ends into the slots of both side rails.
 Remark: Position for slats **4**: in the middle $\times 2$, closed to headboard $\times 1$, closed to footboard $\times 1$.

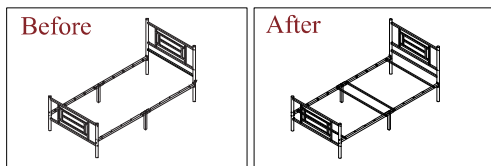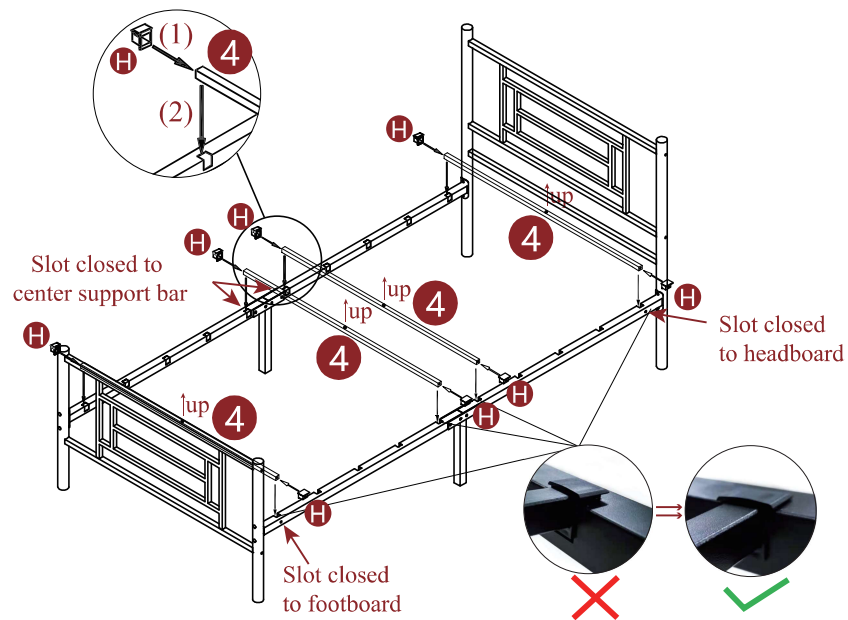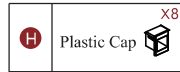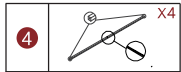



- Step 7** Put support frame **7** $\times 2$ under the slats **4** and keep them straight.
 Fix the slats and frames with bolts **F**.

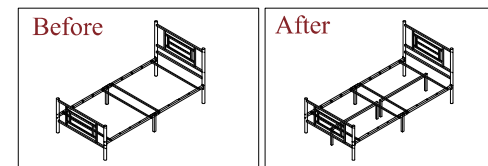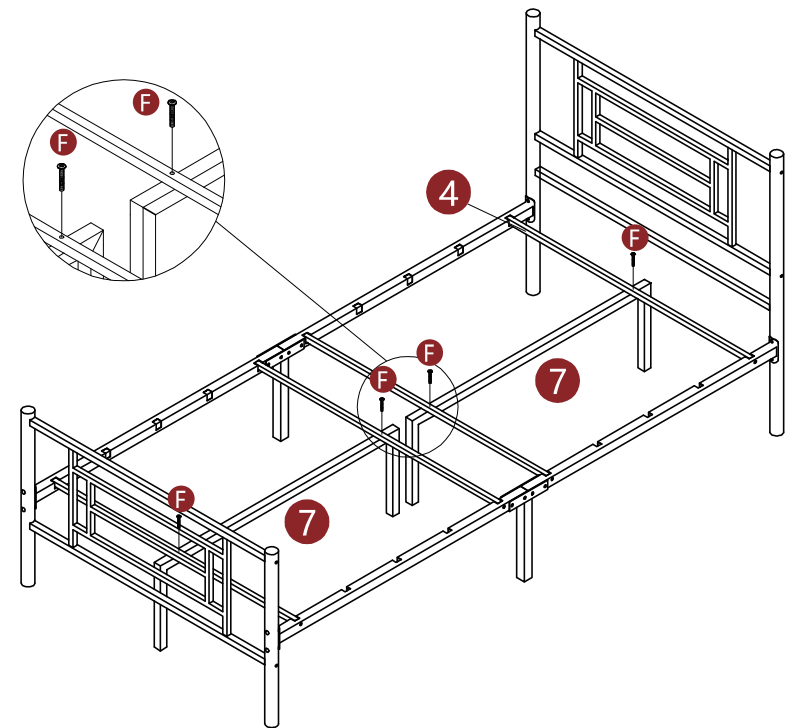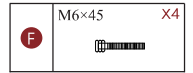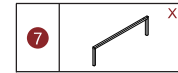

Step 8 (1) Insert plastic caps into both end of all slats 5.
 (2) Completely insert both end of all slats 5 into slots of siderails.

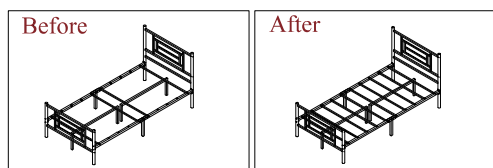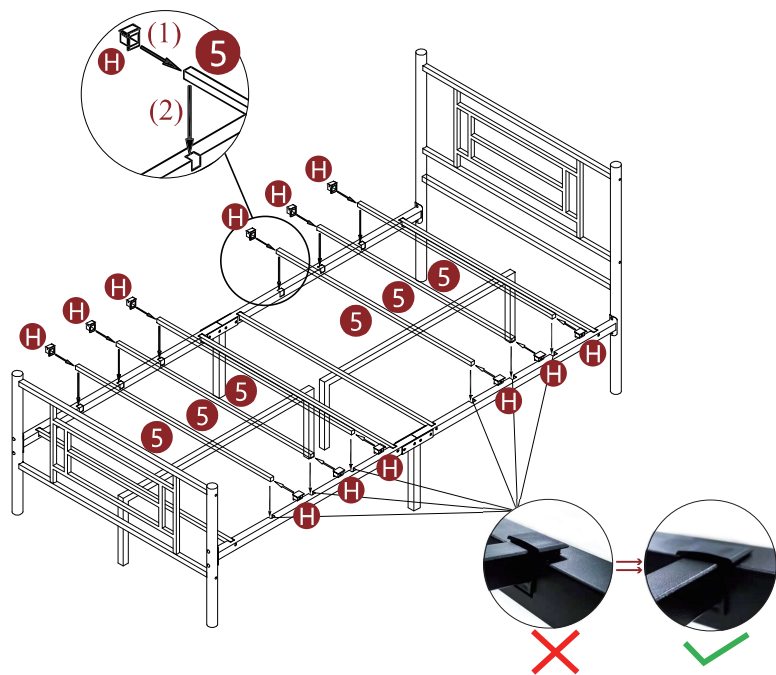

Step 9 Lock both end of slats 4 with bolt 1.

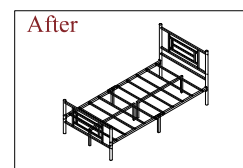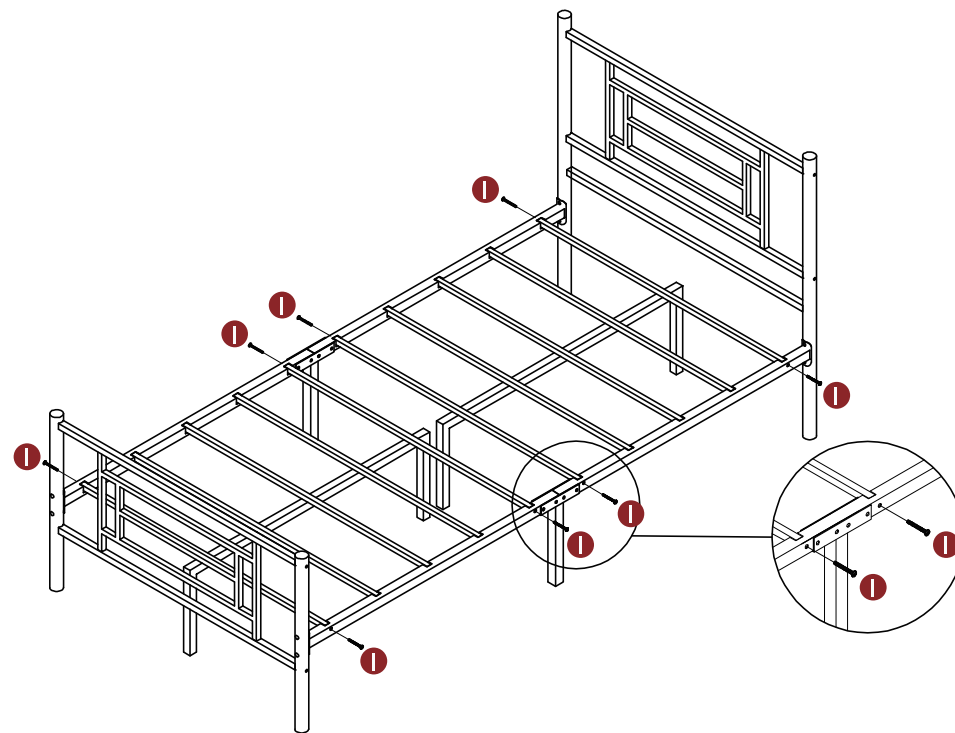

Step 10 Check and completely tighten all the bolts in the end.

