




















FIVE DRAWERS CABINET

–Instruction Manual–

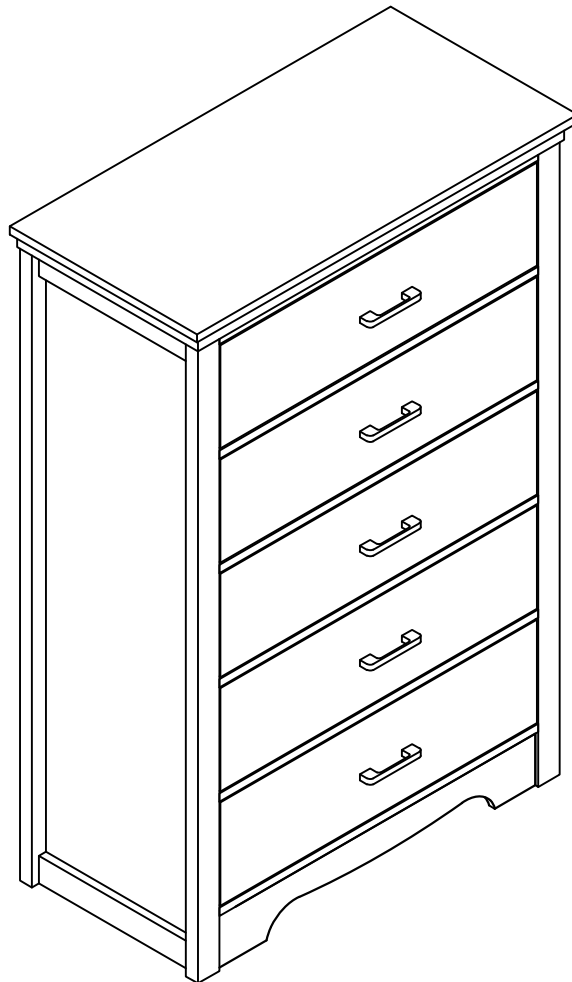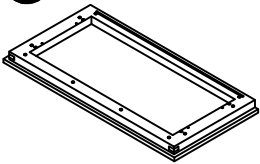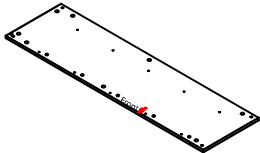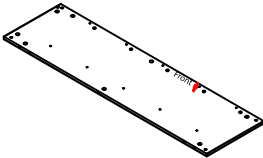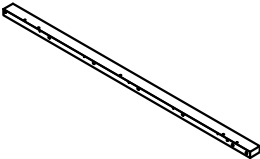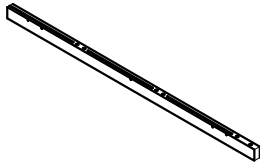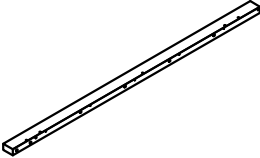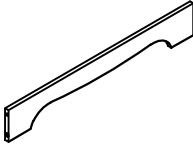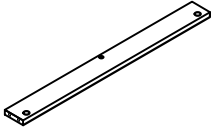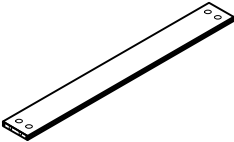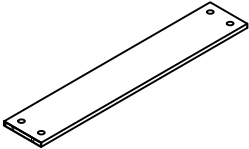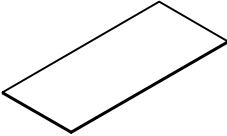
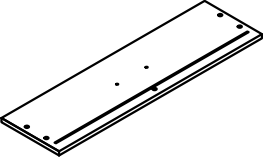
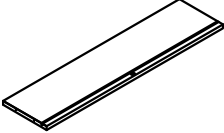








Size: W 31.3xD 15.5xH 47.2 in

HARDWARE LIST


1  1PC	2  1PC	3  1PC	4  1PC	5  1PC
6  1PC	7  1PC	8  5PCS	9  1PC	10  1PC
11  2PCS	12  1PC	13  3PCS	14  5PCS	15  5PCS
16  5PCS	17  5PCS	18  5PCS	19  5PCS	20  4PCS

HARDWARE LIST

A  6x35mm 85(+2)PCS	B  6x30mm 14(+1)PCS	C  M3.5x12mm 50(+2)PCS	D  M3.5x35mm 22(+2)PCS
F  M4x16mm 10PCS	G  M3x14mm 14(+1)PCS	I  M3.5x25mm 8(+1)PCS	
K  M3.5x16mm 2PCS	L  2PCS	M  4(+2)PCS	




CL
x5
L300mm




CR
x5
L300mm



DL
x5
L300mm




DR
x5
L300mm

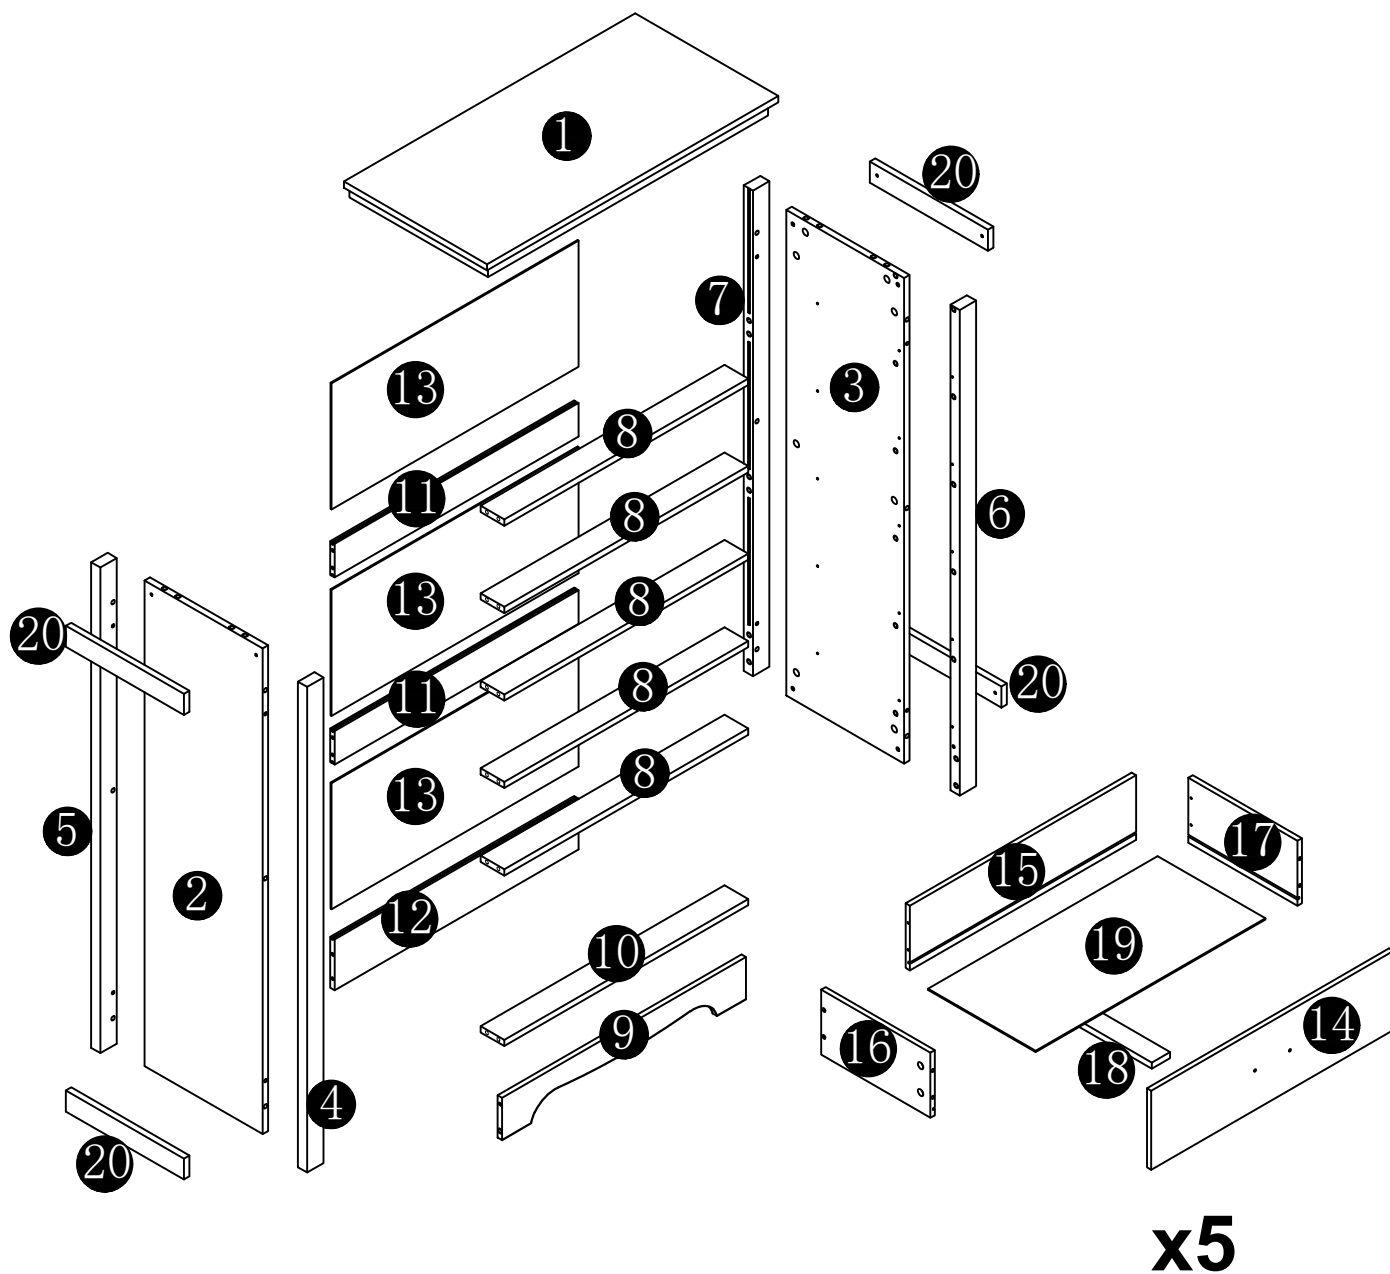

Tips

*This furniture requires 2 people to assemble.
Make sure no parts missing or damaged before assembly.*

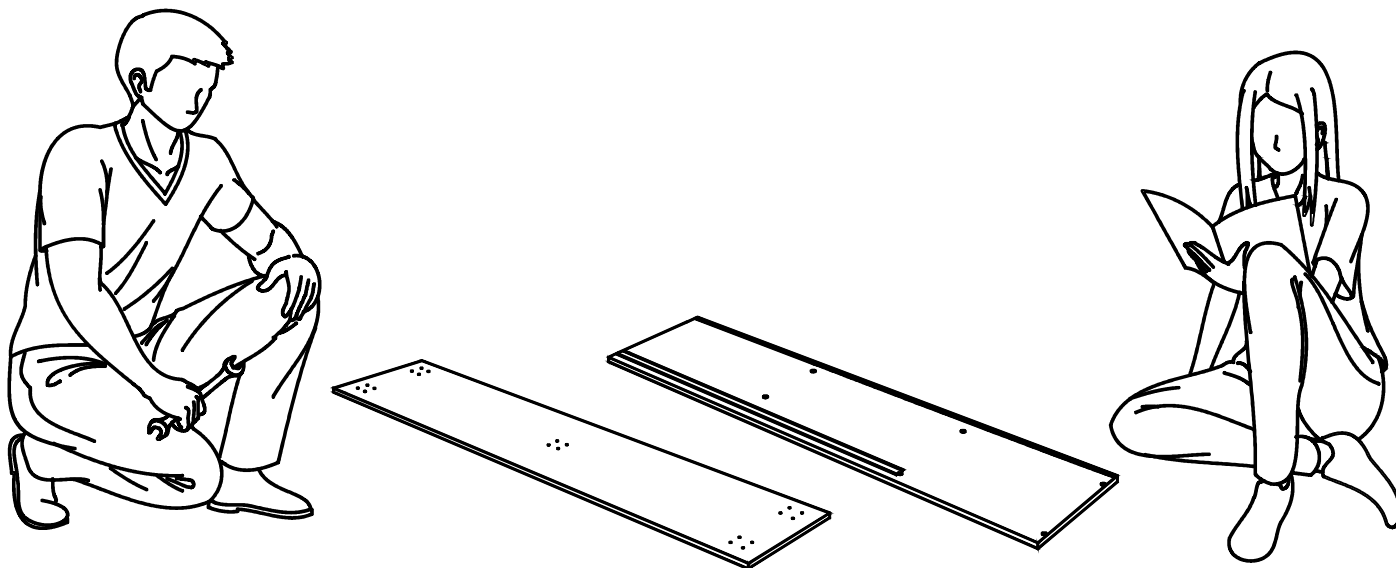


CAM BOLT INSTALLATION AS BELOW




Cam bolt






Connecting piece

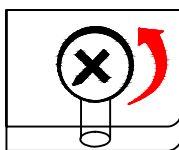


Rotate connecting piece if
found in position illustrated
above

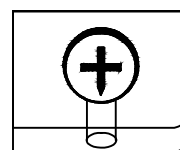


Correct orientation to
receive bolts

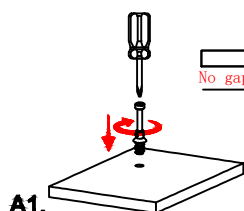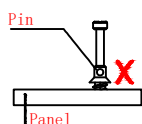


A1.

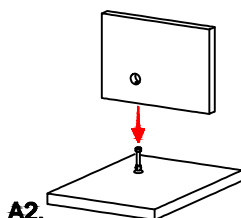

A2.

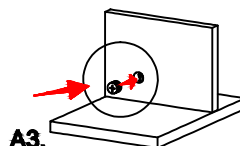

A3.

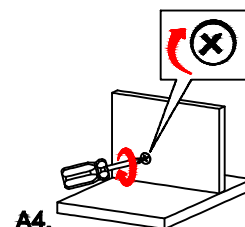


A4.

Steps

1


A x19PCS

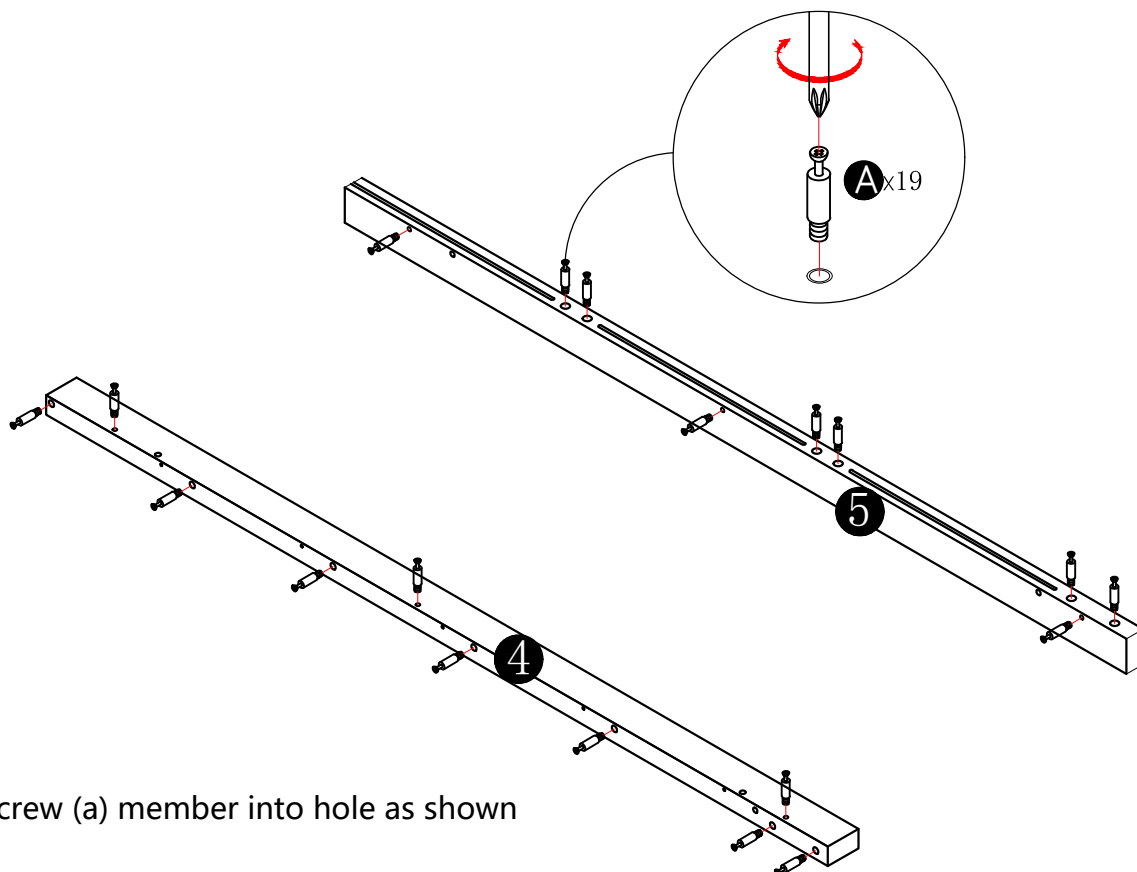

Screw (a) member into hole as shown

2

A x19PCS

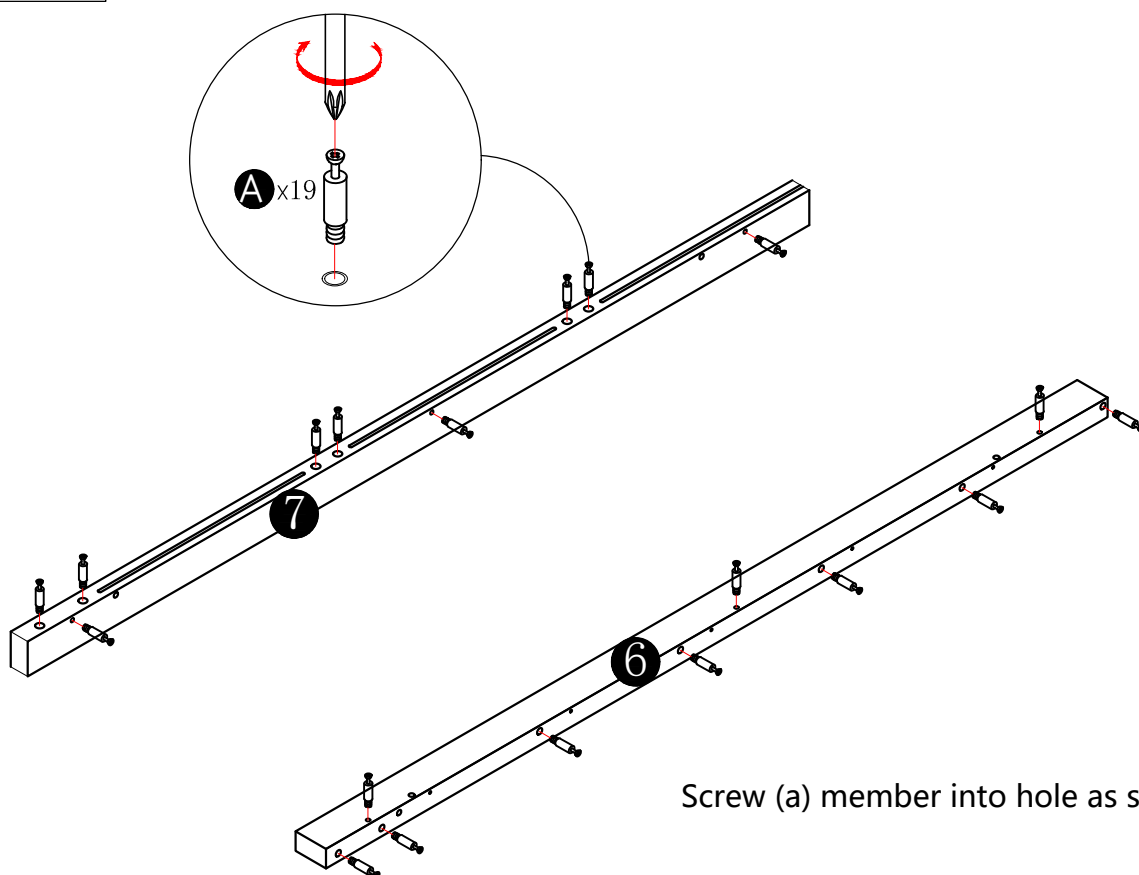


Screw (a) member into hole as shown

Steps

3


A x 6PCS C x 4PCS

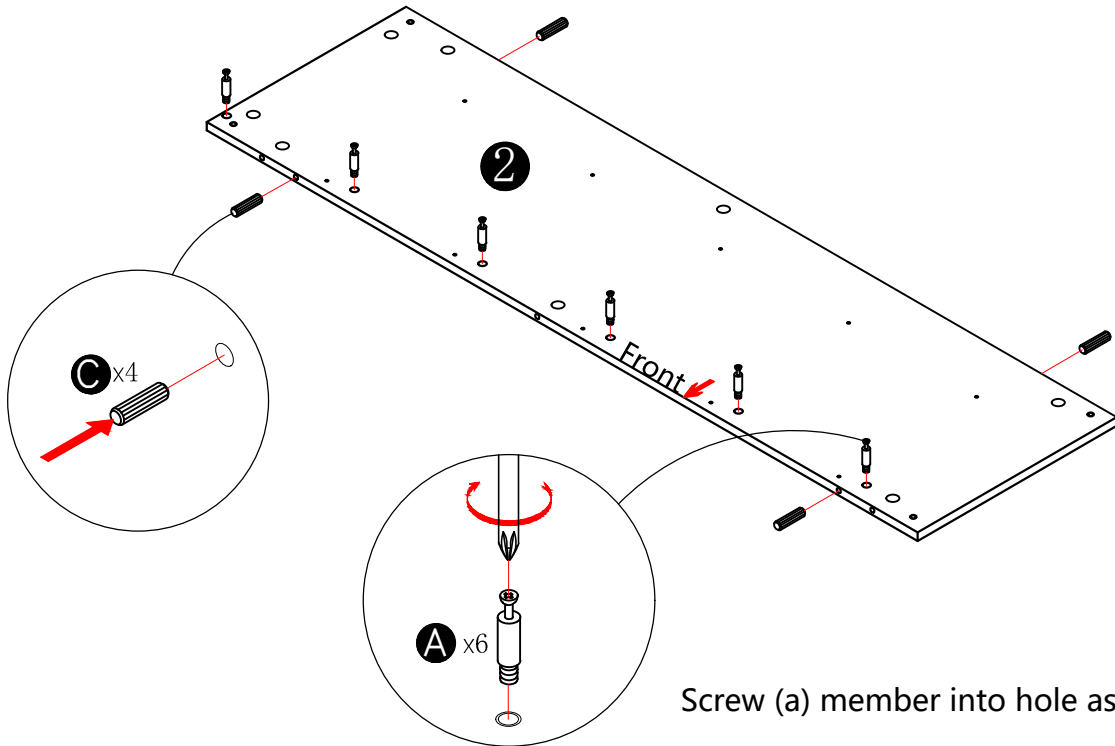

Screw (a) member into hole as shown

4

A x 6PCS C x 4PCS

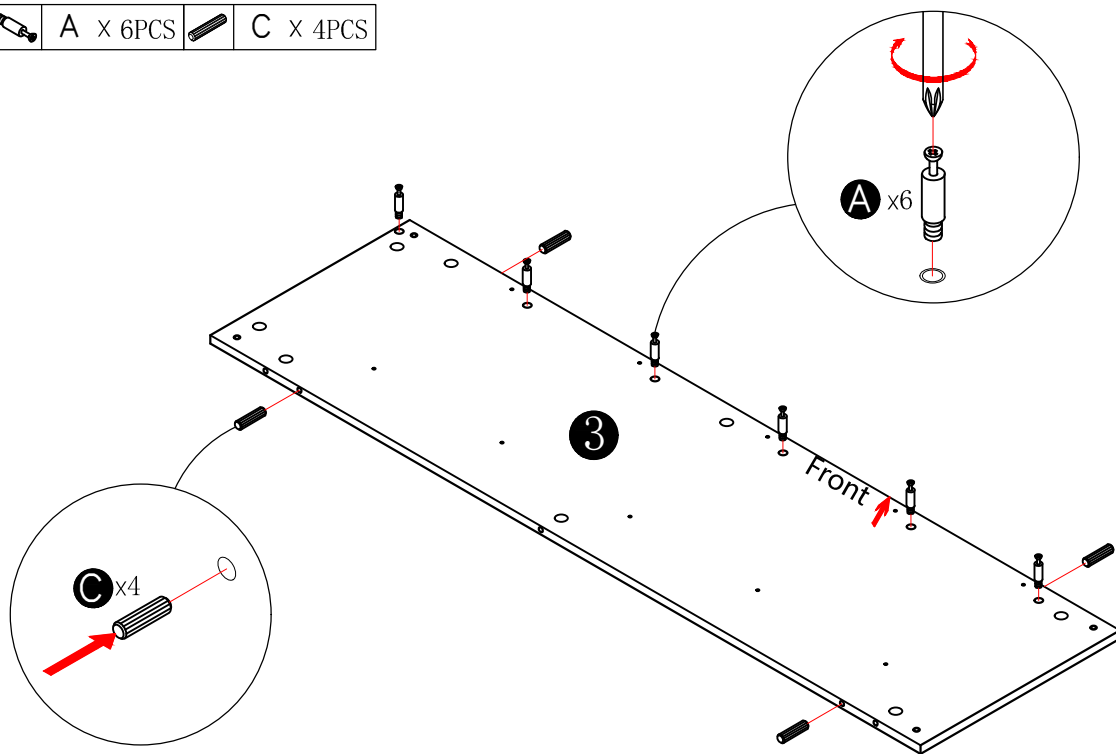


Screw (a) member into hole as shown

Steps


5

 B x 6PCS

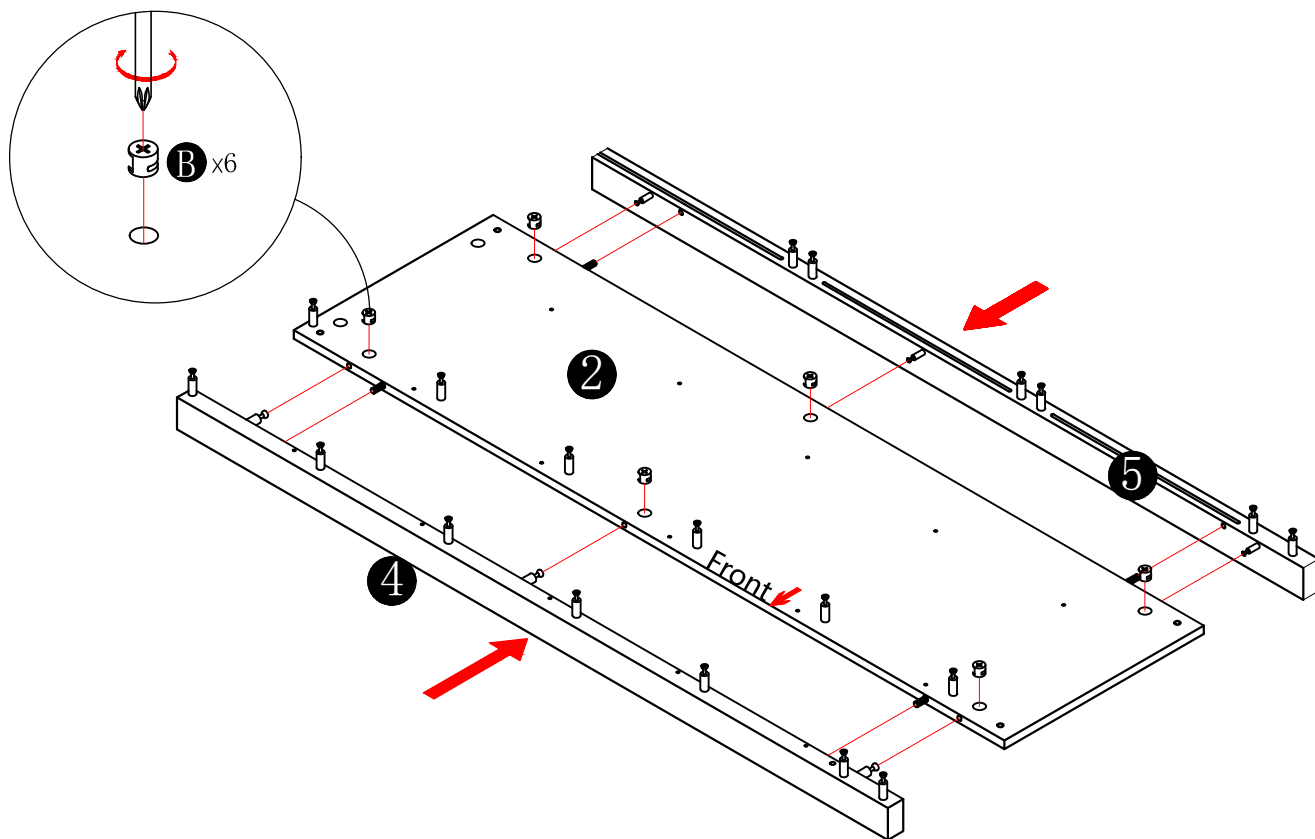


6

 B x 6PCS

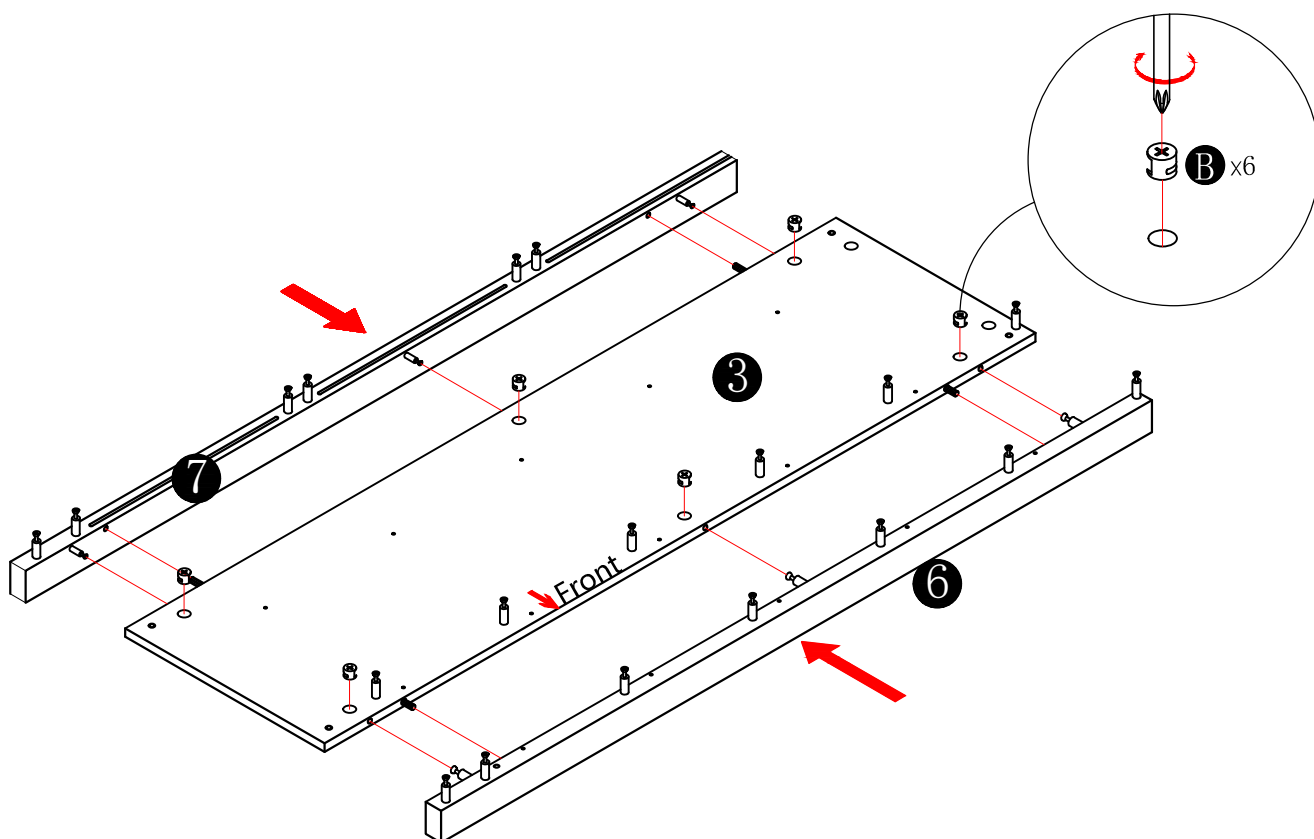


Steps

7  J x 4PCS

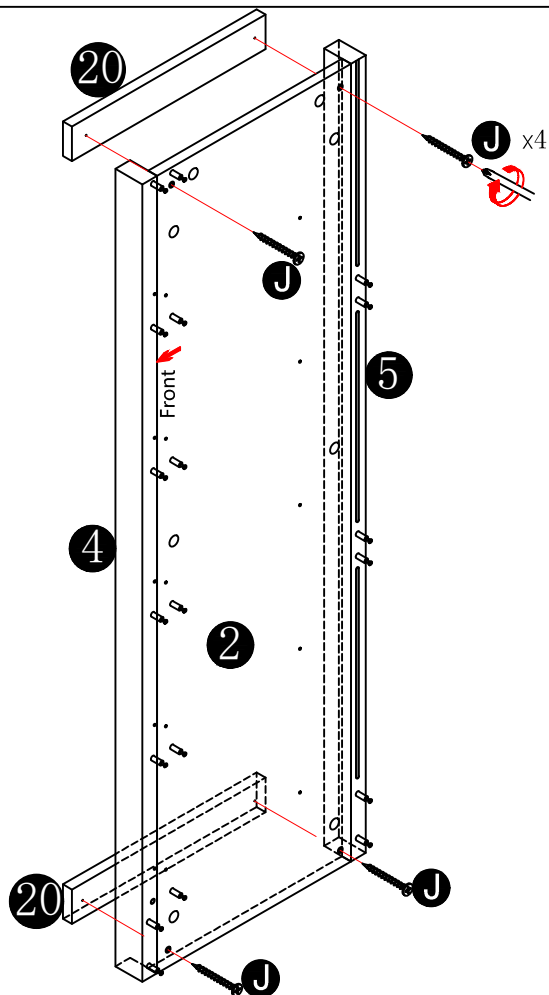


8  J x 4PCS

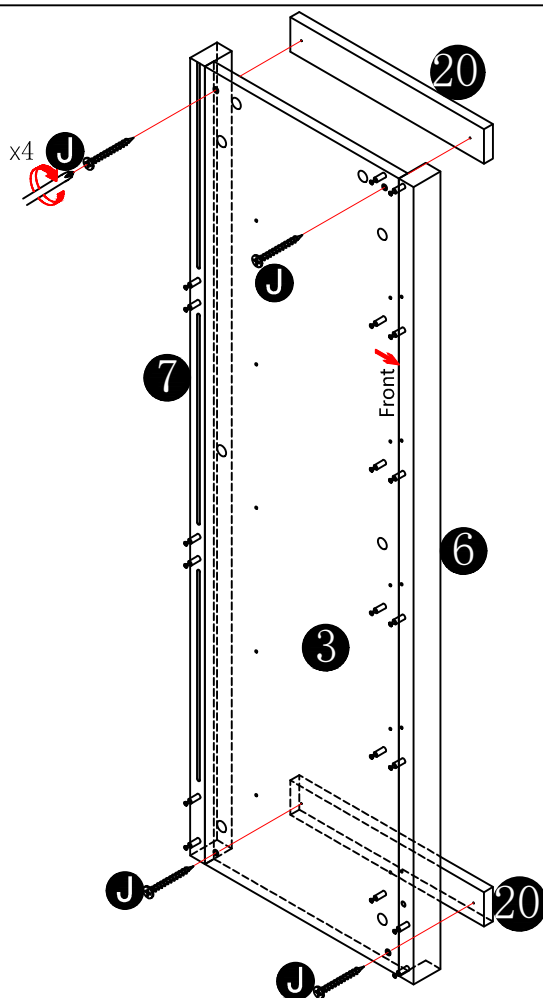


Steps

9  CL x5PCS  D x15PCS  N x 2PCS

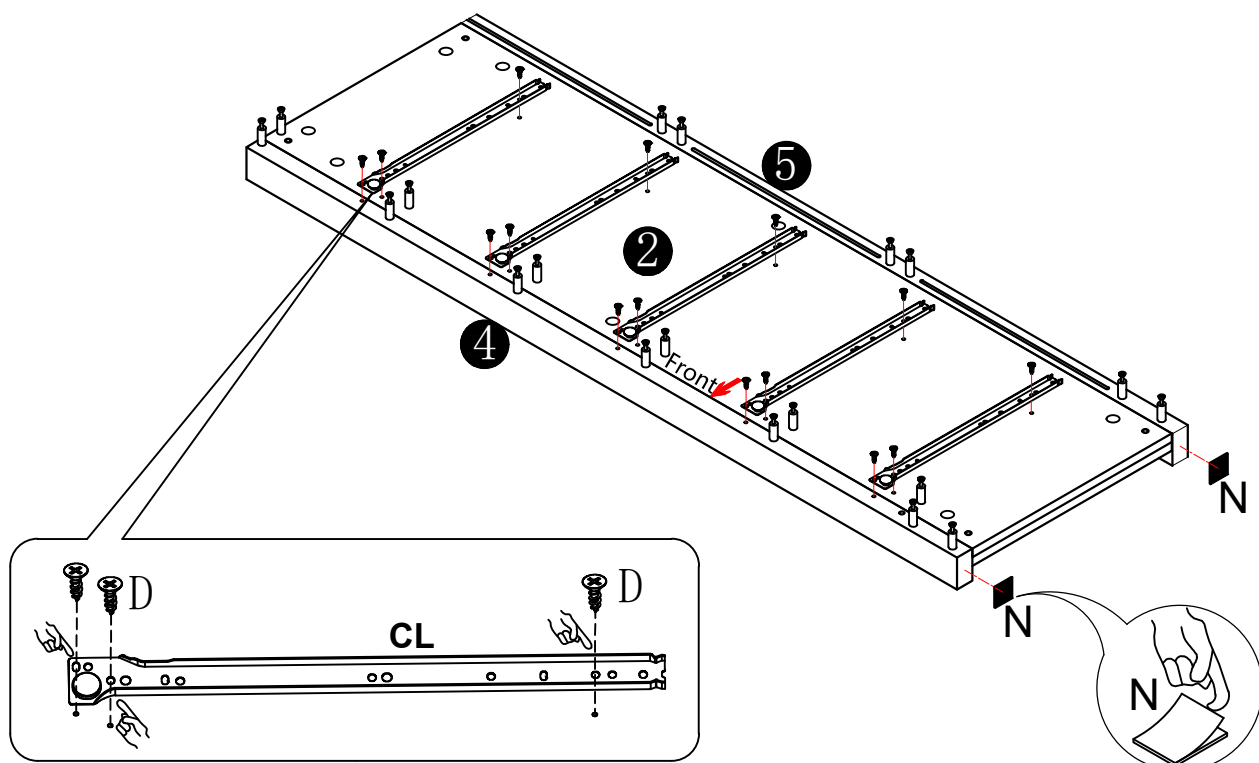

10  CR x5PCS  D x15PCS  N x 2PCS

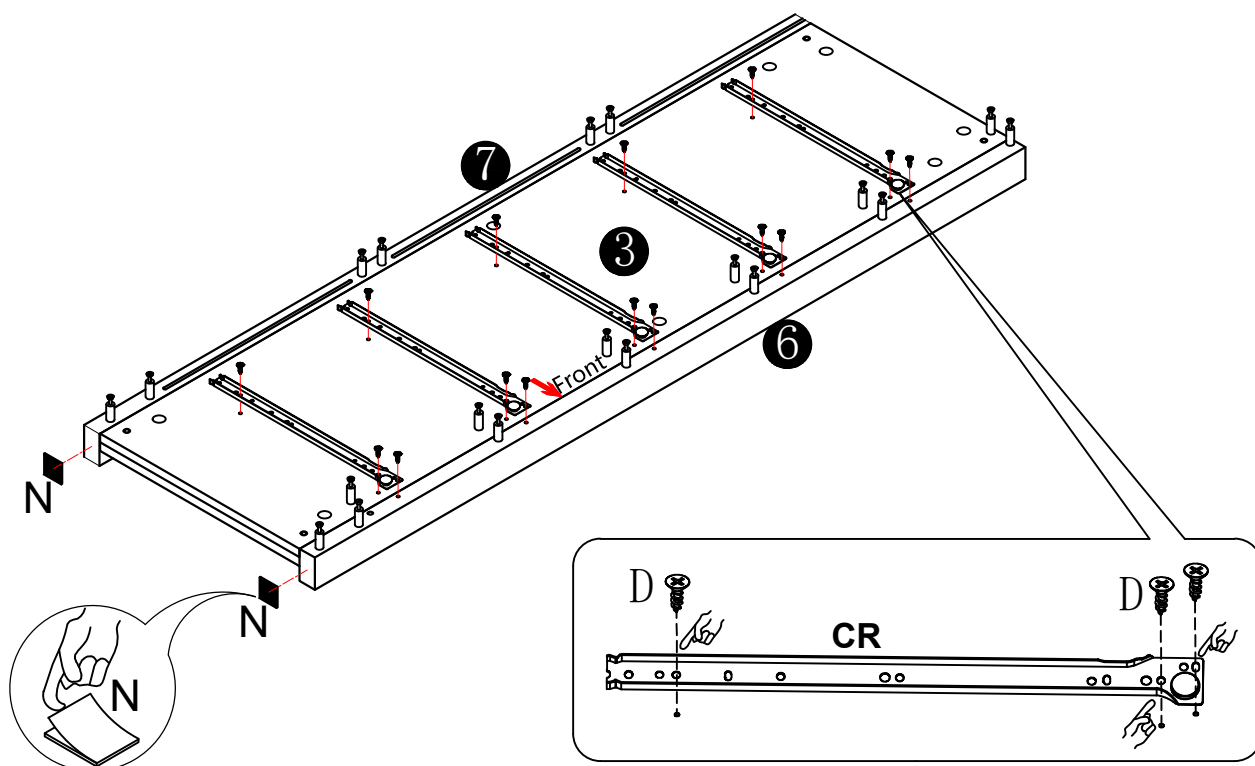

Steps


11



A × 1PC




C × 2PCS

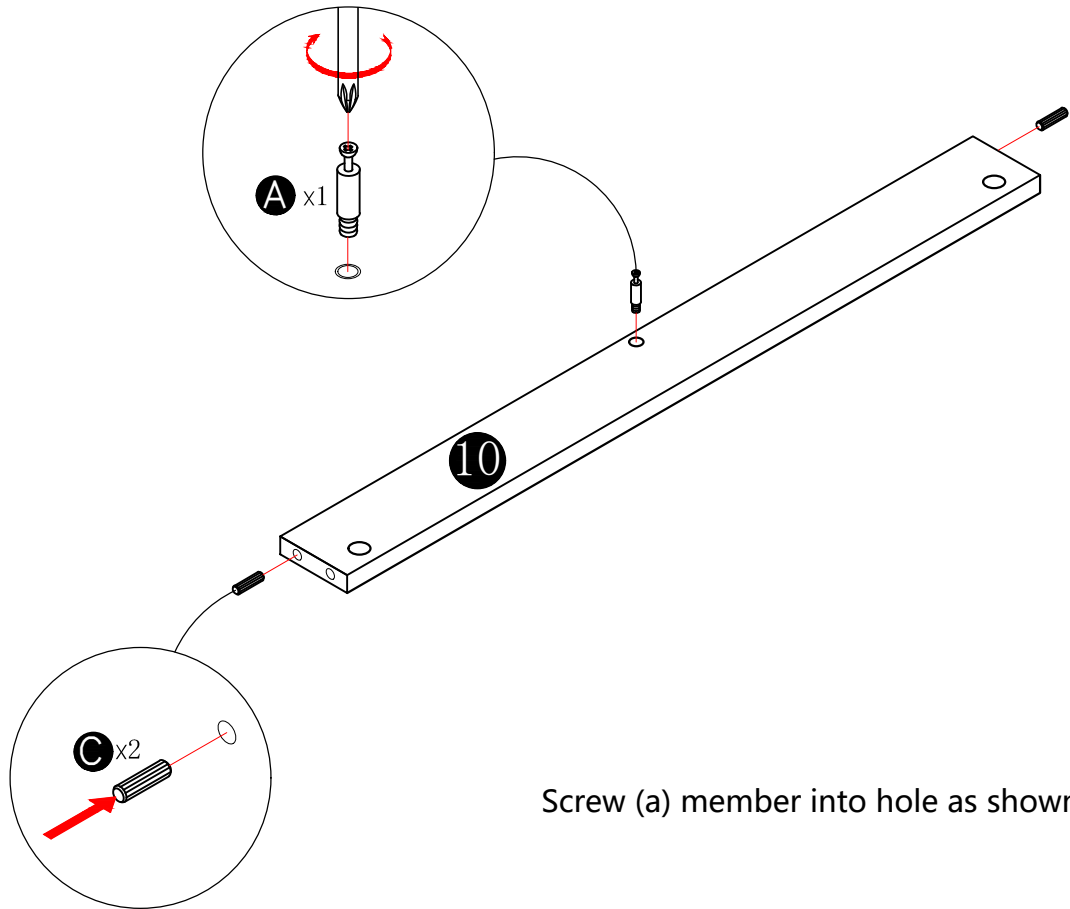

12




B × 1PC

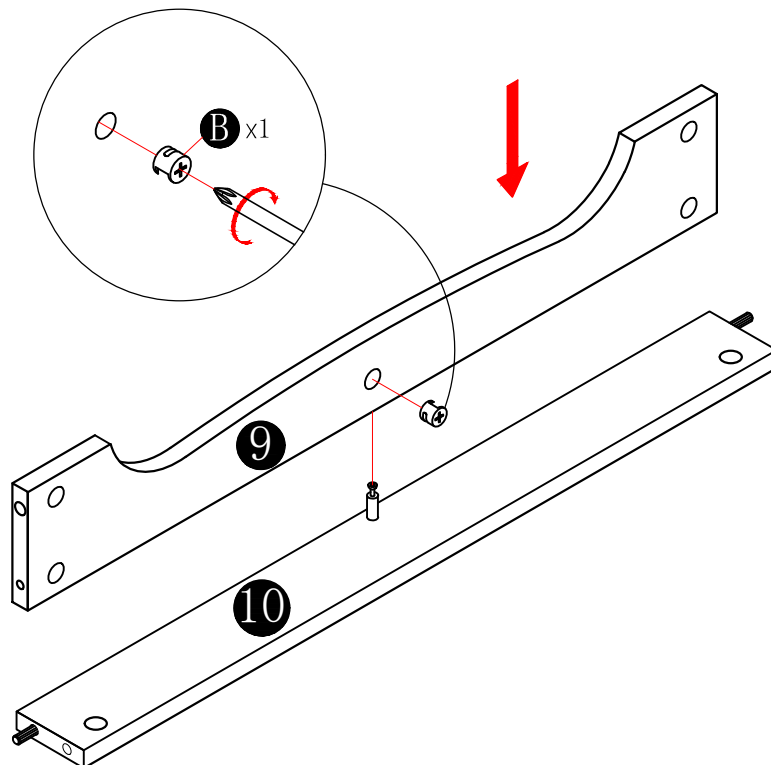


Steps

13

B x19PCS


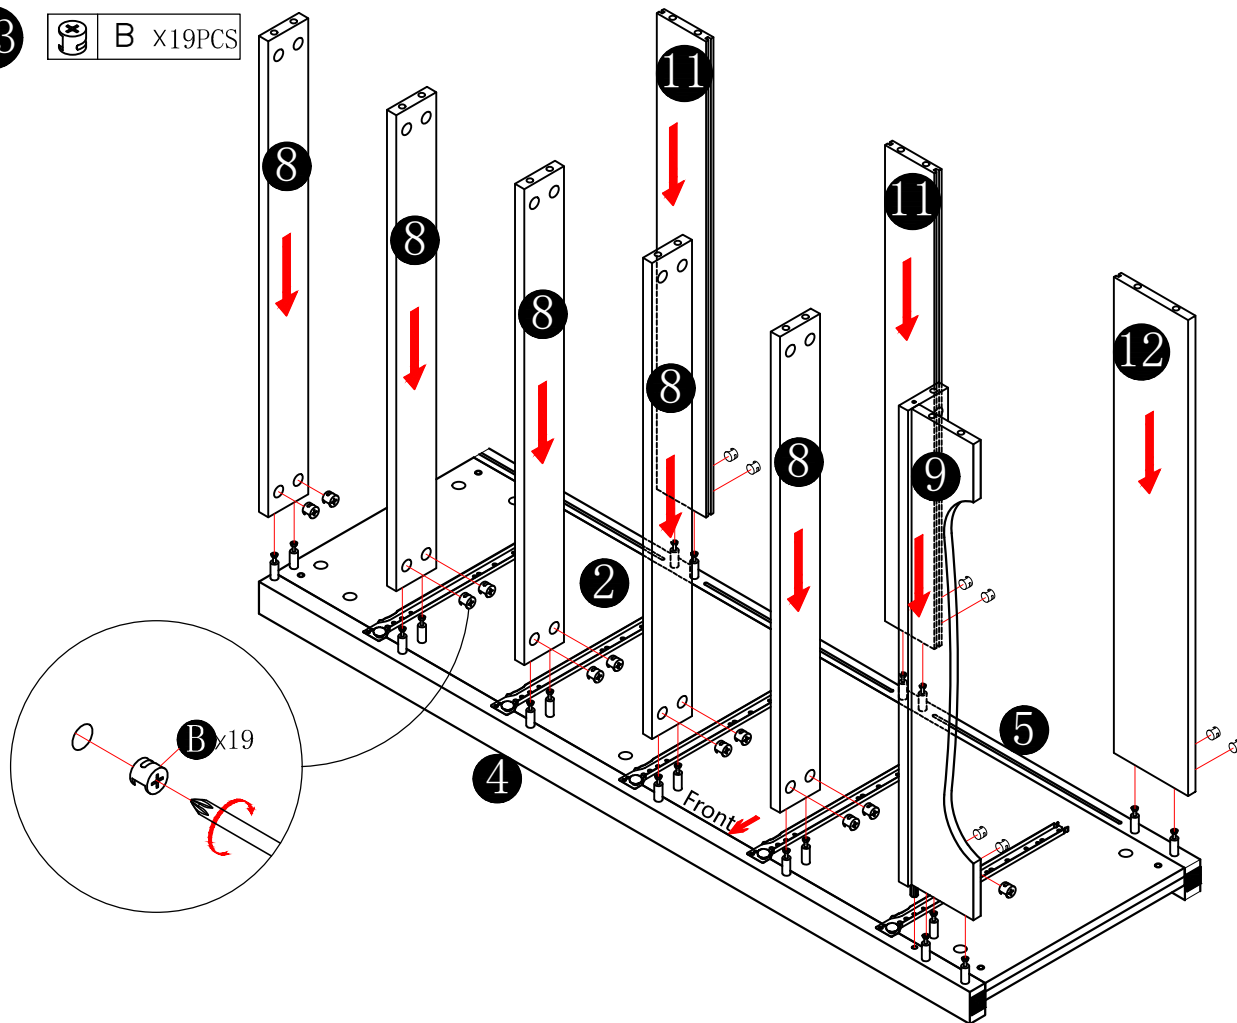


14


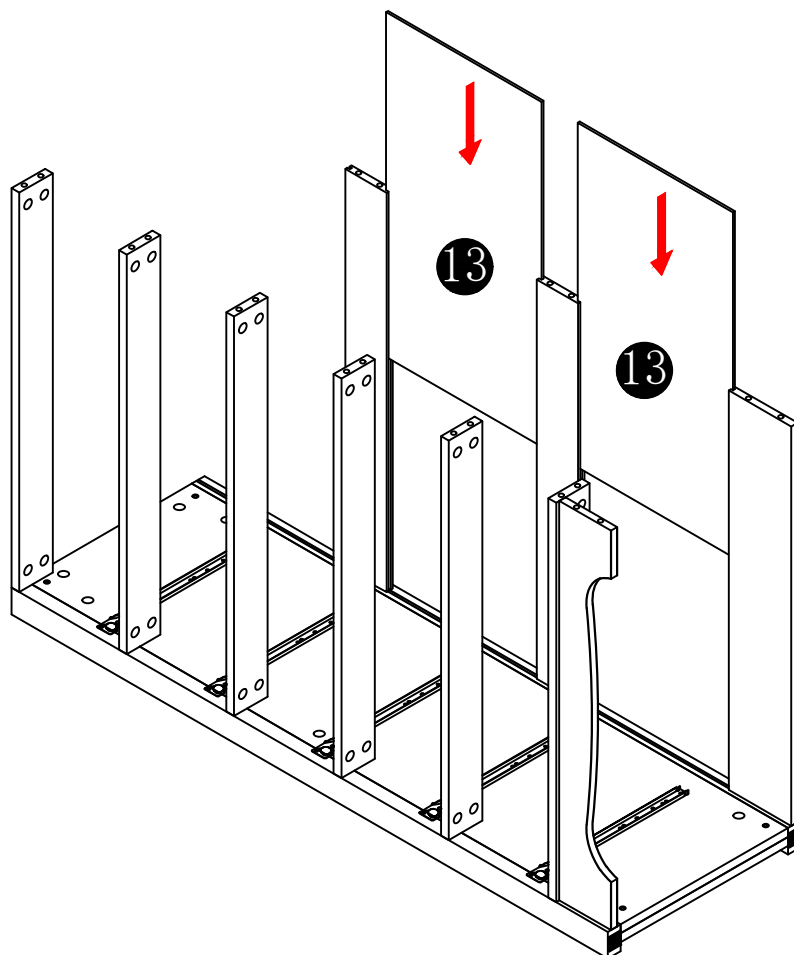


Steps

15  B x19PCS

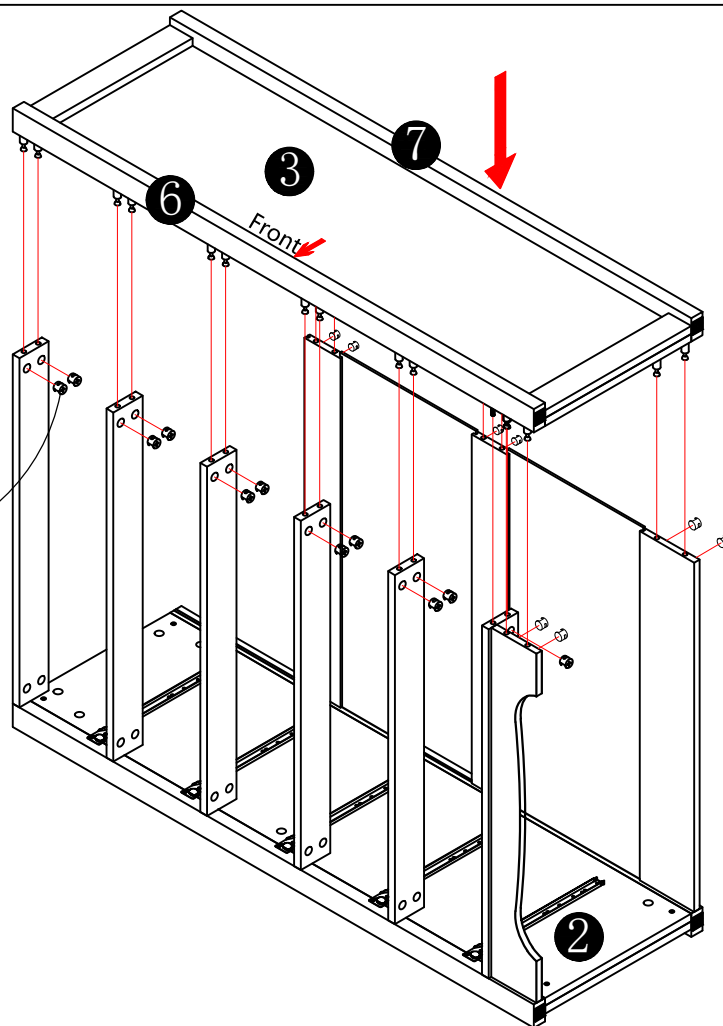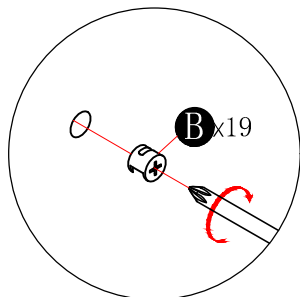

16  C x 4PCS

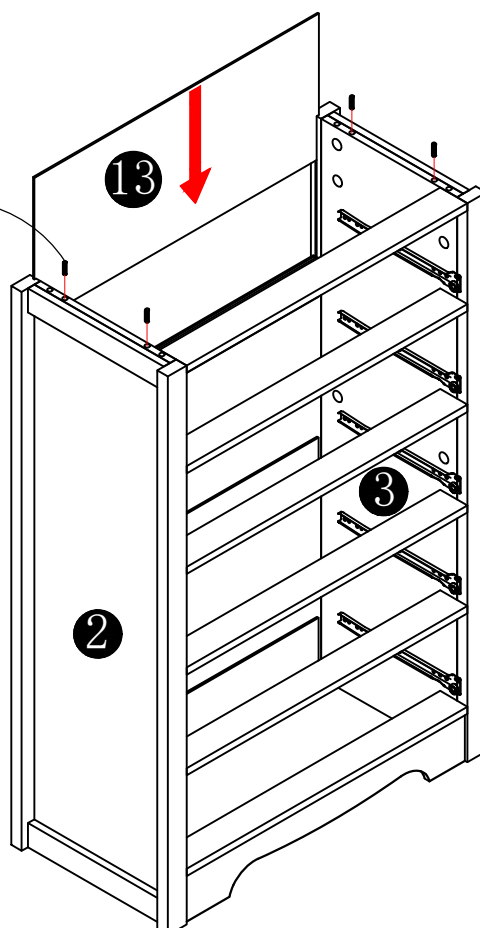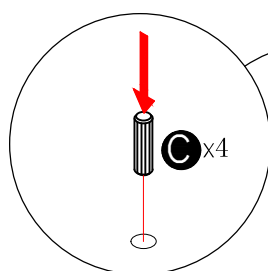


Steps

17



A x 4PCS

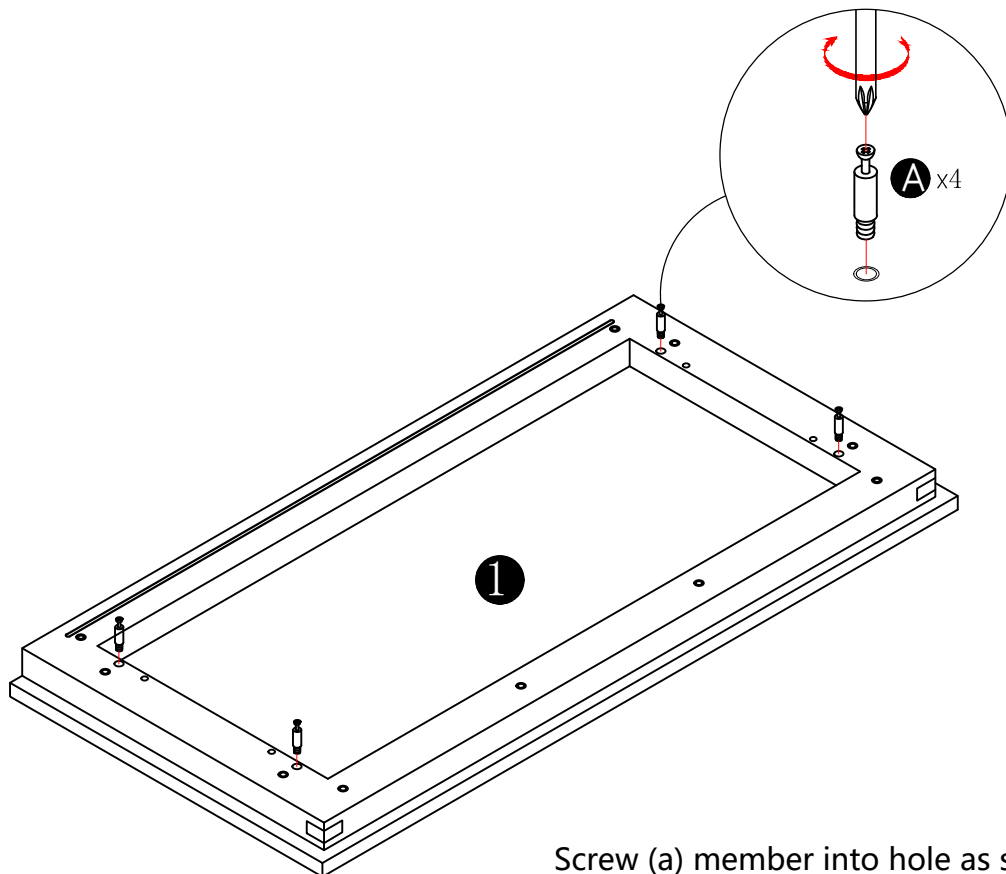


Screw (a) member into hole as shown

18




B x 4PCS

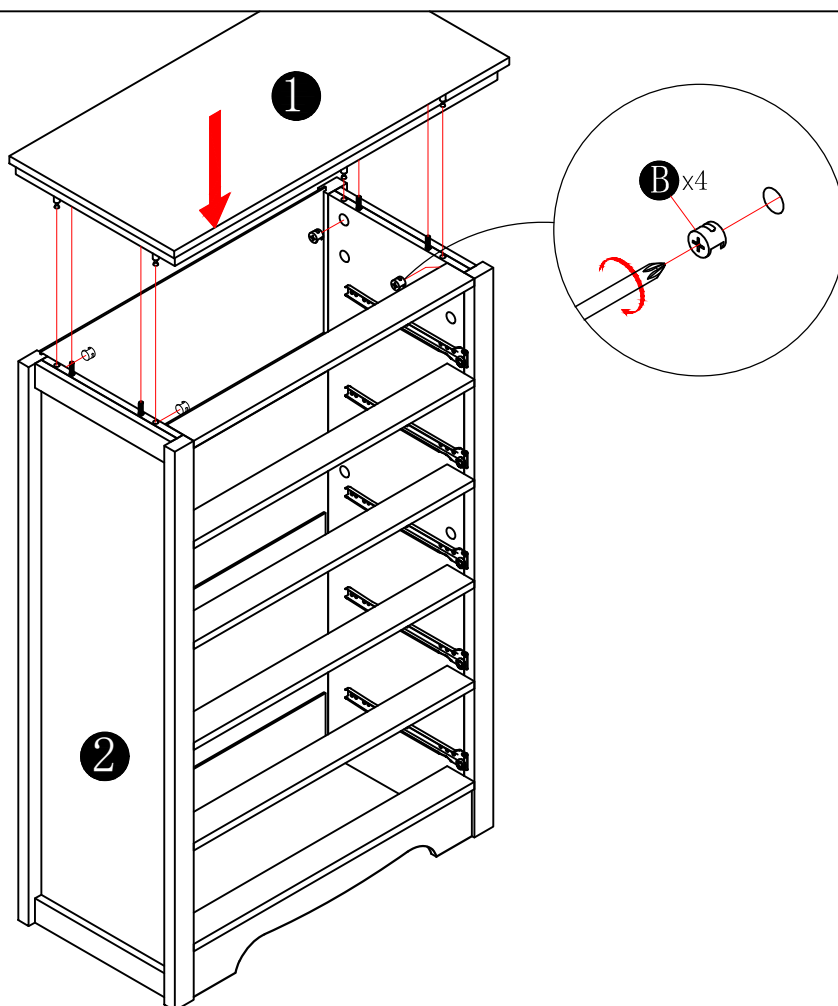


Steps

19  A x 5PCS

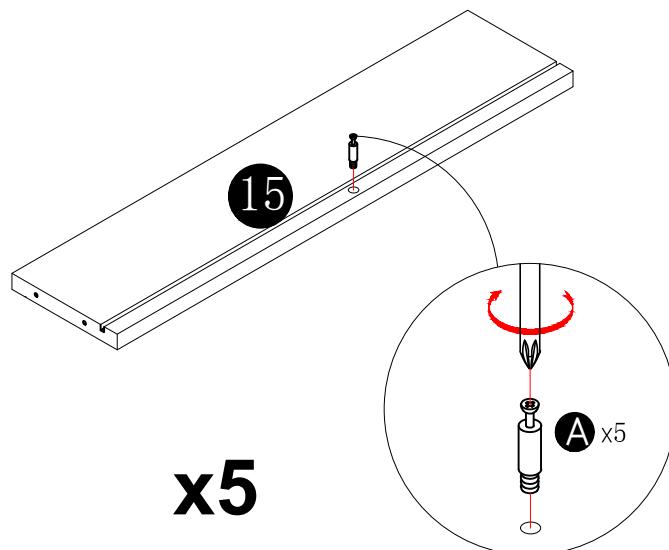

Screw (a) member into hole as shown


20  E x20PCS

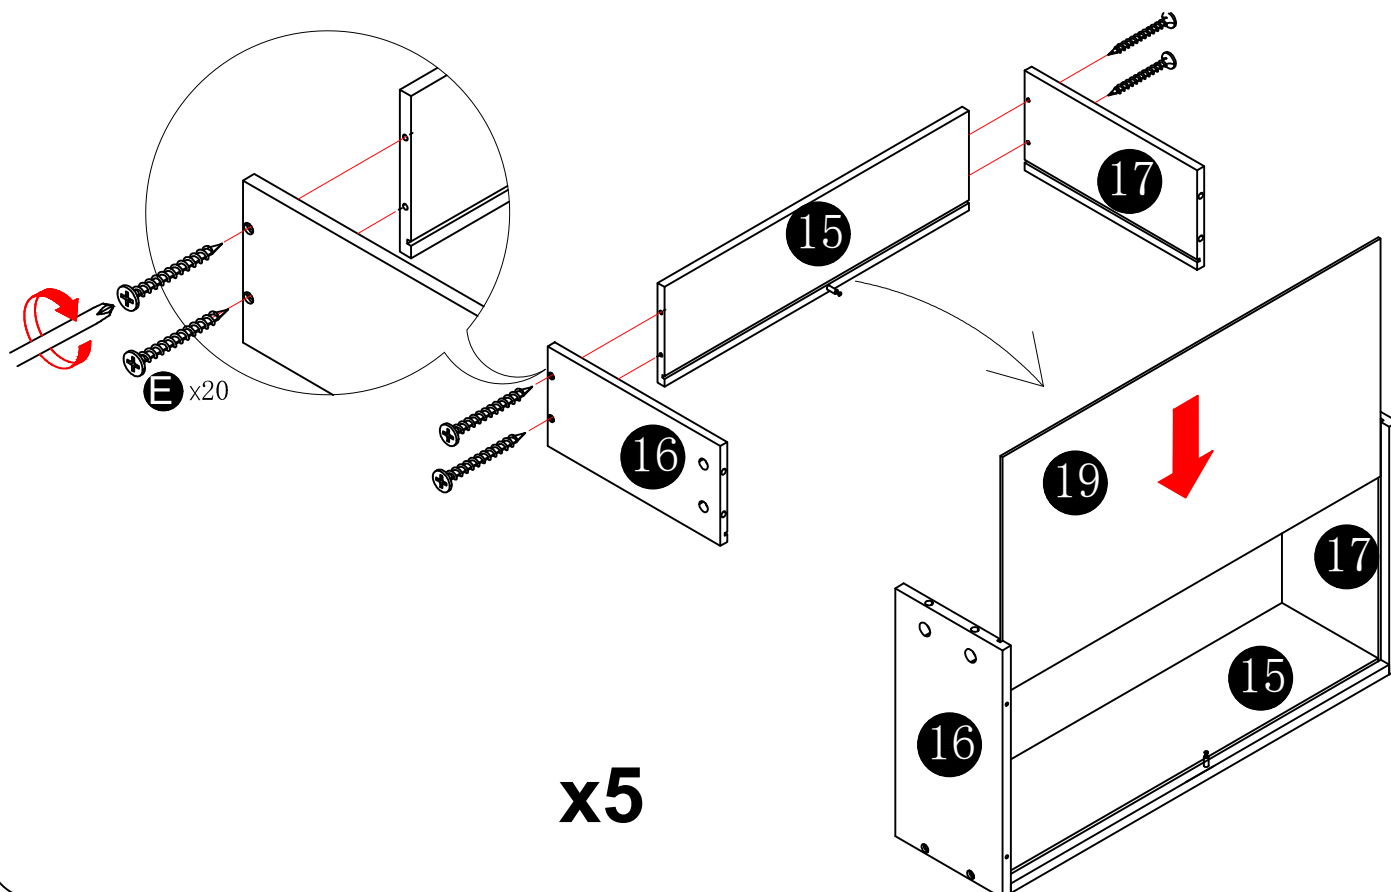

Steps


21

 B x 5PCS

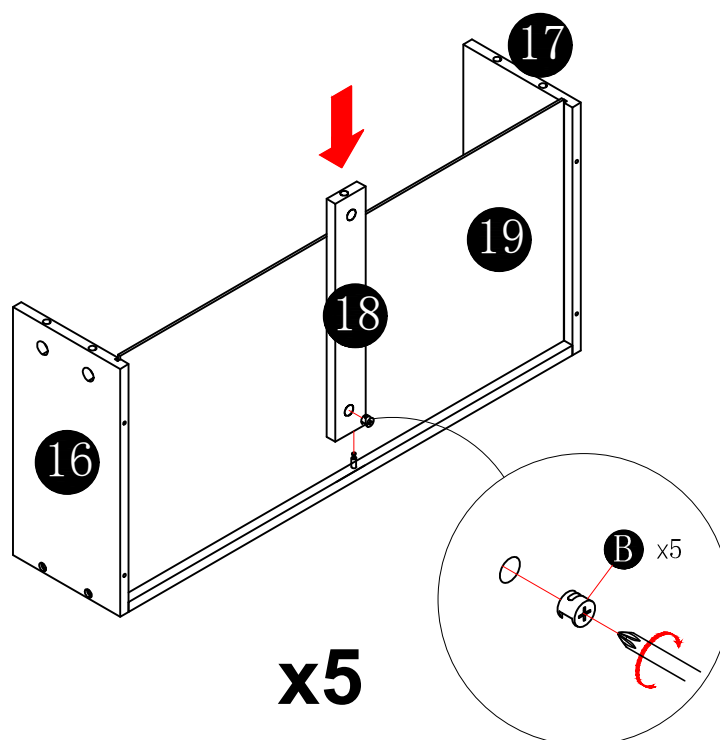

22


	A x25PCS
	F x 5PCS
	G x10PCS

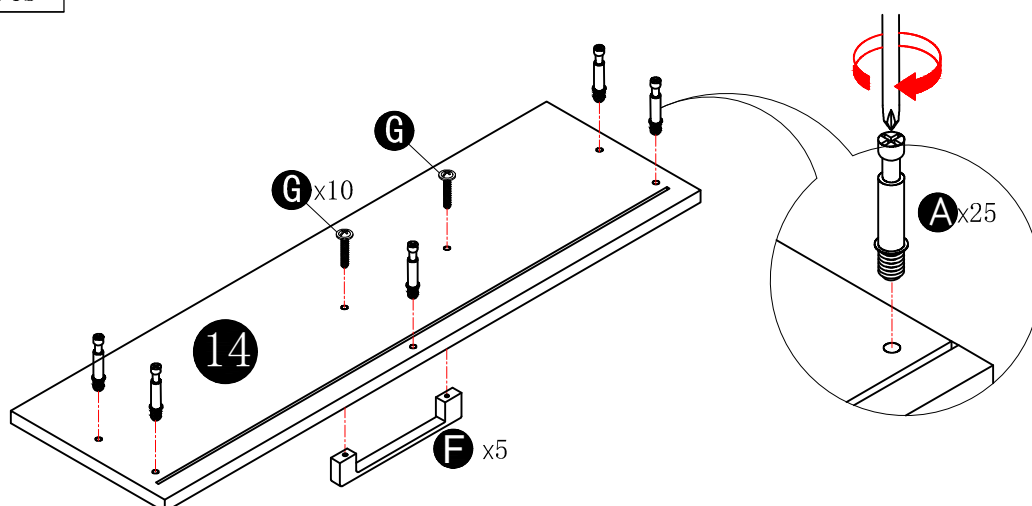

Screw (a) member into hole as shown


23

 B x25PCS

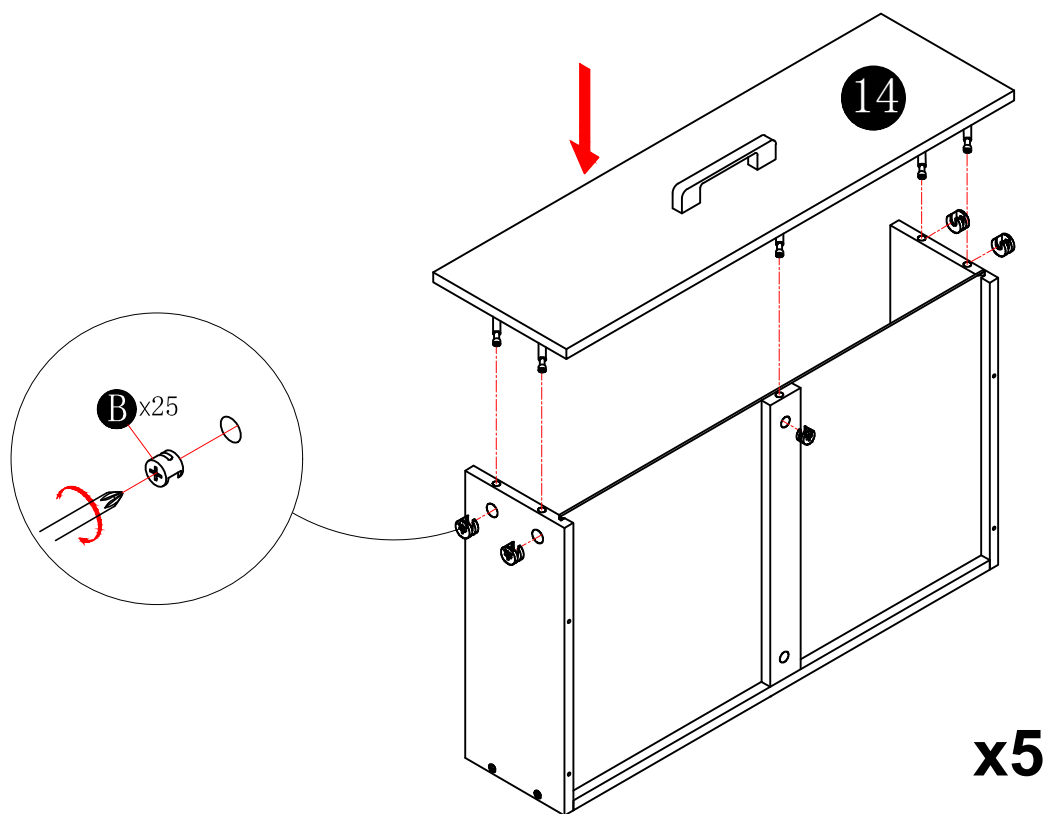



24

 D x20PCS

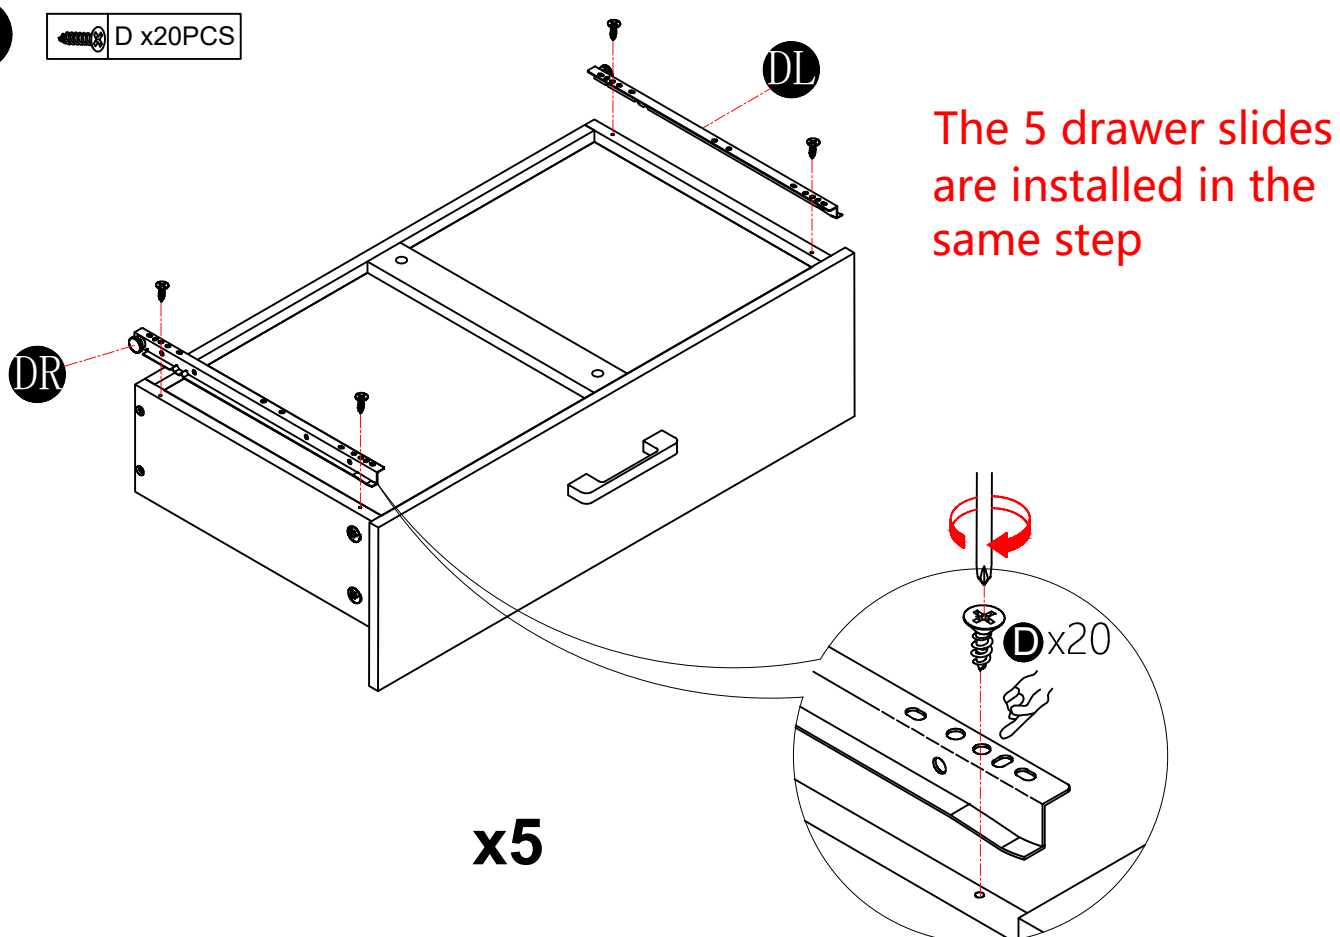


25


(1)

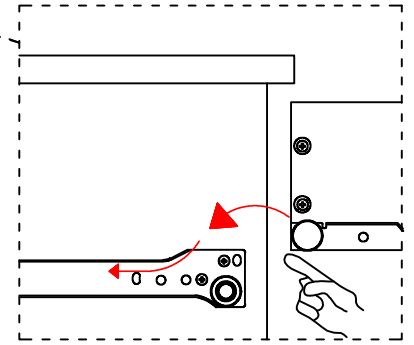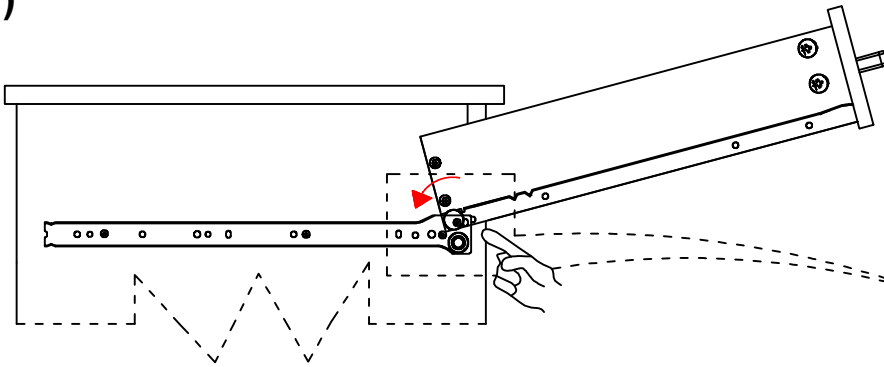

(2)

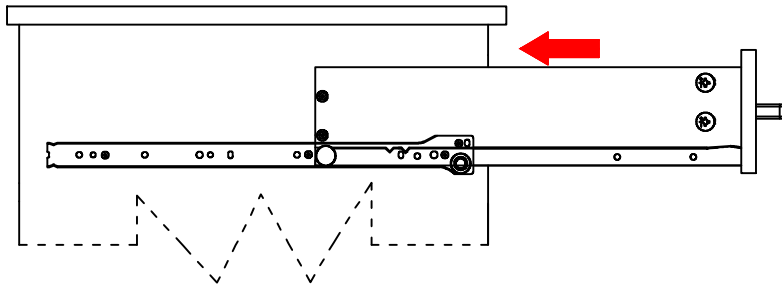


x5

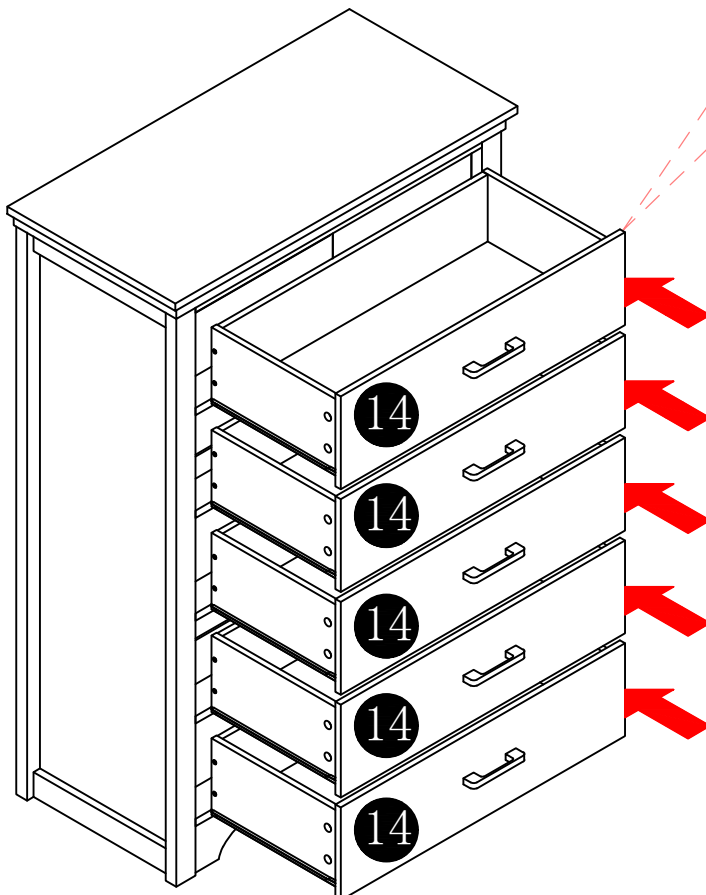

Steps

26

	K x 2PCS
	L x 2PCS
	I x 14PCS
	H x 14PCS

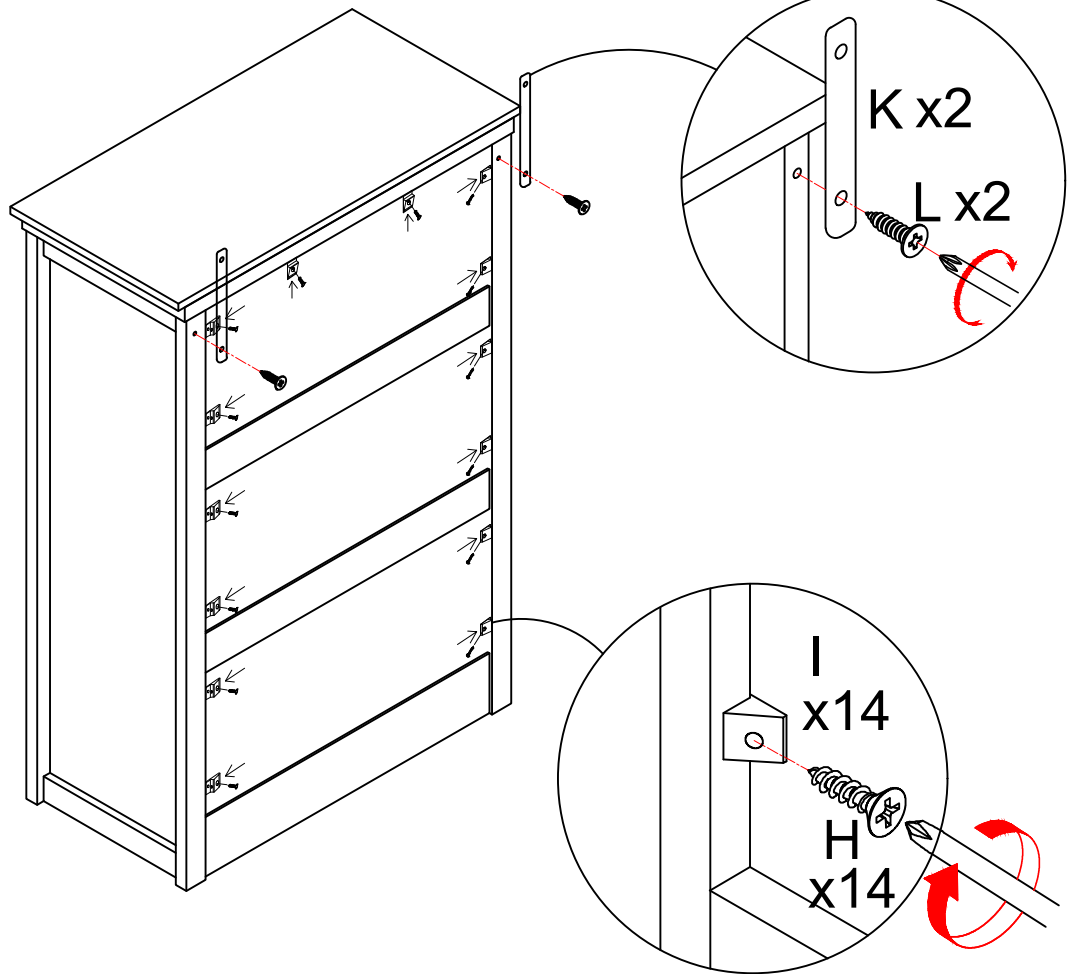

27

	M x 2PCS
	E x 2PCS

