





ASSEMBLY INSTRUCTION

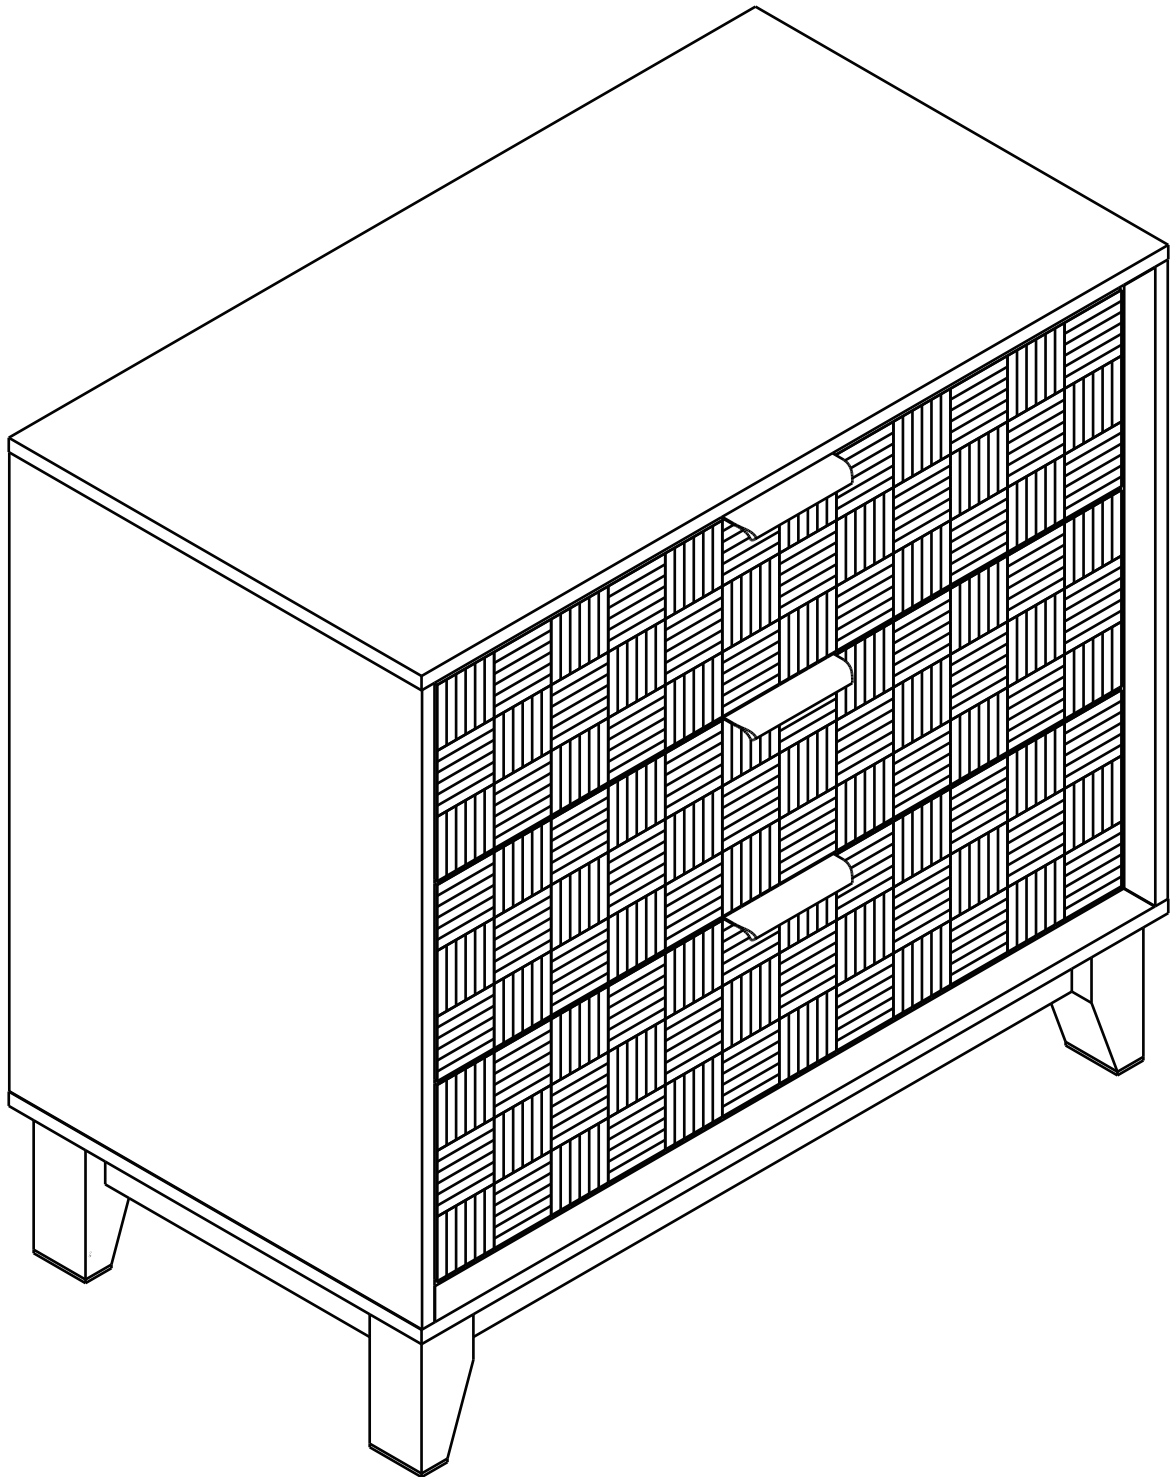

If you need any help during assembly, please contact us at **cs@wellzone.life**.
Sharing a video and a brief description of where you're stuck will help us assist you better.

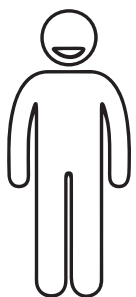

× 2

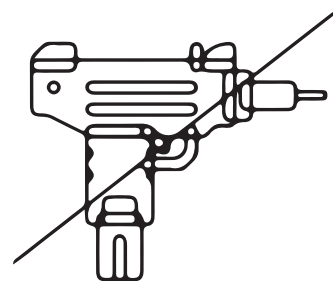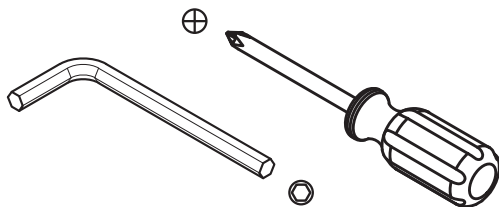


Before You Begin

Two people are recommended for the assembly.

Use the included tools.

If using a power tool, use low power and torque.



Installation of Eccentric Unit

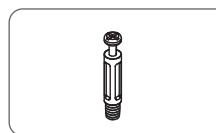


Bolt




Connecting piece

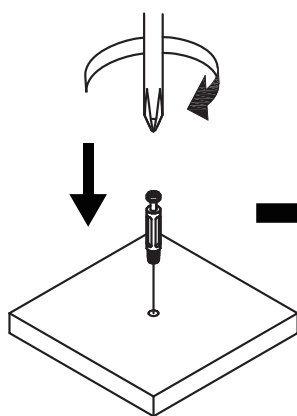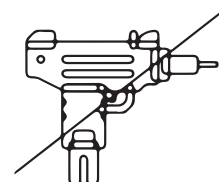


1

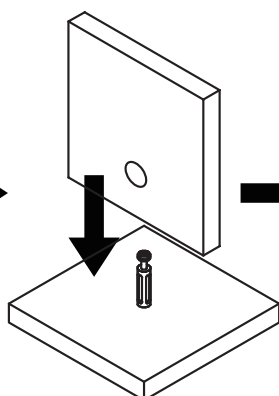




2

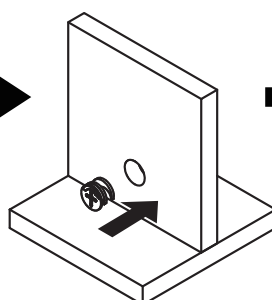




3

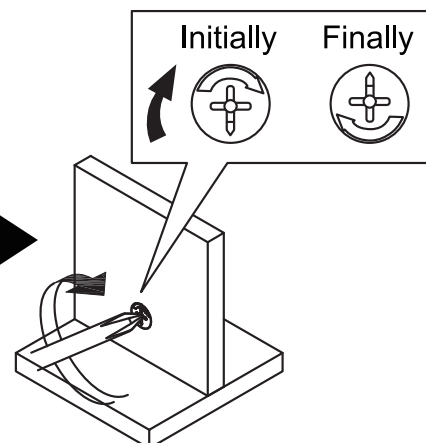

4

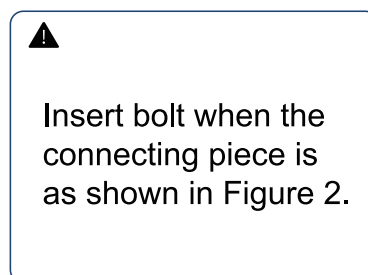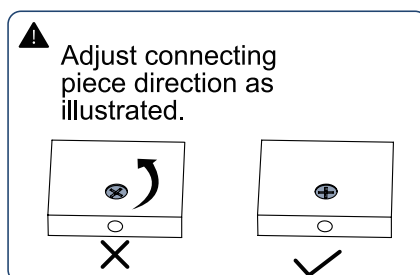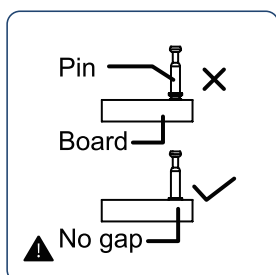

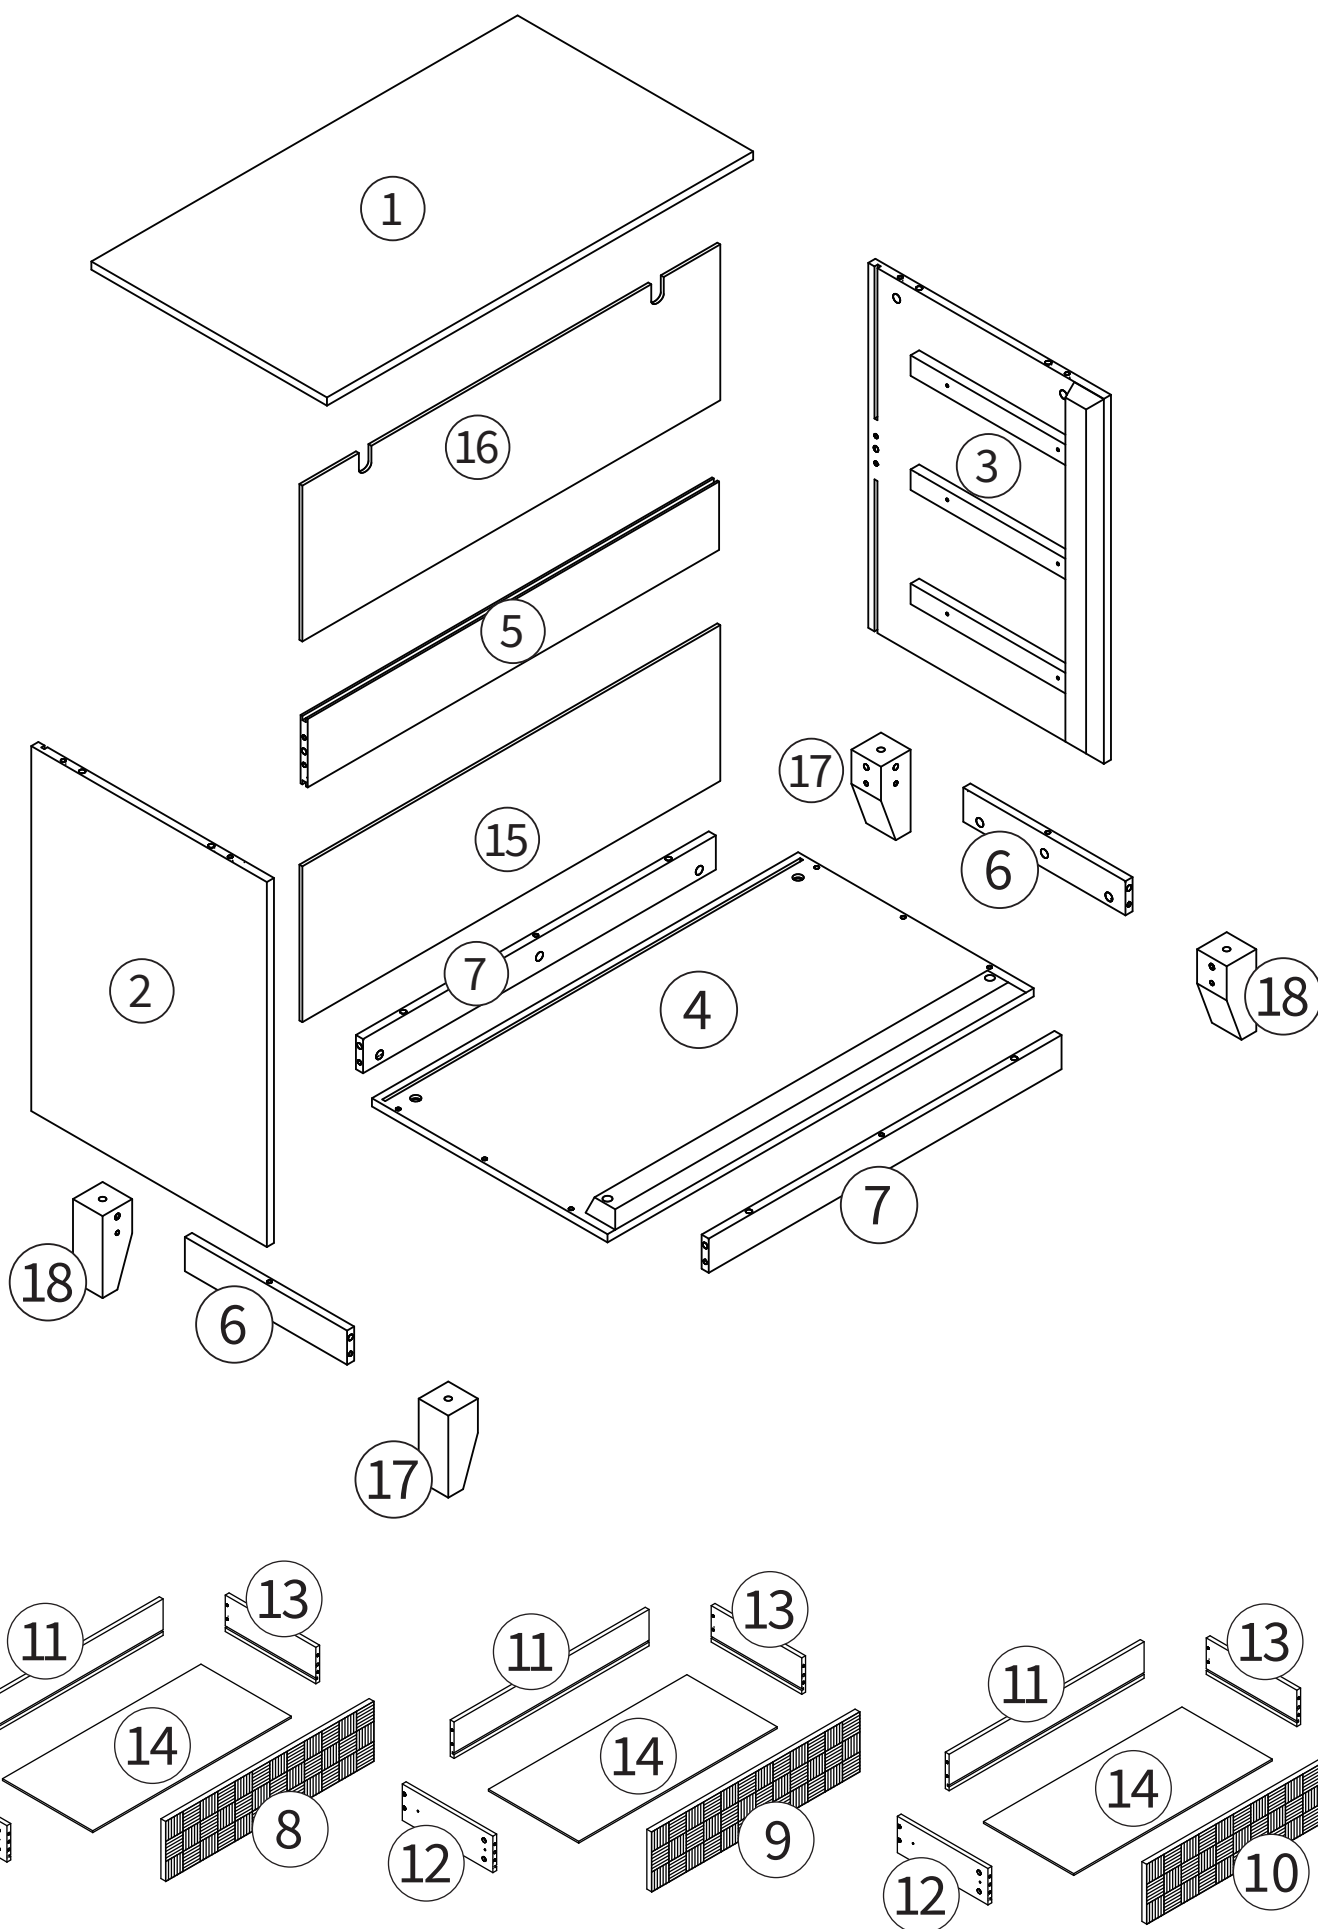

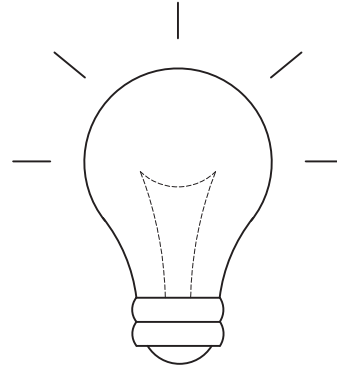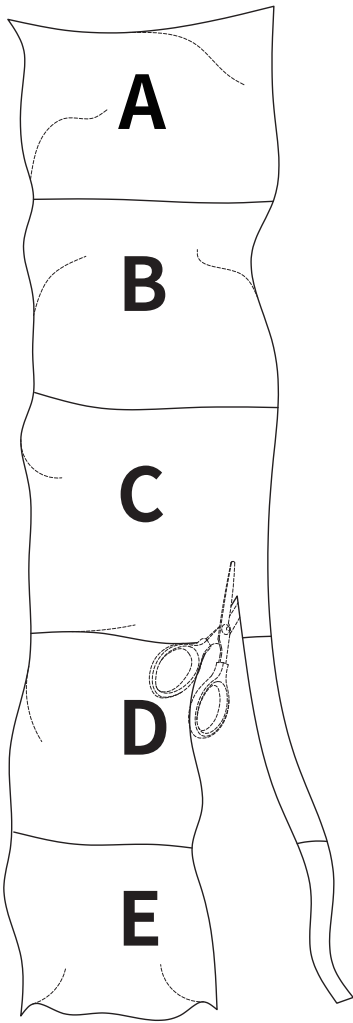





friendly reminder

To prevent confusion during installation, please do not cut open all hardware bags at once.
Some screws may look similar, so before starting assembly:


- Check each hardware bag and confirm that the type and quantity match the parts list in the manual.
- Only open each bag when it is needed for that specific installation step.

This will help keep the hardware organized and ensure a smoother installation process.

Package Contents: Hardware *Please count and verify all parts before assembly.*

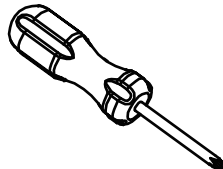
AX32+2	BX32+2	CX24+2	DX4+2	EX38+2	FX3	GX6
 M5x40mm	 Ø12	 M6x30mm	 M6x20mm	 M3.5x14mm		 285mm
HX2	IX2	JX2	KX2+2	LX8+2	MX4+1	NX18+2
		 M4x40mm	 M3.5x12mm			 M5x40mm
OX2+2	PX20+2	  M5  M6				
 M6x30mm	 Φ20					

1

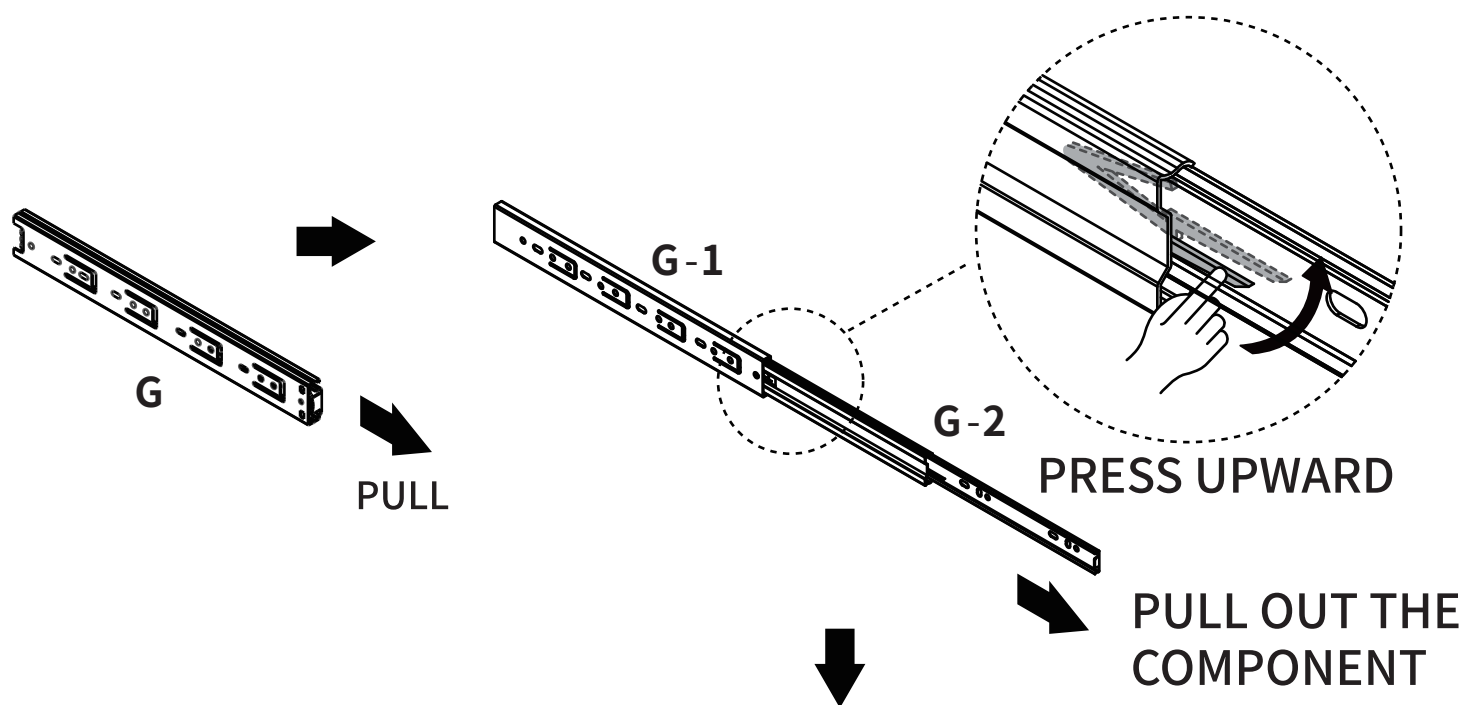


G-1 X6	
G-2 X6	

G x 6




Separate (G) into (G-1) and (G-2).


2

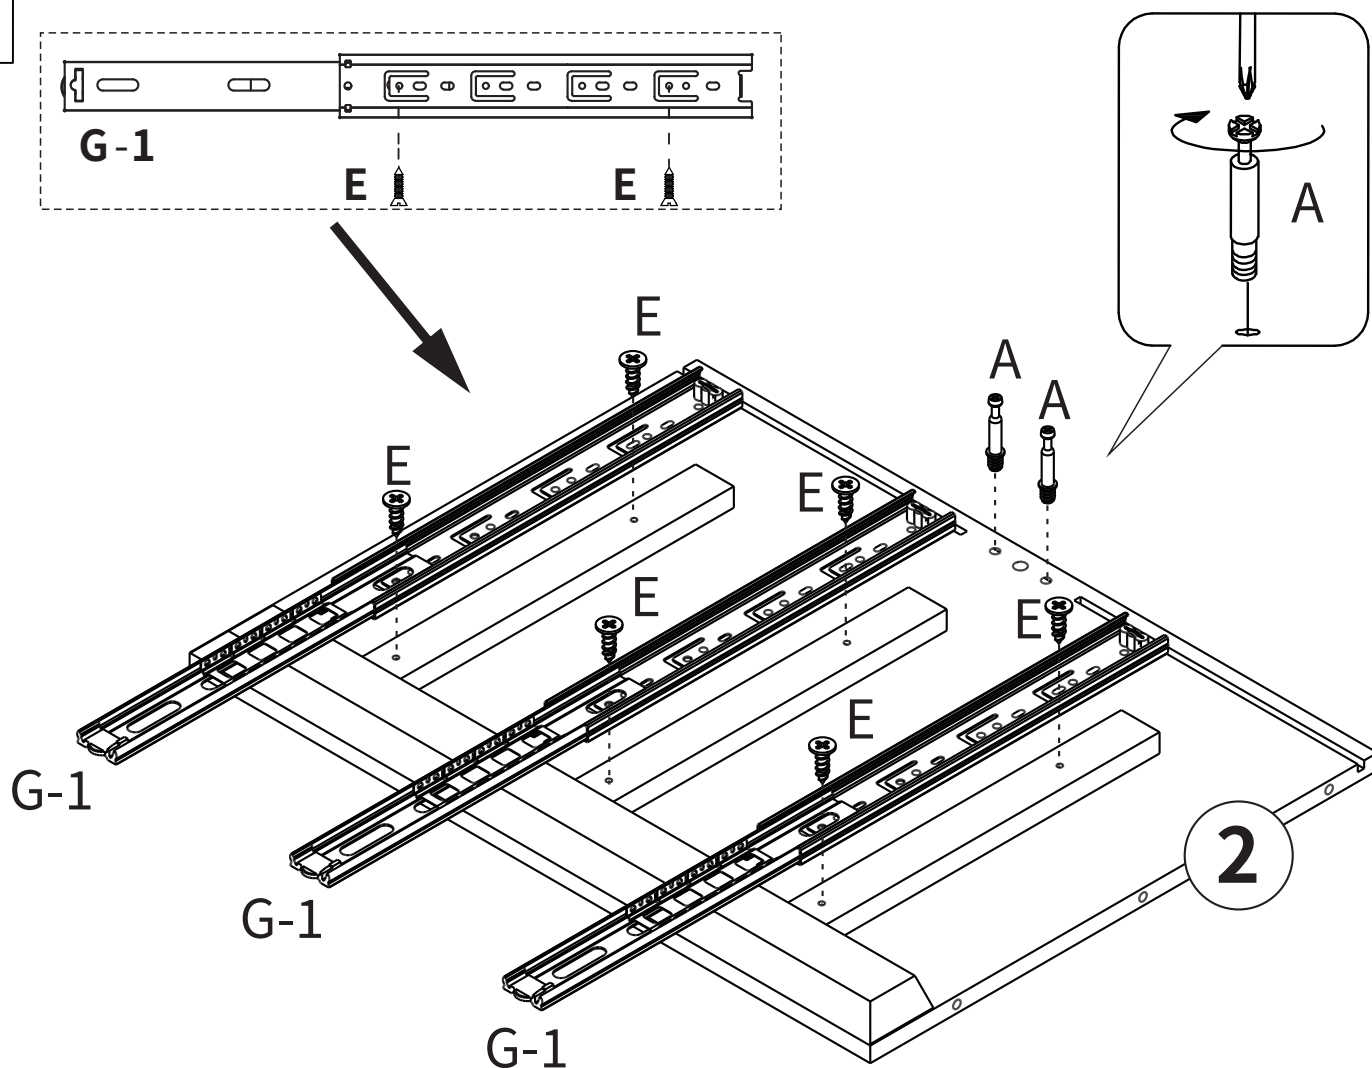

FLAT - VIEW DRAWING

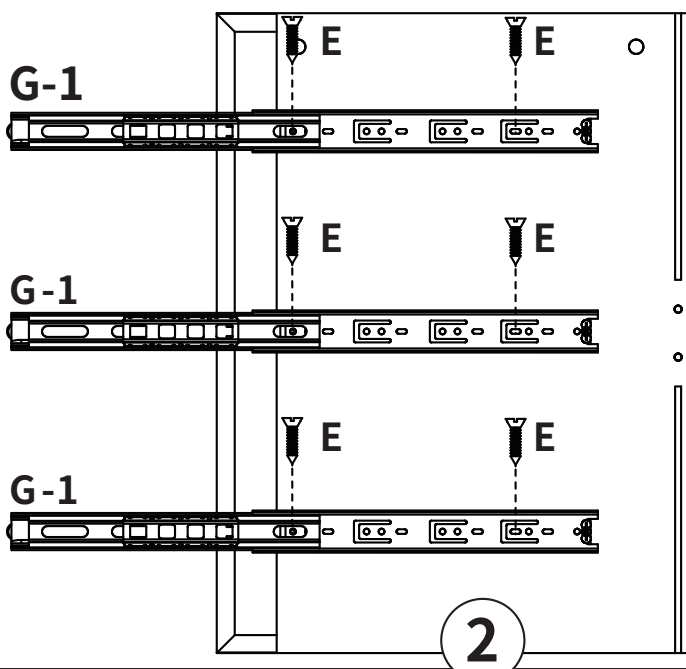

G-1 x 3

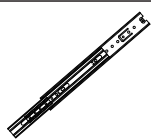

A x 2






E x 6




Twist (E) through (G-1) into (2).
Twist (A) into the holes on (2).


3

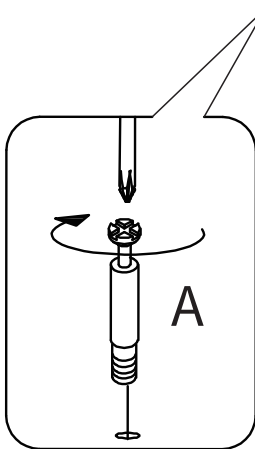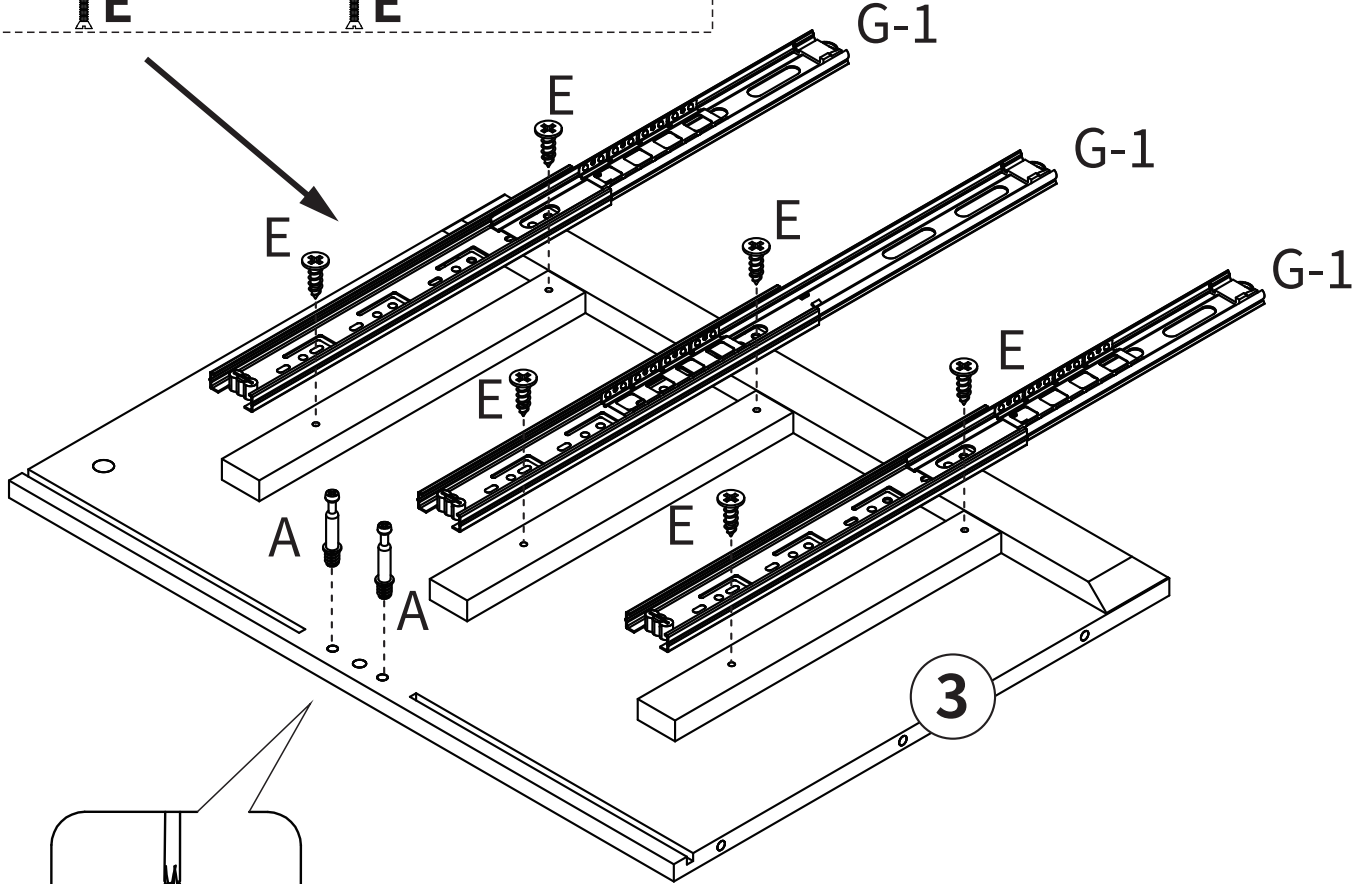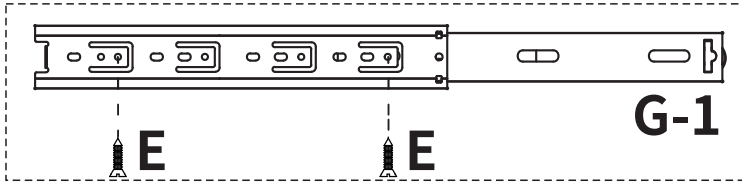

FLAT - VIEW DRAWING

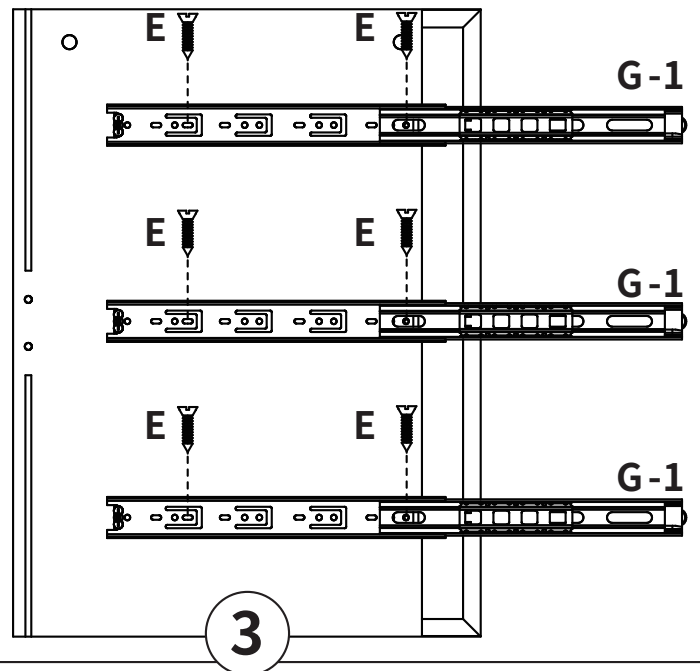

G-1 x 3

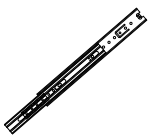

A x 2




E x 6



Twist (E) through (G-1) into (3).
Twist (A) into the holes on (3).

4

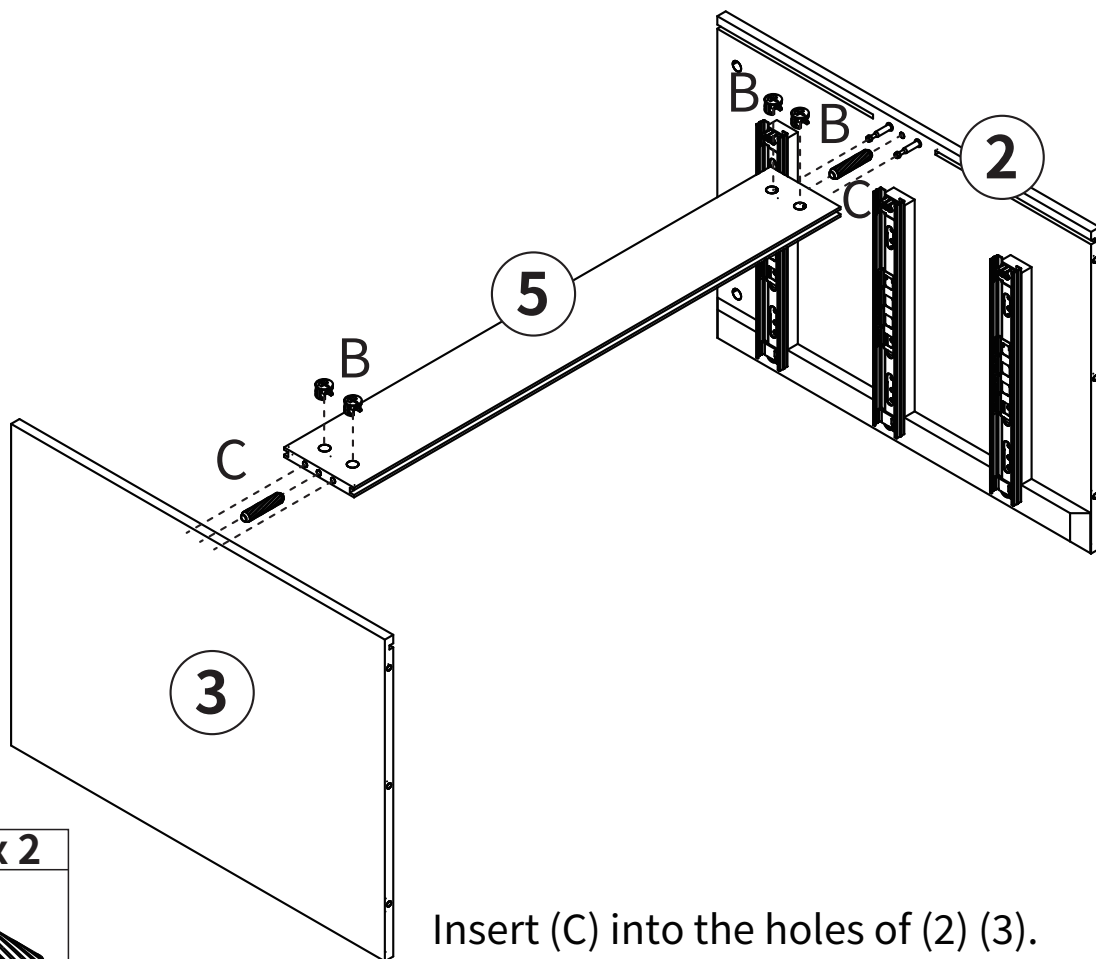

B x 4


C x 2



Insert (C) into the holes of (2) (3).
Connect (5) with (2) (3), then secure with (B).


5

Please ensure the insert board is fully fitted into the grooves.
If insertion is not smooth, gently adjust by pushing from the front or back until the board is fully seated.

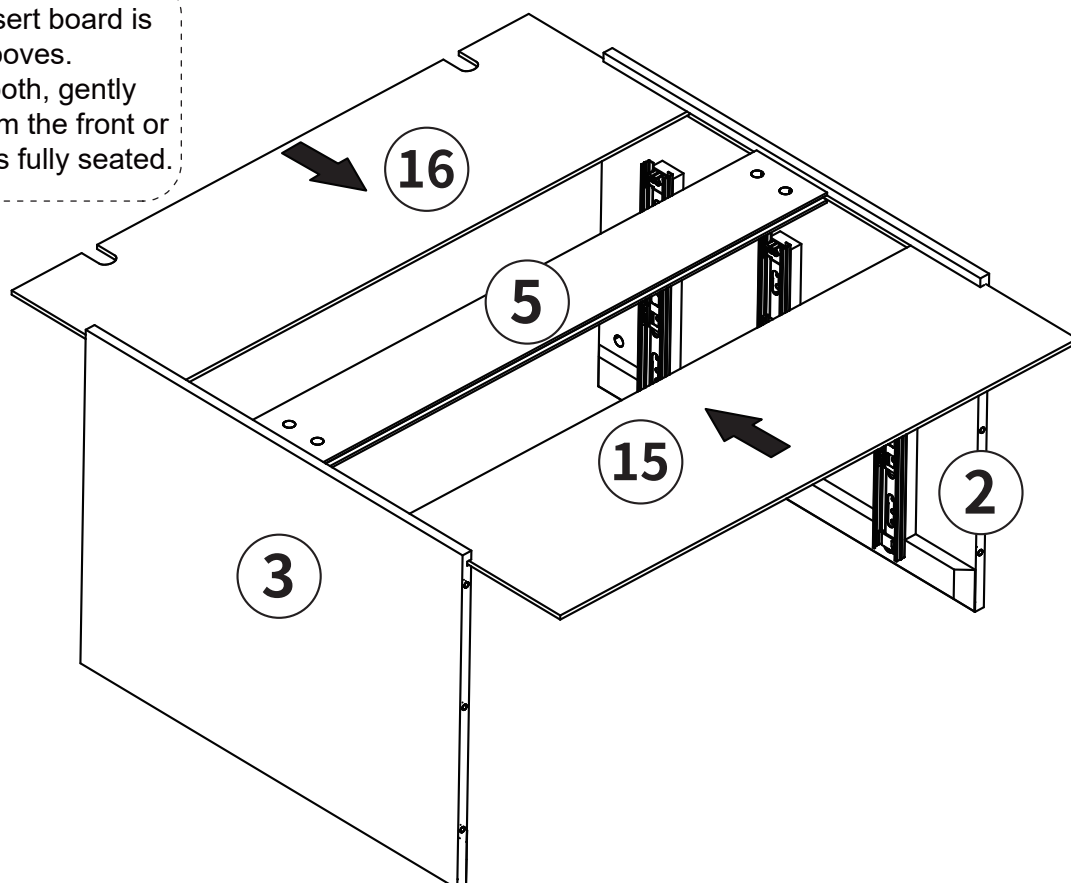

Insert (15) (16) into the grooves of (2) (3) (5).

6

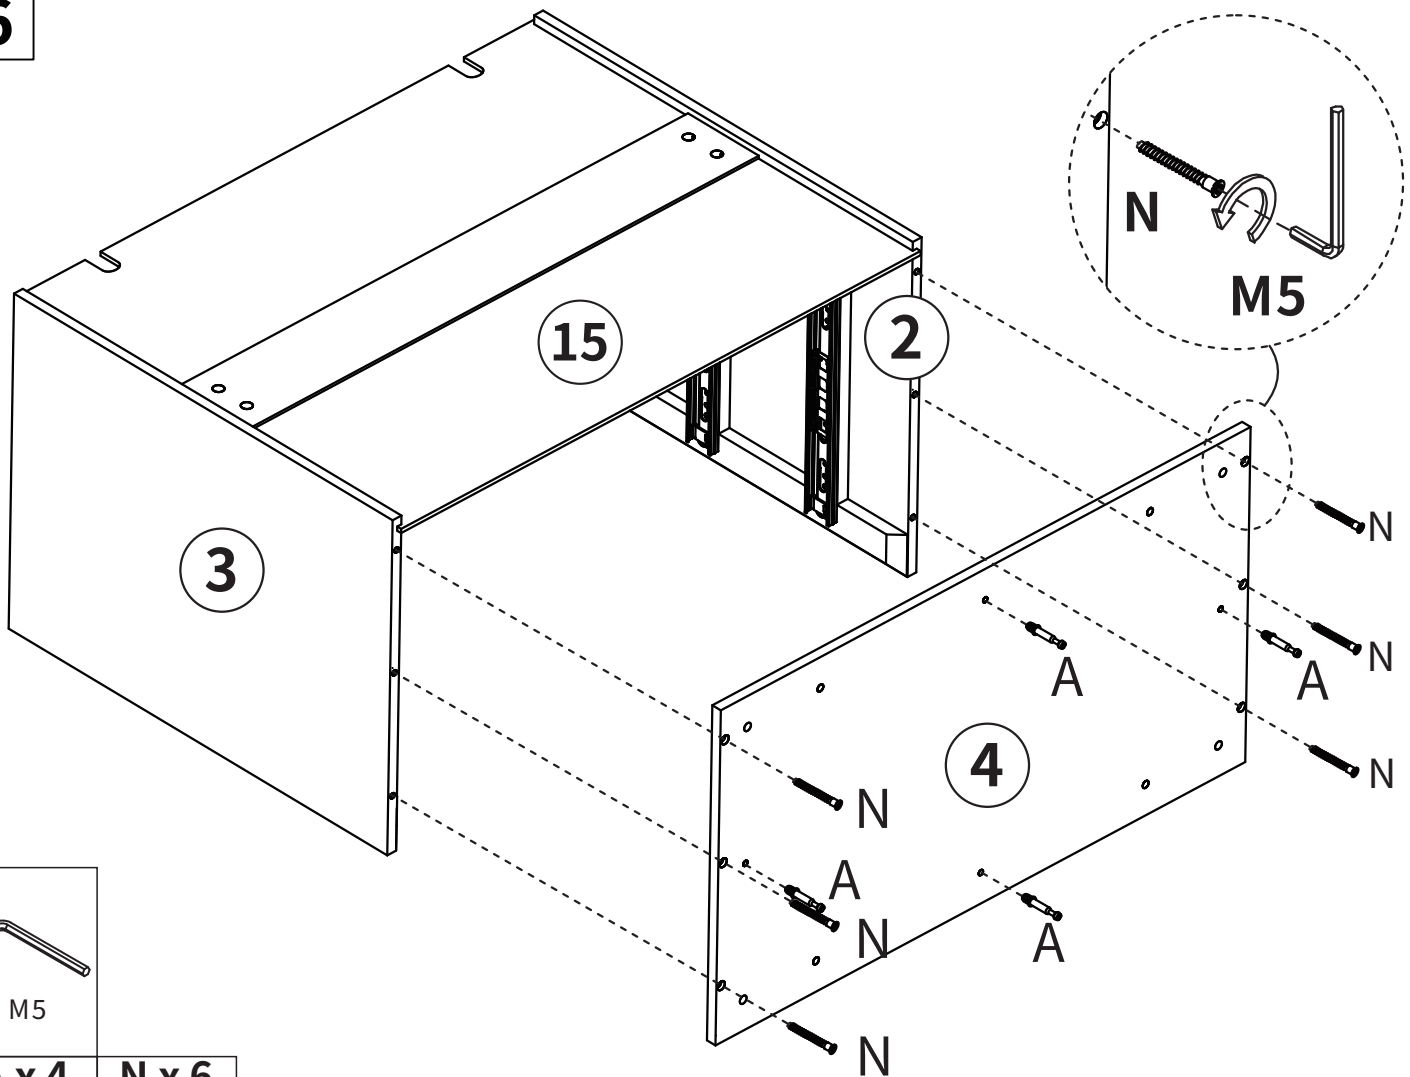

M5



A x 4

N x 6



Twist (N) through (4) into (2) (3).
Ensure (15) is securely seated in the groove of (4).
Twist (A) into the holes of (4).

7

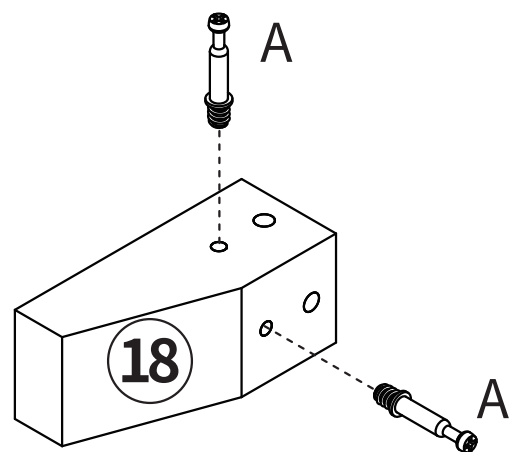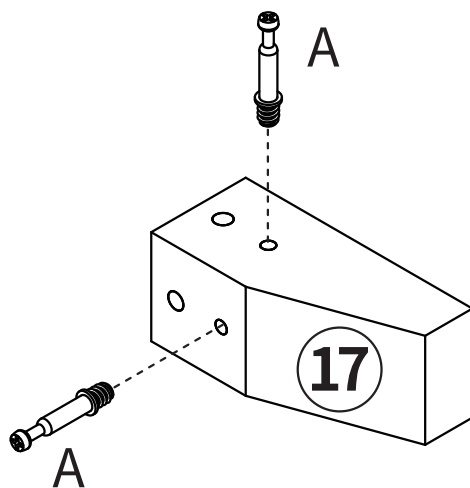


A x 8



Twist (A) into the holes of (17) (18).

X2

8

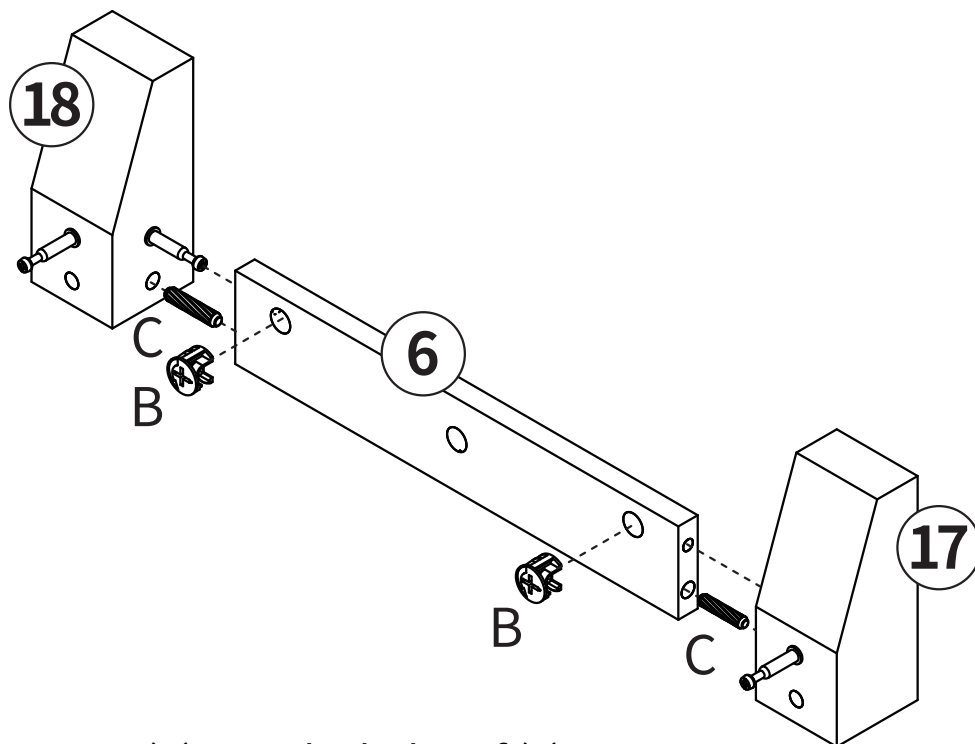

X2


B x 4

C x 4



Insert (C) into the holes of (6).
Connect (6) with (17) (18), then secure with (B).

9

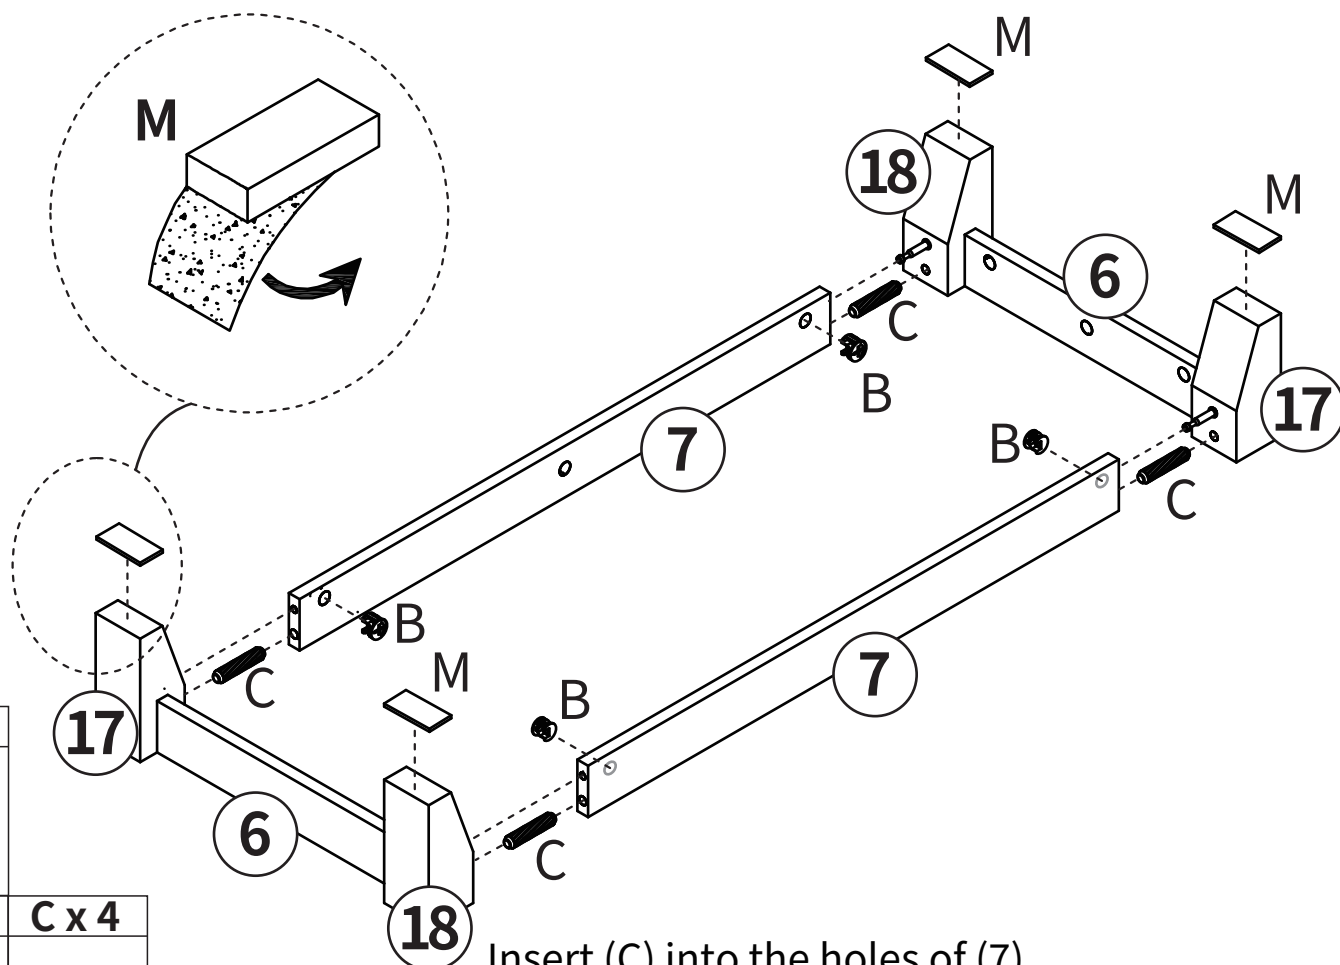

M x 4




B x 4

C x 4



Insert (C) into the holes of (7).
Connect (7) with (17) (18), then secure with (B).
Attach (M) to (17) (18) as shown.

10

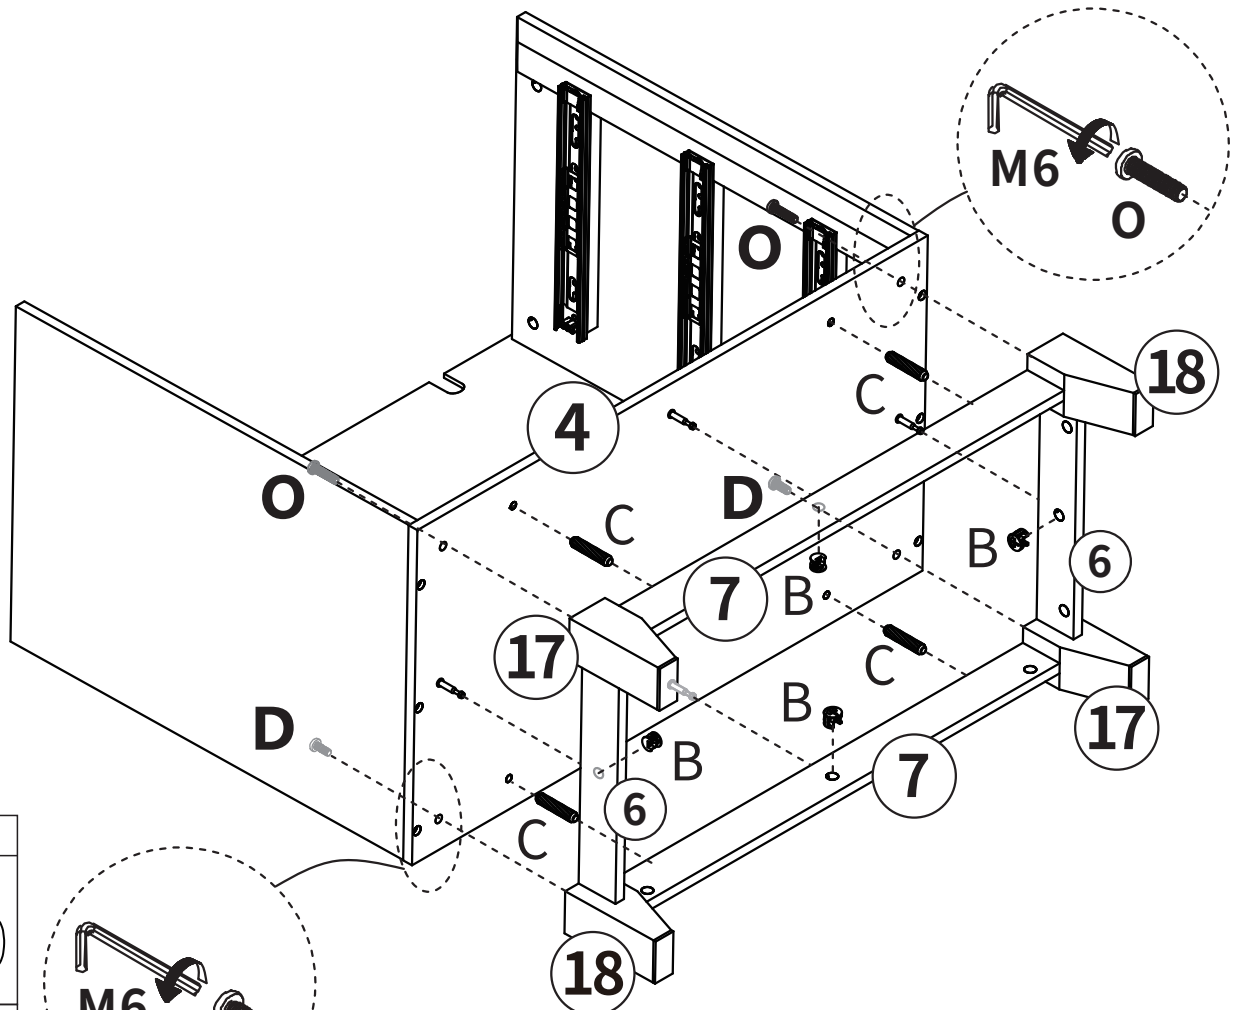

M6

D x 2

O x 2




B x 4

C x 4



Insert (C) into the holes of (4).
Connect (6) (7) to (4), then secure with (B).
Twist (O) (D) from the opposite side through (4) into (17) (18) to secure them.

11

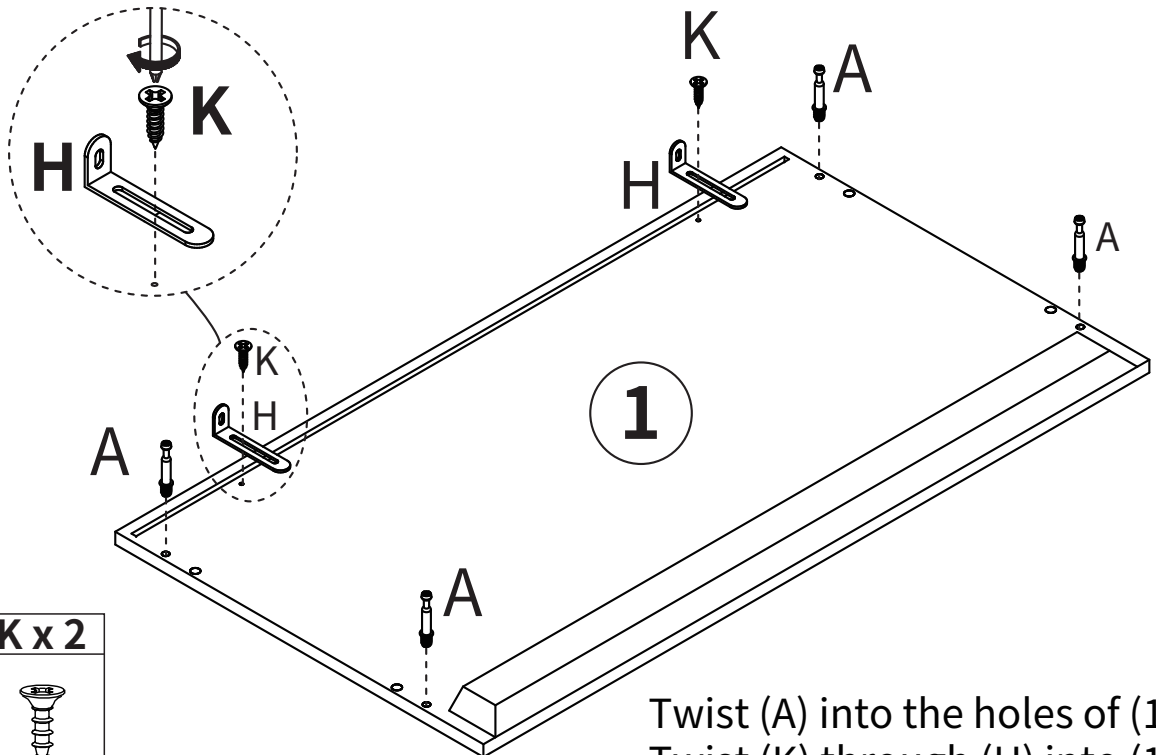

A x 4


H x 2

K x 2



Twist (A) into the holes of (1).
Twist (K) through (H) into (1).

12

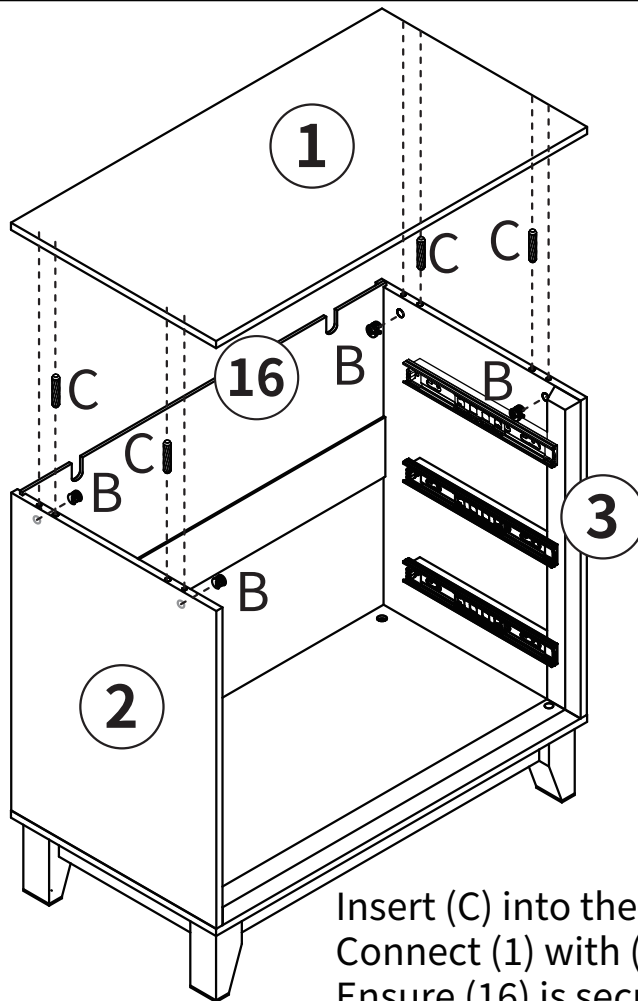

B x 4




C x 4



Insert (C) into the holes of (2) (3).
Connect (1) with (2) (3), then secure with (B).
Ensure (16) is securely seated in the groove of (1).


13

180°

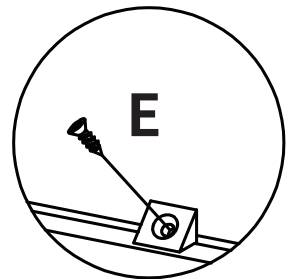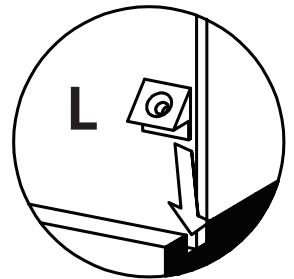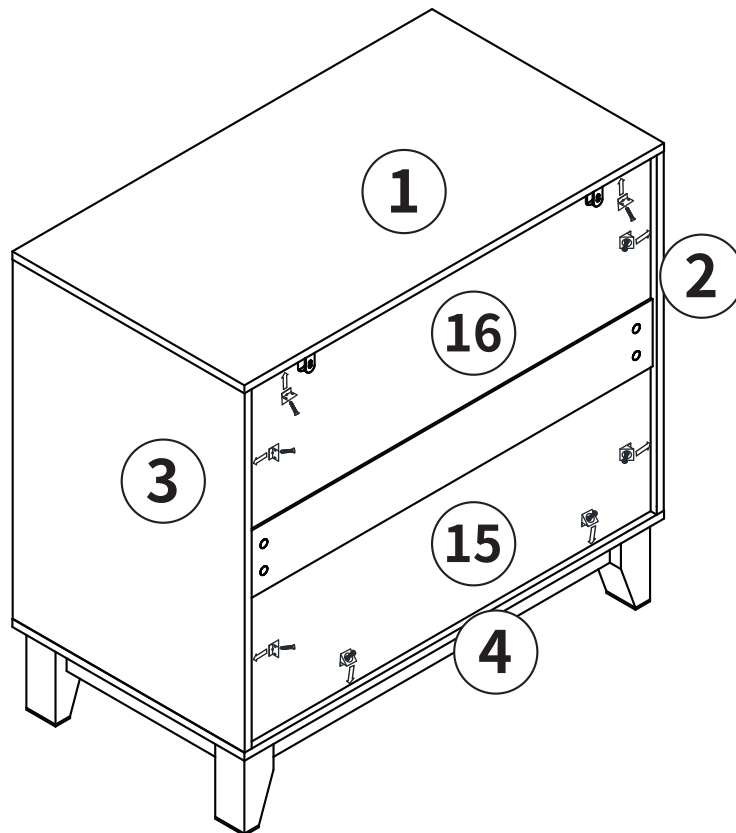


E X 8

L X 8



Insert (L) into the gaps between the boards as shown.
Twist (E) to secure (L).

14

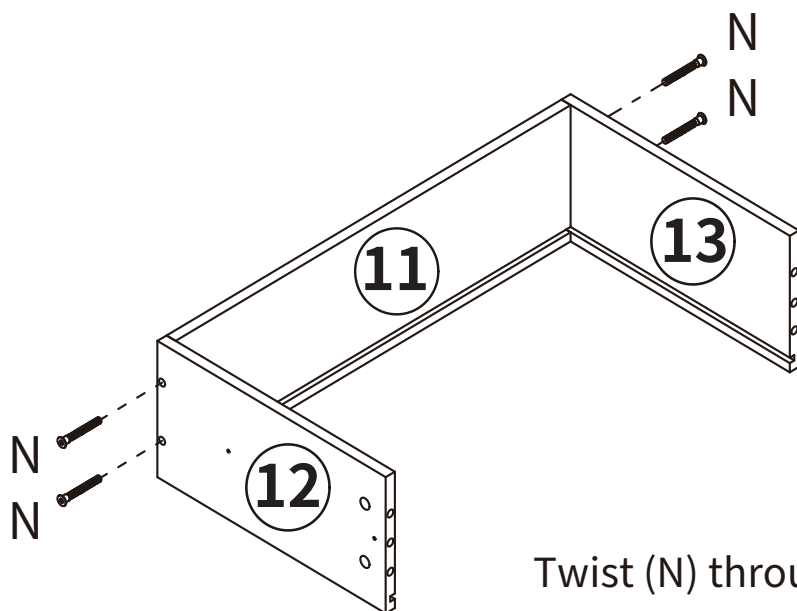


x3

N X12

N
N

Twist (N) through (12) (13) into (11).


15

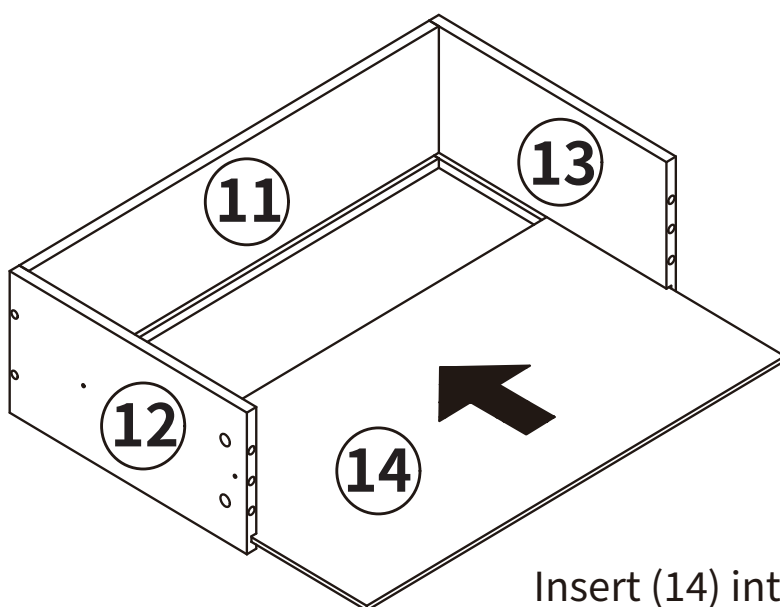

x3

Insert (14) into the grooves as shown.

16

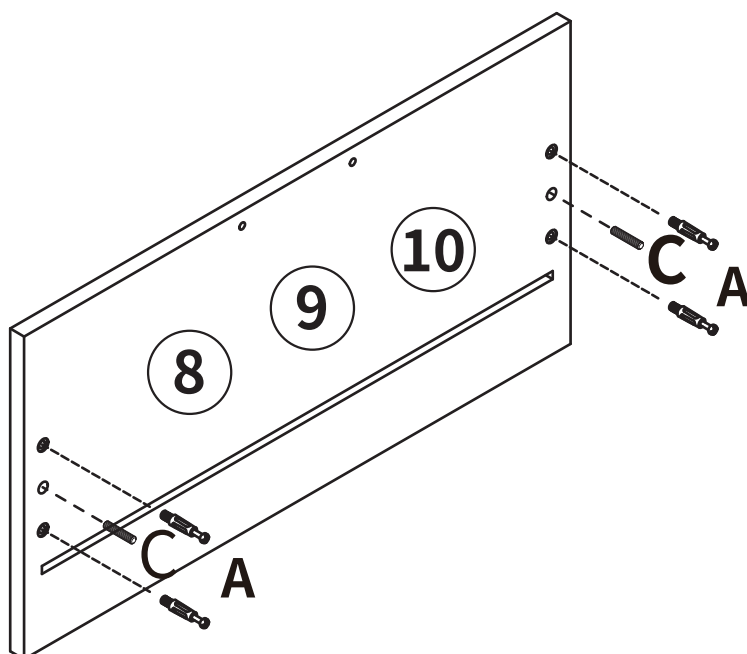


A X12

C X6



Twist (A) and insert (C) into the holes of (8) (9) (10).

17



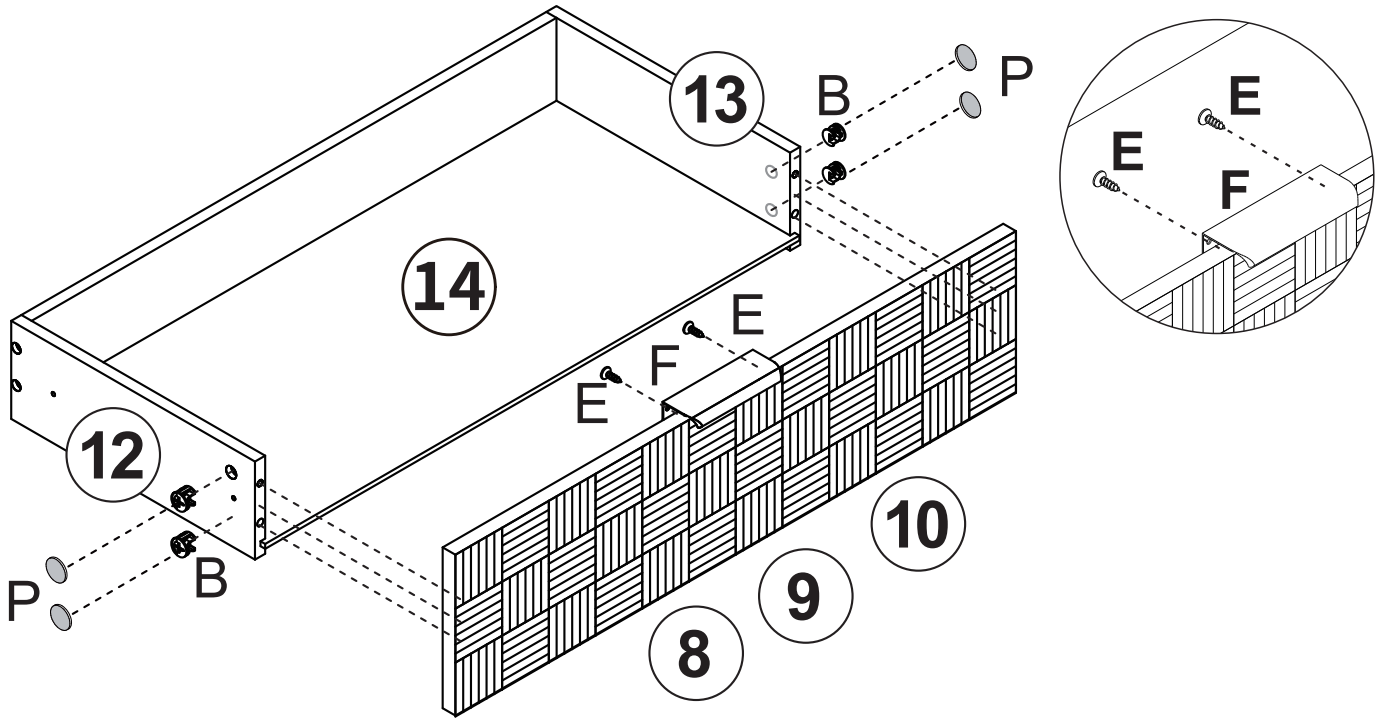


BX12	E X6	F X3	P X12
------	------	------	-------




Connect (8) (9) (10) with (12) (13), then secure with (B).
 Ensure (14) is securely seated into the grooves of (8) (9) (10).
 Twist (E) through (F) into (8) (9) (10).
 Cover all exposed holes with (P).





18

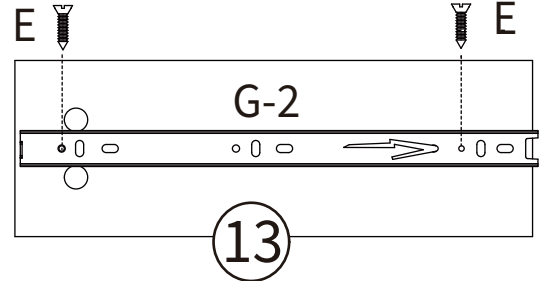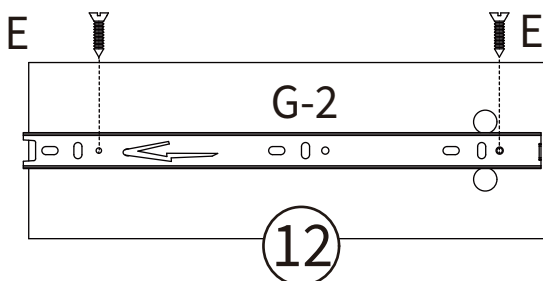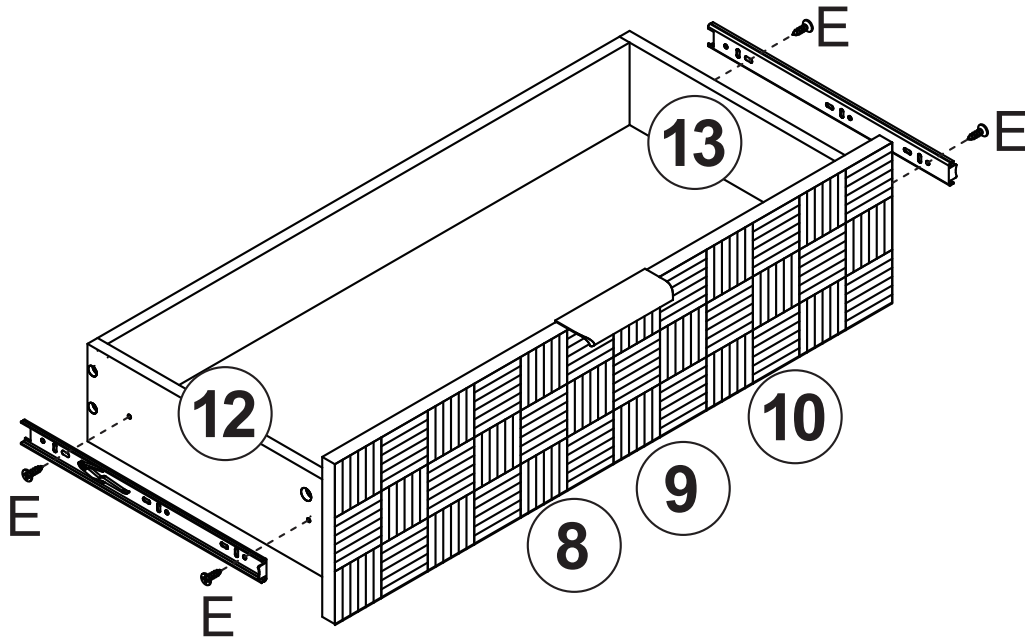

EX12	G-2 X6
------	--------



Twist (E) through (G-2) into (12) (13).

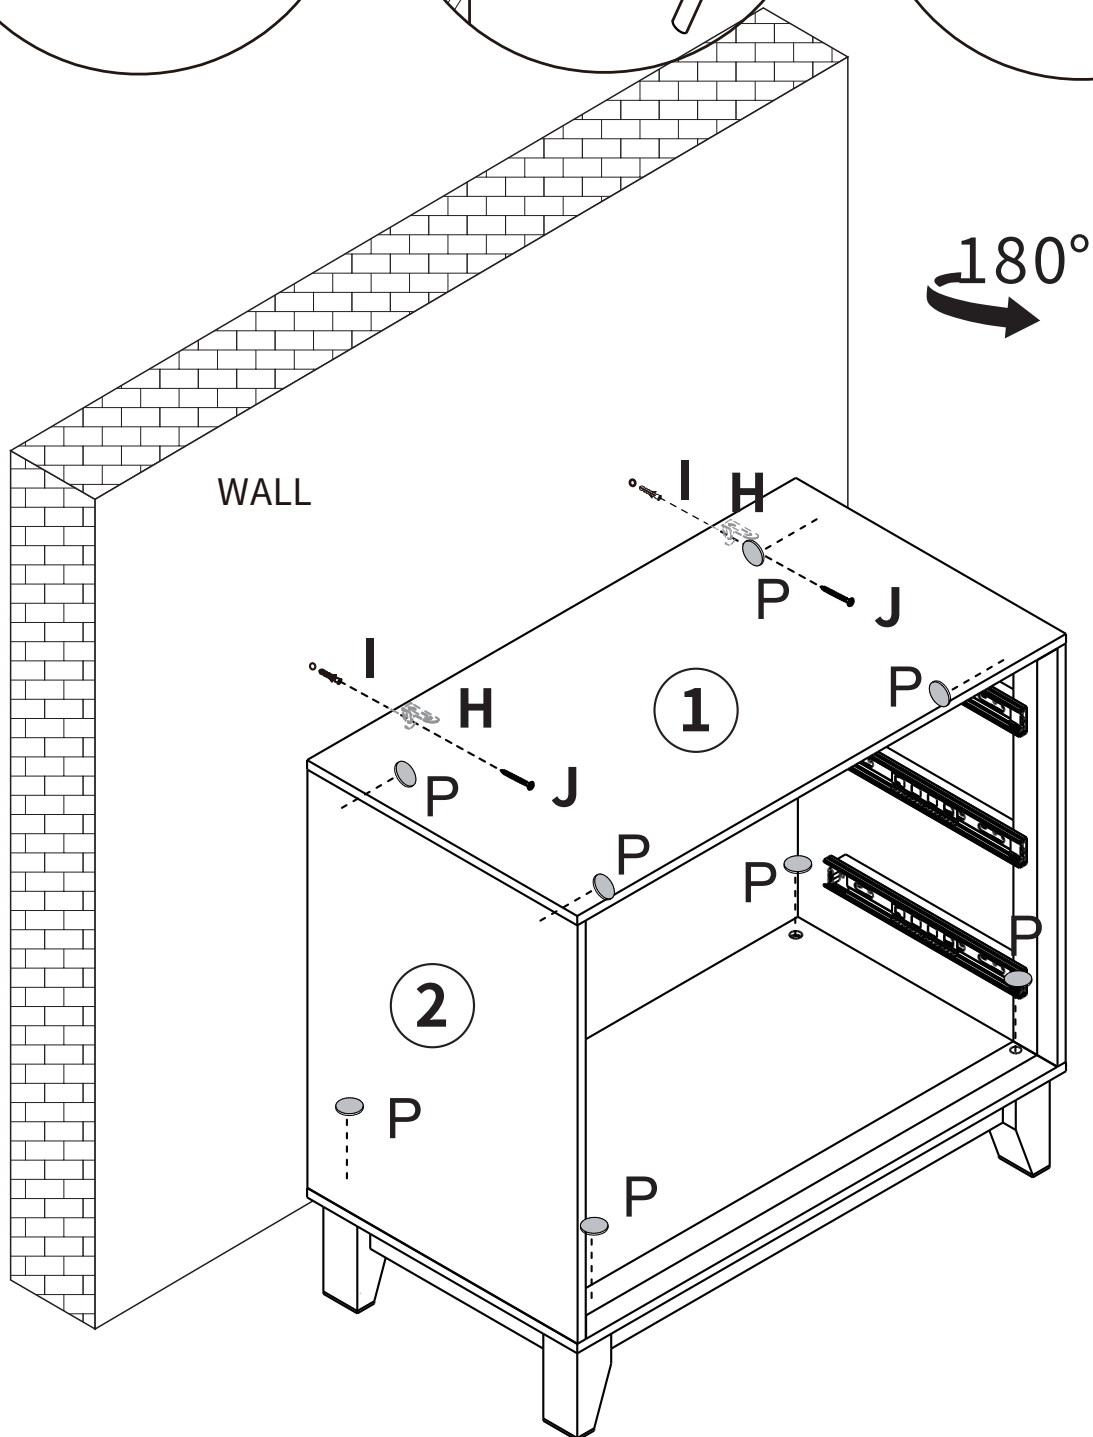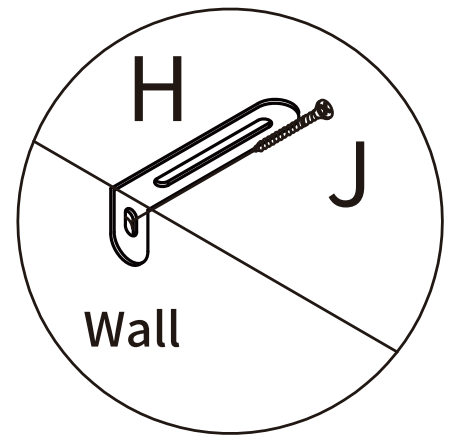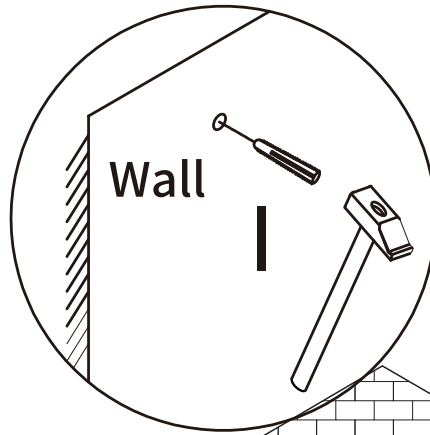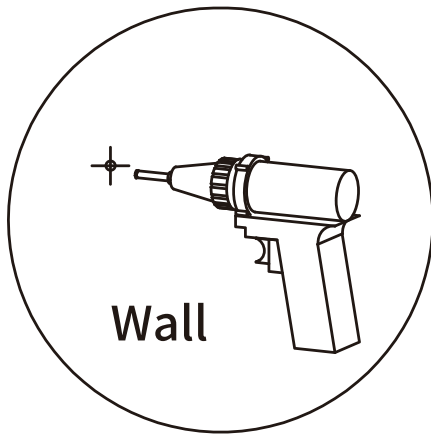





I x 2	J x 2	P x 8

Mark the drill positions on the wall based on the two (H) distances, then drill the holes.

Insert (I) into the drilling holes.

Twist (J) through (H) into (I).

Cover all exposed holes with (P).

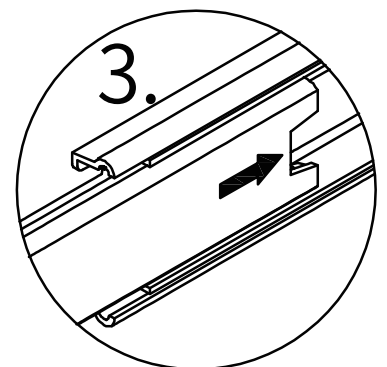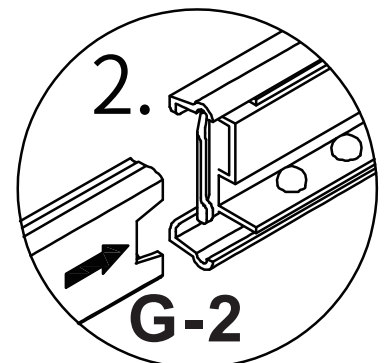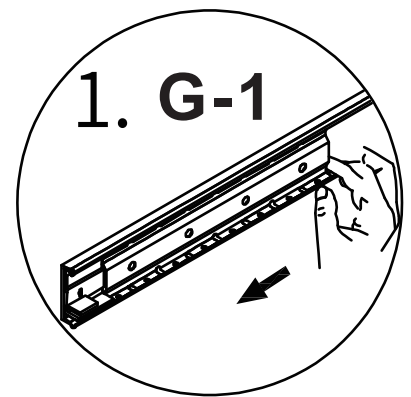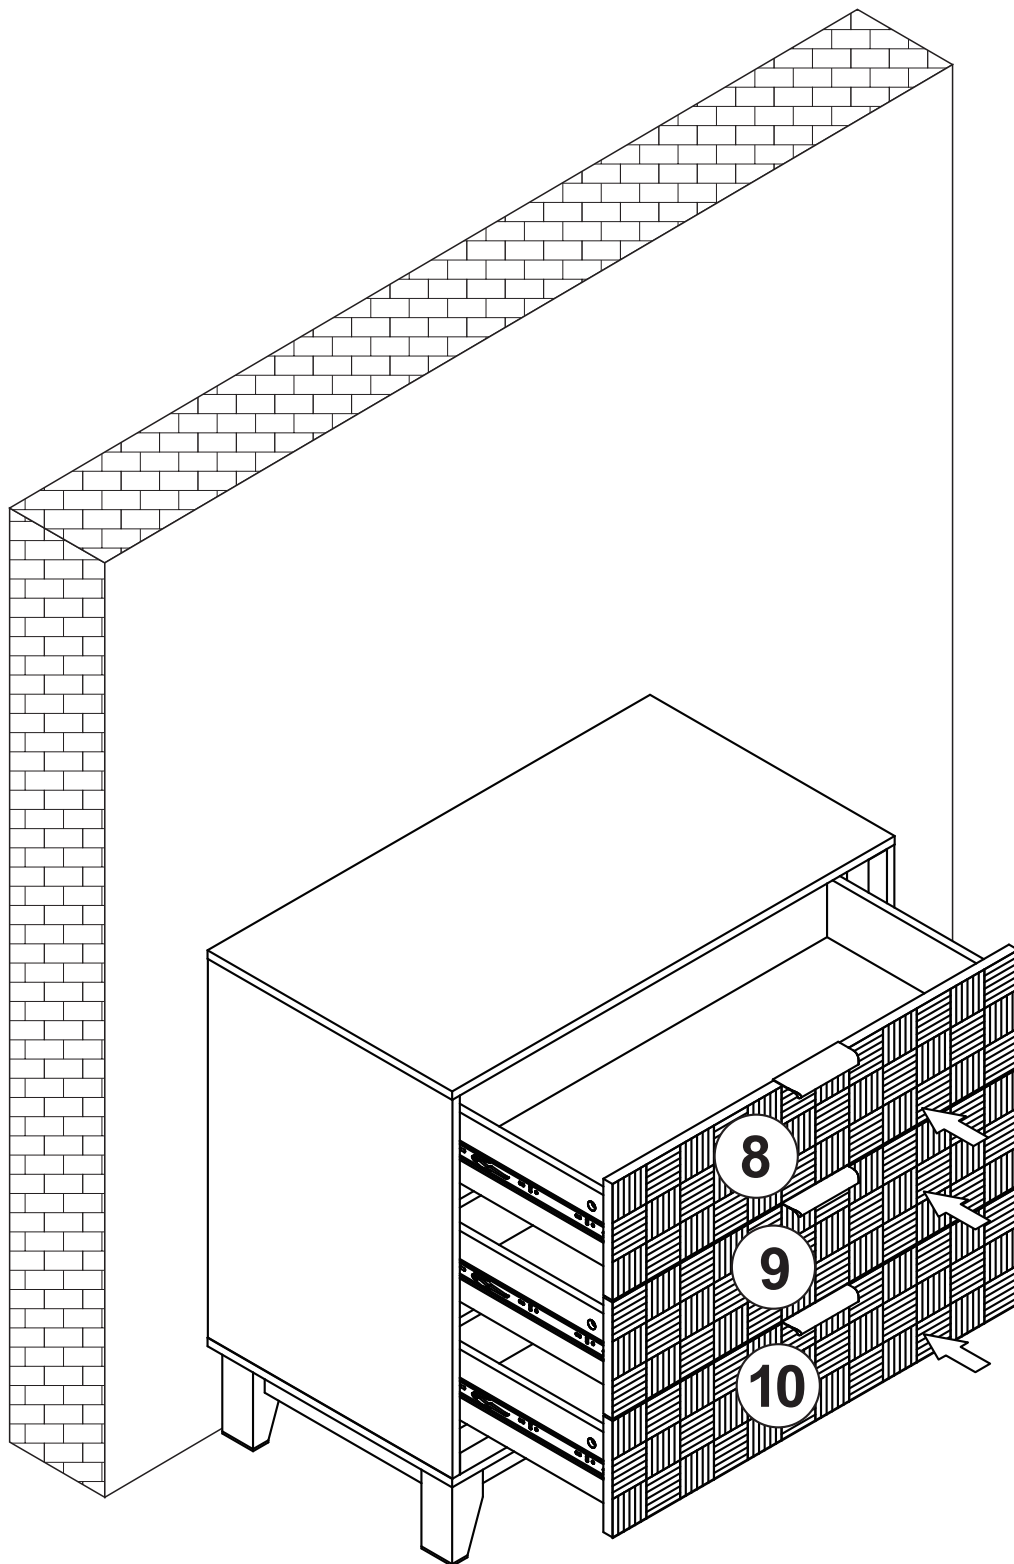

Insert (G-2) into (G-1), as shown.

DONE!