



Assembly Instructions

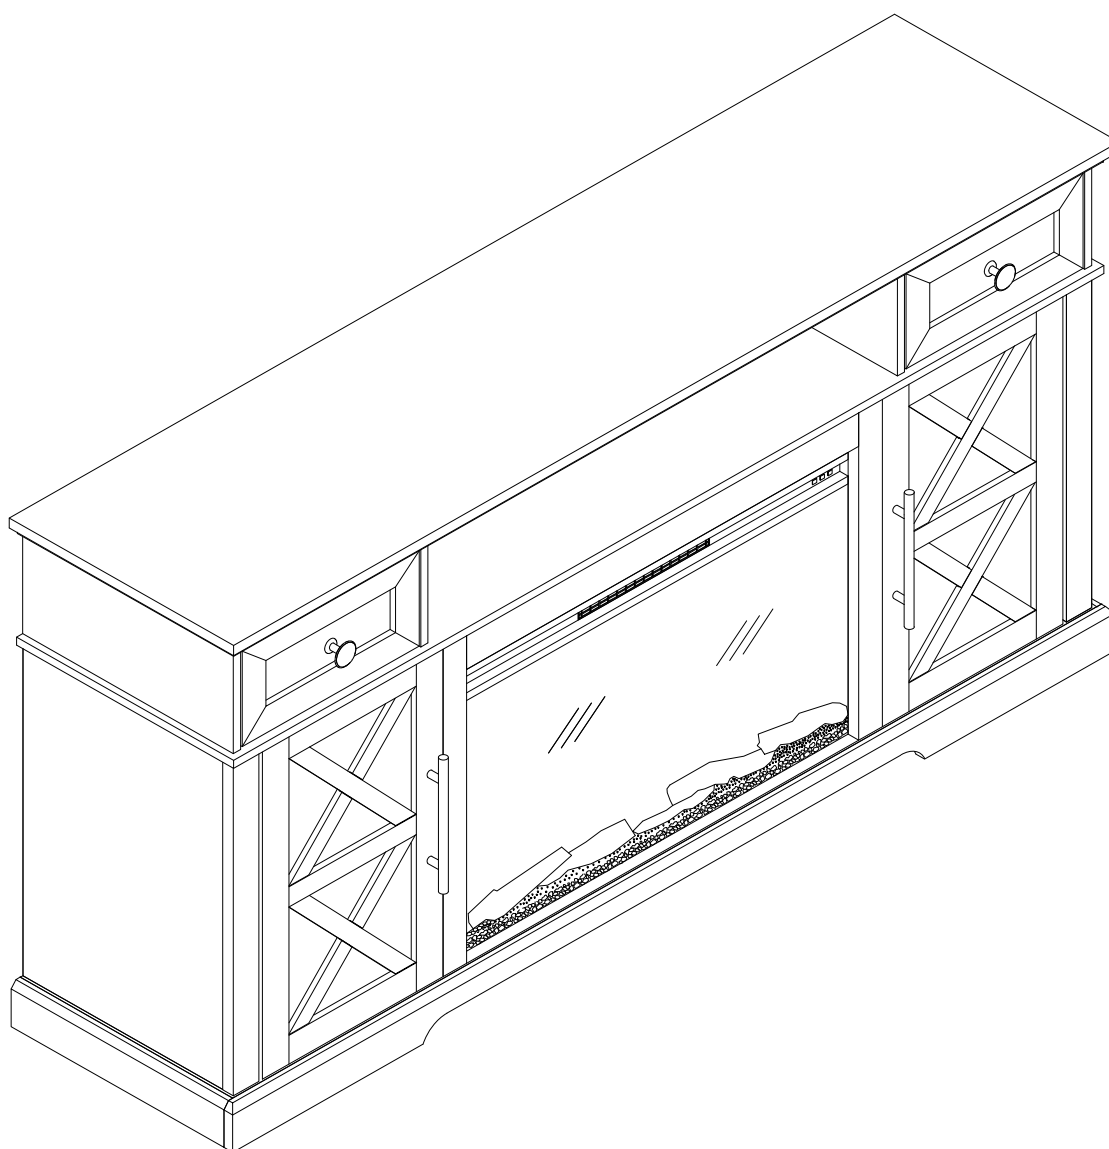


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- VI. A Phillips head screwdriver is required for the assembly of this product .

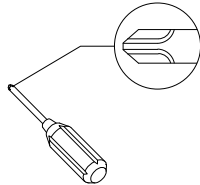

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

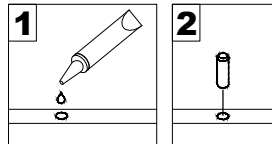


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

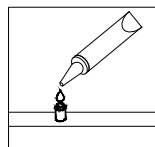


VI. HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS








- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

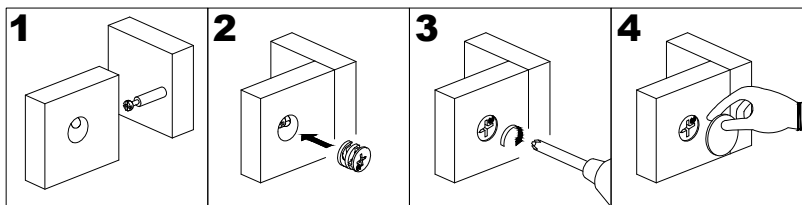


- VII. Power tools should not be used to assemble this product .

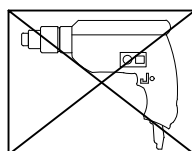

Hardware Provided

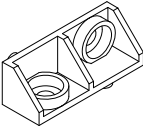
A  × 44+3	B  × 44+3	C  ø6*30mm × 40+3	D  ø8*30mm × 11+1	E  ø30mm × 44	F  ø3*12*6mm × 20+2	G  ø3.5*12*7mm × 14+1
H  ø3.5*15*7mm × 2	I  × 2	J  57*20*20mm × 14	K  ø1¹/₄*10mm × 28+2	L  ø8x5x16mm × 8+1	M  ø4*32*8mm × 8+1	N  × 16
O  ø3*17*5mm × 16+1	P  × 2	Q  × 2	R  × 2	S  ø⁵/₃₂"*25mm × 4	T  ø⁵/₃₂"*15mm × 2	U  ø4*12*8mm × 4

V

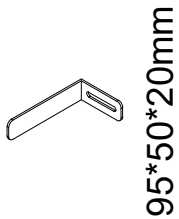


× 2

W



× 4

X




× 24+2

Y




× 16+1

Z

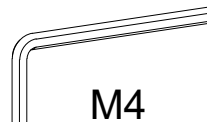

× 1


AA



CL

× 2


BB



CR

× 2

CC



DL

× 2


DD



DR

× 2

EE

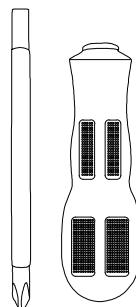


× 1

FF



× 2

GG




× 2

HH




× 2

II





× 2

JJ




× 1

Exploded View

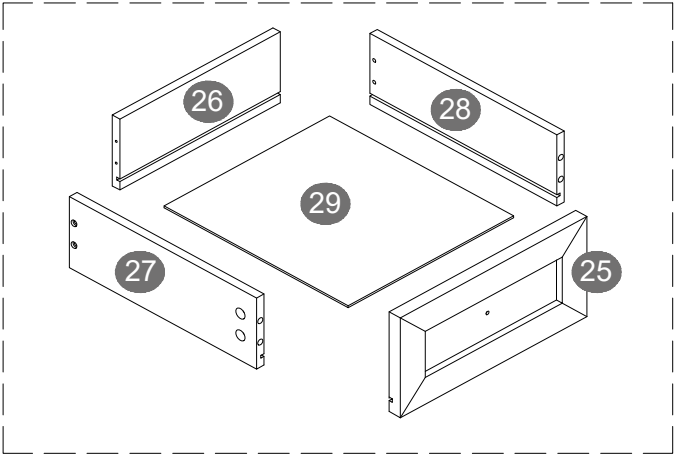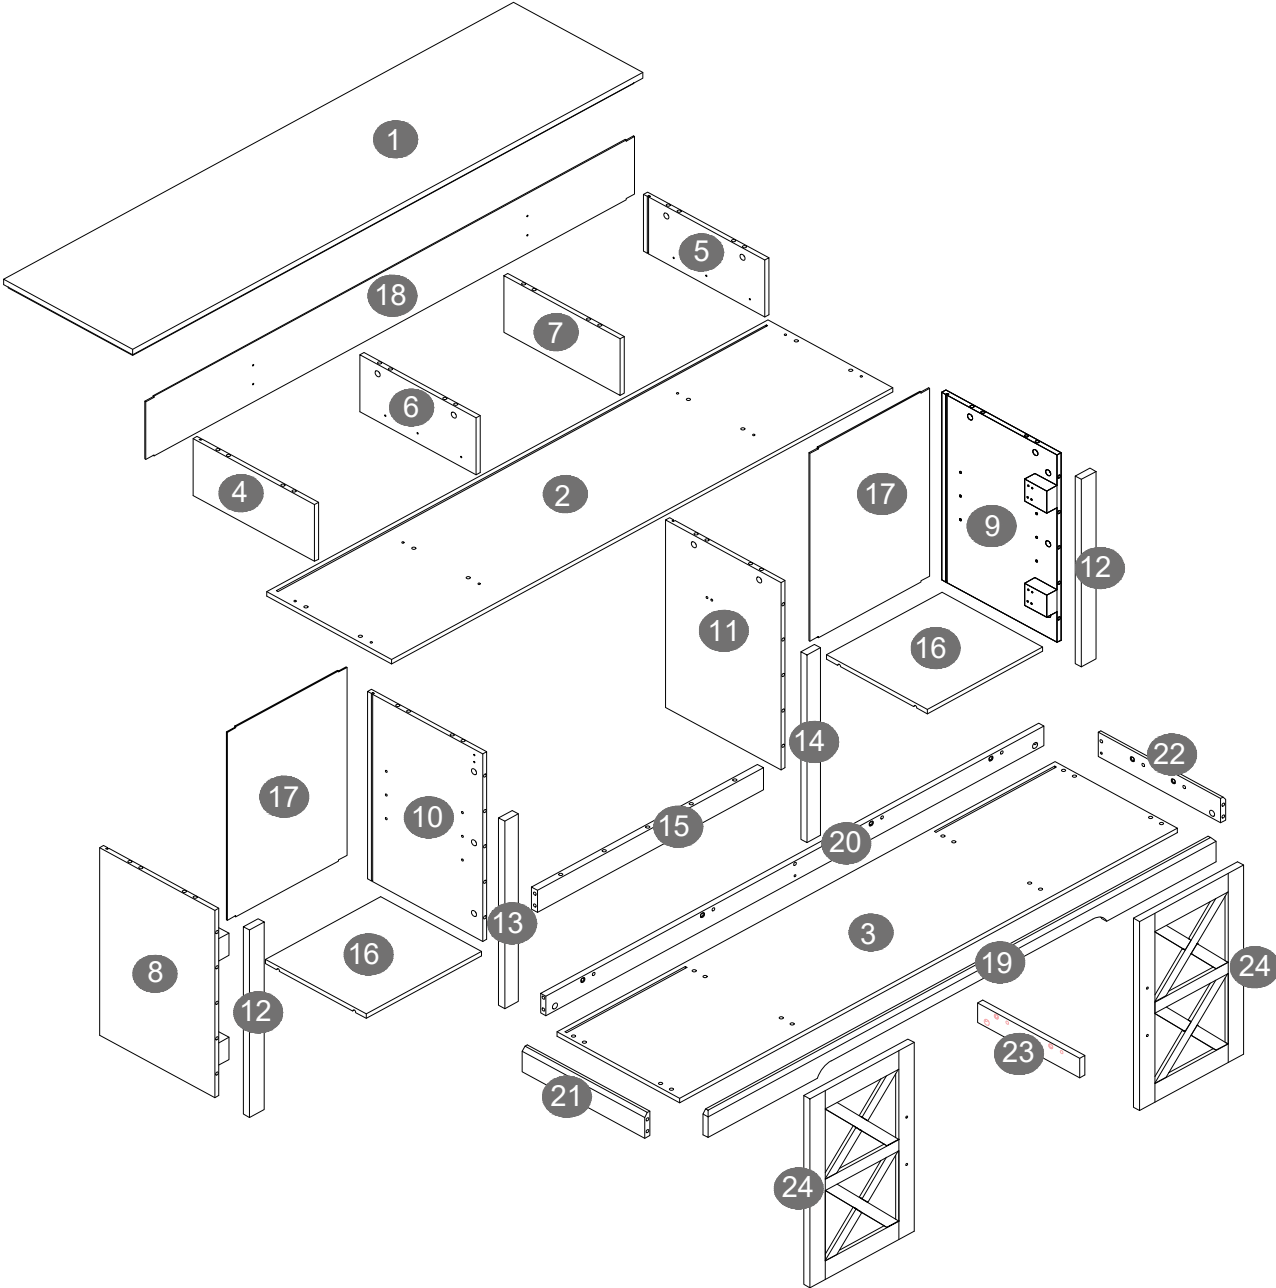


X2


Step 1

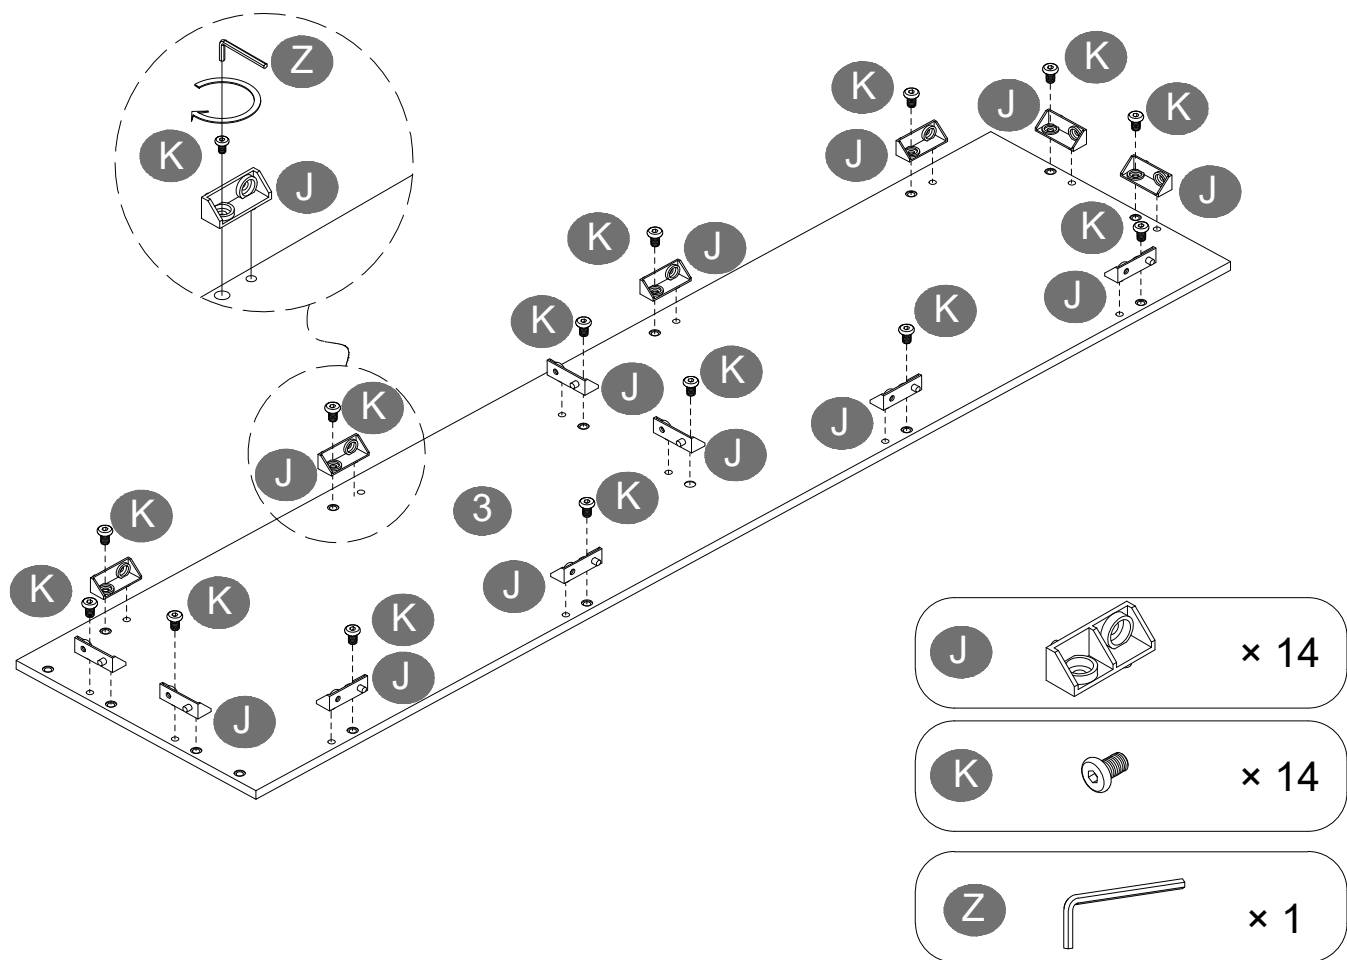

Step 2

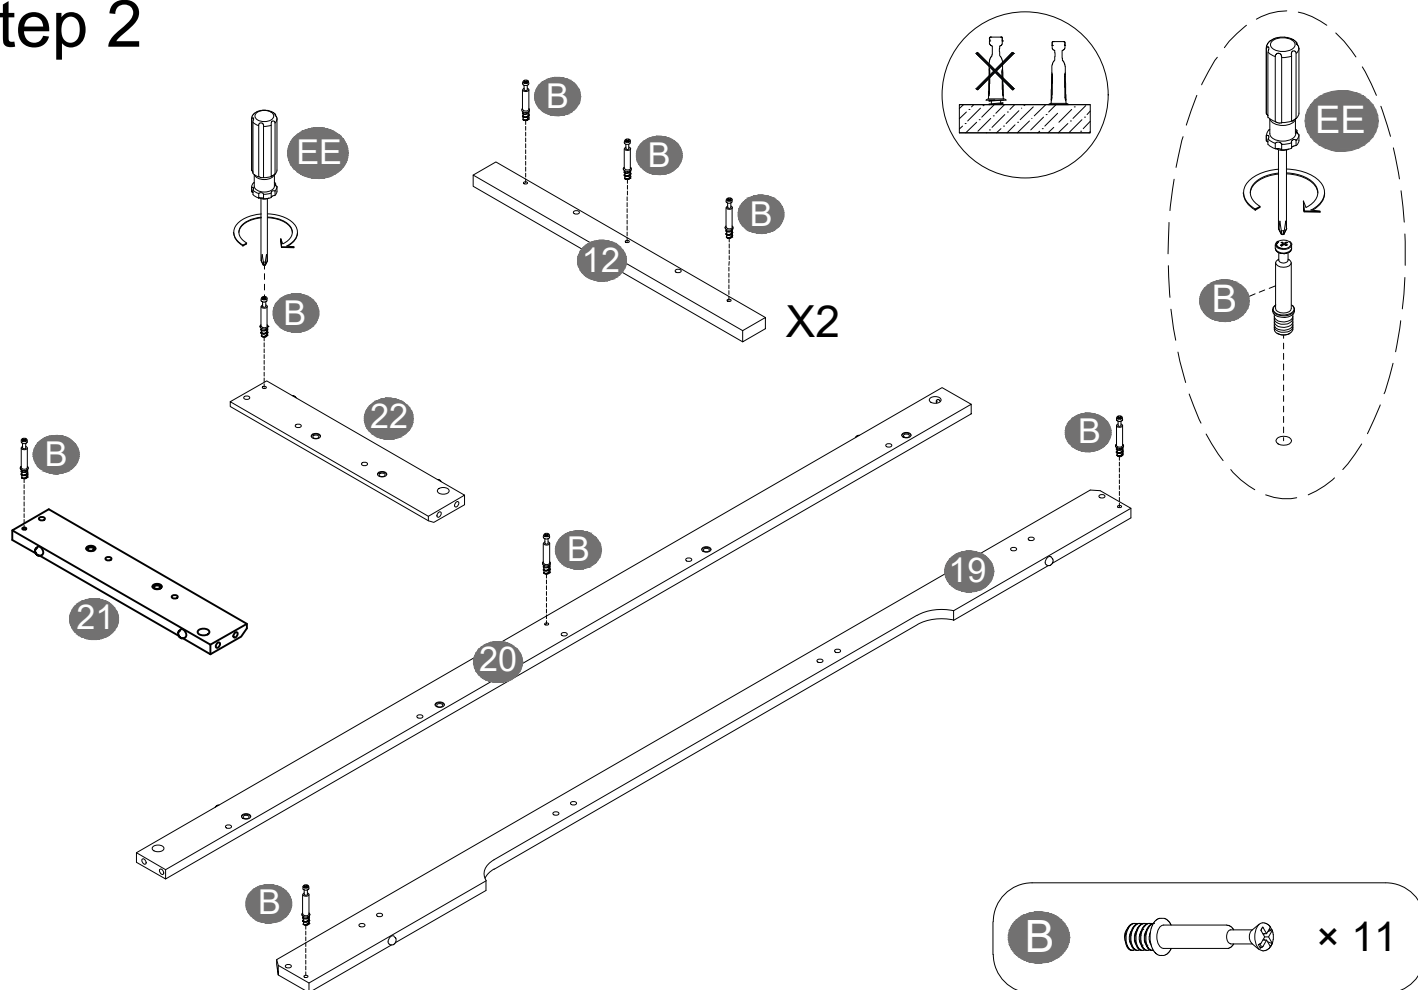

Step 3

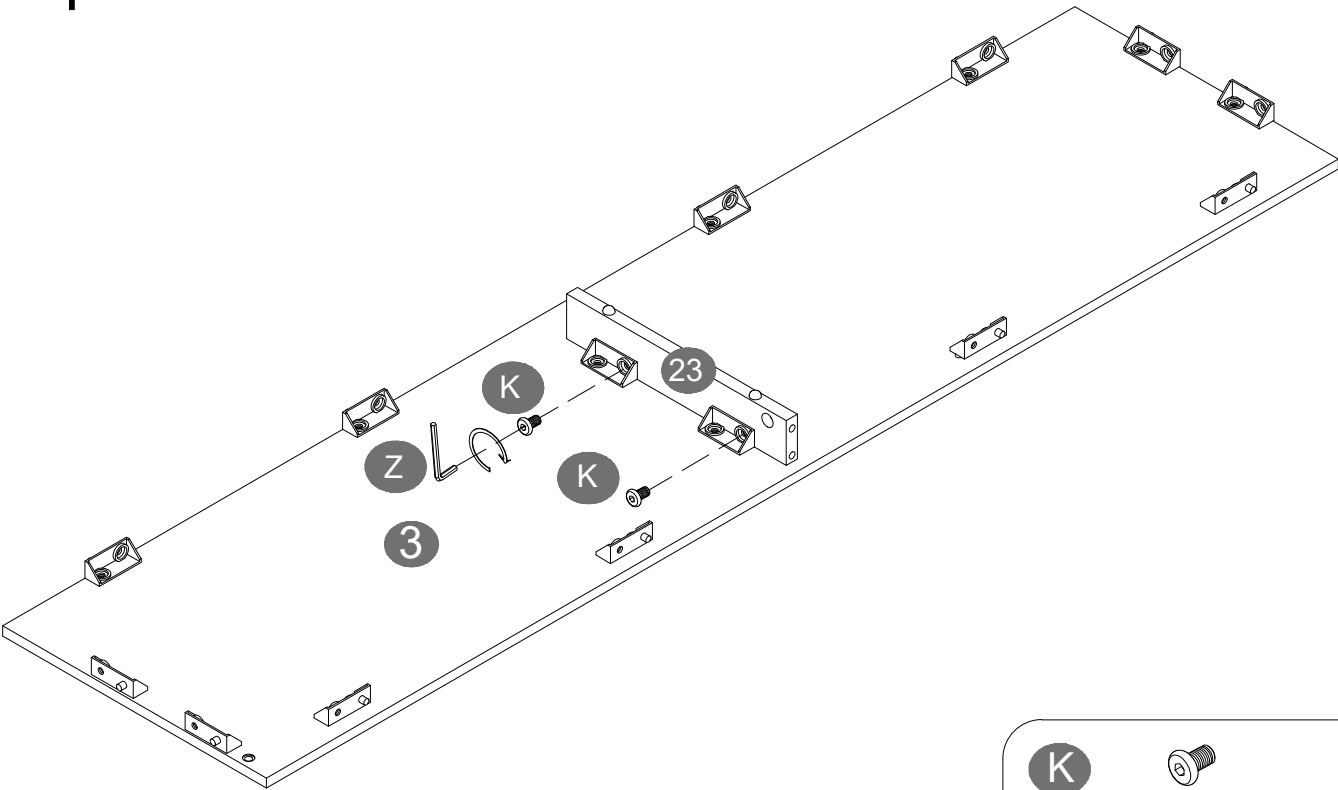

K




× 2

Z



× 1

Step 4

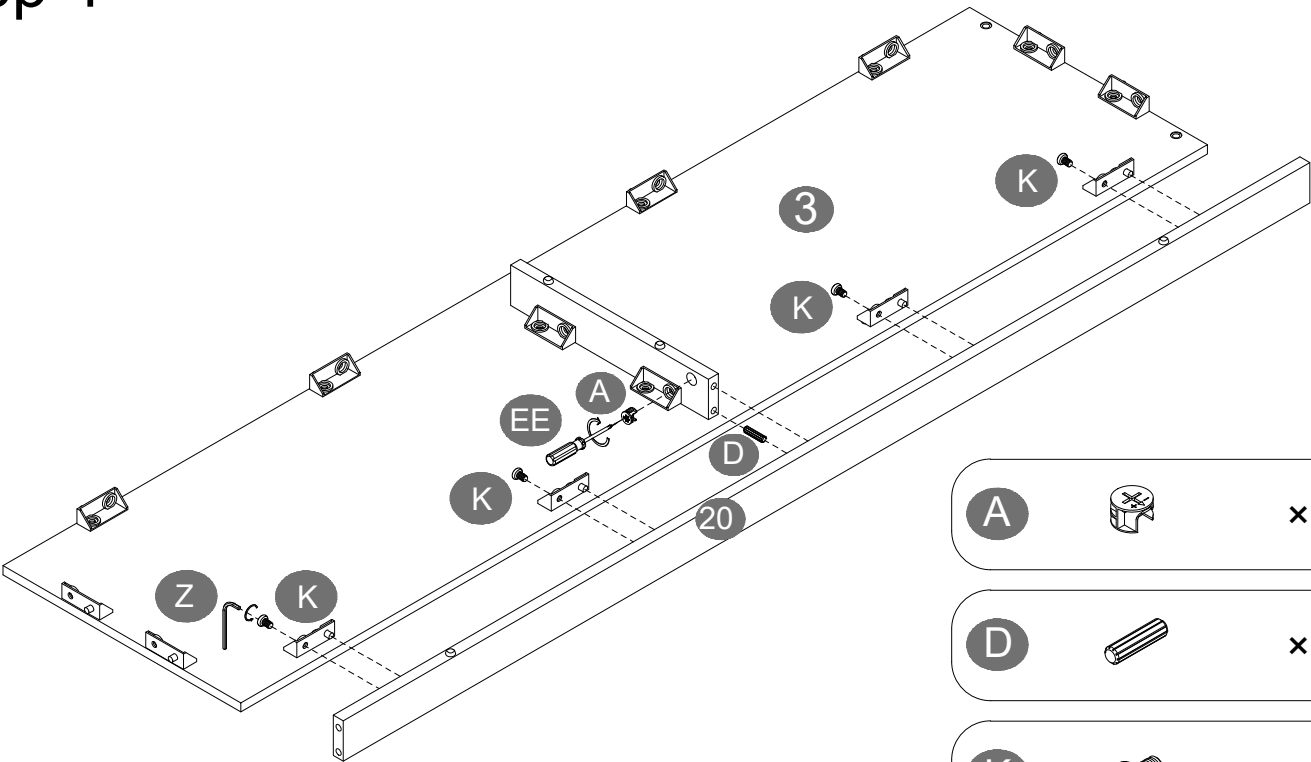

A



× 1

D



× 1

K




× 4


Z



× 1

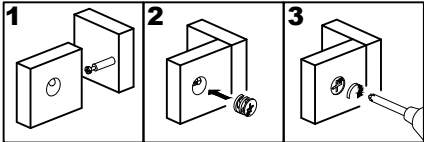


Step 5

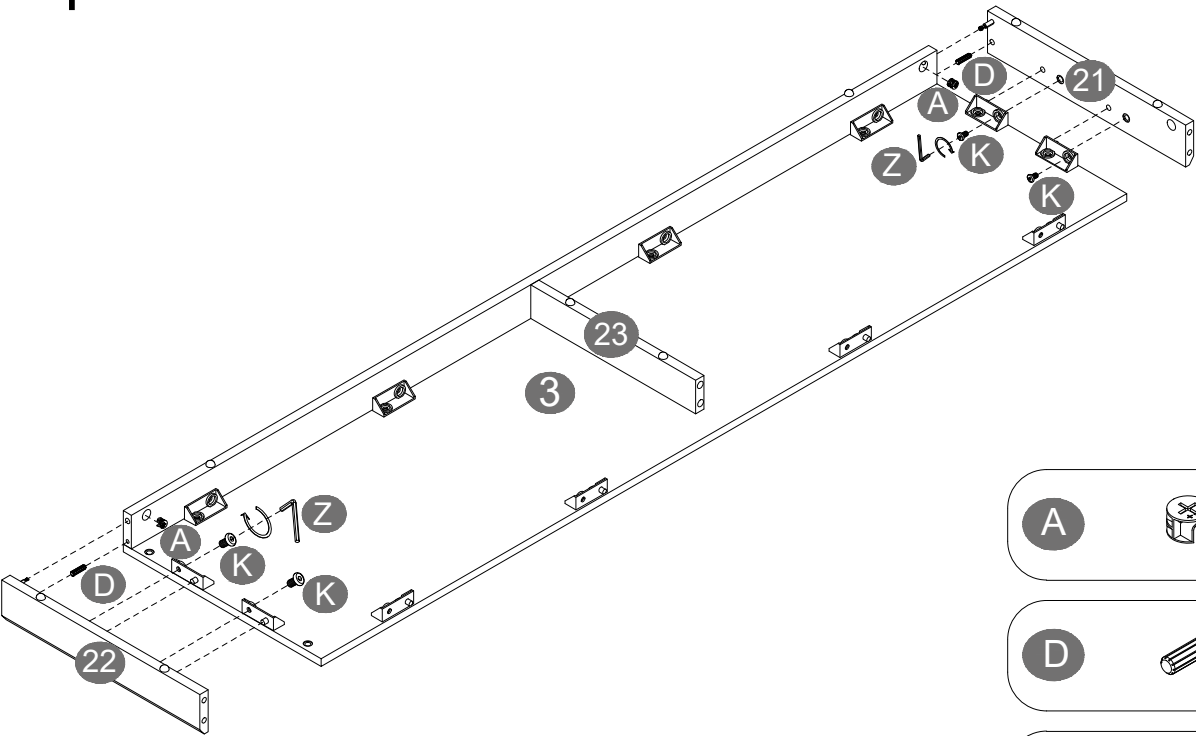




A		× 2
D		× 2
K		× 4
Z		× 1

Step 6





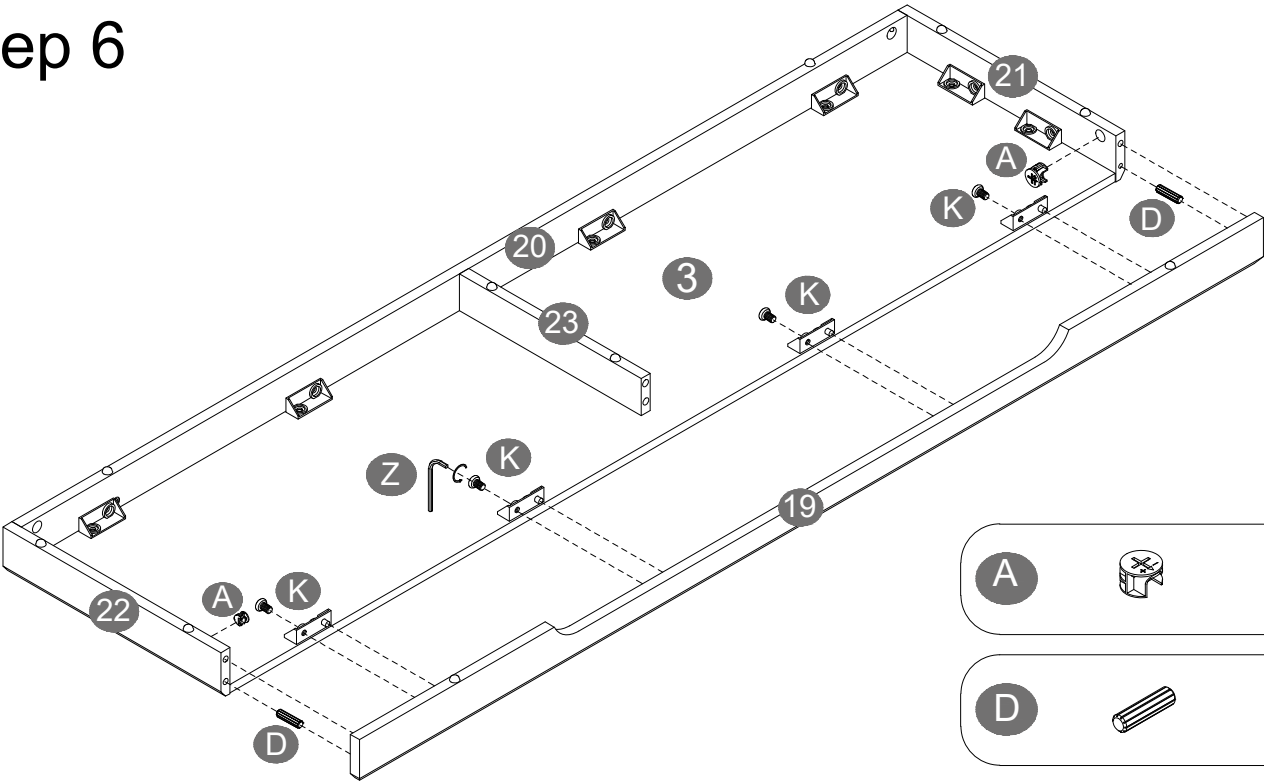


A		× 2
D		× 2
K		× 4
Z		× 1


Step 7

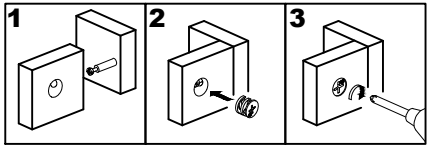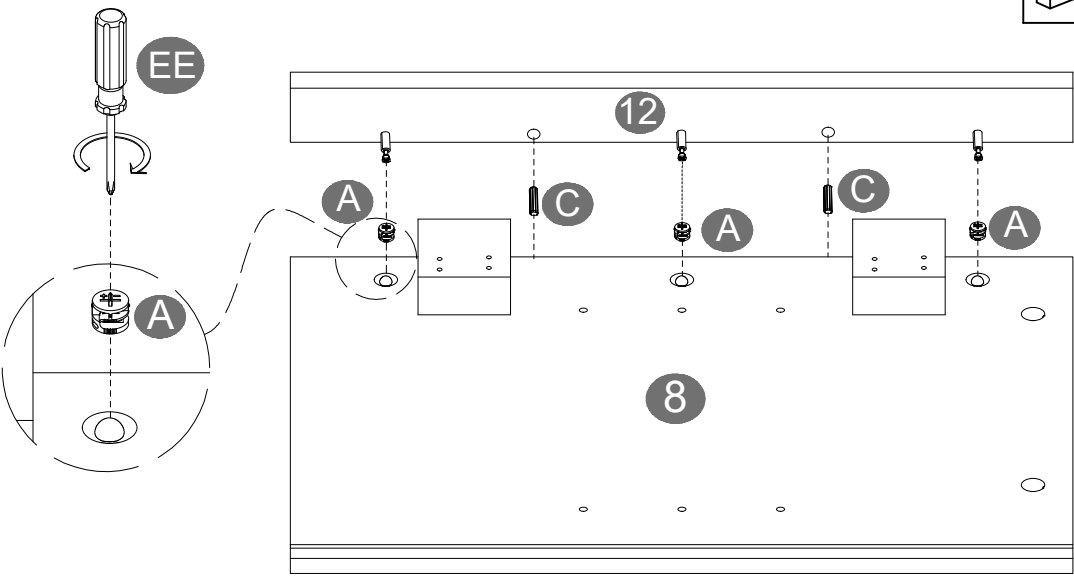

Step 8

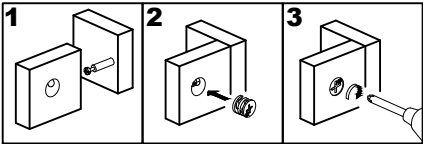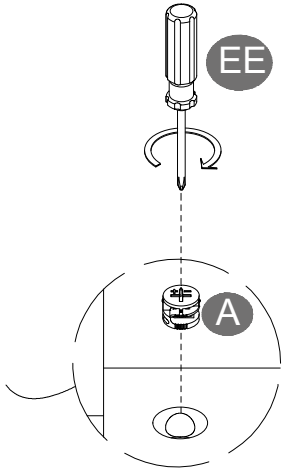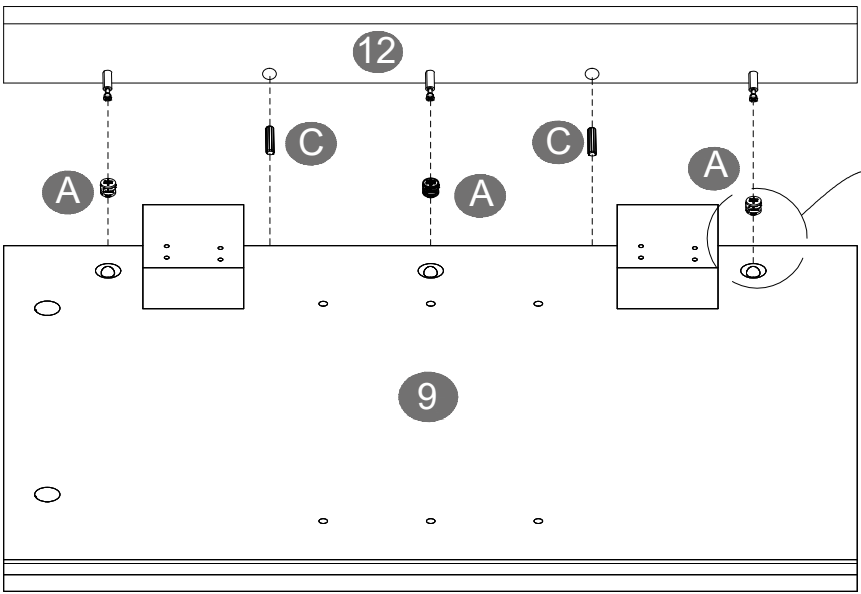


Step 9

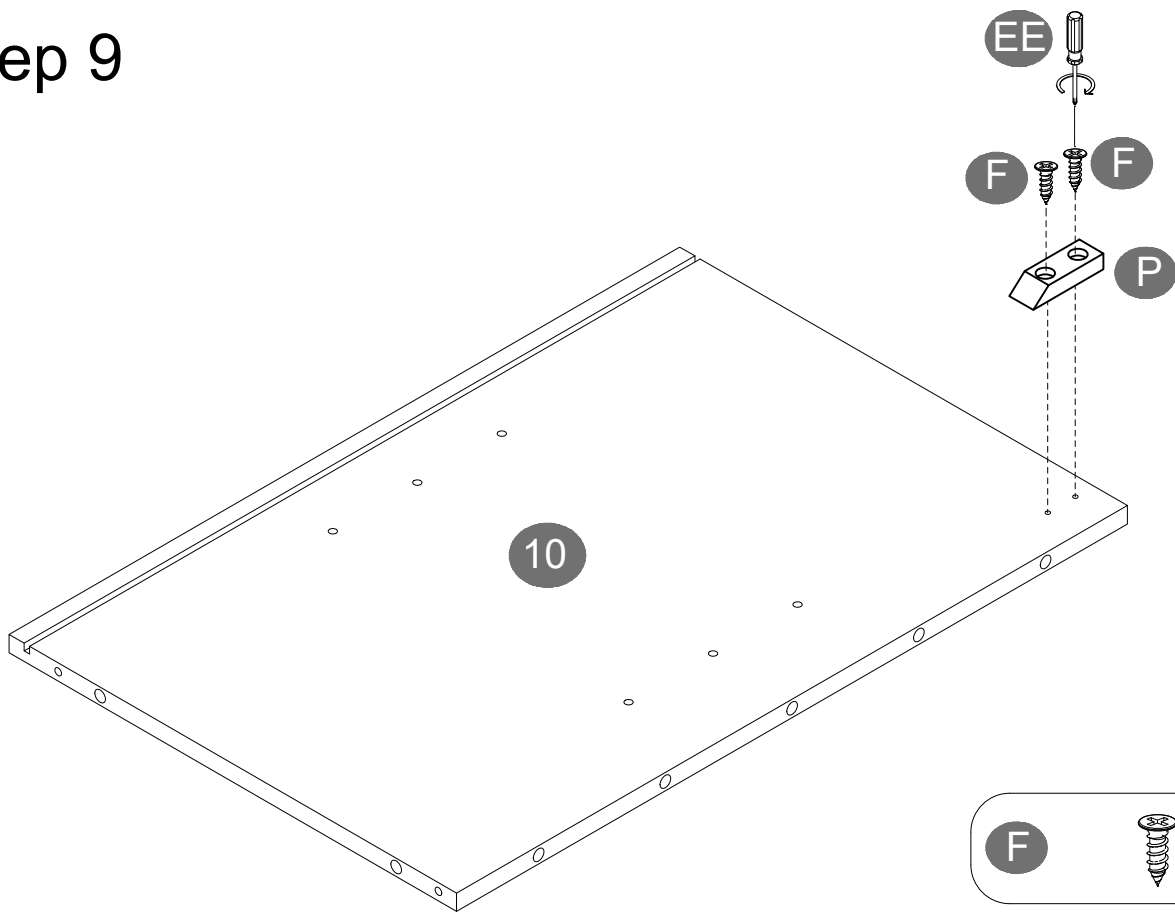


- | | | |
|---|--|----|
| F |  | x2 |
| P |  | x1 |

Step 10

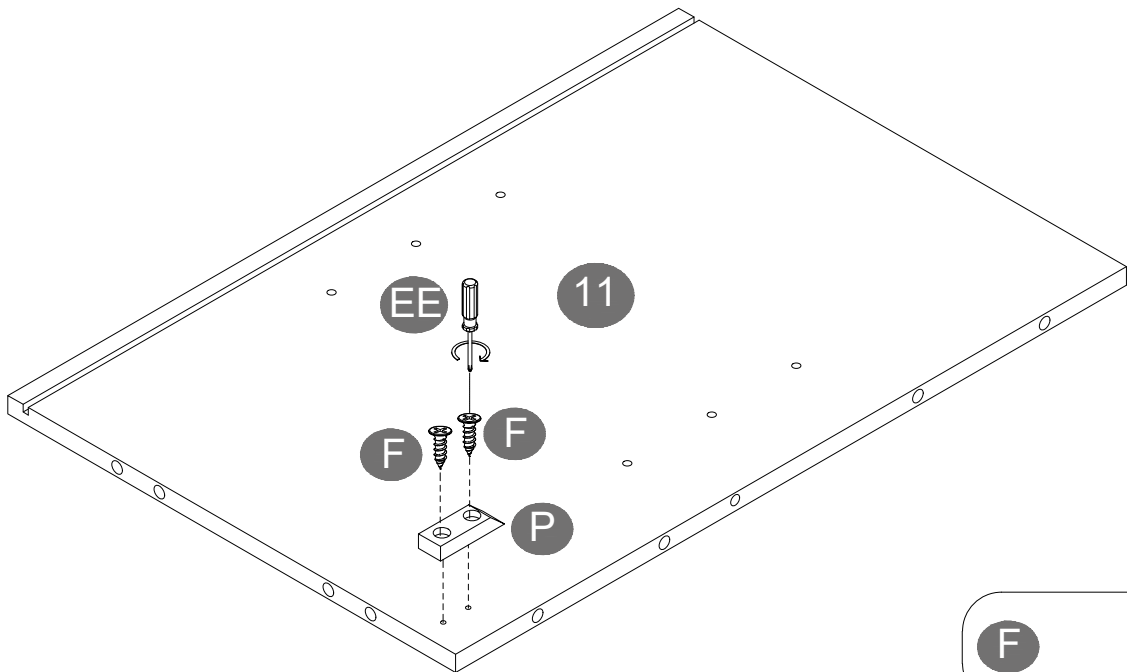


- | | | |
|---|---|----|
| F |  | x2 |
| P |  | x1 |


Step 11

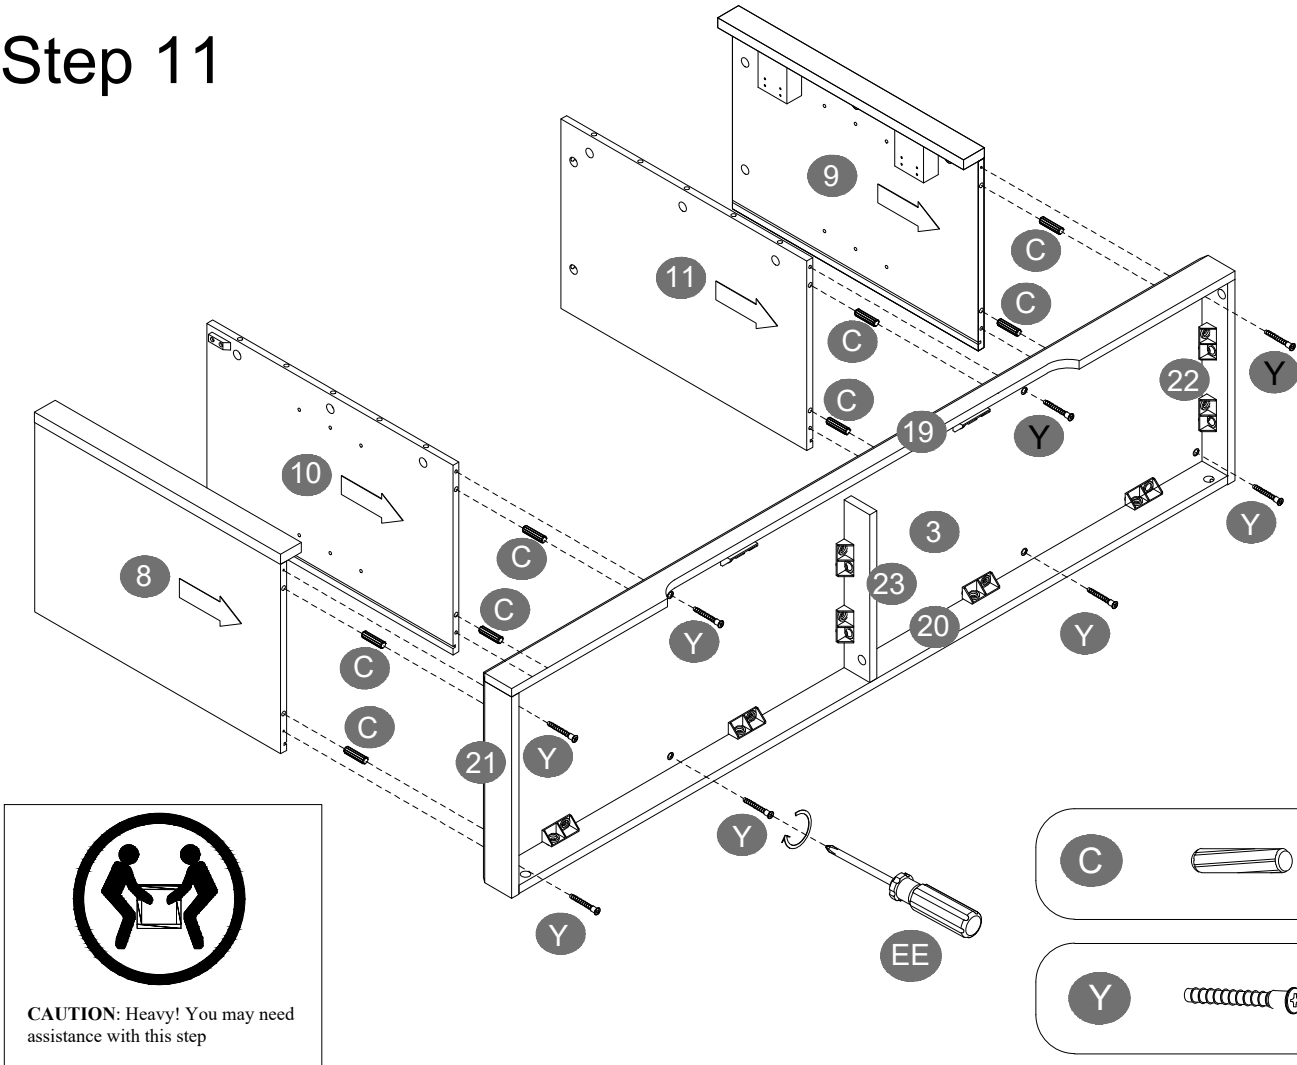


Step 12

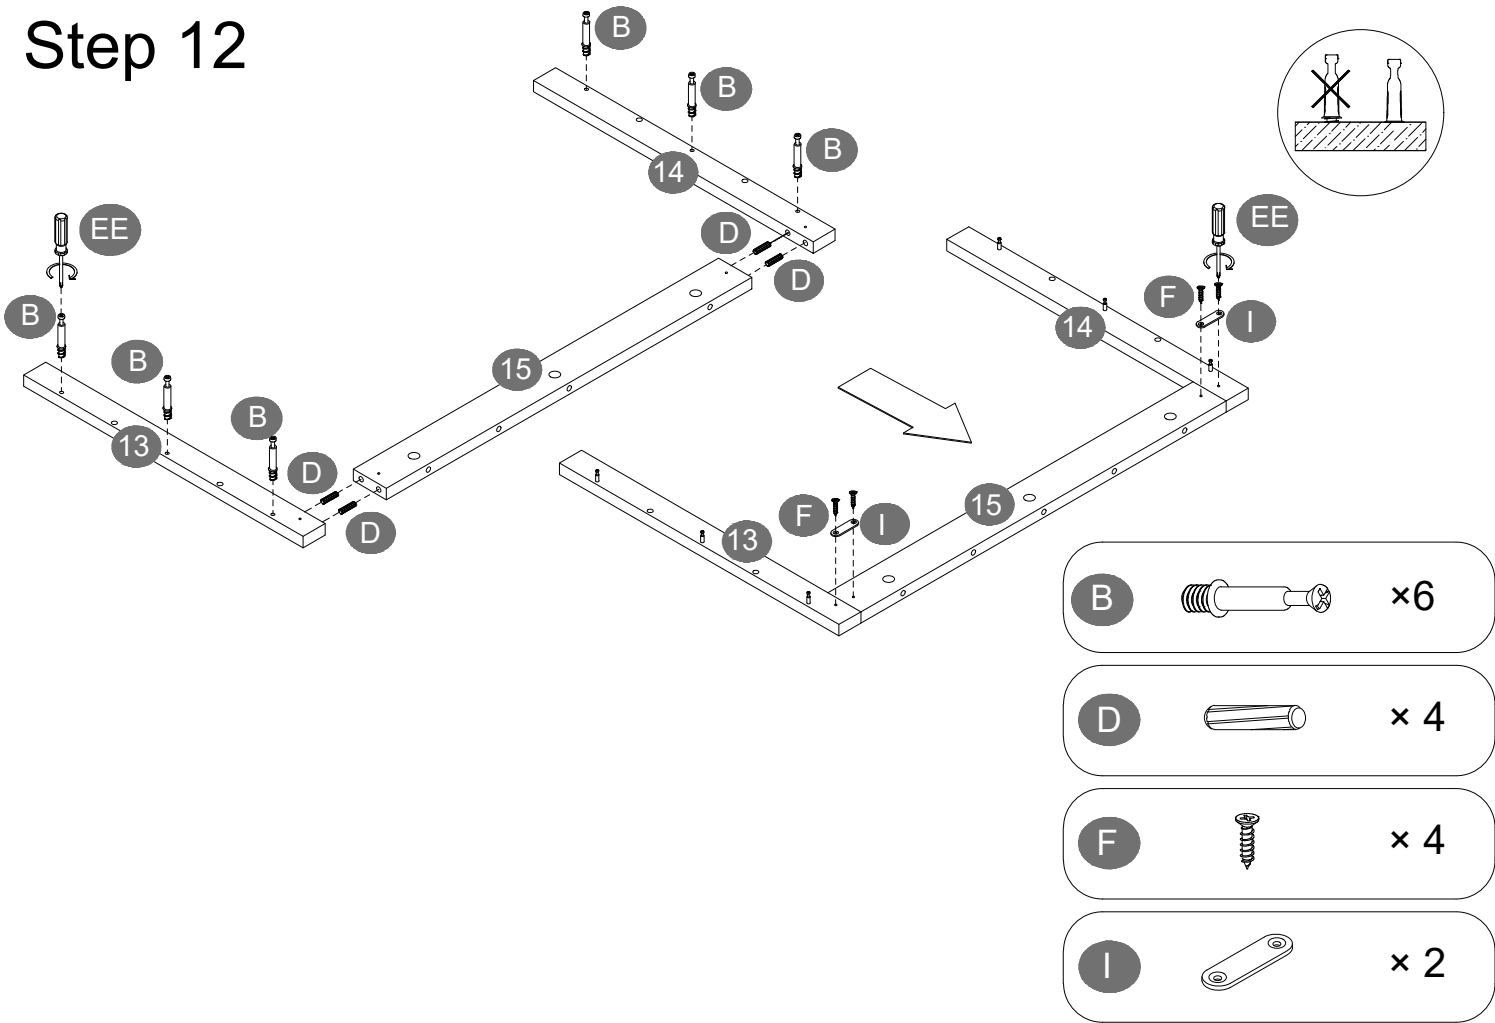



Step 13

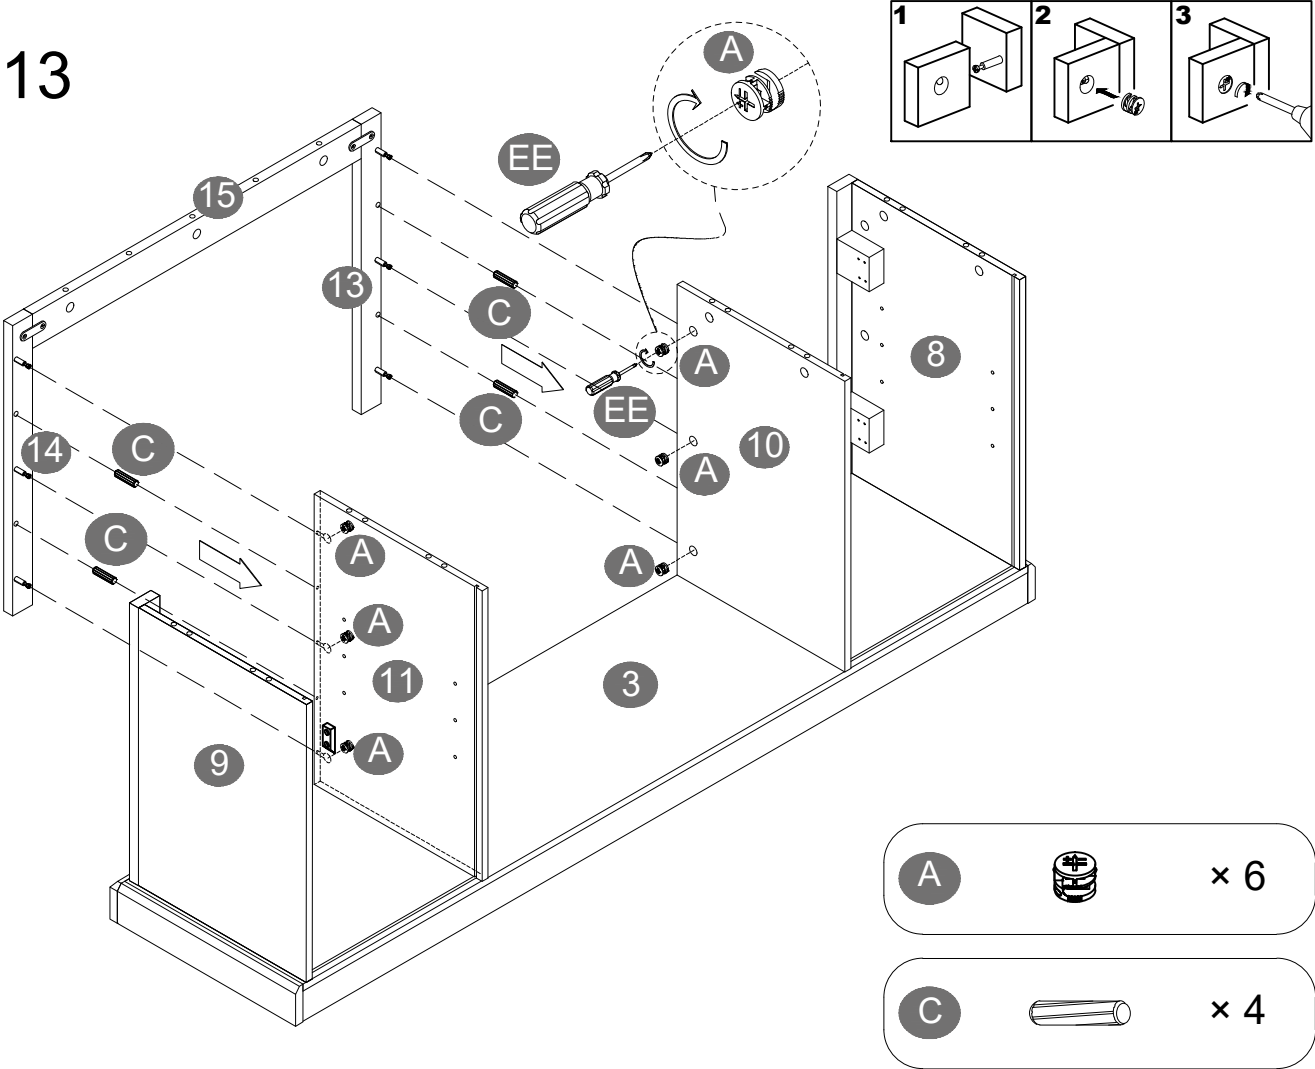


Step 14

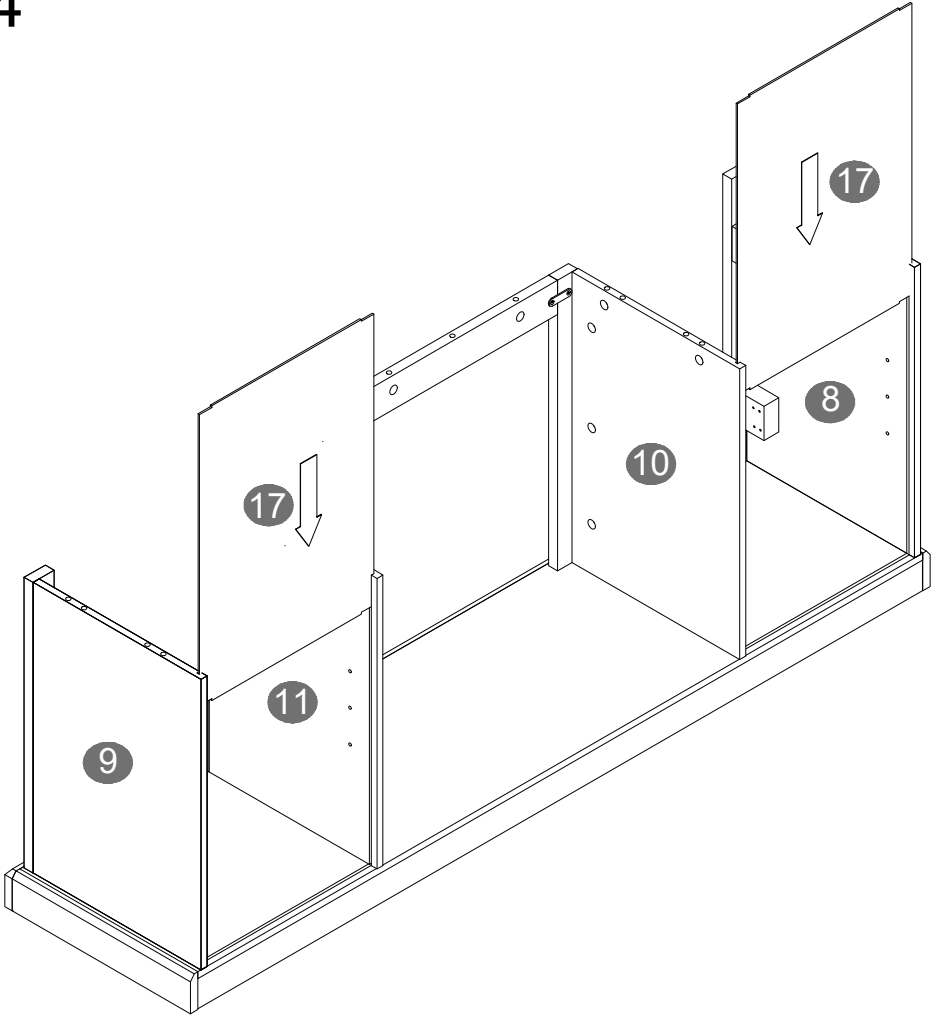

Step 15

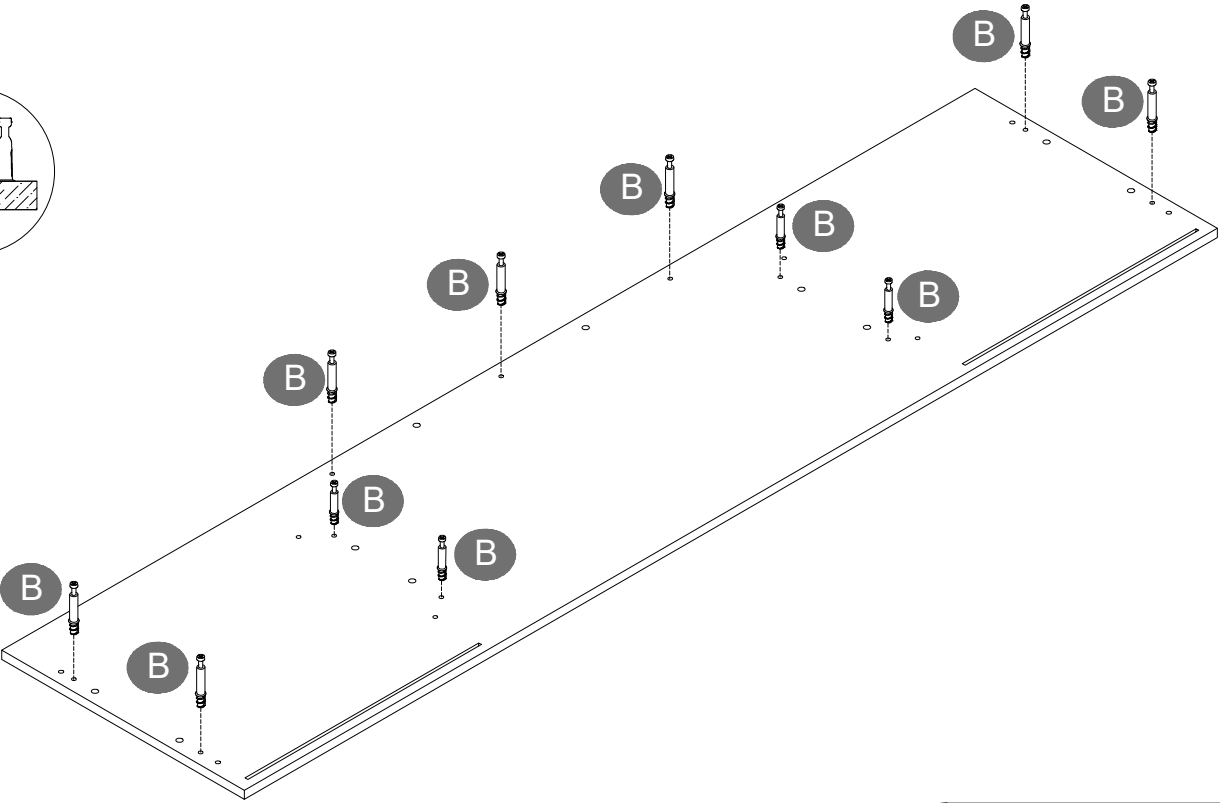
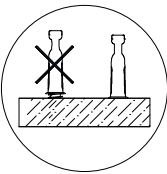


B




×11

Step 16

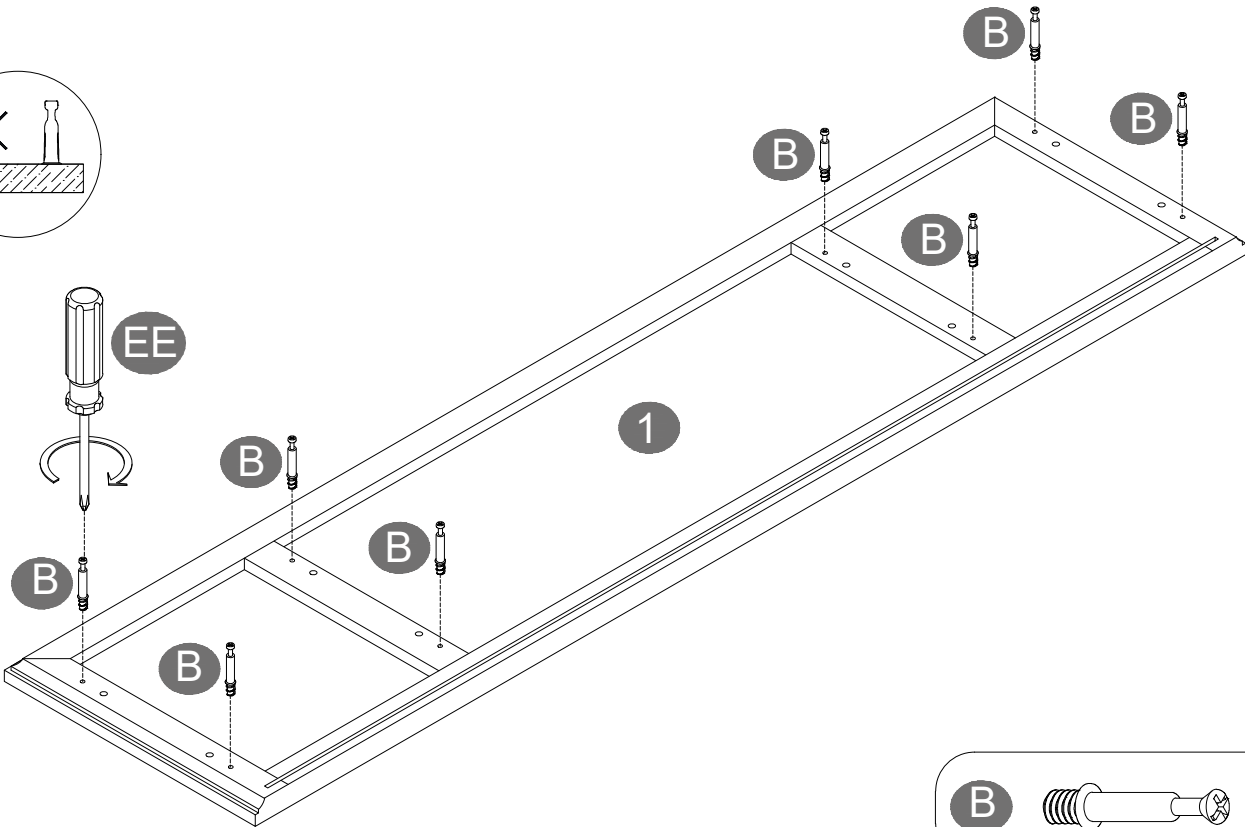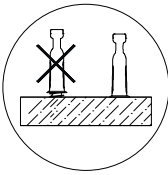


B




× 8





Step 17

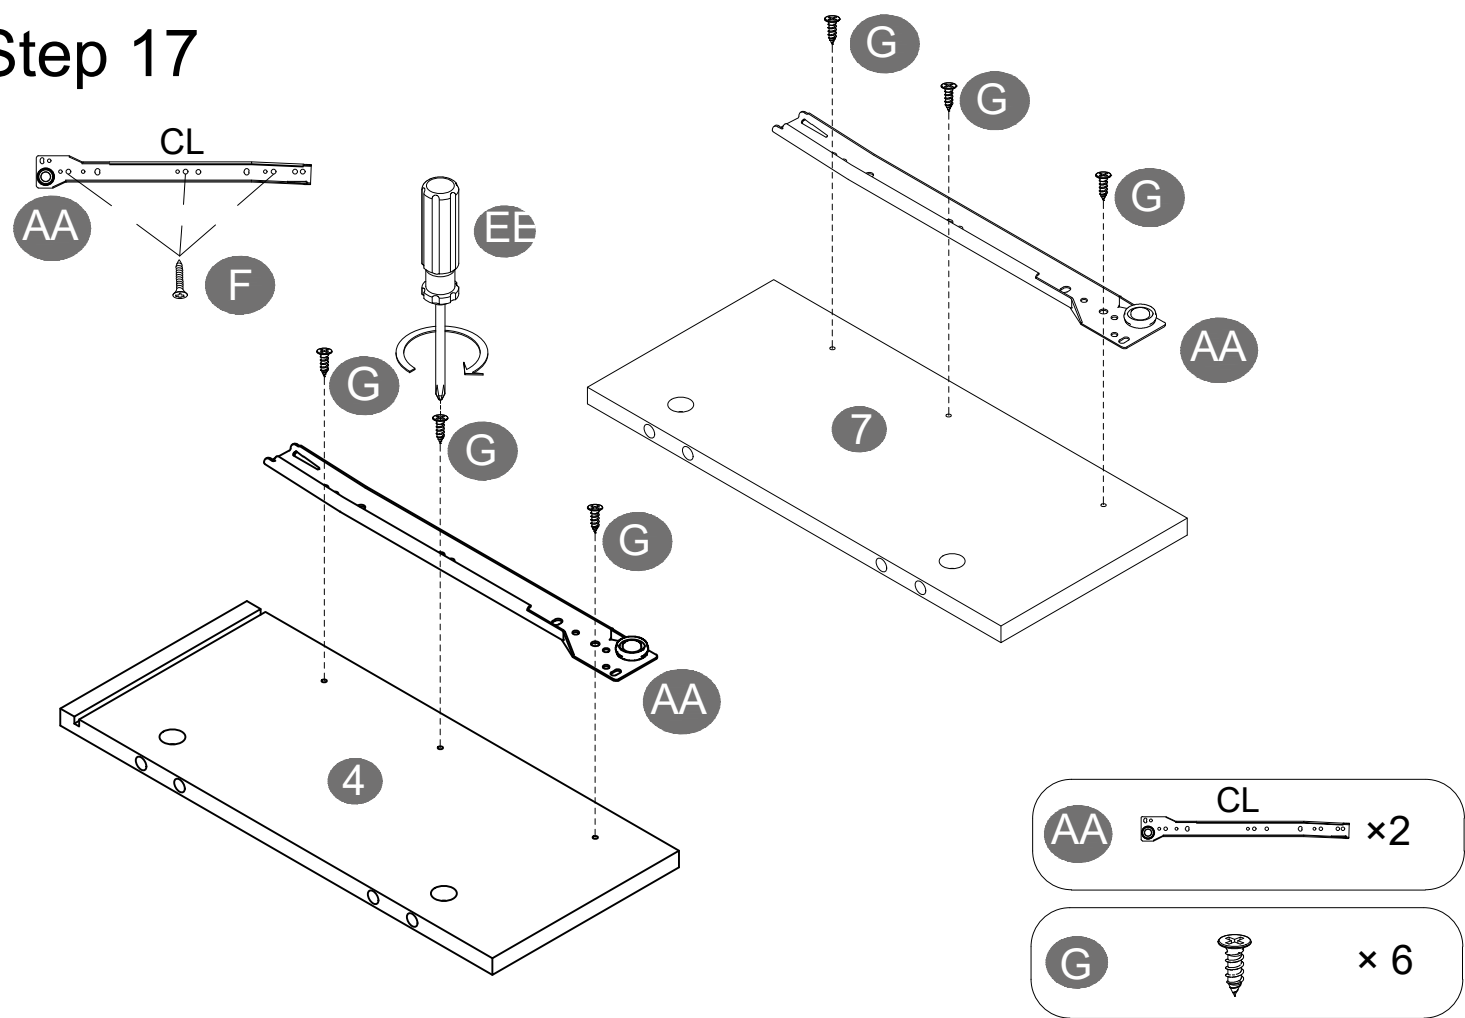





Step 18

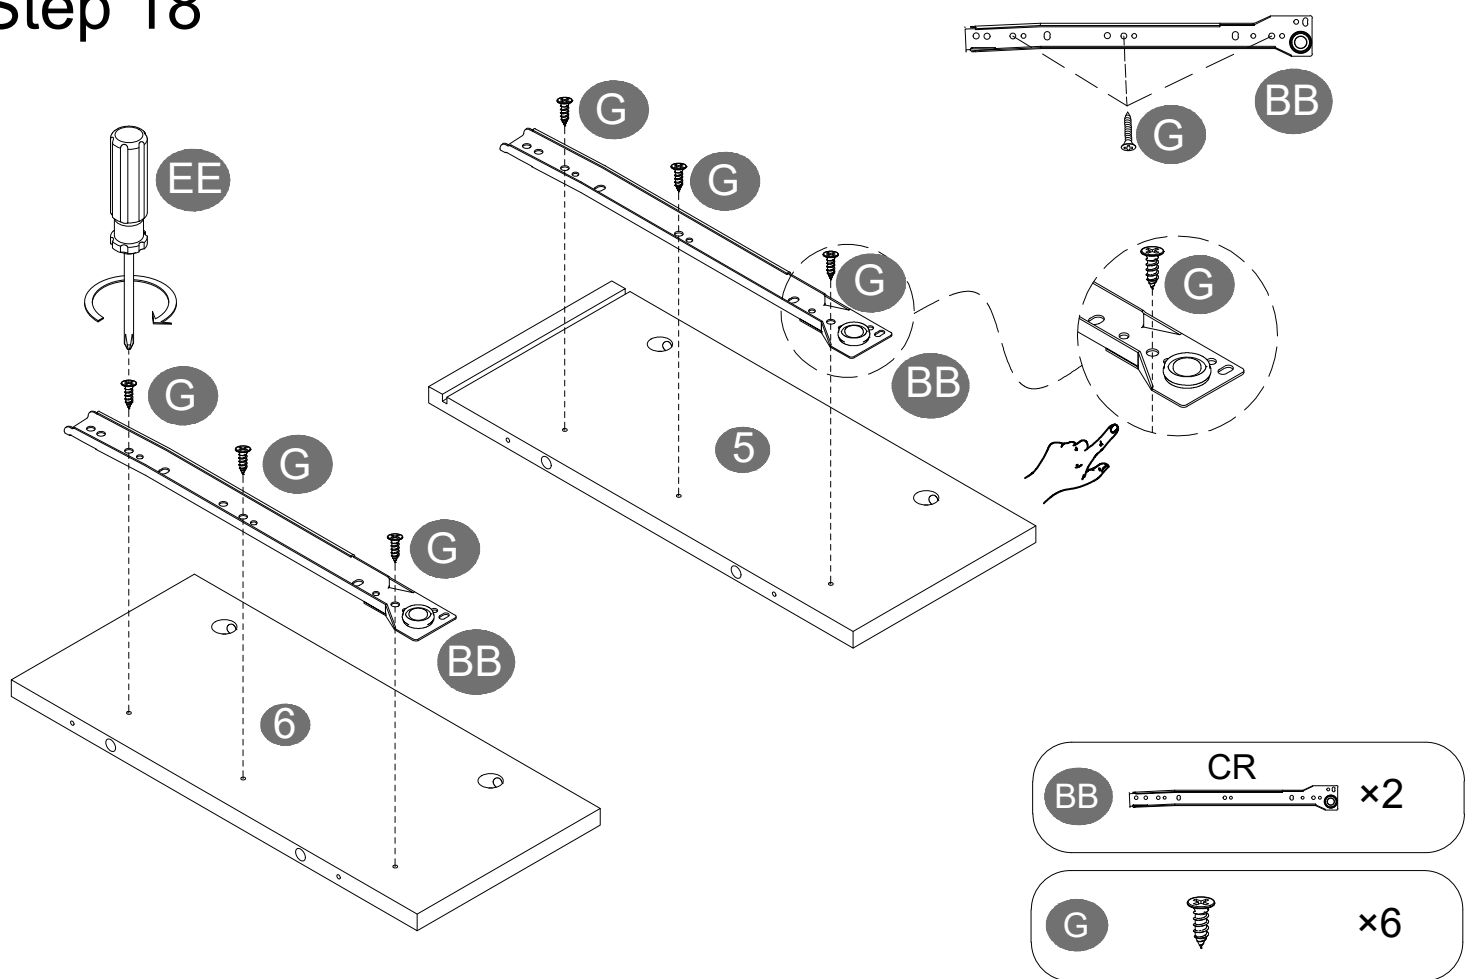


Step 19

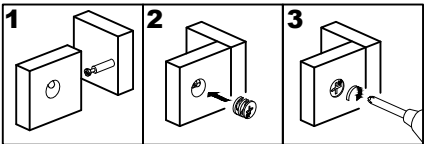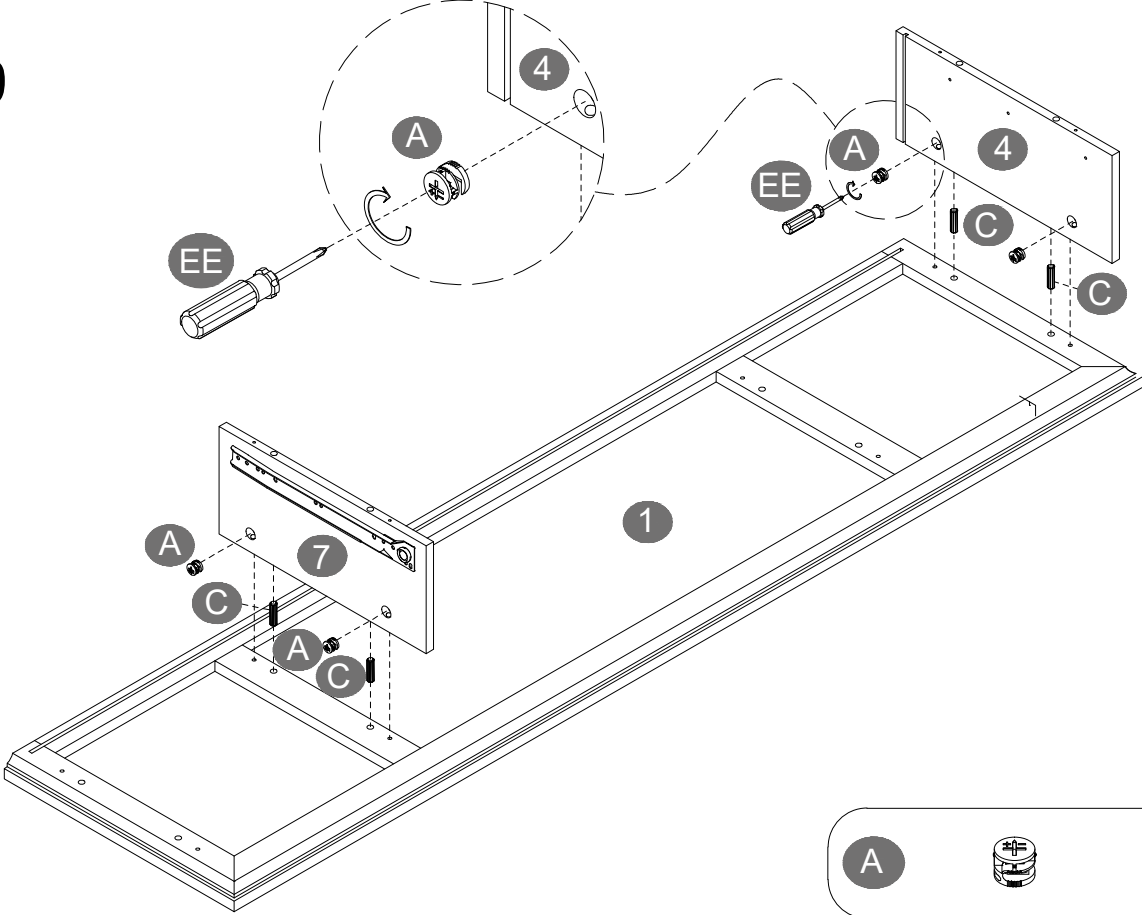


Step 20

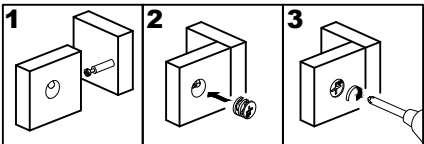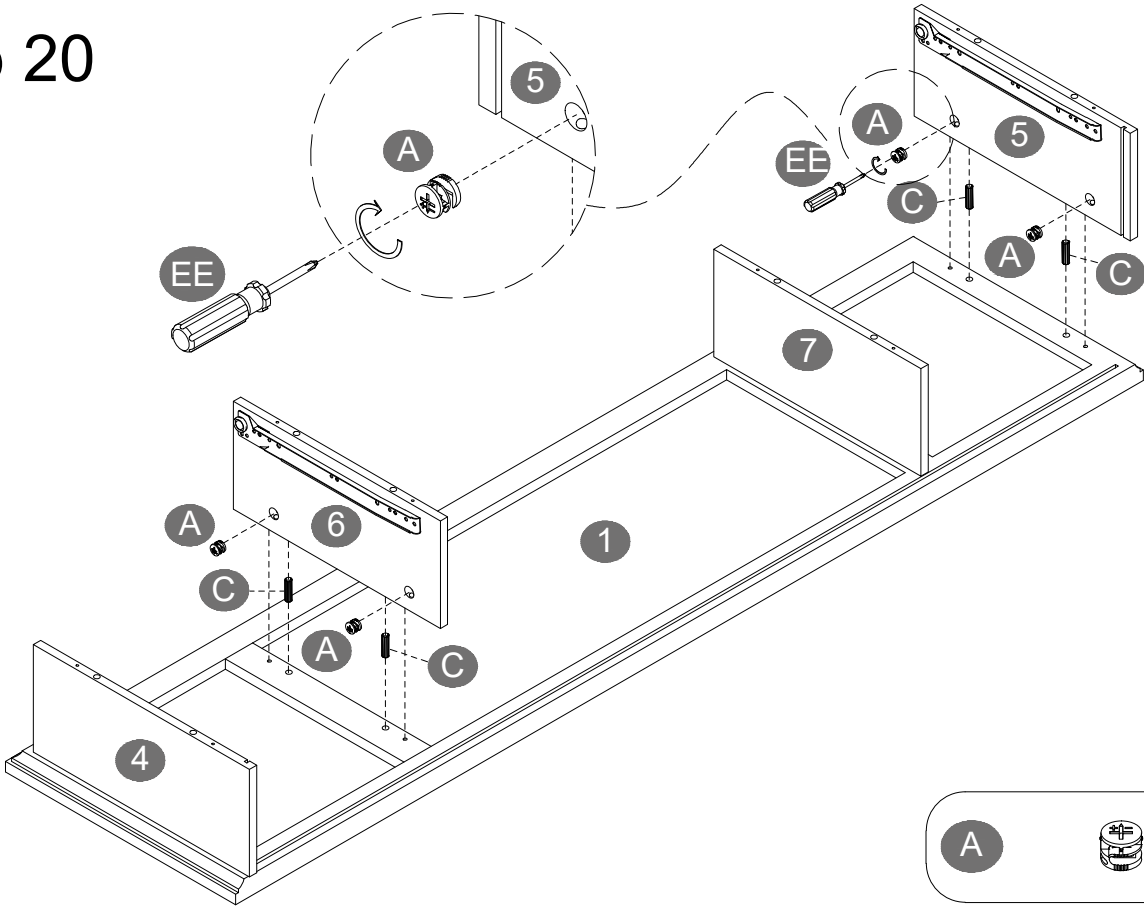

Step 21

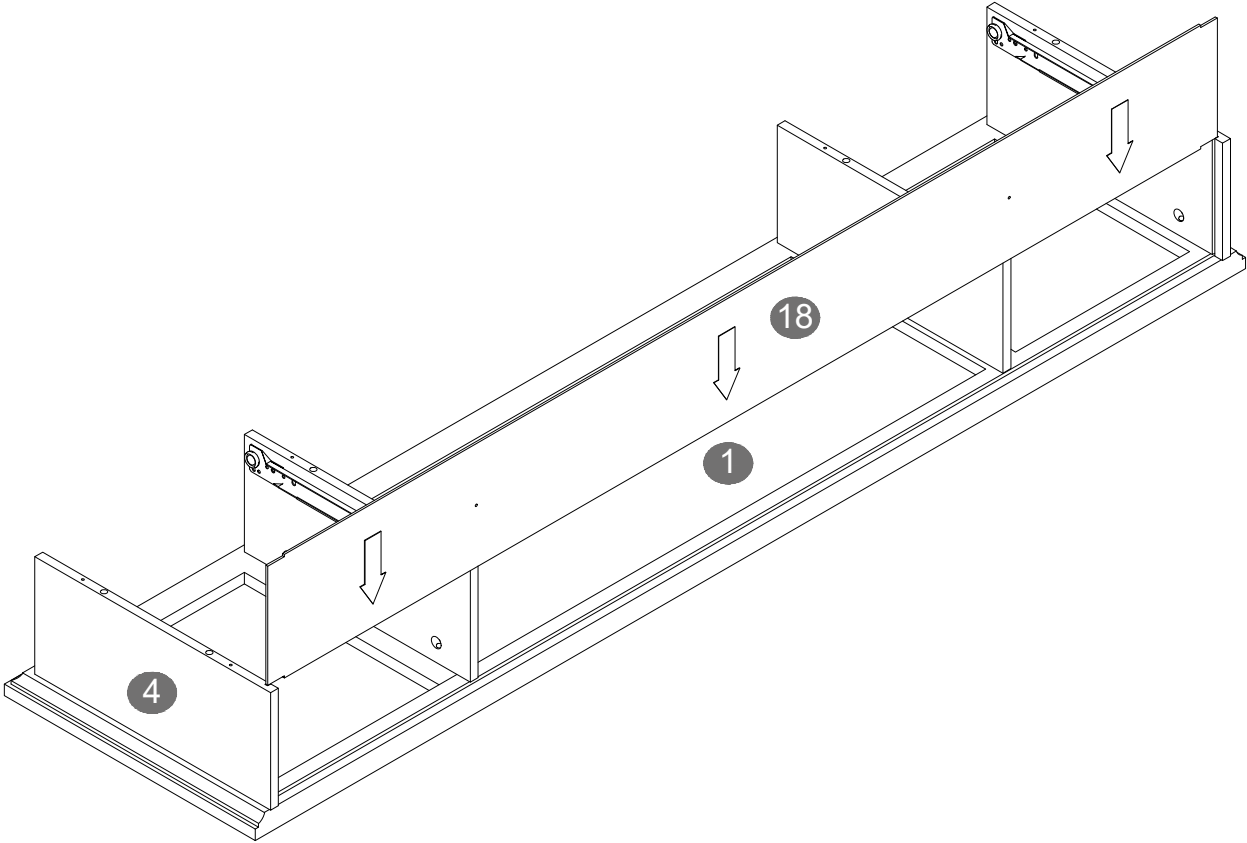

Step 22

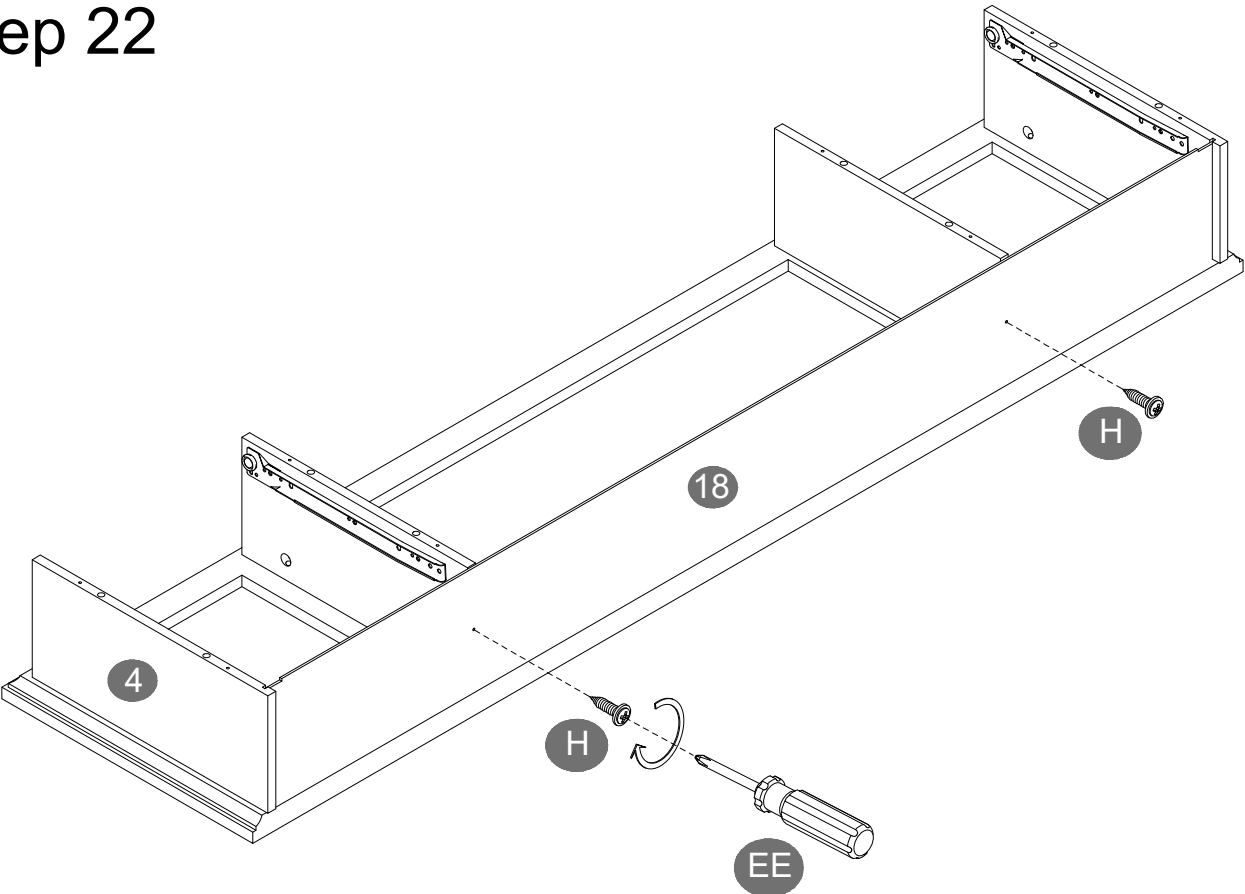


H



x2

Sep 23

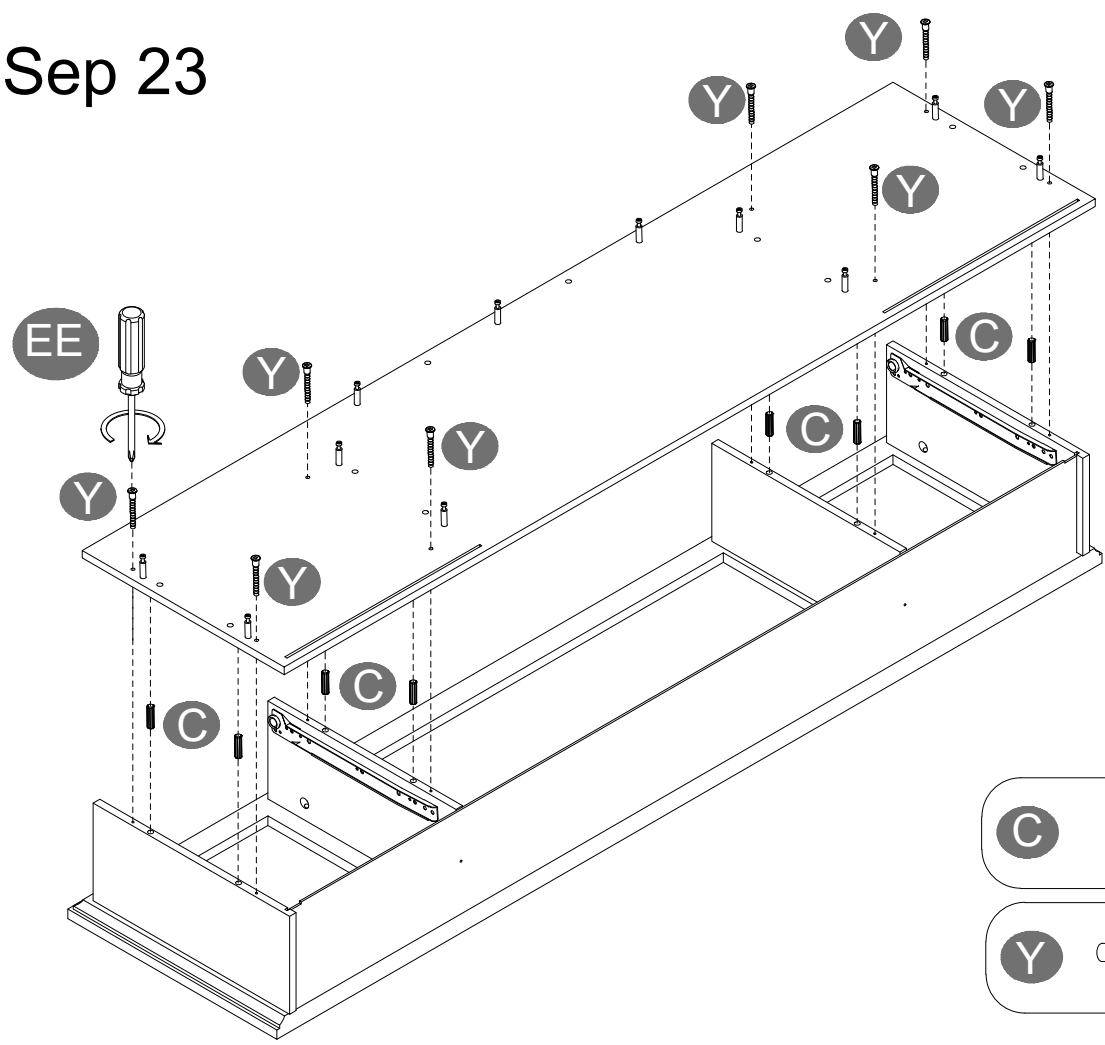


CAUTION: Heavy! You may need assistance with this step

- C


×8
- Y

×8

Step 24

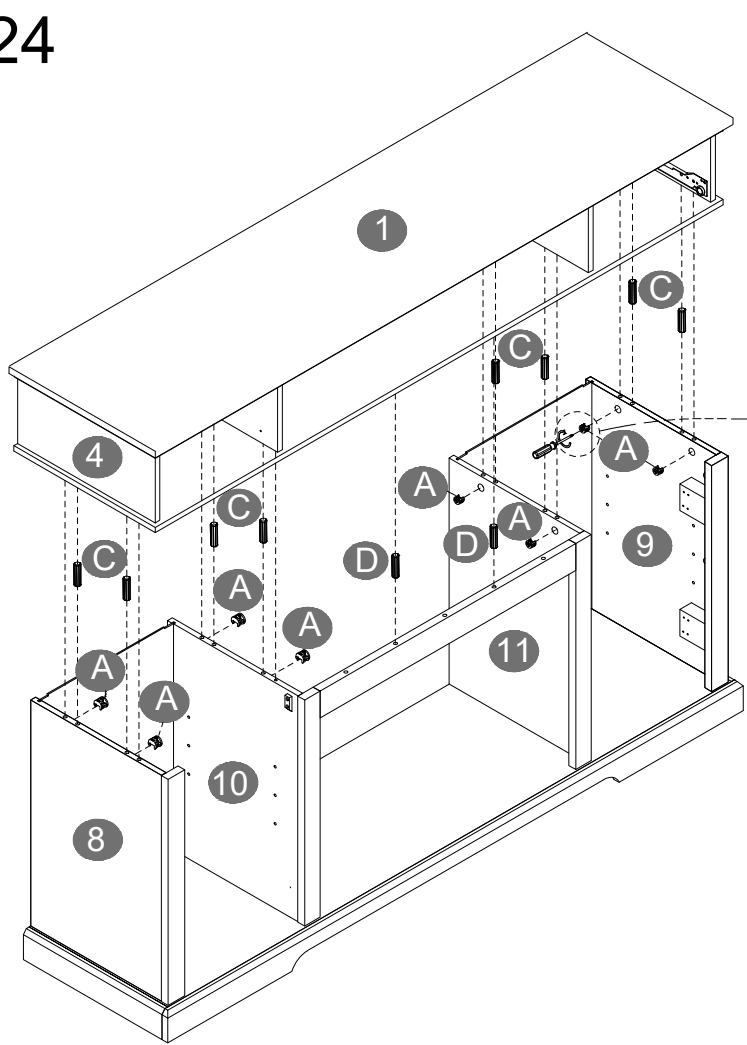

CAUTION: Heavy! You may need assistance with this step

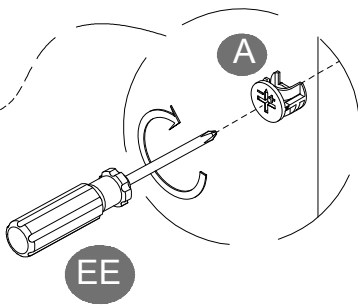


- A

×8
- C


×8
- D

×2


Step 25

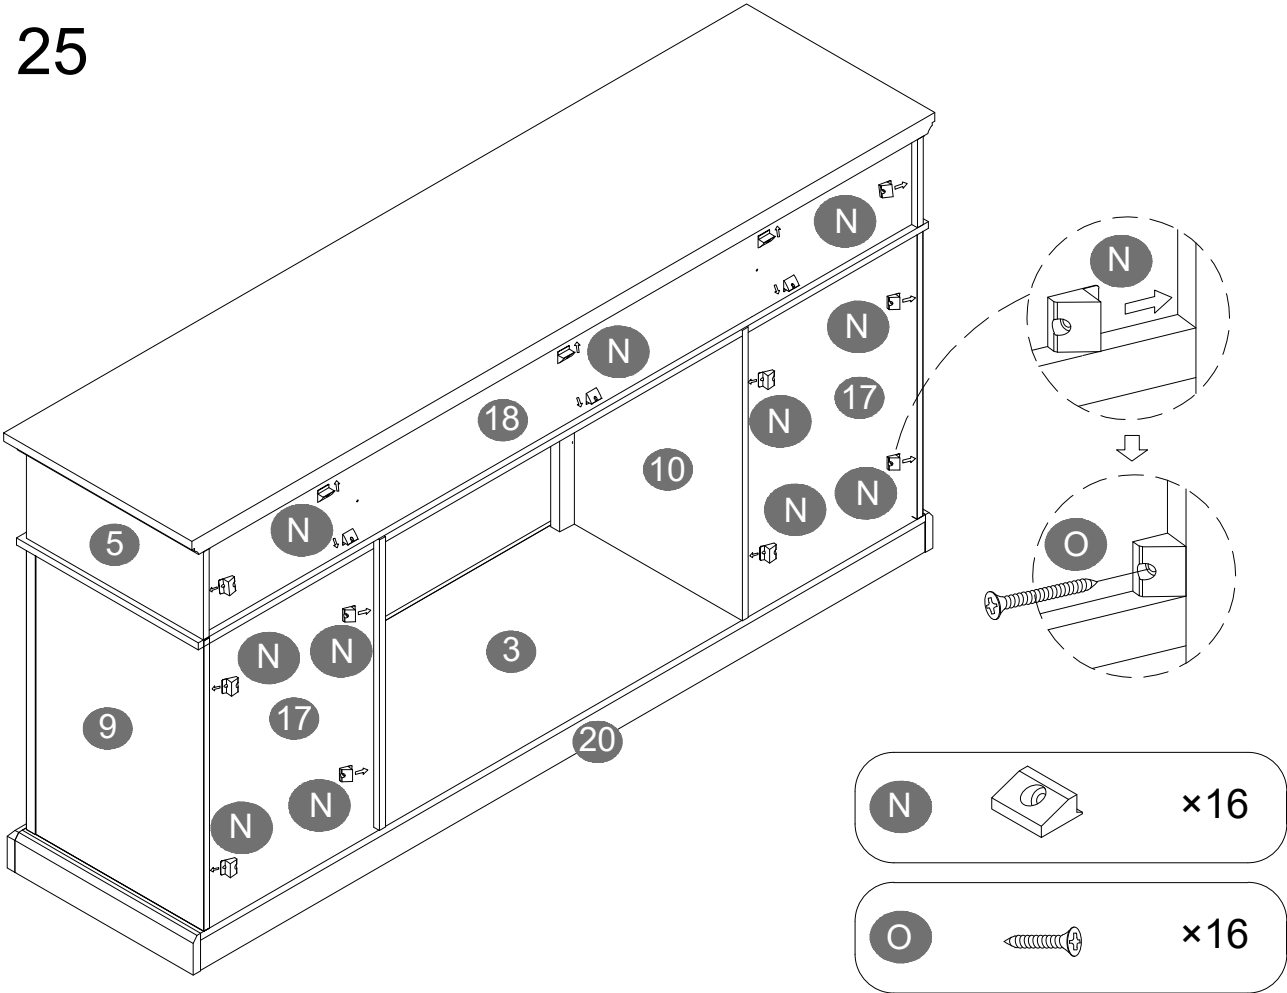


Step 26

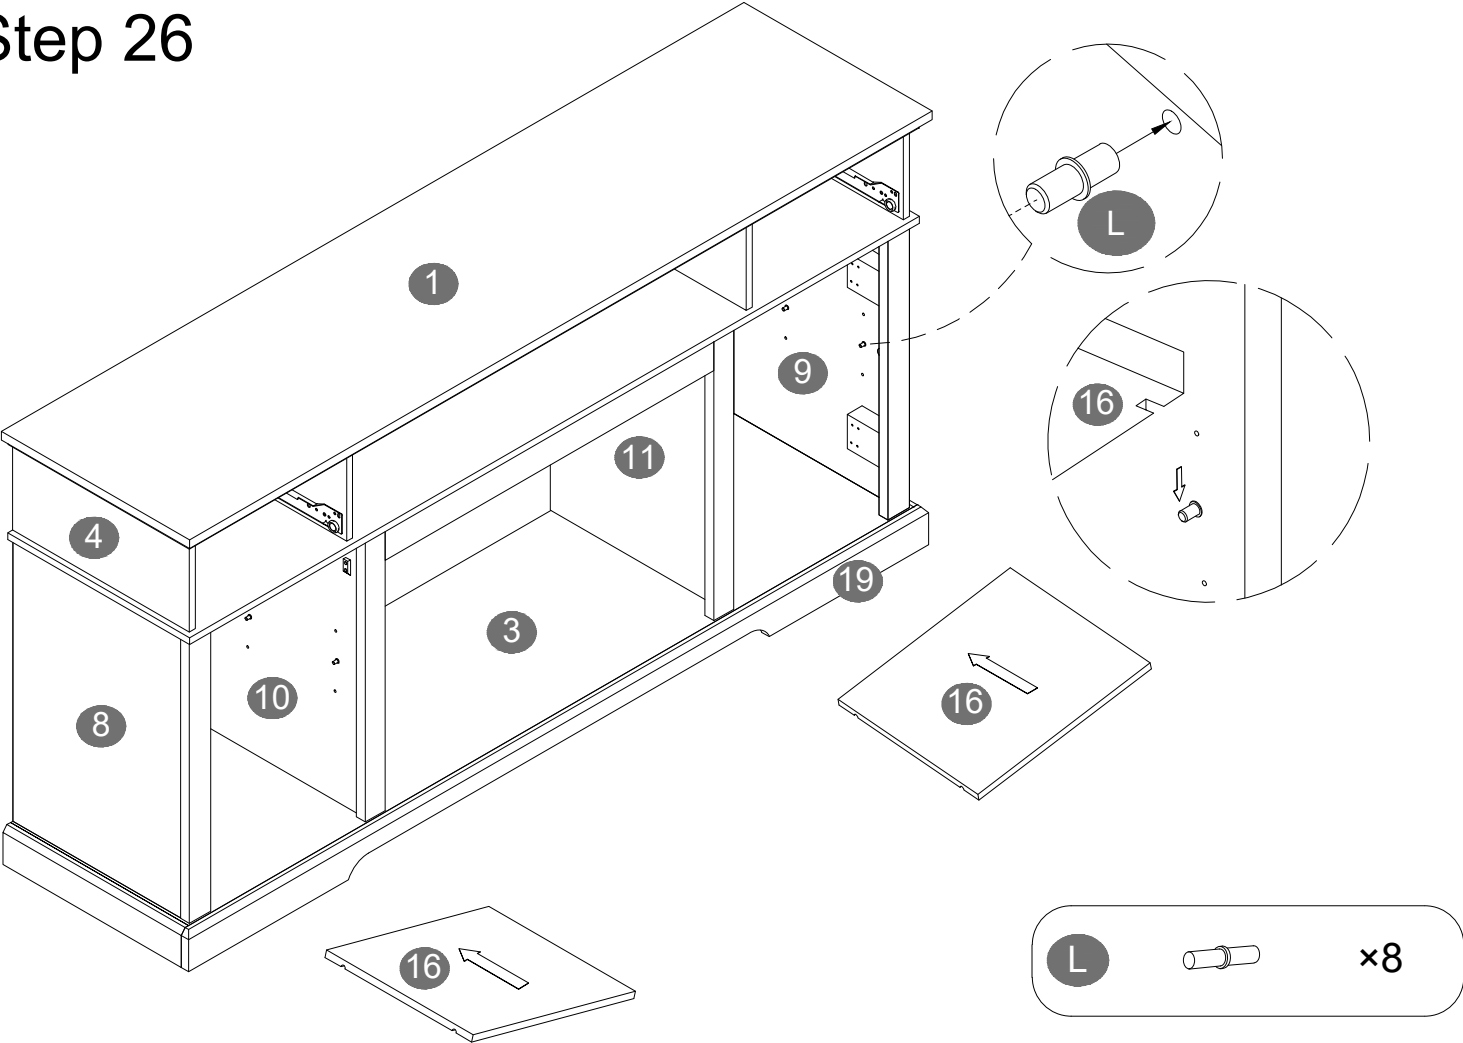


Step 27

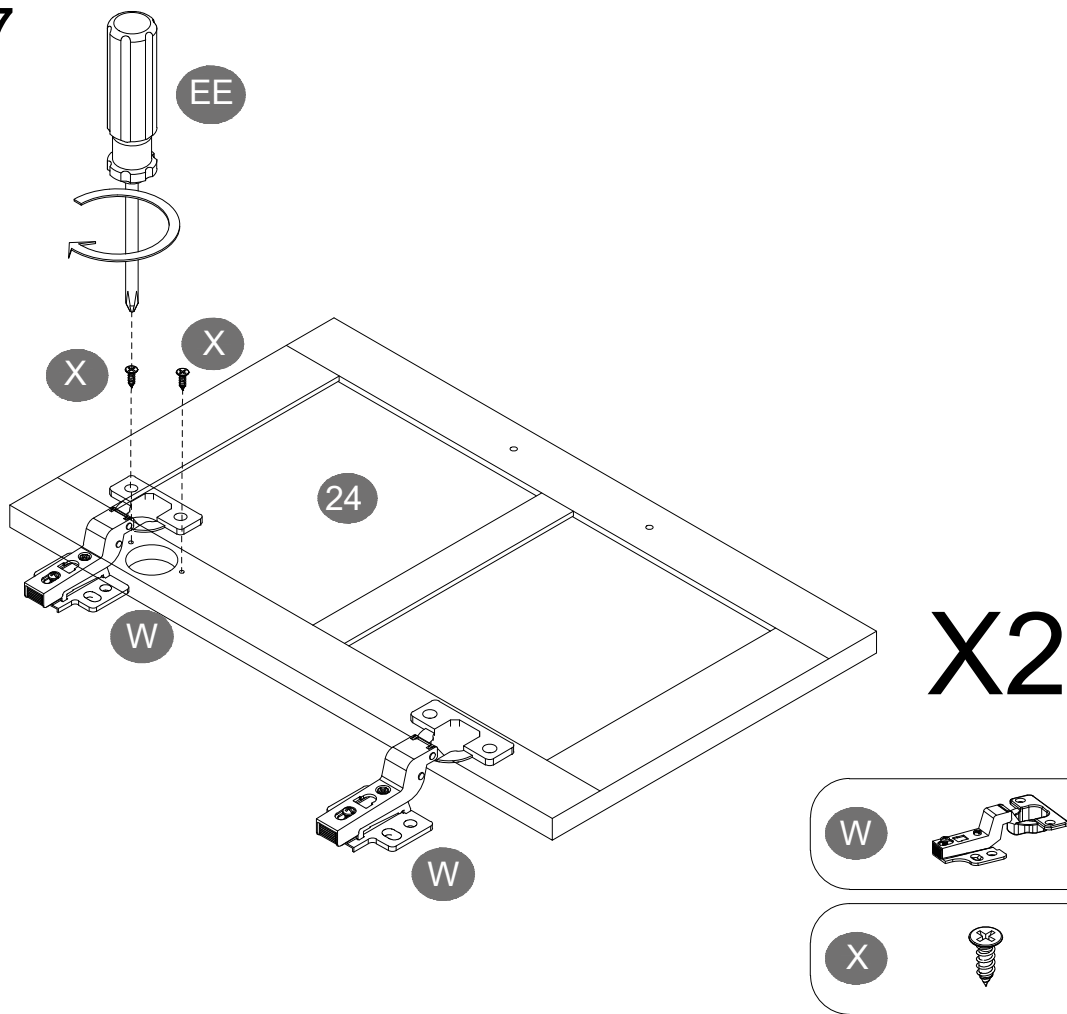



Step 28

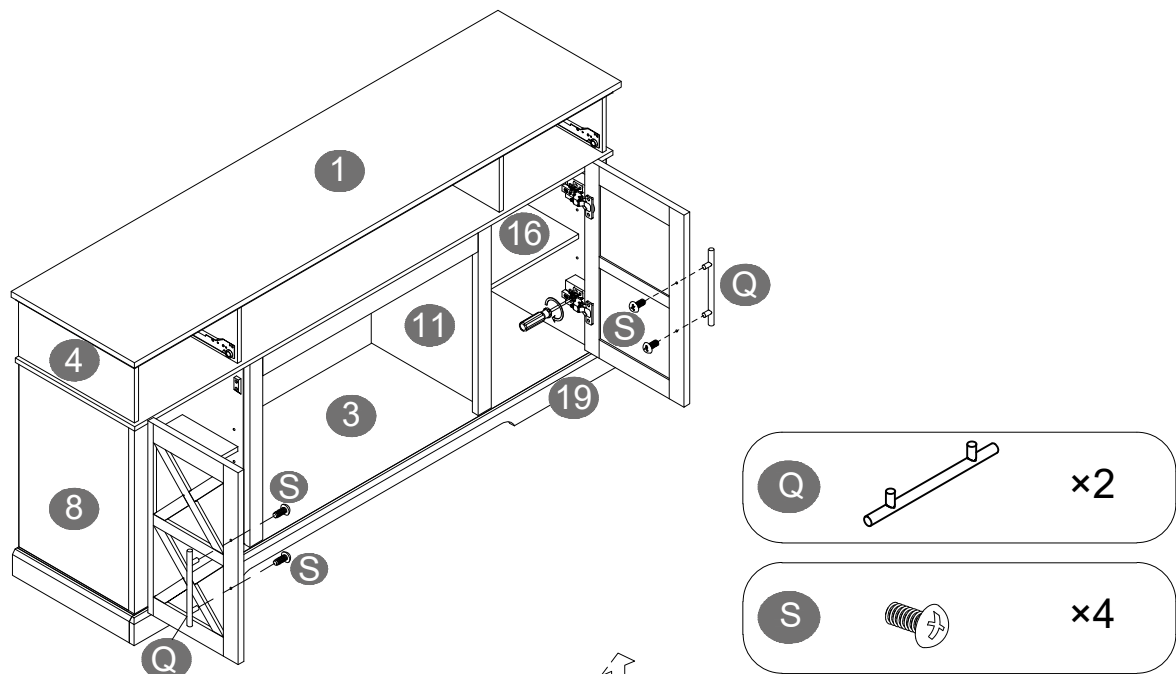



Concealed hinges are three-way adjustable.

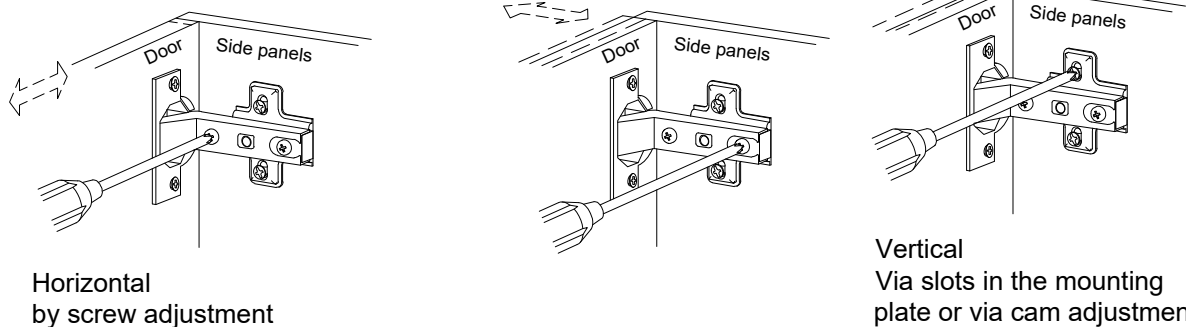


Step 29

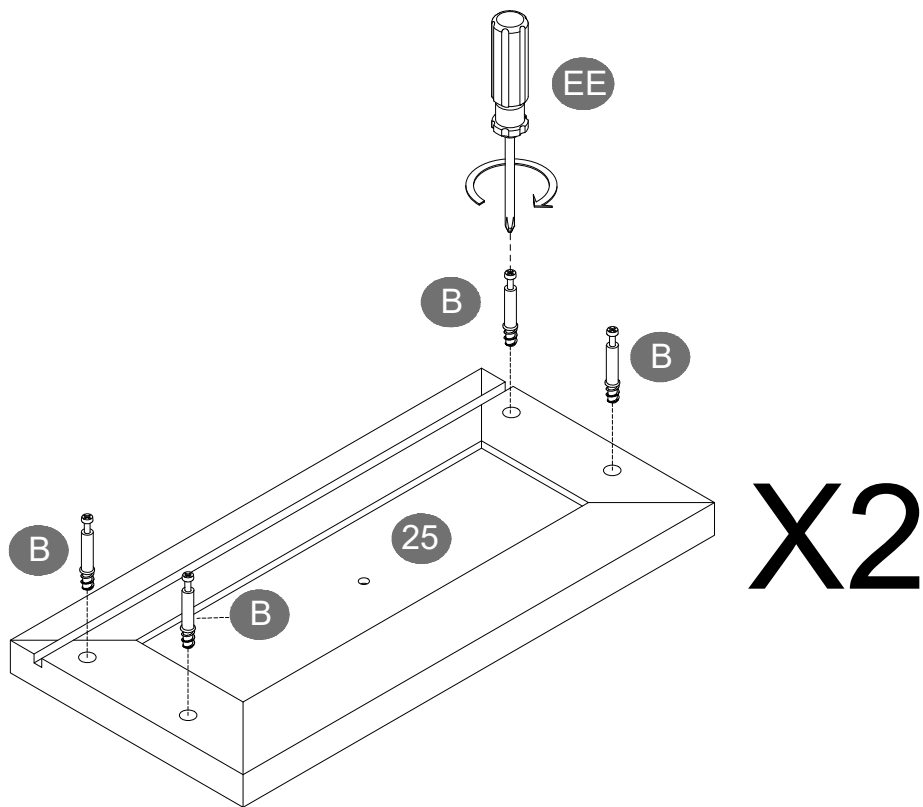




Step 30

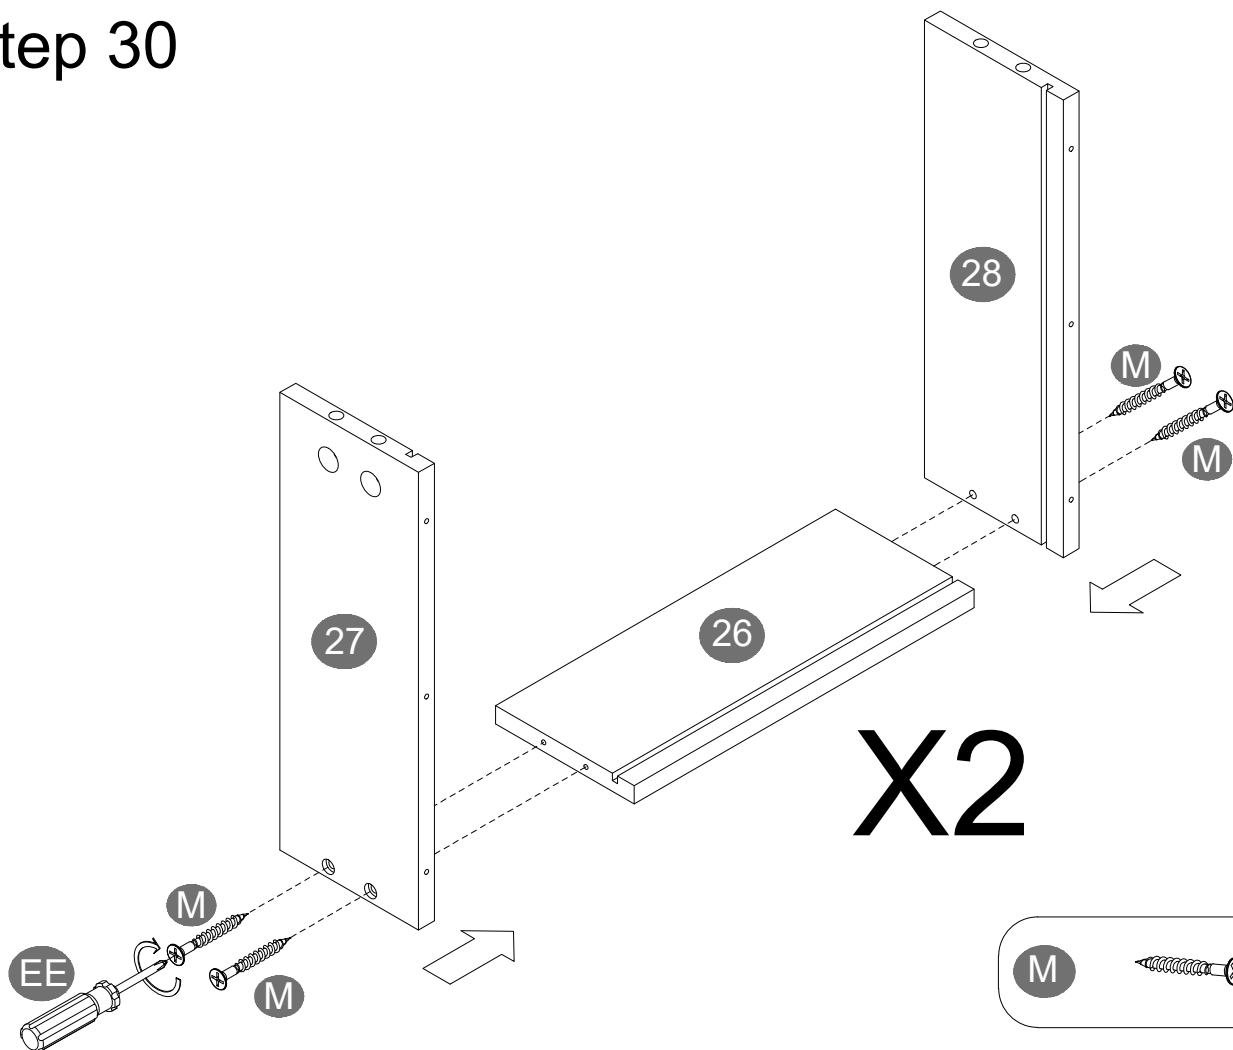


Step 31

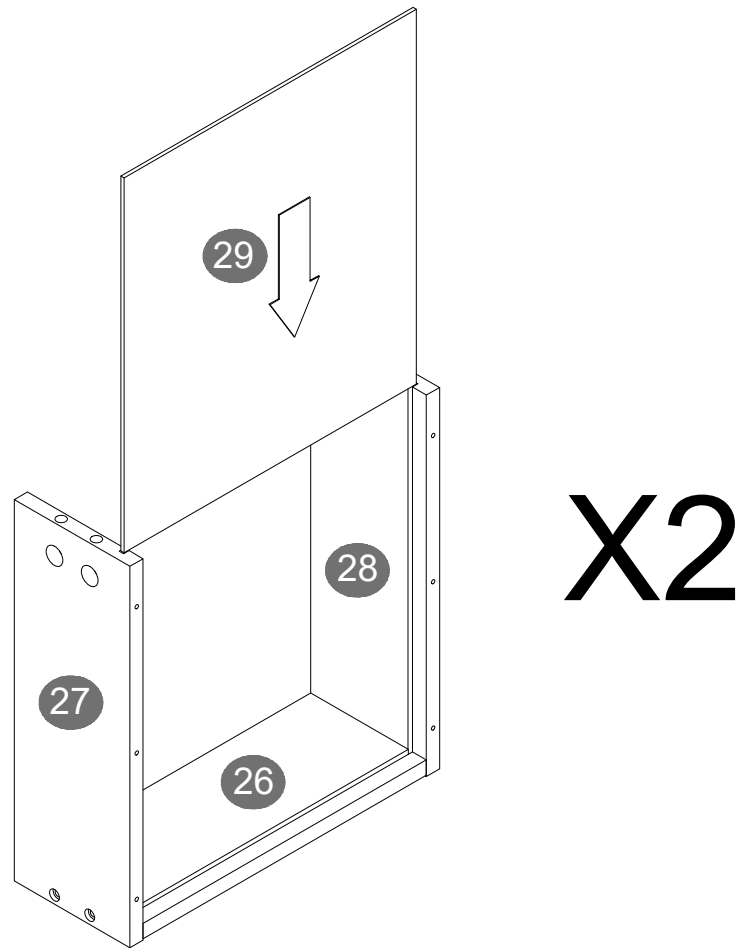

Step 32

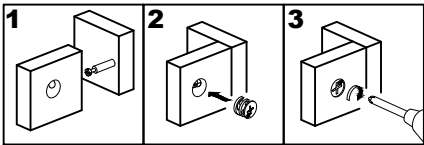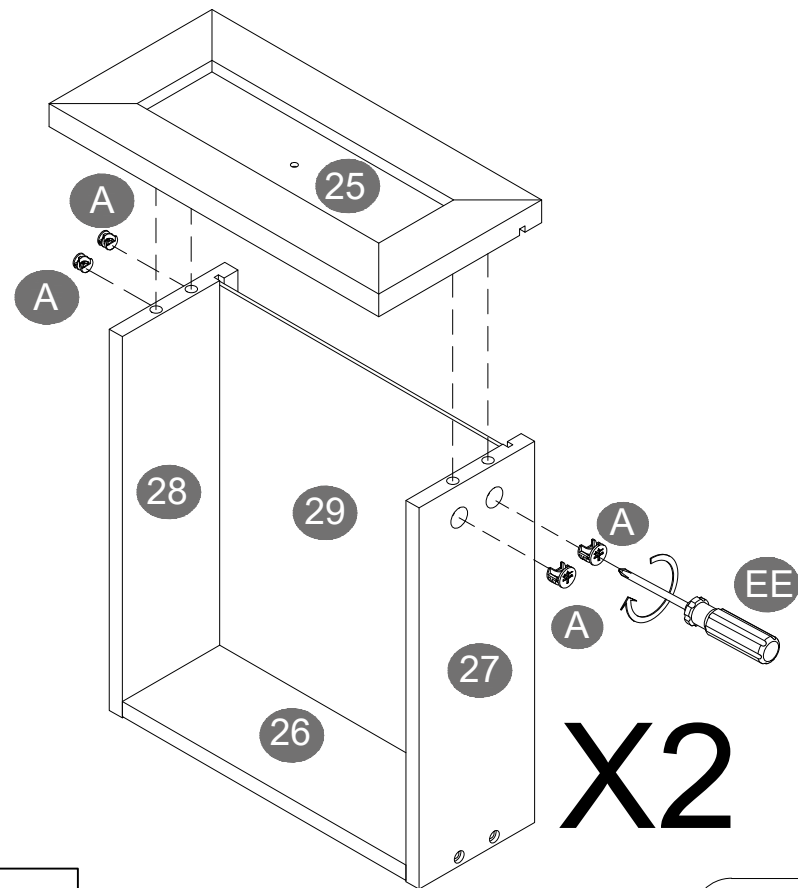


Step 33

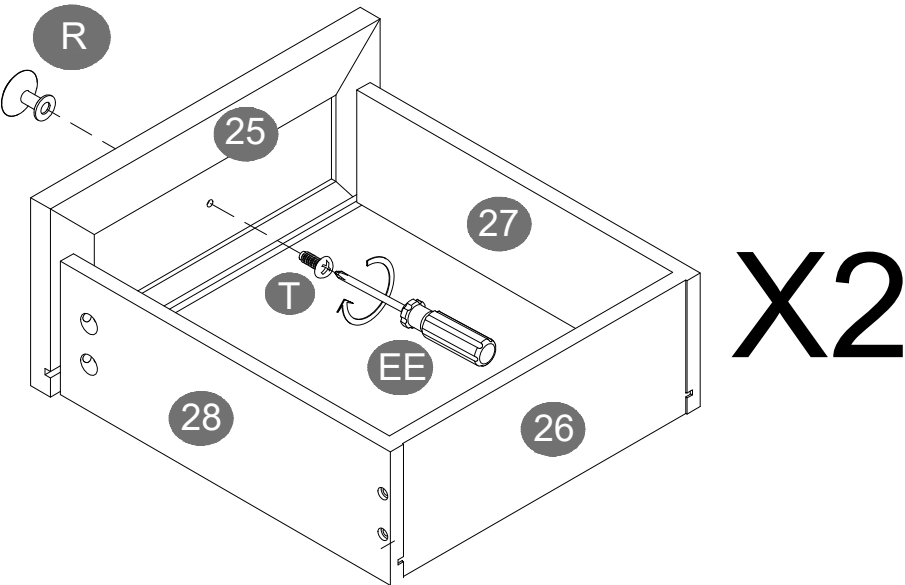


- R Knob x2
- T Screw x2

Step 34

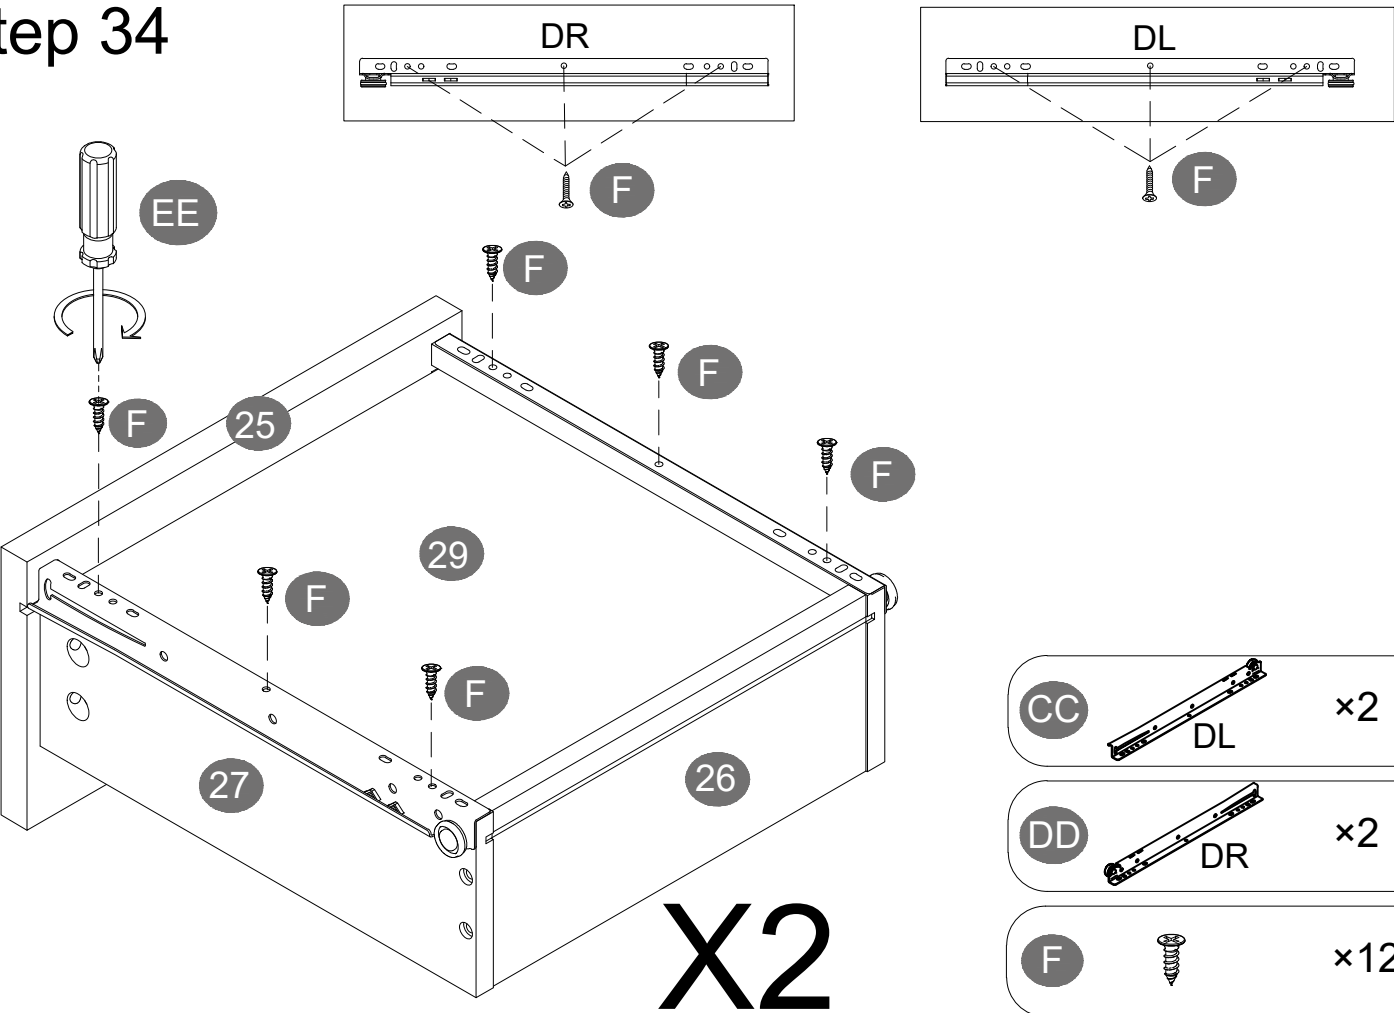


- CC DL x2
- DD DR x2
- F Screw x12


Step 35

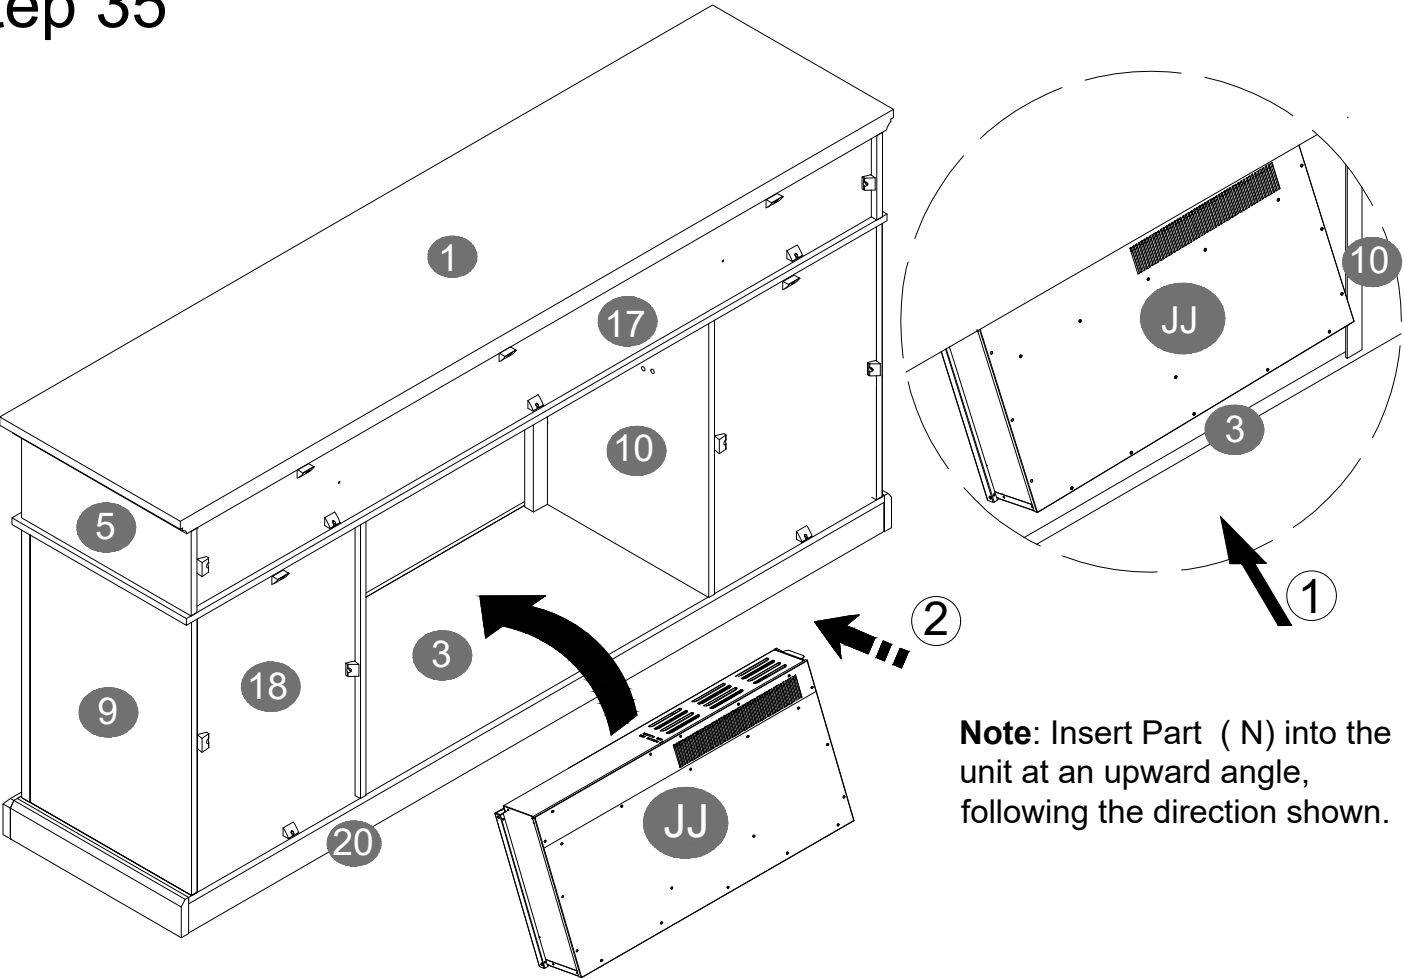


Step 36

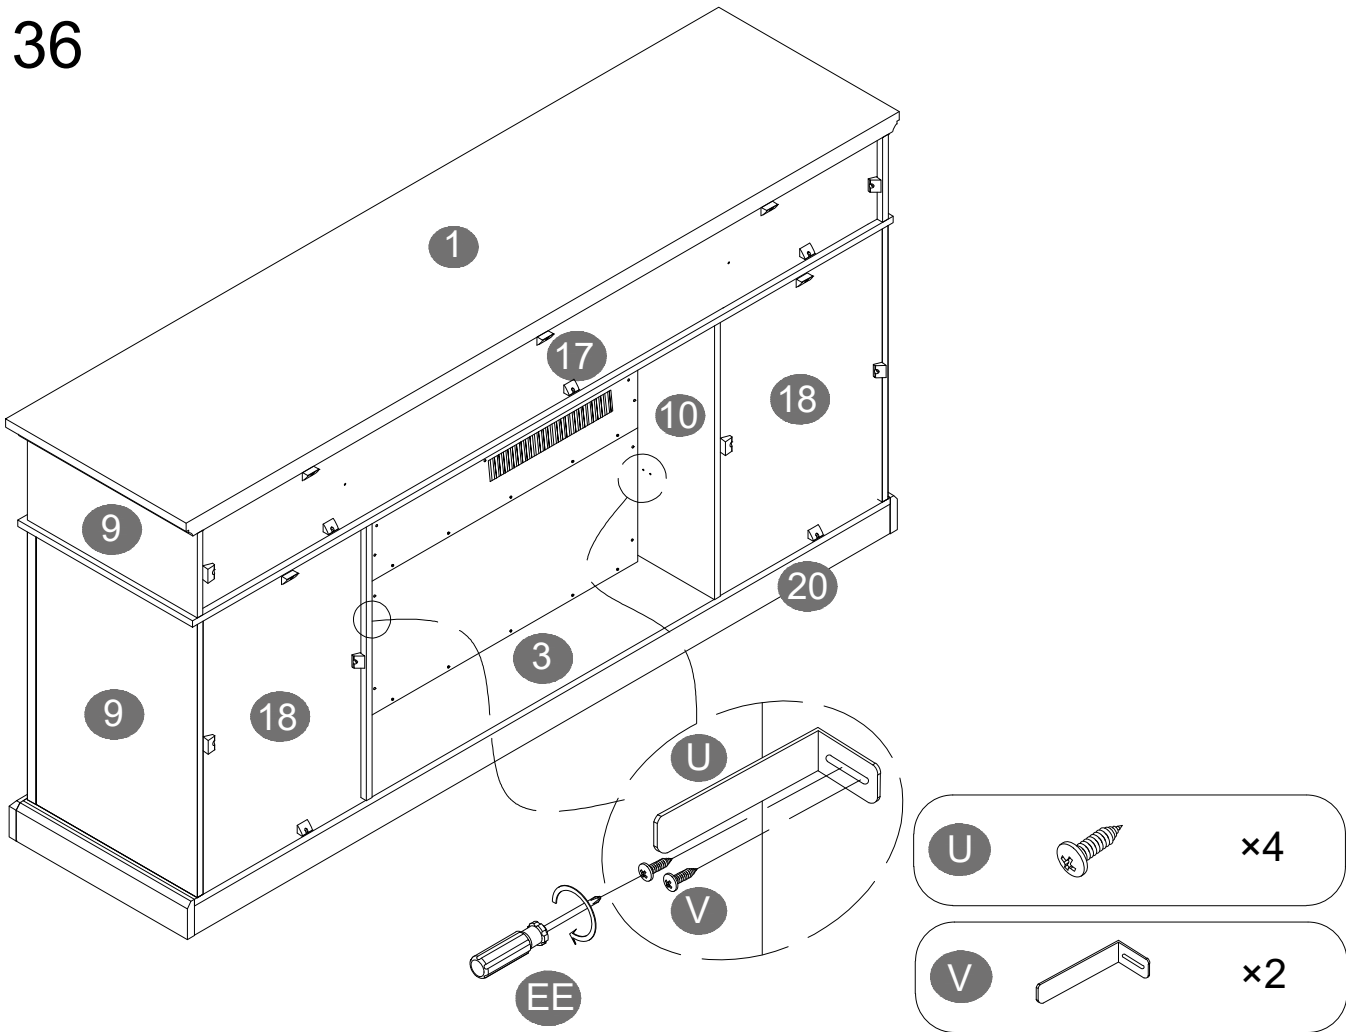


Step 37

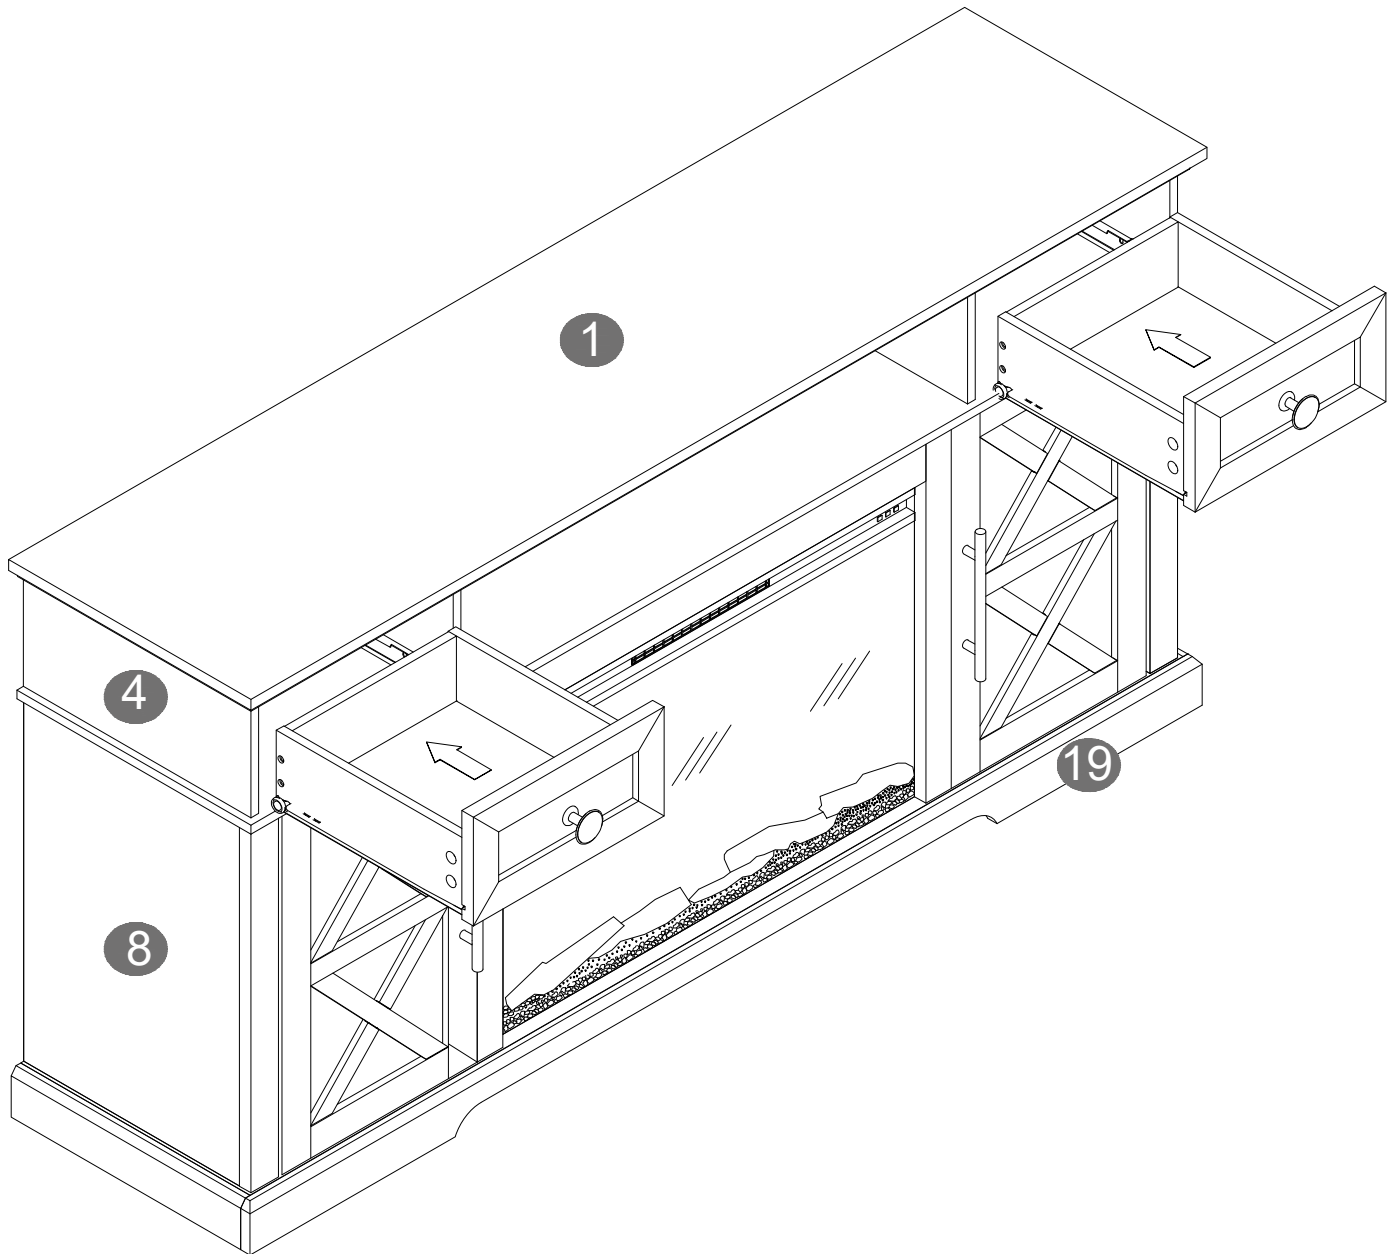

Step 38

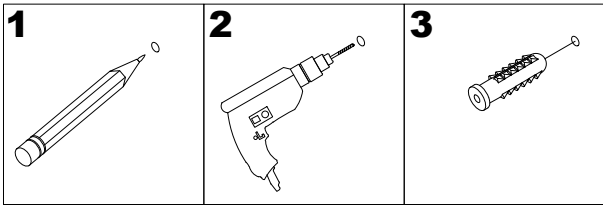

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

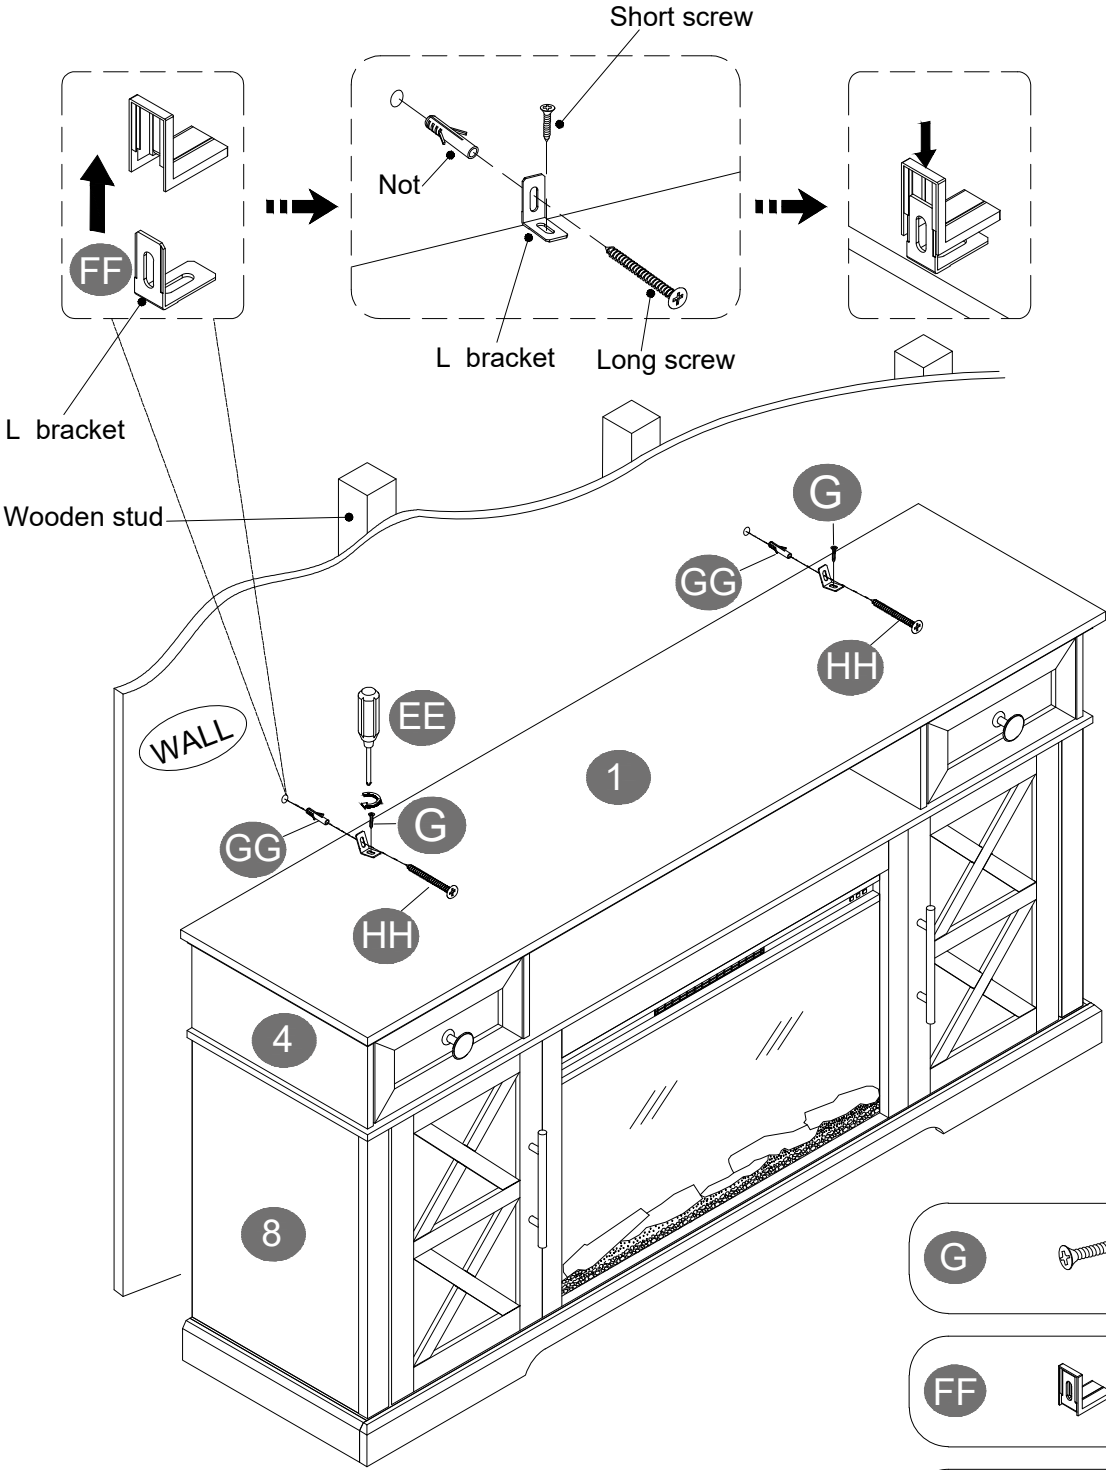

- G  x2
- FF  x2
- GG  x2
- HH  x2

Step 39

