



GENERAL INSTALLATION INSTRUCTION

RECESSED TISSUE PAPER HOLDER

PREPARATION

Tools Required for Assembly: (Not included)

- Pencil
- Electrical drill with 5/16 in. drill bit
- Hammer
- Philips head screwdriver
- Tape measure
- Drywall saw/Utility knife
- Level
- Safety glasses







! CAUTION: Drywall anchors are for drywalls only. Use tile anchors for tile surfaces. (Not included)

! IMPORTANT: Metal mounting bracket clamp and spring (part #783) are required but **NOT INCLUDED** with the Recessed Tissue Paper Holder. Please order part #783 before attempting to install.

INSTALLATION INSTRUCTIONS

1. Use drywall saw or utility knife to cut opening in wall: 5 1/4" x 5 1/4".
! Use caution when handling drywall/utility knife—always wear safety glasses. (Fig. 1)
2. Slip the spring onto the metal mounting bracket clamp
(Mounting Bracket, part #783 - NOT INCLUDED) and spin it so that the first coil is wrapped around bracket. (Fig. 2)
3. Position mounting bracket clamp and spring assembly inside wall opening so that spring pressure against inside of rear wall pushes arms of clamp against inside of front drywall. With the bracket and spring in place, place the front tissue holder cover over the wall opening and insert screws into accessory holes. (Fig. 3)
4. Screws should pierce the slotted openings on the face of the mounting bracket clamp. While holding the front tissue holder cover in place, tighten screws until they both become snug. (Fig. 4)

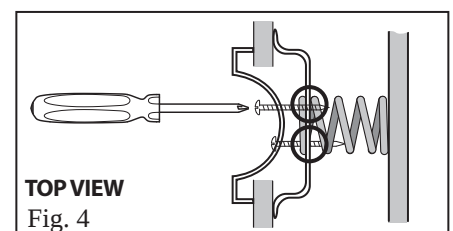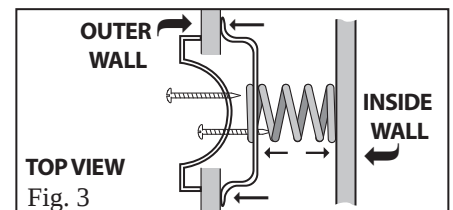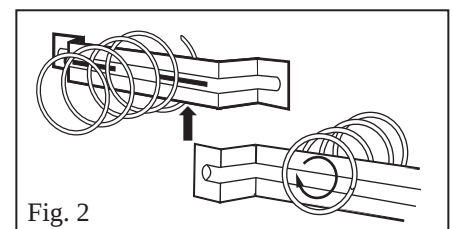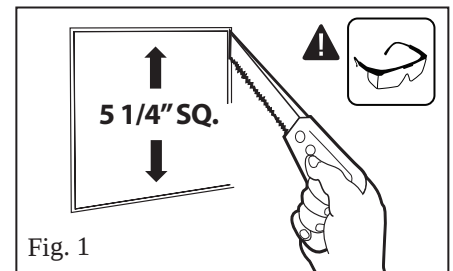

CARE AND MAINTENANCE

To maintain the beautiful luster finish, please use soft damp cloths when cleaning and never use any cleaning solvents.