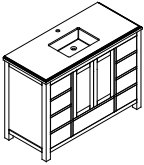





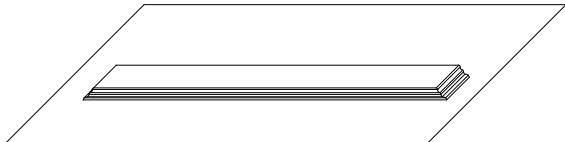
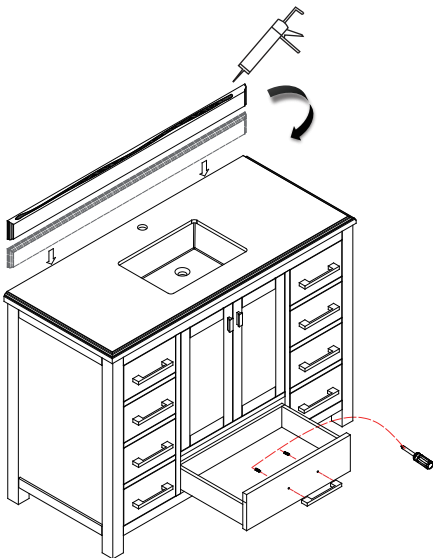
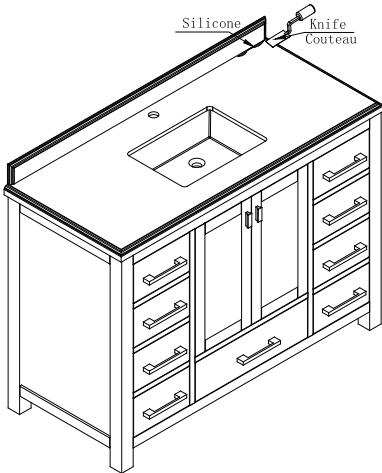
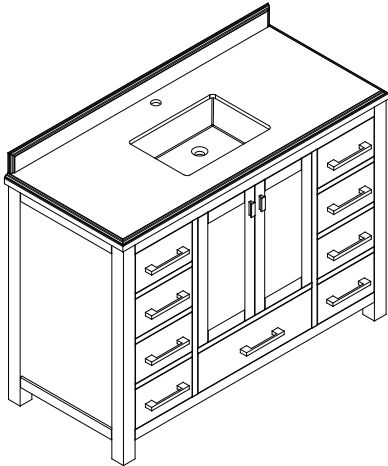


48"

Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
The vanity should be installed by a professional plumber.
Drainer pipe and trap are not included.

Part List	A (cabinet)  x1	B (backsplash)  x1	C (screw)  x14	D (handle)  x2	D (handle)  x9
Tools required	 screwdriver(phillips)	 silicone	 level	 tape measure	
Step 1 CAUTION Handle the backsplash with extreme care! Stone backsplash are very fragile. Always handle gently and place them flat on a soft surface. 			Step 2 		
Step 3 			Step 4   24h		