626-679-3588
service@getprohome.com
www.getprohome.com
162 Atlantic St, Pomona, CA 91768

ASSEMBLY INSTRUCTIONS

BATHROOM VANITY TOP

SCAN ME
PRODUCT INSTRUCTION VIDEO

MODEL GP-PW6622BS-3K8-D




NOTE: Any size of the vanity' s intallation steps are the same.

INSTALLATION STEPS


1.Prepare the Vanity: Make sure the vanity is in place and securely attached to the wall.

2.Seal the Edges: To prevent water damage and ensure a clean finish, apply a bead of silicone caulk along the edges where the countertop meets the vanity.

(For Example)

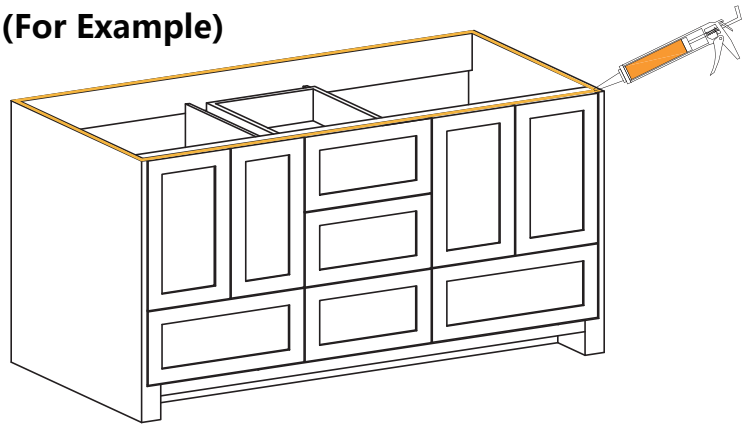

3.Attach the Countertop: Secure the solid surface countertop on the vanity.

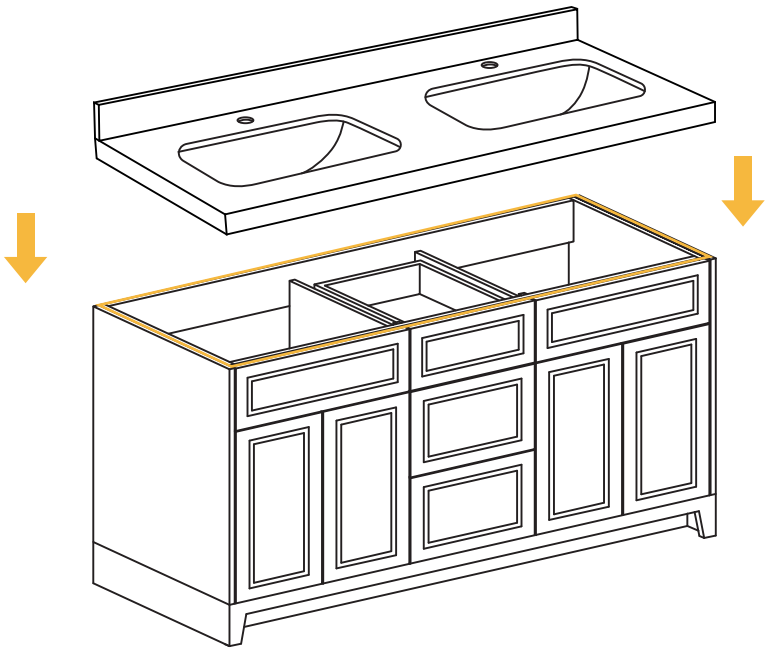

HOME SERVICES

SCAN ME

INSTALLATION VIDEO

Missing Part or Defective?

Please Contact the Customer Service Team

service@getprohome.com

626 679 3588