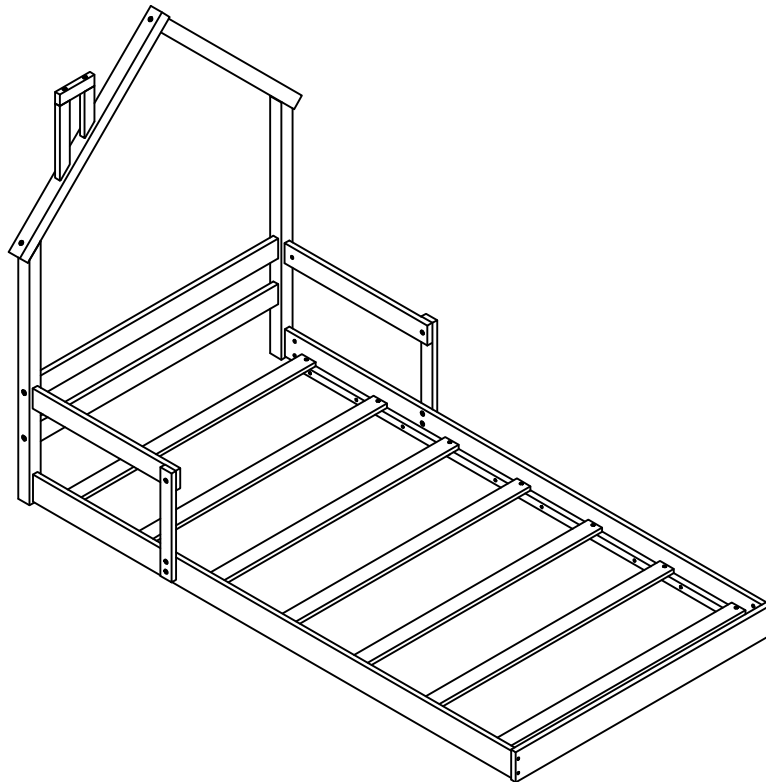
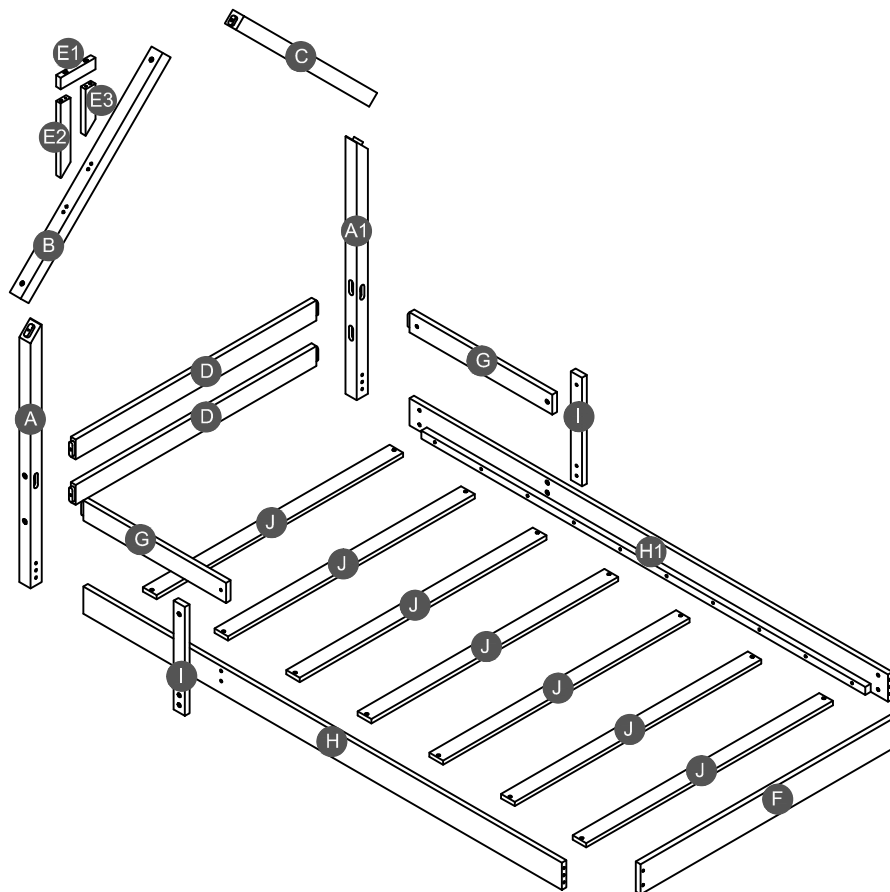


ASSEMBLY INSTRUCTIONS












TWIN PLATFORM BED, HOUSE SHAPE HB





Detail View




Part List

A  Leg (Left Front) - 1pc	A1  Leg (Left Back) - 1pc	B  Upper (Left Front) - 1pc
C  Upper (Left Back) - 1pc	D  Lower horizontal bar - 2pcs	E1  Upper horizontal bar - 1pc
E2  Upper Vertical bar (Front) - 1pc	E3  Upper Vertical bar (Back) - 1pc	F  Horizontal bar FB - 1pc
G  Short guard rail - 2pcs	H  Side rail (Front) - 1pc	H1  Side rail (Back) - 1pc
I  Vertical guard rail - 2pcs	J  Slat - 7pcs	

Hardware List


1  Ø8*30mm Wood dowel (8pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (4pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)
4  (Ø12)1/4"*35mm Hex-Head bolts (6pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(14pcs)	6  (Ø12)1/4"*65mm Hex-Head bolts (7pcs)
7  Ø4*30mm Wood screws (14pcs)	8  (1/4")4.5*58mm Allen key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

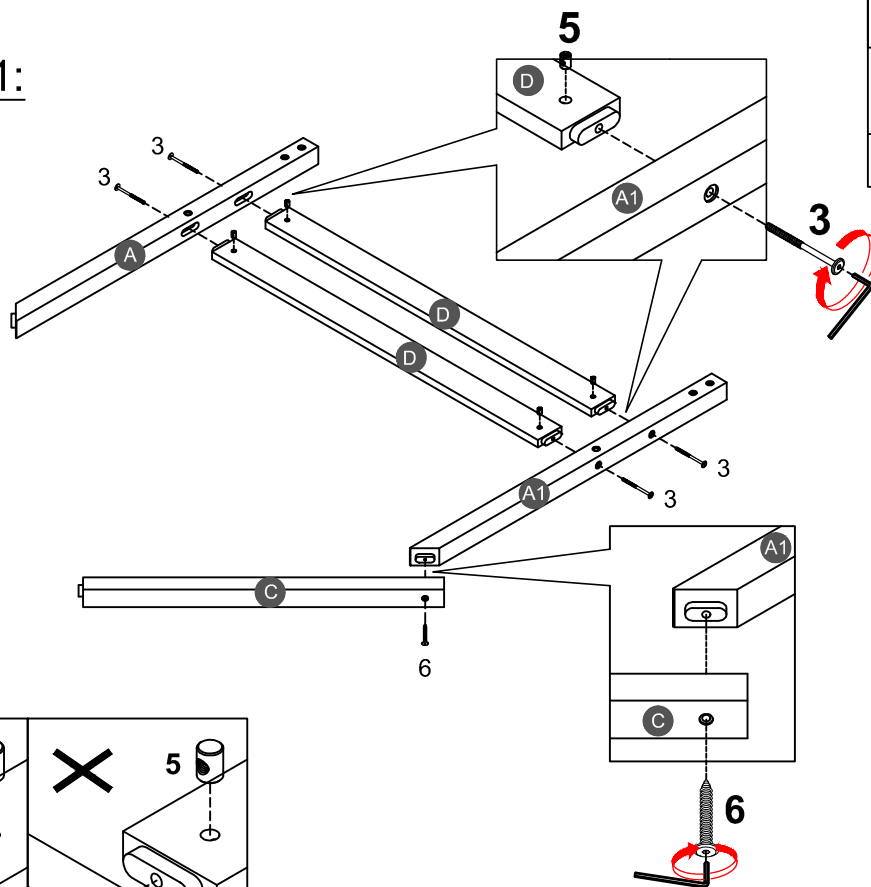STEP 1:




3		5	
4PCS		4PCS	
		6	
		1PC	

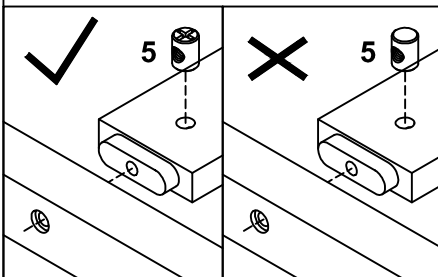

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

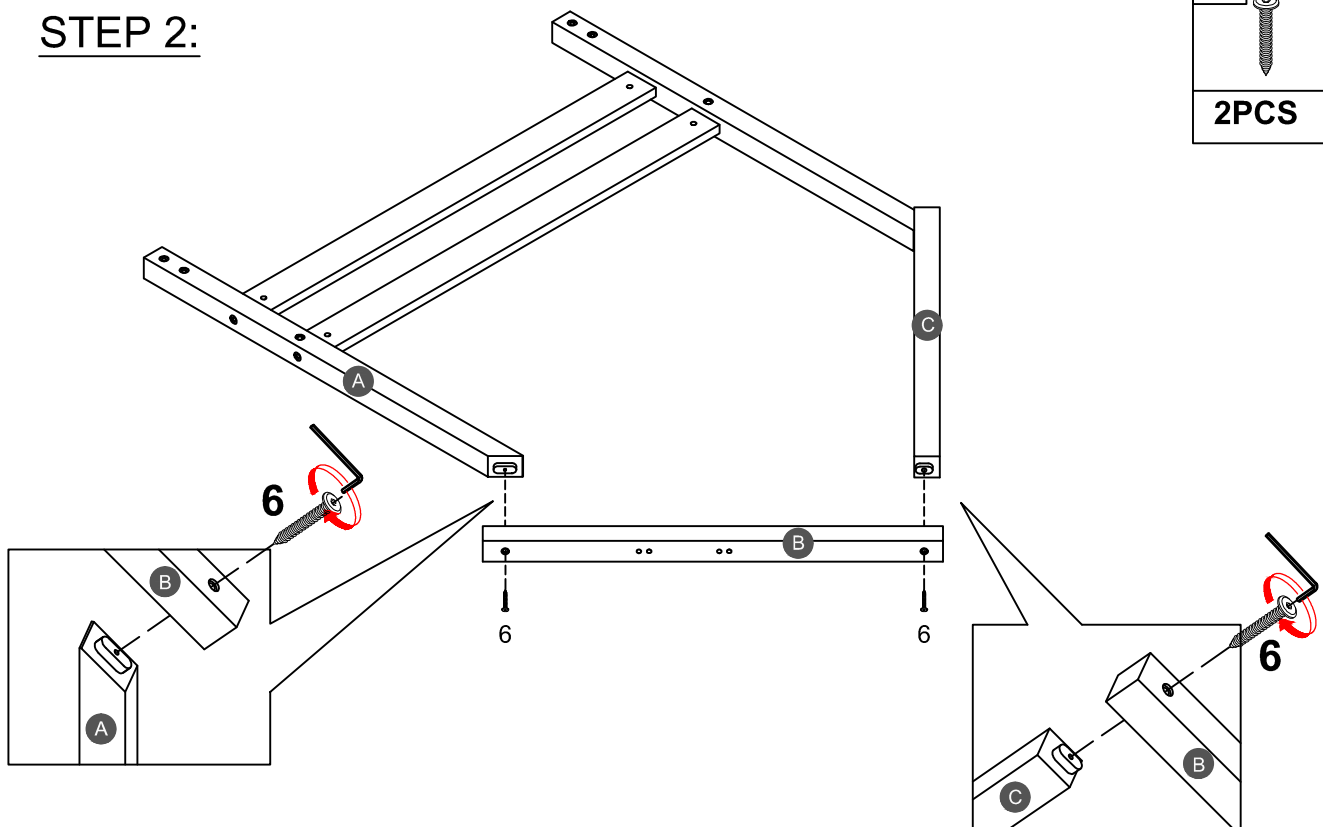
STEP 2:



6	
2PCS	


STEP 3:

1		6	
2PCS		2PCS	

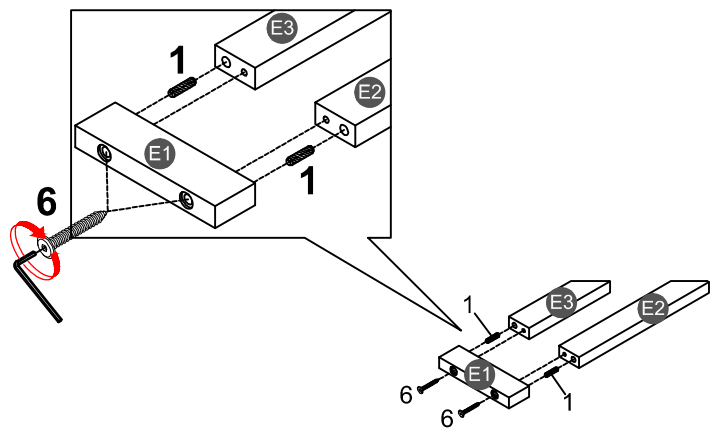


STEP 4:


1		6	
2PCS		2PCS	

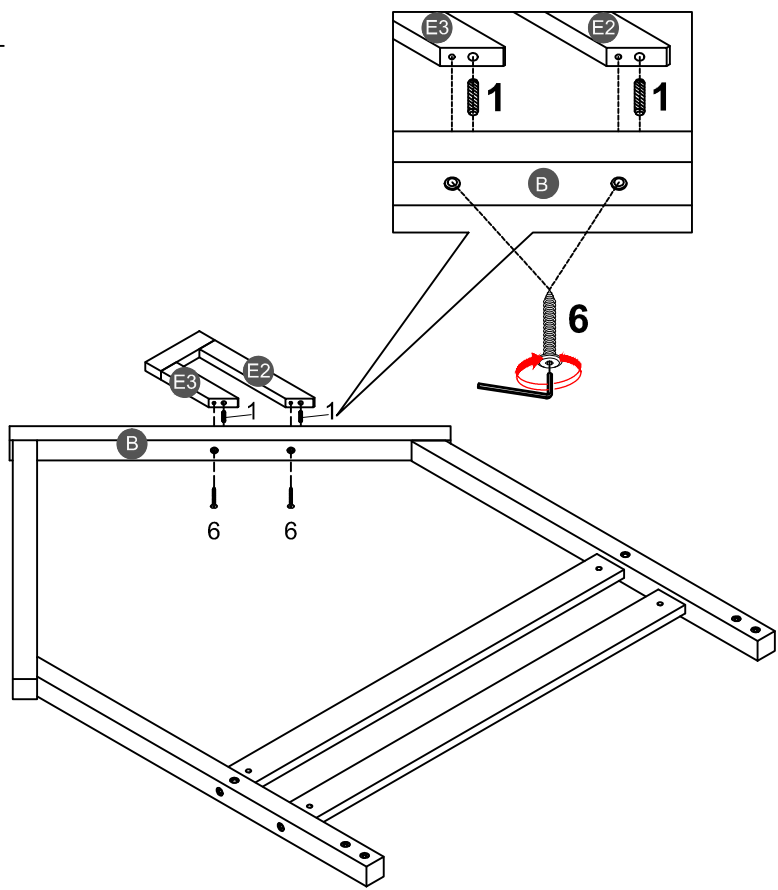

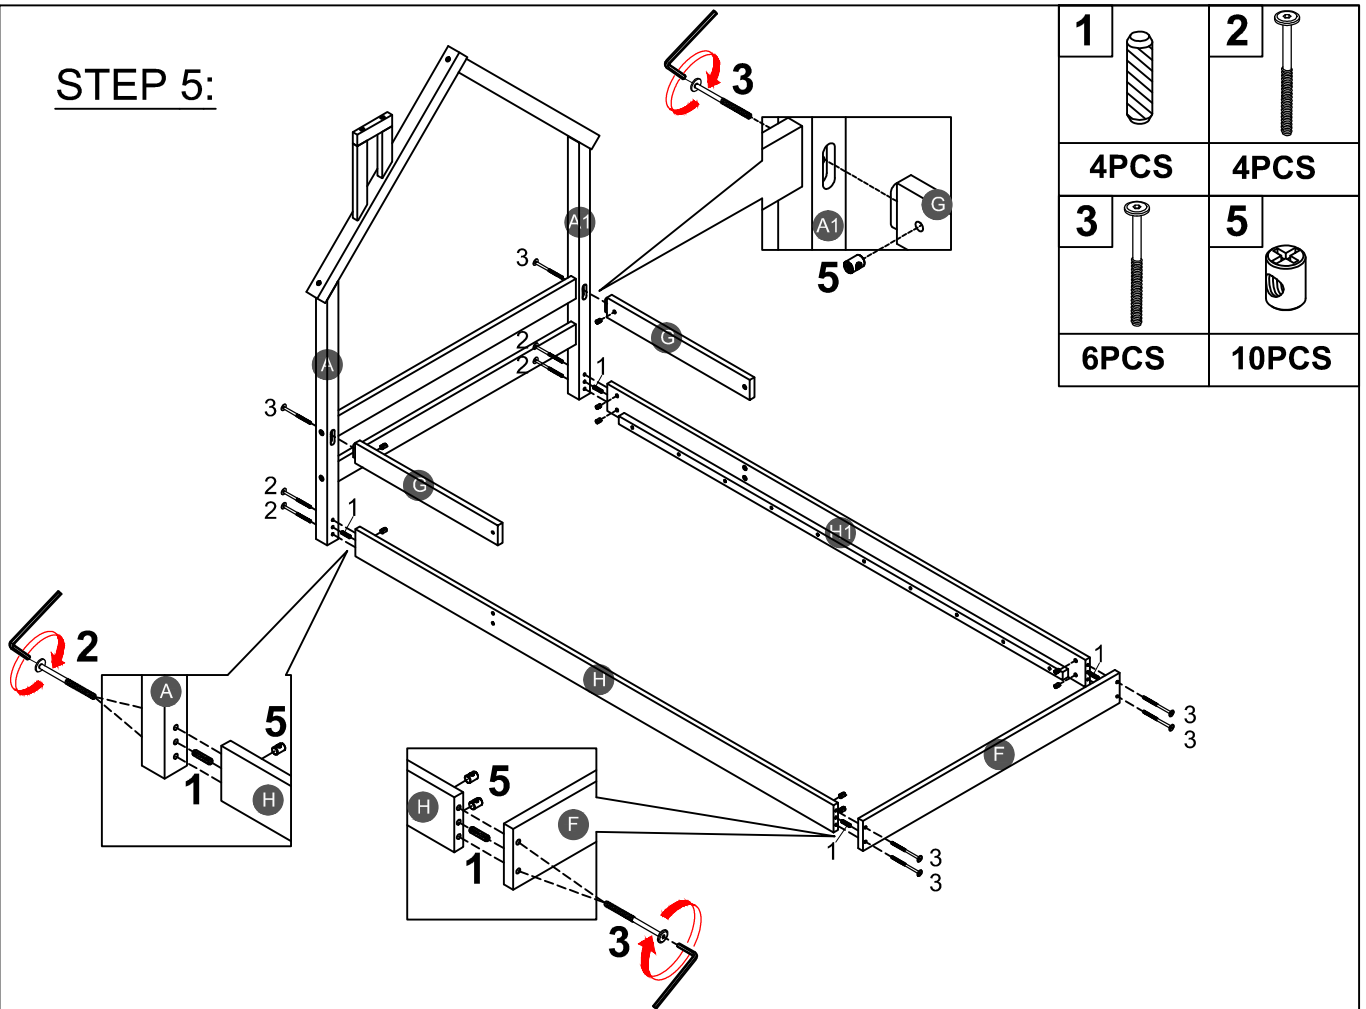STEP 5:



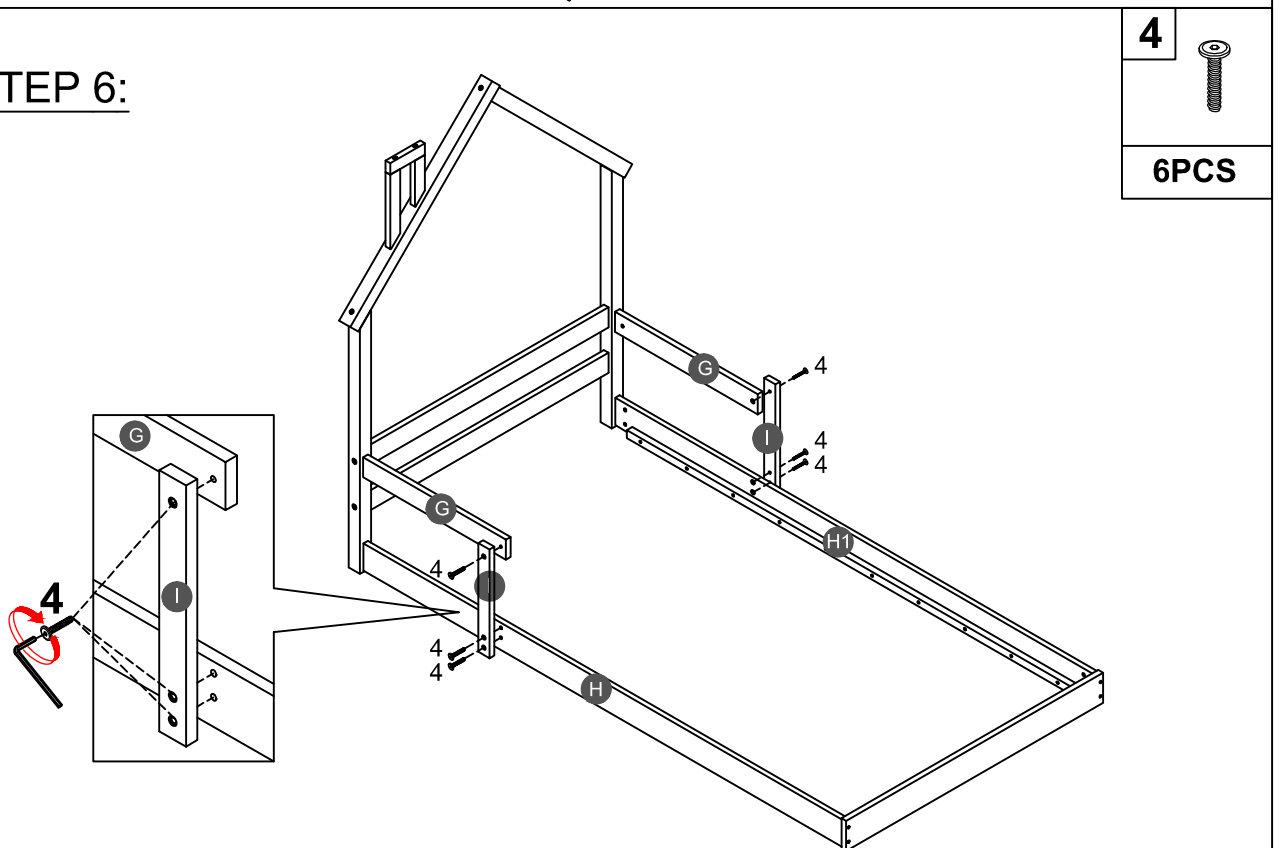STEP 6:





STEP 7:

7



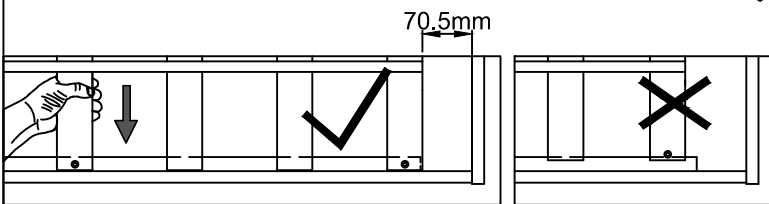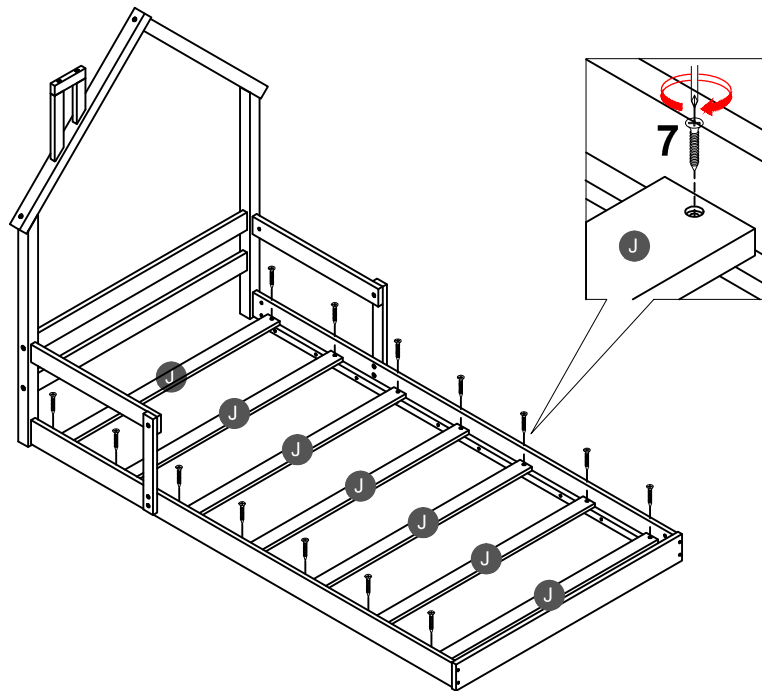14PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

