

BOOKCASE

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY TIPS :







- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



PARTS IDENTIFICATION:

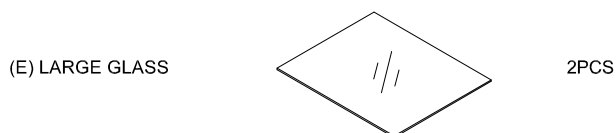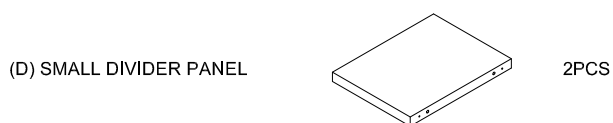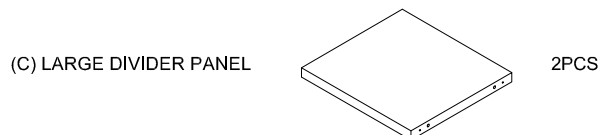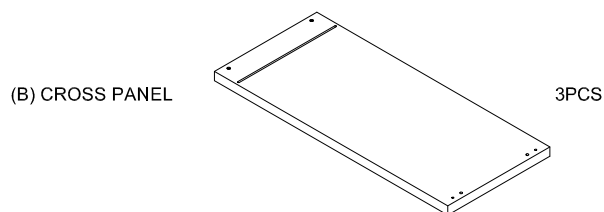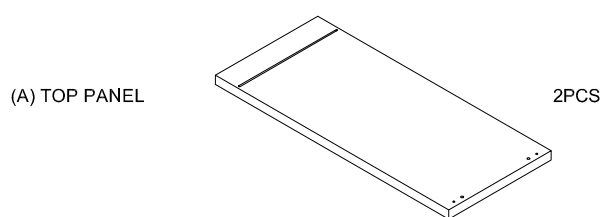

Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1PC	3	BOLT $\varnothing$ 9.5x55mm FOR BOTTOM PANEL		16PCS
2	WOODEN DOWEL $\varnothing$ 8x30mm		16PCS	4	STICKER $\varnothing$ 20mm		3PCS

ASSEMBLY INSTRUCTION




STEP 1 : Insert Wooden dowel (2) into the holes on the two sides of Large divider panel (C) & Small divider panel (D).

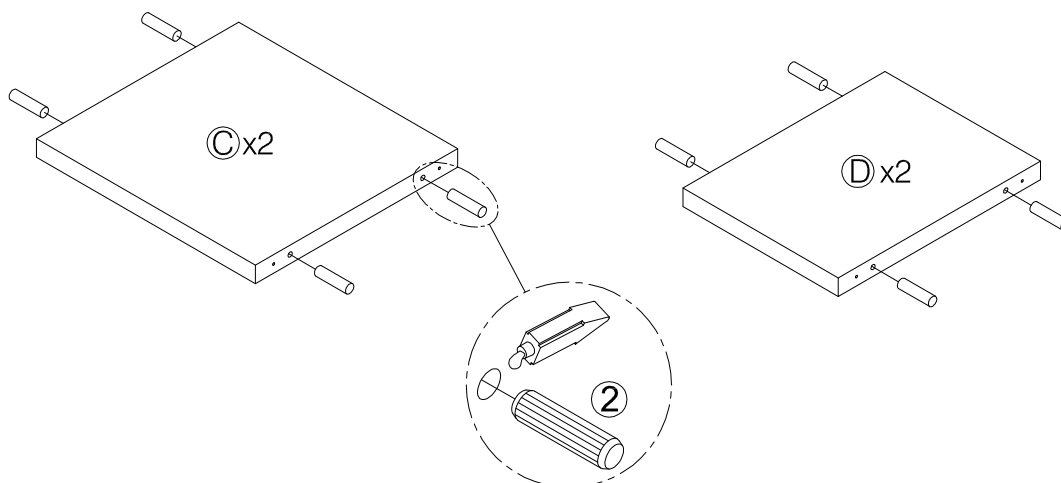

Apply glue on all wooden dowels to ensure integrity of the structure.

STEP 2 : Insert Large glass (E) into the groove between Top panel (A) & Cross panel (B).

In the meantime, connect Top panel (A) & Cross panel (B) with Large divider panel (C) by Bolt (3). Cover Bolts with wood colored stickers (4).

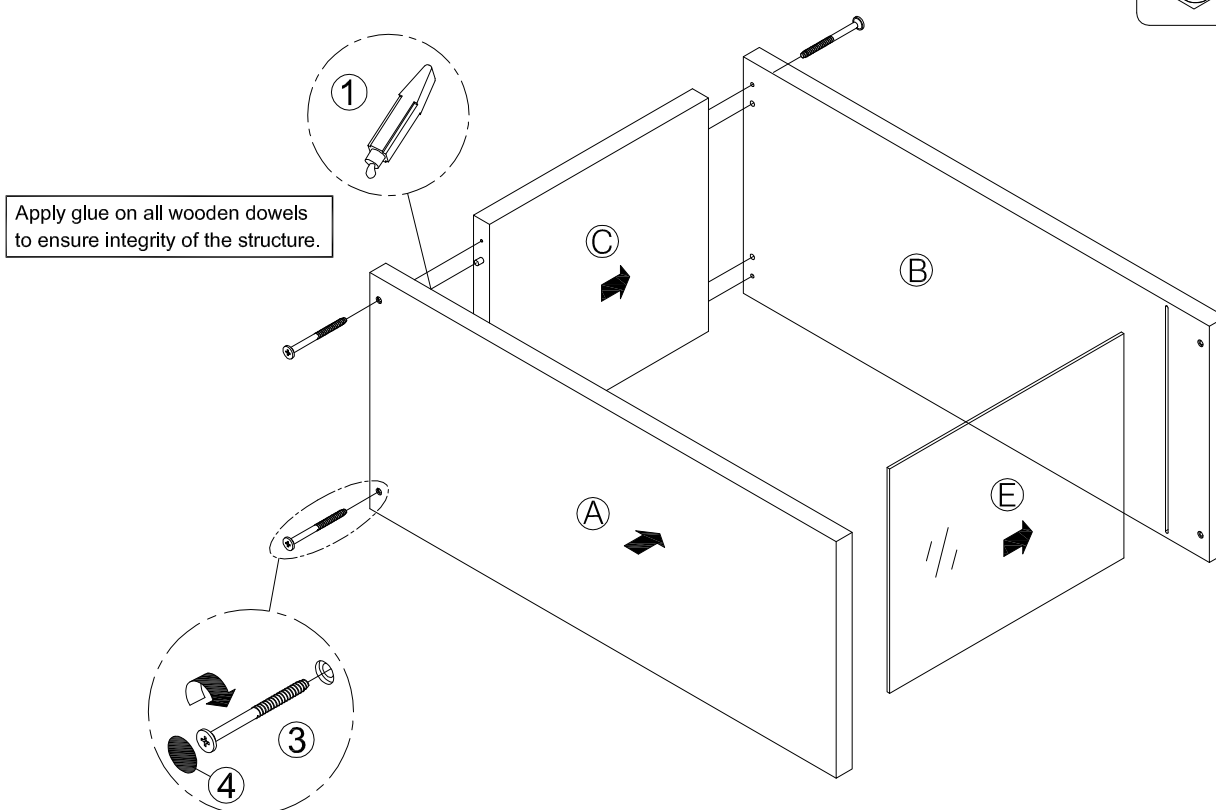




Apply glue on all wooden dowels to ensure integrity of the structure.

STEP 3 : Insert Small glass (F) into the groove between Cross panel (B).

Connect Cross panel (B) with Small divider panel (D) by Bolt (3).




Cover Bolts with wood colored stickers (4).

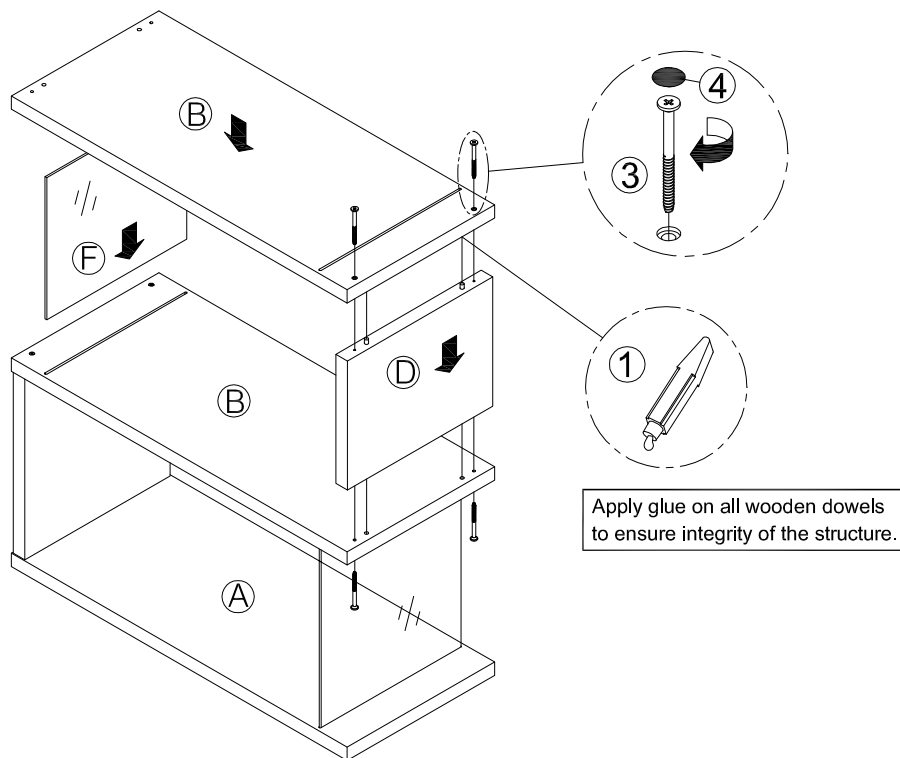

STEP 4 : Insert Large glass (E) into the groove on and between Cross panel (B).




Connect Cross panel (B) with Large divider panel (C) by Bolt (3).

Cover Bolts with wood colored stickers (4).

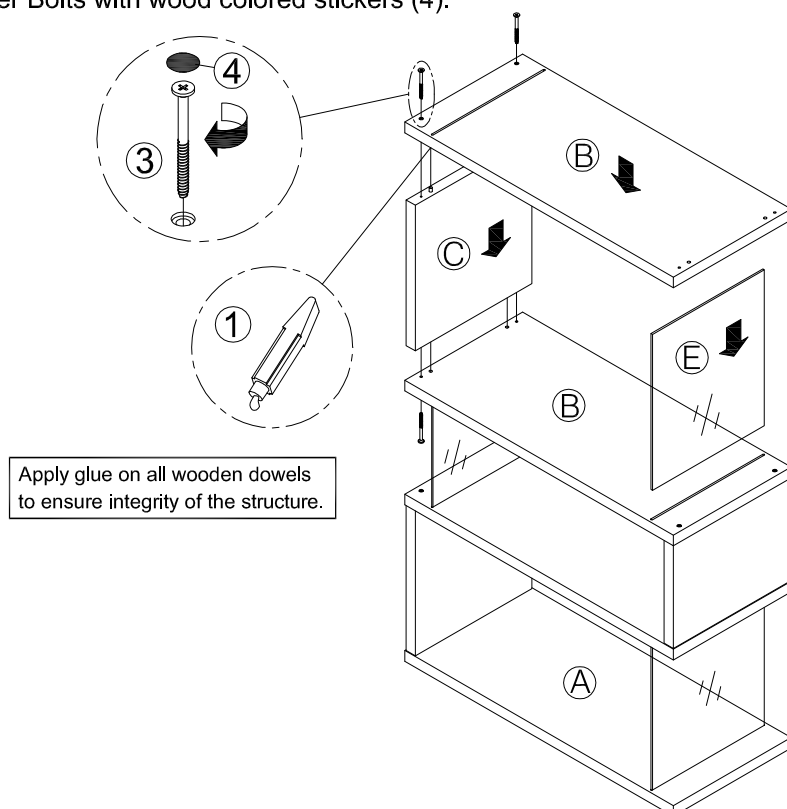

ASSEMBLY INSTRUCTION

STEP 5 : Insert Small glass (F) into the groove between Top panel (A) & Cross panel (B).
Connect Top panel (A) & Cross panel (B) with Small divider panel (D) by Bolt (3).
Cover Bolts with wood colored stickers (4).

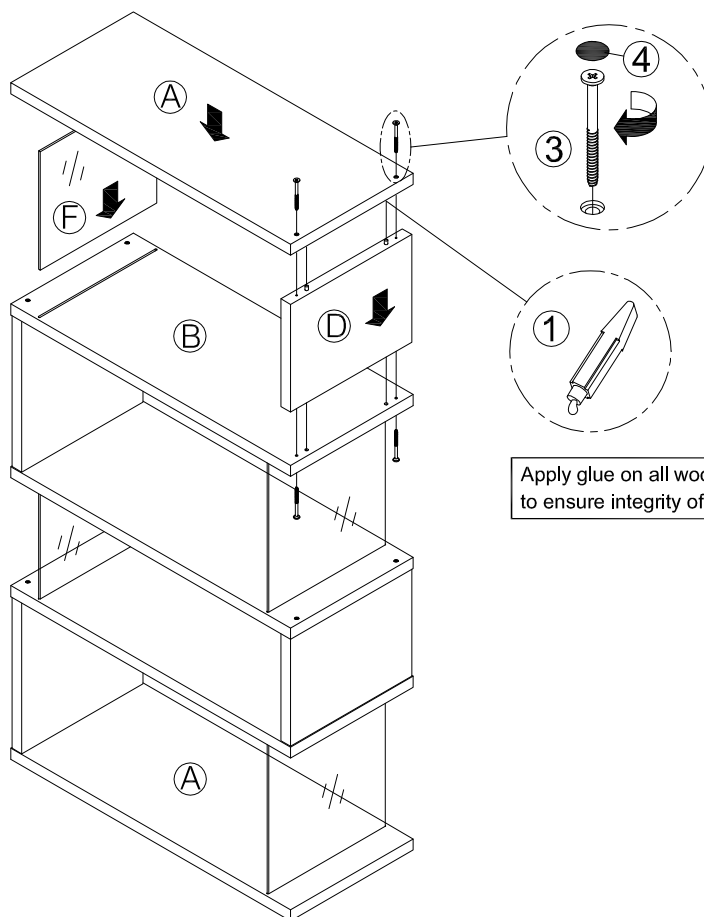

Apply glue on all wooden dowels to ensure integrity of the structure.

FINISH

