

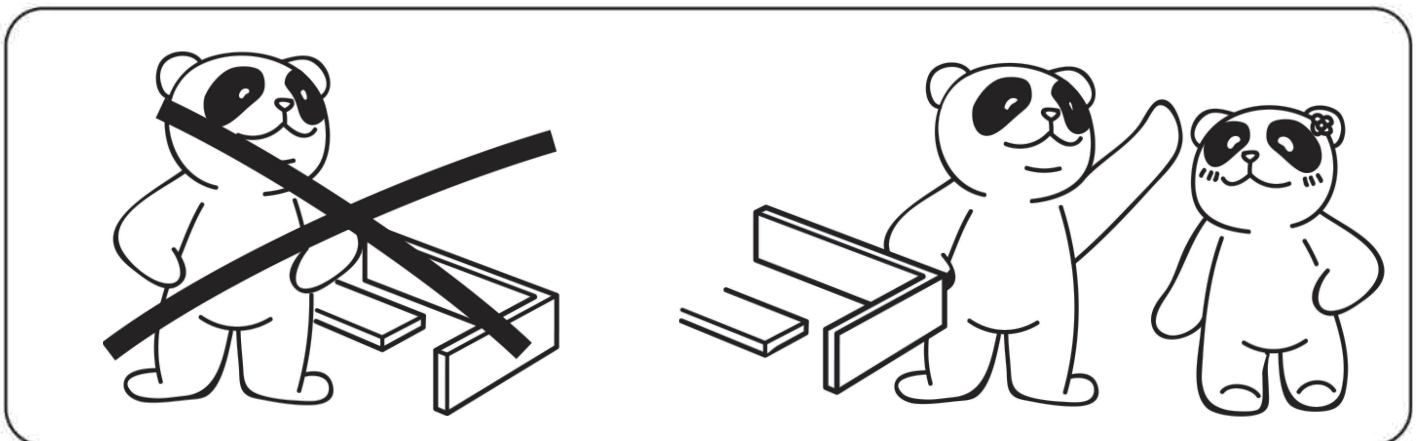
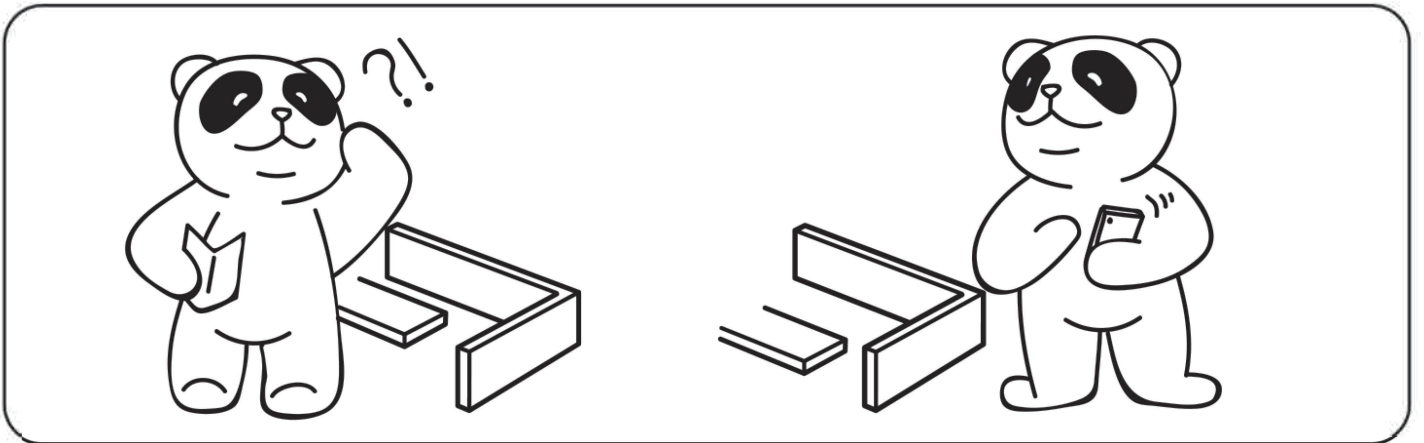
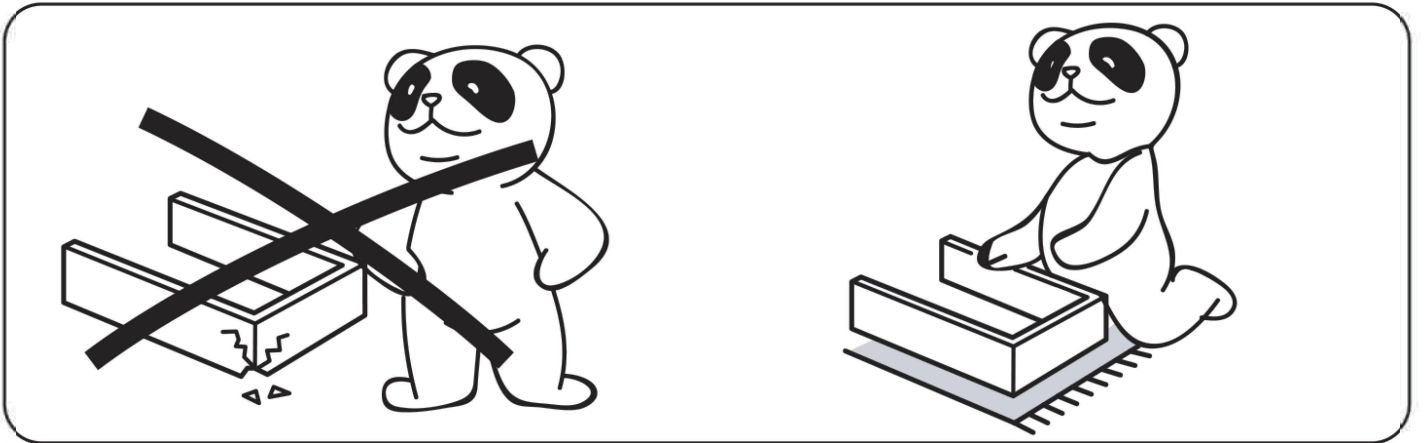


AJ-DJ505334

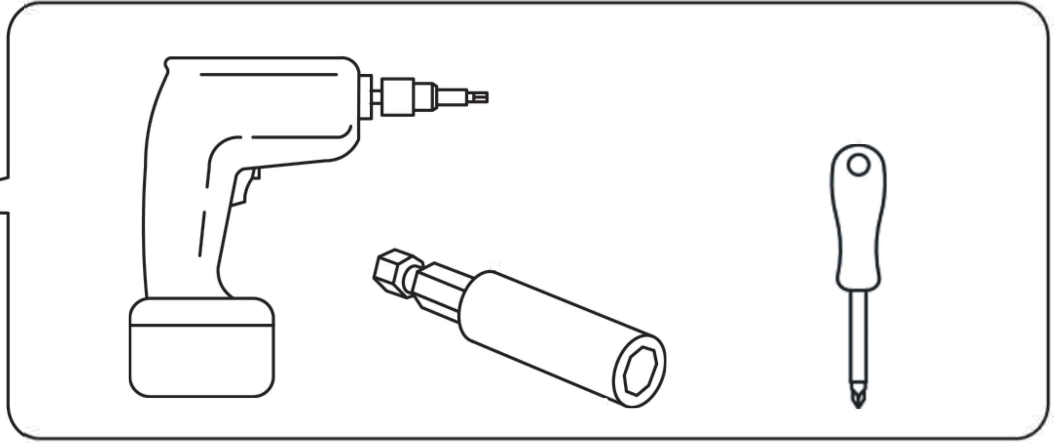



















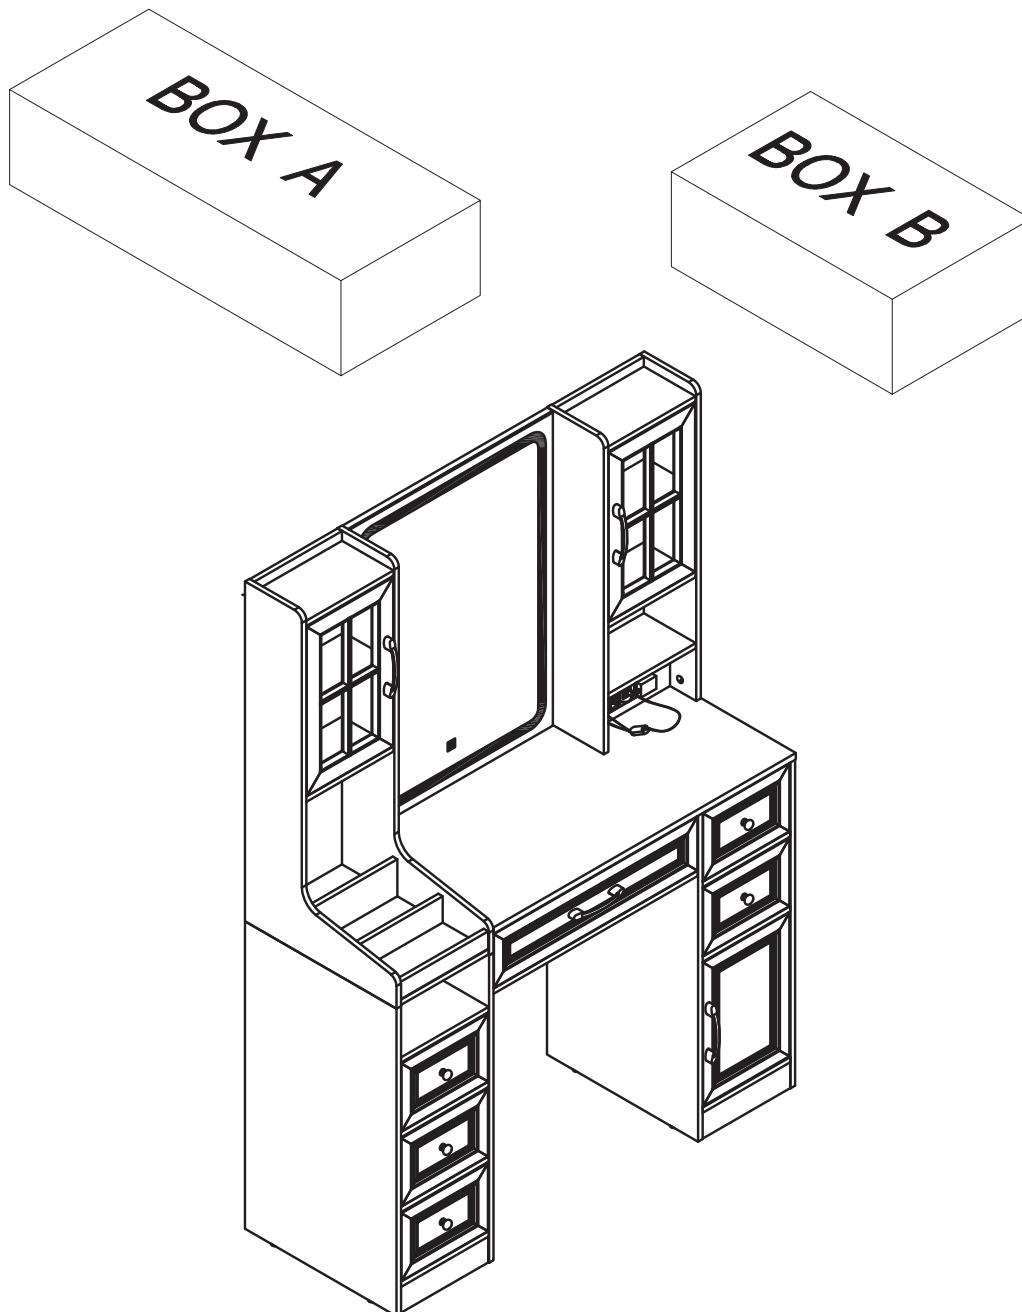


This product has two packages, box A and box B. Only the parts in the two packages can complete the entire table. Please be sure to start the installation after the two packages arrive

BOX SKU AJ-DJ503493_A


NO.	PARTS	QTY	NO.	PARTS	QTY	NO.	PARTS	QTY
(A)		x1	(M)		x1	(X)		x1
(B)		x1	(N)		x1	(Y)		x1
(C)		x1	(O)		x1	(Z)		x1
(D)		x2	(P)		x1	(BB)		x1
(F)		x1	(Q)		x1	(NN)		x1
(G)		x1	(R)		x1	(PP)		x1
(I)		x1	(S)		x1	(QQ)		x1
(J)		x1	(U)		x1			
(K)			(V)		x2			

BOX SKU AJ-DJ503493_B

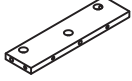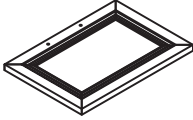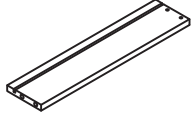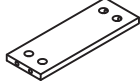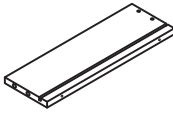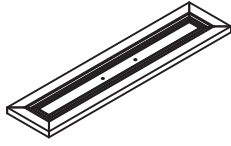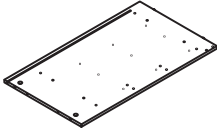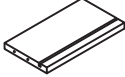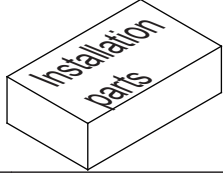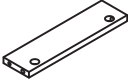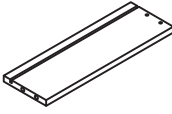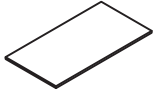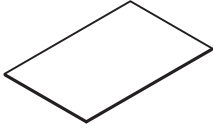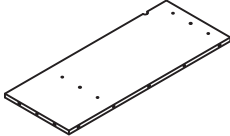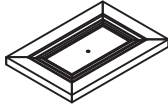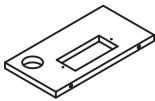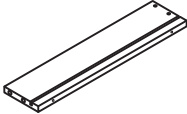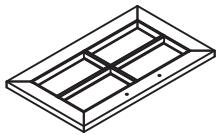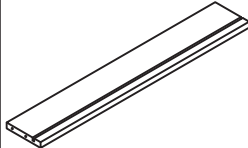NO.	PARTS	QTY	NO.	PARTS	QTY	NO.	PARTS	QTY
(E)		x2	(EE)		x1	(MM)		x1
(H)		x4	(FF)		x5	(OO)		x1
(L)		x1	(GG)		x5			
(T)		x1	(HH)		x5			
(W)		x2	(II)		x5			
(AA)		x1	(JJ)		x5			
(CC)		x1	(KK)		x1			
(DD)		x2	(LL)		x1			


Board Identification

Not actual size

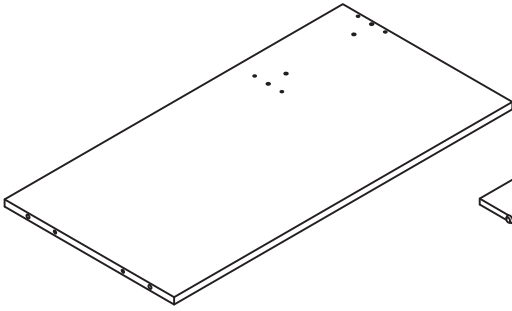


Ⓐ

Qty:1

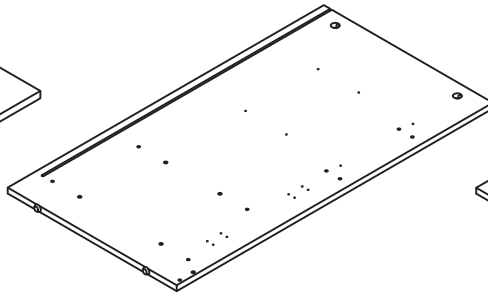


Ⓑ

Qty:1

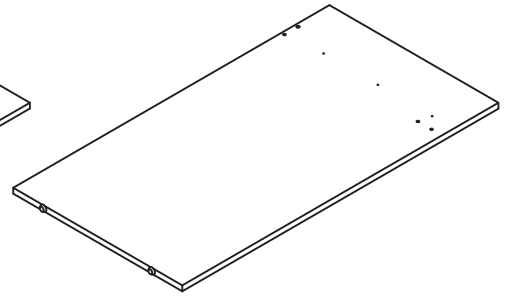


Ⓒ

Qty:1

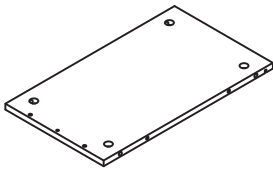


Ⓓ

Qty:2




Ⓔ

Qty:2

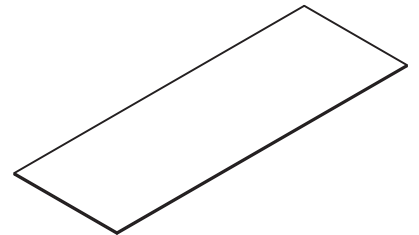


Ⓕ

Qty:1

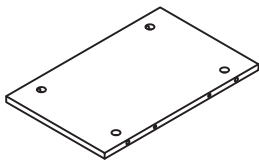


Ⓖ

Qty:1



Ⓗ

Qty:4

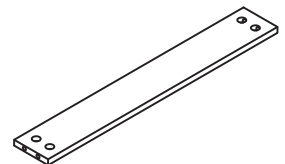


Ⓖ

Qty:1


Board Identification

Not actual size

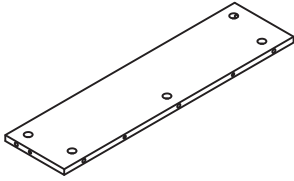


ⓐ

Qty:1

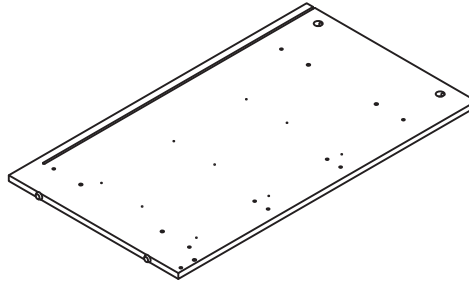


ⓑ

Qty:1

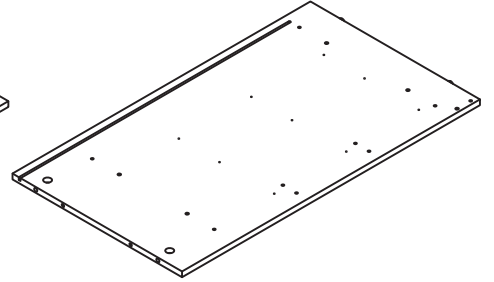


ⓒ

Qty:1

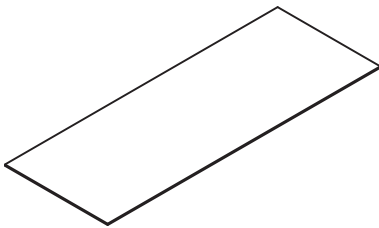


ⓓ

Qty:1

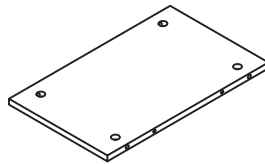


ⓔ

Qty:1

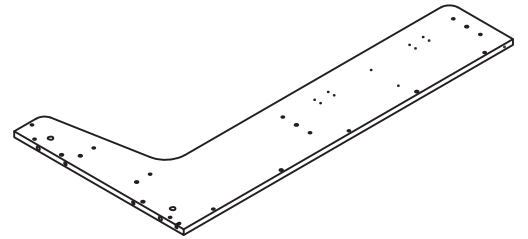


ⓕ

Qty:1

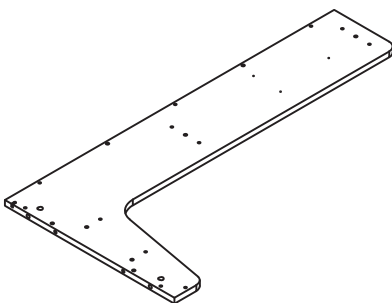


ⓖ

Qty:1

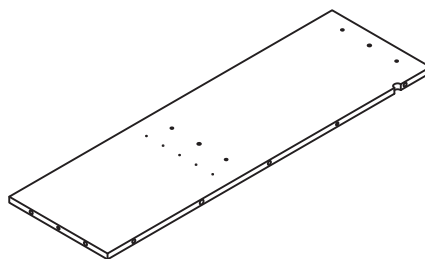

ⓗ

Qty:1

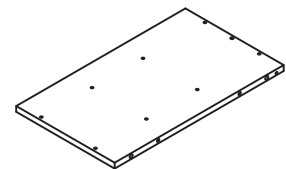


ⓘ

Qty:1


Board Identification

Not actual size




Ⓢ

Qty:1




Ⓣ

Qty:1




Ⓤ

Qty:1




Ⓥ

Qty:2




Ⓦ

Qty:2

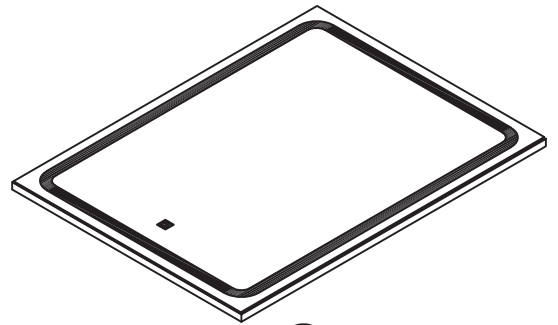


Ⓧ

Qty:1

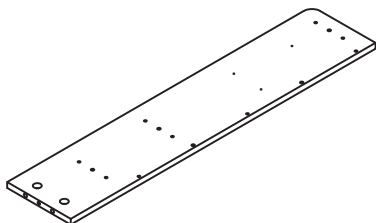


Ⓨ

Qty:1

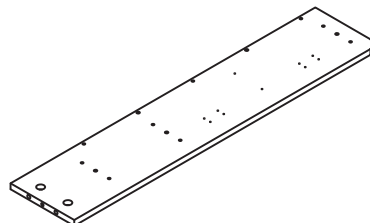

Ⓩ

Qty:1

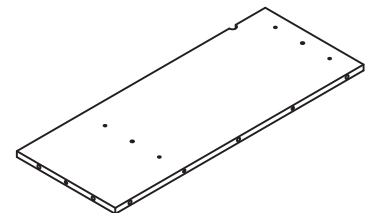


ⒶⒶ

Qty:1


Board Identification

Not actual size




Ⓟ

Qty:1




Ⓞ

Qty:1

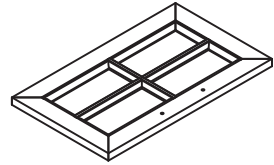


Ⓞ

Qty:2

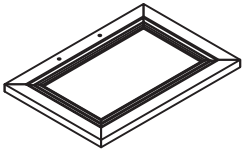


Ⓞ

Qty:1




Ⓞ

Qty:5




Ⓞ

Qty:5




Ⓞ

Qty:5

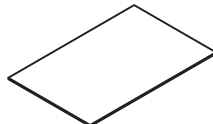

Ⓞ

Qty:5




Ⓞ

Qty:5


Board Identification

Not actual size




ⓀⓀ

Qty:1

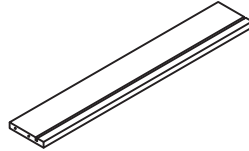


ⓁⓁ

Qty:1

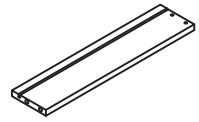


ⓂⓂ

Qty:1

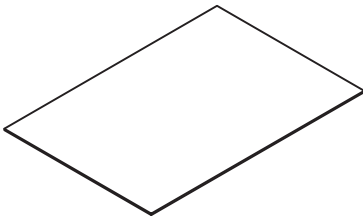


ⓃⓃ

Qty:1

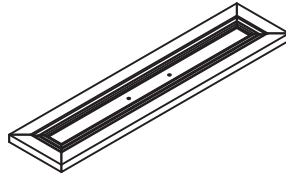


ⓄⓄ

Qty:1



ⓅⓅ


Qty:1




ⓆⓆ

Qty:1


Part List

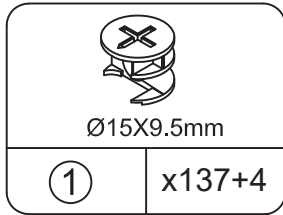


CAM LOCK

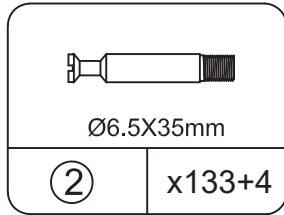


CAM BOLT

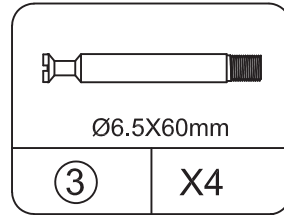


CAM BOLT

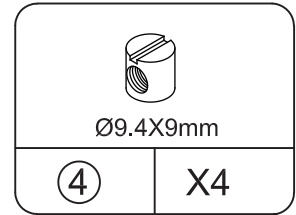


CAM LOCK

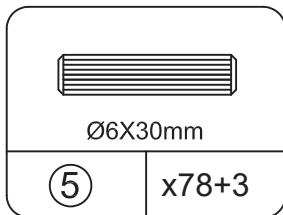


WOOD DOWEL

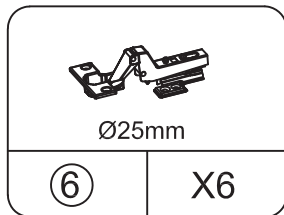


HINGE

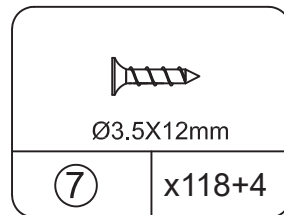


SCREW

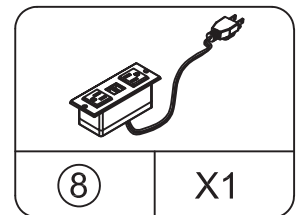


POWER STRIP

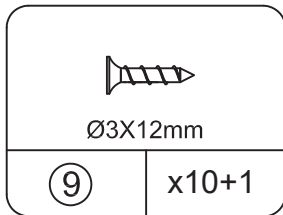


SCREW

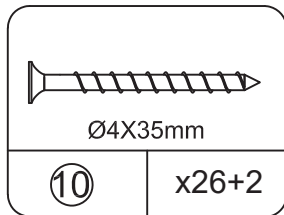


SCREW

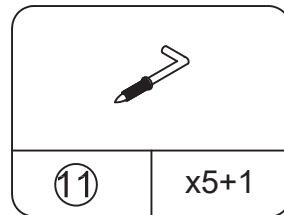


HOOKING

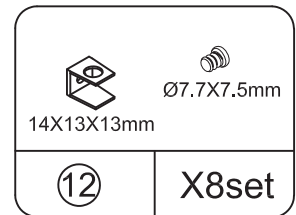


SHELF SUPPORT

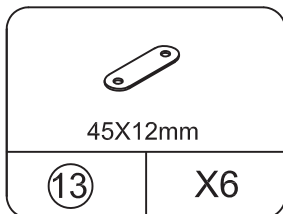


IRON SHEETS

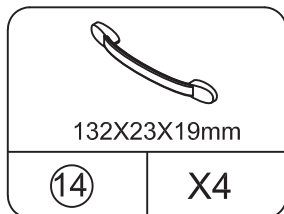


HANDLE

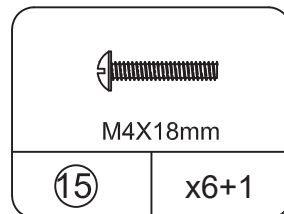


SCREW

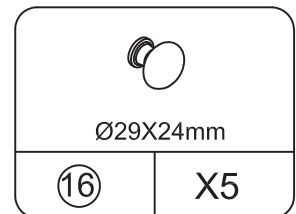


HANDLE

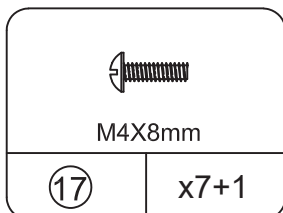


SCREW

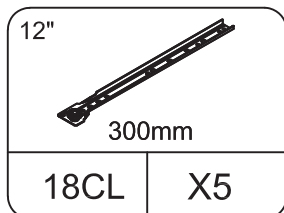


LEFT CABINET MEMBER

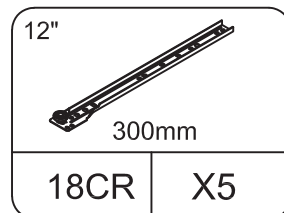


RIGHT CABINET MEMBER

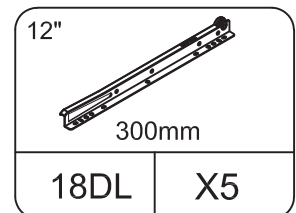


LEFT DRAWER RUNNER

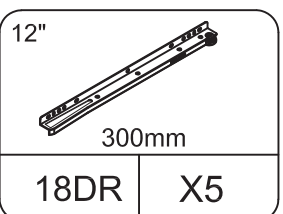


RIGHT DRAWER RUNNER

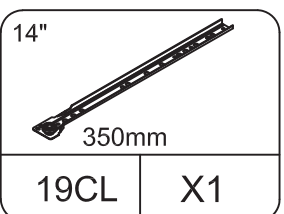

LEFT CABINET MEMBER

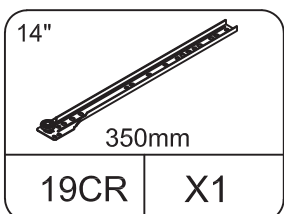


RIGHT CABINET MEMBER

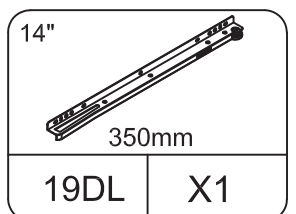


LEFT DRAWER RUNNER


Part List

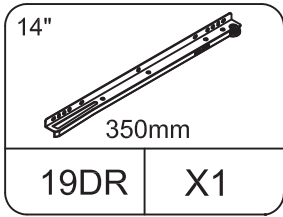


RIGHT DRAWER RUNNER

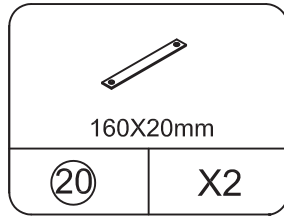


HIPPING RESTRAINT
HARDWARE KIT

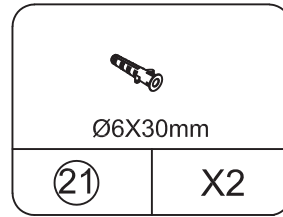


EXPANSION TUBE

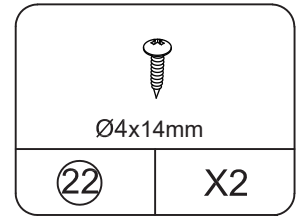


SCREW

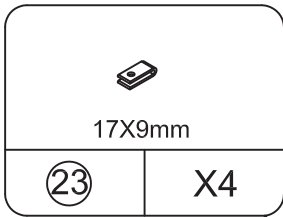


BUCKLES

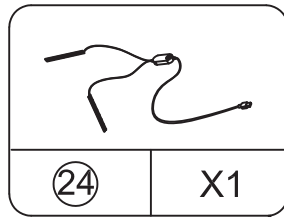


LIGHT BULB

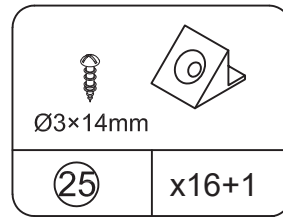



BACK PANEL BUCKLE

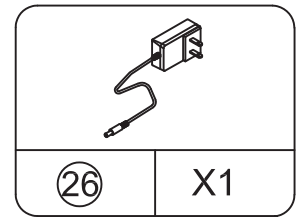

POWER PLUG

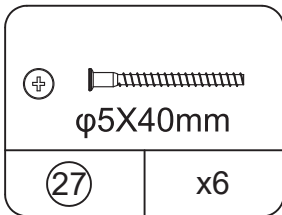


BUCKLES

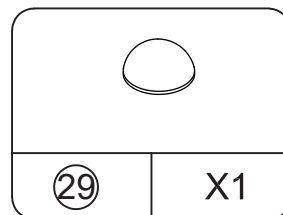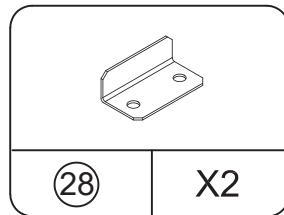


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




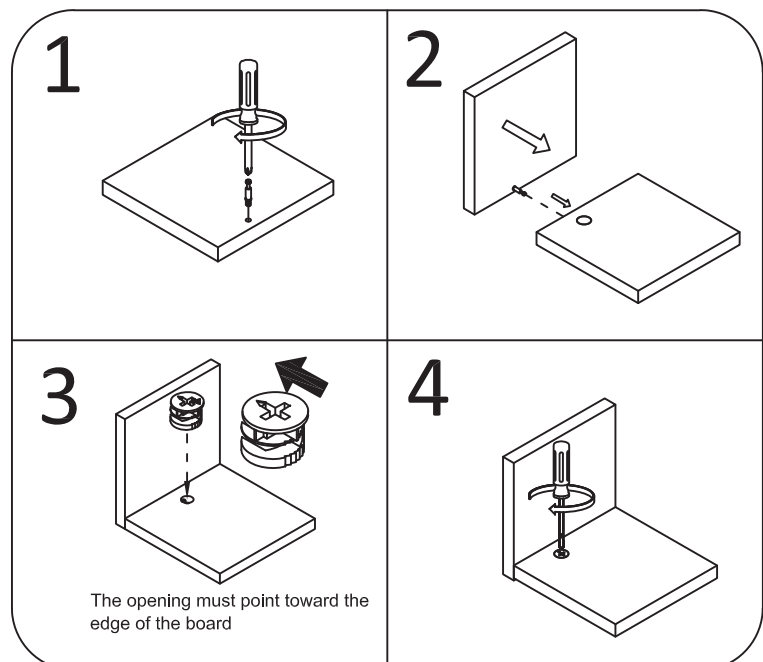


Board Identification



Not actual size

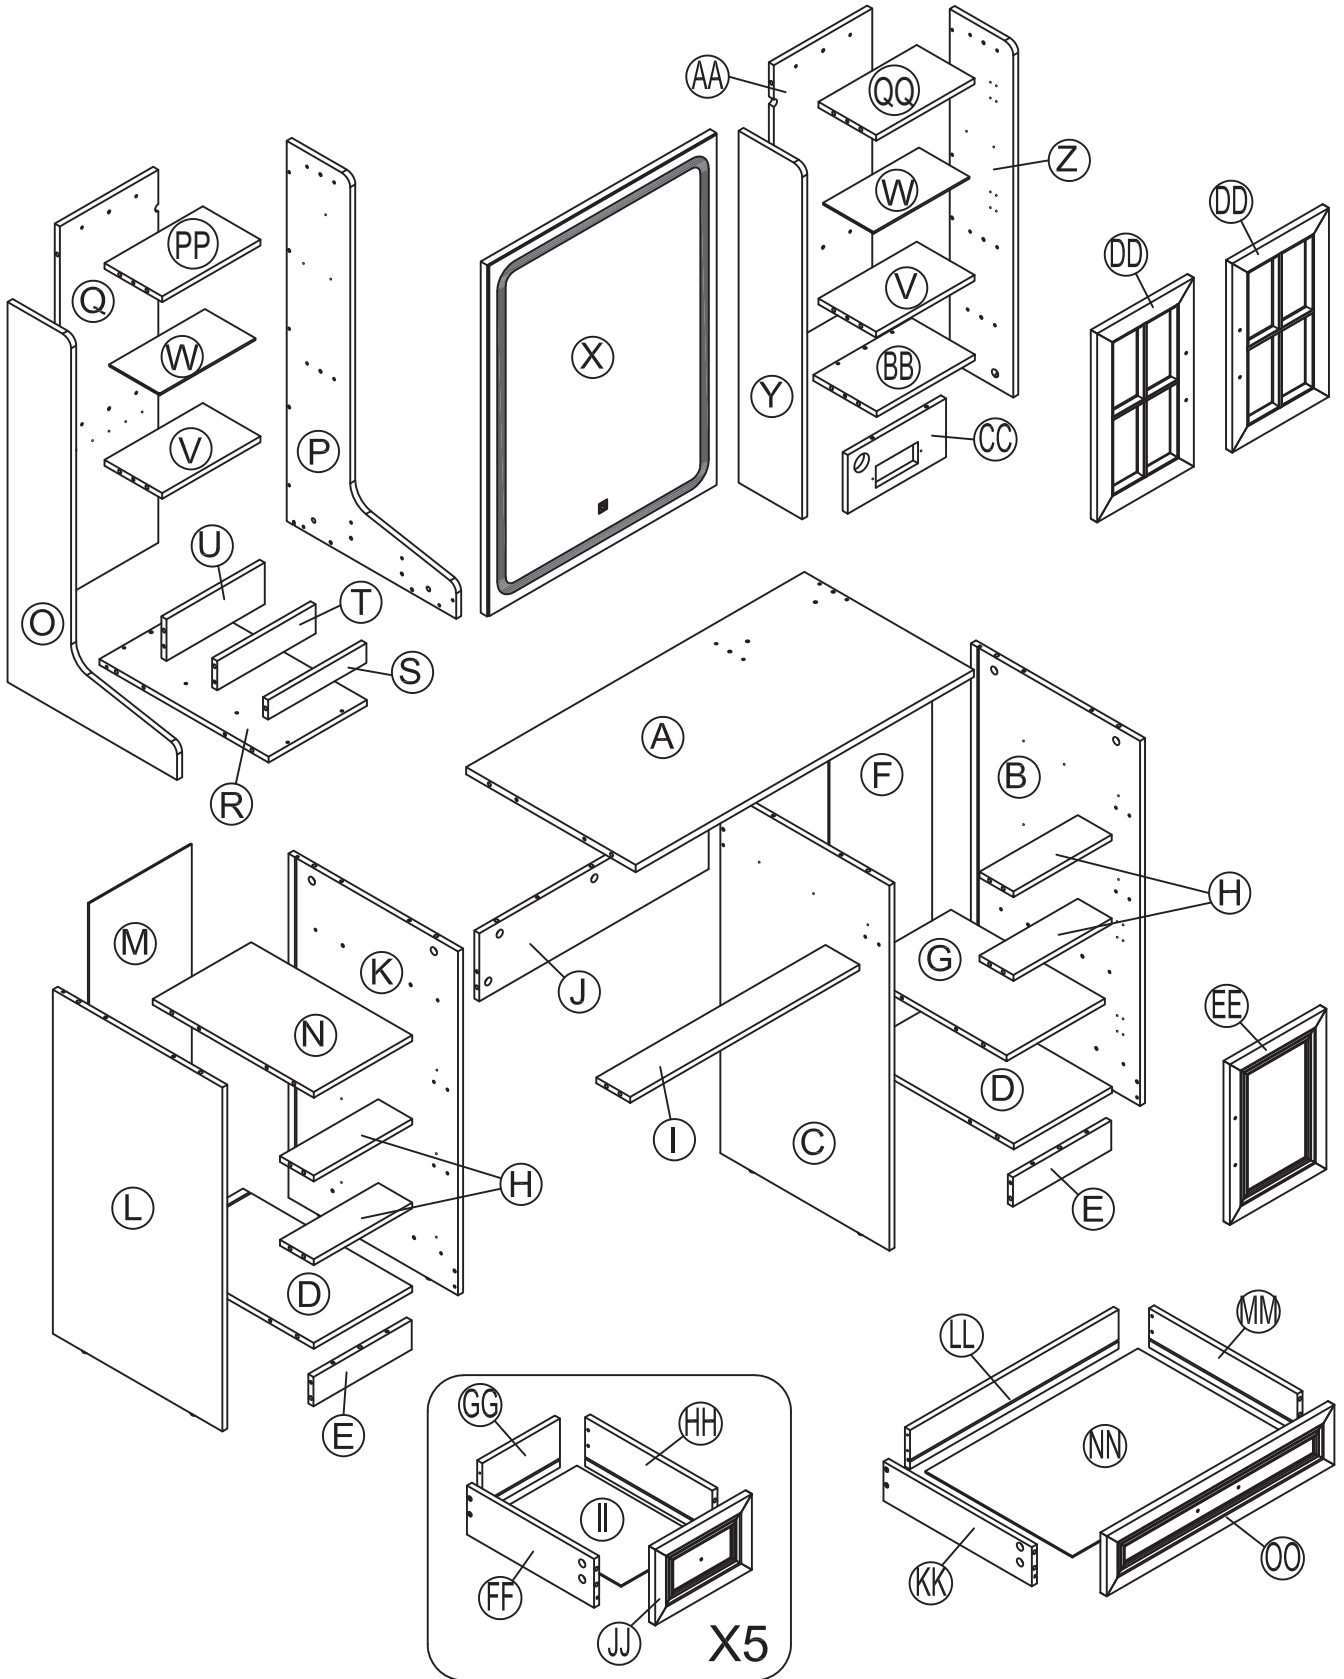


STEP1

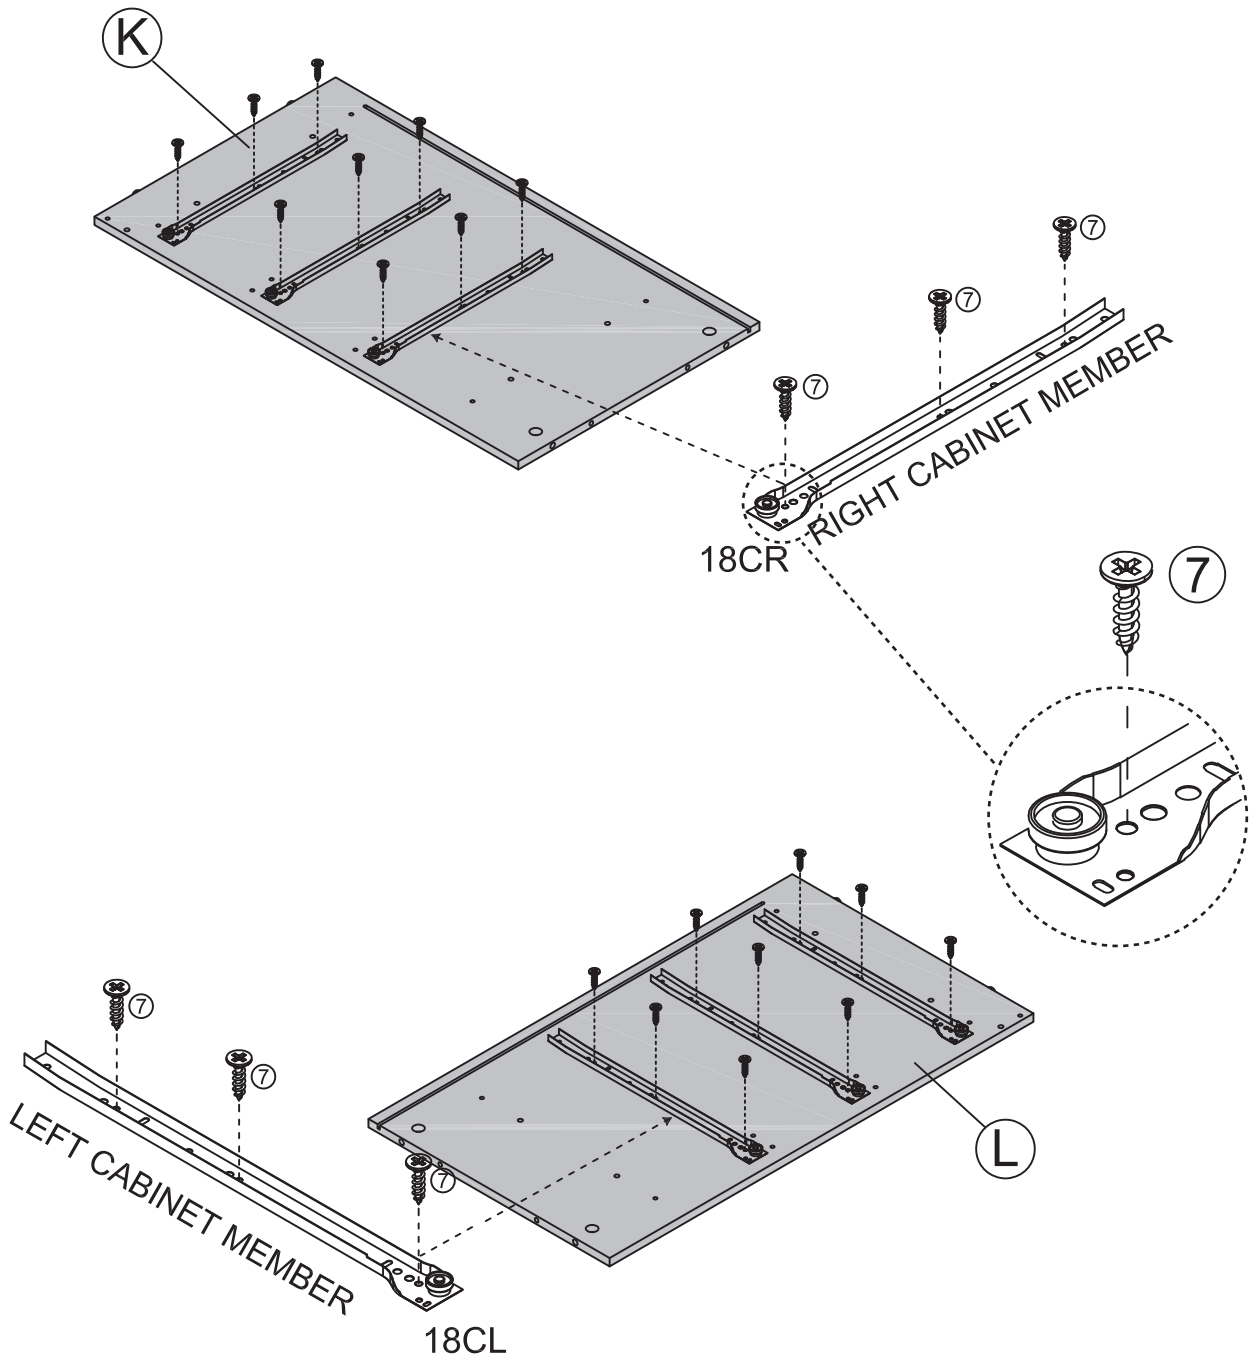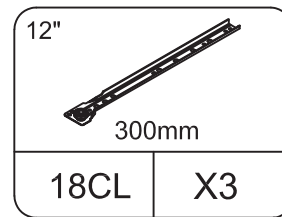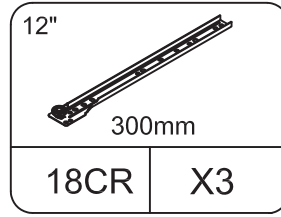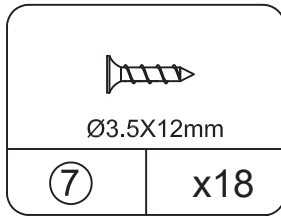


STEP3

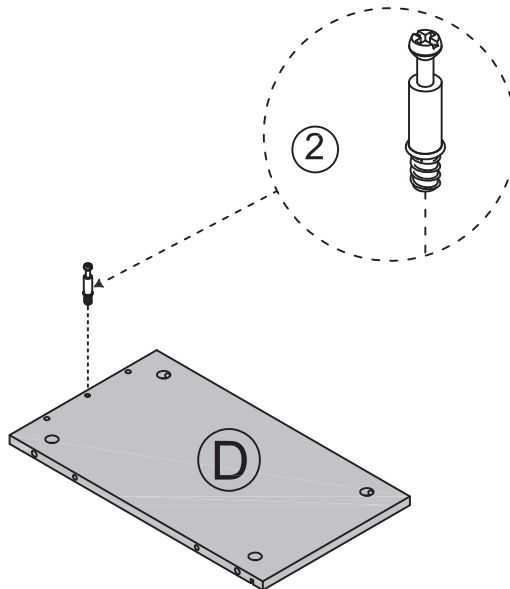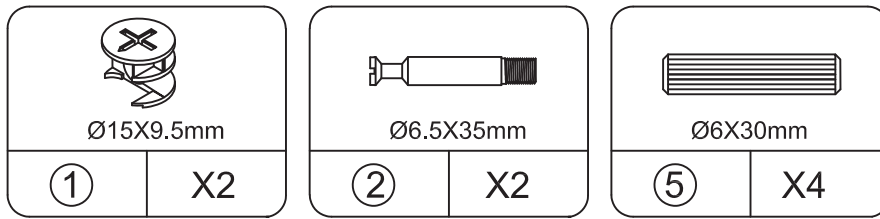

EDGE BANDING

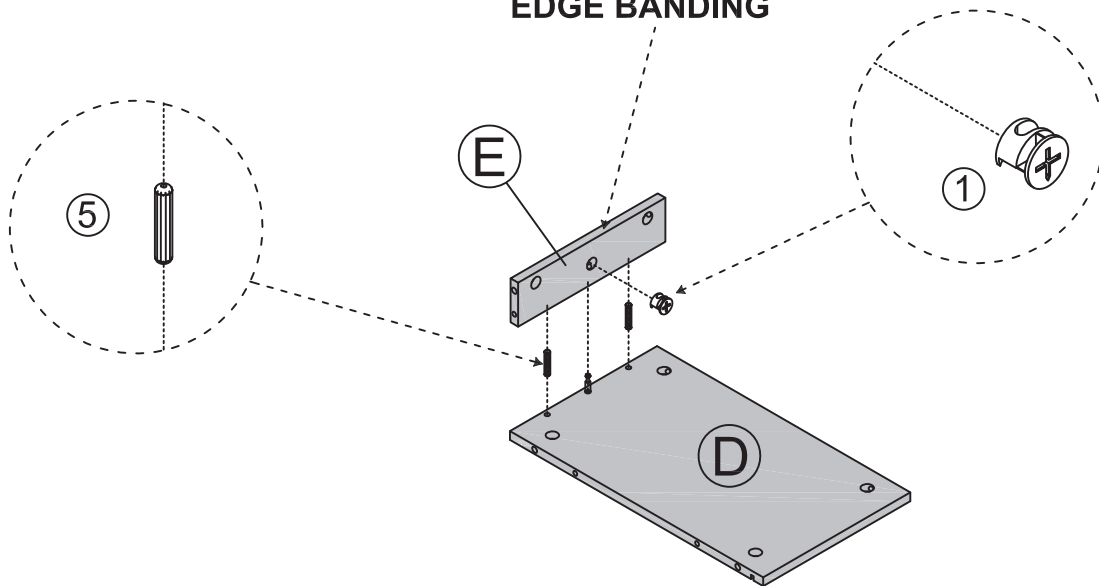


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


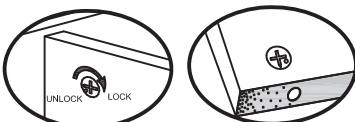


Proper orientation of CAM LOCK


X2

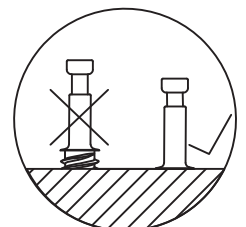


STEP4

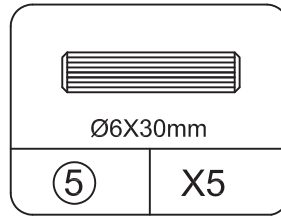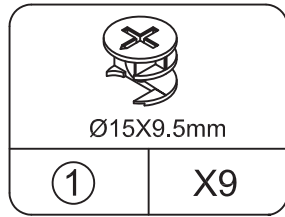

EDGE BANDING






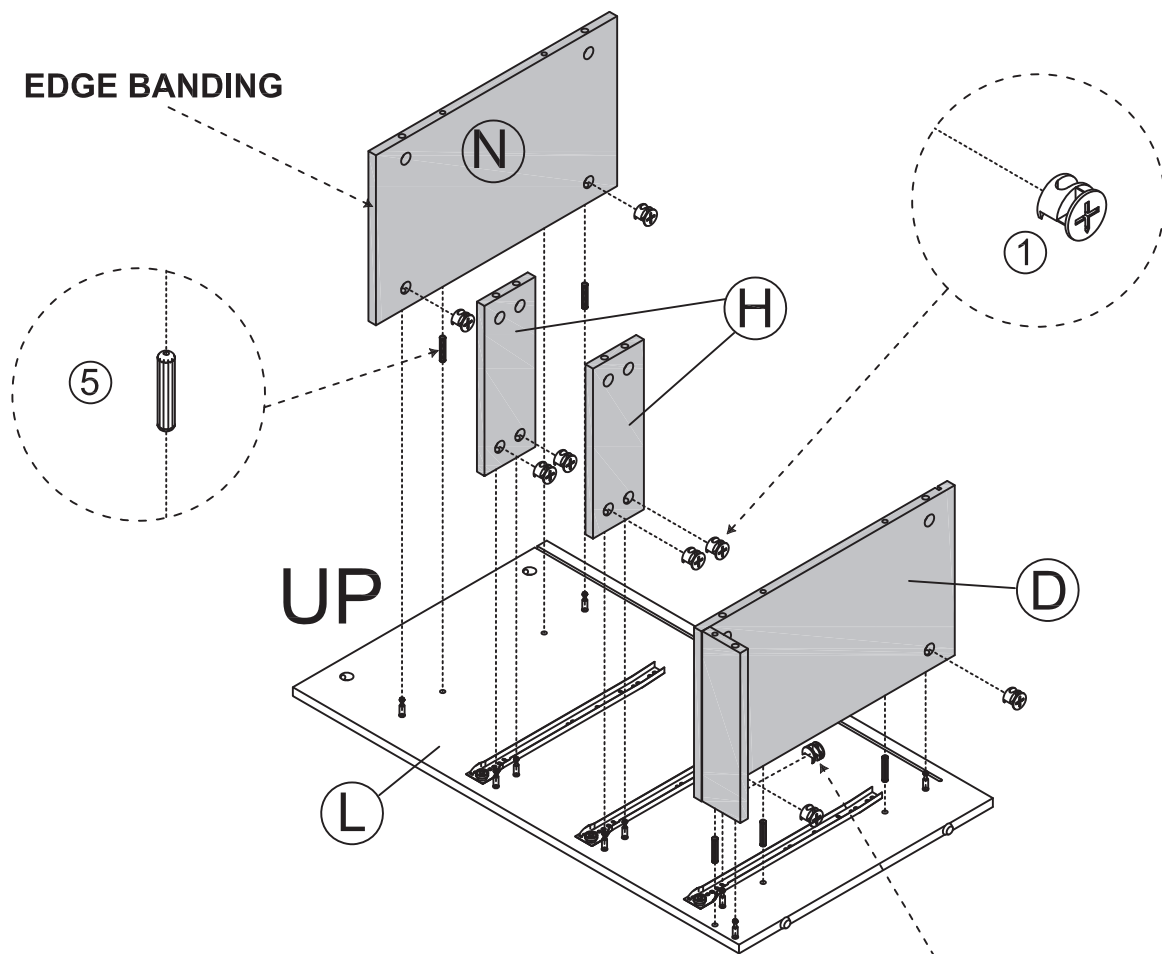


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

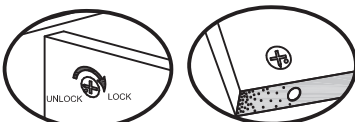


Proper orientation of CAM LOCK


STEP 5

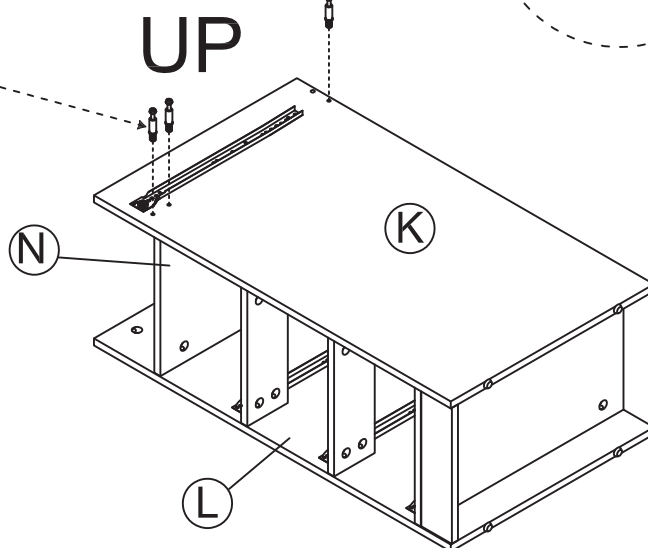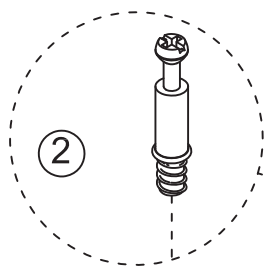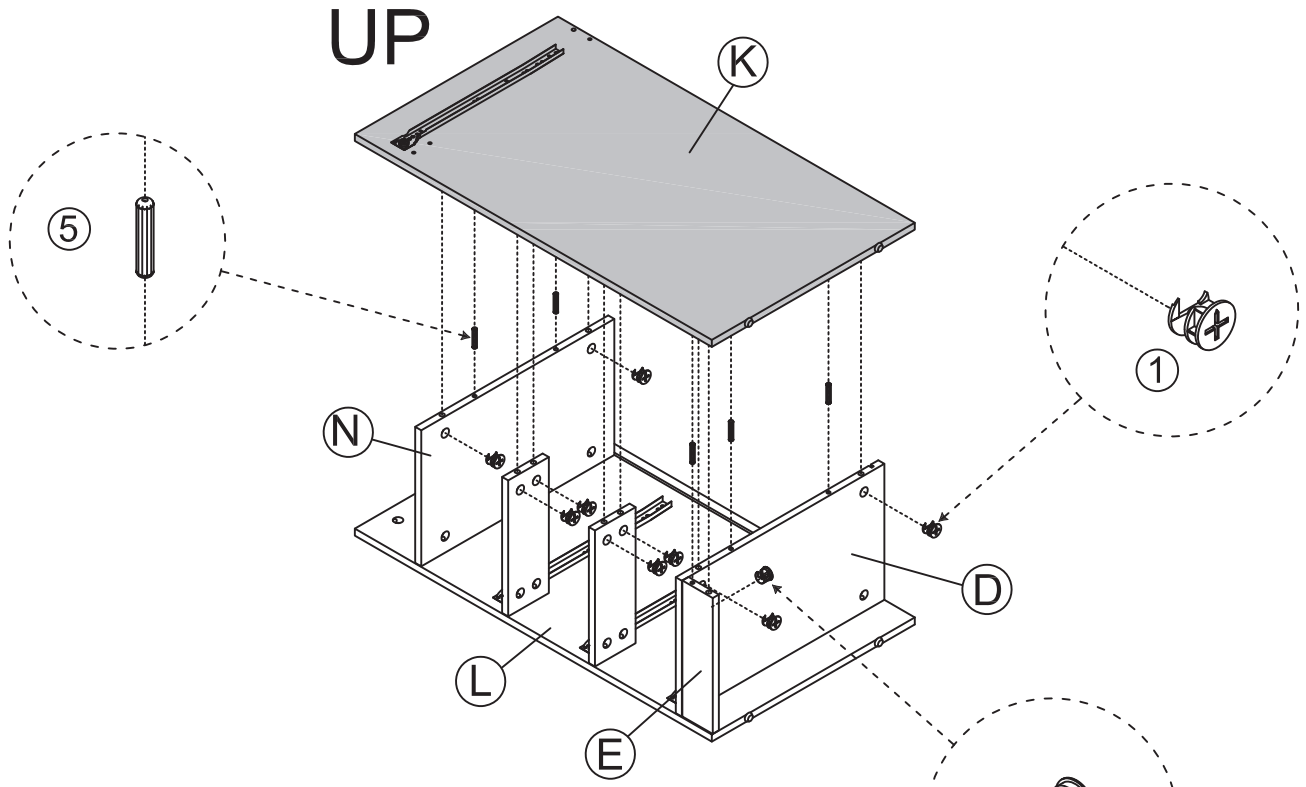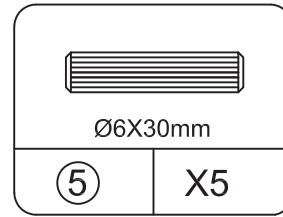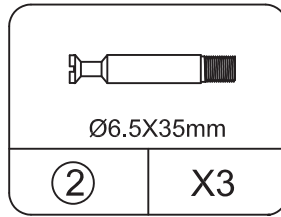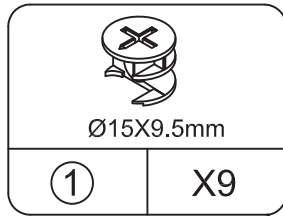







Insert the cam bolt into the hole first, then insert the cam lock and lock it.

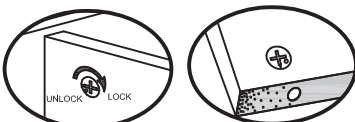




Proper orientation of CAM LOCK

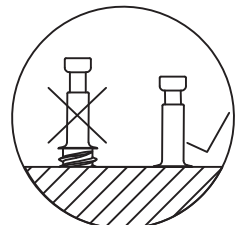





STEP 6

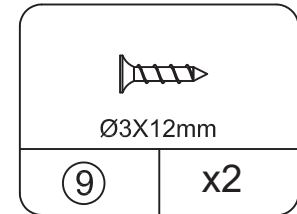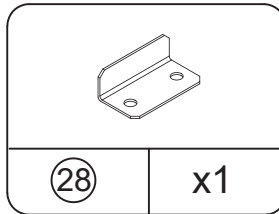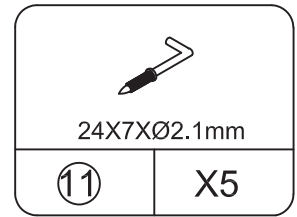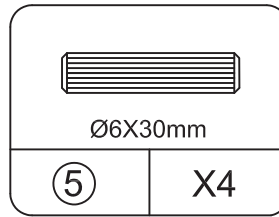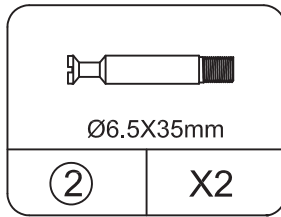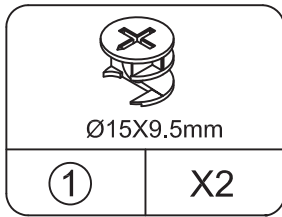

THE RIGHT DIRECTION

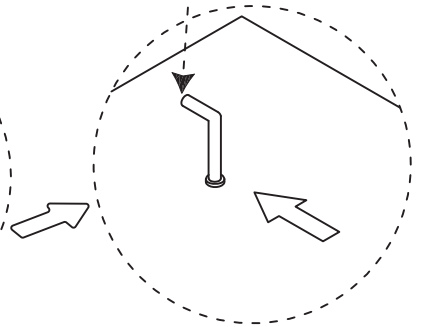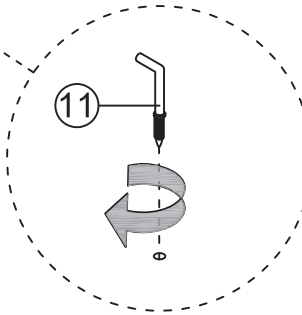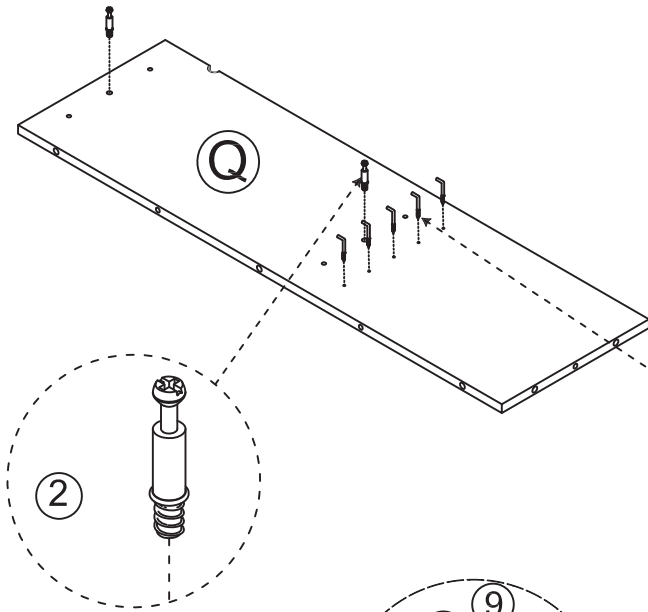


FINISH
No. 11 hardware
completion direction

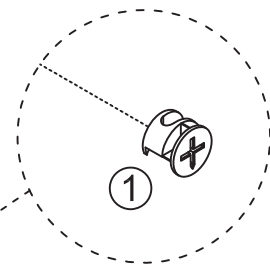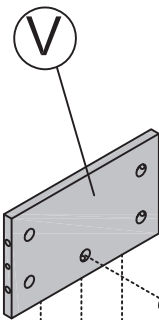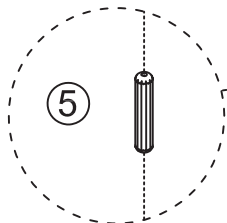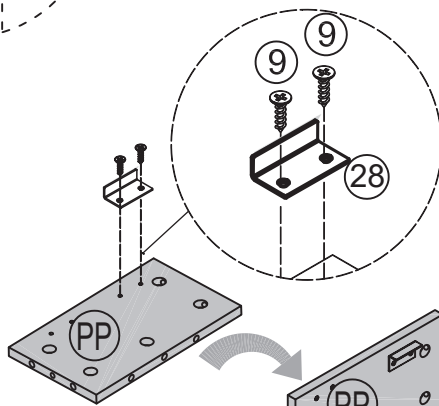







Insert the cam bolt into the hole first, then insert the cam lock and lock it.









Proper orientation of CAM LOCK

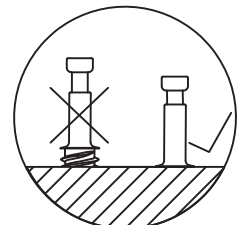


STEP 7

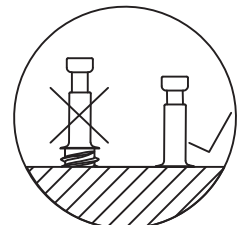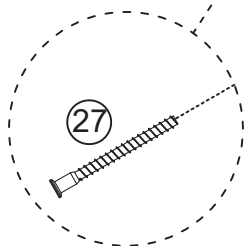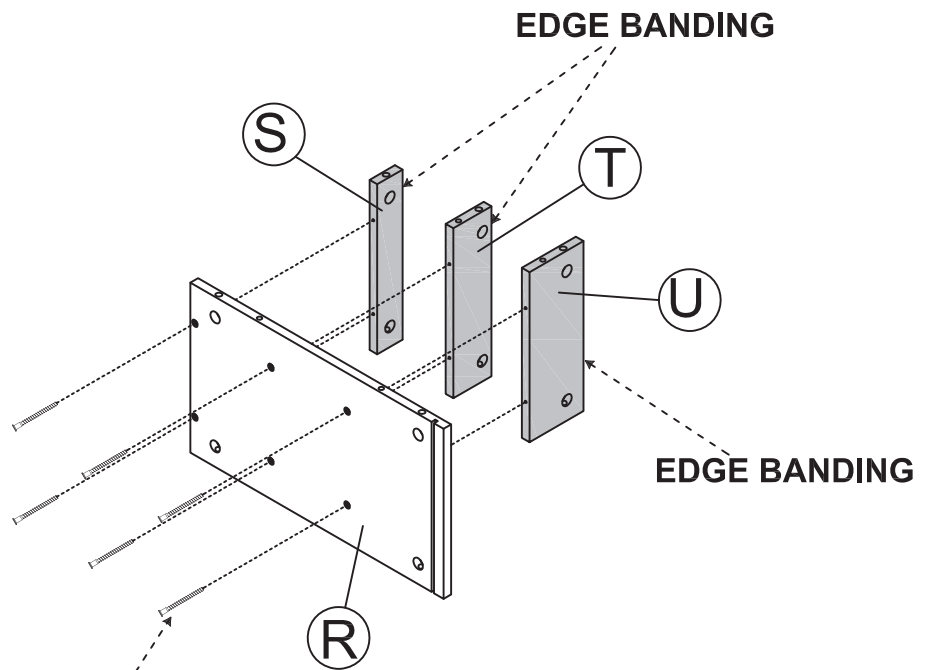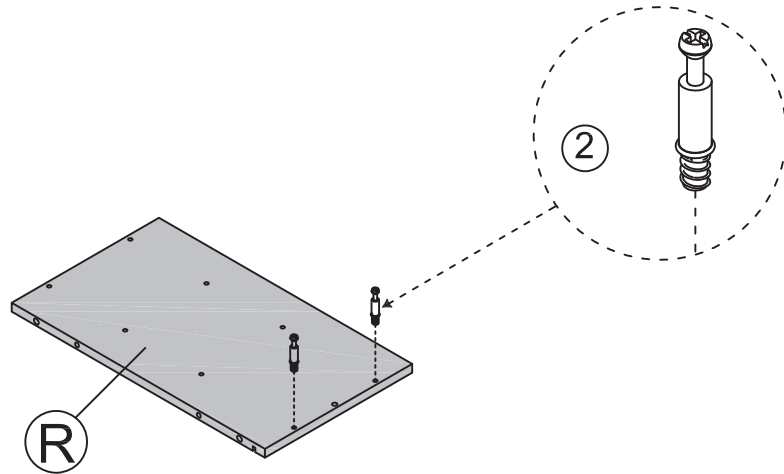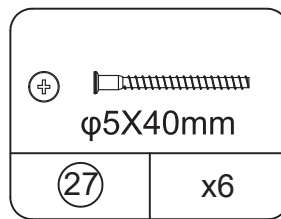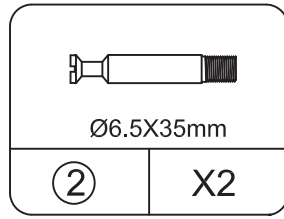


STEP 8

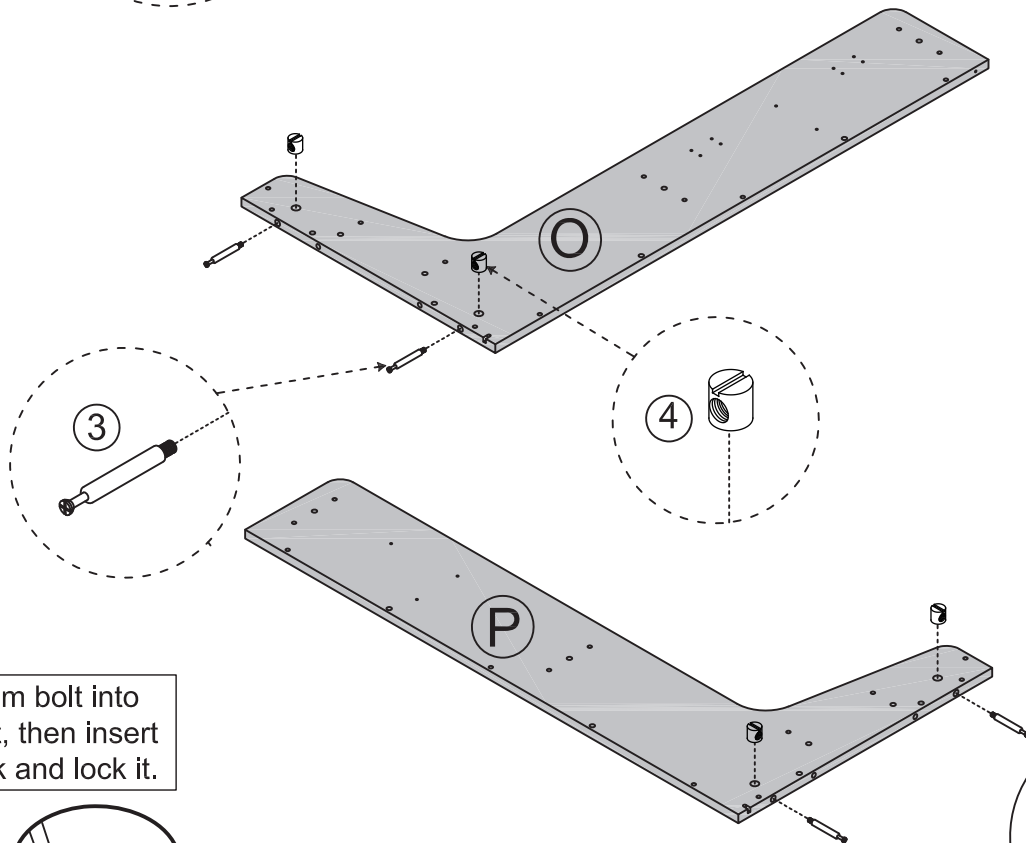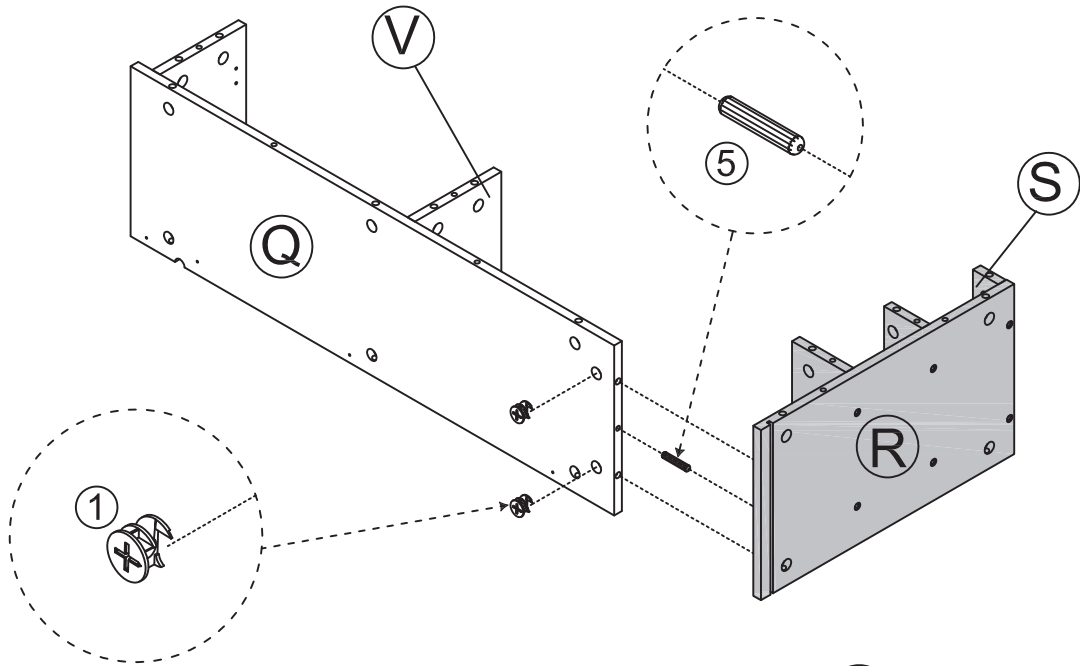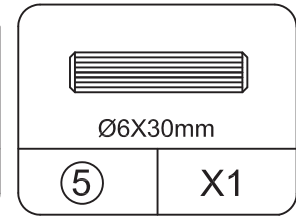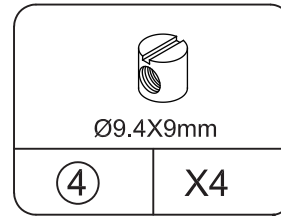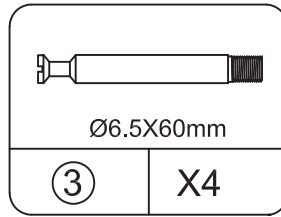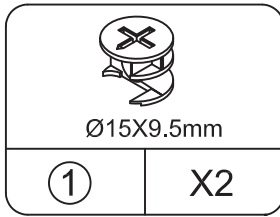



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

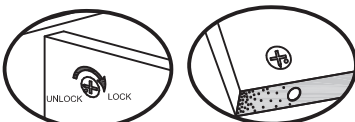


Proper orientation of CAM LOCK

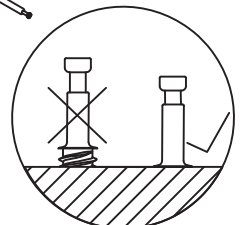


STEP 9

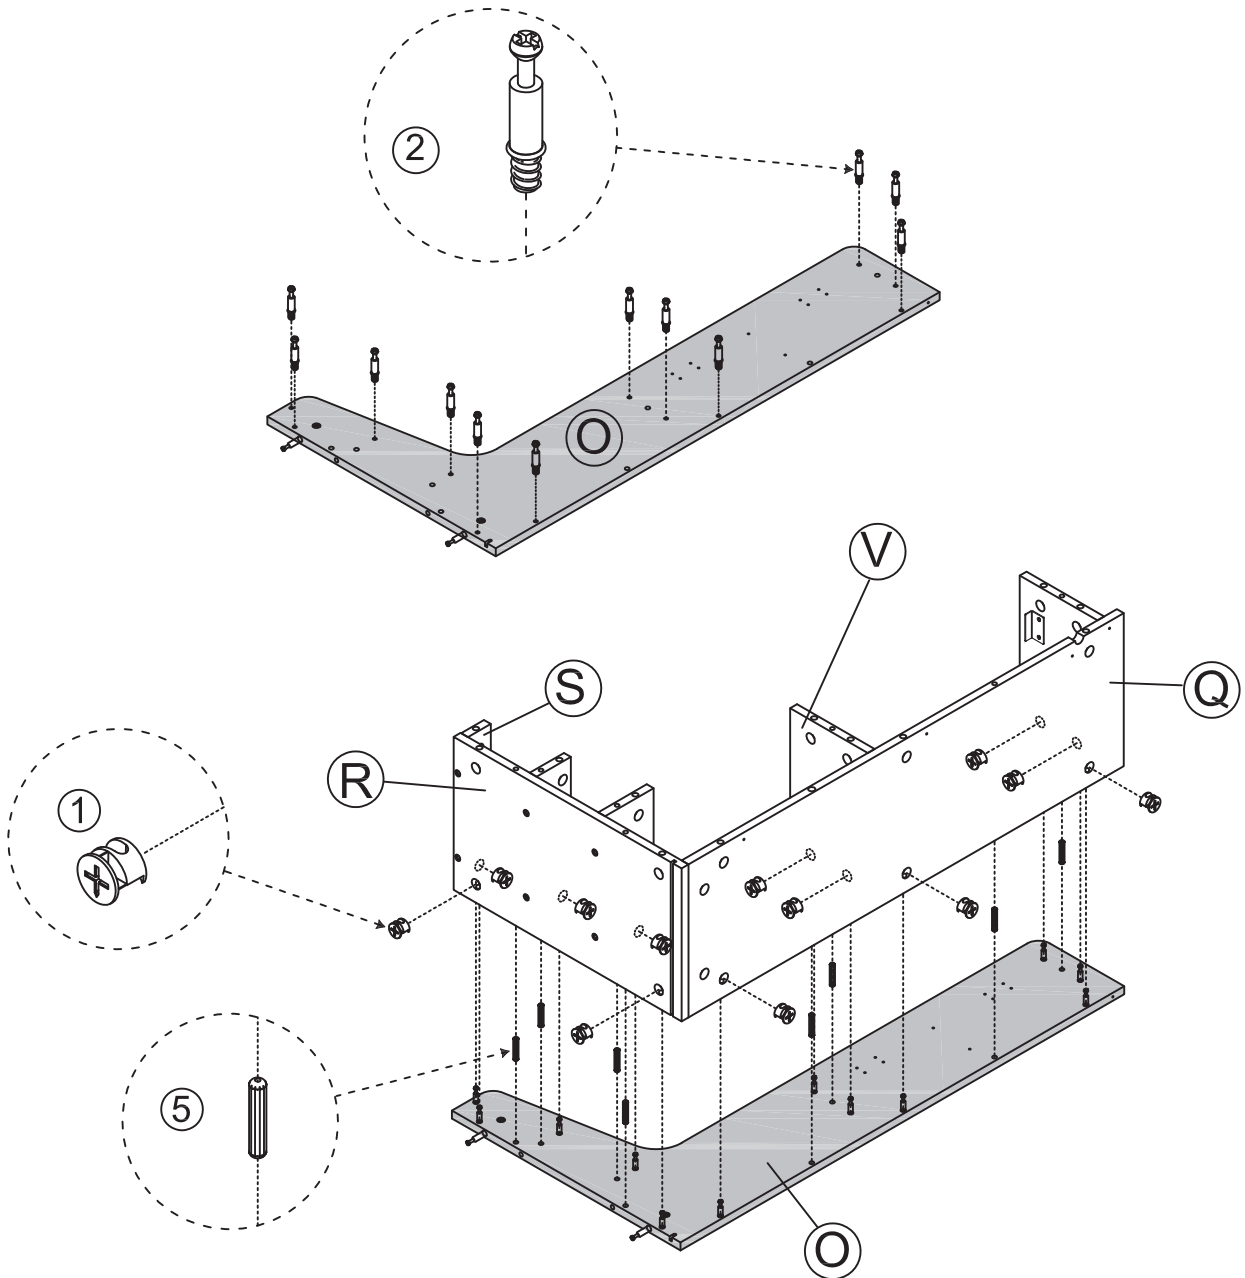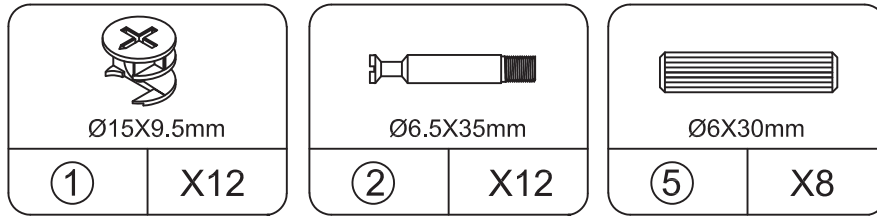

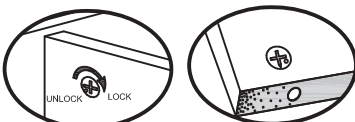


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

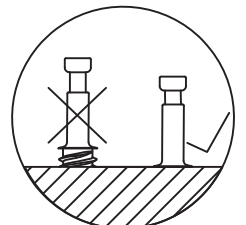


Proper orientation of CAM LOCK




STEP10


 Ø15X9.5mm	 Ø6.5X35mm	 Ø6X30mm
① X12	② X14	⑤ X8

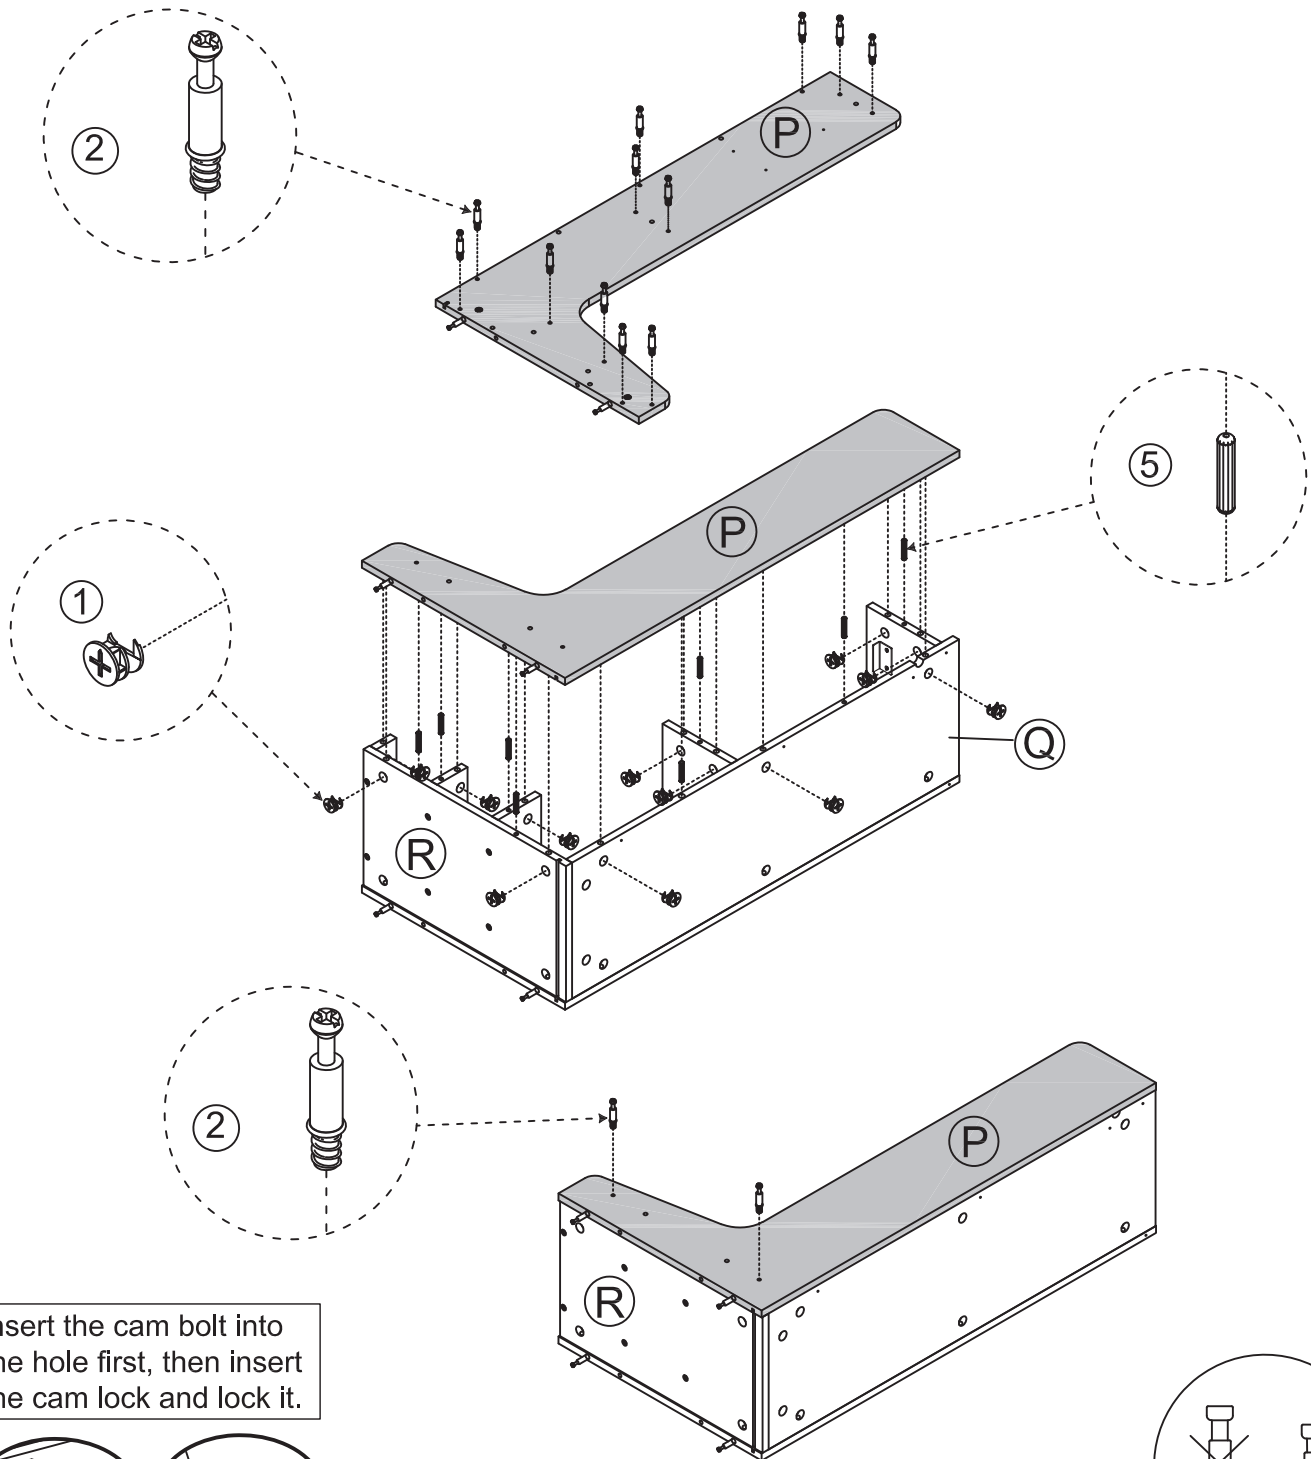




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

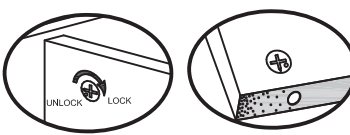


Proper orientation of CAM LOCK

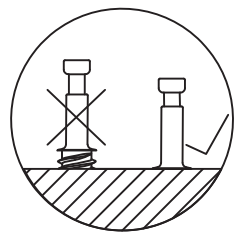

STEP11


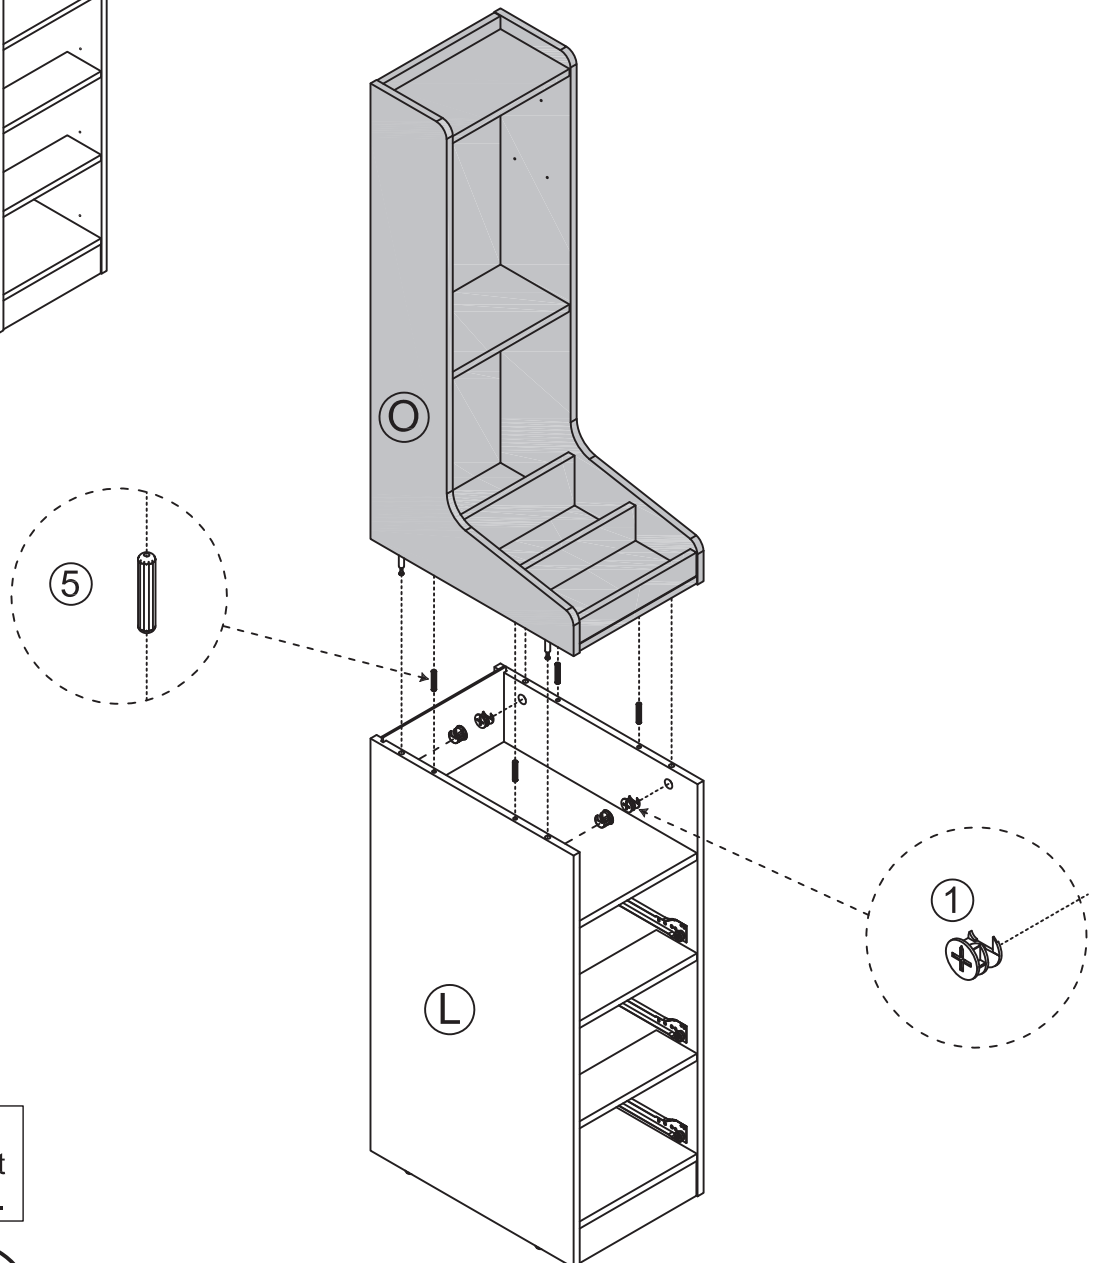
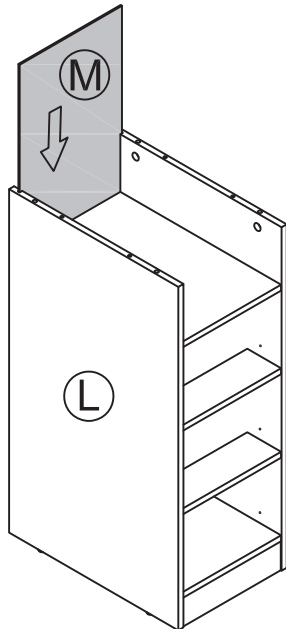
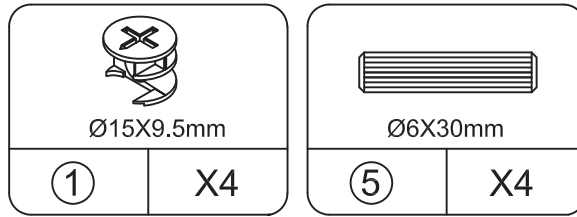


Insert the cam bolt into the hole first, then insert the cam lock and lock it.




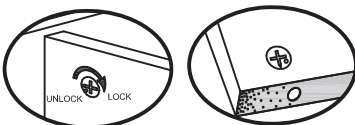


Proper orientation of CAM LOCK




STEP12

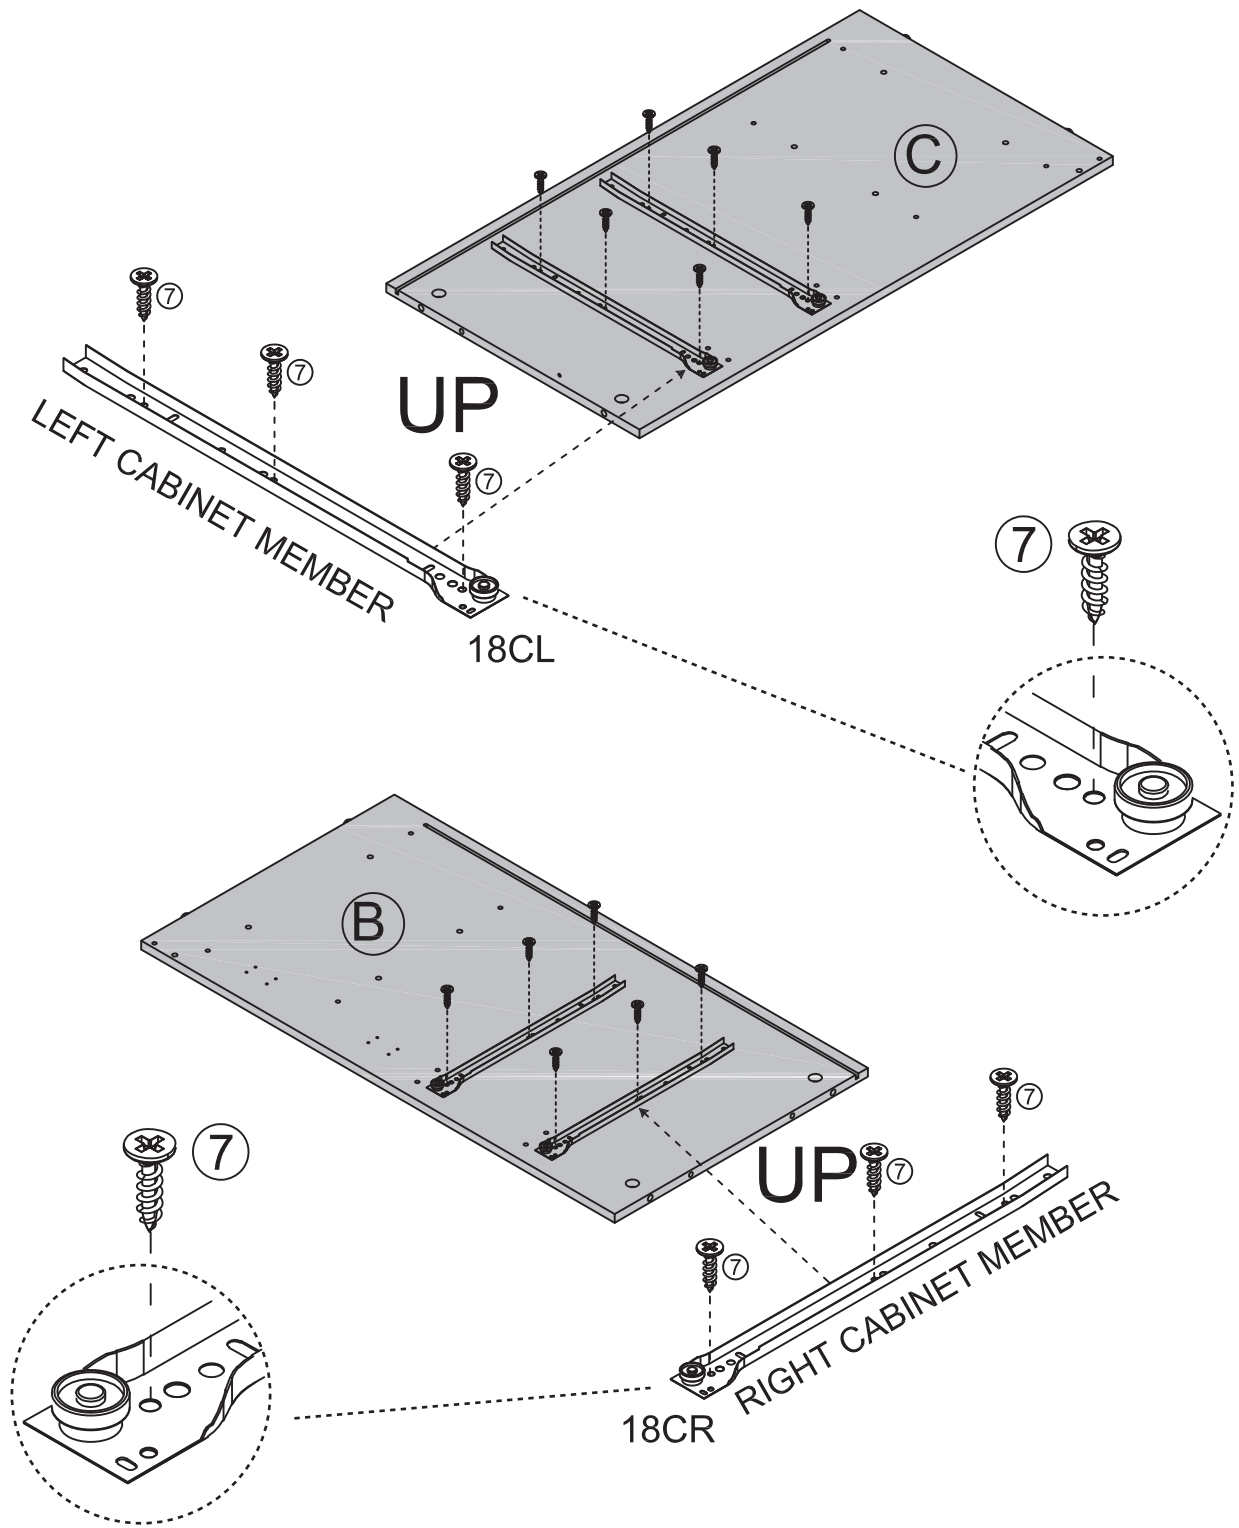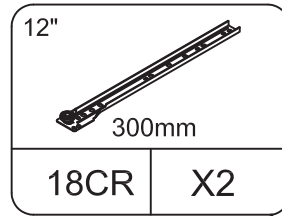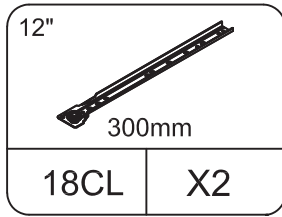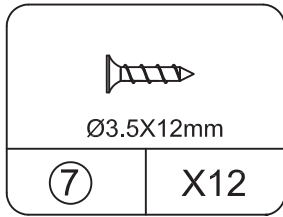


STEP13

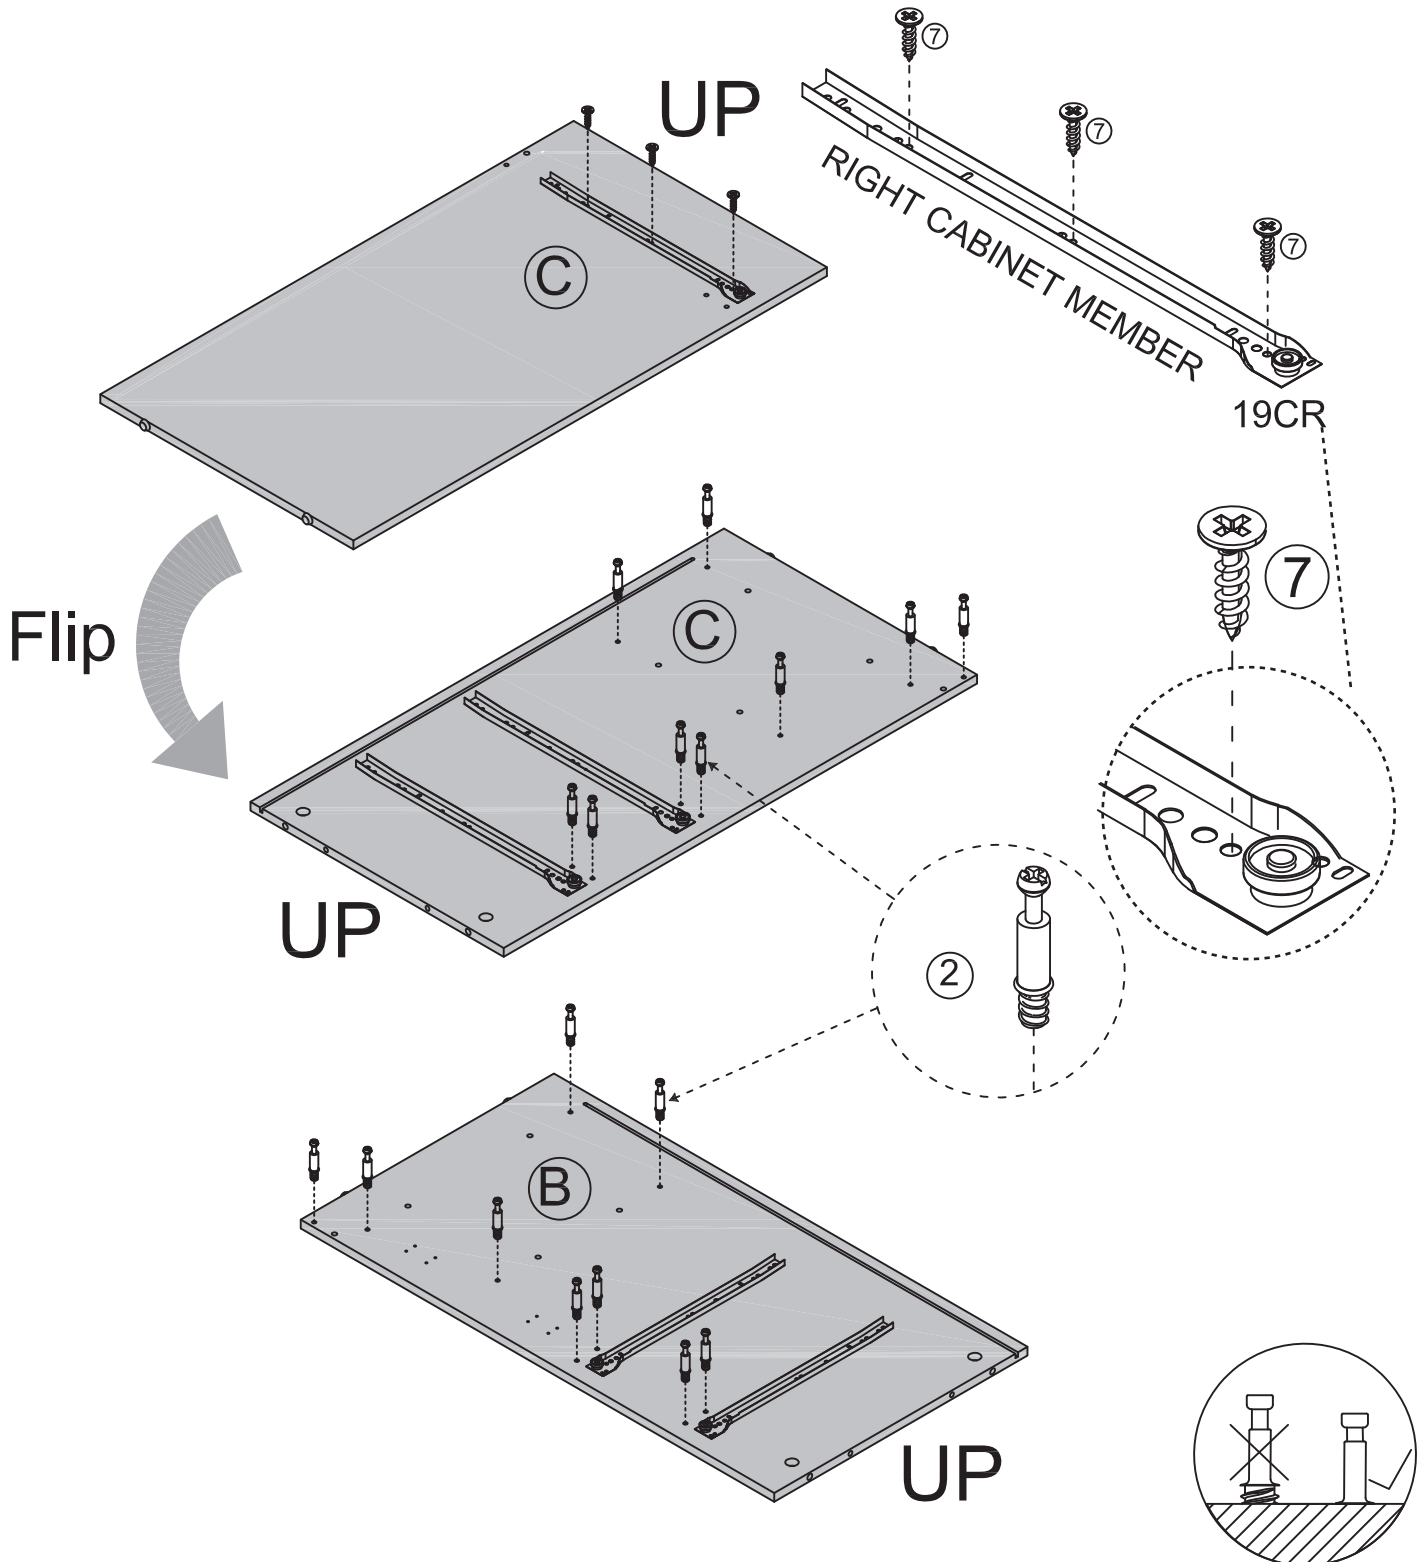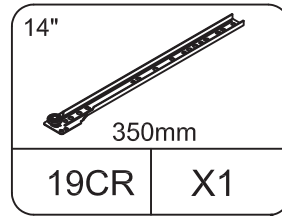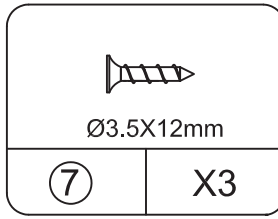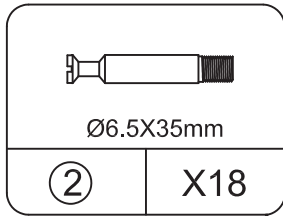

STEP14


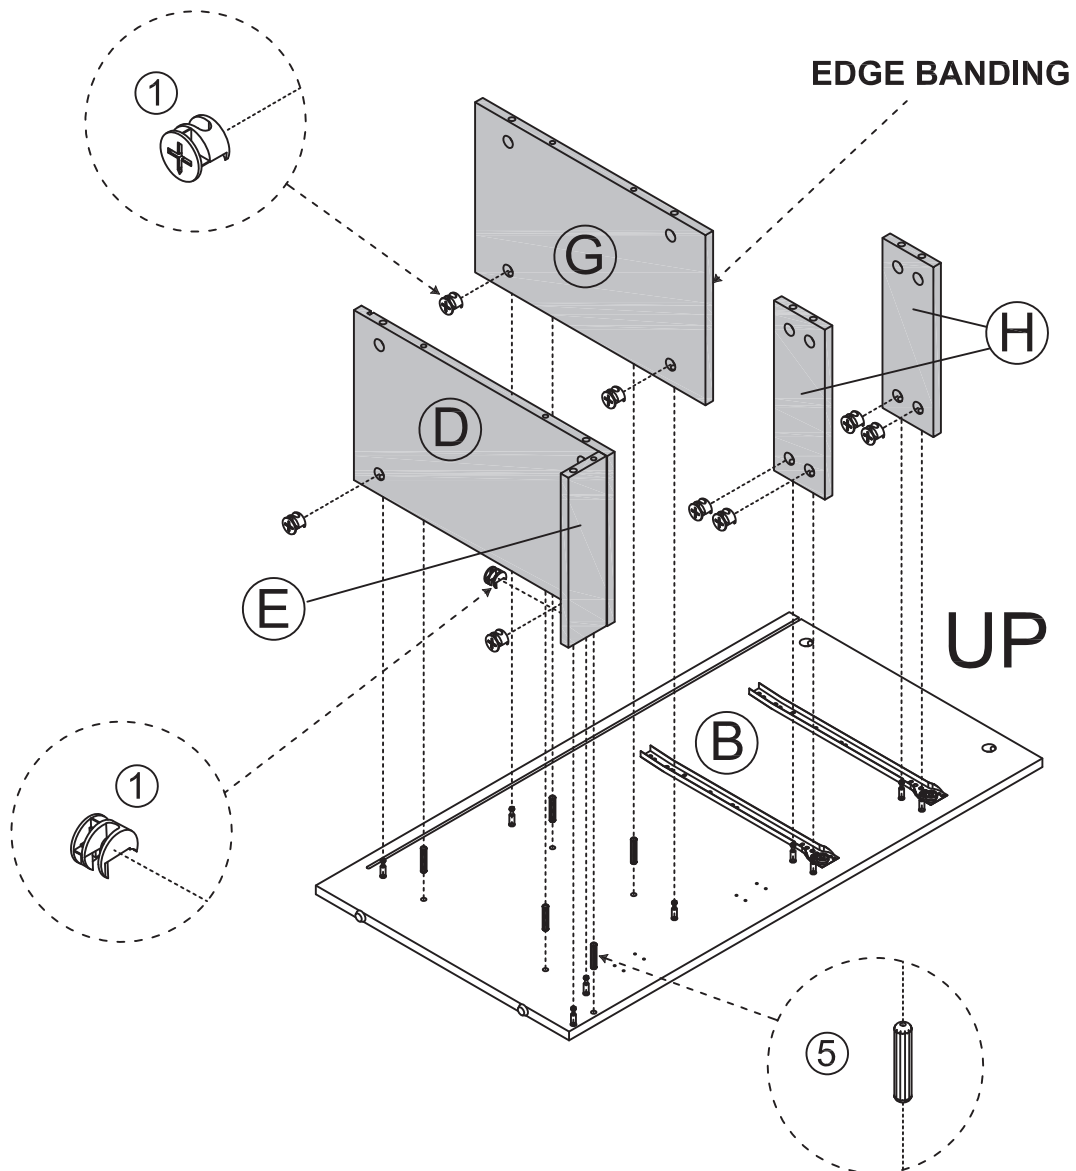
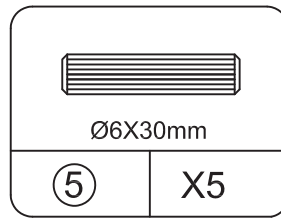
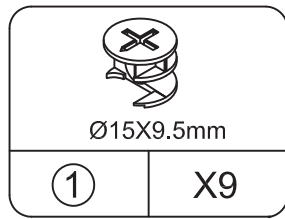


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

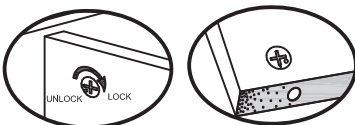


Proper orientation of CAM LOCK


STEP15

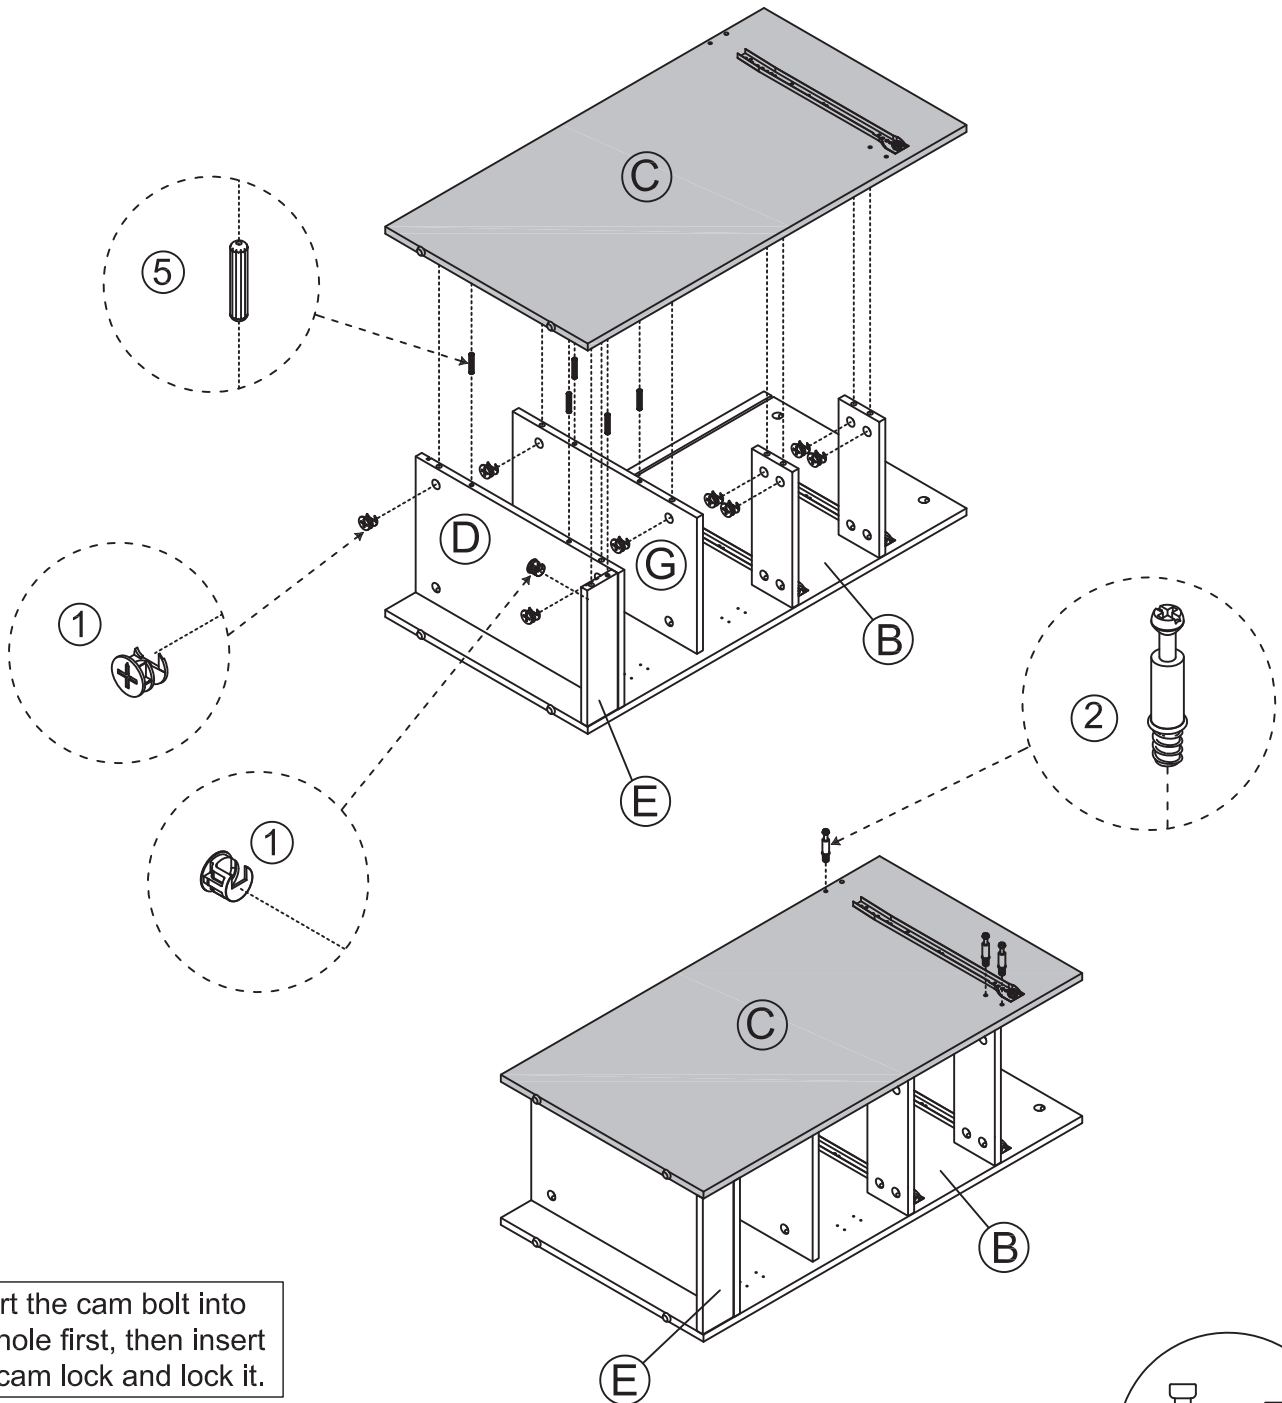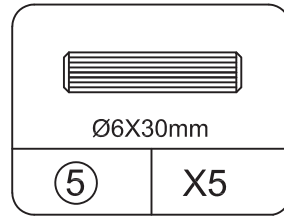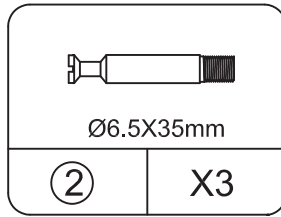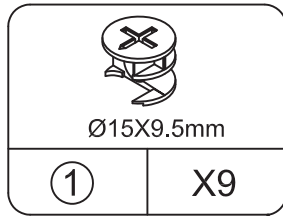





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

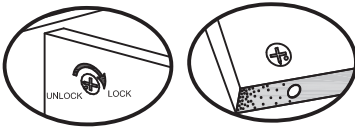


Proper orientation of CAM LOCK

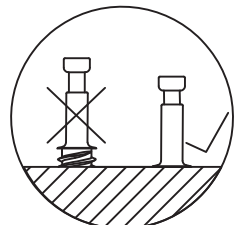

STEP16

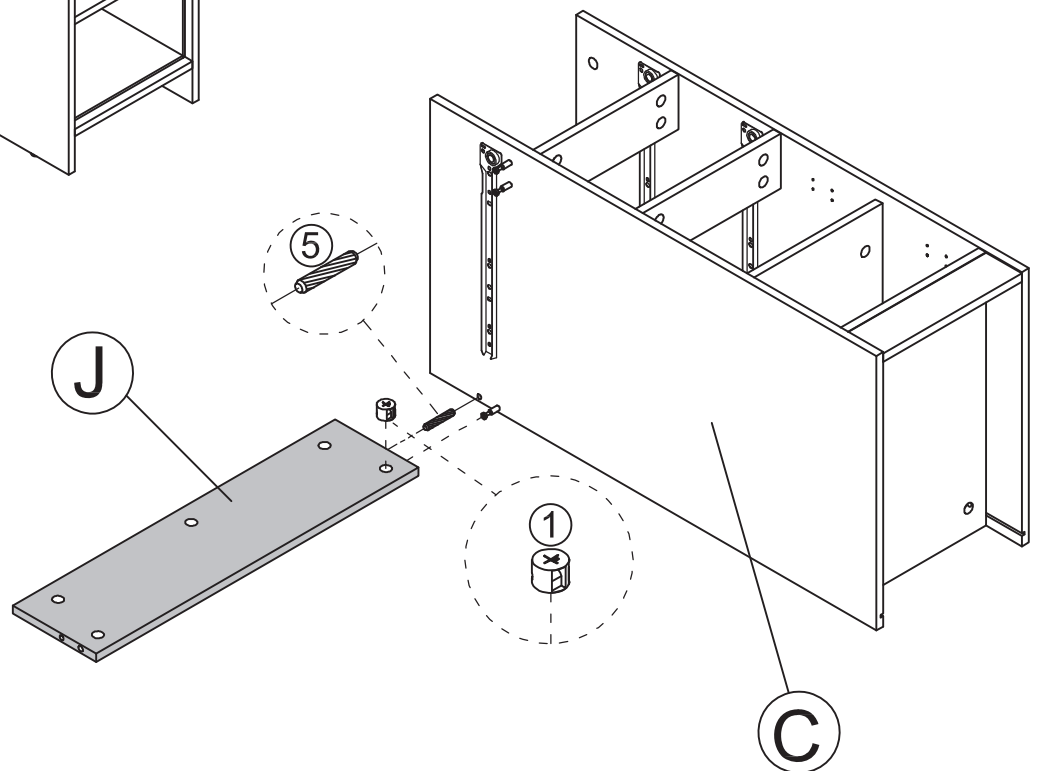
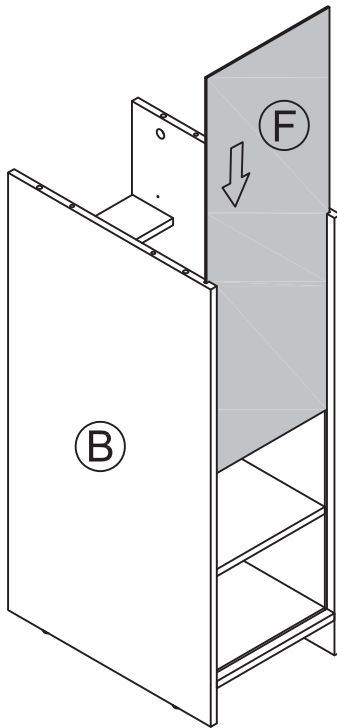
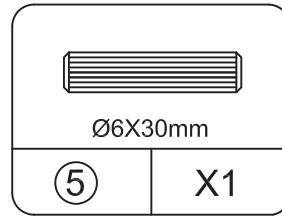
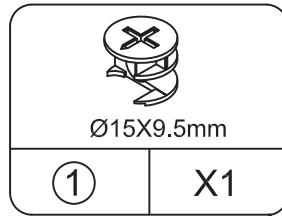


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

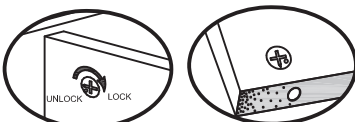

Proper orientation of CAM LOCK


STEP17

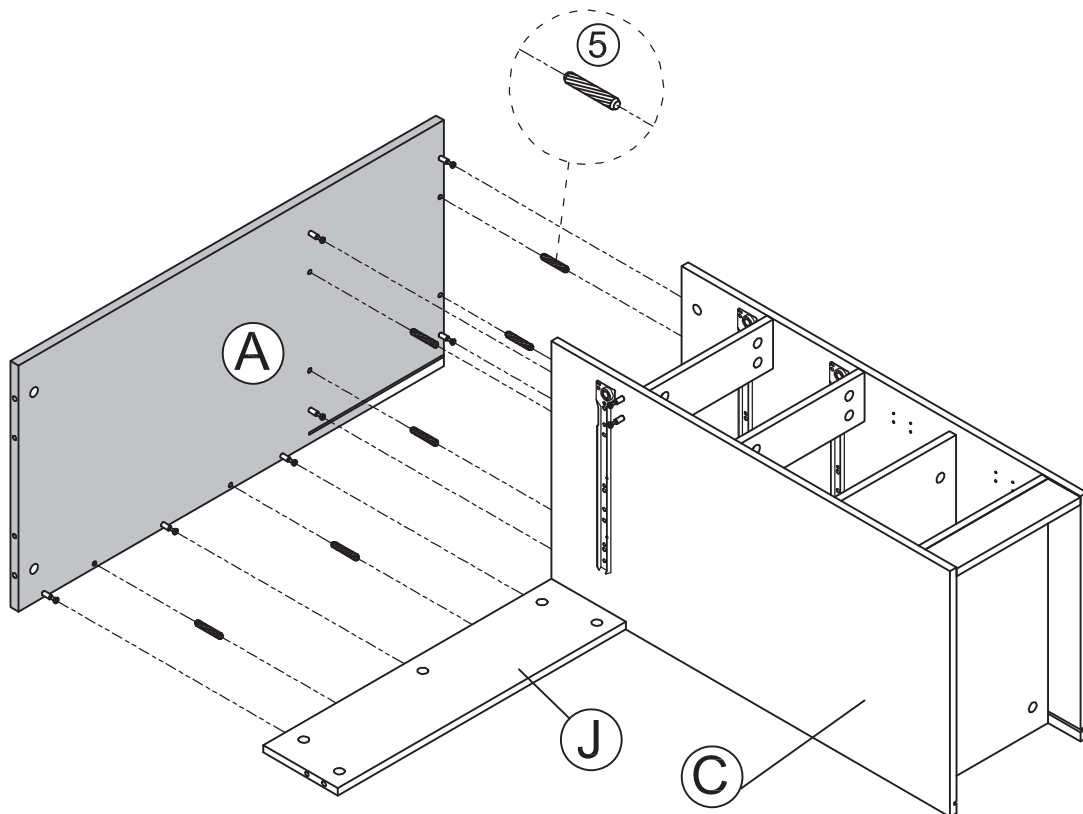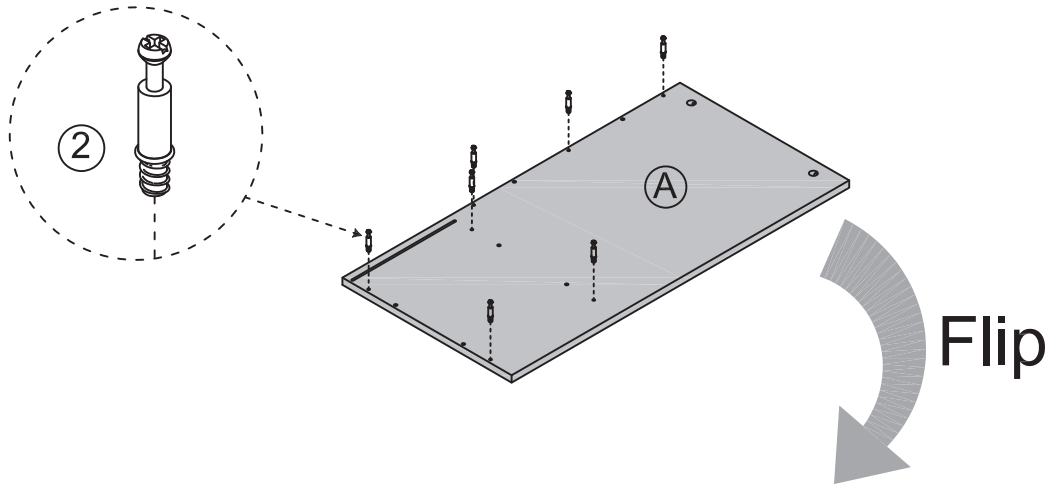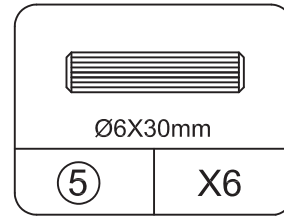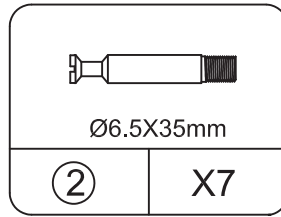



Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

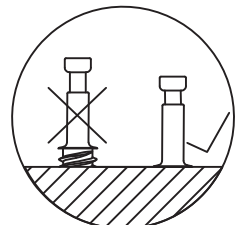

STEP18


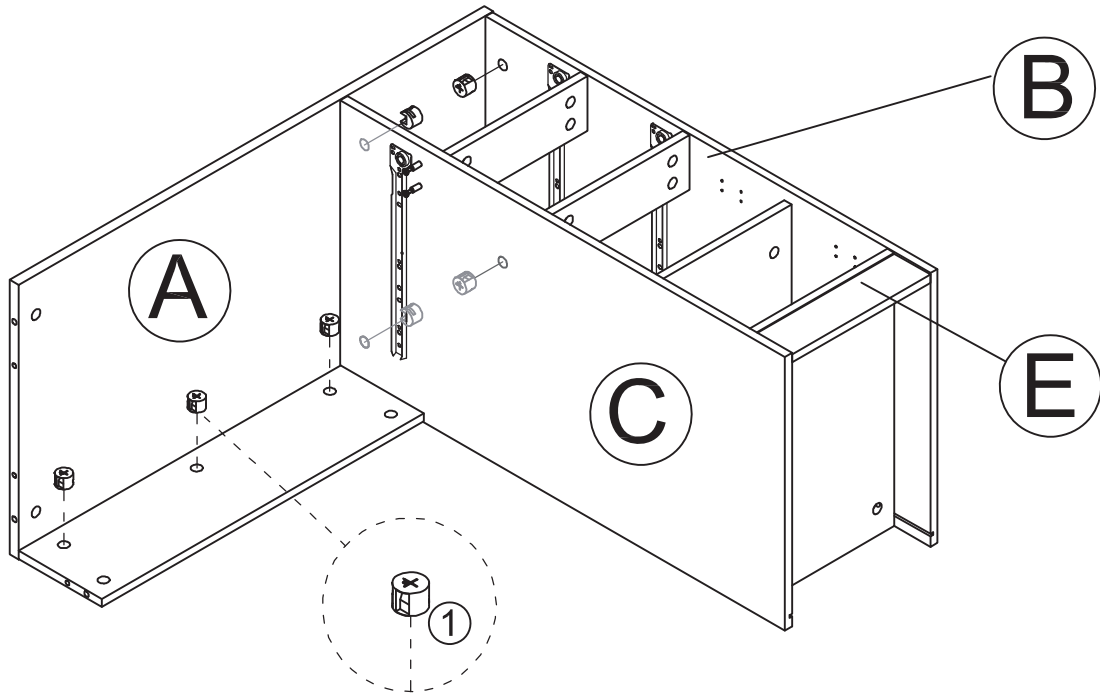
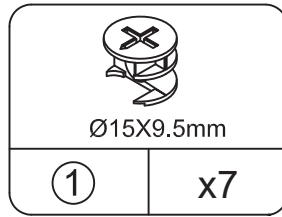


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

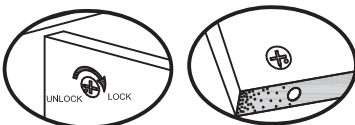


Proper orientation of CAM LOCK

STEP19

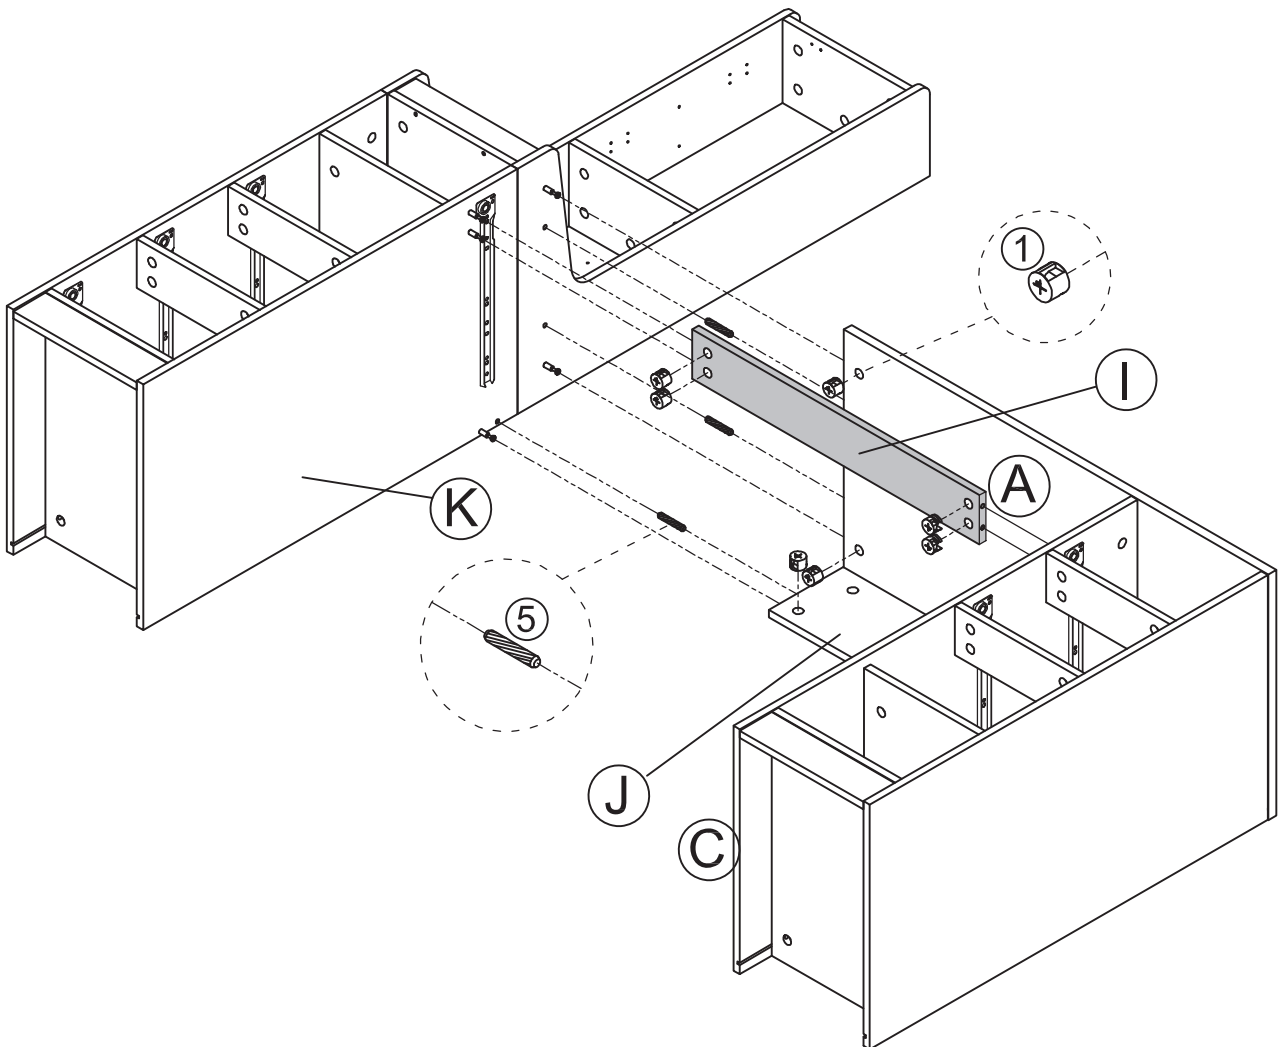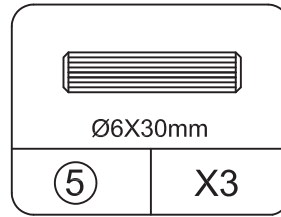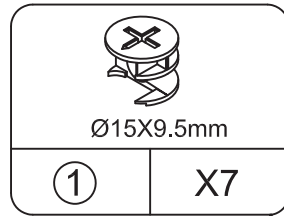


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

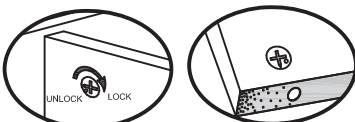


Proper orientation of CAM LOCK

STEP20




Ø15X9.5mm

①	X2
---	----

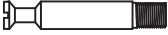


Ø6.5X35mm

②	X2
---	----




Ø6X30mm

⑤	X4
---	----

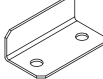


②⑧	x1
----	----




Ø3X12mm


⑨	x2
---	----

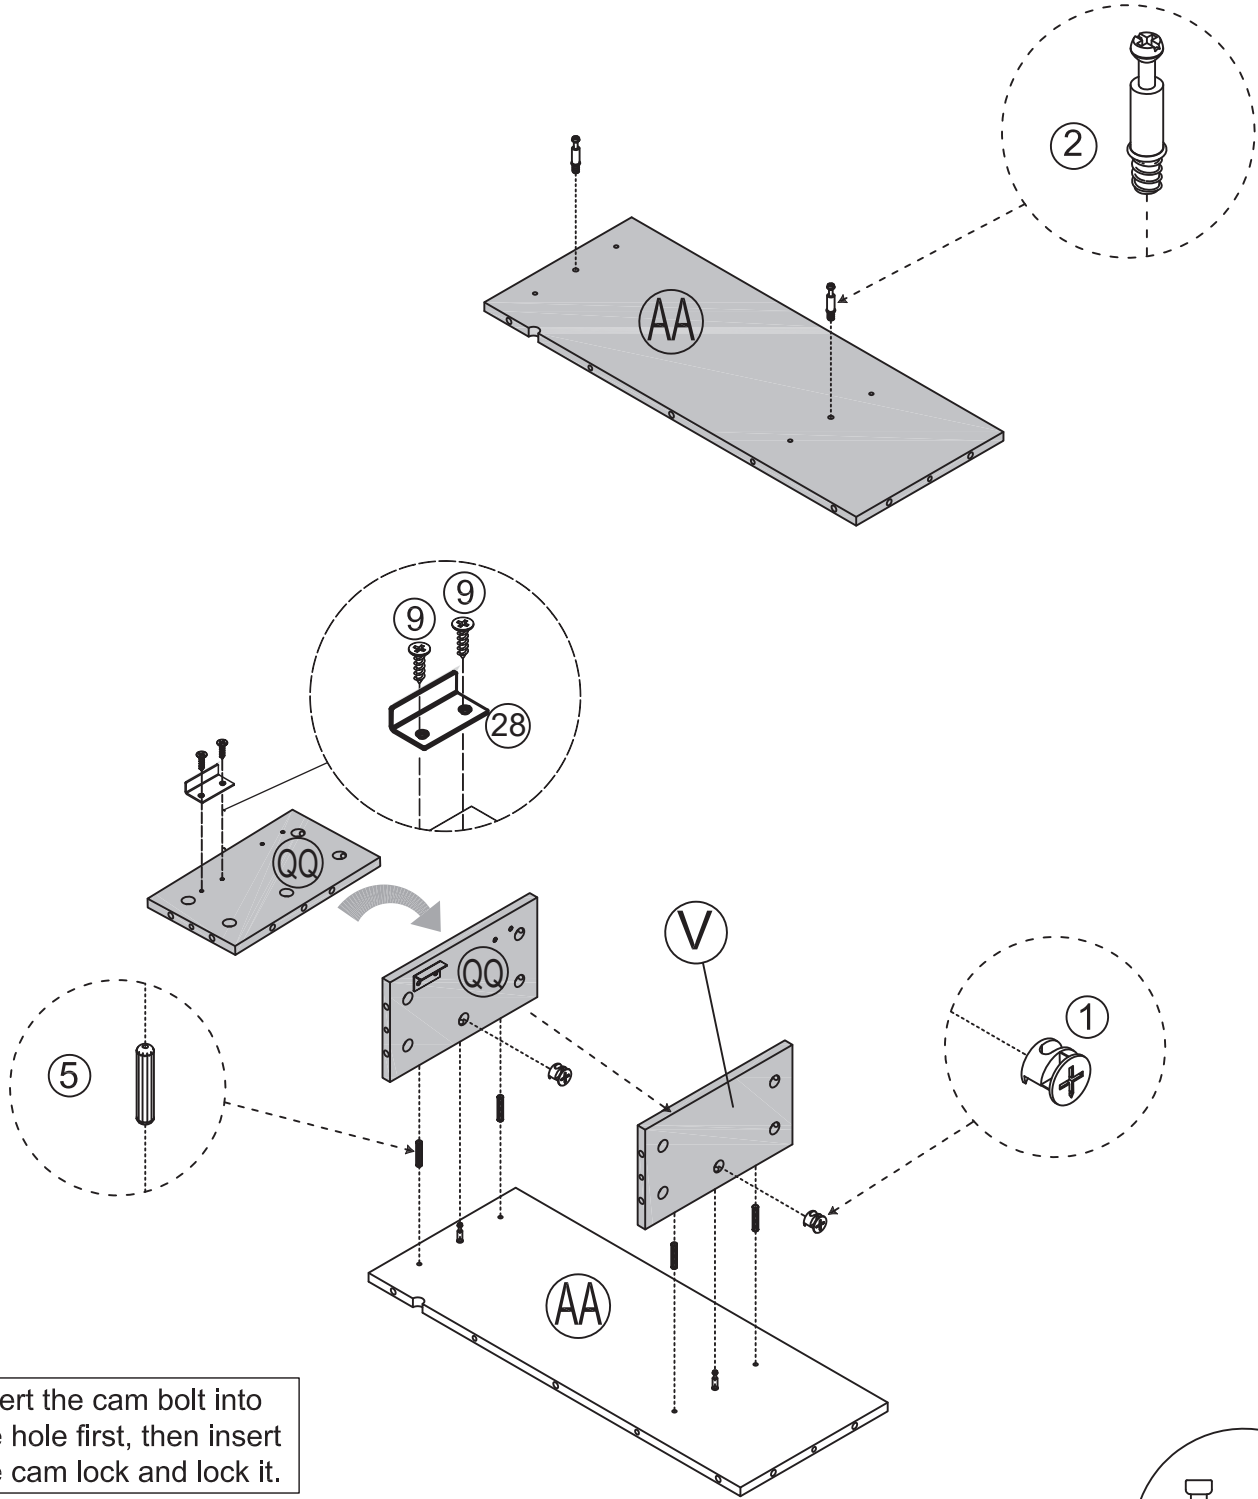


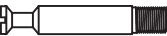

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

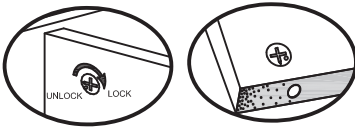


Proper orientation of CAM LOCK

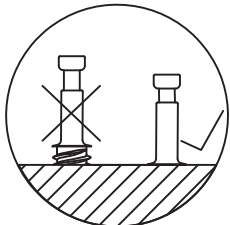


STEP21


 Ø15X9.5mm	 Ø6.5X35mm	 Ø6X30mm
① X2	② X2	⑤ X1

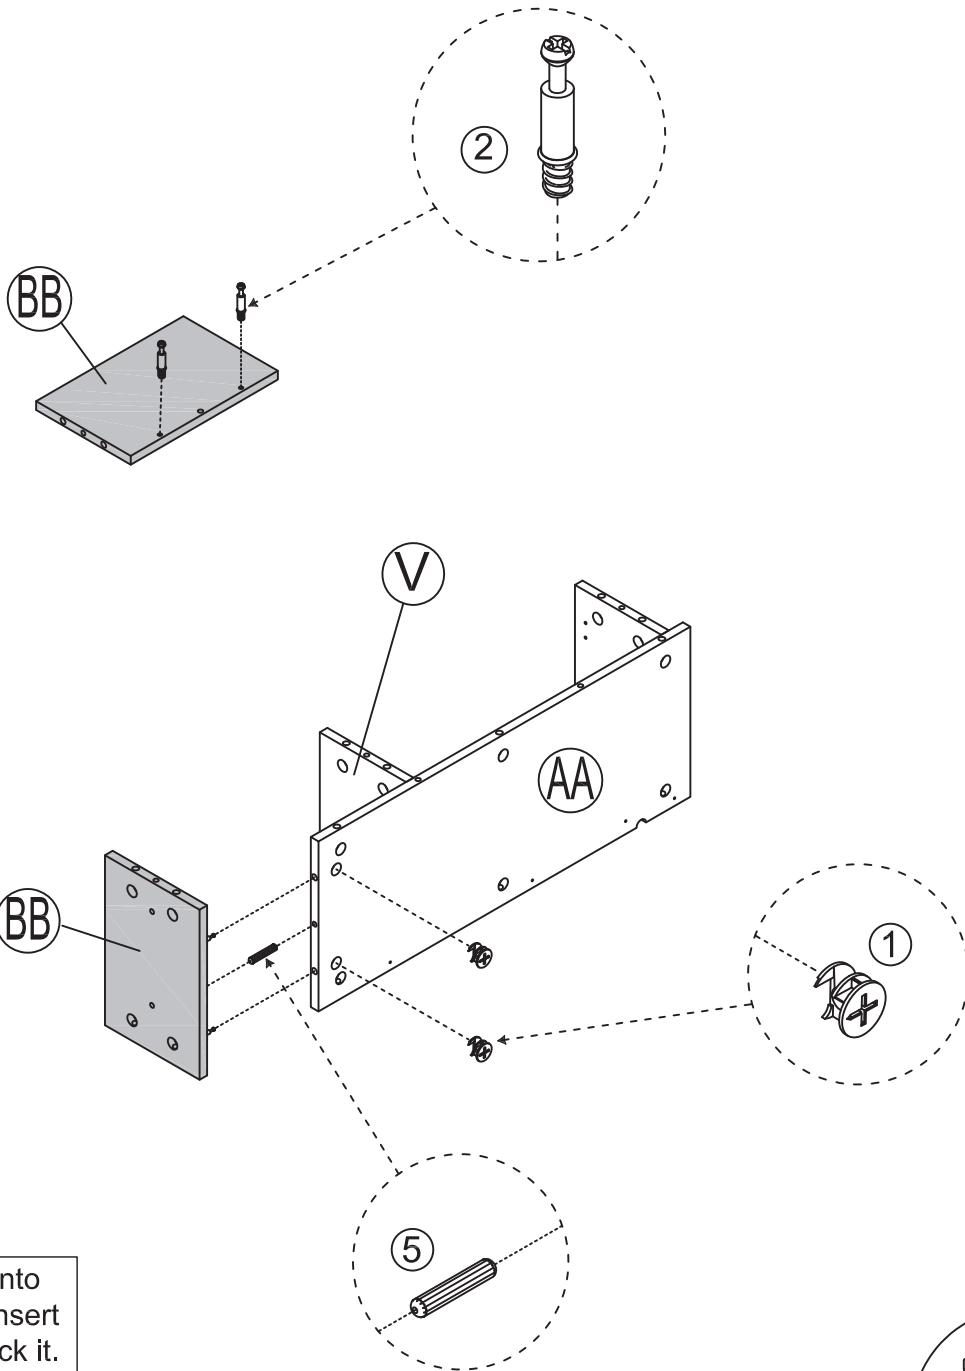

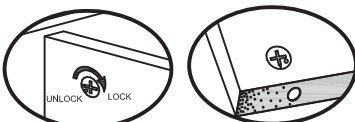


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


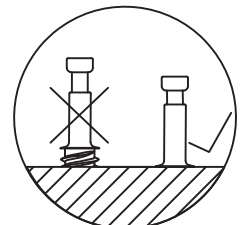


Proper orientation of CAM LOCK




STEP22



 Ø15X9.5mm		 Ø6.5X35mm		 Ø6X30mm	
①	X6	②	X9	⑤	X5

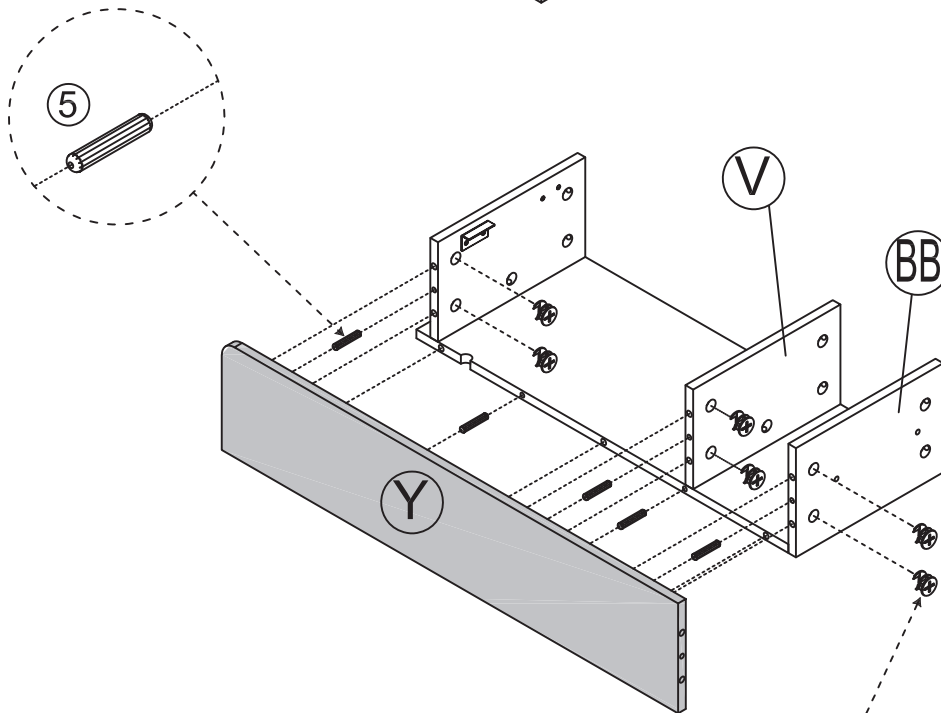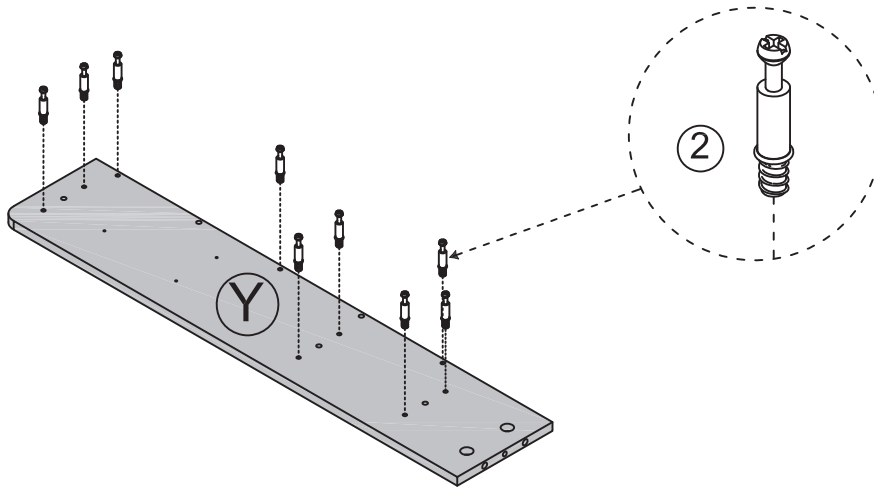



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

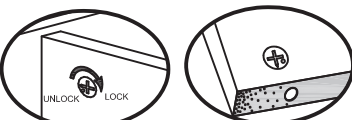


Proper orientation of CAM LOCK

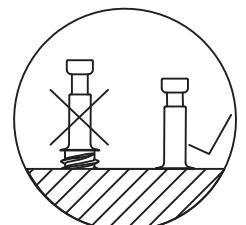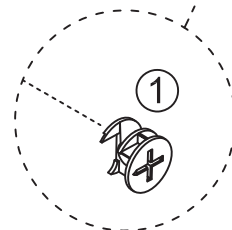



STEP23

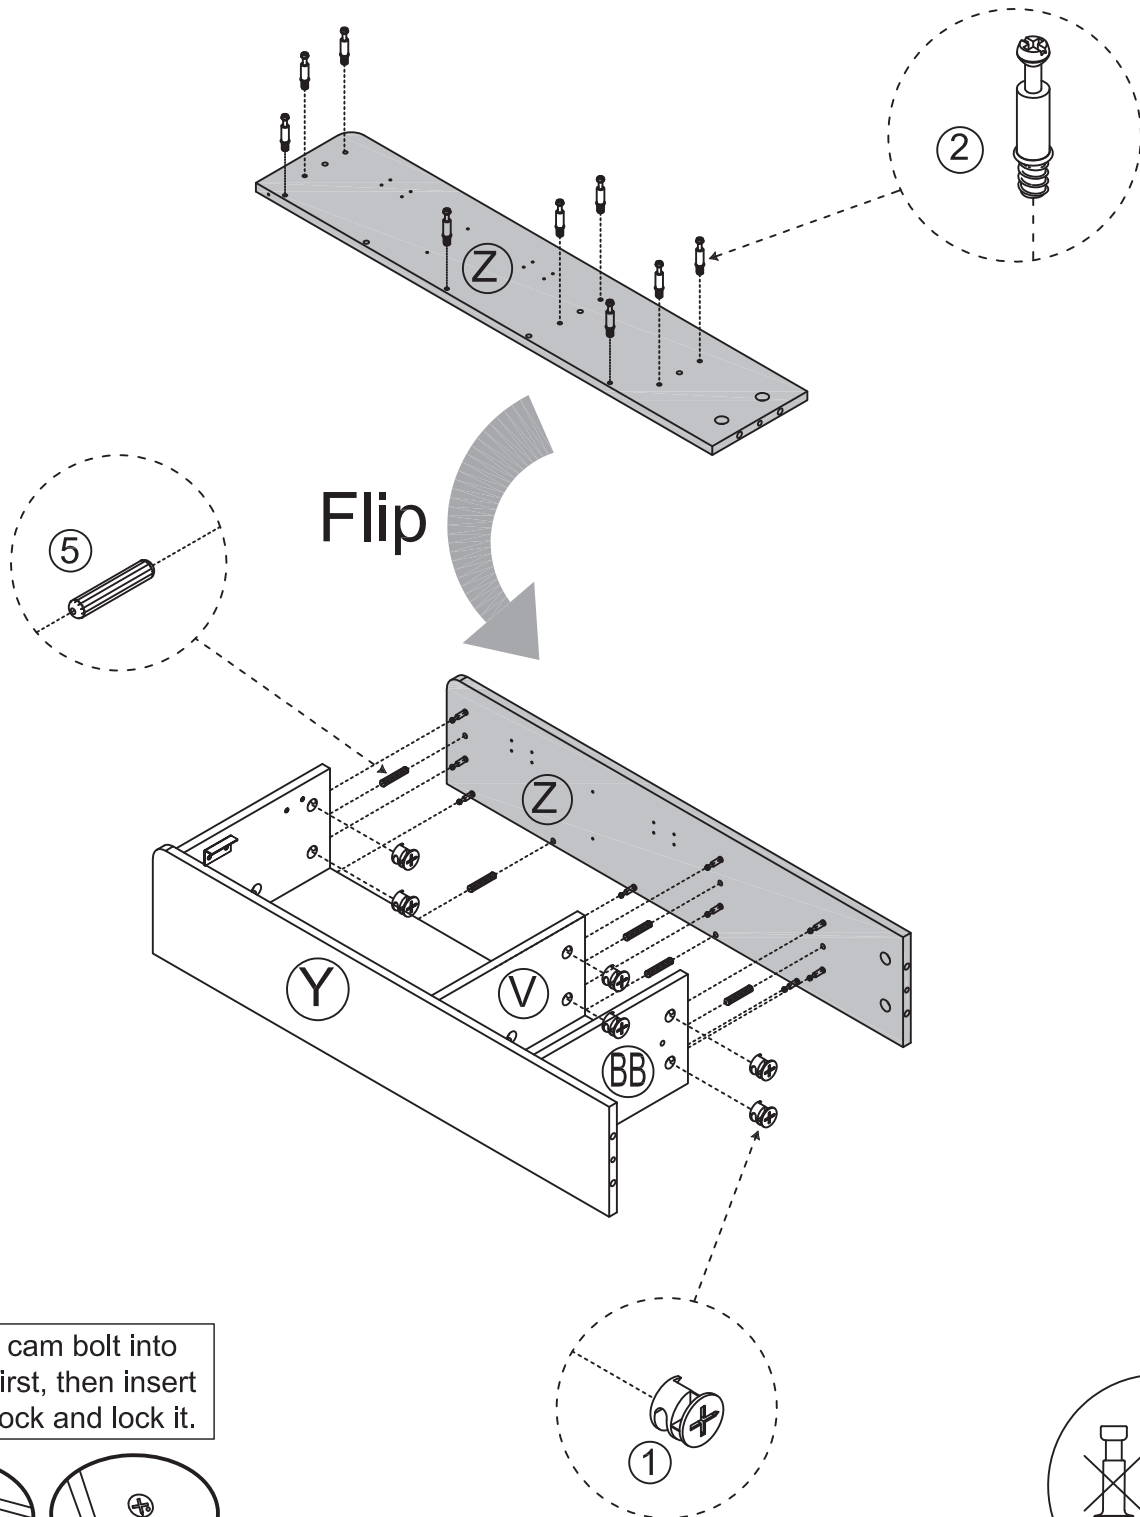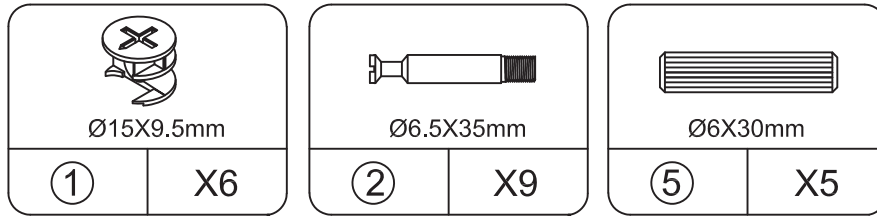




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

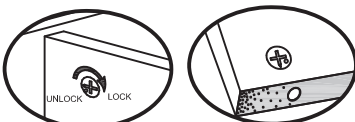


Proper orientation of CAM LOCK

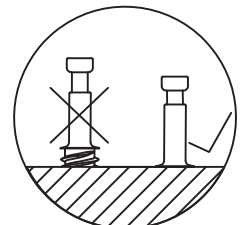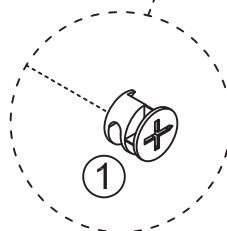

STEP24


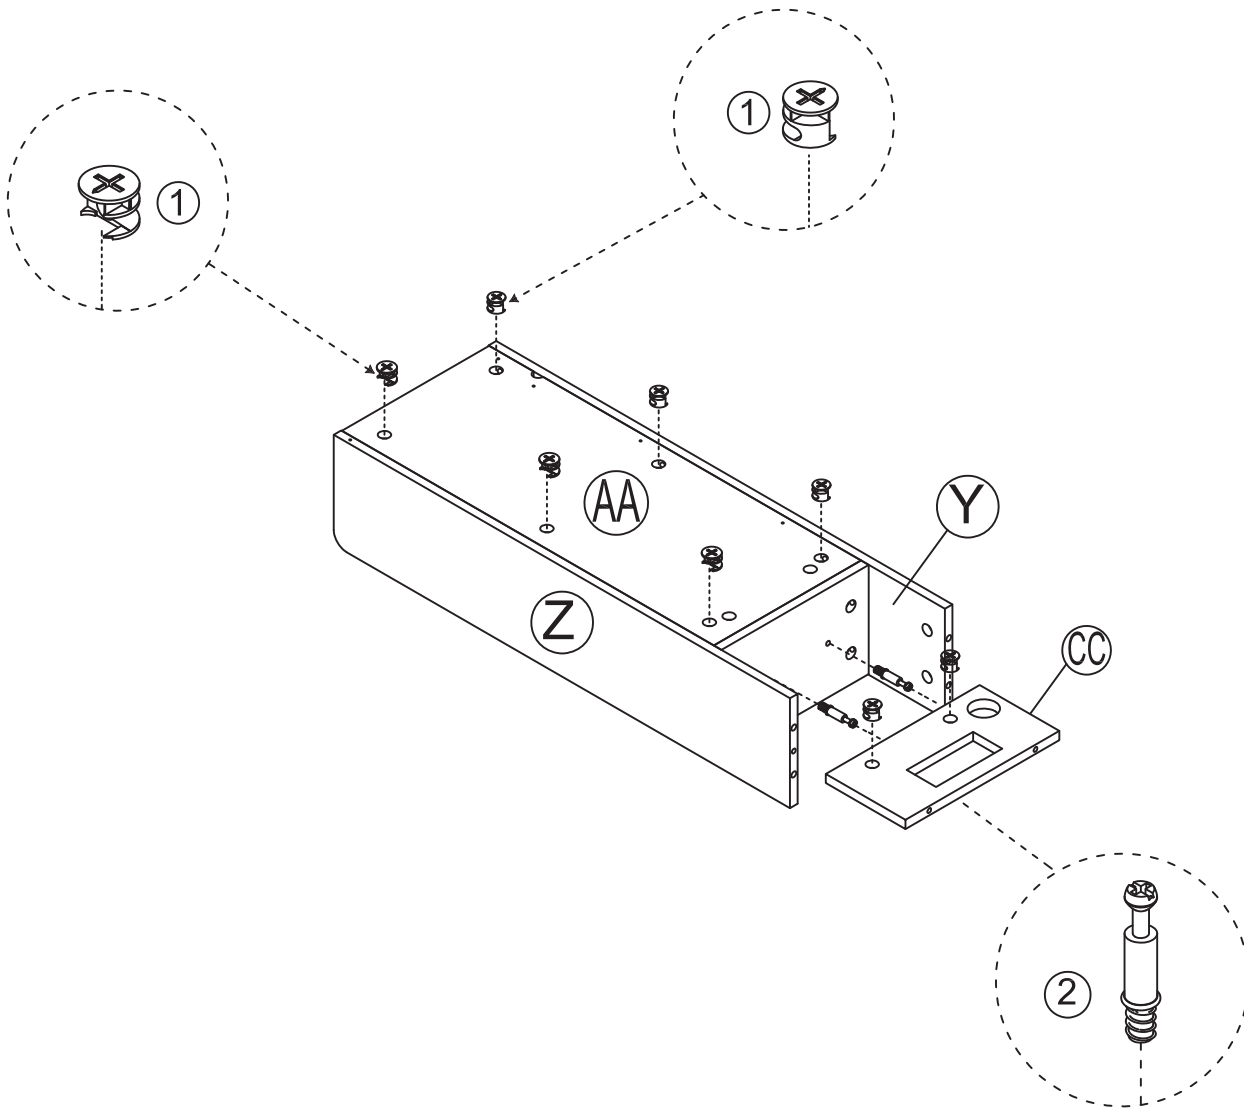
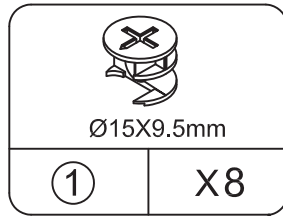
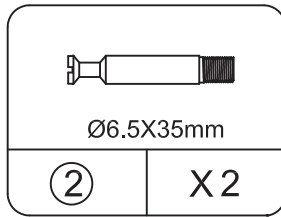


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



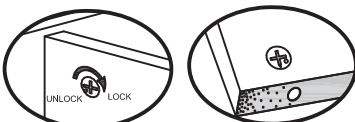


Proper orientation of CAM LOCK


STEP25

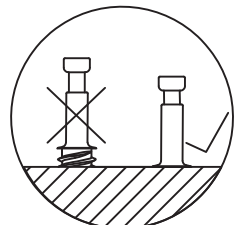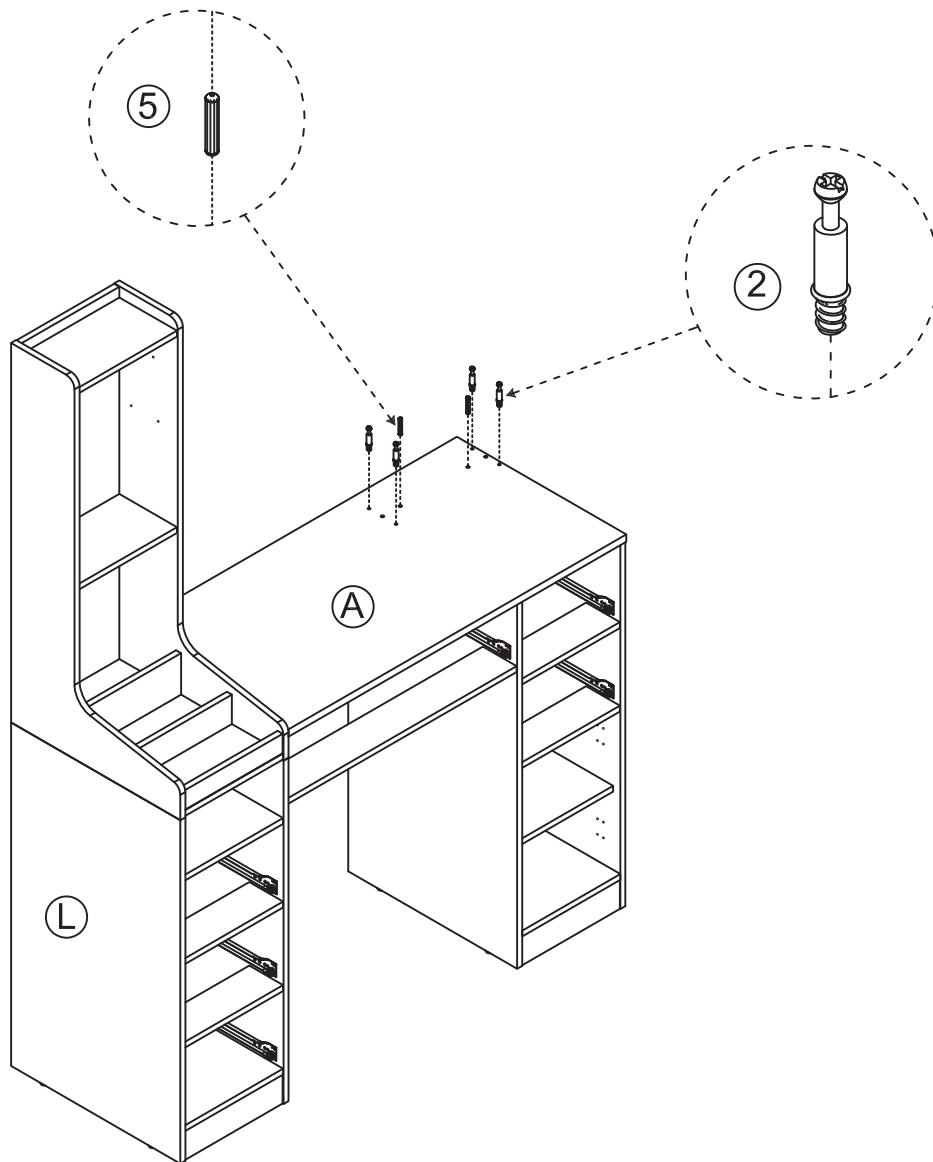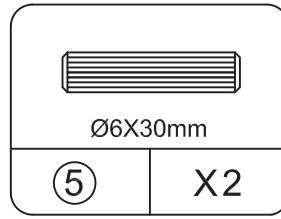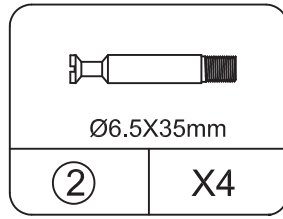


STEP26

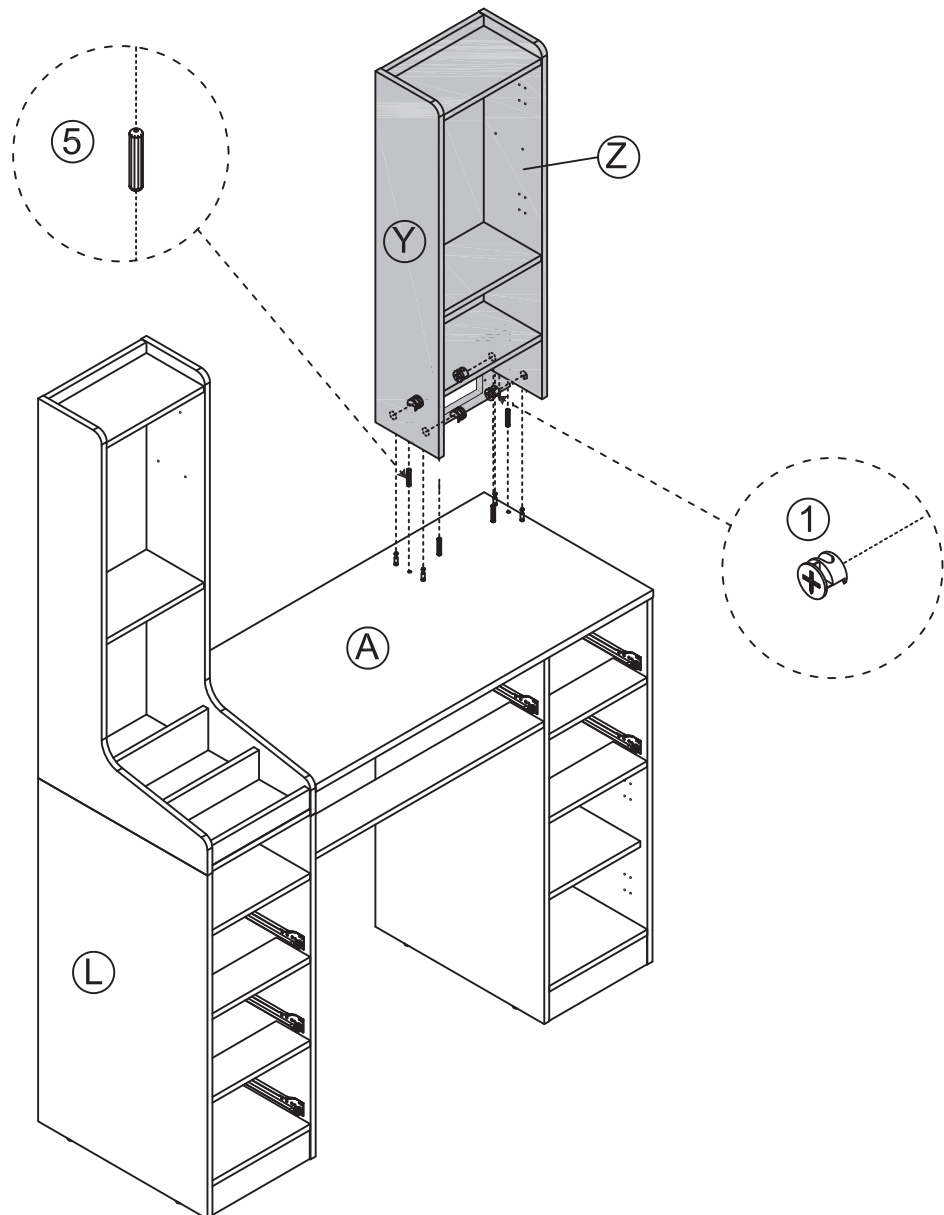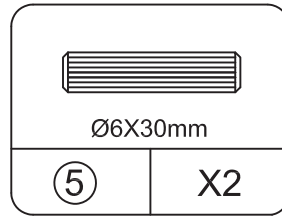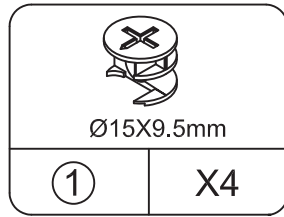


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

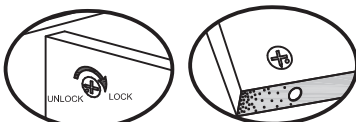


Proper orientation of CAM LOCK

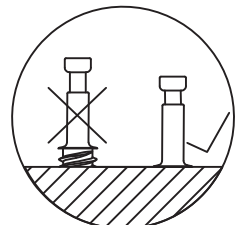


STEP27

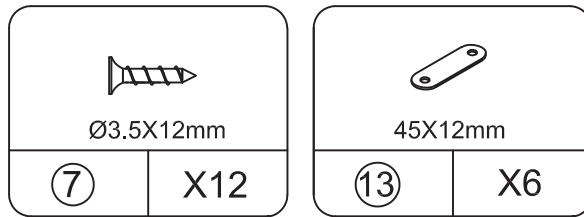

When installing accessories,
you need to move closer to the middle




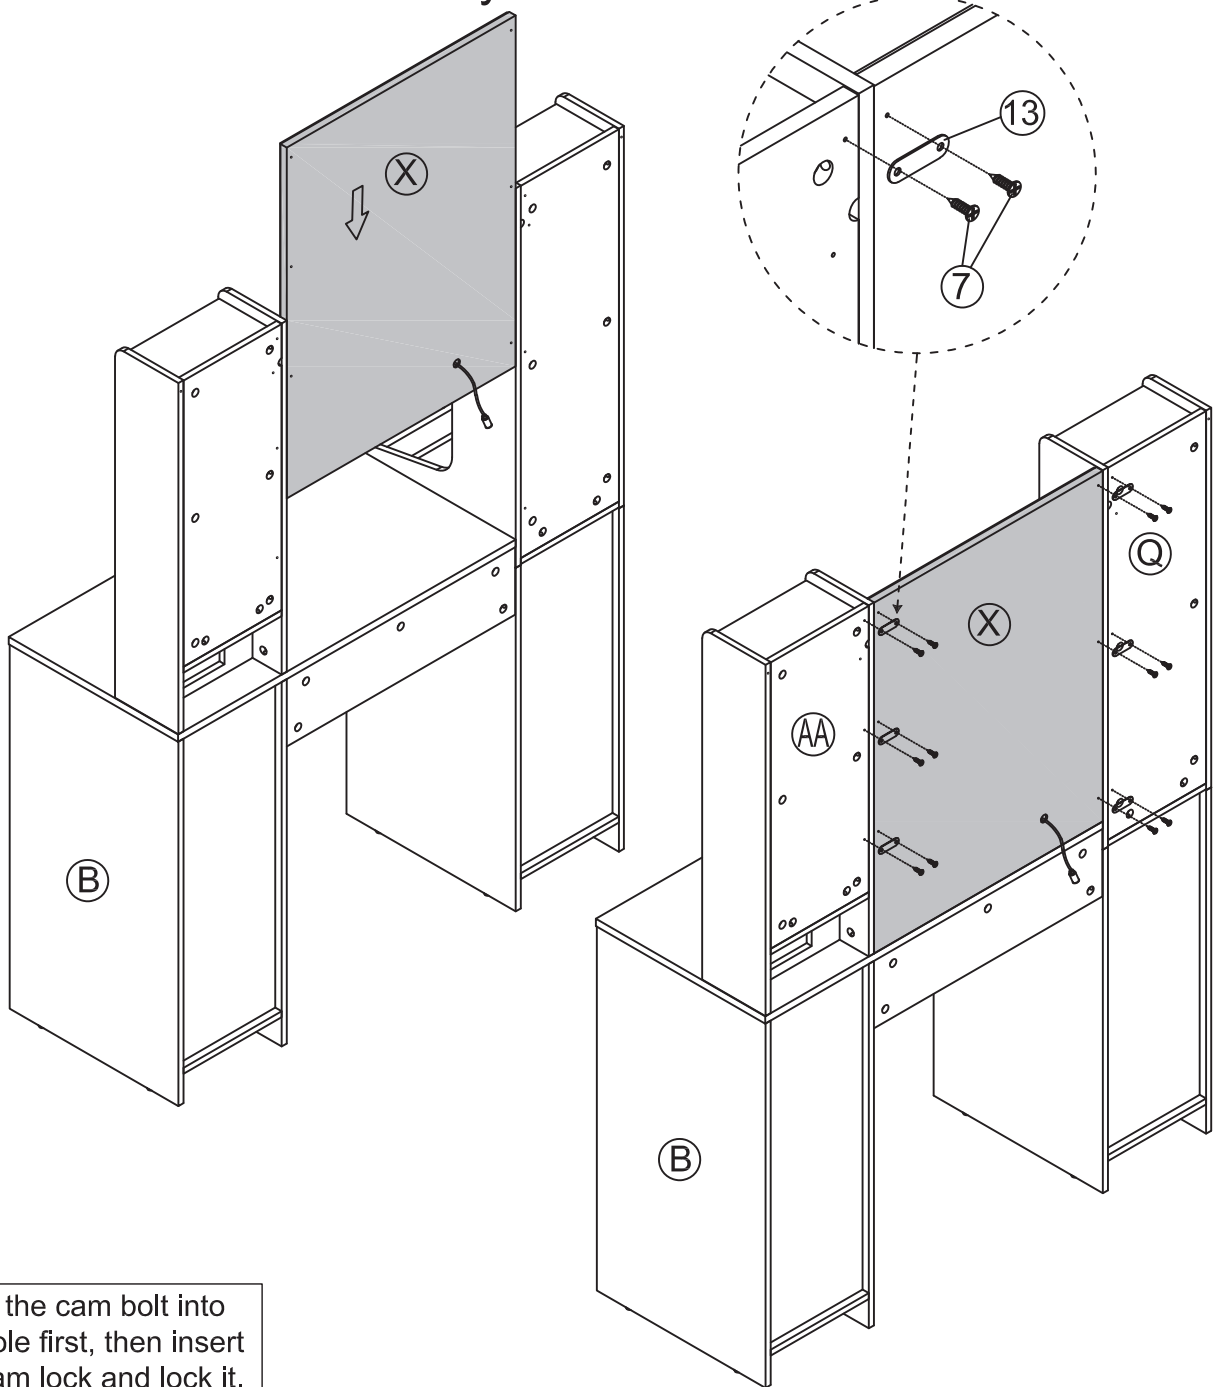


Insert the cam bolt into
the hole first, then insert
the cam lock and lock it.


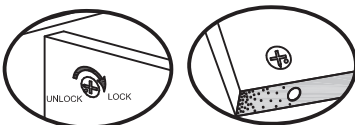


Proper orientation of CAM LOCK




STEP28

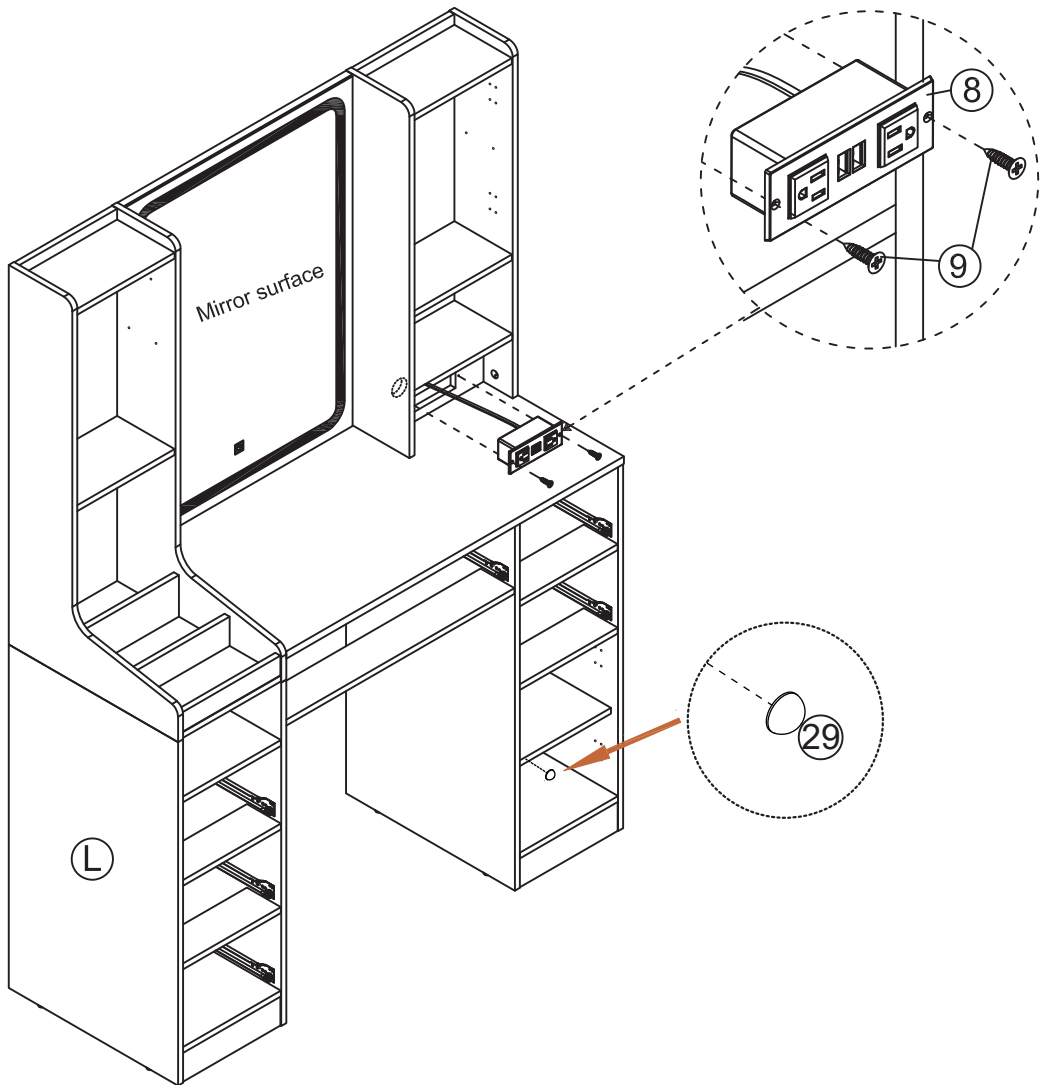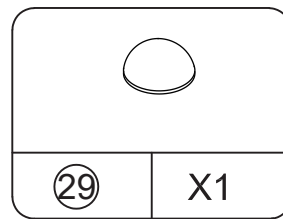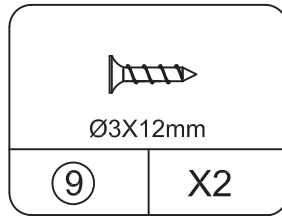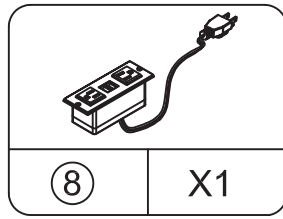

STEP29

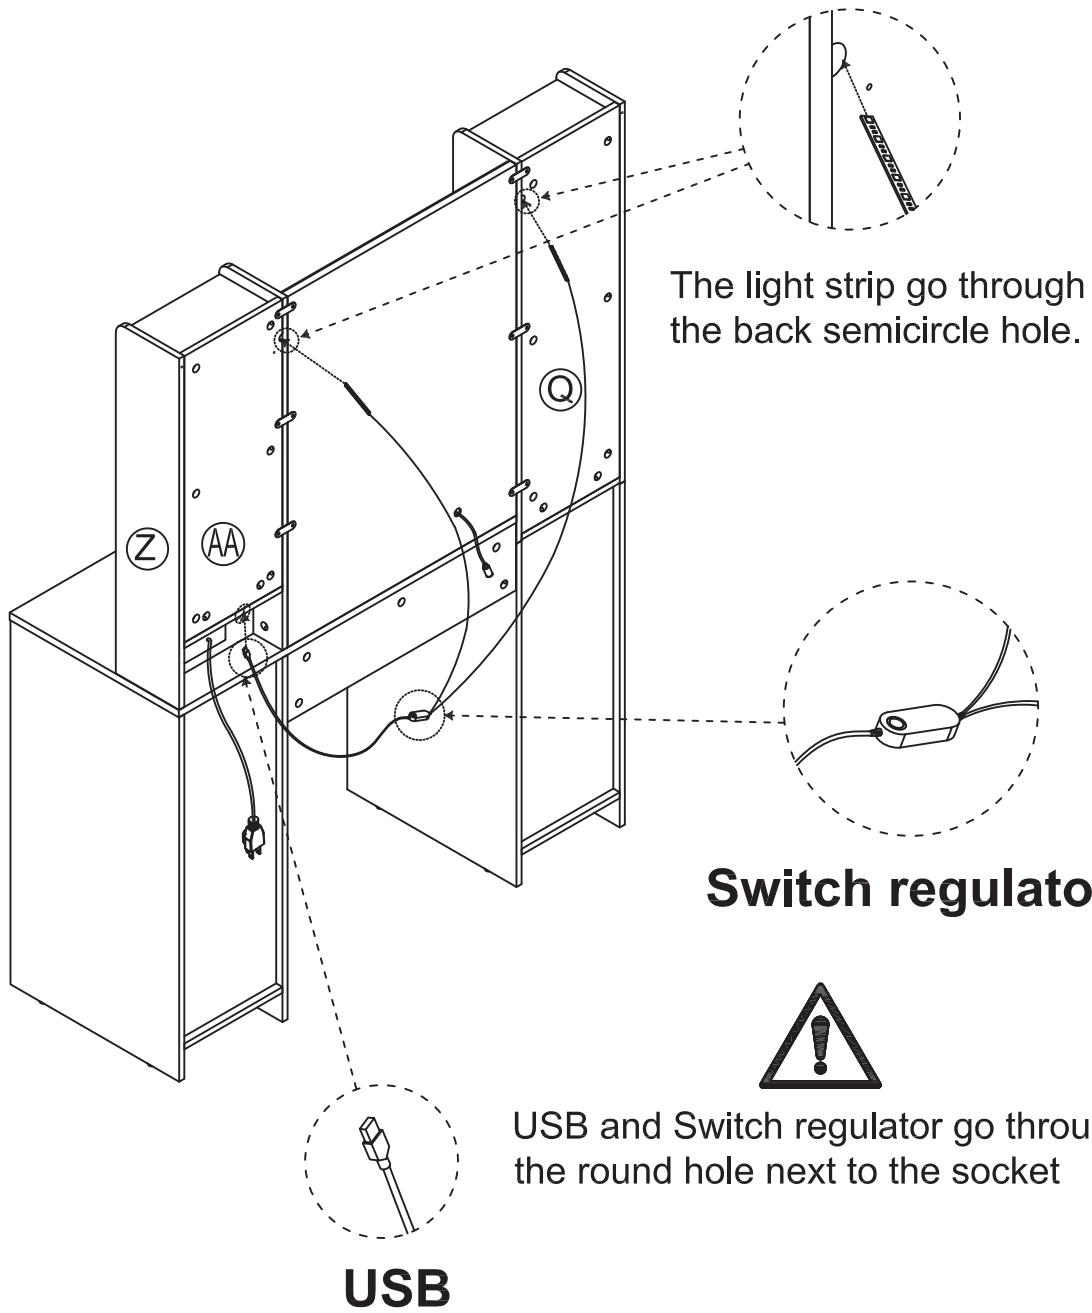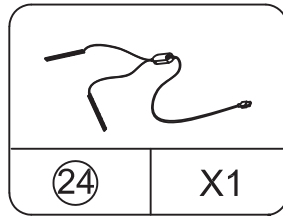


STEP30

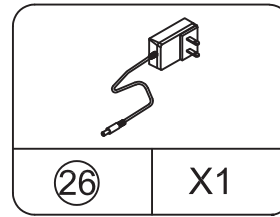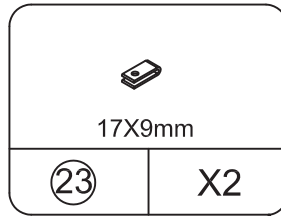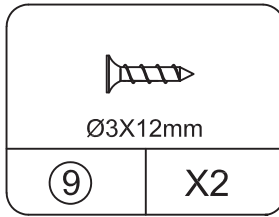

First of all, the lamp belt line is fixed on the P and Y board with the pressure buckle 23#, and then Tear off the back glue of the light strip and stick it on the PP and QQ board.

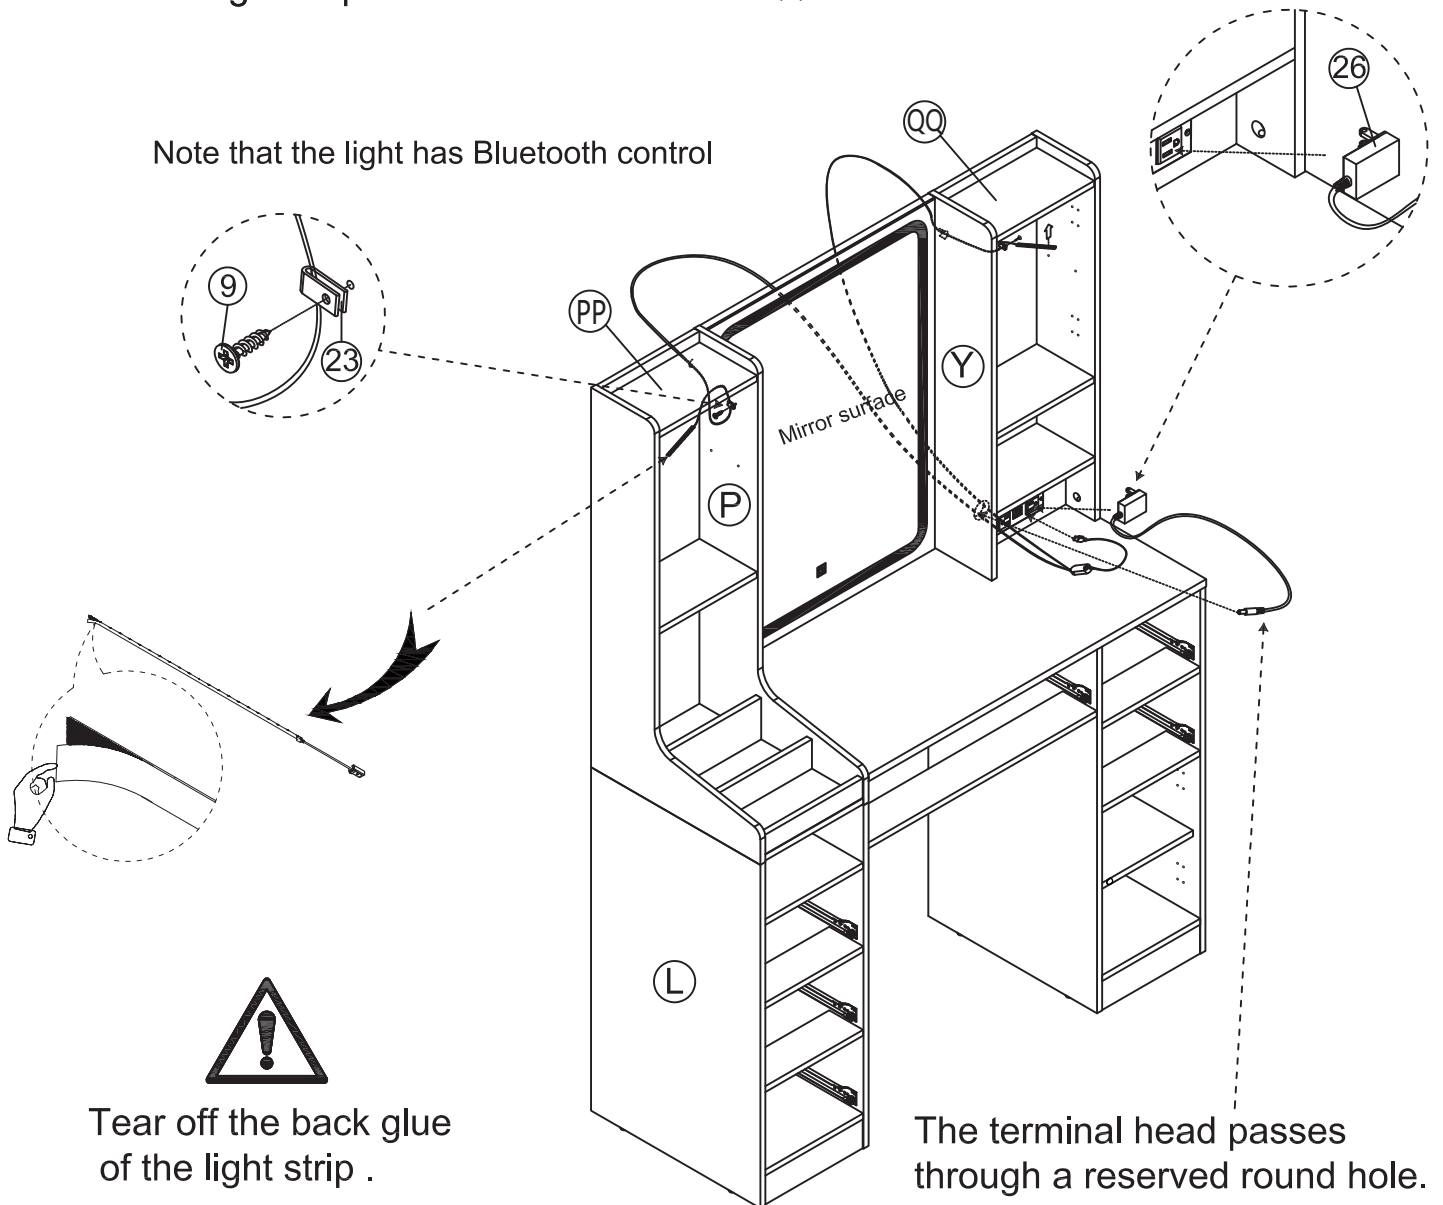


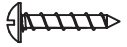

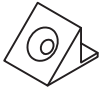
Note that the light has Bluetooth control




Tear off the back glue of the light strip .



The terminal head passes through a reserved round hole.

STEP31

 Ø3X12mm	 17X9mm	 160X20mm	 Ø4X14 mm	  Ø3×14mm
⑨ X2	⑳ X2	㉑ X2	㉒ X2	㉓ X16set

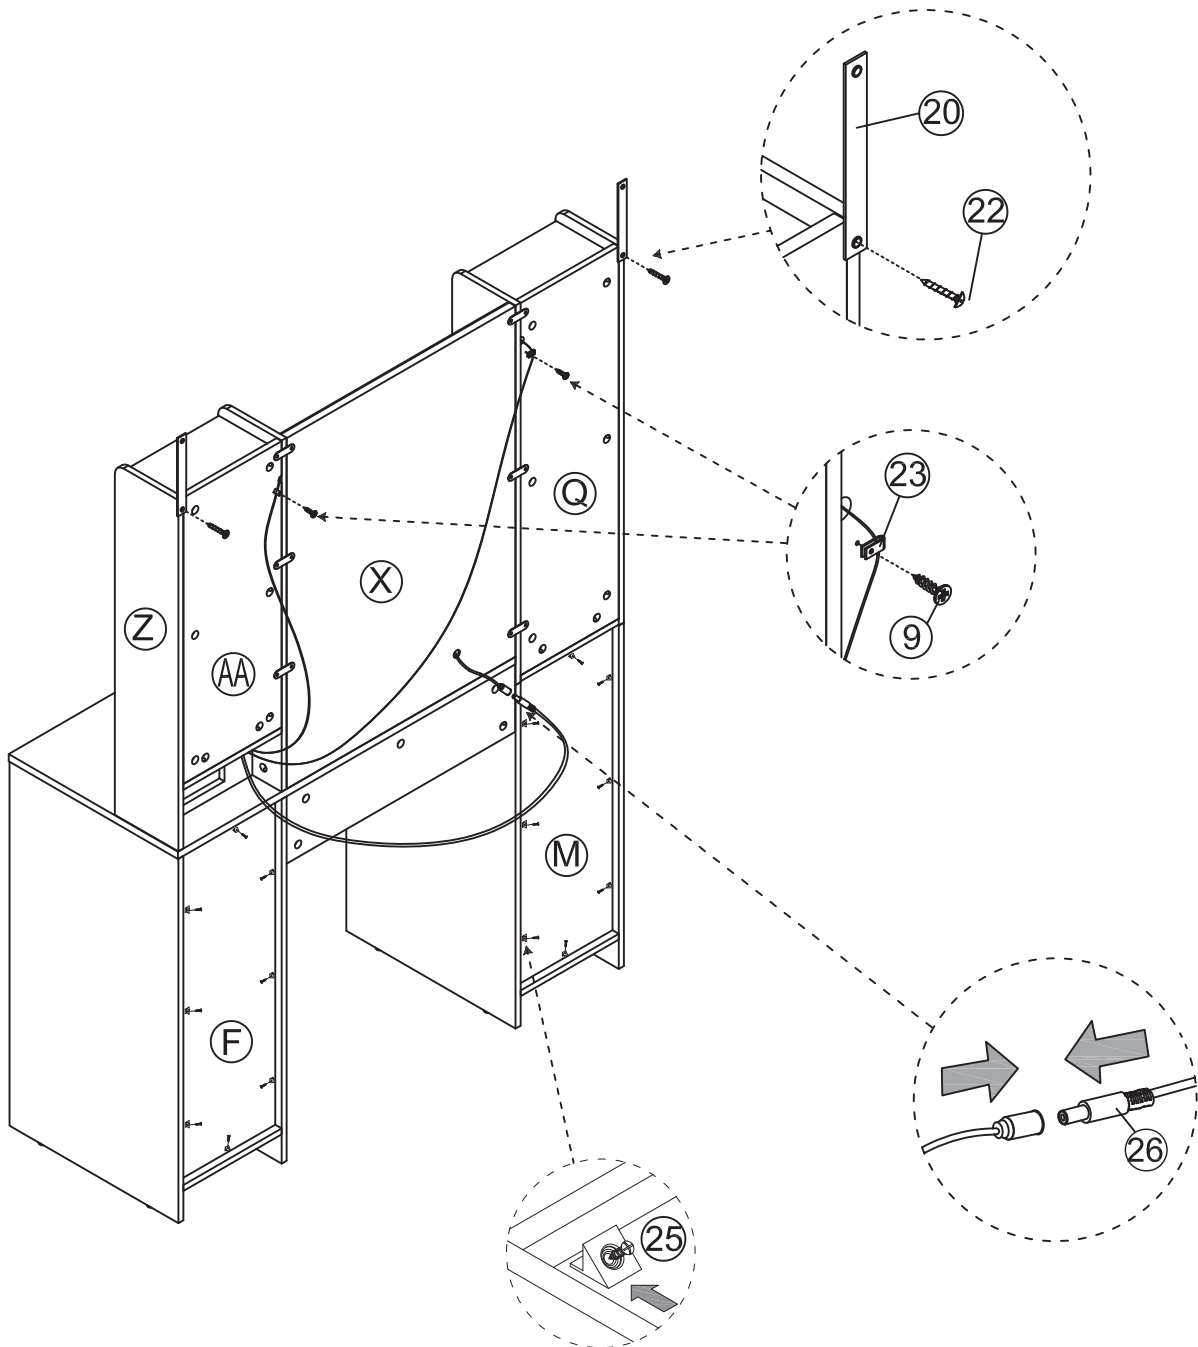


STEP32

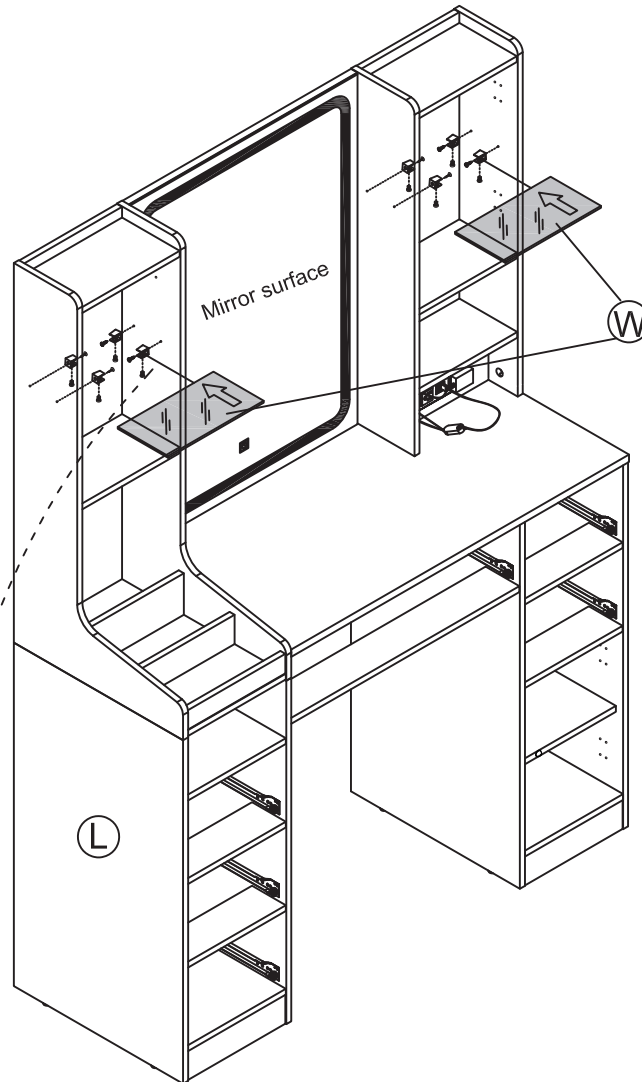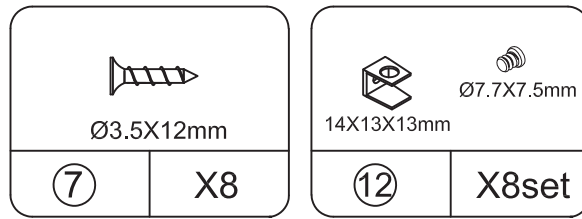


Step 1

Fix 12# with 7# Screw

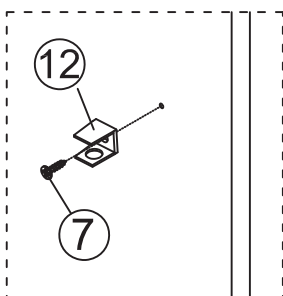


Step 2

Put the W part into 12# slot






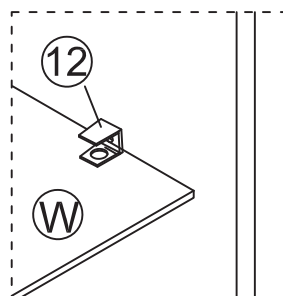


Step 3



Rotate 12# to secure the W part

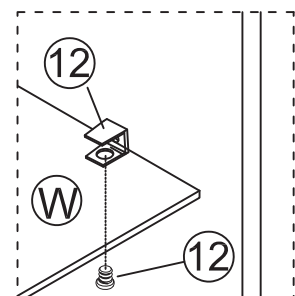




STEP33

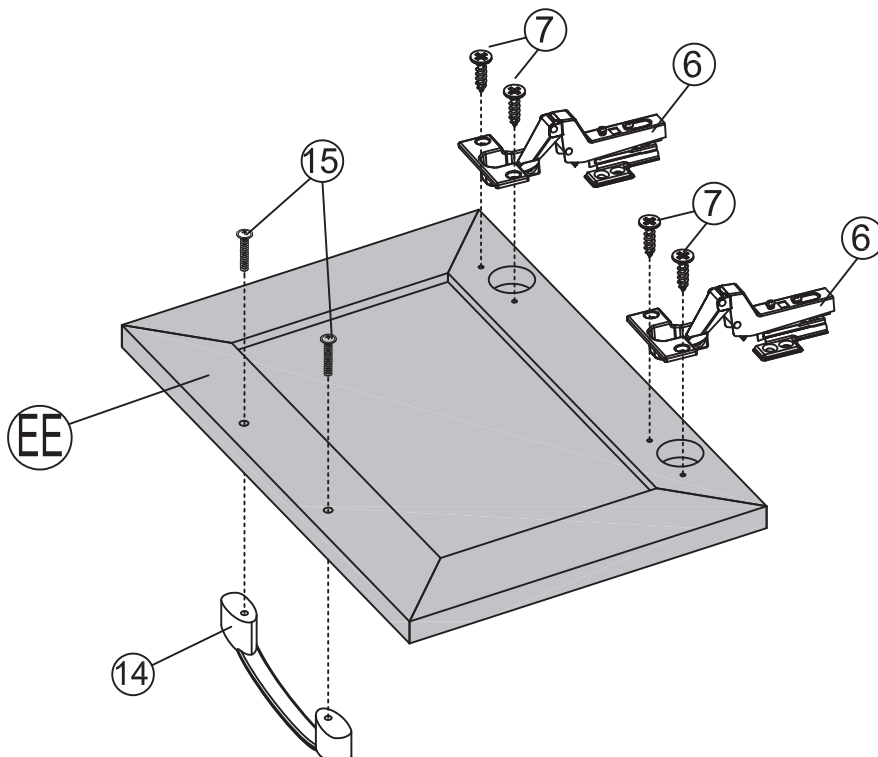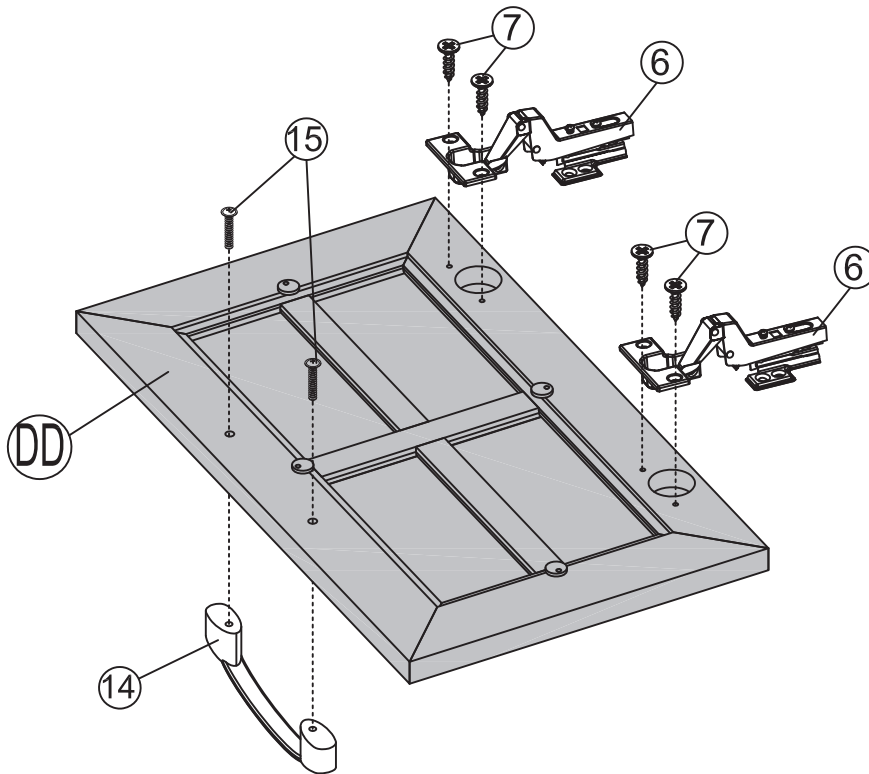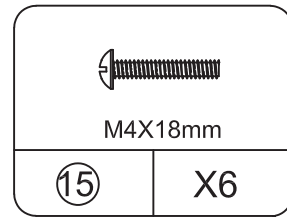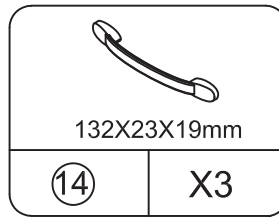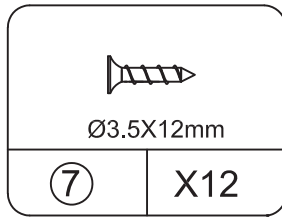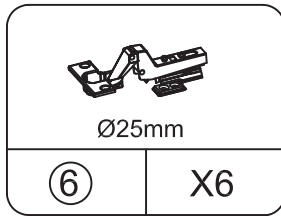



STEP34

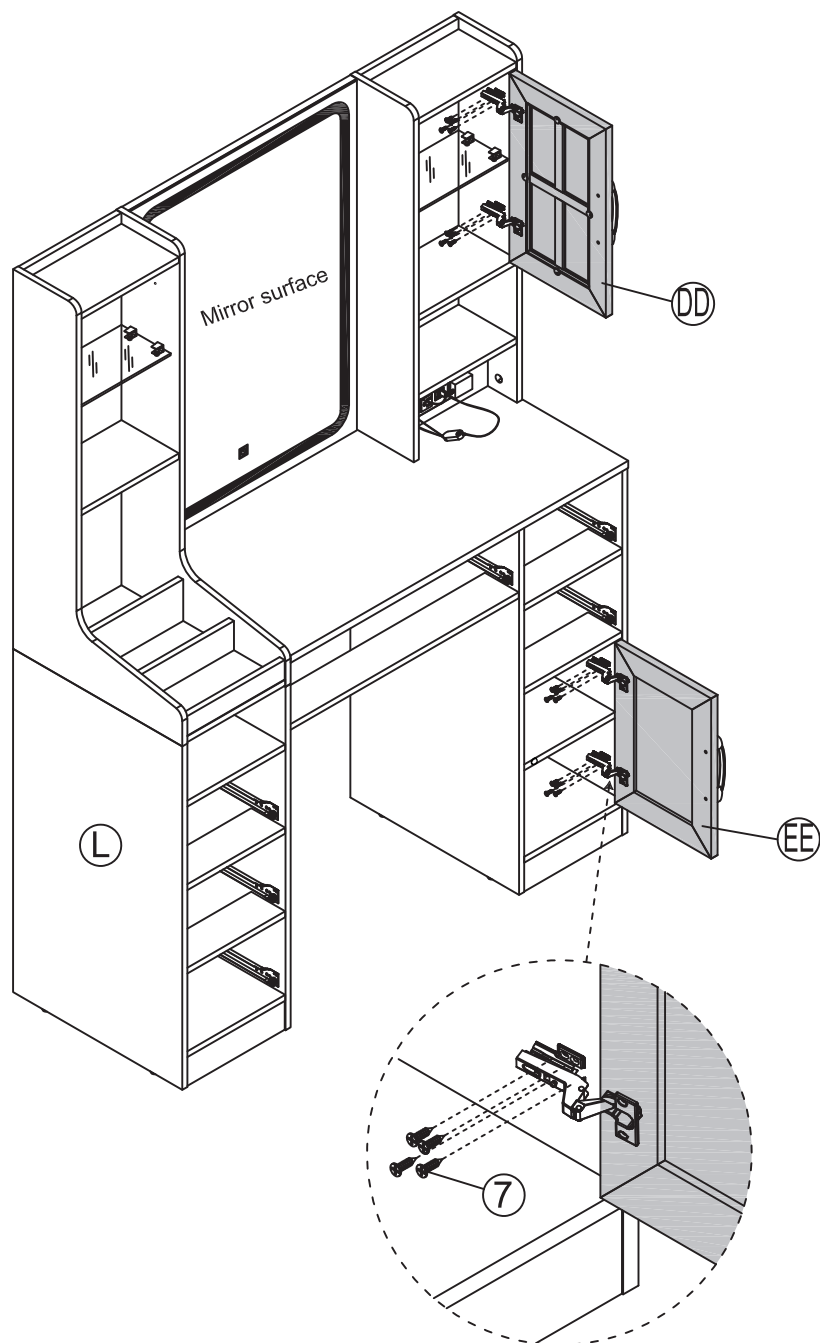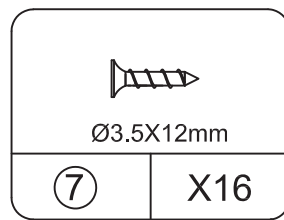

STEP35

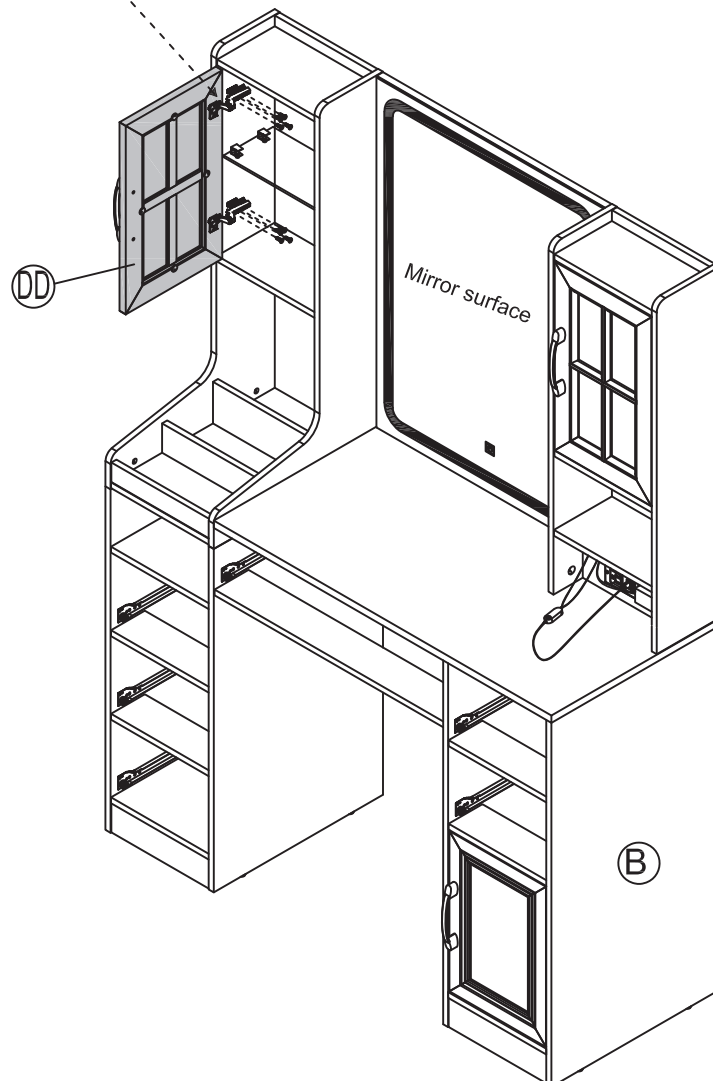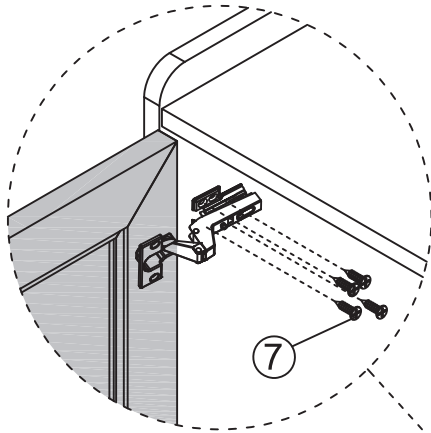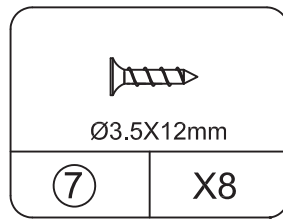


STEP36

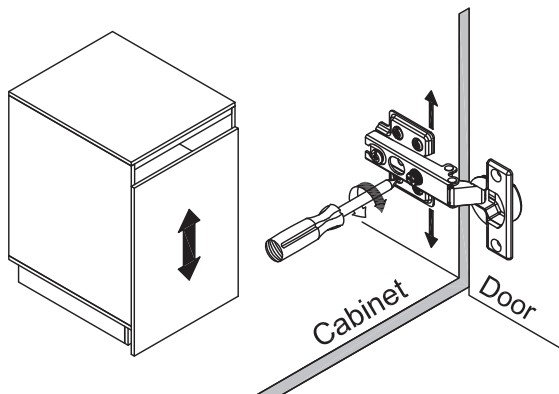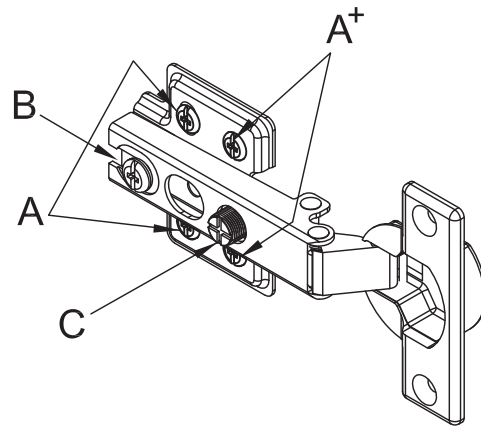


[How to adjust vertical height of the door]

- First remove the 2 screws "A+" on the hing .
- Then loosen the 2 screws "A" on the hinge so that it can be adjusted up or down a few millimeters.
- Then tighten "A" and reinstall "A+".

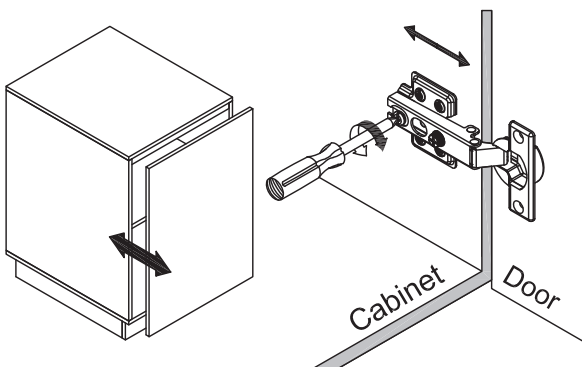

[How to adjust depth of the door]


- Loosen screw "B" and adjust the depth of th door.
- If screw "B" is loose, the depth of the door stil cannot be adjusted. Simply loosen the screw "C" slightly to adjust the position of the door forward and backward.
- After adjusting the position, tighten screw "B" last.

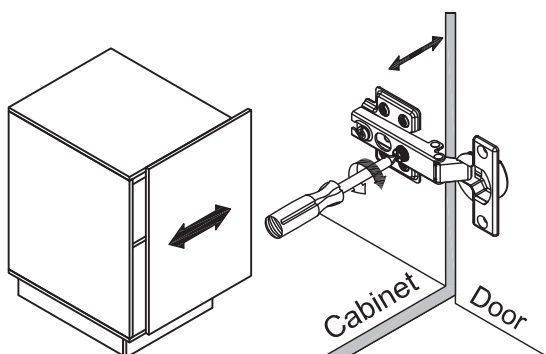

[How to adjust the level of the door]


- Turn screw "C" on hinge to adjust the level of

STEP37




Ø15X9.5mm

①	X20
---	-----

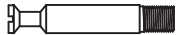


Ø6.5X35mm

②	X20
---	-----

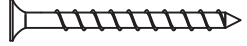


Ø4X35mm

⑩	X20
---	-----





Ø29X24mm

⑯	X5
---	----





M4X8mm


⑰	X5
---	----

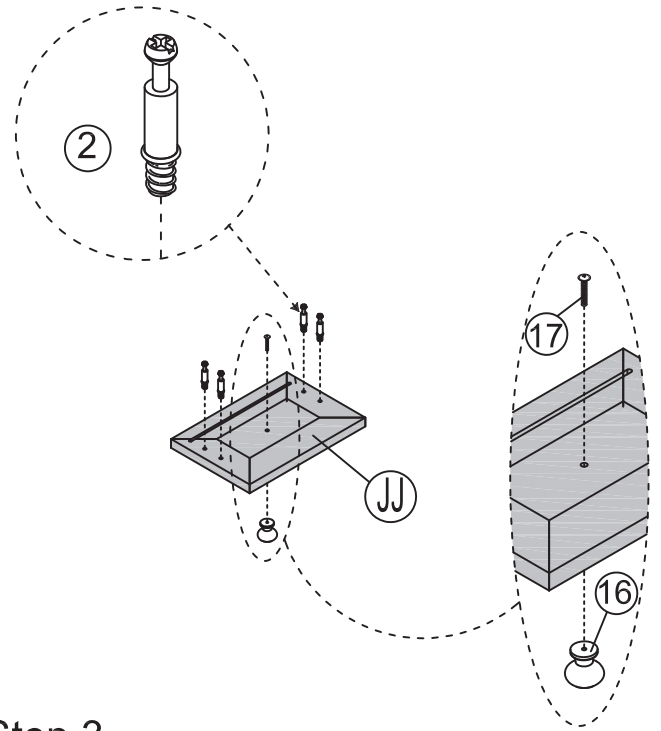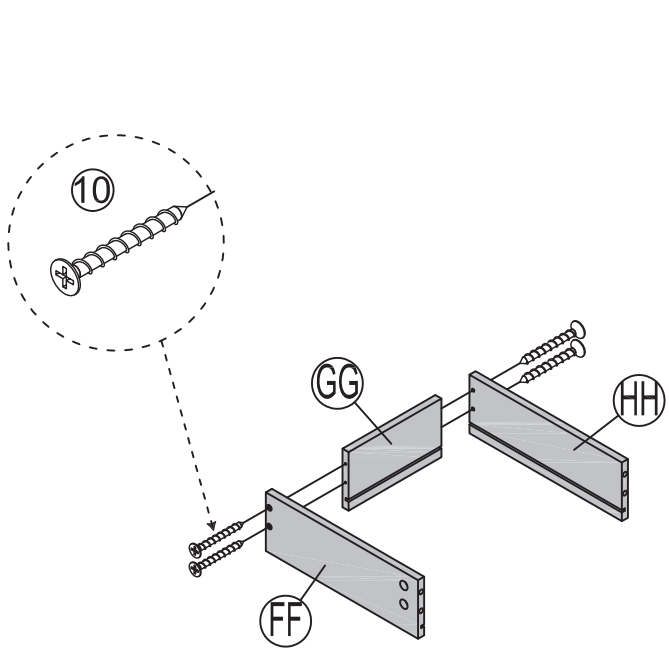


Step 1 Step 3
Step 2 Step 4

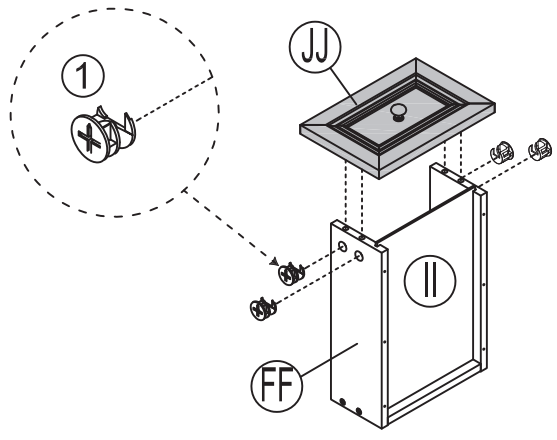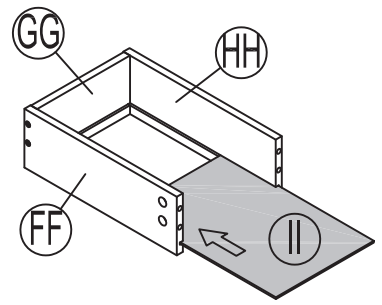





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

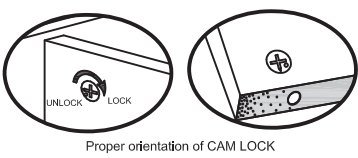

X5

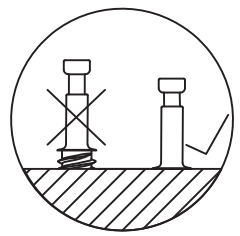


STEP38

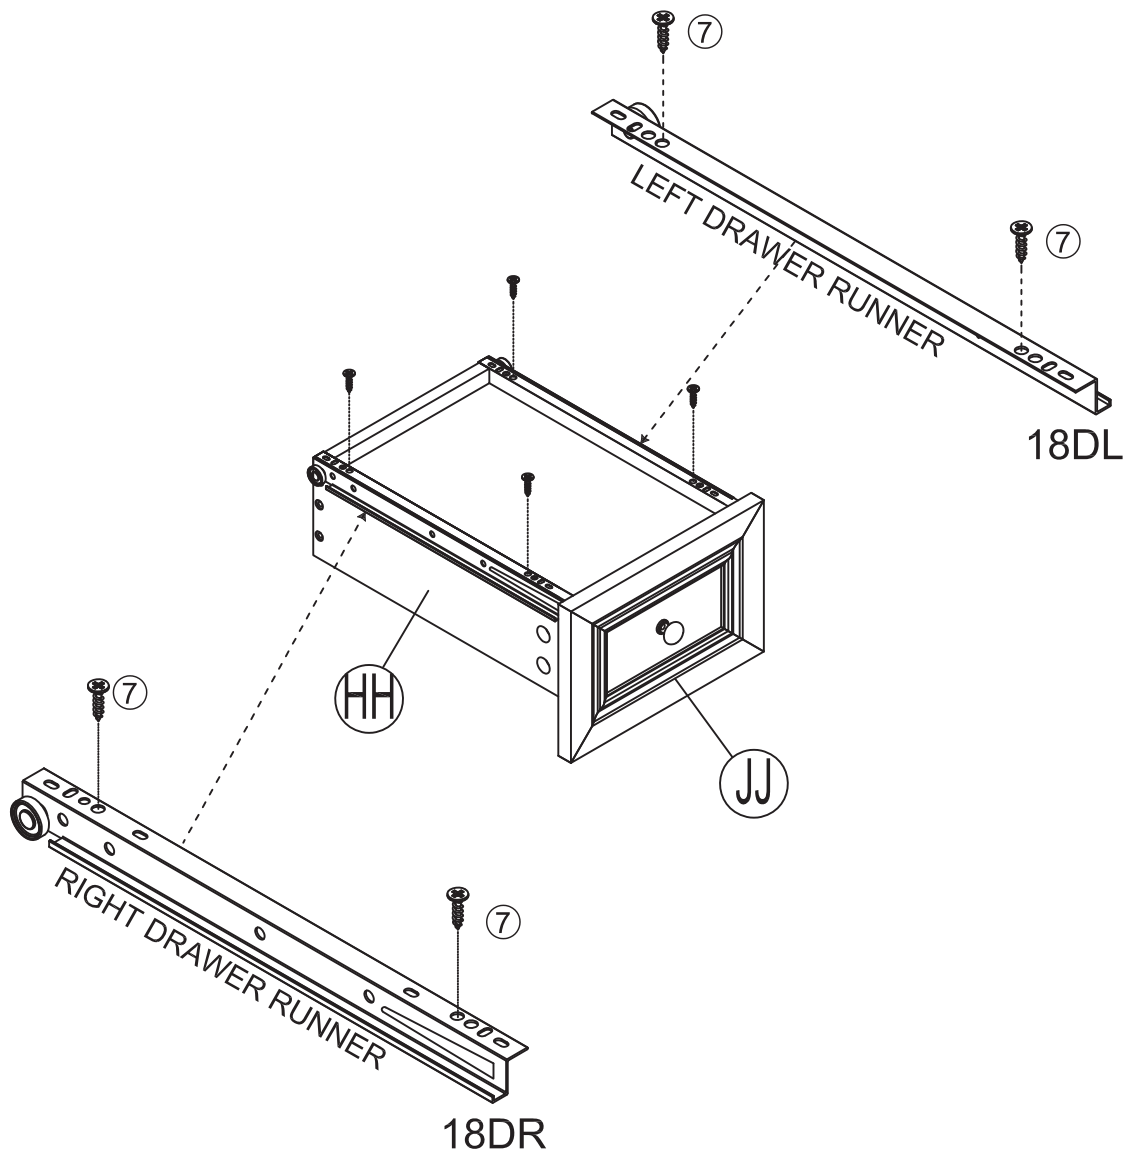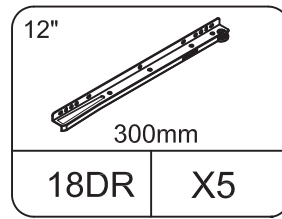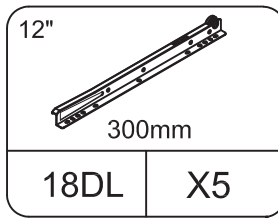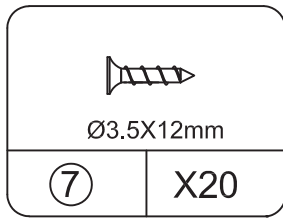


X5

STEP39




Ø15X9.5mm

①	X4
---	----

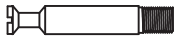


Ø6.5X35mm

②	X4
---	----

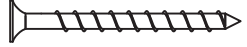


Ø4X35mm

⑩	X4
---	----





132X23X19mm

⑭	X1
---	----





M4X8mm

⑰	X2
---	----

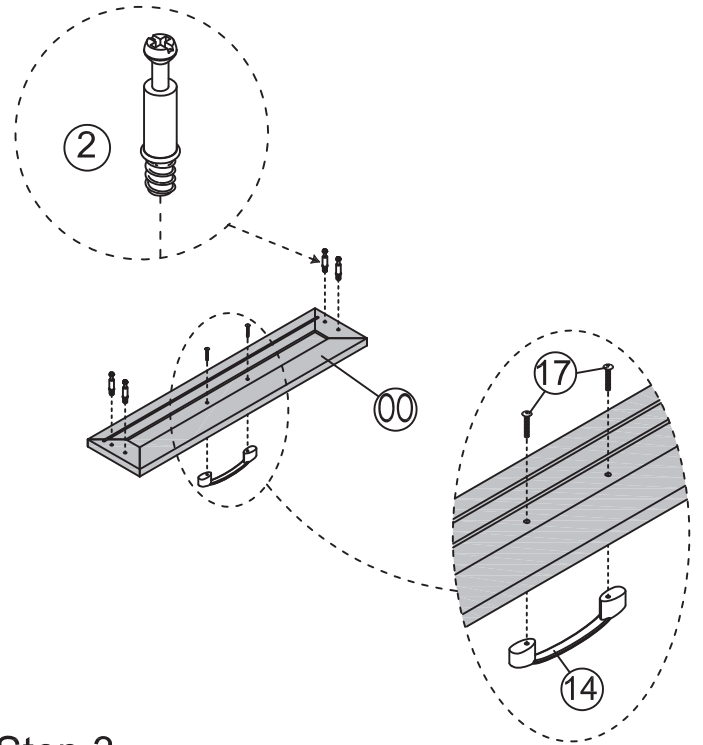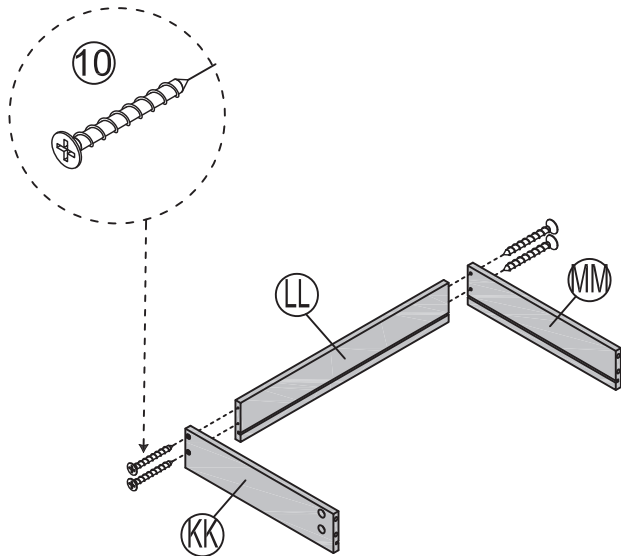

Step 1 Step 3


Step 2 Step 4

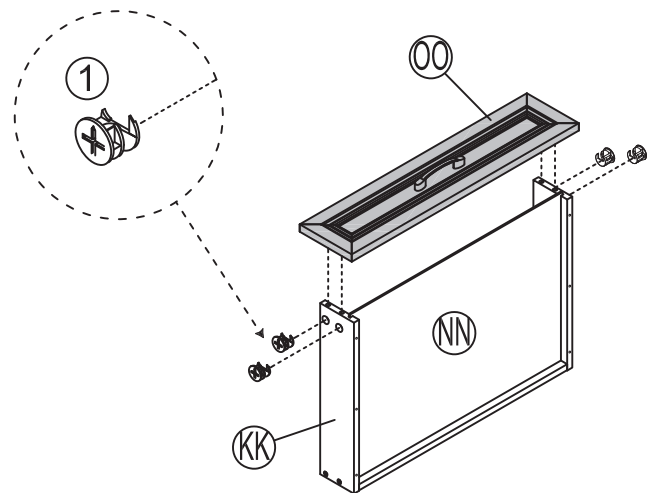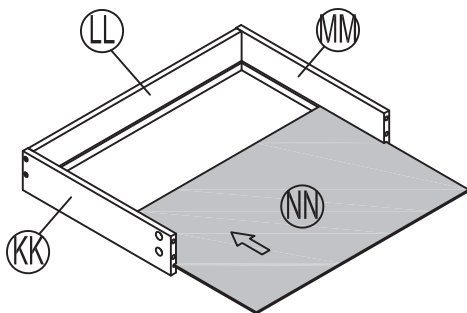





Insert the cam bolt into the hole first, then insert the cam lock and lock it.




Proper orientation of CAM LOCK

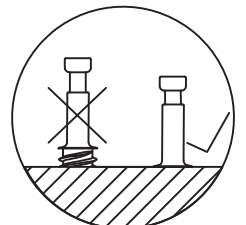


STEP40

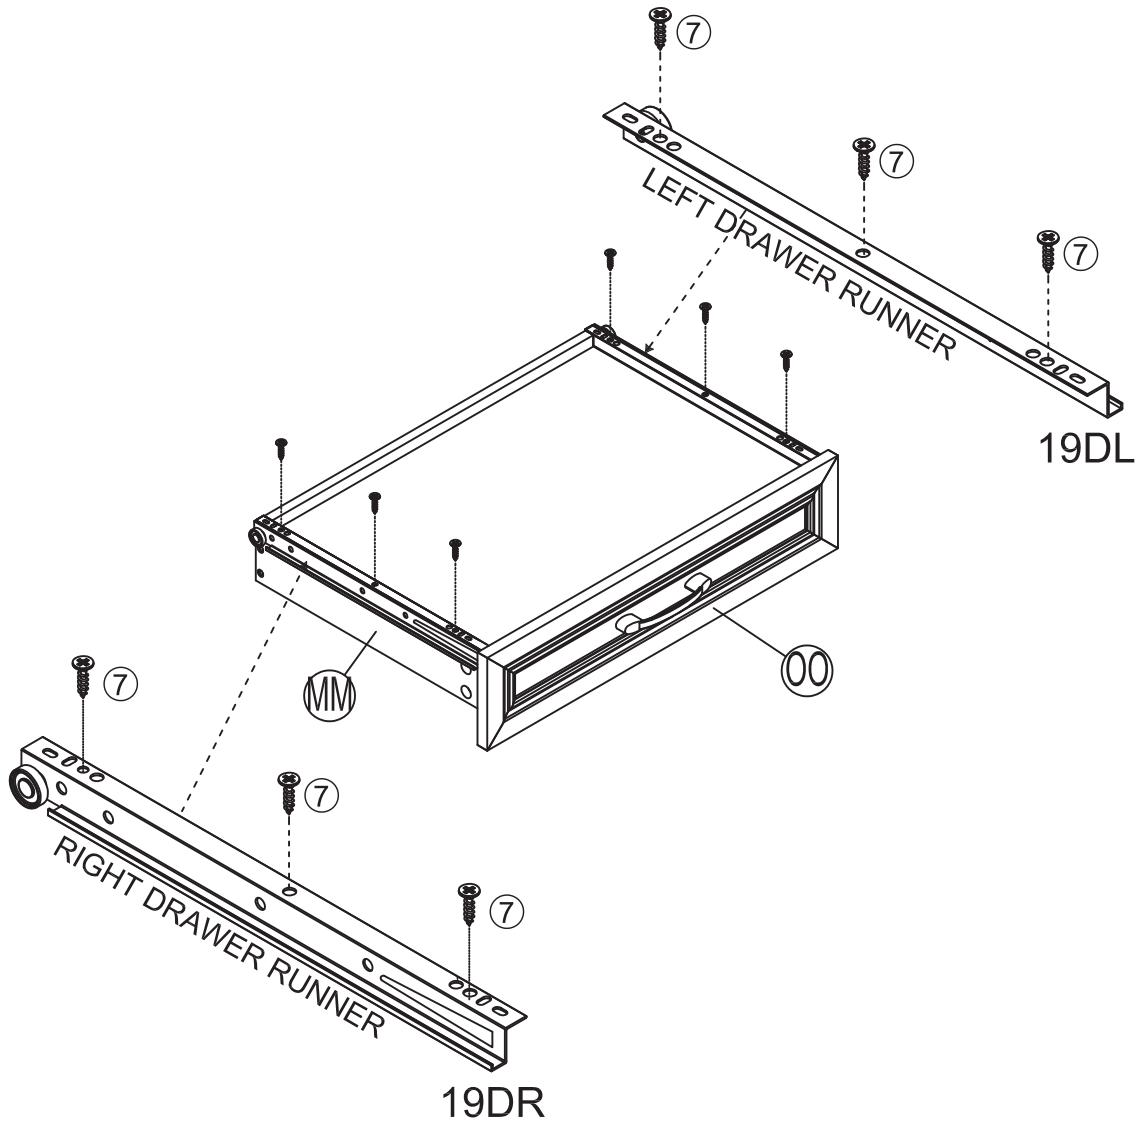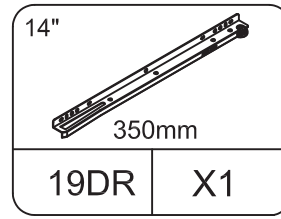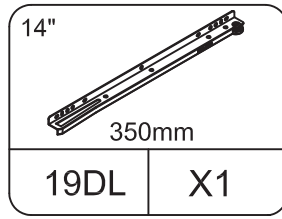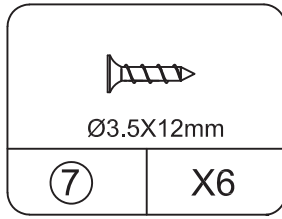

STEP41


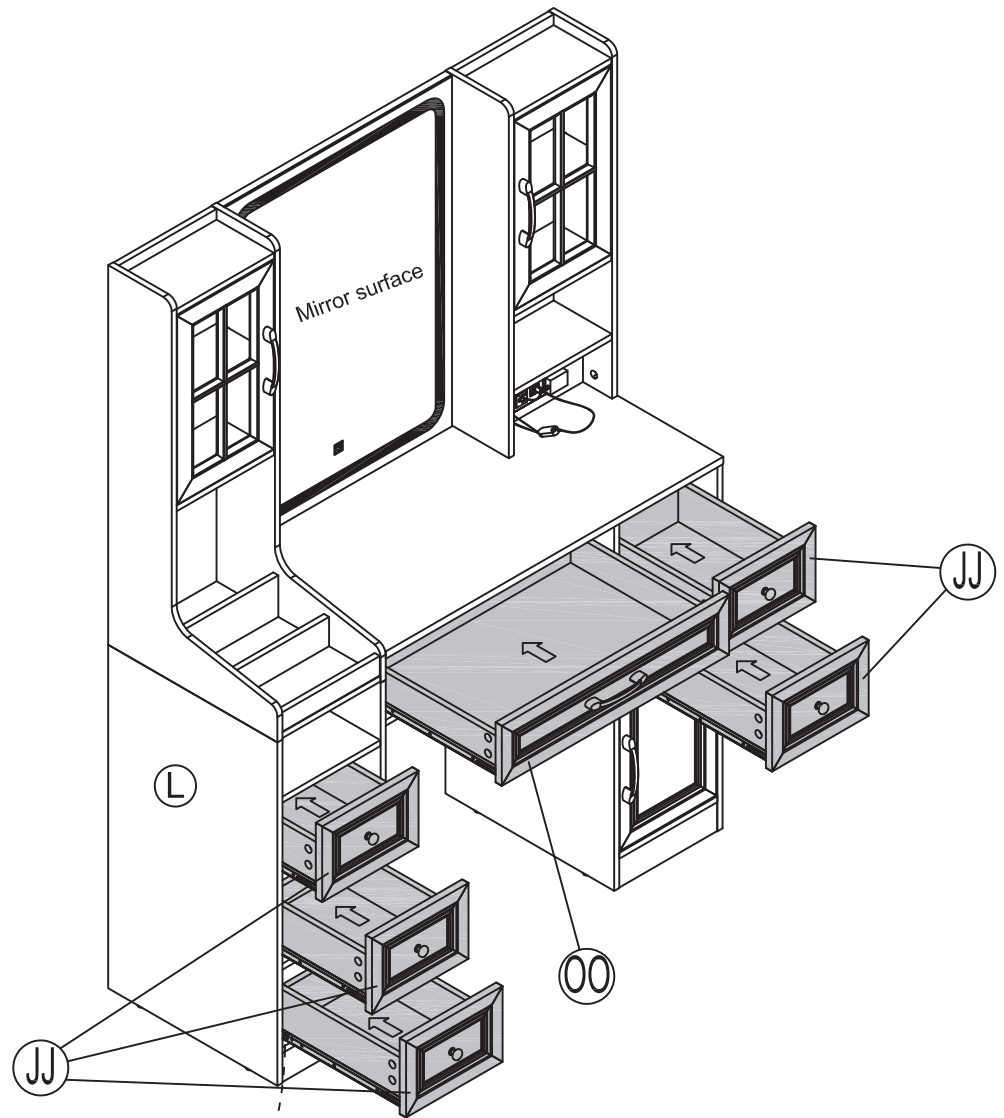


Cabinet Slide

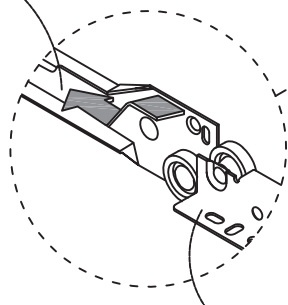


Drawer Slide


STEP42

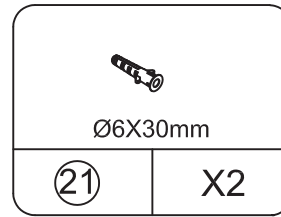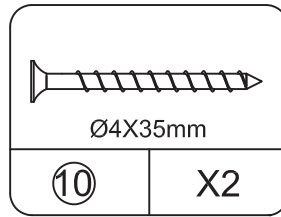


Install the tipping restraint hardware

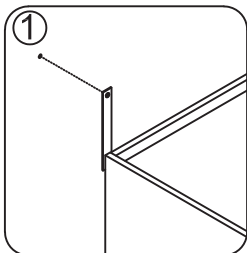


1. make mark on the wall

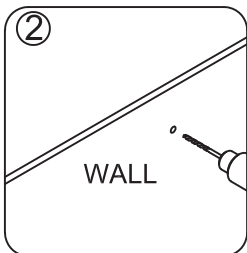

2. drill one Ø6 holes on the wall

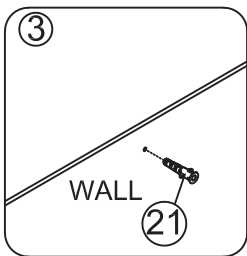

3. put one anchors in the holes

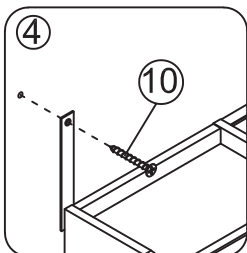

4. fix the device on the wall by the long screws

