

Bar Stool

BY005

Assembly Instructions

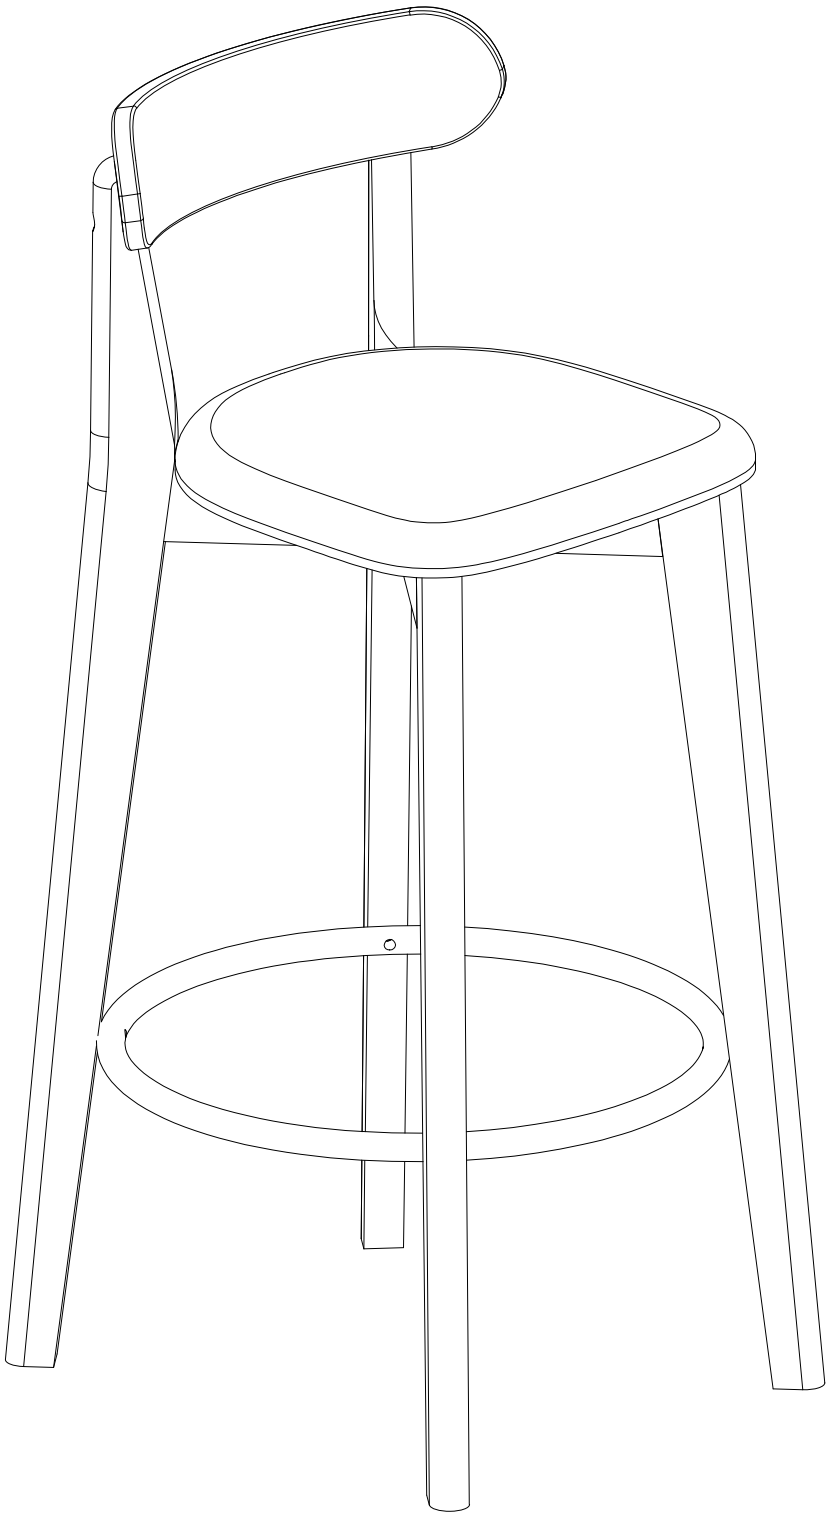


Assembly Overview

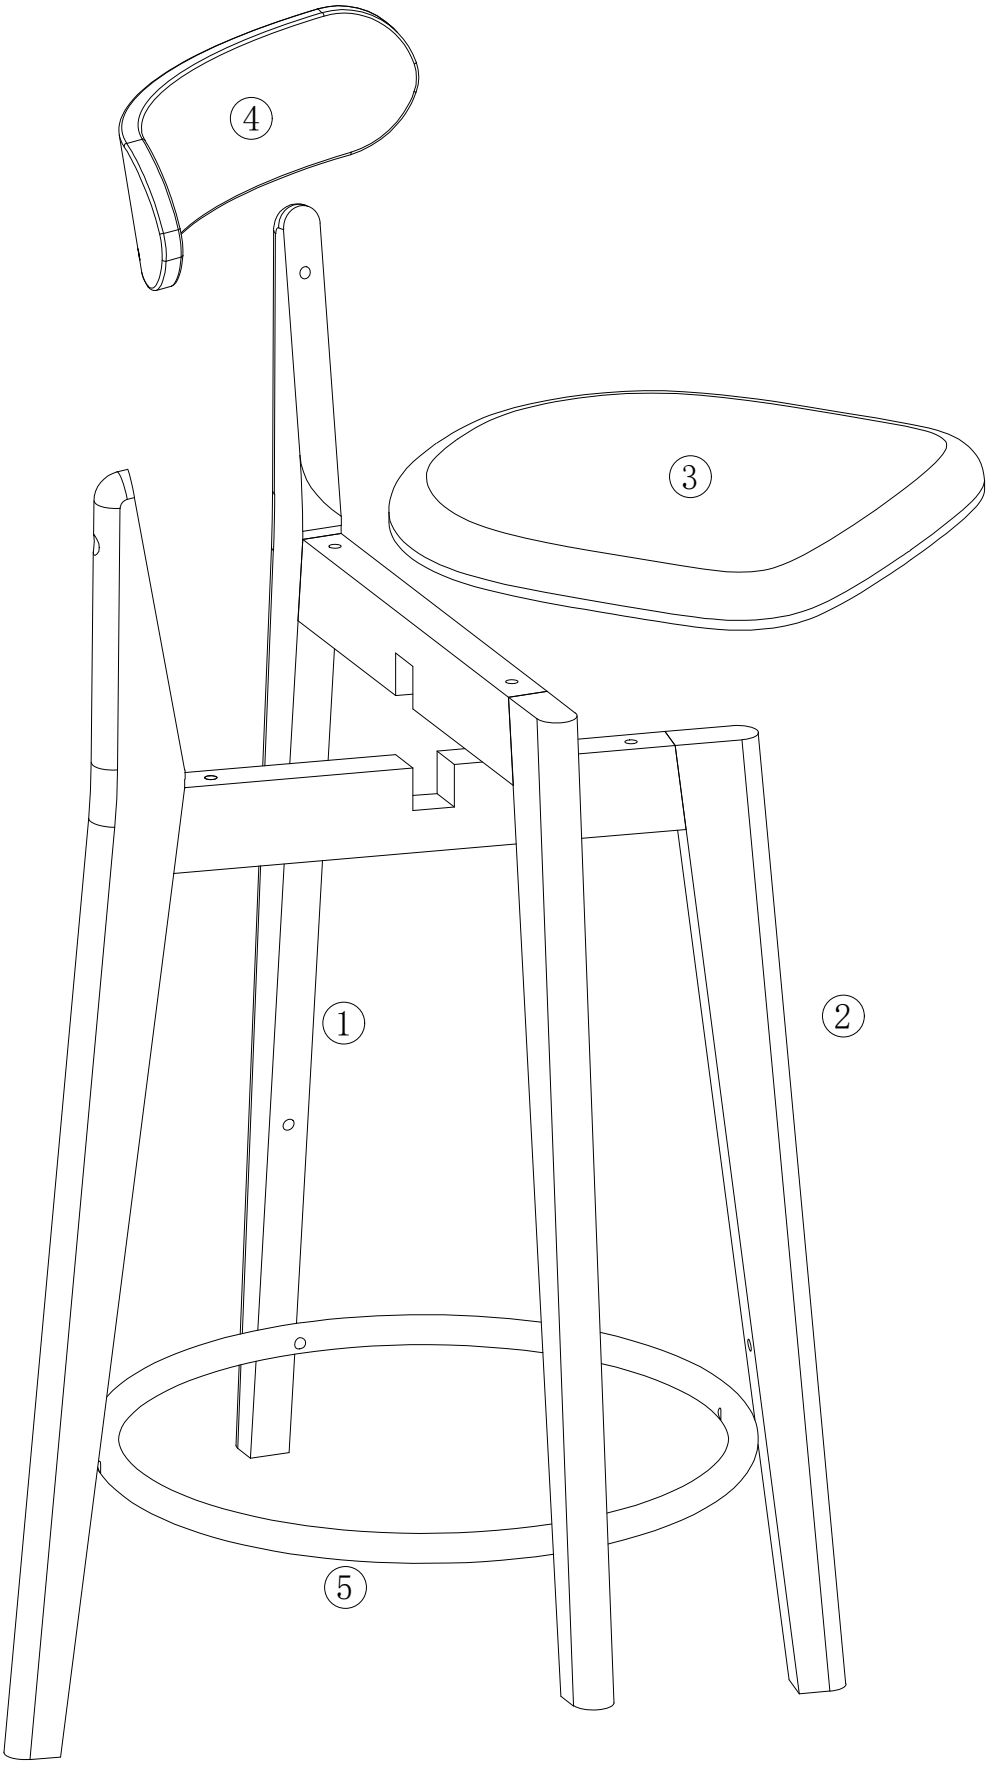


Parts List

1 Left Leg Frame

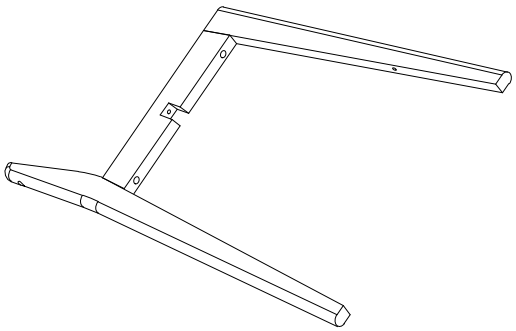


1 PC

2 Right Leg Frame

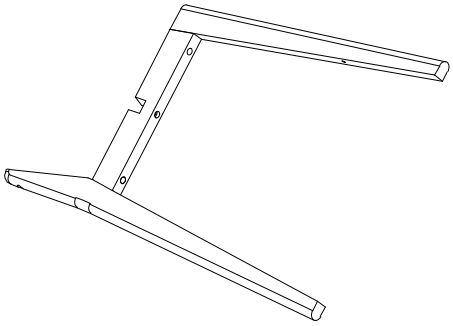


1 PC

3 Seat Cushion

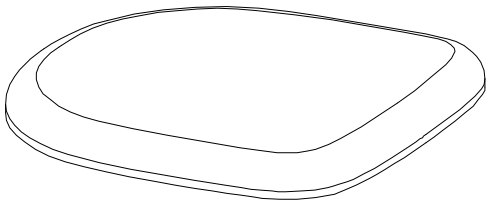

1 PC


4 Backrest

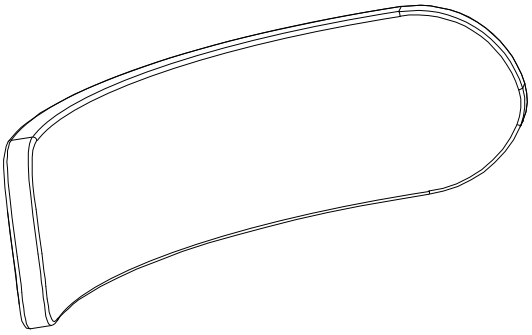

1 PC

Parts List (continued)


5 Footrest

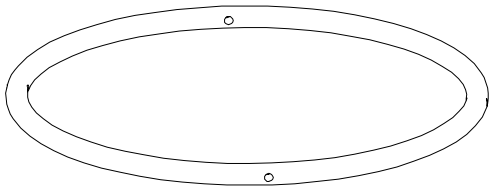

1 PC

Hardware & Tools


A Flat-Head Hex Socket Screw

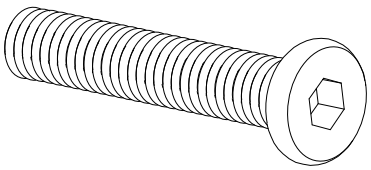

M6 × 55MM

4+1 PCS


B Countersunk Screw

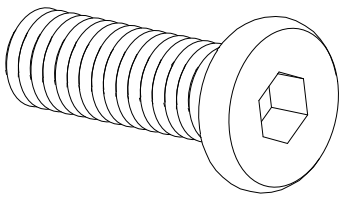

M6 × 35MM

1+1 PCS

C Flat-Head Hex Socket Screw

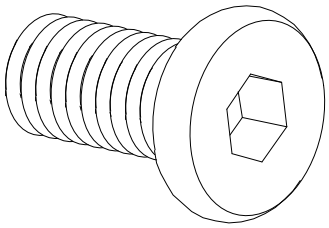


M6 × 25MM

2+1 PCS

Hardware & Tools (continued)


D Washer

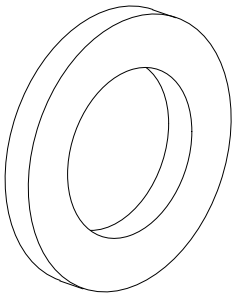

M6 × Ø13MM

7+2 PCS


E Flat-Head Hex Socket Screw

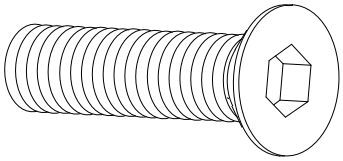

M6 × 35MM

1+1 PCS

F Hex Key

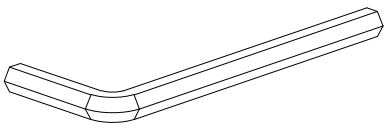


M4 × 100MM

1 PC

Tool - reuse as needed

Hardware & Tools (continued)

G Wooden Cover Plug

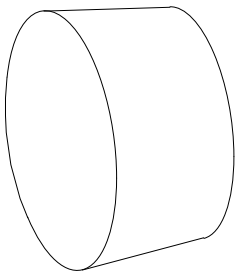


Ø12 × 9MM

2+1 PCS


Before Assembly

Check all parts and hardware against the lists.
Use the correct screws for each step.
Incorrect screw sizes may cause the wood to crack.


Example

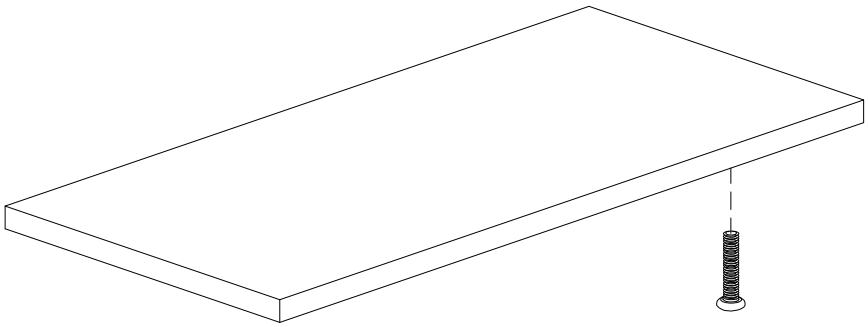

Incorrect screw size

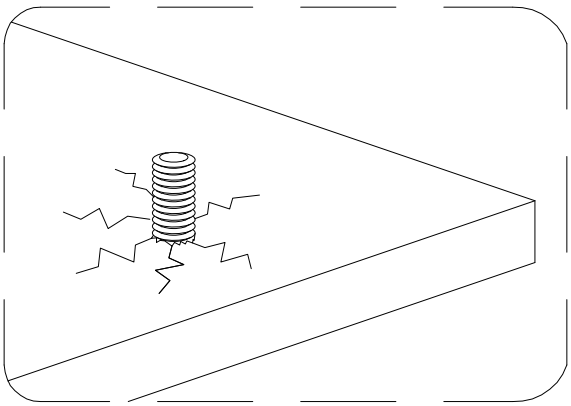


Correct screw size

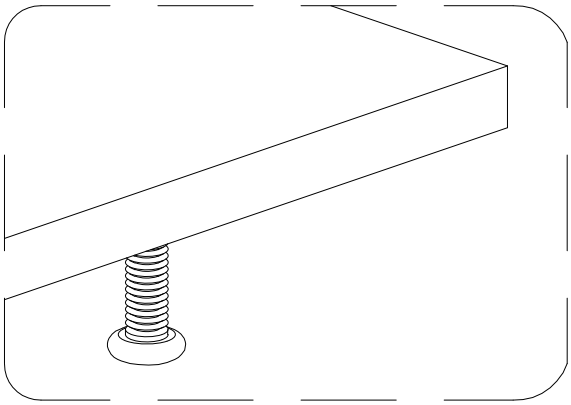

Step 1

Align left leg frame 1 with the slot in right leg frame 2.
Fasten with screw B and washer D using hex key F.
Do not fully tighten the screw yet.


B × 1; D × 1. Tool: F.

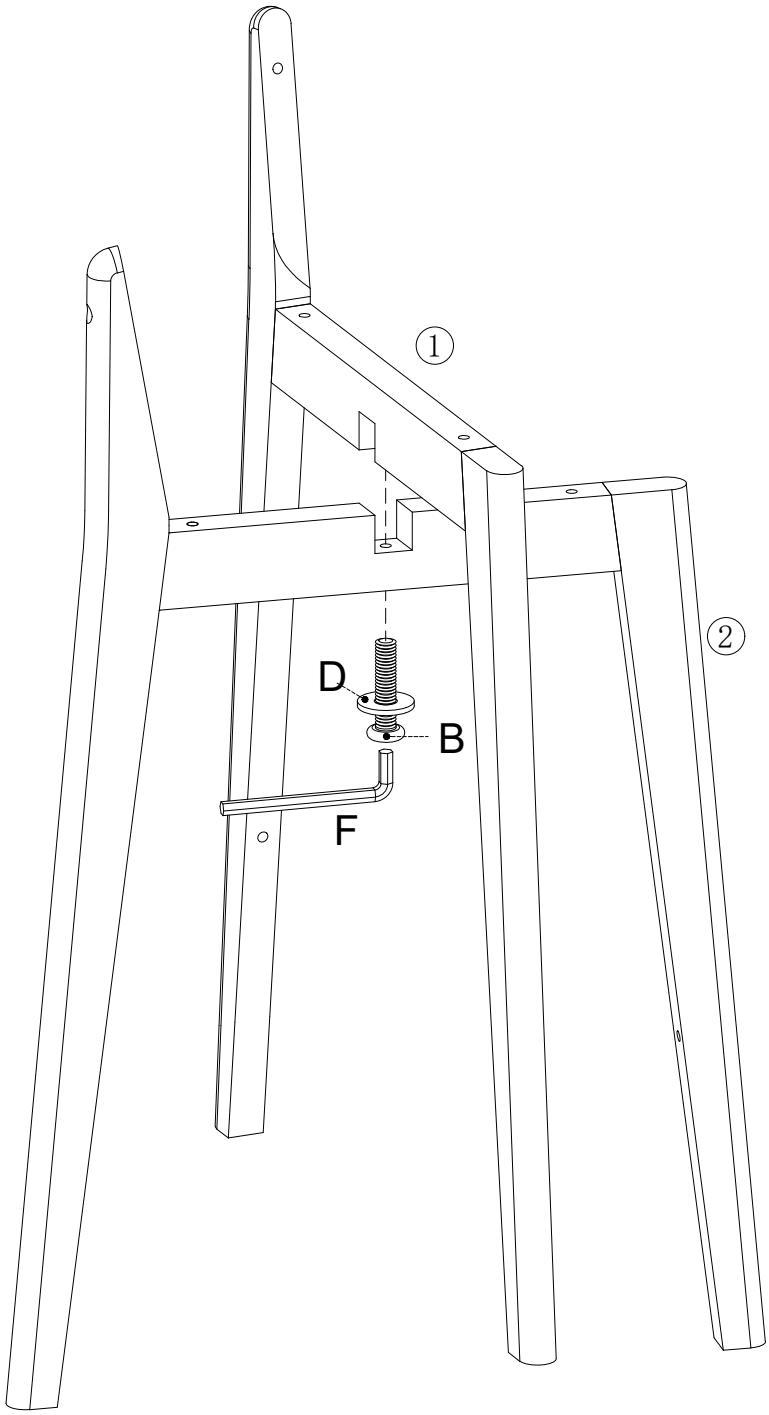

Step 2

Attach seat cushion 3 to the assembly from Step 1, as shown.
Fasten with screws A and washers D using hex key F.


A × 4; D × 4. Tool: F.

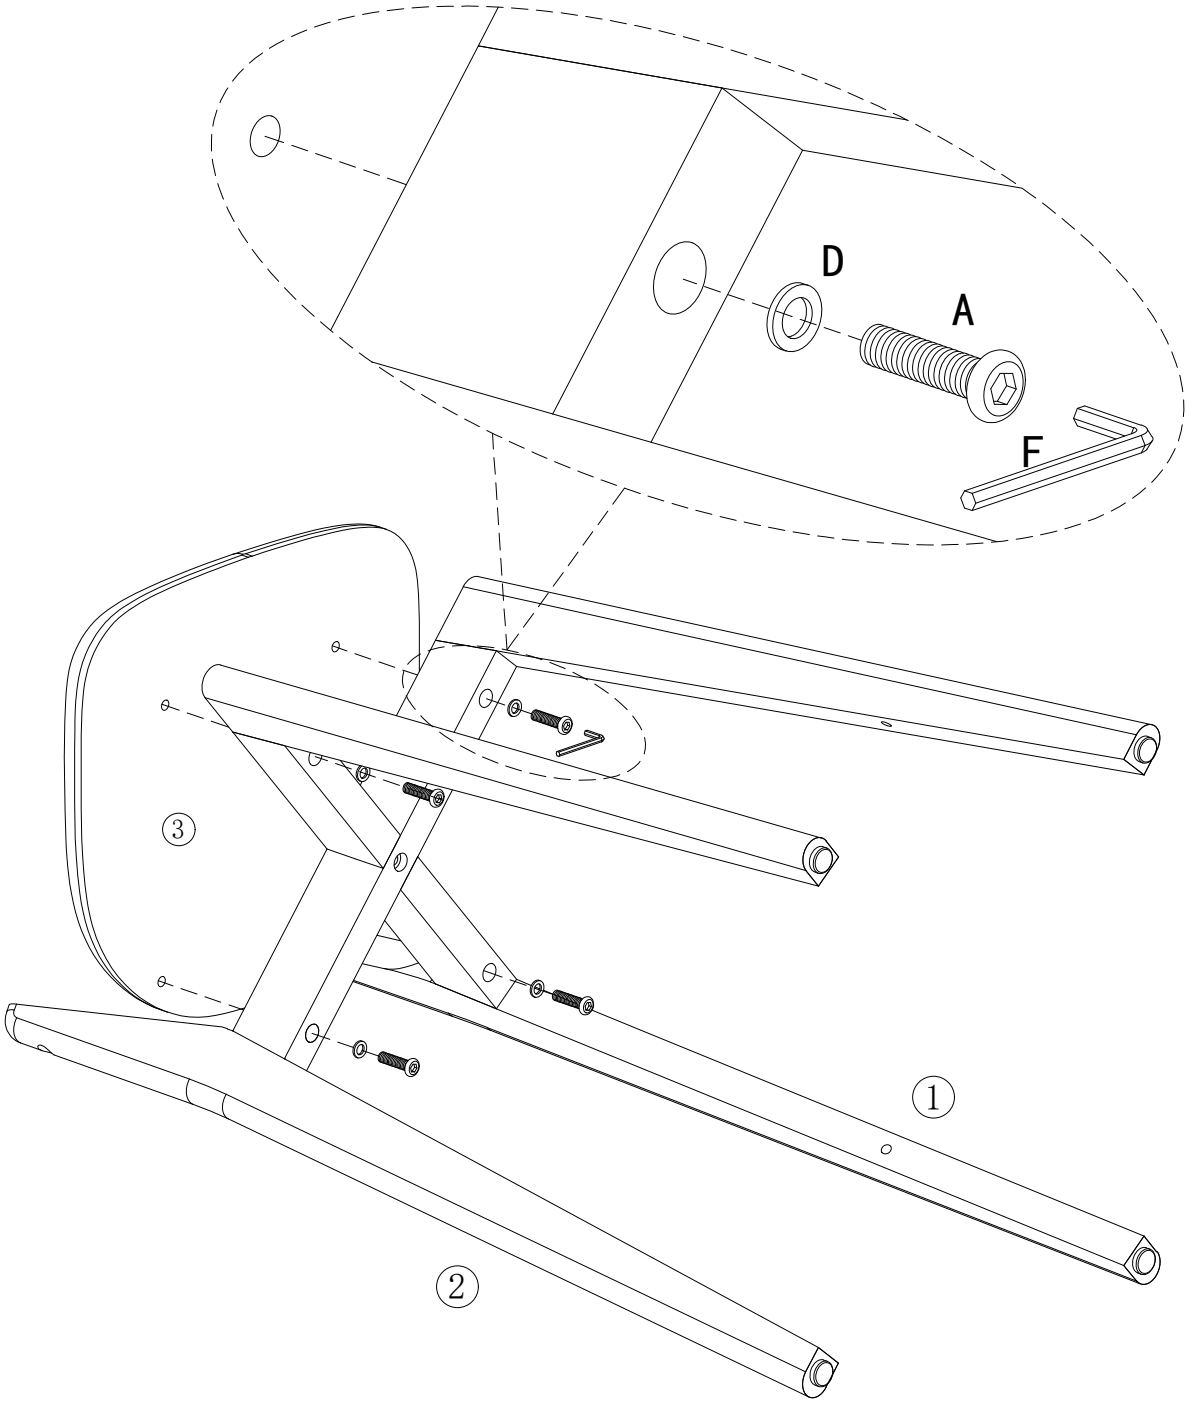

Step 3

Attach footrest 5 to the assembly from Step 2, as shown.
Fasten with screws E using hex key F.


Tool: F.

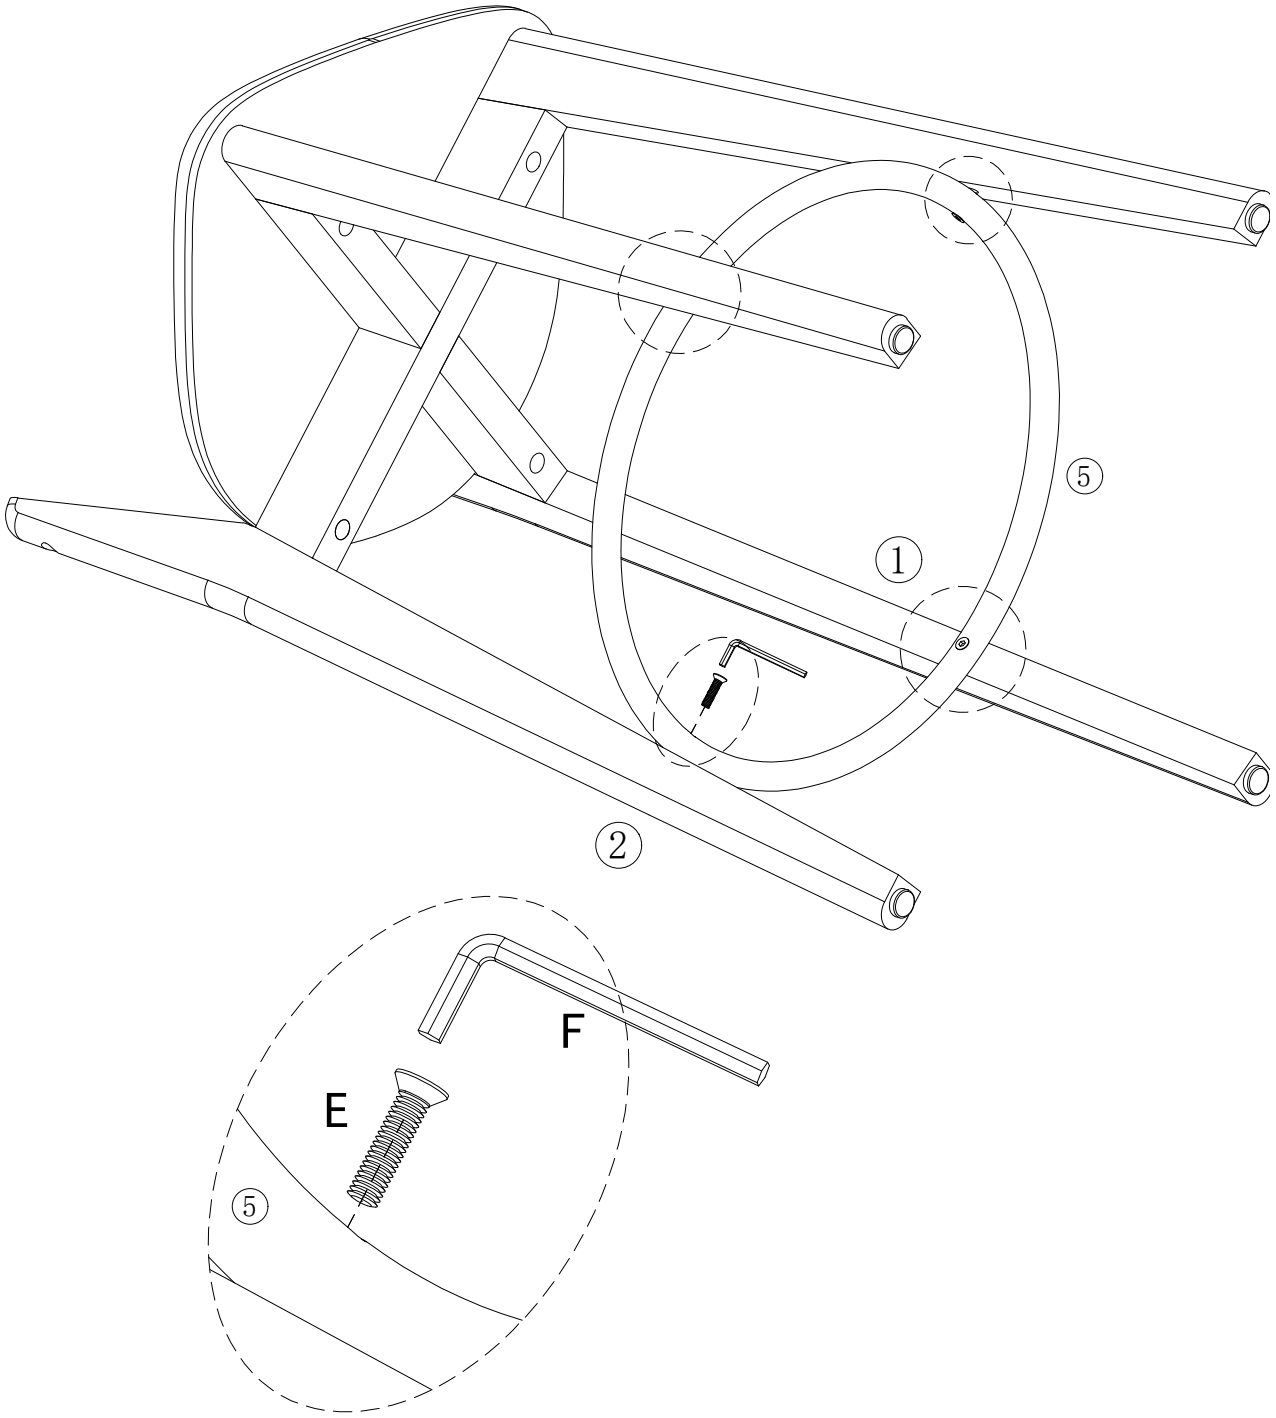

Step 4

Attach backrest 4 to the assembly from Step 3.
Fasten with screws C and washers D using hex key F.
After tightening, fit wooden cover plugs G into the screw holes.

C × 2; G × 2. Tool: F.

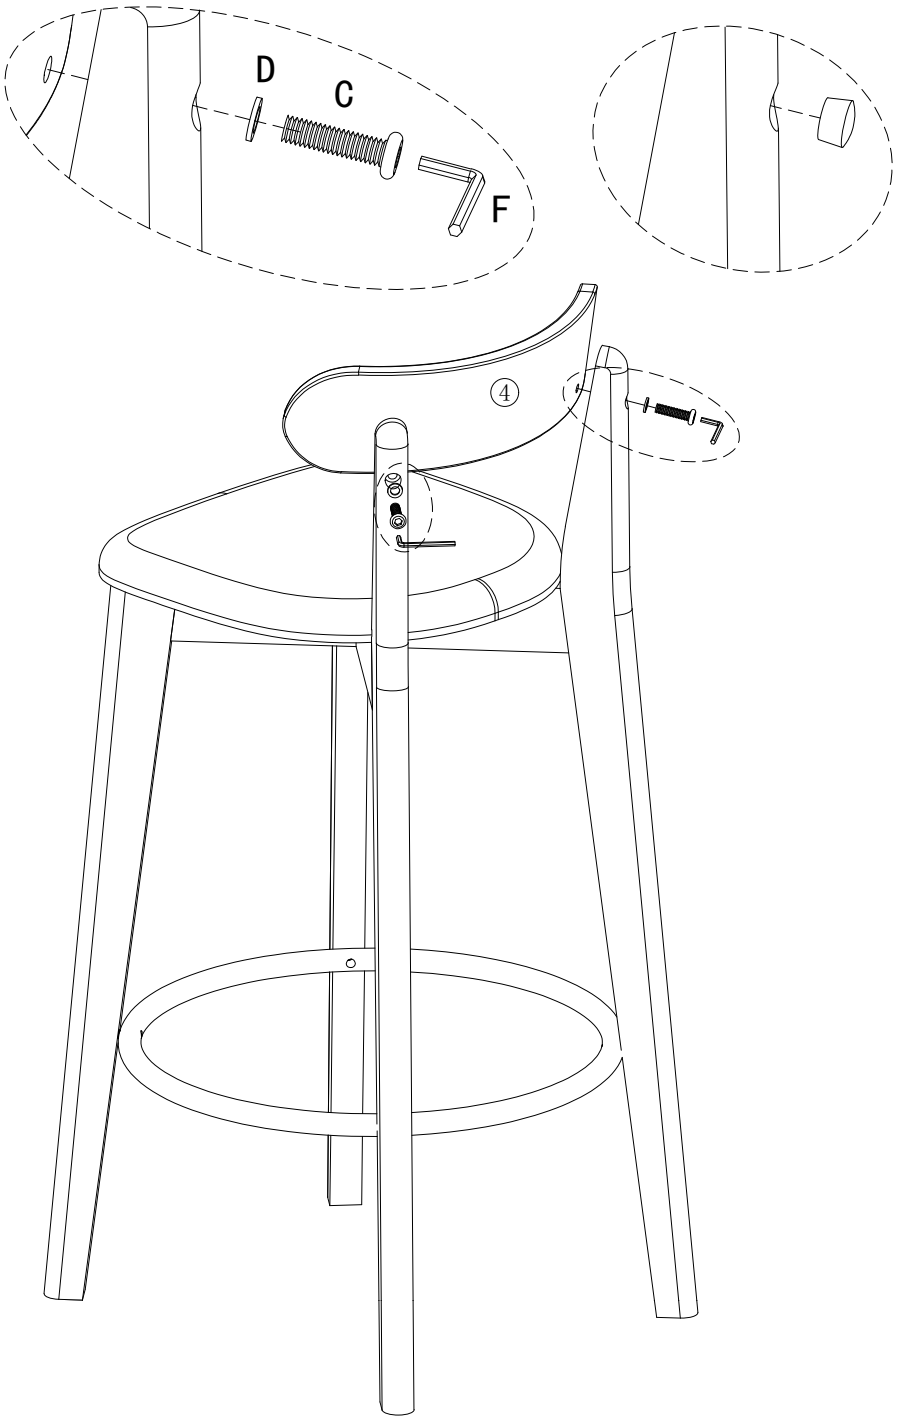

Step 5

Place the fully assembled stool on a flat surface.
Tighten all screws previously left loose.
Adjust the leveling feet until the stool stands stable.
Assembly complete.

