

## NOTICE

---

\*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

\*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

\*This item may require periodic tightening.

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com).

## PREPARATION

---

\* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\* If any part is missing or damaged, do not attempt to assemble the product.

\* Estimated Assembly Time: 10 minutes.

\* Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

---

### OUTDOOR FURNITURE CARE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water.

Dust regularly with small brush or vacuum.

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

### UPHOLSTERY CARE

To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis.

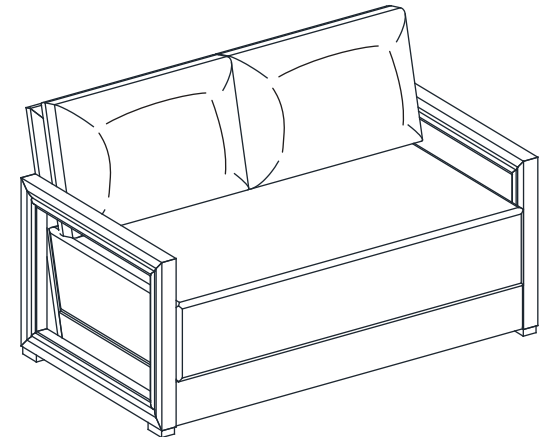
Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.



Model# PAT7105

Product Dimensions: 52.0" W x 30.31" D x 29.92" H





**Weight Capacity : 550 lbs**

**Warning : Do not stand on bench**

**Warning : Do not over torque bolts / screws**

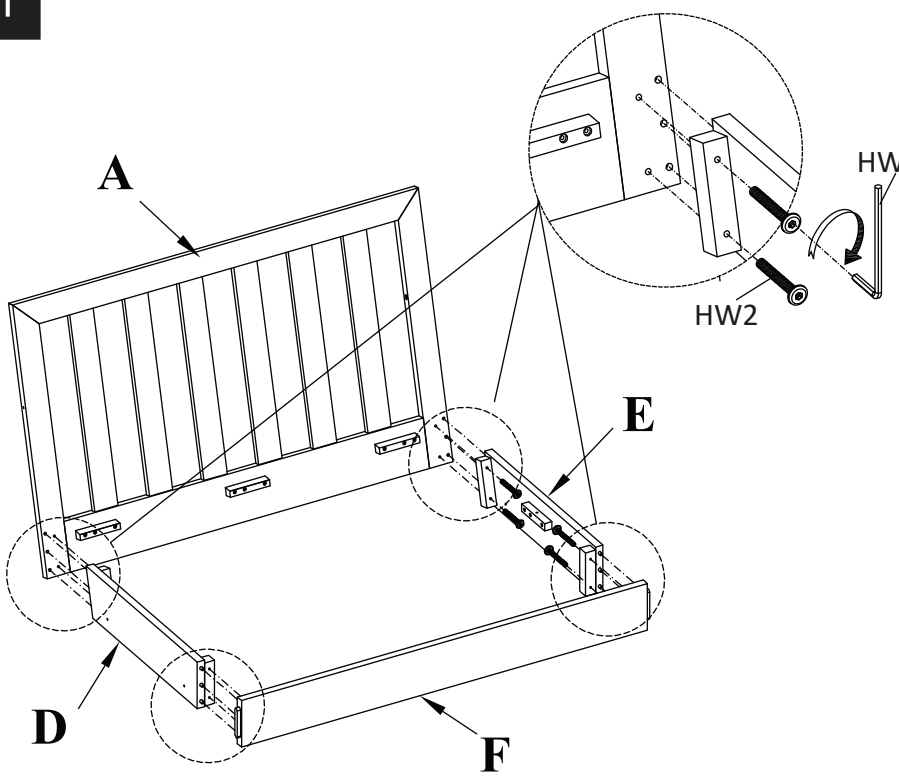
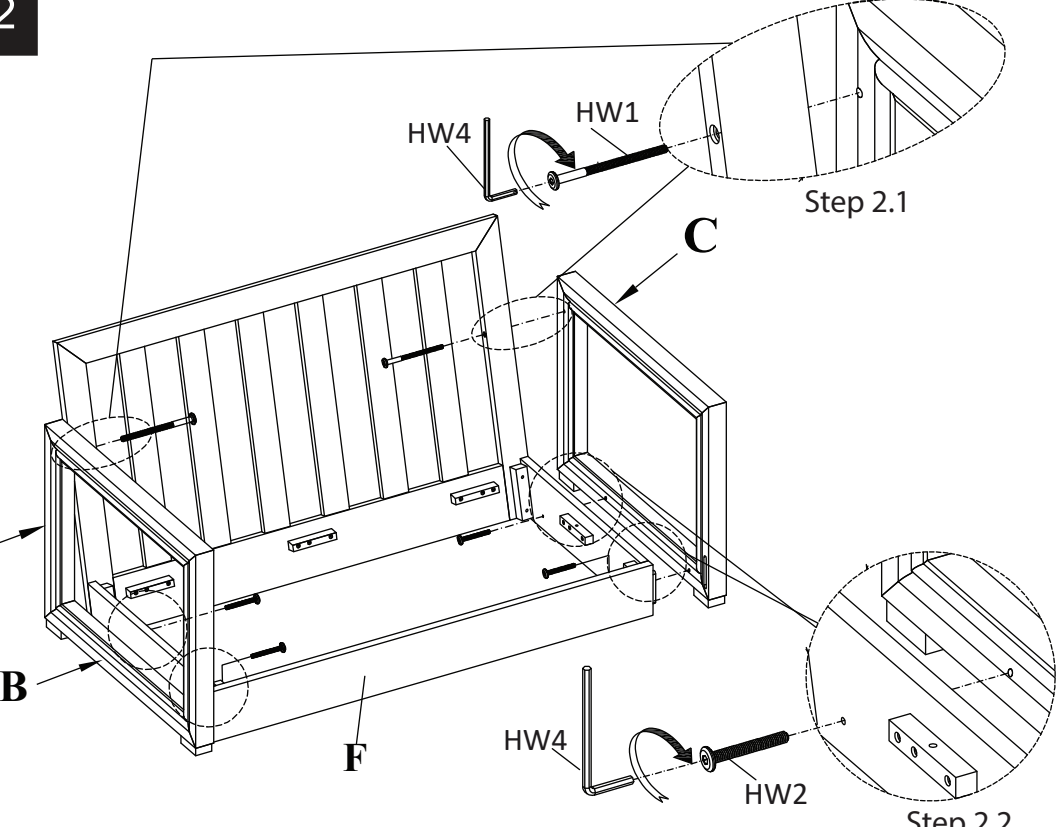
## Part List and Hardware List

| PIECE | DESCRIPTION           | PICTURE                                                                           | QUANTITY |
|-------|-----------------------|-----------------------------------------------------------------------------------|----------|
| A     | Backrest Panel        |  | 1X       |
| B     | Left Leg Panel        |  | 1X       |
| C     | Right Leg Panel       |  | 1X       |
| D     | Left Side Seat Panel  |  | 1X       |
| E     | Right Side Seat Panel |  | 1X       |
| F     | Support Bar           |  | 1X       |
| G     | Seat Panel            |  | 1X       |
| CSH1  | Seat Cushion          |  | 1X       |
| CSH2  | Back Cushion          |  | 2X       |

|     |                          |                                                                                            |     |
|-----|--------------------------|--------------------------------------------------------------------------------------------|-----|
| HW1 | Allen Bolt: M8x0.5x90 mm |  M8x 90 | 2X  |
| HW2 | Allen Bolt: M8x0.5x45 mm |  M8x45  | 12X |
| HW3 | Screws M6x0.5x35 mm      |  M6x35  | 2X  |
| HW4 | Allen key                |  LG4    | 2X  |

## PREPARATION

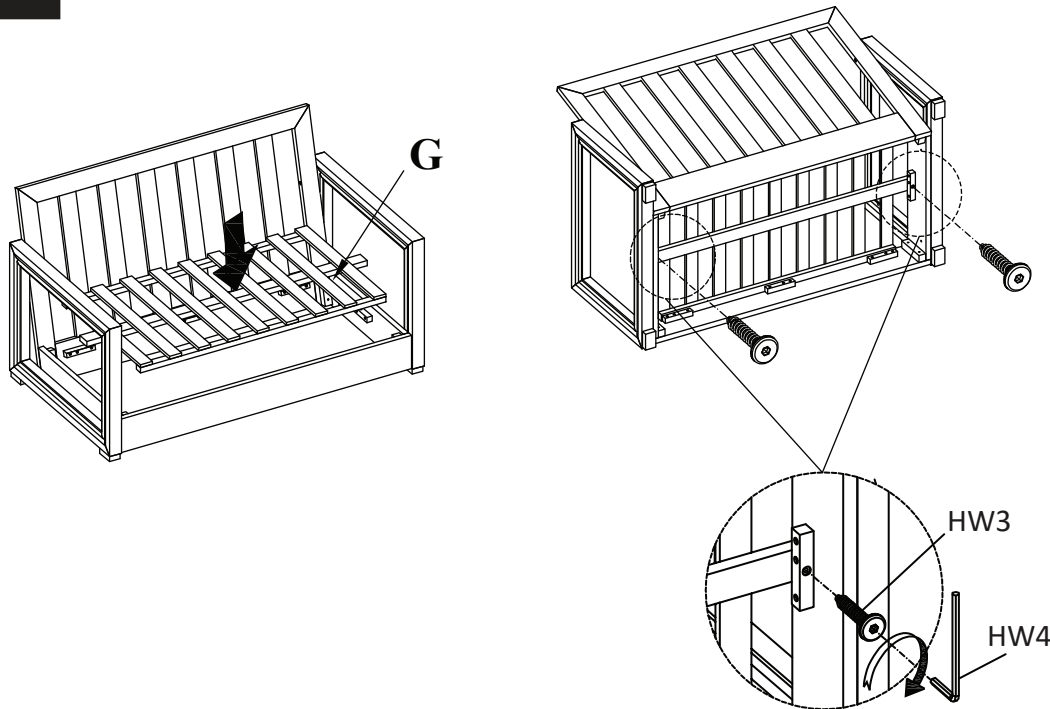
- \*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time : 10 minutes.
- \* Tools Required for Assembly (included): Allen Key
- \* If you are having difficulty, our friendly Customer care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

|                                                                                                                                                                                               |                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div data-bbox="100 438 145 502">1</div>                                                                   | <div data-bbox="1064 438 1108 502">2</div>                                                                                                                                                                                                       |
| <p><b>Step 1</b><br/>Attach the Backrest Panel (A) and Support Bar(F) to the Left Side Seat Panel (D) and Right Side Seat Panel using Bolts (HW2) and the Allen key (HW4) as shown above.</p> | <p><b>Step 2.1</b><br/>Attach the Left Leg Panel (B) and Right Leg Panel(C) to the Backrest Panel (A) using Bolts (HW1) and the Allen key (HW4) as shown above.</p> <p><b>Step 2.1</b><br/>Attach the Left Leg Panel (B) and Right Leg Panel(C) to the Support Bar (F) using Bolts (HW2) and the Allen key (HW4) as shown above.</p> |

## PREPARATION

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time : 10 minutes.
- \* Tools Required for Assembly (included): Allen Key
- \* If you are having difficulty, our friendly Customer care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

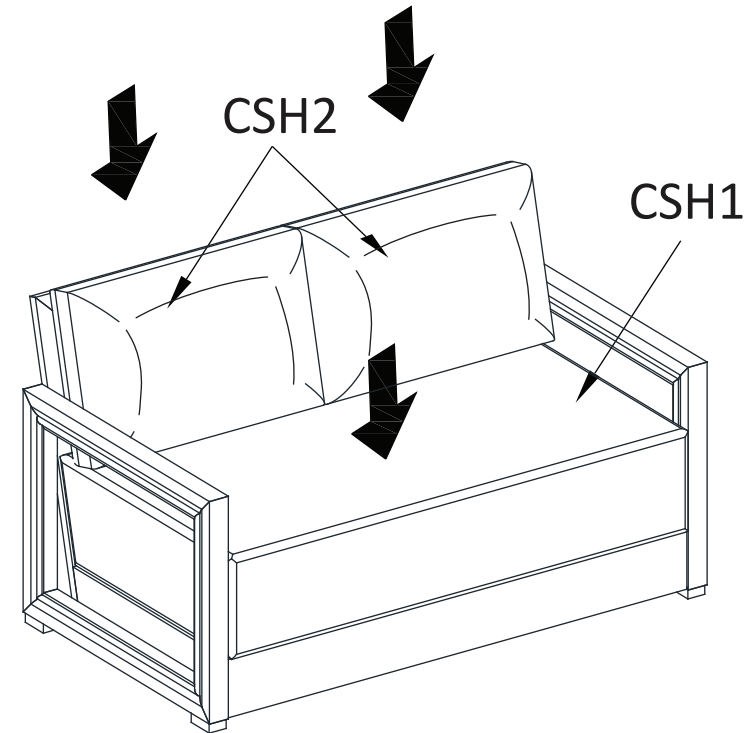
3



### Step 3

Attach the Seat Panel (G) into the Chair as shown in picture above.  
Affix the Seat Panel (G) to the Chair using Screws (HW3) and the Allen Key (HW4).

4



### Step 4

Attach Cushion seat (CSH2), Cushion Back (CSH1) .Complete  
Your Chair is ready to be used.  
This Chair can only be used on a flat, level surface.