










ASSEMBLY INSTRUCTIONS

V-CB10410A

V-CB10412A

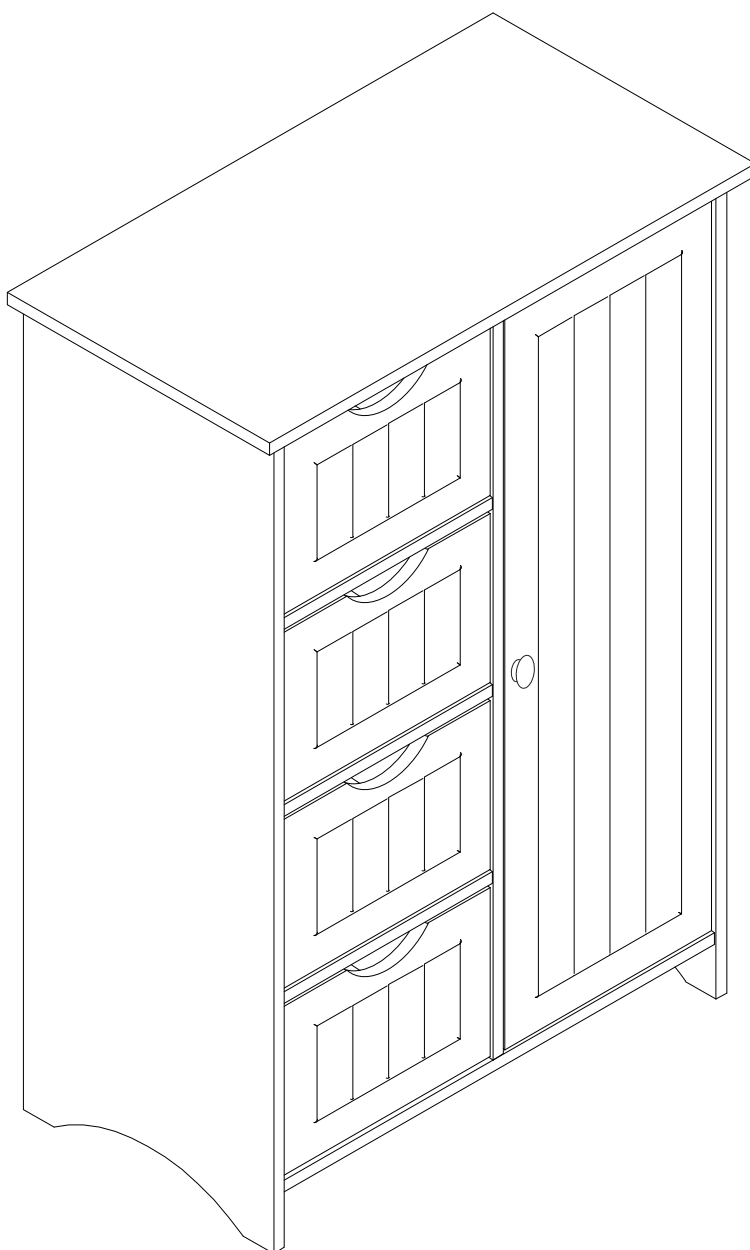

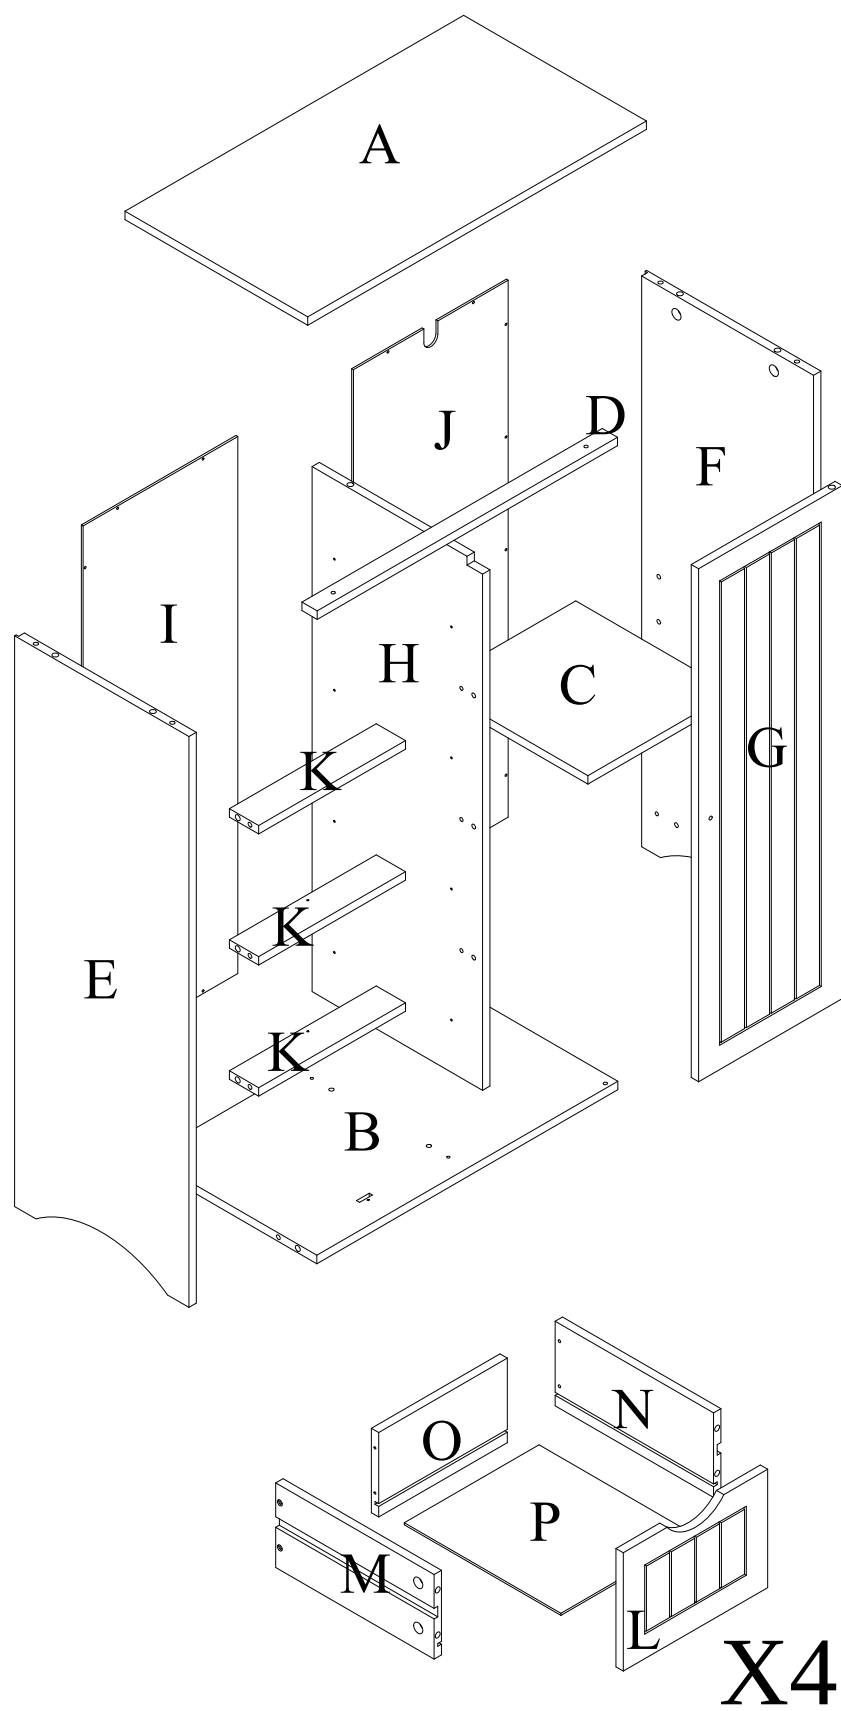

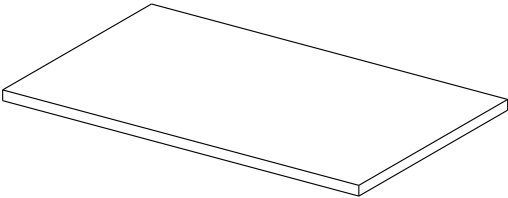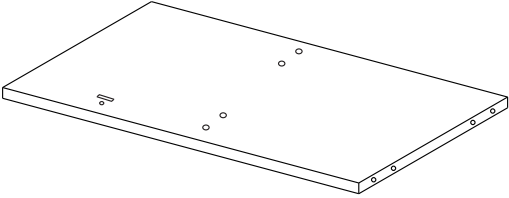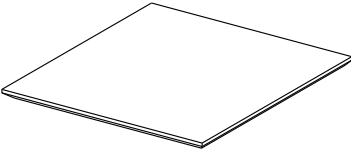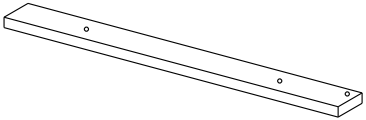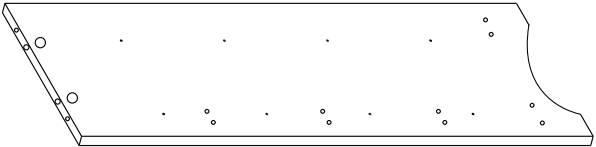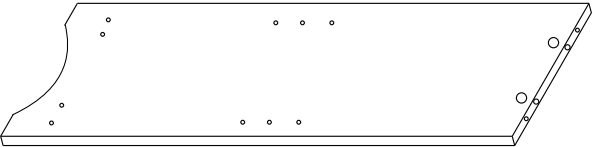A × 1 	B × 1 
C × 1 	D × 1 
E × 1 	F × 1 
G × 1 	H × 1 

I + J × 1	K × 3
L × 4	M × 4
N × 4	O × 4
P × 4	Q × 8


1



18+1

Ø6*30MM

2

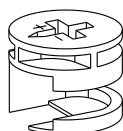

32+3

Ø15*10MM

3



32+3

Ø6*35MM


4



18+1

Ø2.5*15MM


5



× 2

Ø3*15MM


6



16+2

Ø4*30MM


7



× 2

Ø4*20MM


8



× 2

Ø4*35MM


9



× 2

Ø8*25MM


10



× 1


Ø4*15MM

11




× 1

12

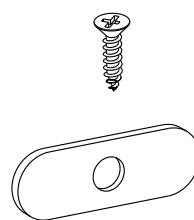


× 1

13




× 4

14

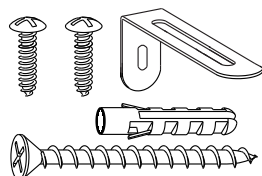

× 1

15

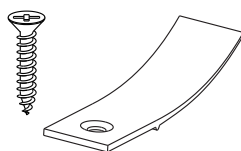

× 4


16



16+1


Ø3.5*12MM

17




× 1


Tools Required:

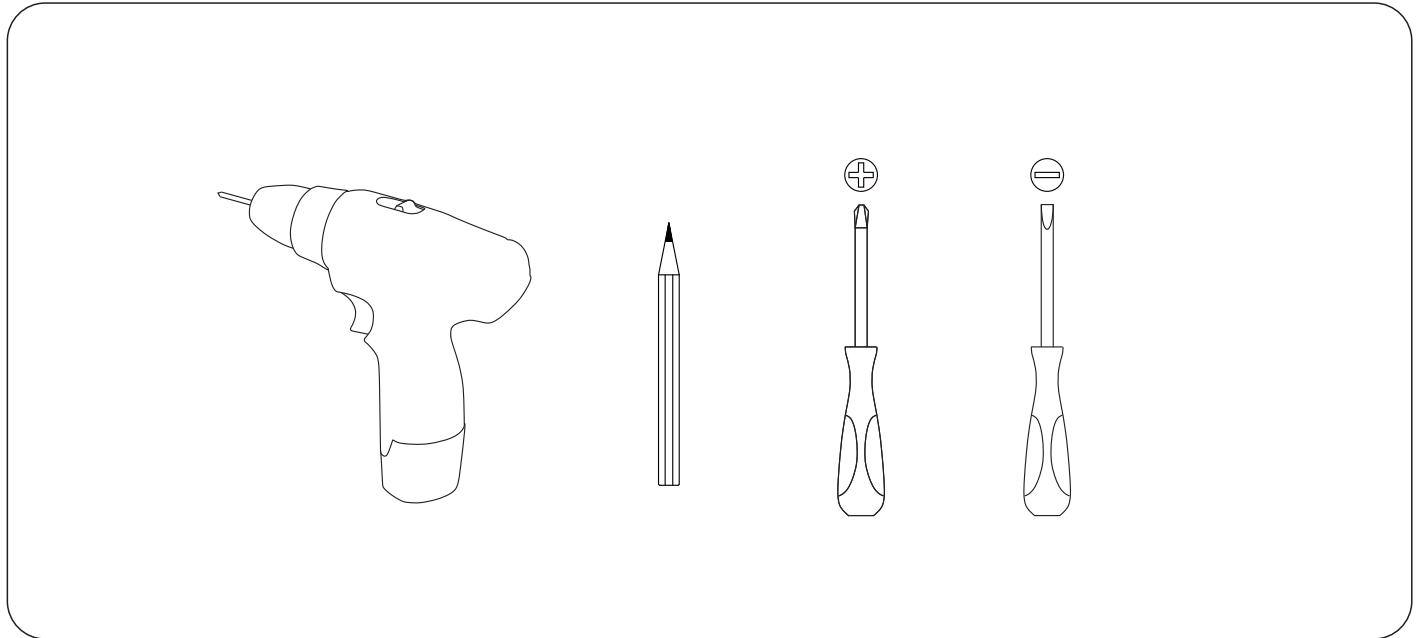


Make sure the pins are installed correctly as shown with the "check mark" below

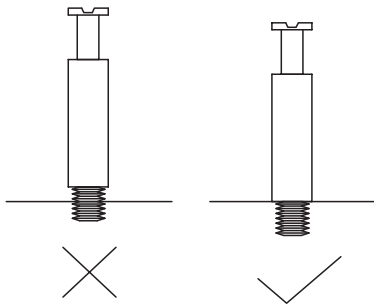


Below shows how the pins are used to assemble the panels together.

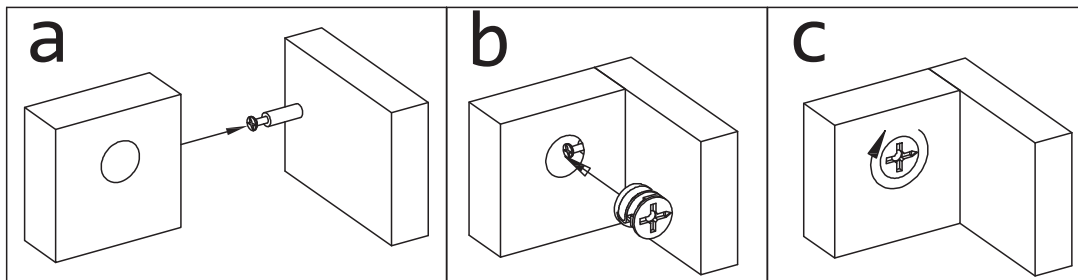



STEP 1

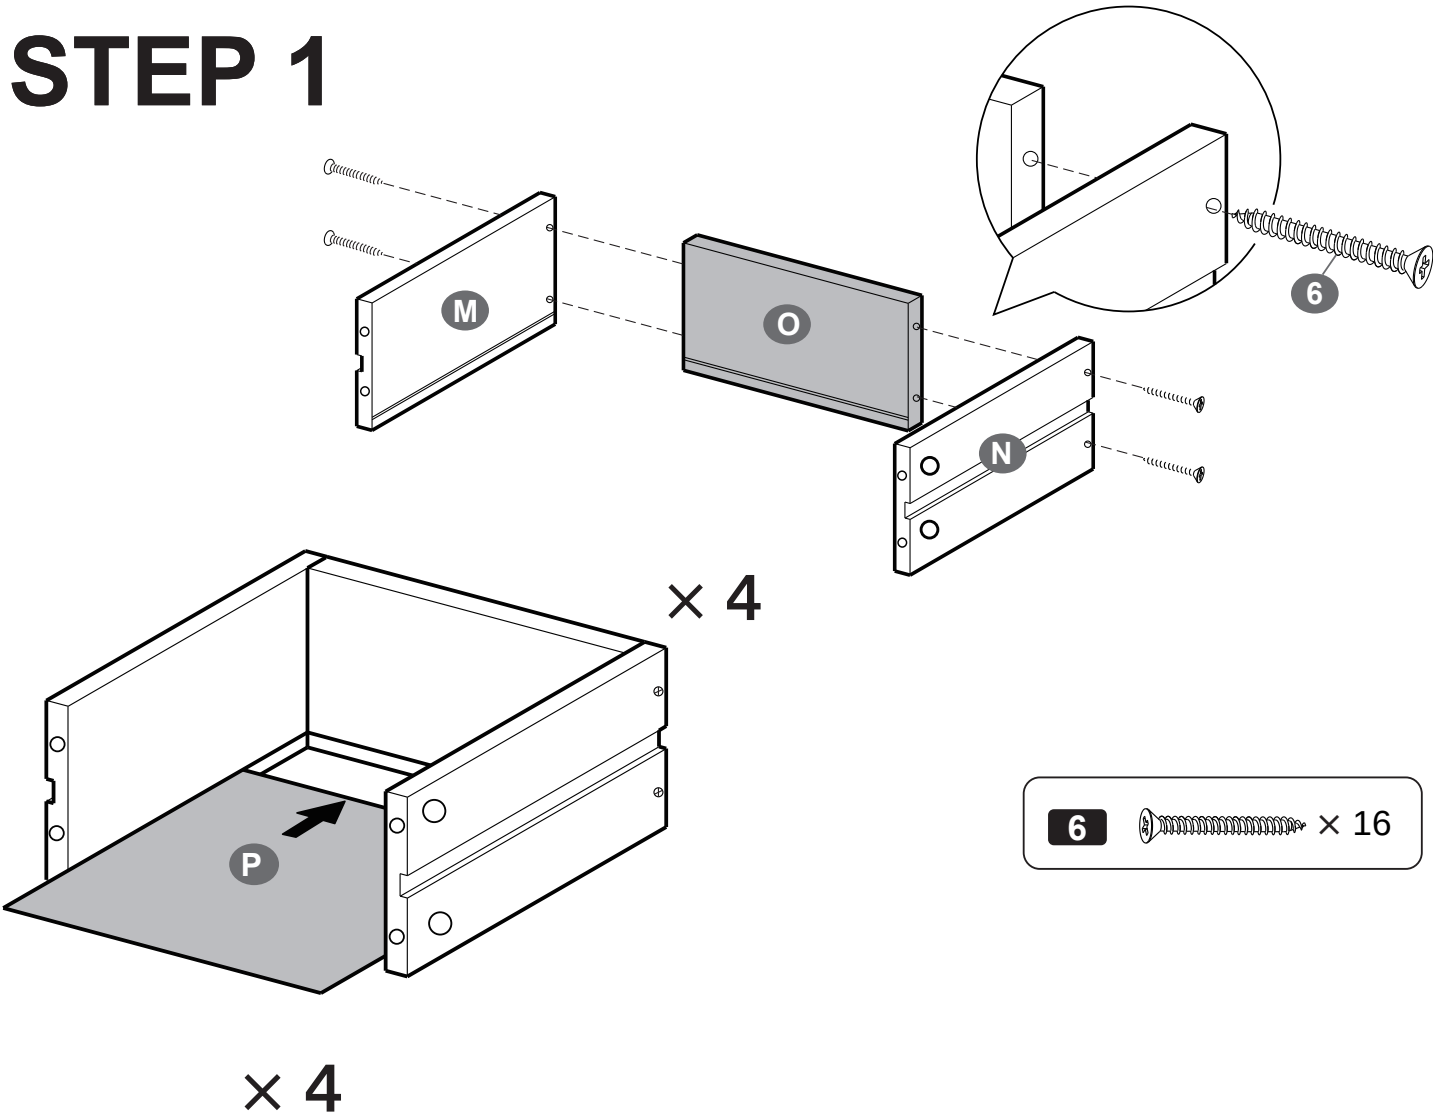

STEP 2

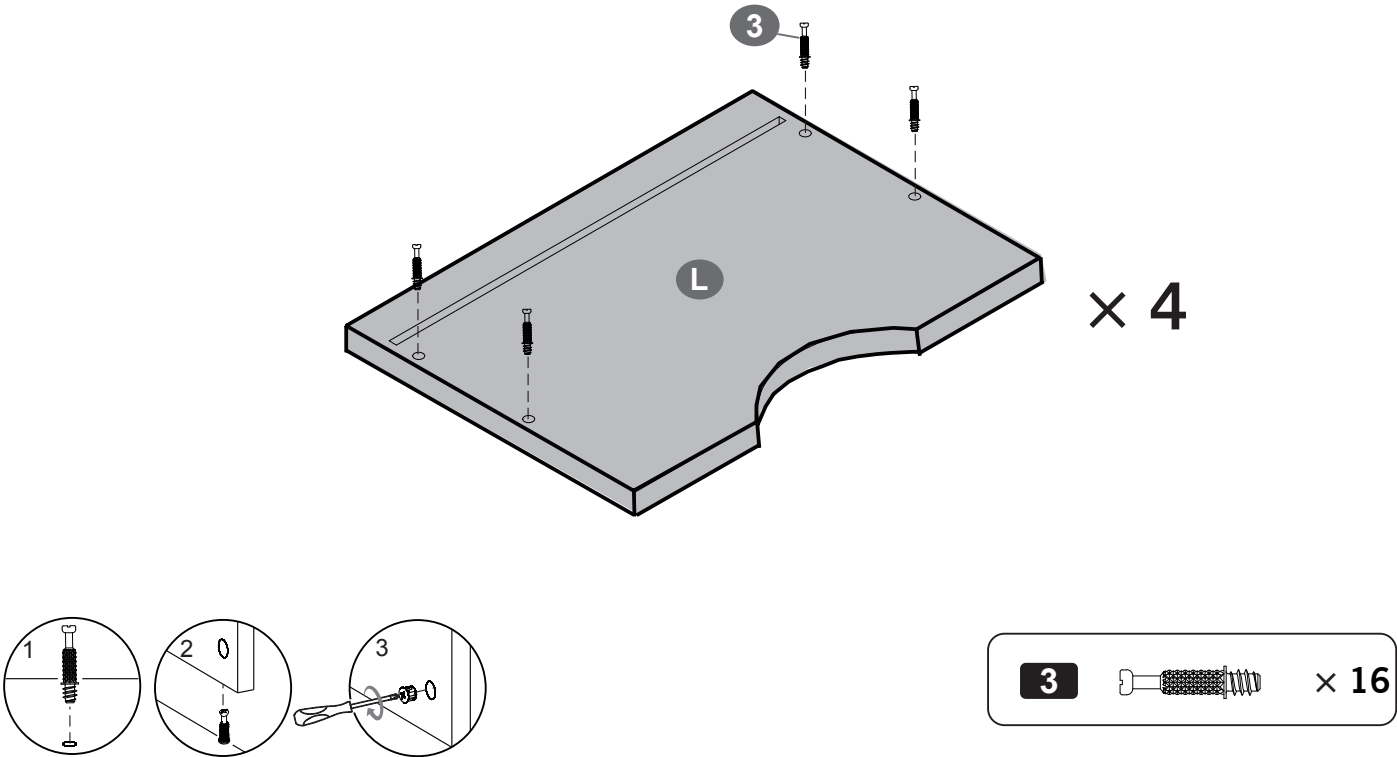



STEP 3

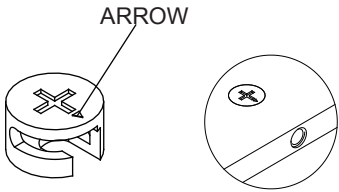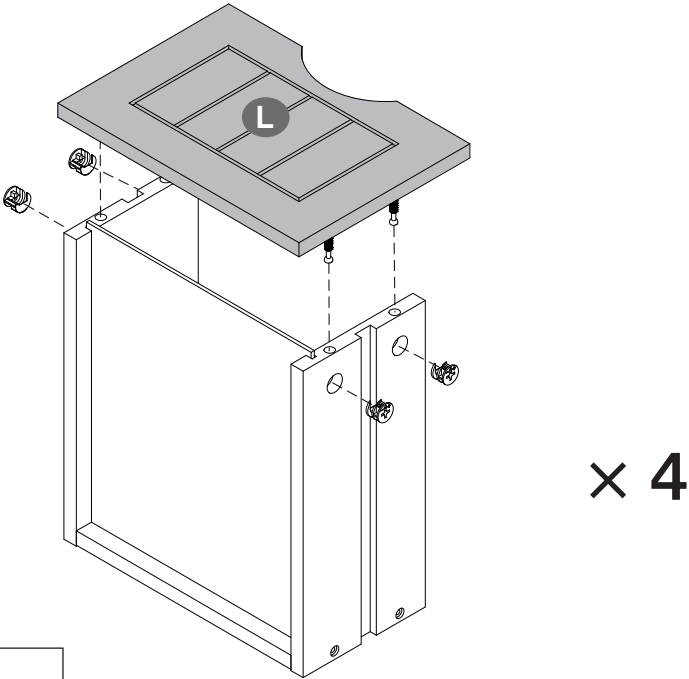



Push a CAM LOCK into the part.
The arrow in the CAM LOCK must point
toward the hole on the edge of the board.








STEP 4

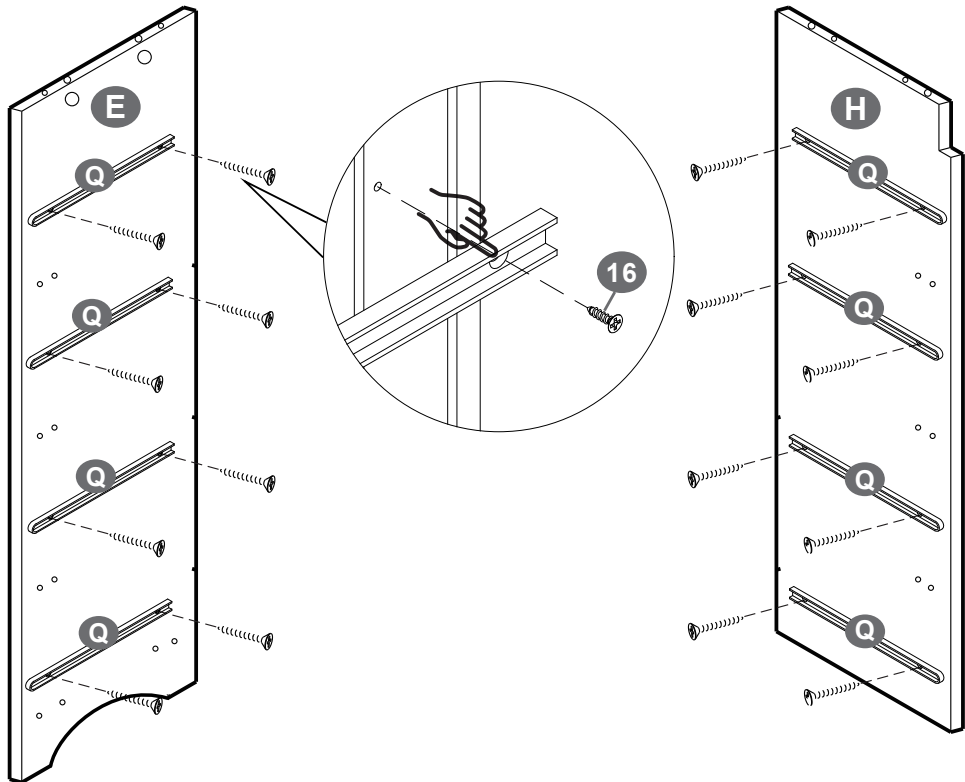


STEP 5

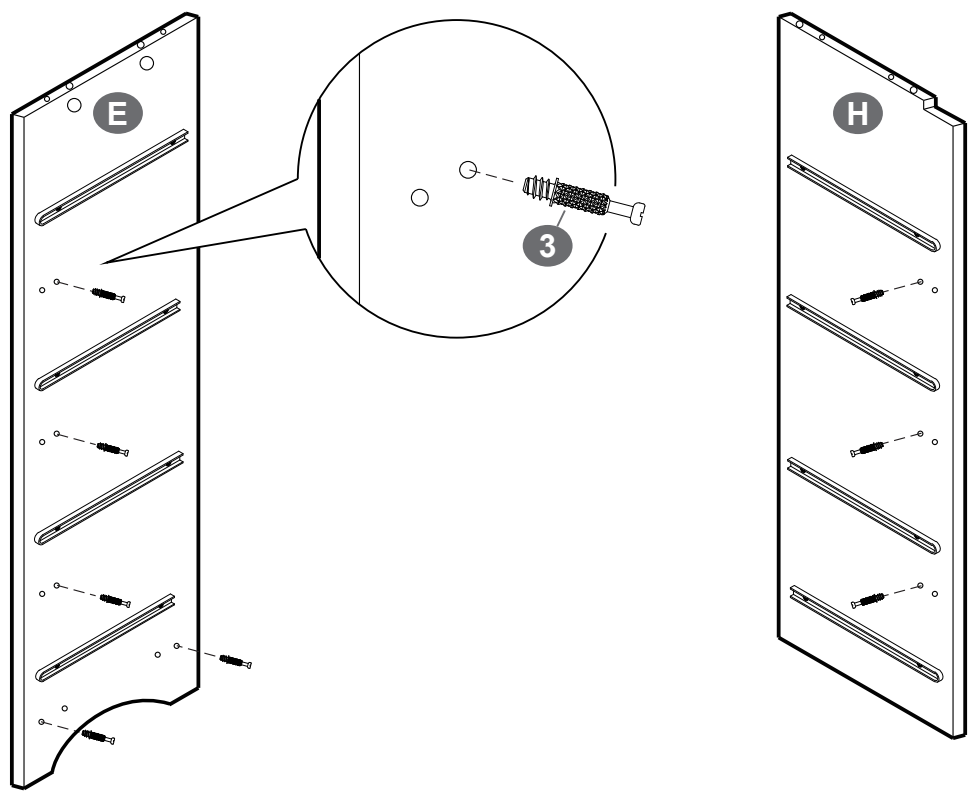

STEP 6

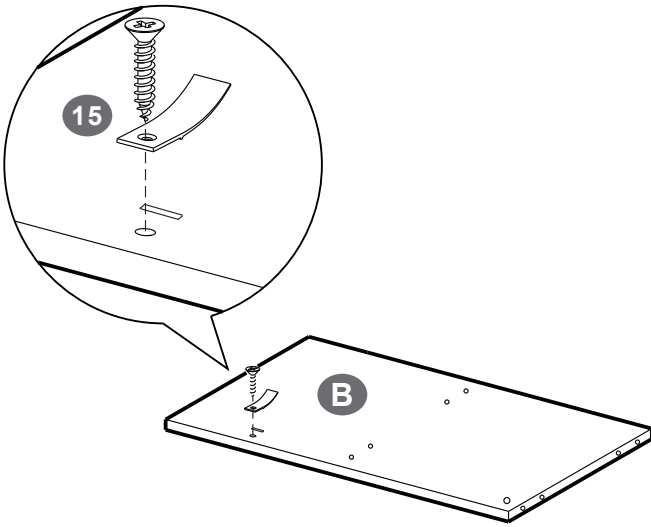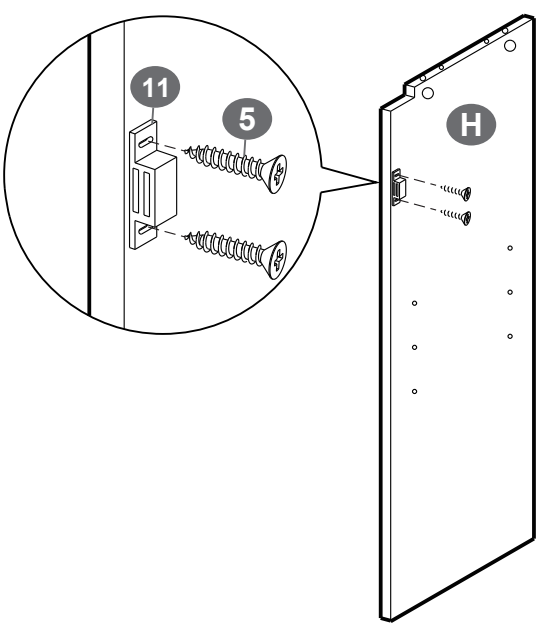


STEP 7

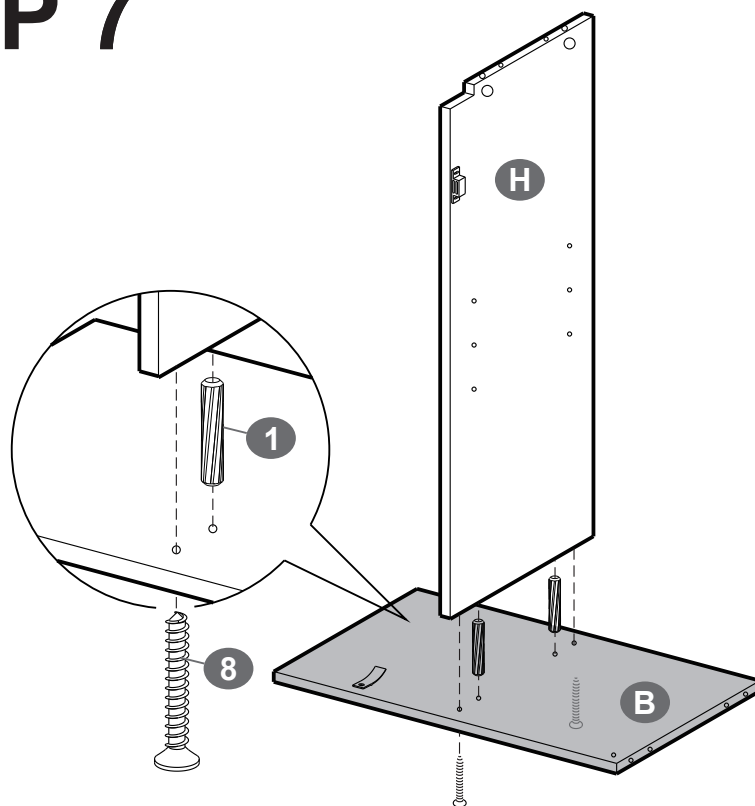

1		× 2
8		× 2


STEP 8

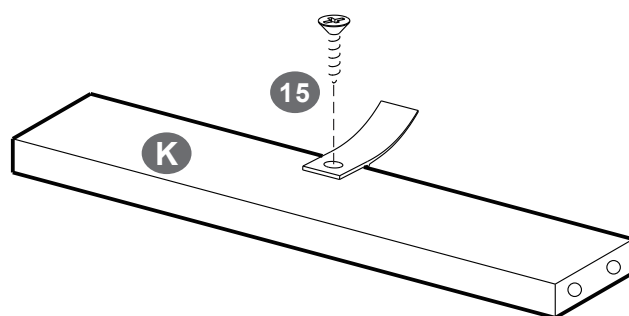


× 3

15		× 3
----	--	-----

STEP 9


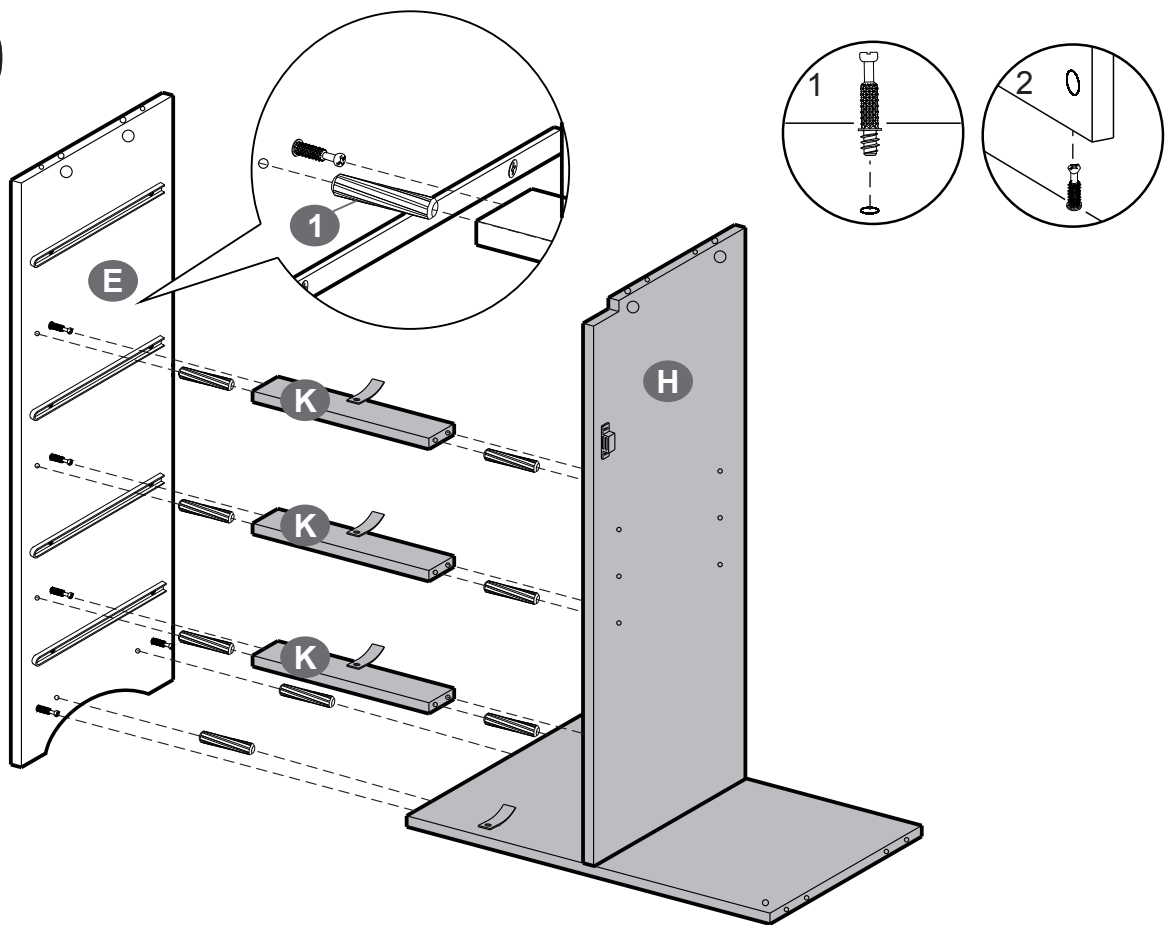


STEP 10

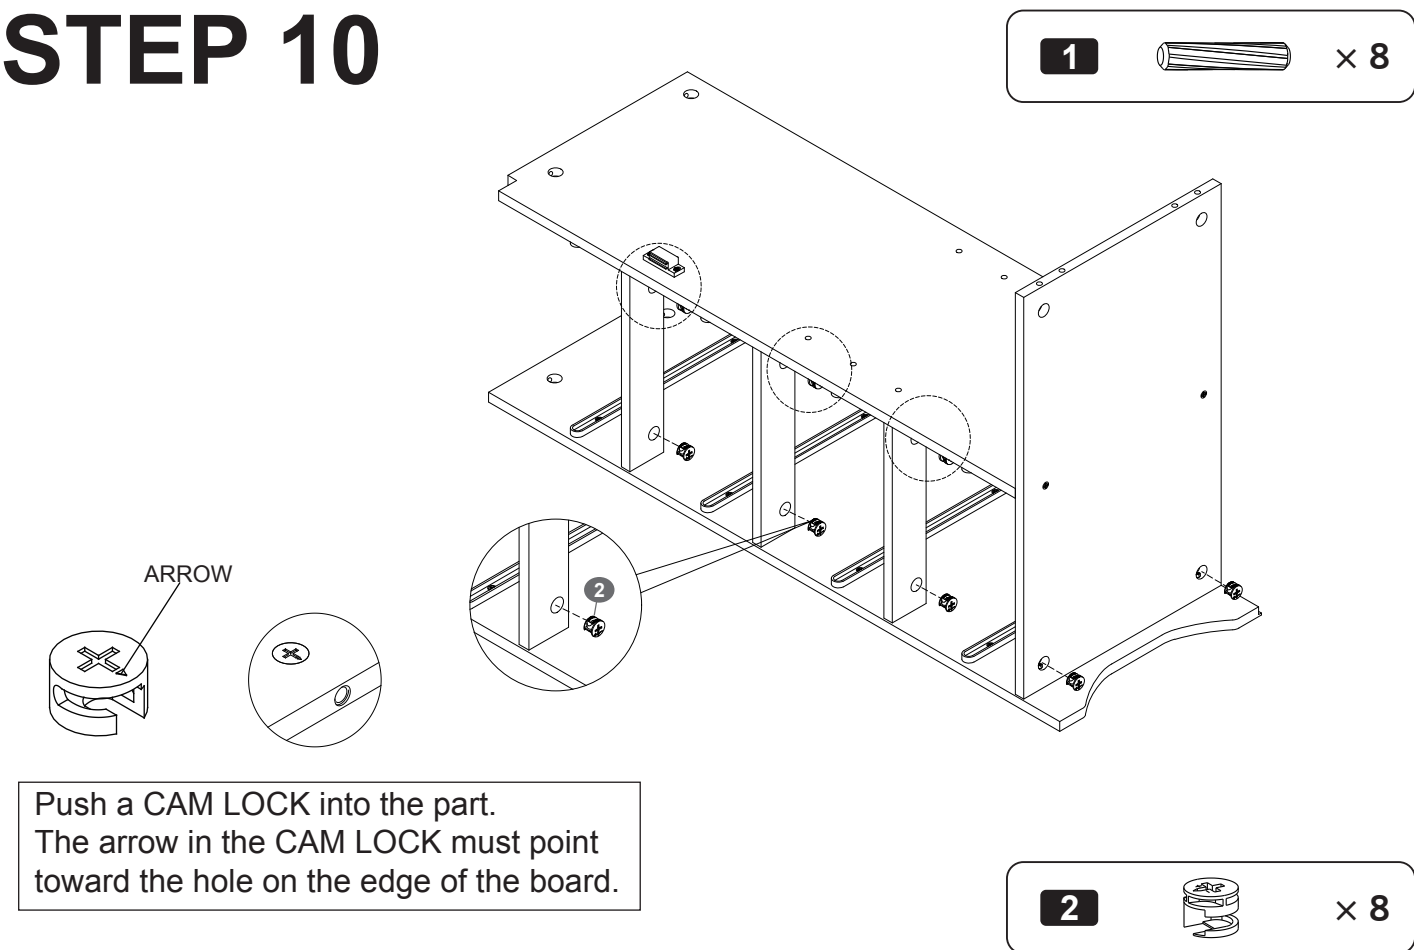



STEP 11

Push a CAM LOCK into the part.
The arrow in the CAM LOCK must point toward the hole on the edge of the board.

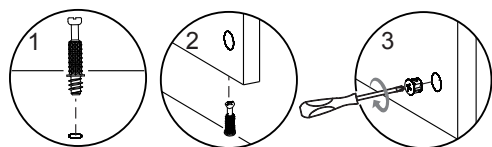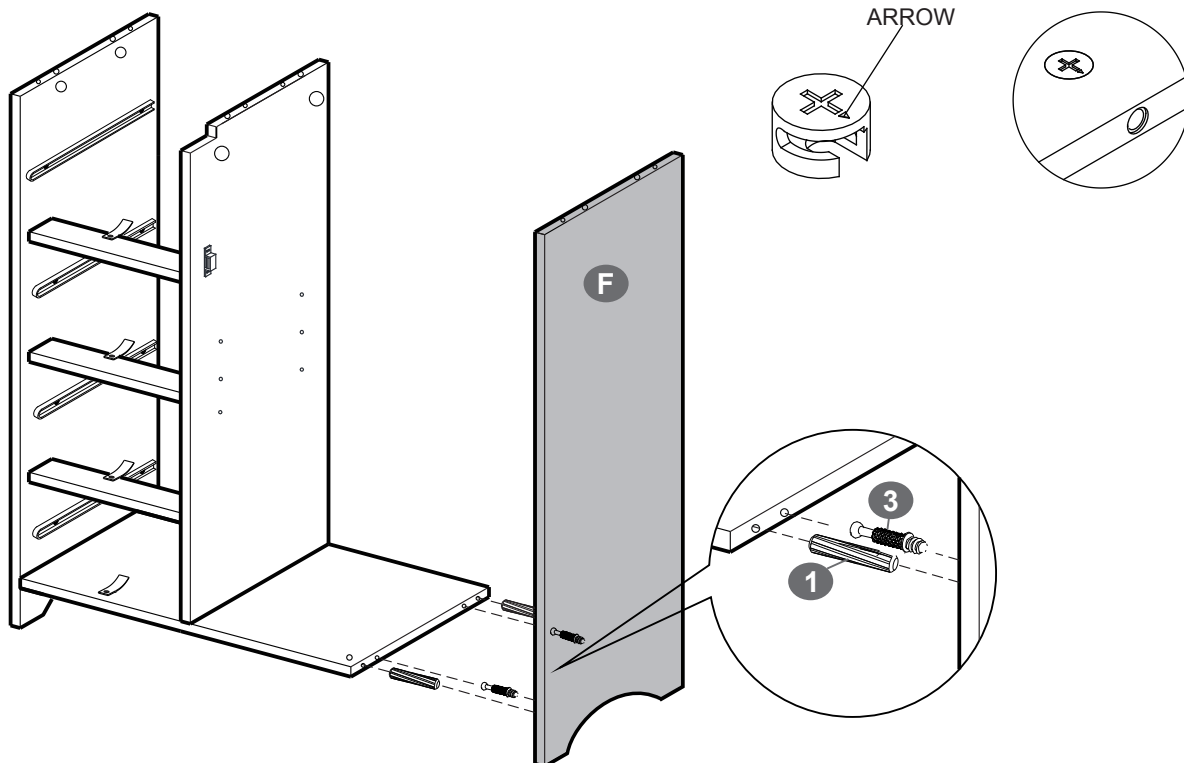

1		× 2
3		× 2


STEP 12

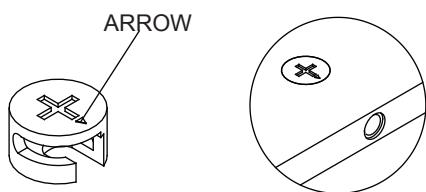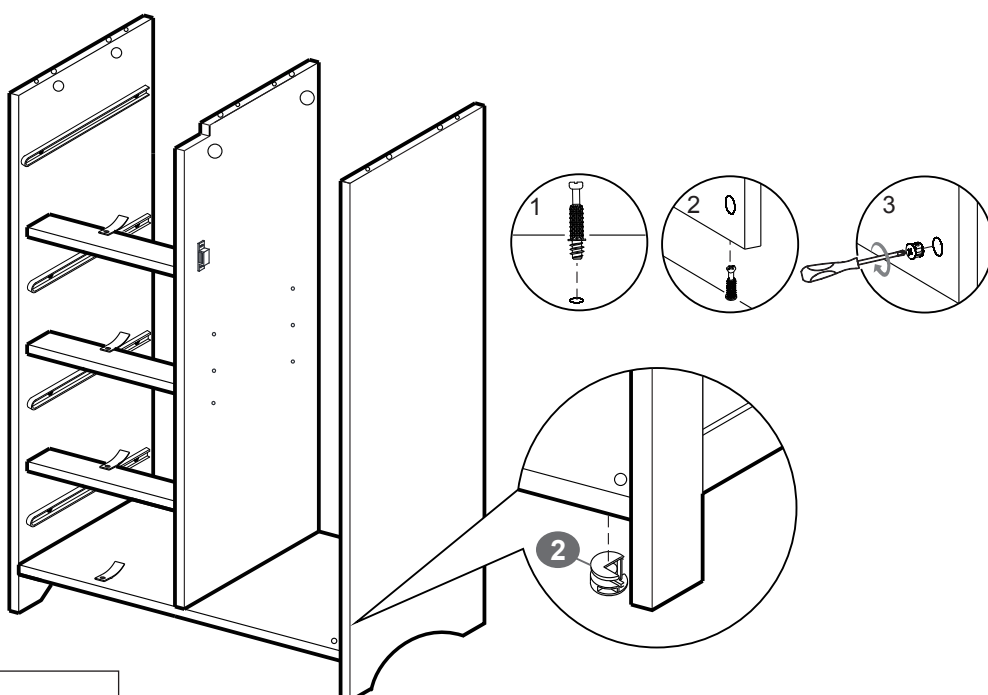

Push a CAM LOCK into the part.
The arrow in the CAM LOCK must point toward the hole on the edge of the board.

2		× 2
----------	---	-----

STEP 13


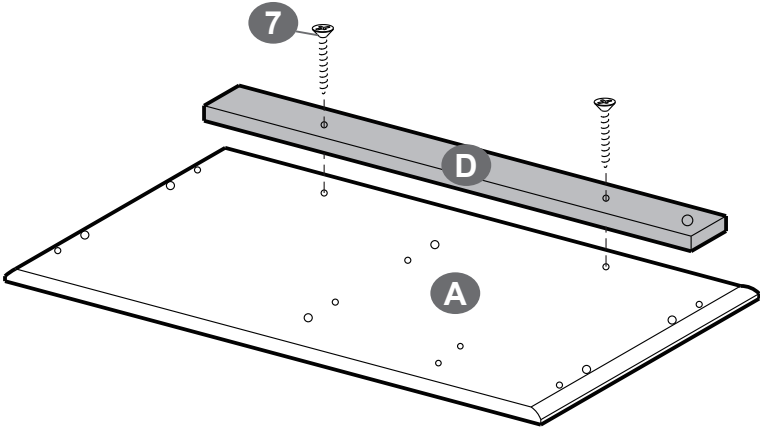


7



× 2

STEP 14

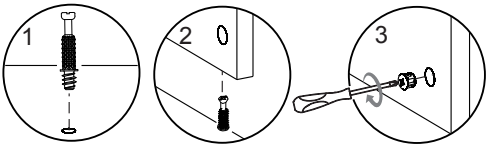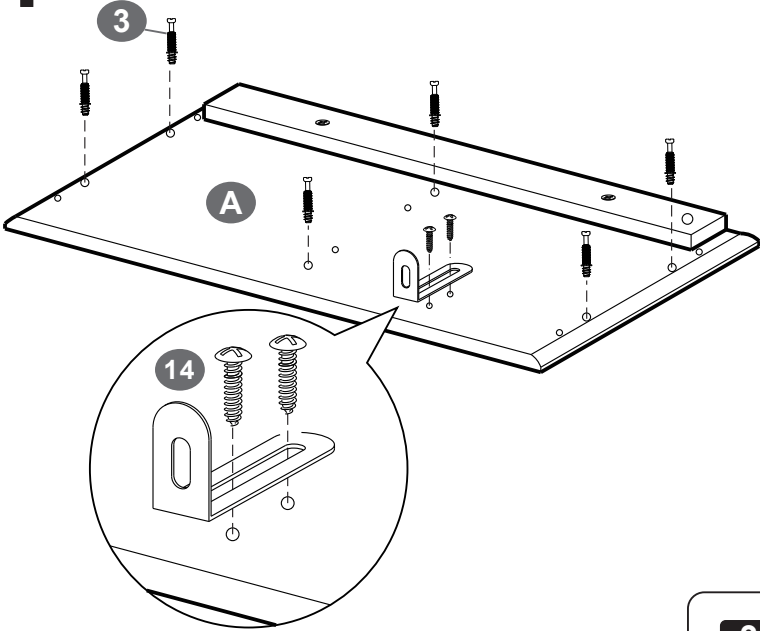

3




× 6

14




× 1

STEP 15

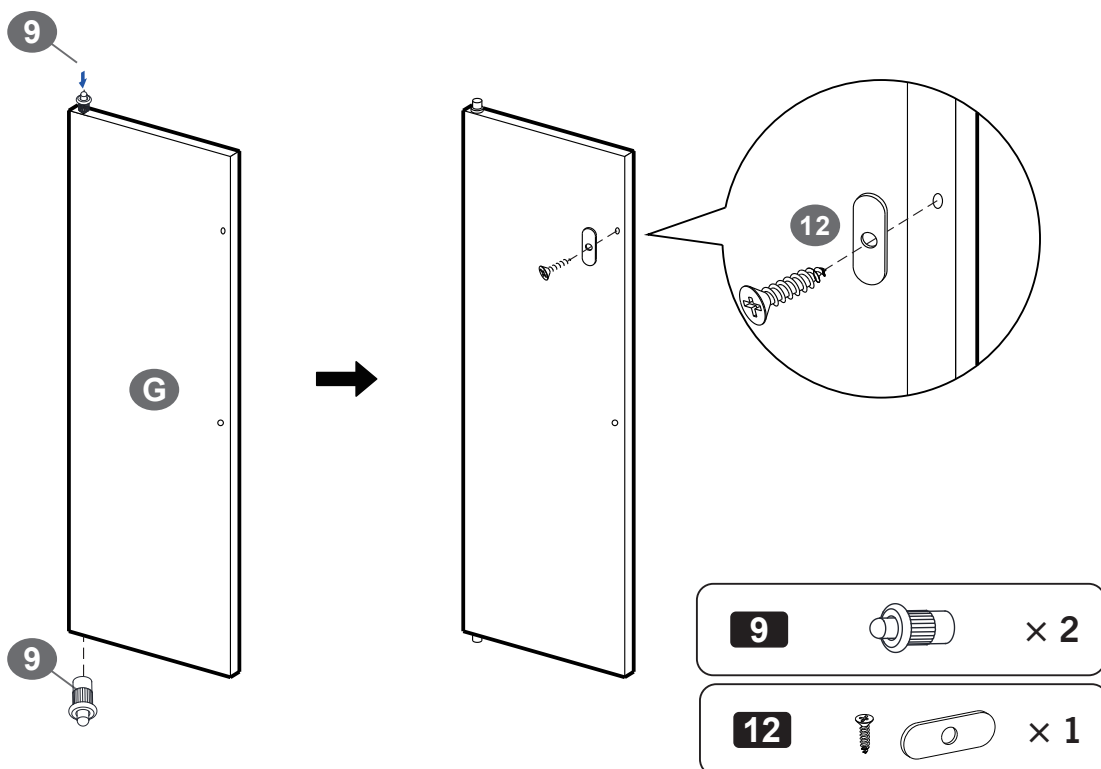


STEP 16

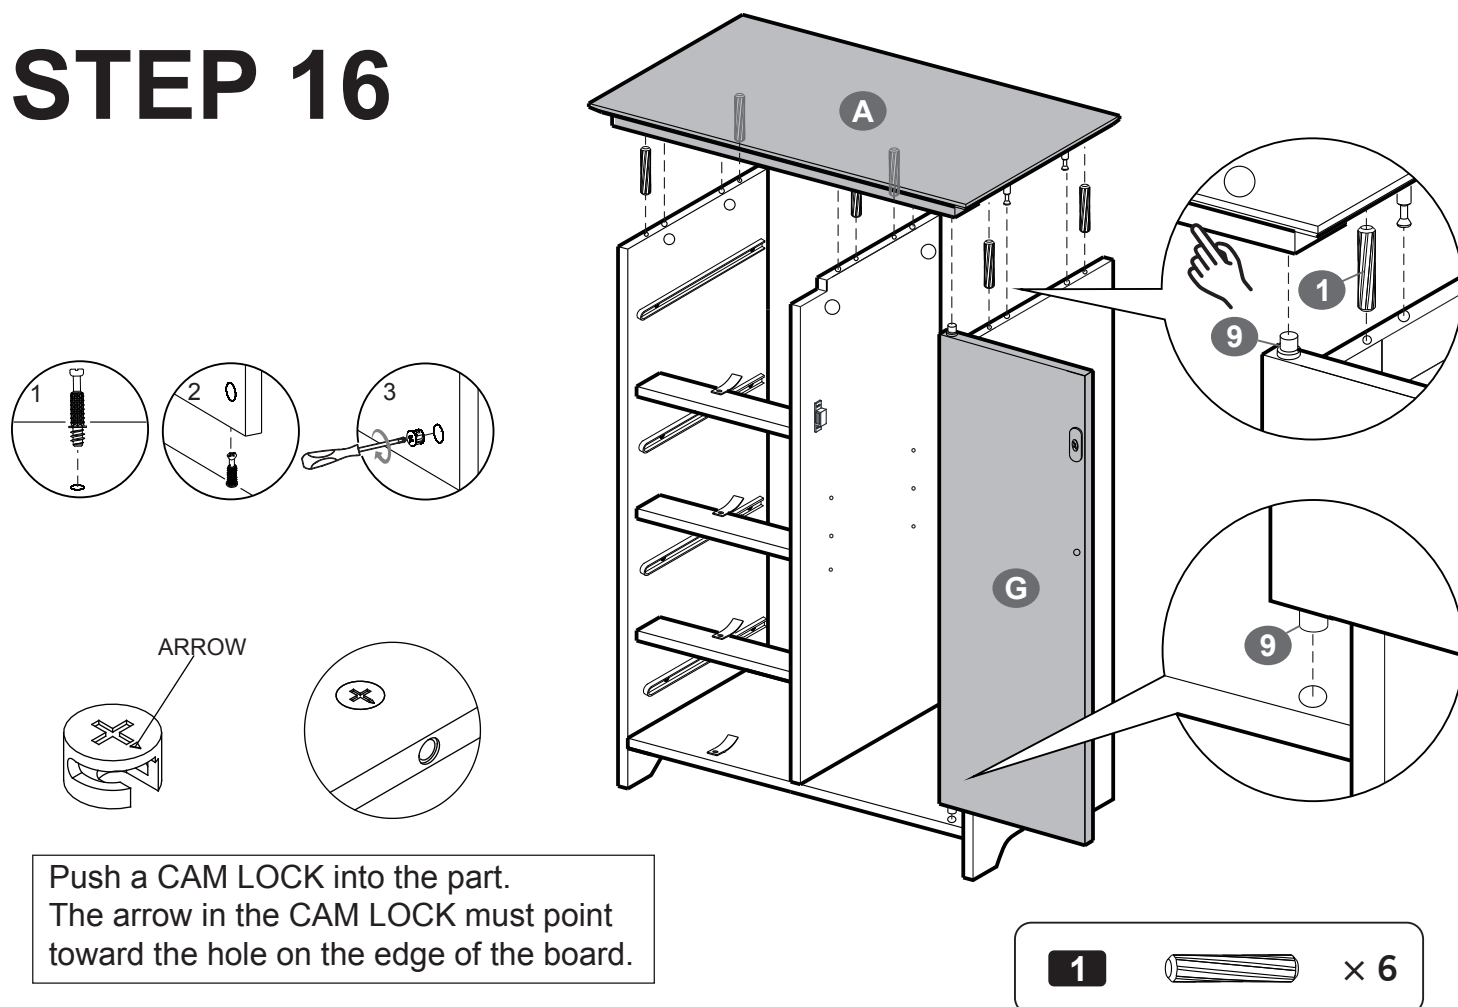


STEP 17



Push a CAM LOCK into the part.
The arrow in the CAM LOCK must point toward the hole on the edge of the board.

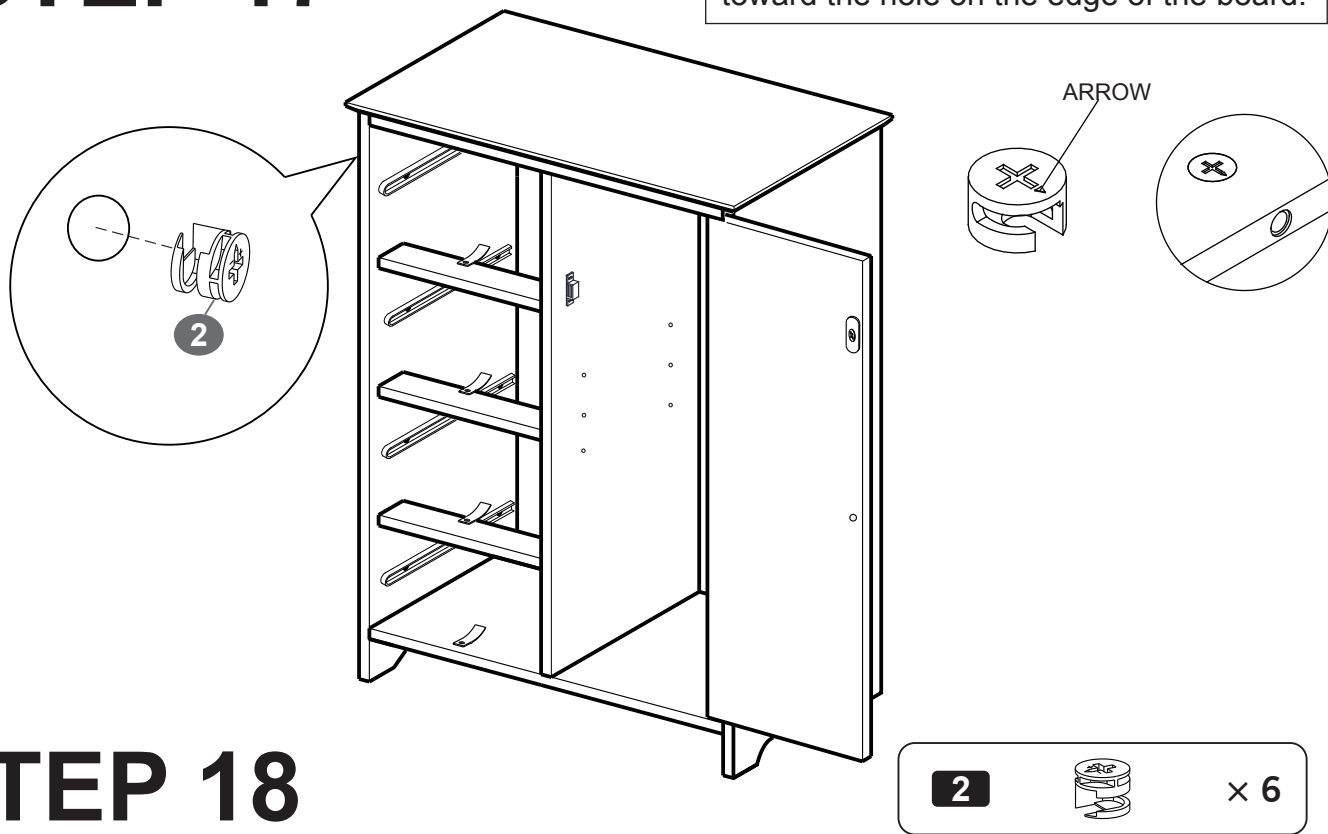







STEP 18

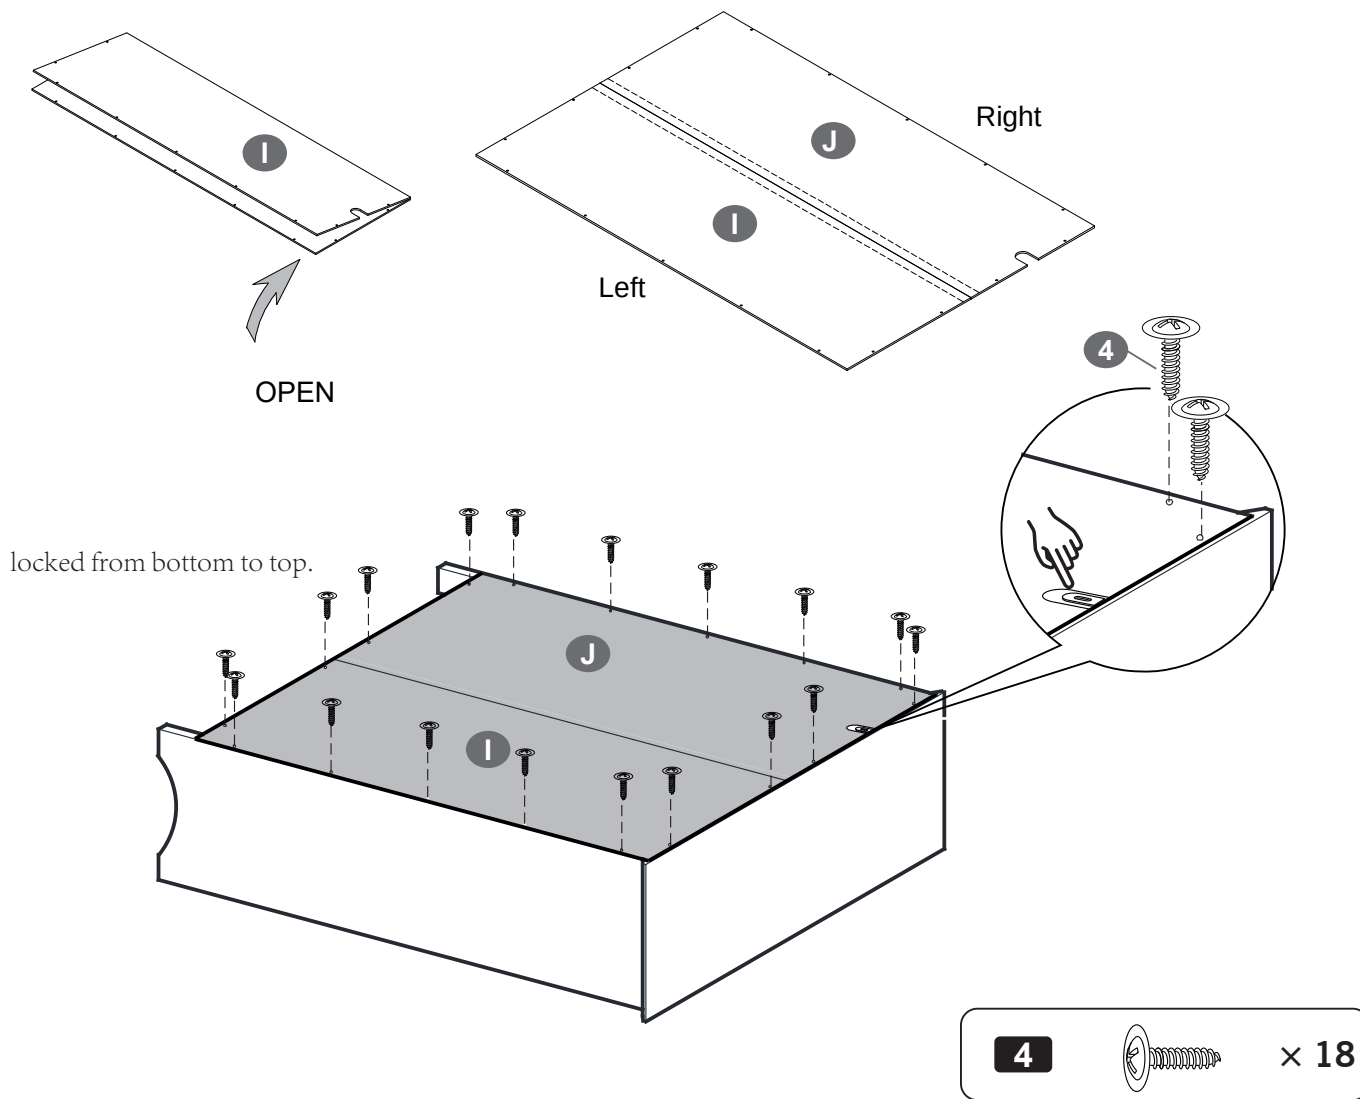



STEP 19

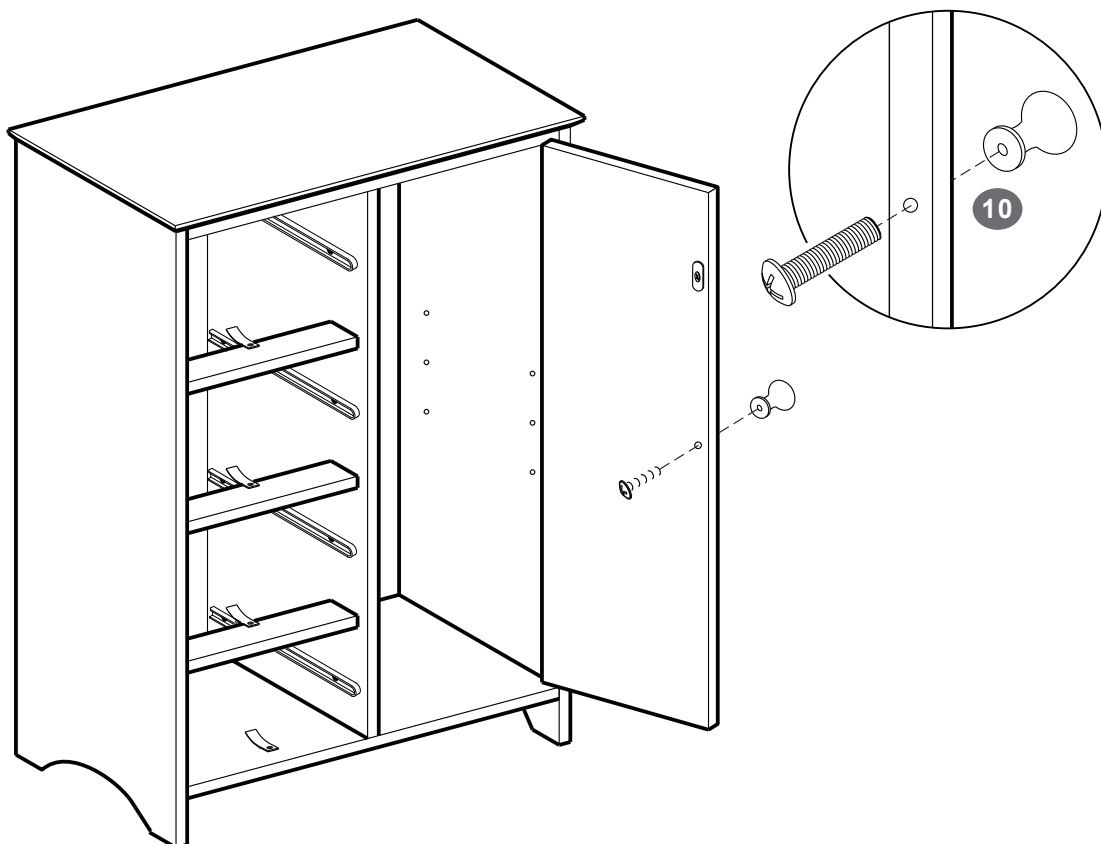


STEP 20

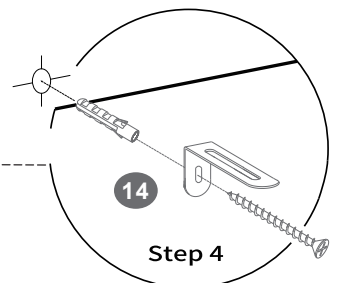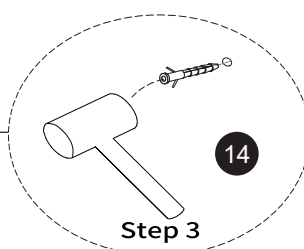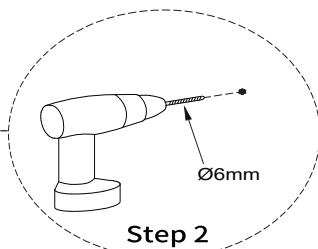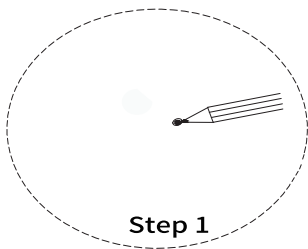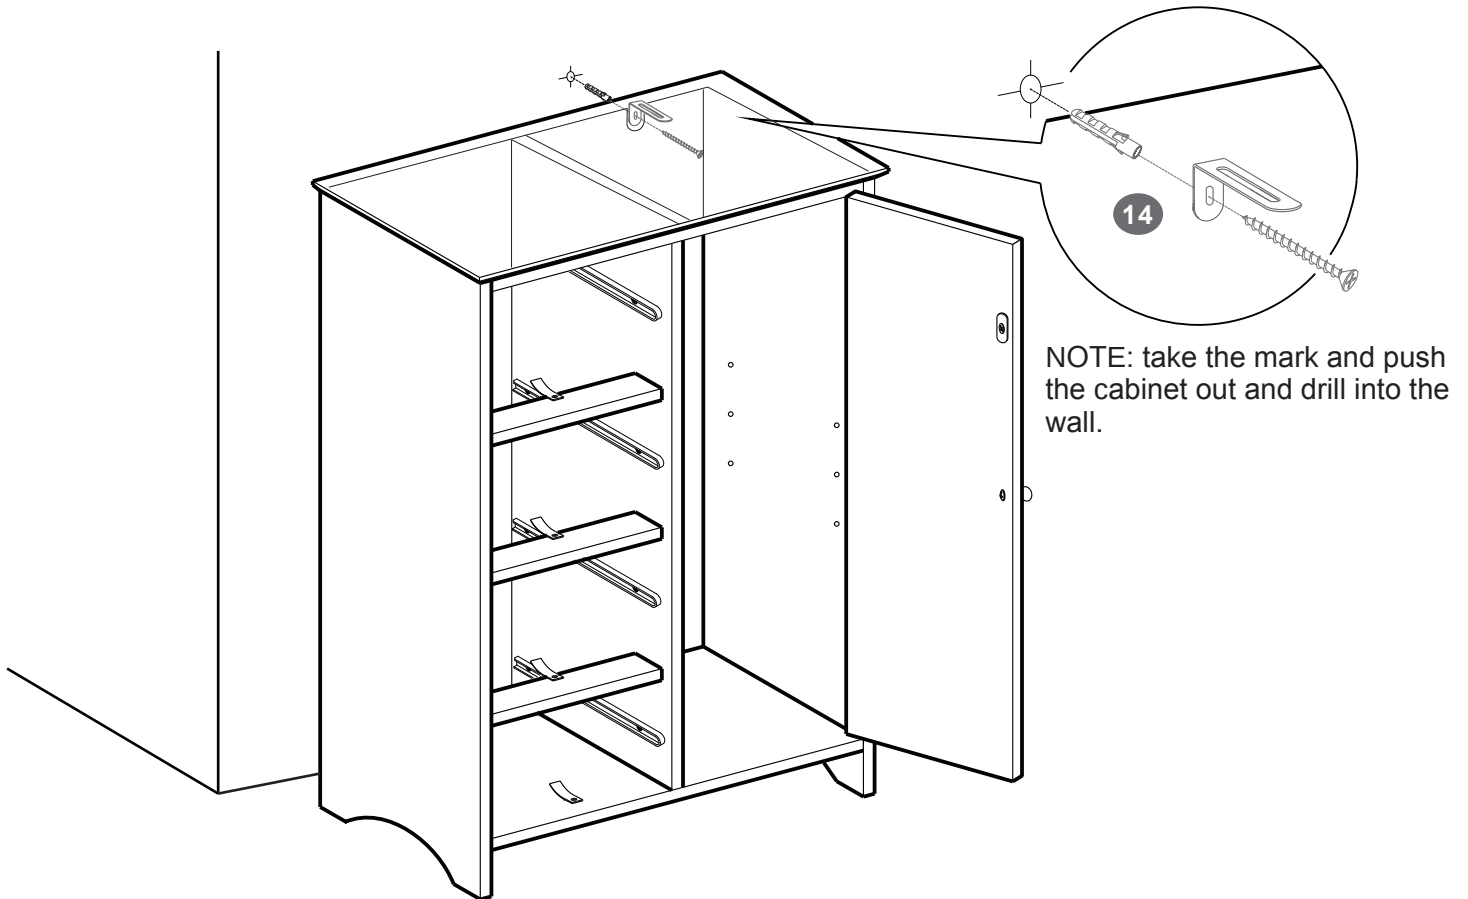

STEP21

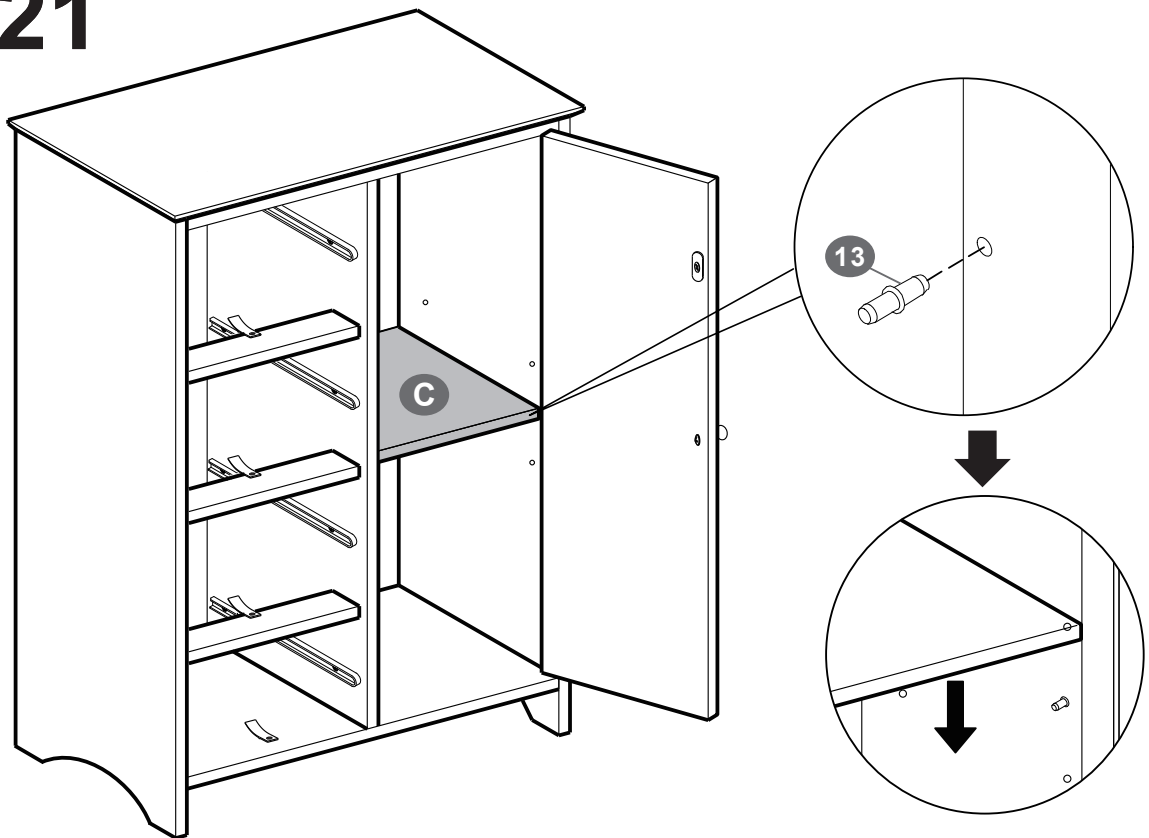

STEP 22

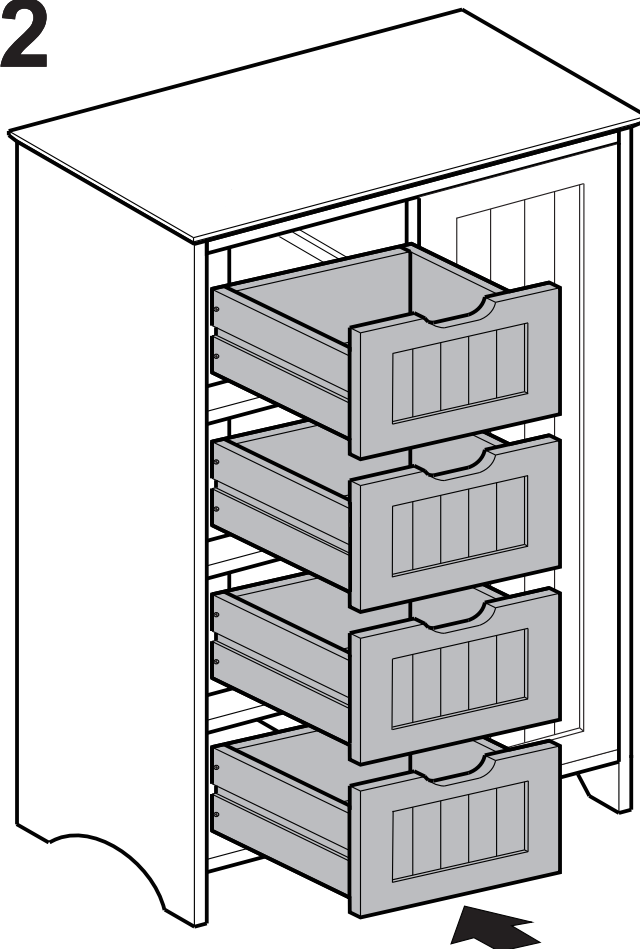

STEP23

Press here and take the drawer out

