



Installation Instruction


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

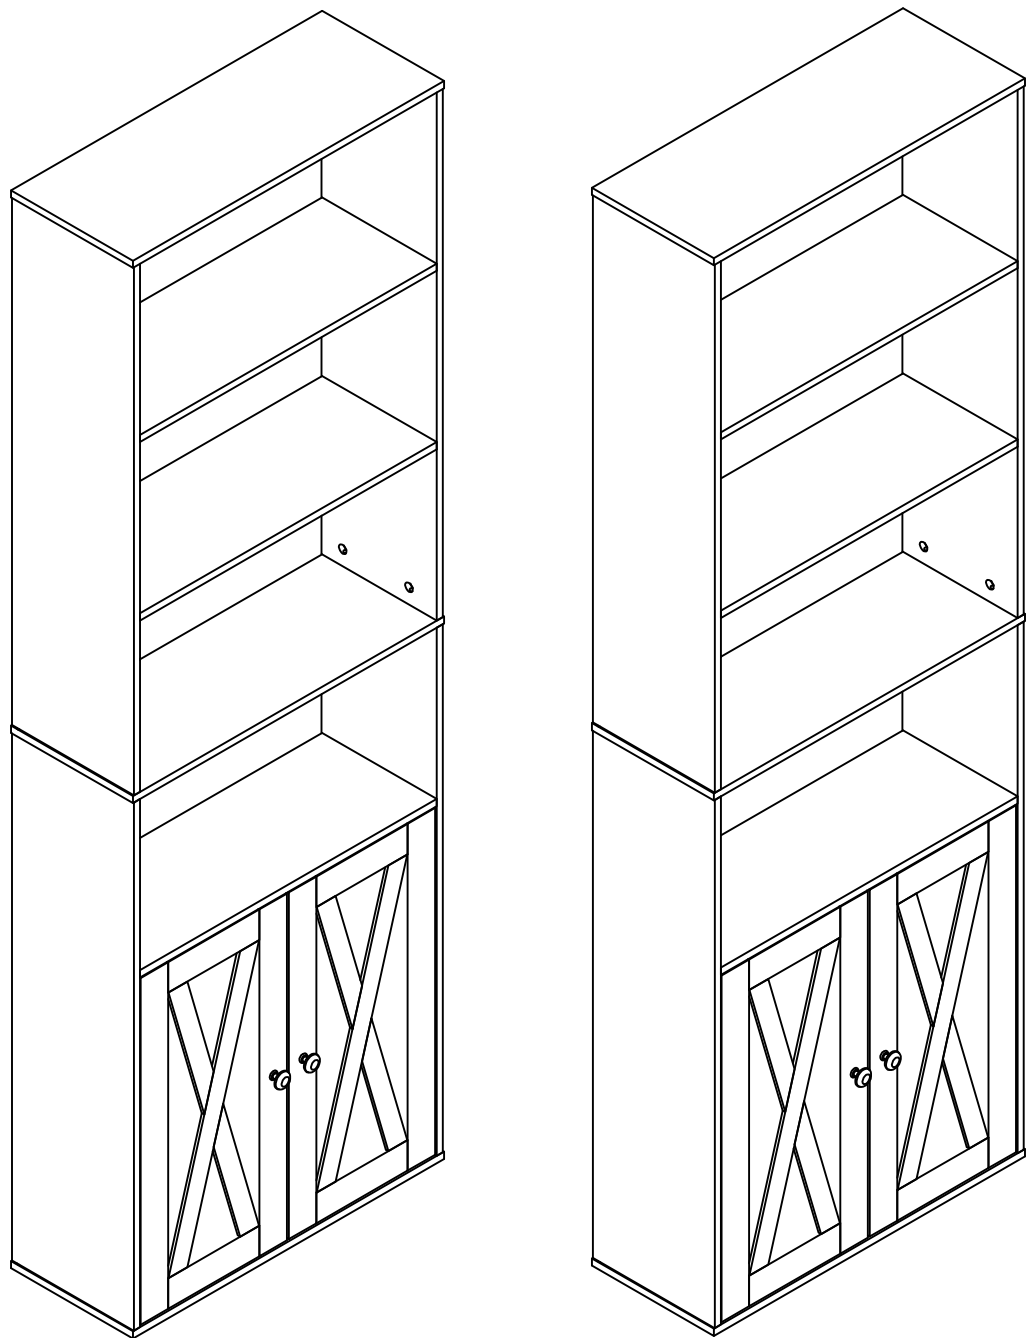


HARDWARE LIST

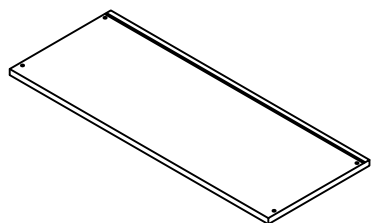


① × 2PC

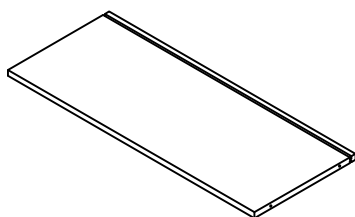


② × 4PCS

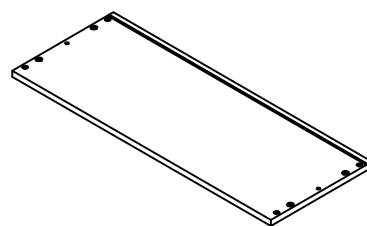


③ × 2PC

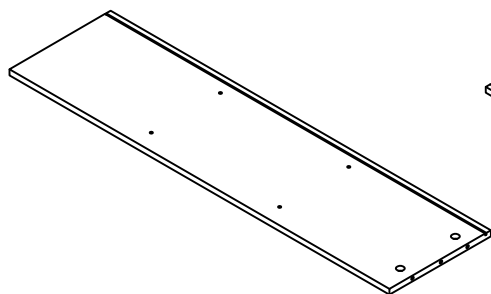


④ × 2PC

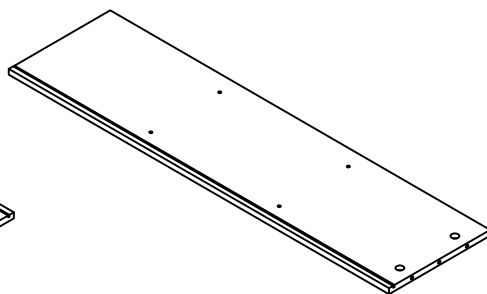


⑤ × 2PC

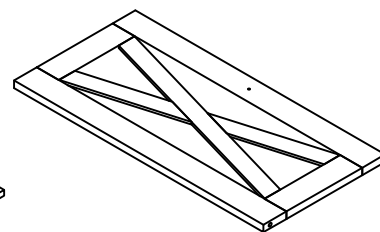


⑥ × 4PCS

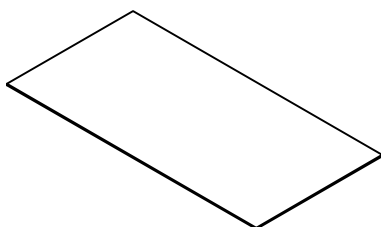


⑦ × 12PCS

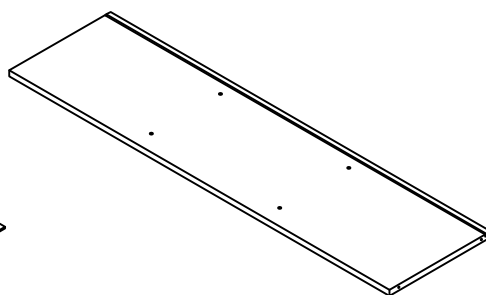


⑧ × 4PCS

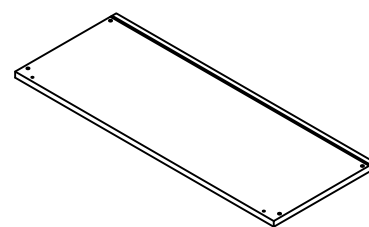

⑨ × 2PC

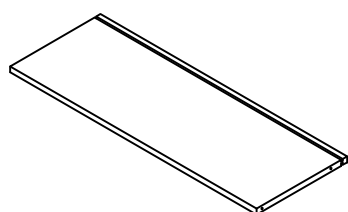

⑩ × 2PC

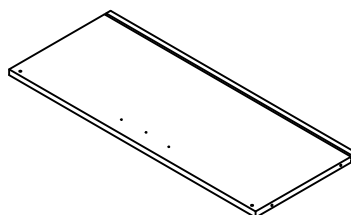


⑪ × 2PC


PARTA LIST




M4
A×1PC




Ø6x25mm
B1×2PC




M4
B2×2PC



Ø8xM4x25mm
B3×2PC

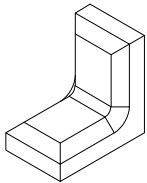


28x28x18mm
C1×2PC



26x26x13.5mm
C2×2PC




Ø6xM3x12mm
C3×10+1PCS




Ø29*25mm
D1×4PCS



M4*20mm
D2×4PCS

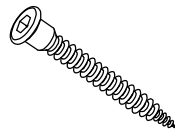

M5x45mm
E×56+1PCS



Ø6.5*36mm
F1×8PCS




Ø 15*9.5mm
F2×8PCS




14x14x11mm
G1×48PCS




Ø6xM3x16mm
G2×54+1PCS




Ø12*25mm
H×8PCS

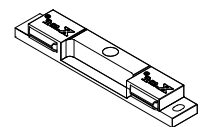


120*19mm
I1×2PC




54*12*1.0mm
I2×4PCS




40*40*5.0mm
J×8PCS



Ø6*30mm
K×4PCS

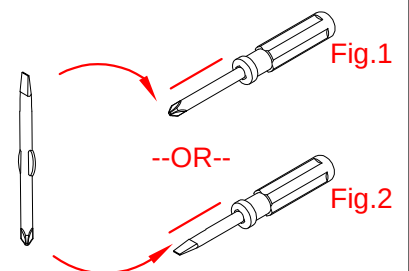


1

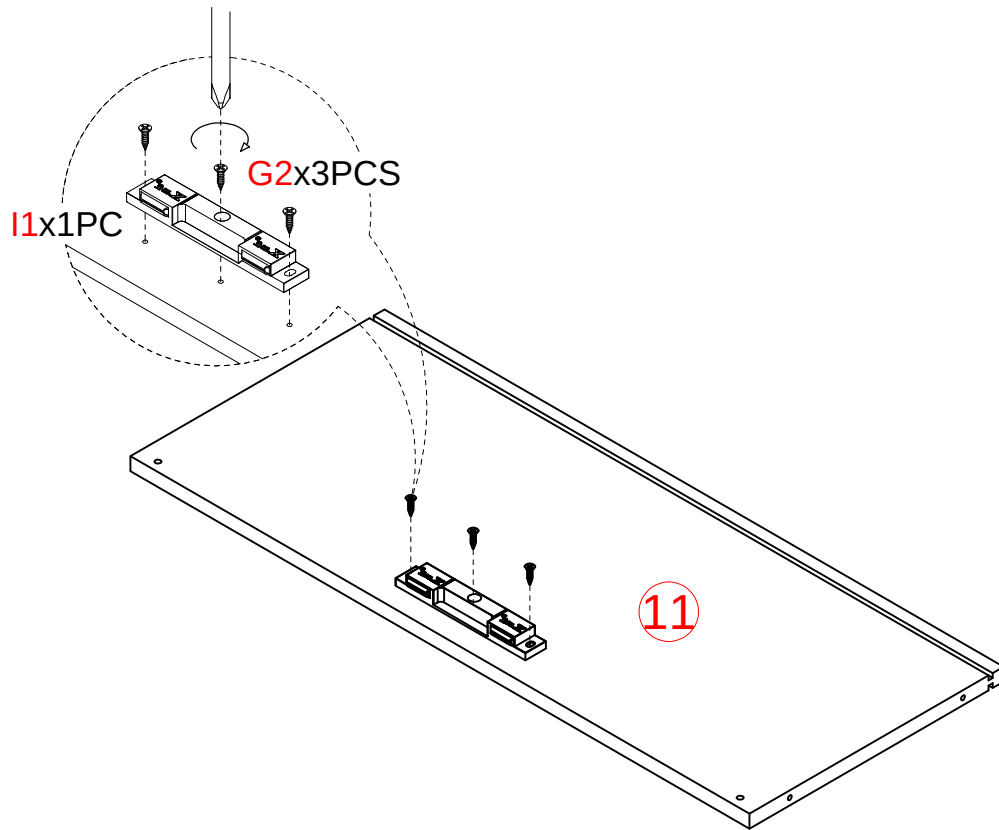

x2

I1x2PC
G2x6PCS
11x2PC


2

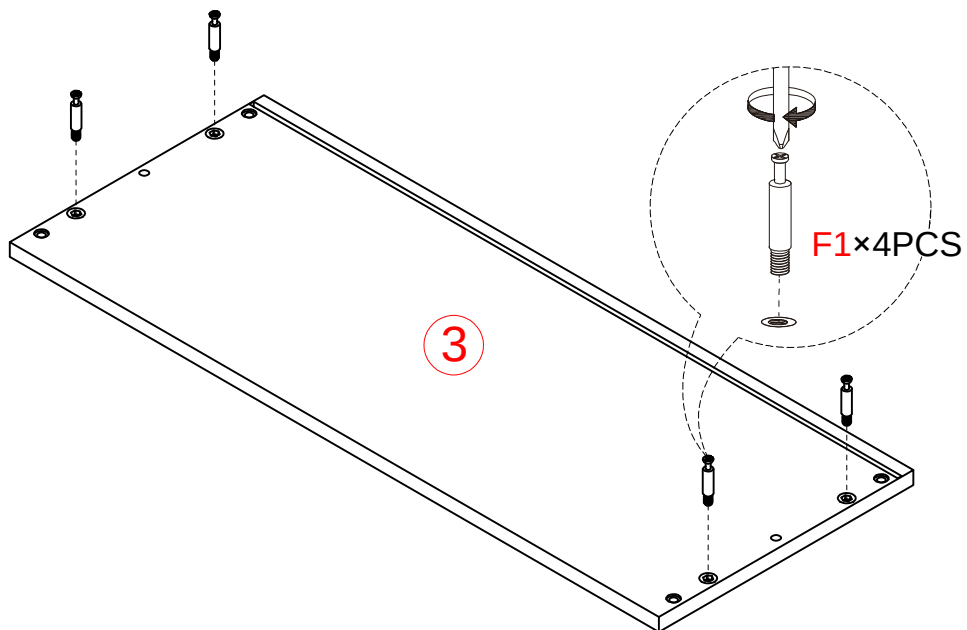

x2

F1x8PCS
3x2PC


3

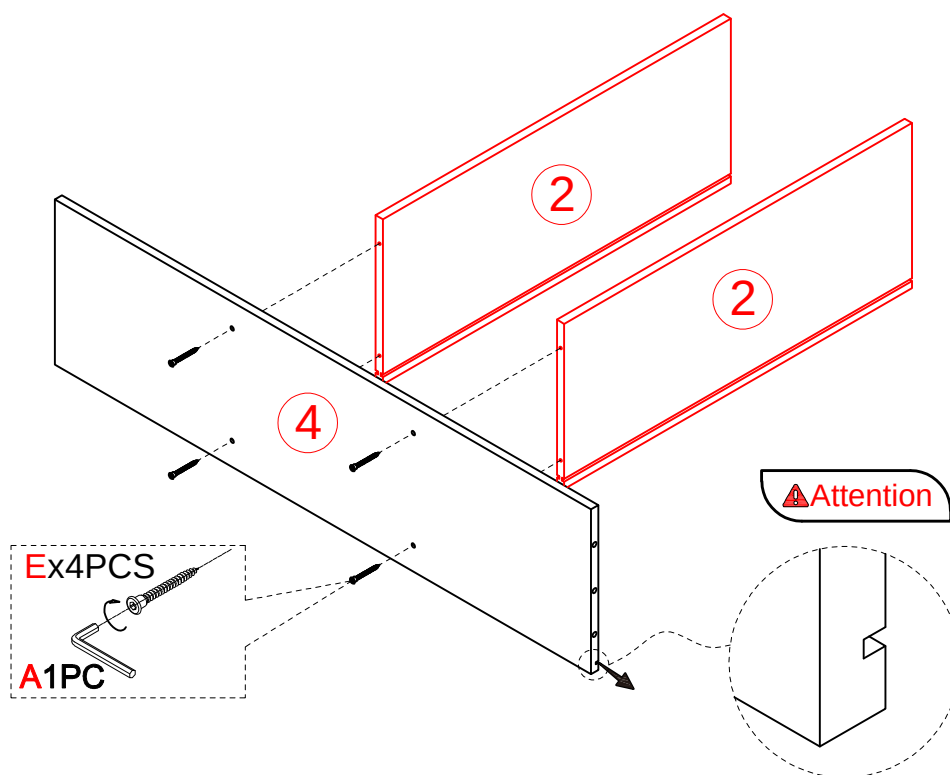

x2

Ax1PC
Ex8PCS
②x4PCS
④x2PC

4

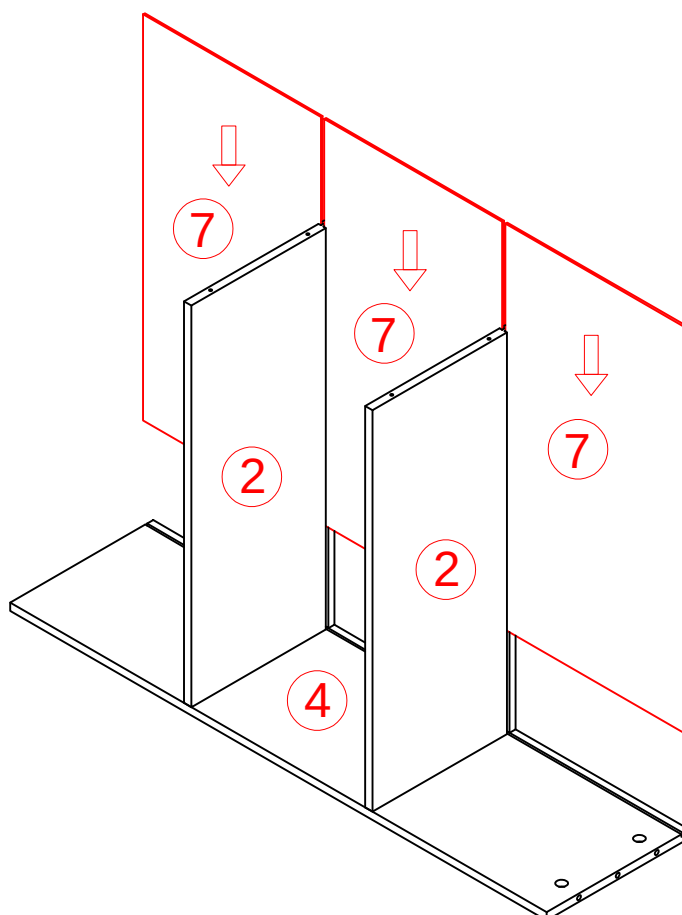


x2

⑦x6PCS


5

x2

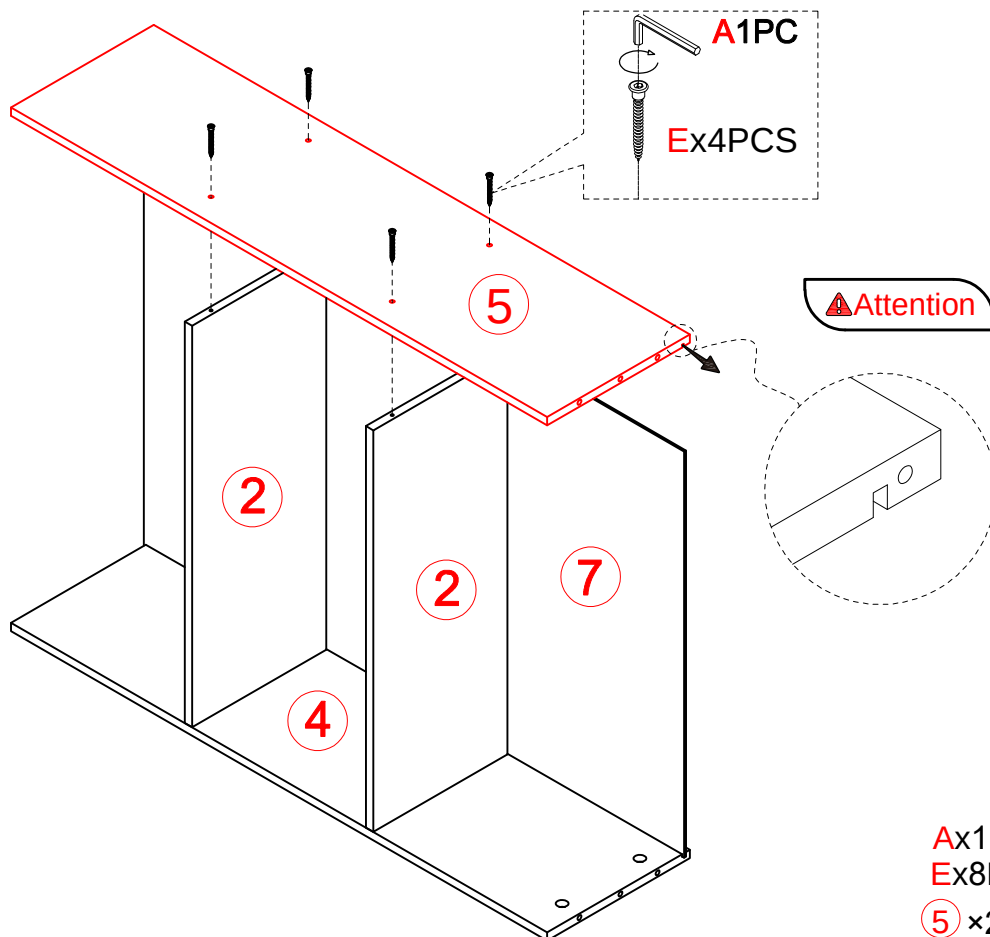


6

x2

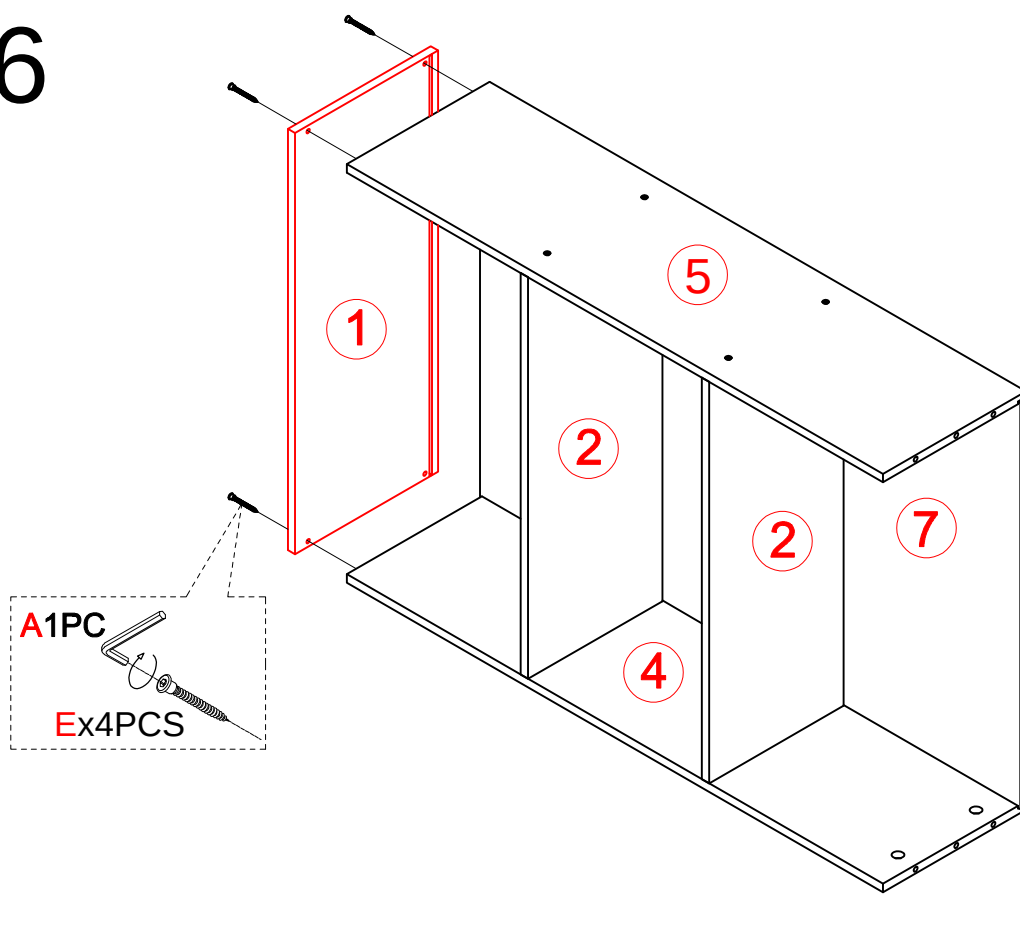


7

x2

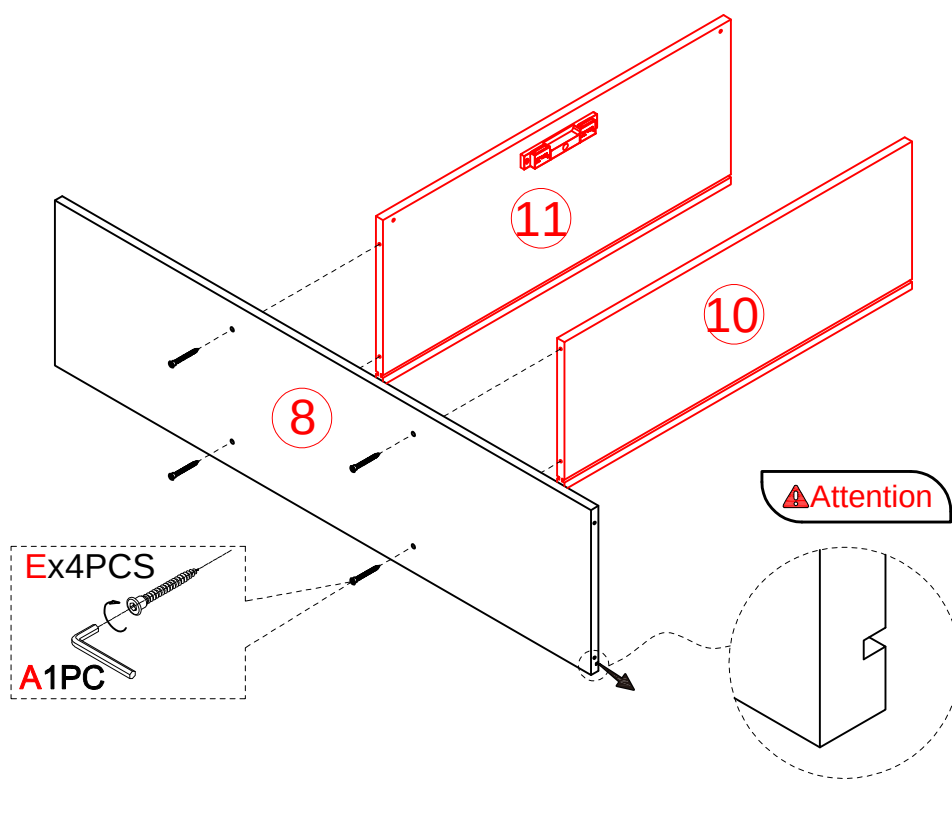


8

x2

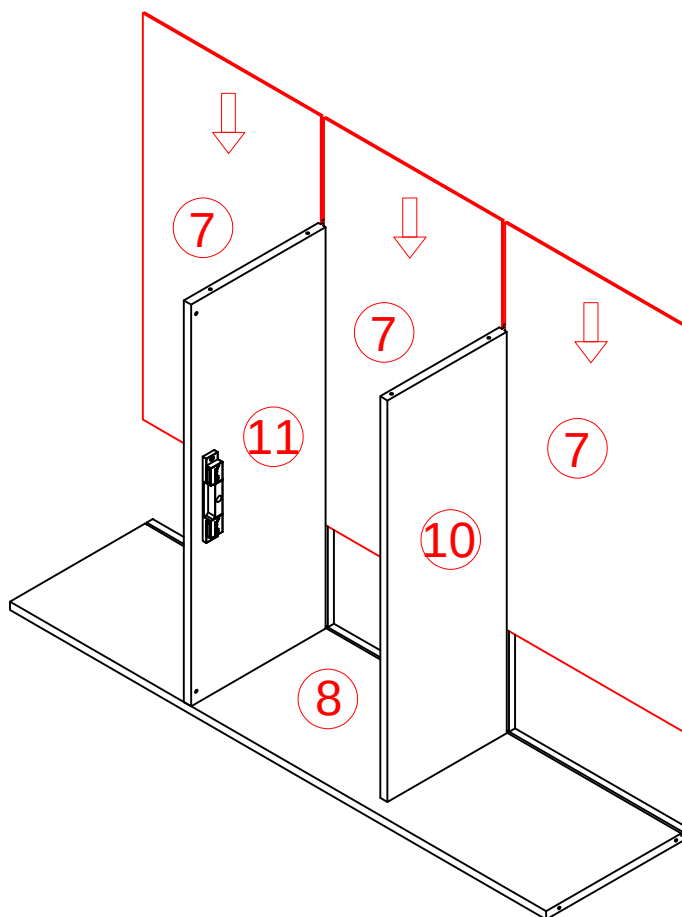


9

x2

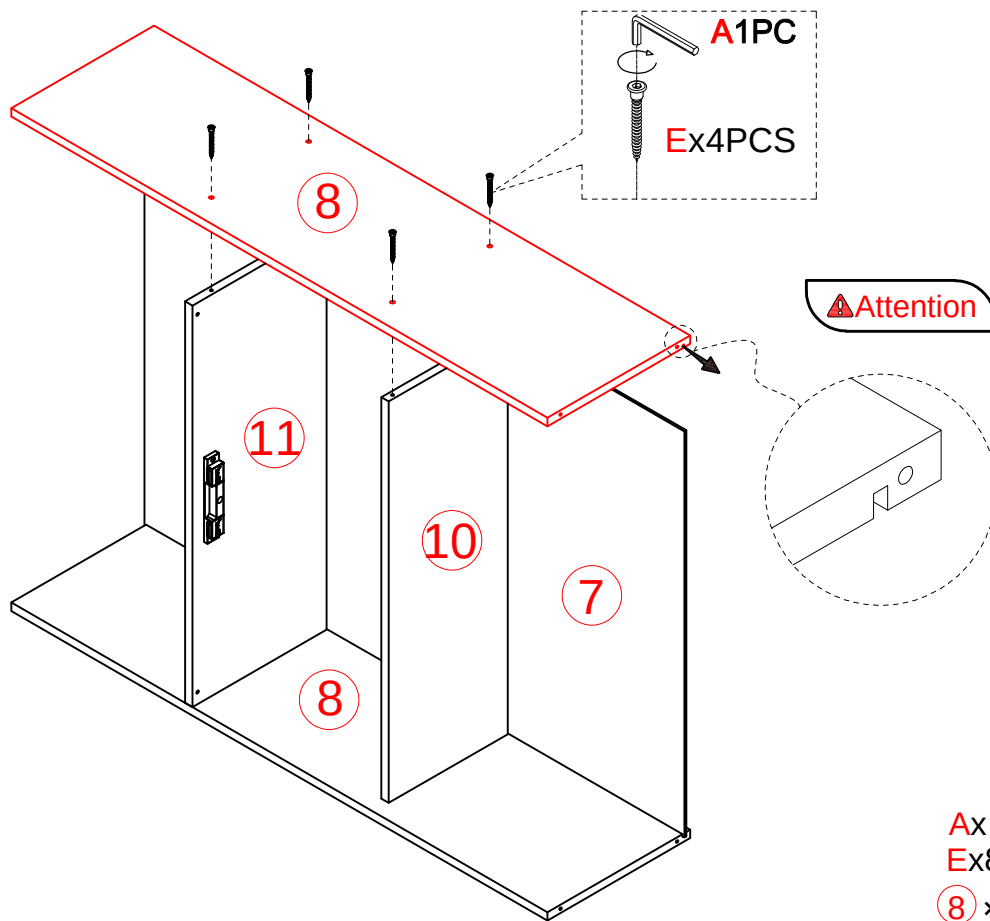


10

x2

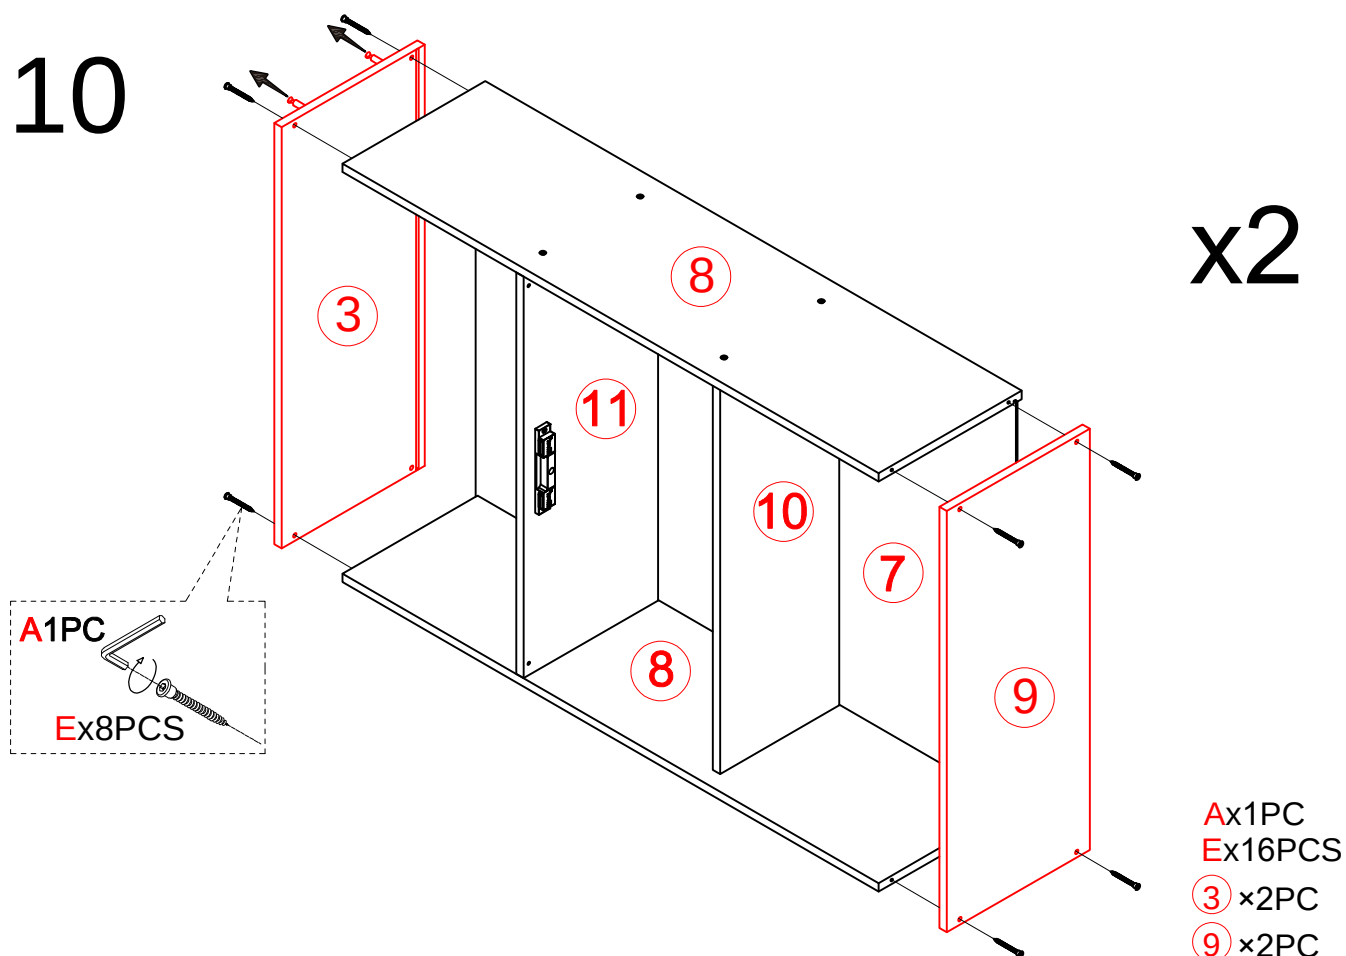


11

x2

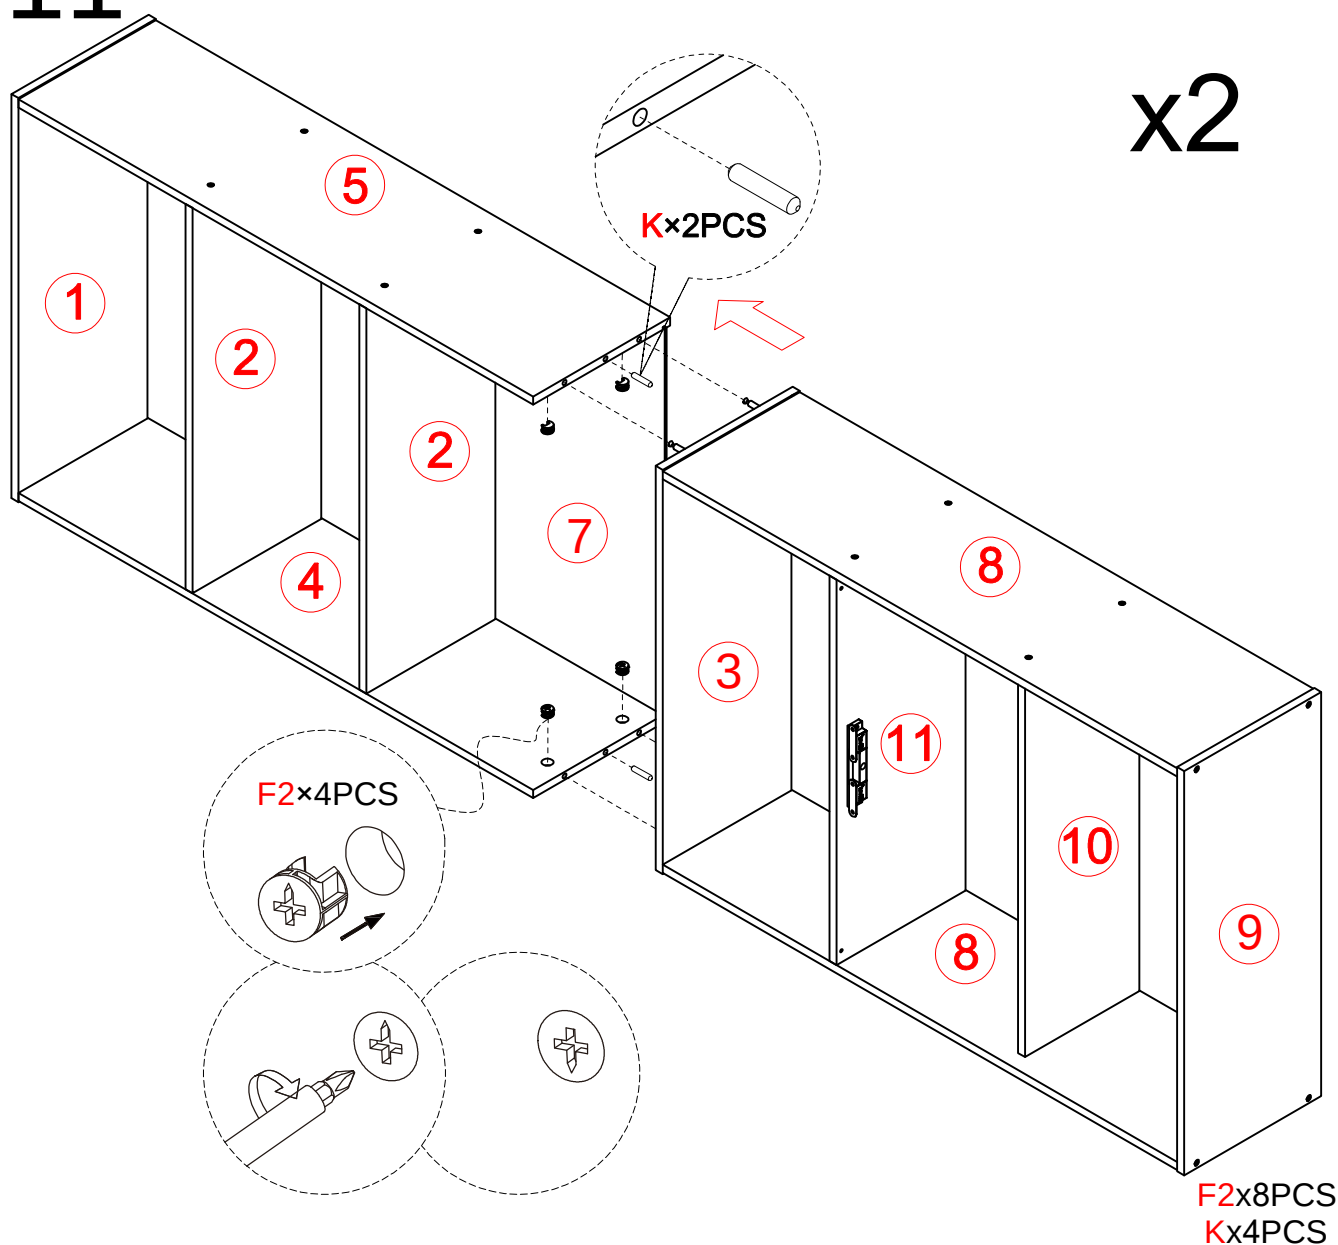


12

x2

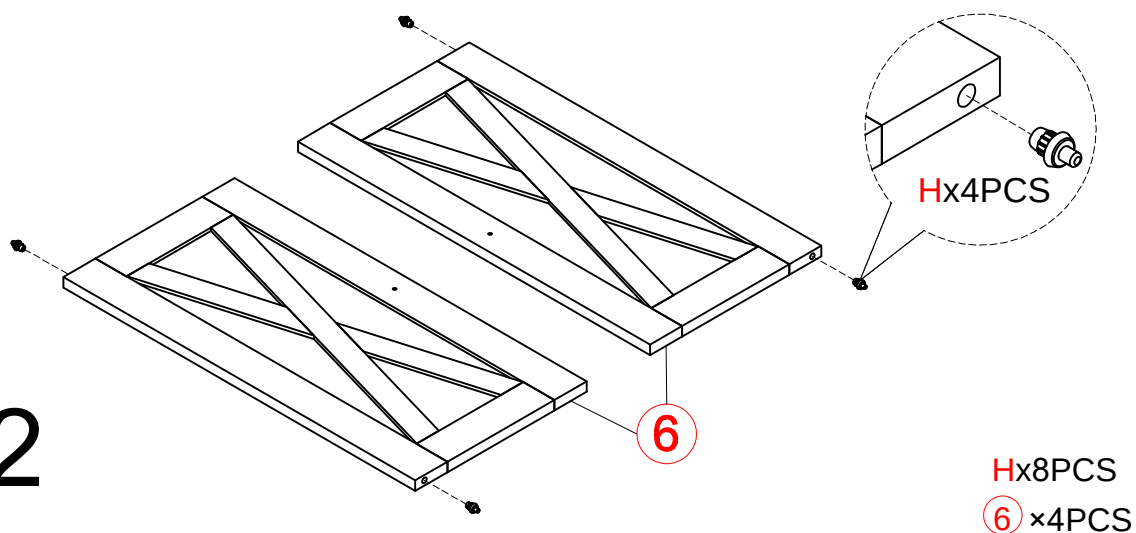


13

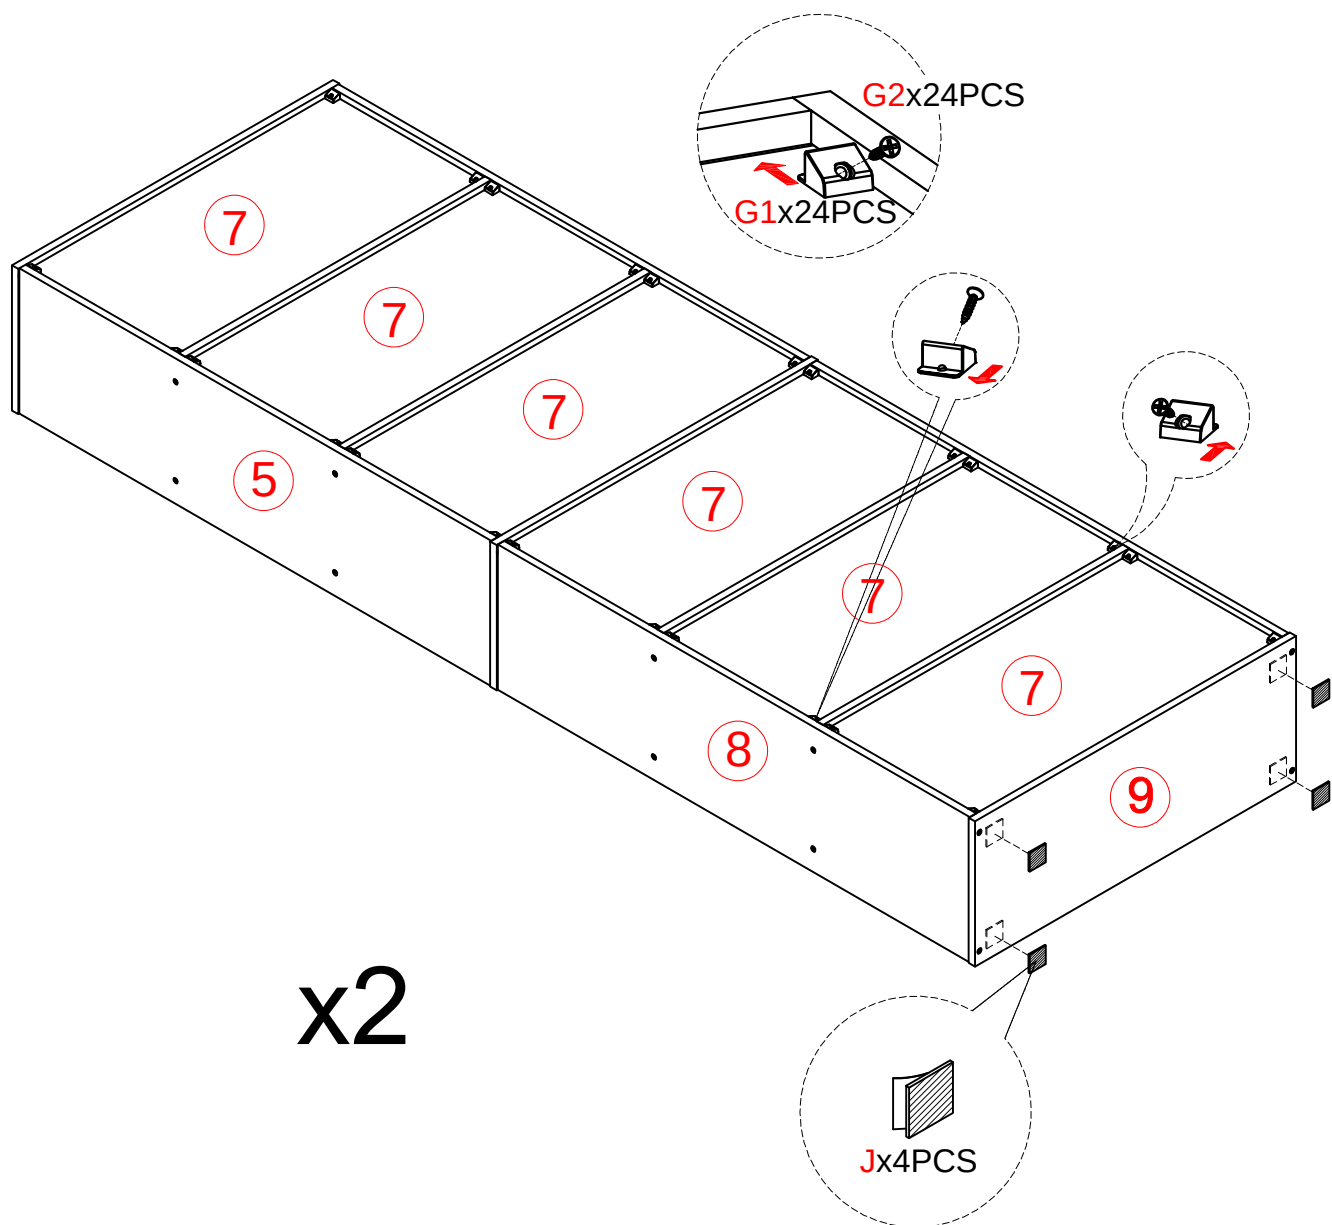

G1x48PCS
G2x48PCS
Jx8PCS

14


x2

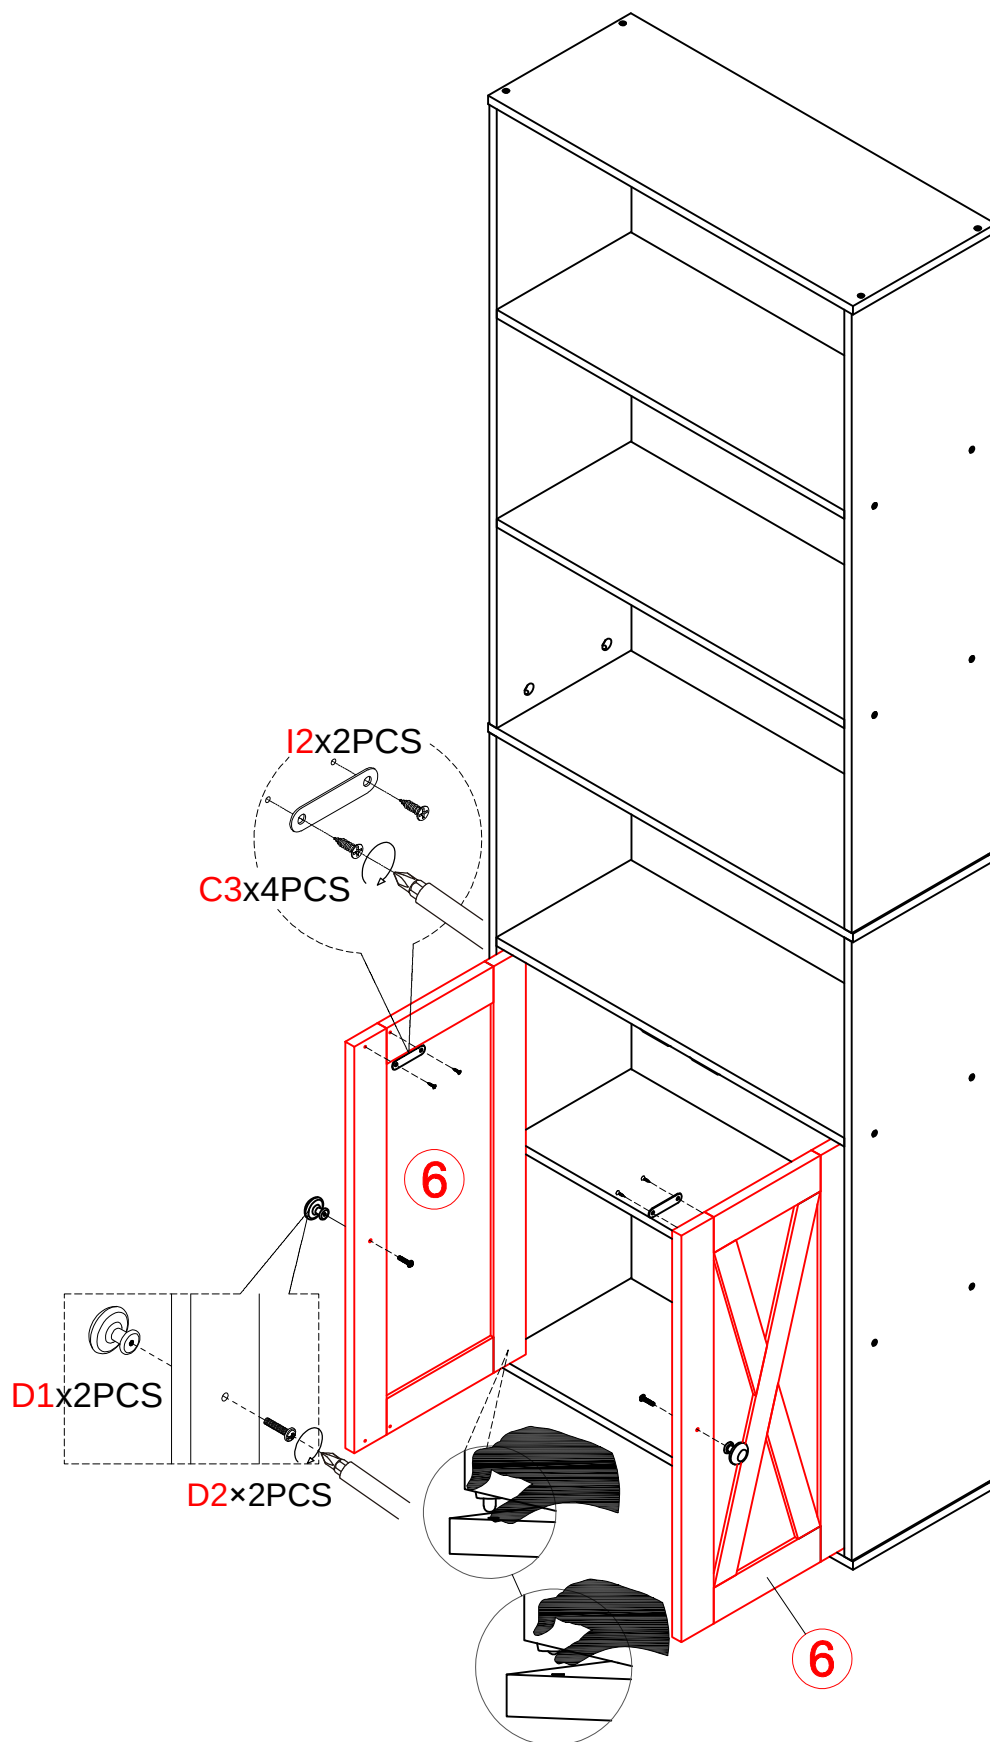

C3x8PCS
D1x4PCS
D2x4PCS
I2x4PCS
6 x4PCS

P11/13

15

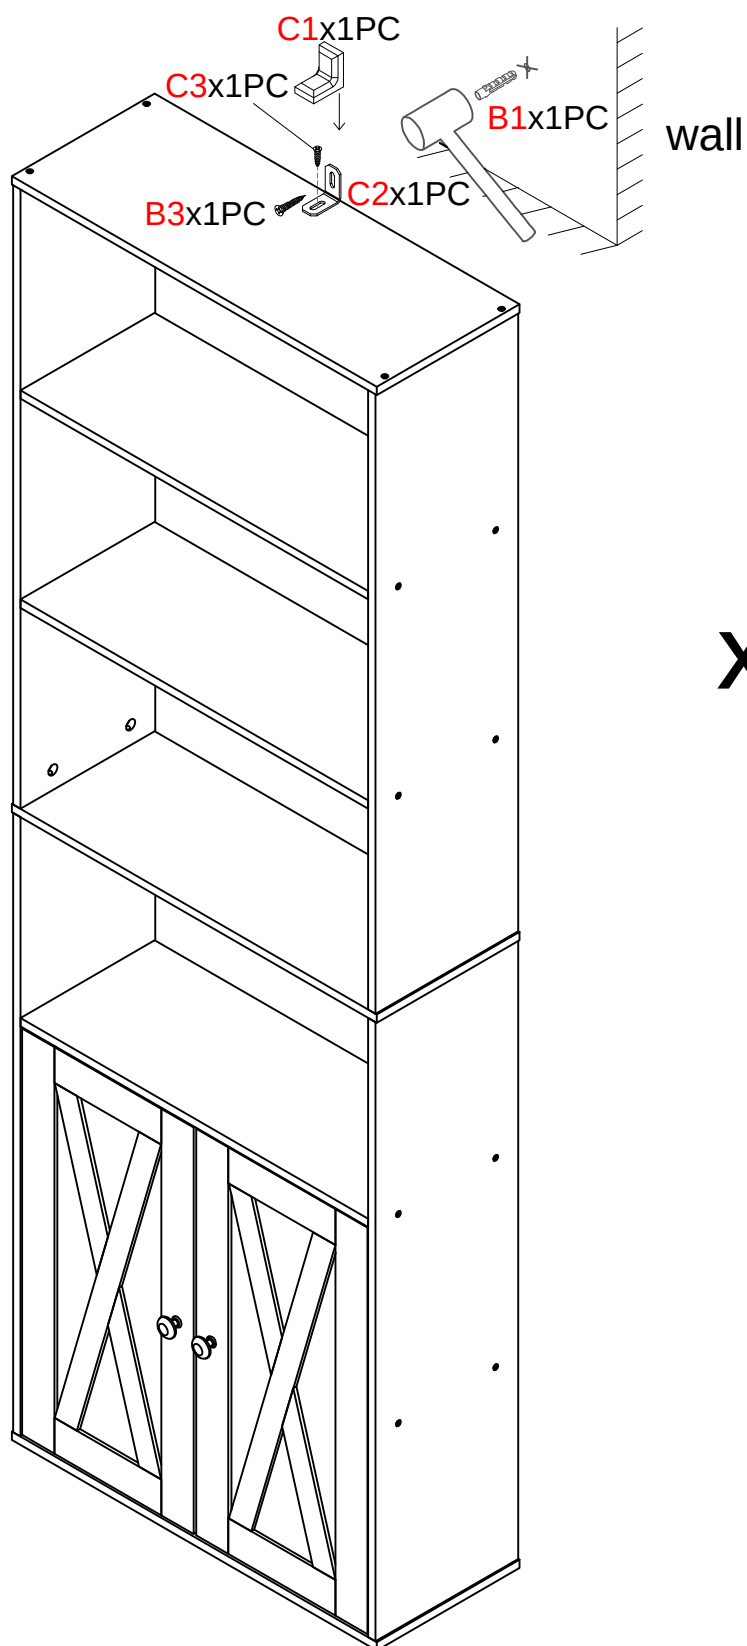


x2

B1x2PC
B3x2PC
C1x2PC
C2x2PC
C3x2PC

P12/13

16

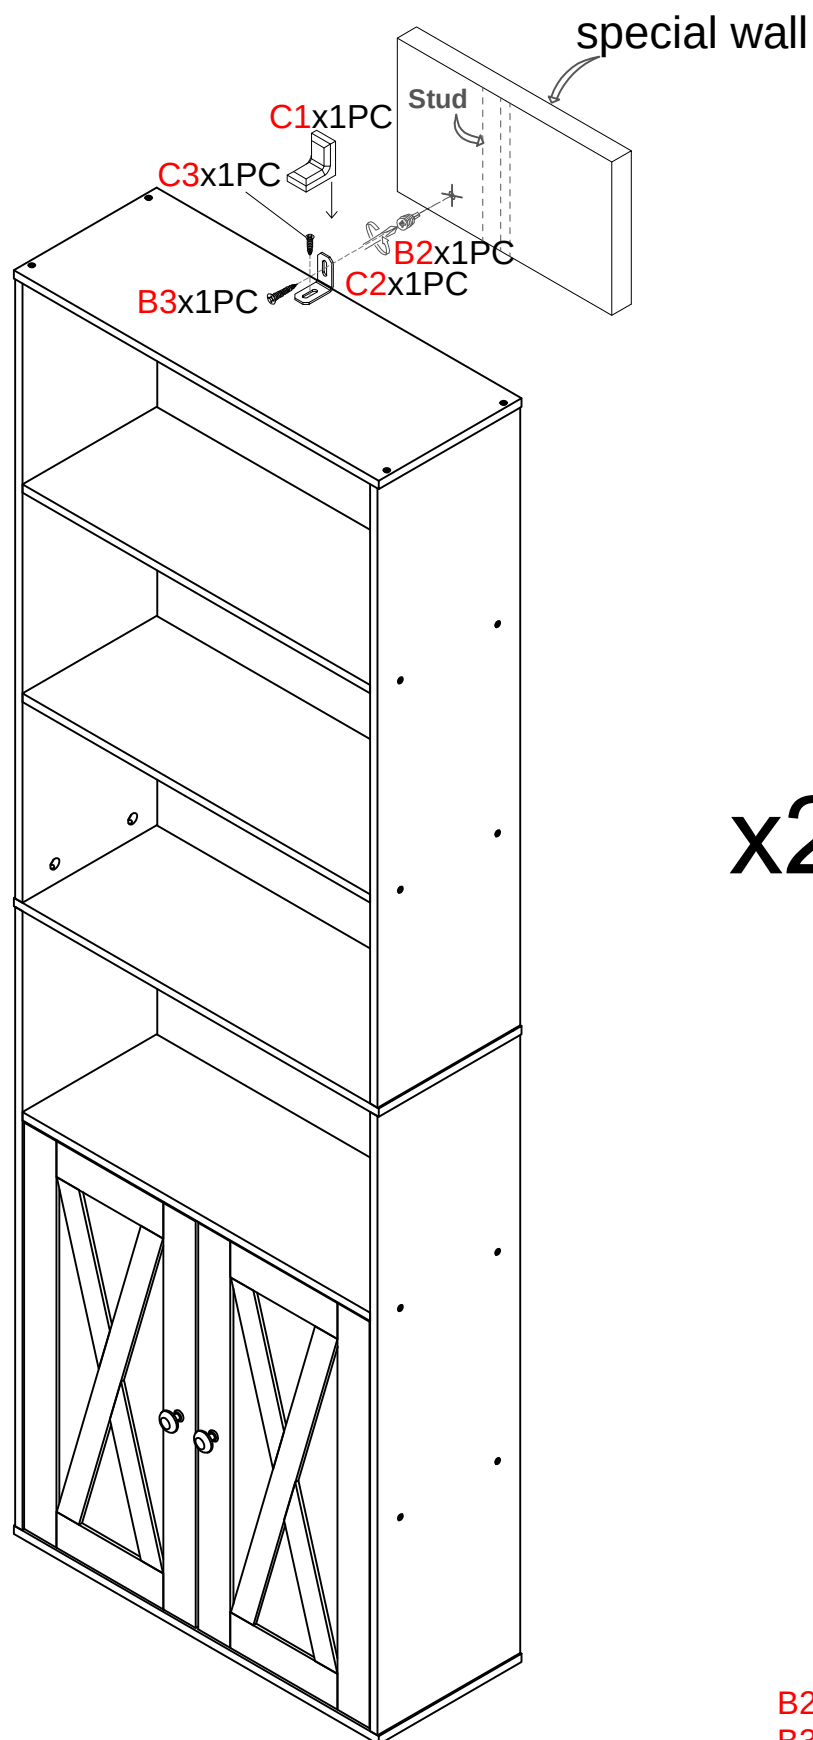

x2

B2x2PC
B3x2PC
C1x2PC
C2x2PC
C3x2PC