

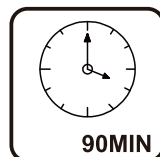
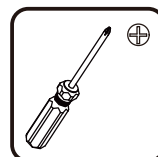
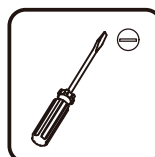



Installation & Assembly

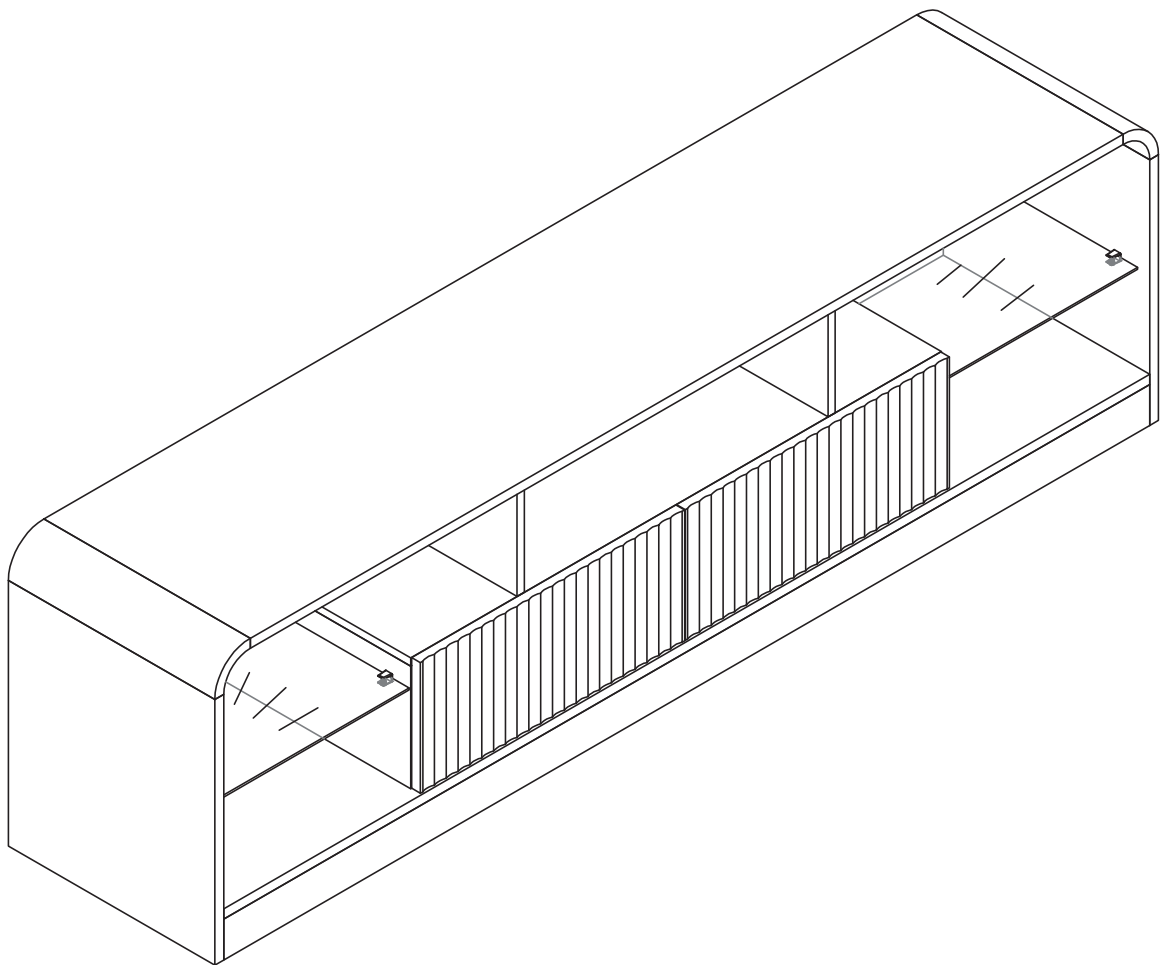


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

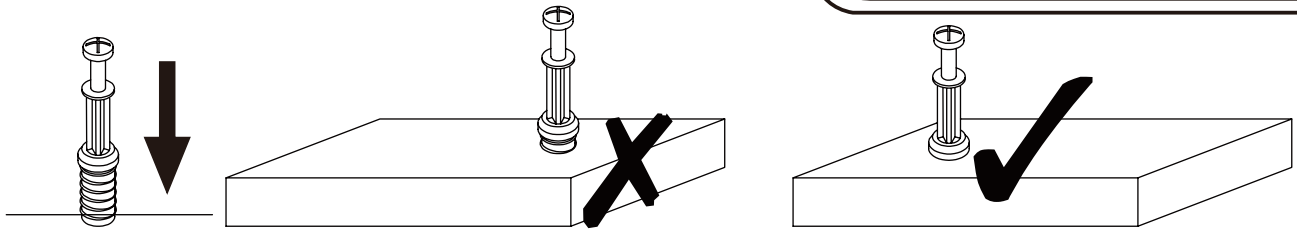


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

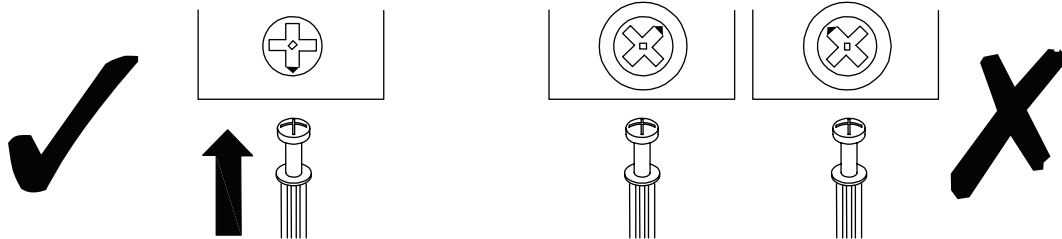












EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







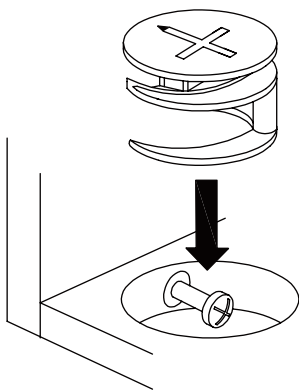





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


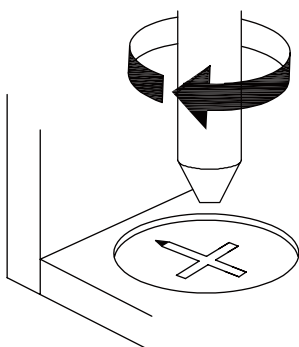



EN_Turn cam lock clockwise to tighten.

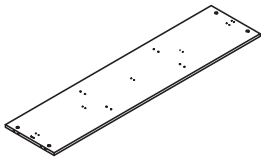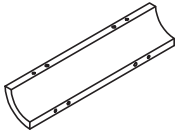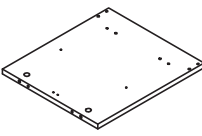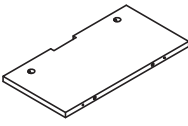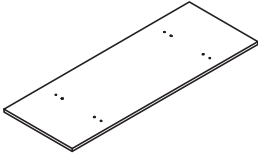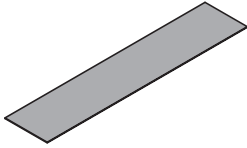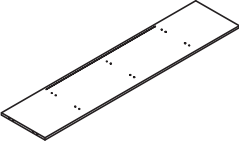NO.	PARTS	QTY	SPARE
①		x1	
②		x2	
③		x2	
④		x2	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	
⑪		x1	

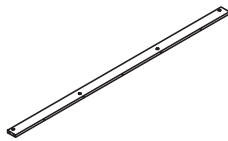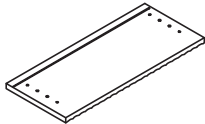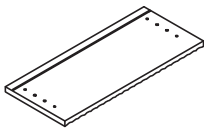
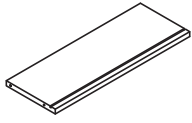
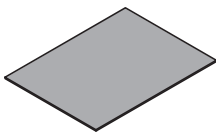
NO.	PARTS	QTY	SPARE
⑫		x2	
⑬		x1	
⑭		x1	
⑮		x2	
⑯		x2	
⑰		x2	
⑱		x2	
	 Hardware Kit	x1	

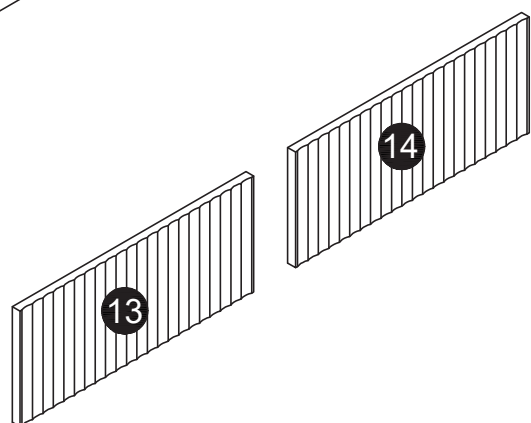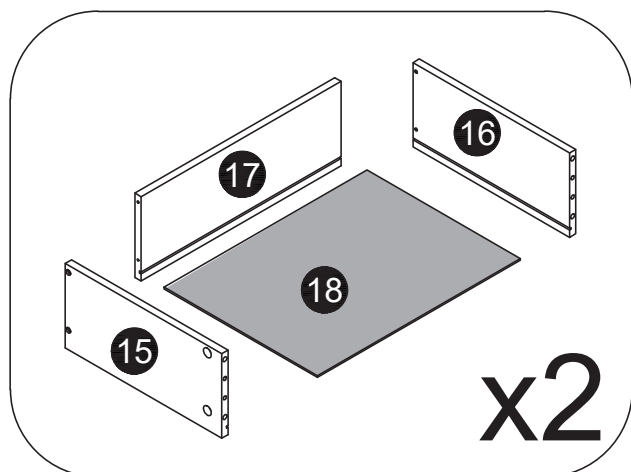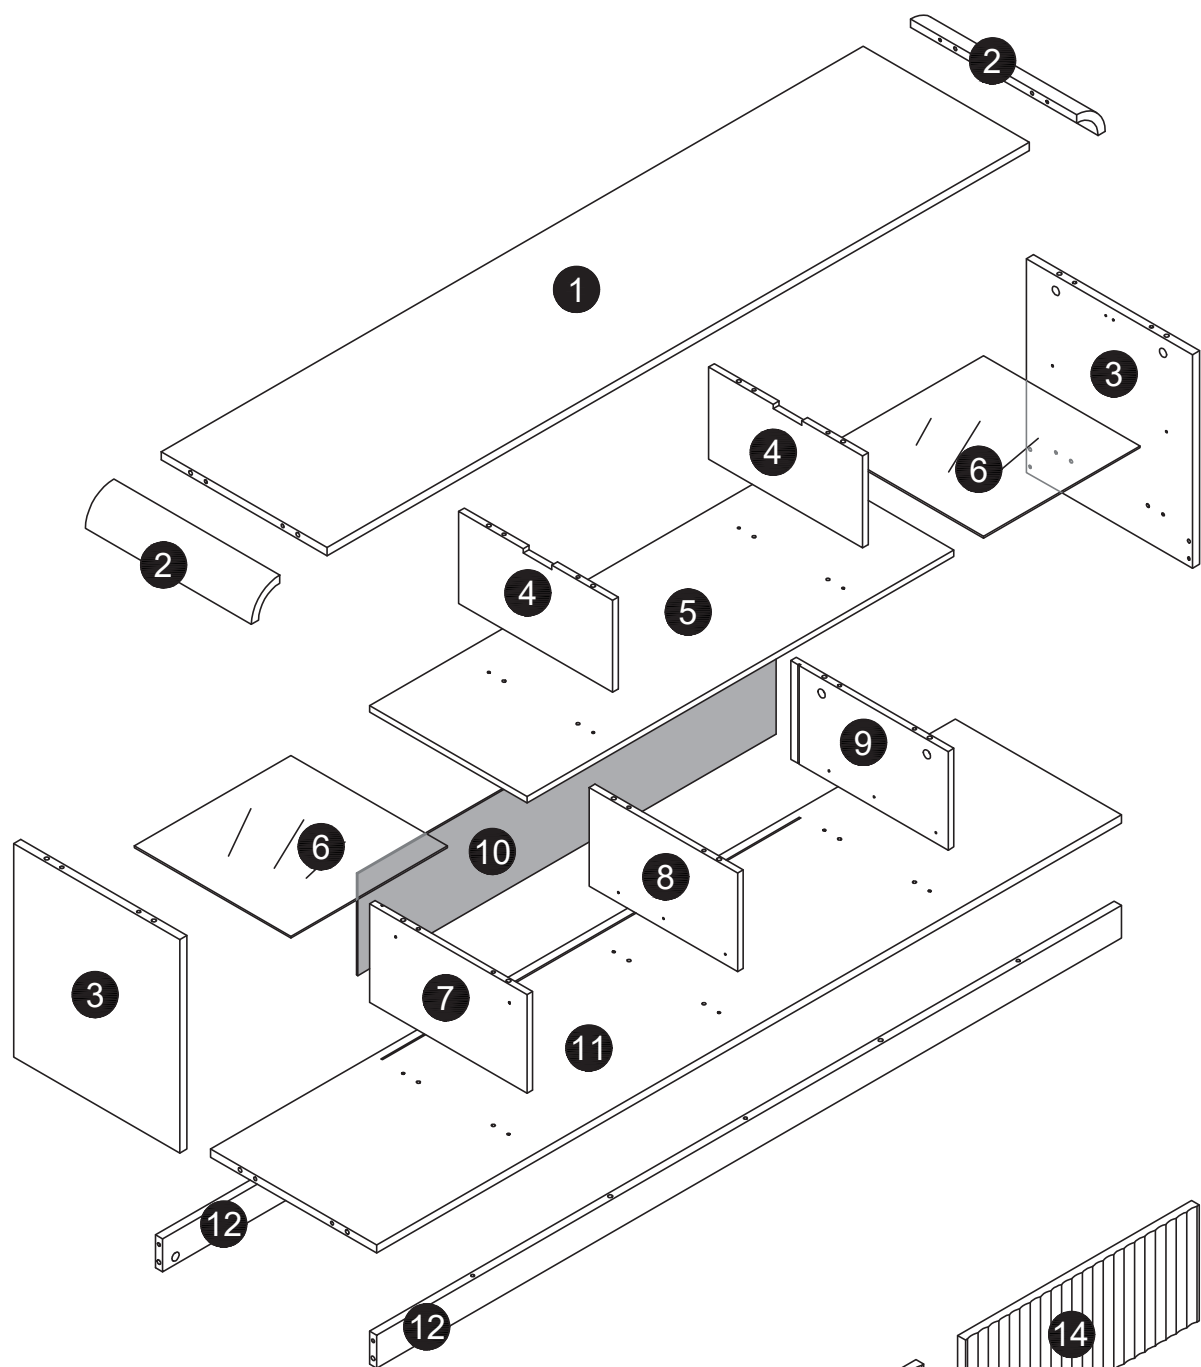

 A x30 Ø6x35mm +3(spare)	 B x38 Ø15x10mm +3(spare)	 C x50 Ø6x30mm +5(spare)	 D x18 Ø4x35mm +1(spare)	 E x24 Ø3.5x12mm +2(spare)	 F x8 Ø6x40mm
 G x2	 H x8 Ø4x14mm	 I x8 +2(spare)	 J x1	 K-1	 K-2
 M-1	 M-2	 N x8	 O x1	 L-1	 L-2
 CL x2 L300mm	 CR x2 L300mm	 DL x2 L300mm	 DR x2 L300mm		

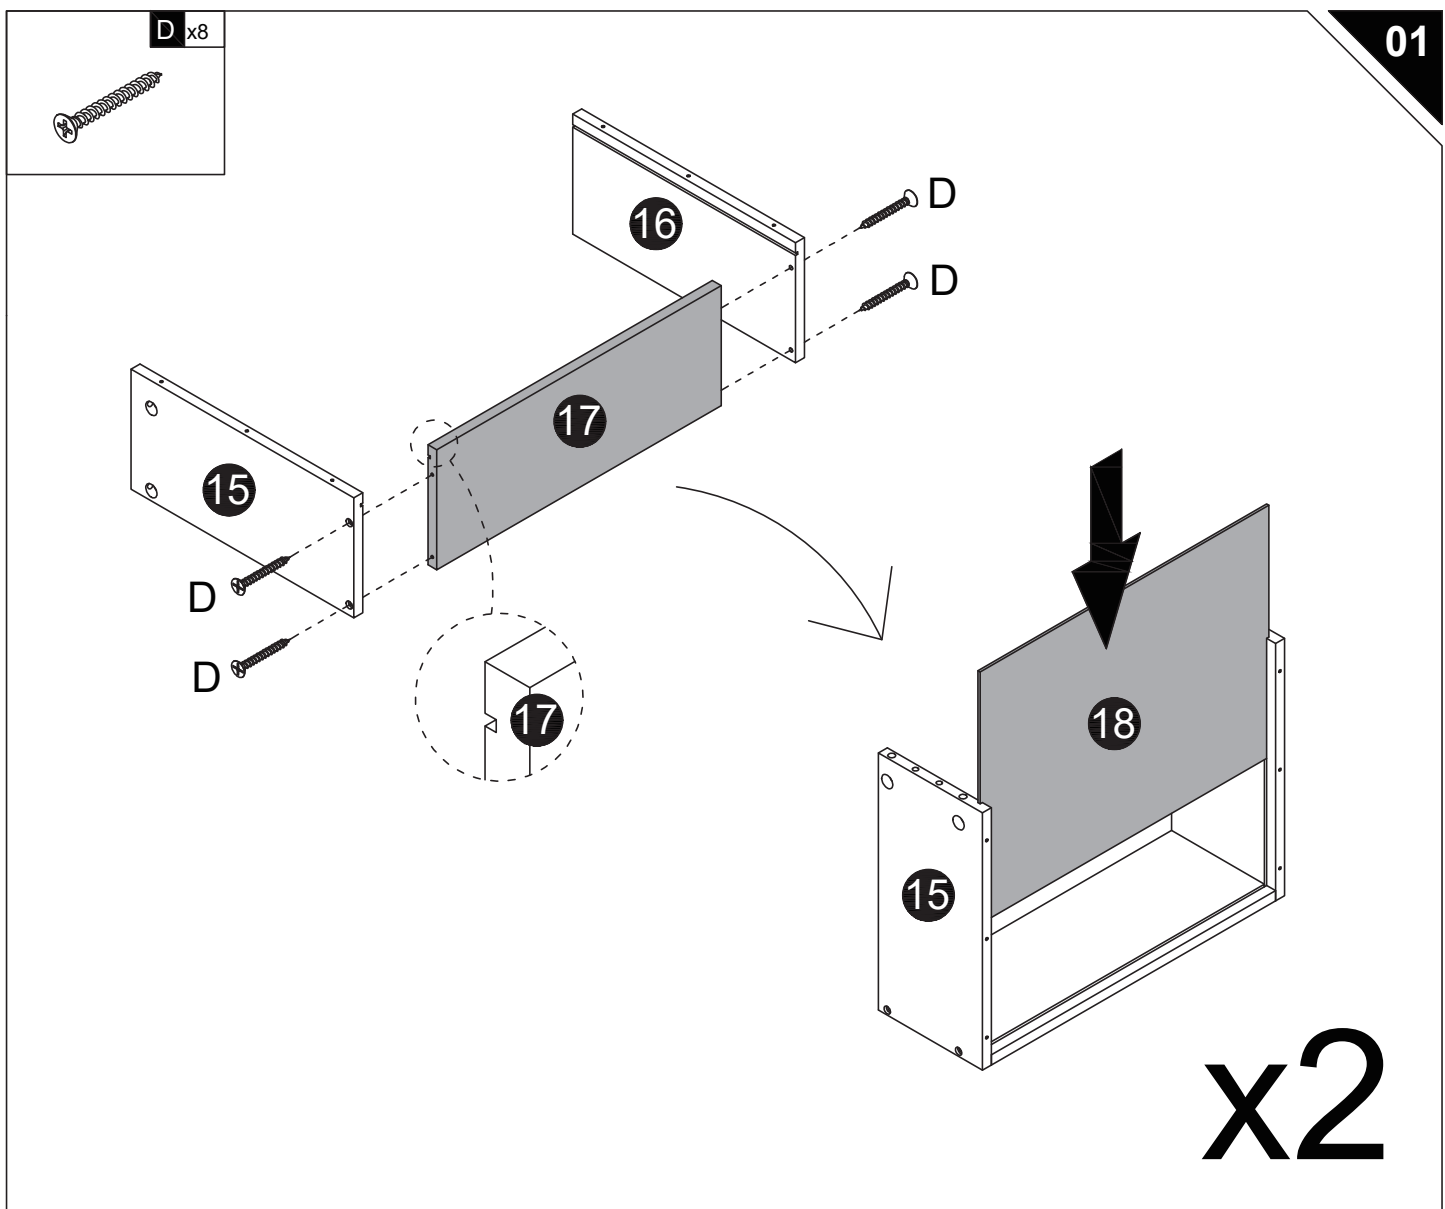



A x8

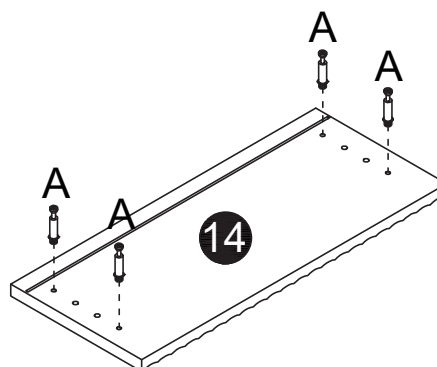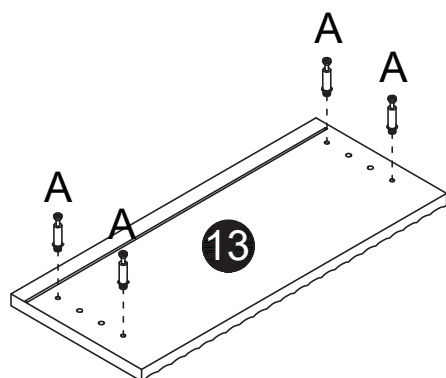



B x8



C x8

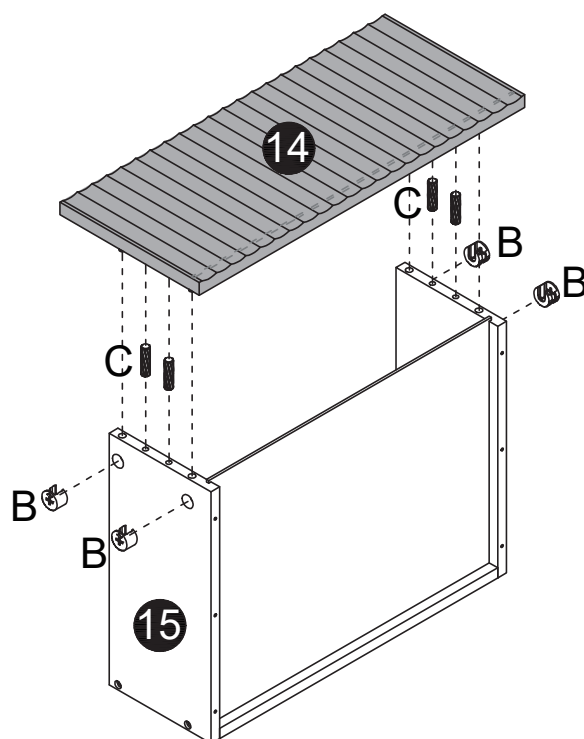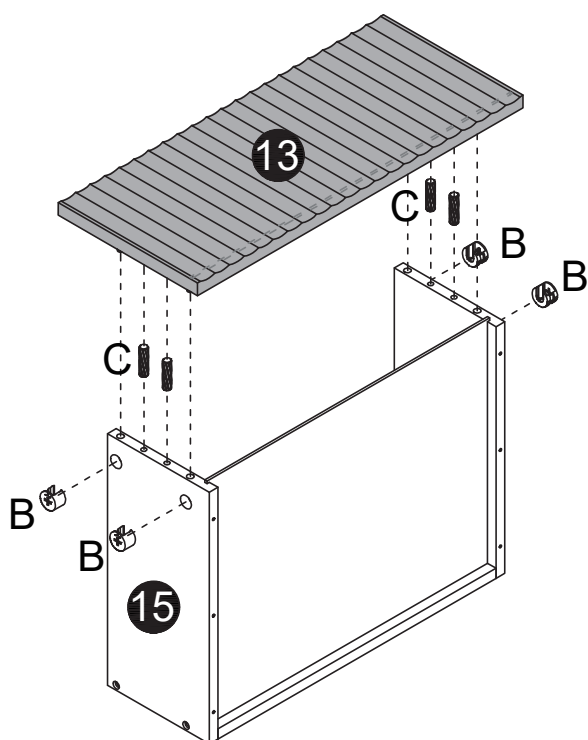


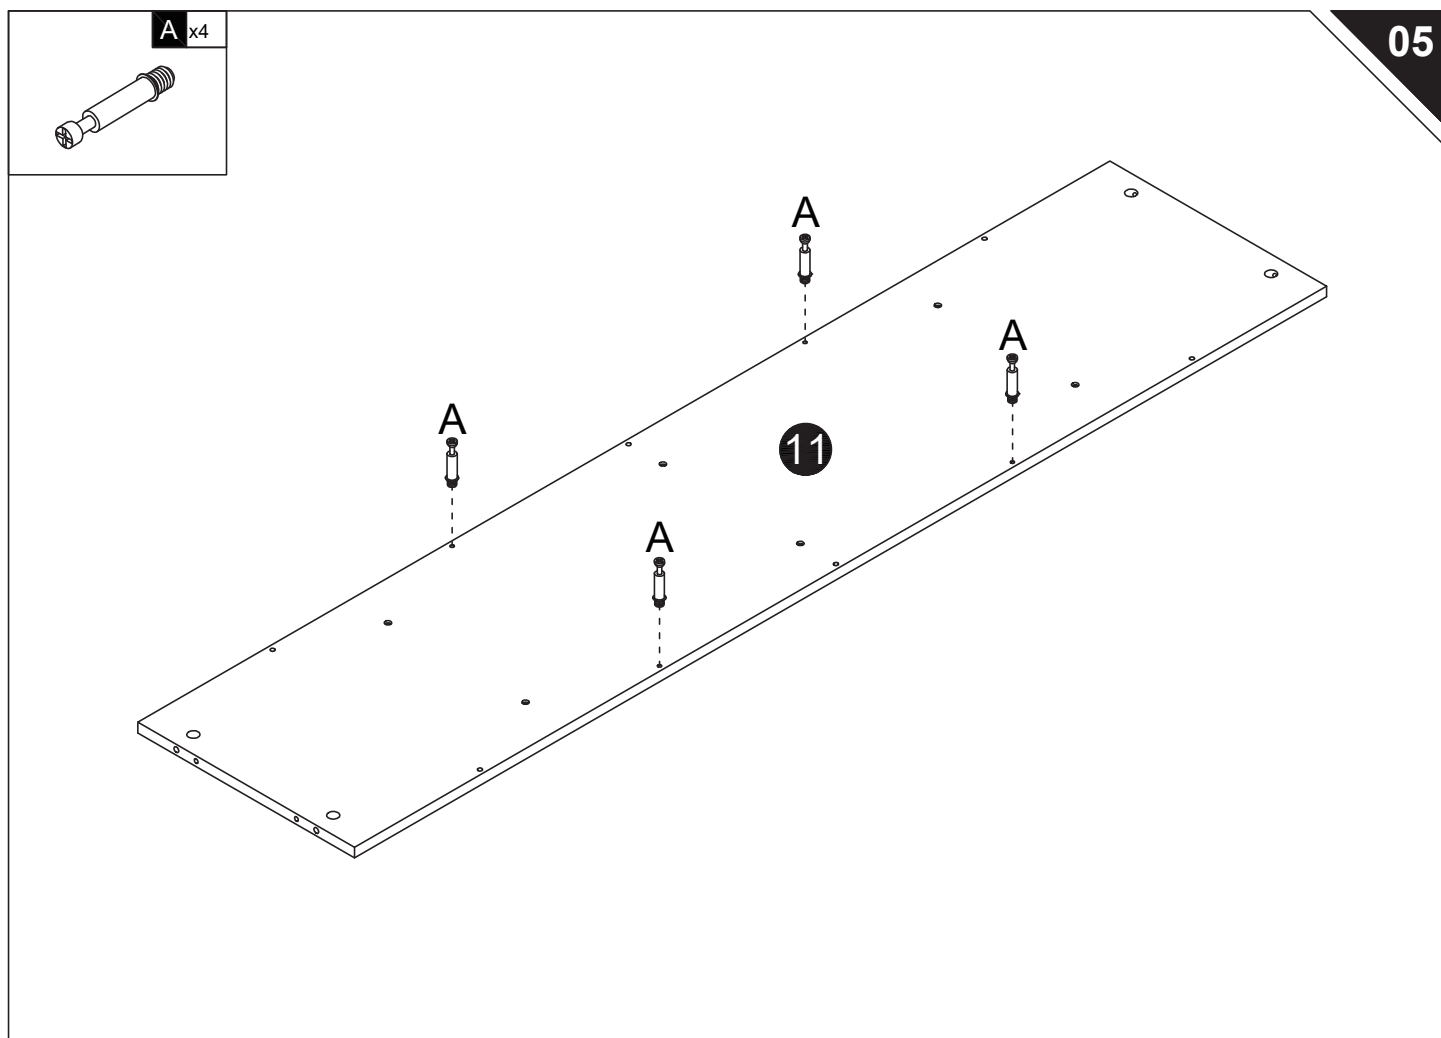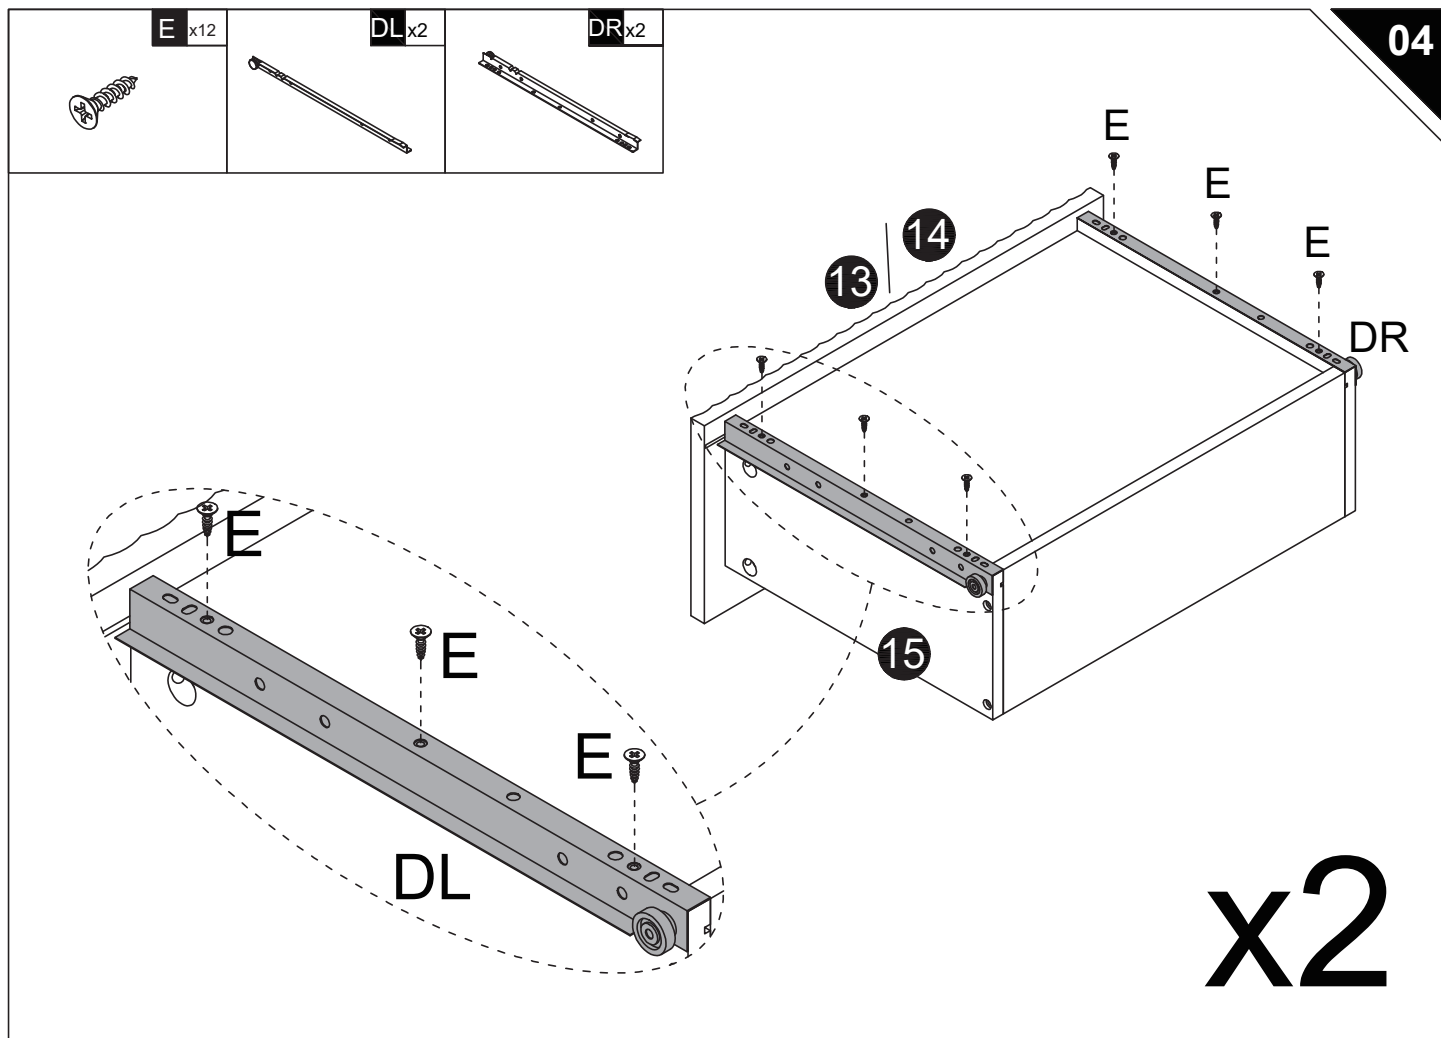

B x4

C x6

06

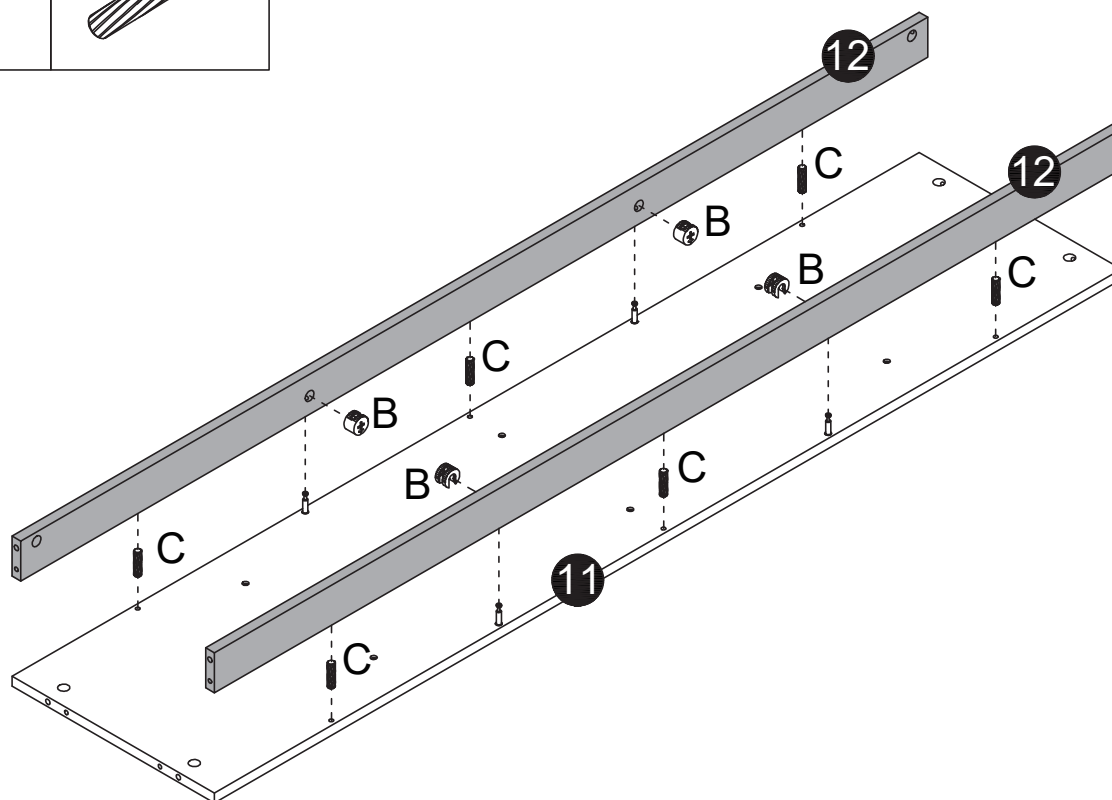





E x6

CLx1

07





CRx1

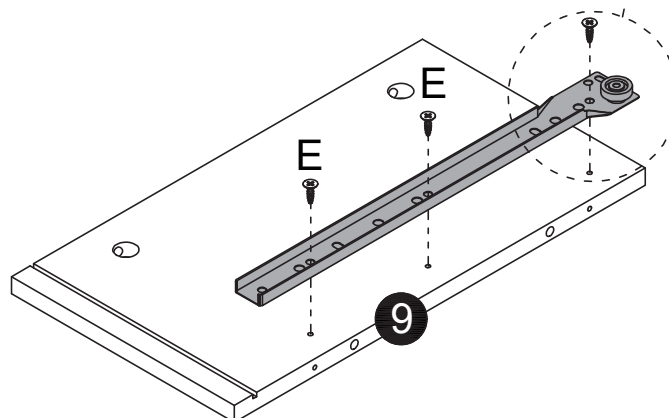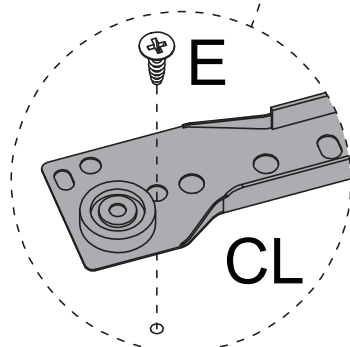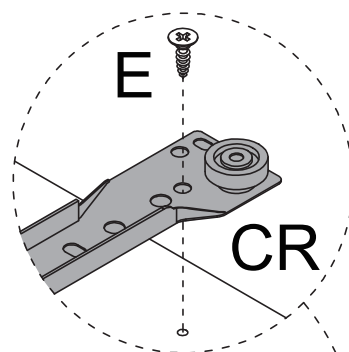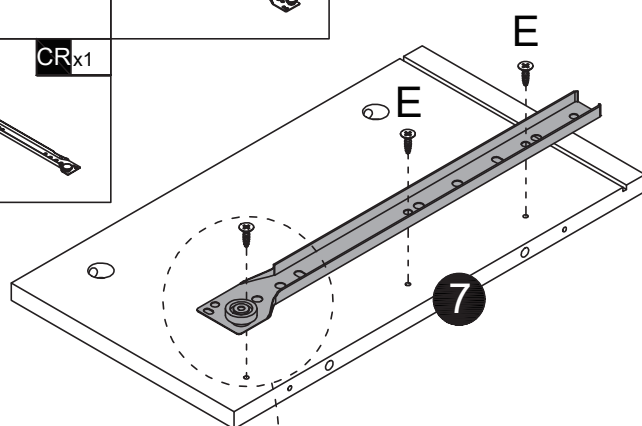

E x6

CL x1


CR x1

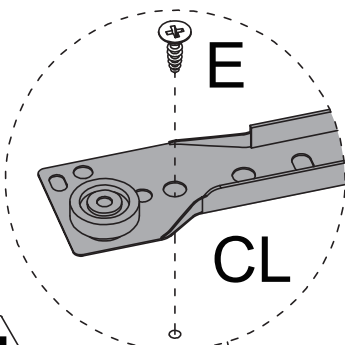



CL



Second hole

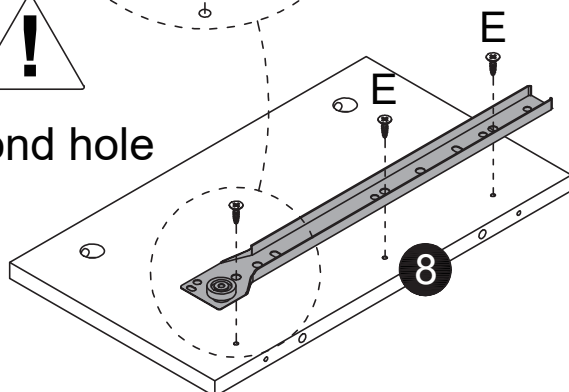




180°

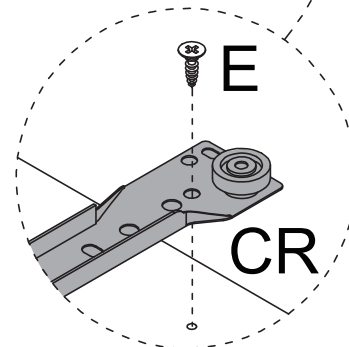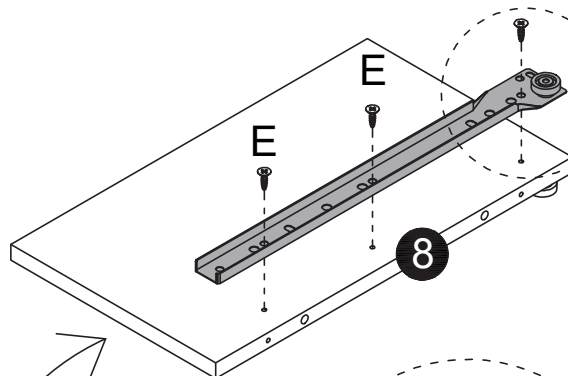

CR


C x6

D x6

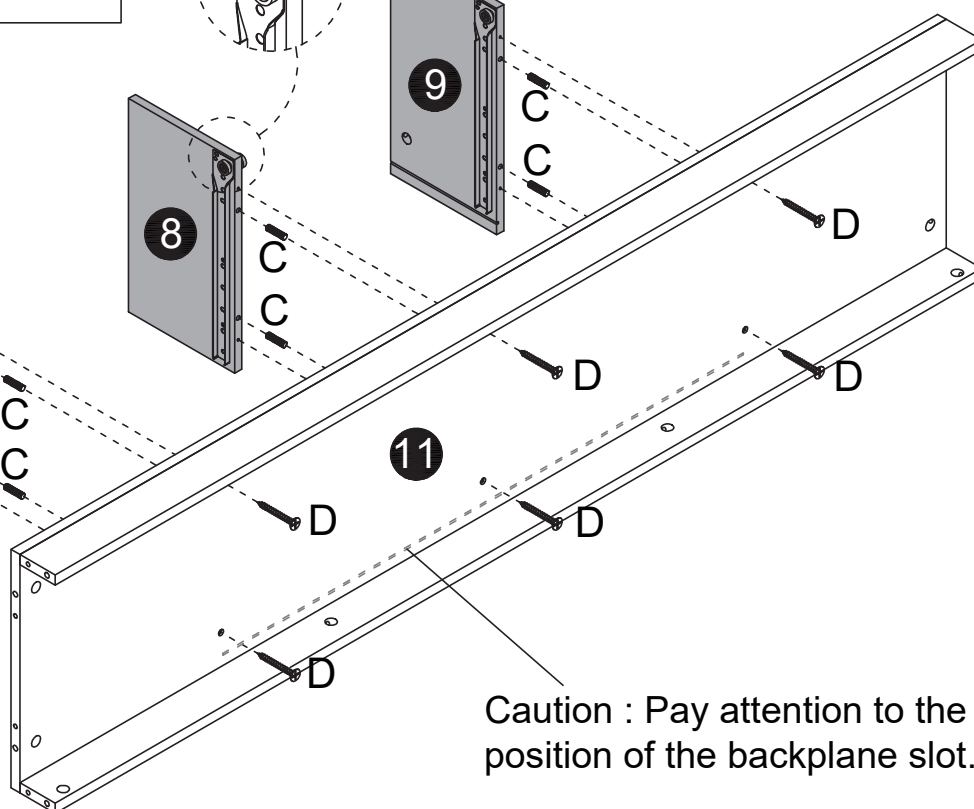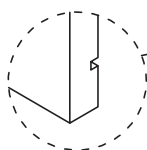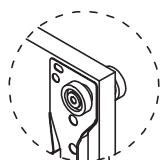


Caution : Pay attention to the position of the backplane slot.

A x8



10

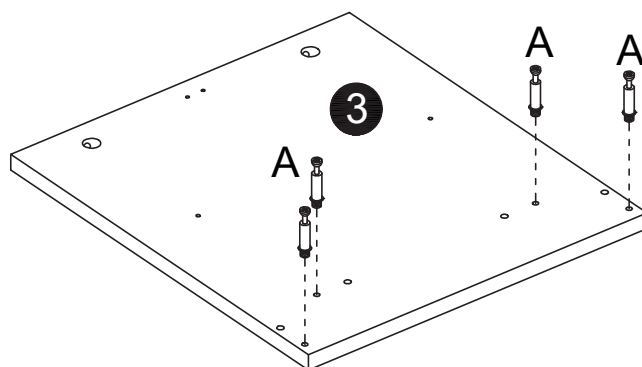

x2


B x8




C x8





11

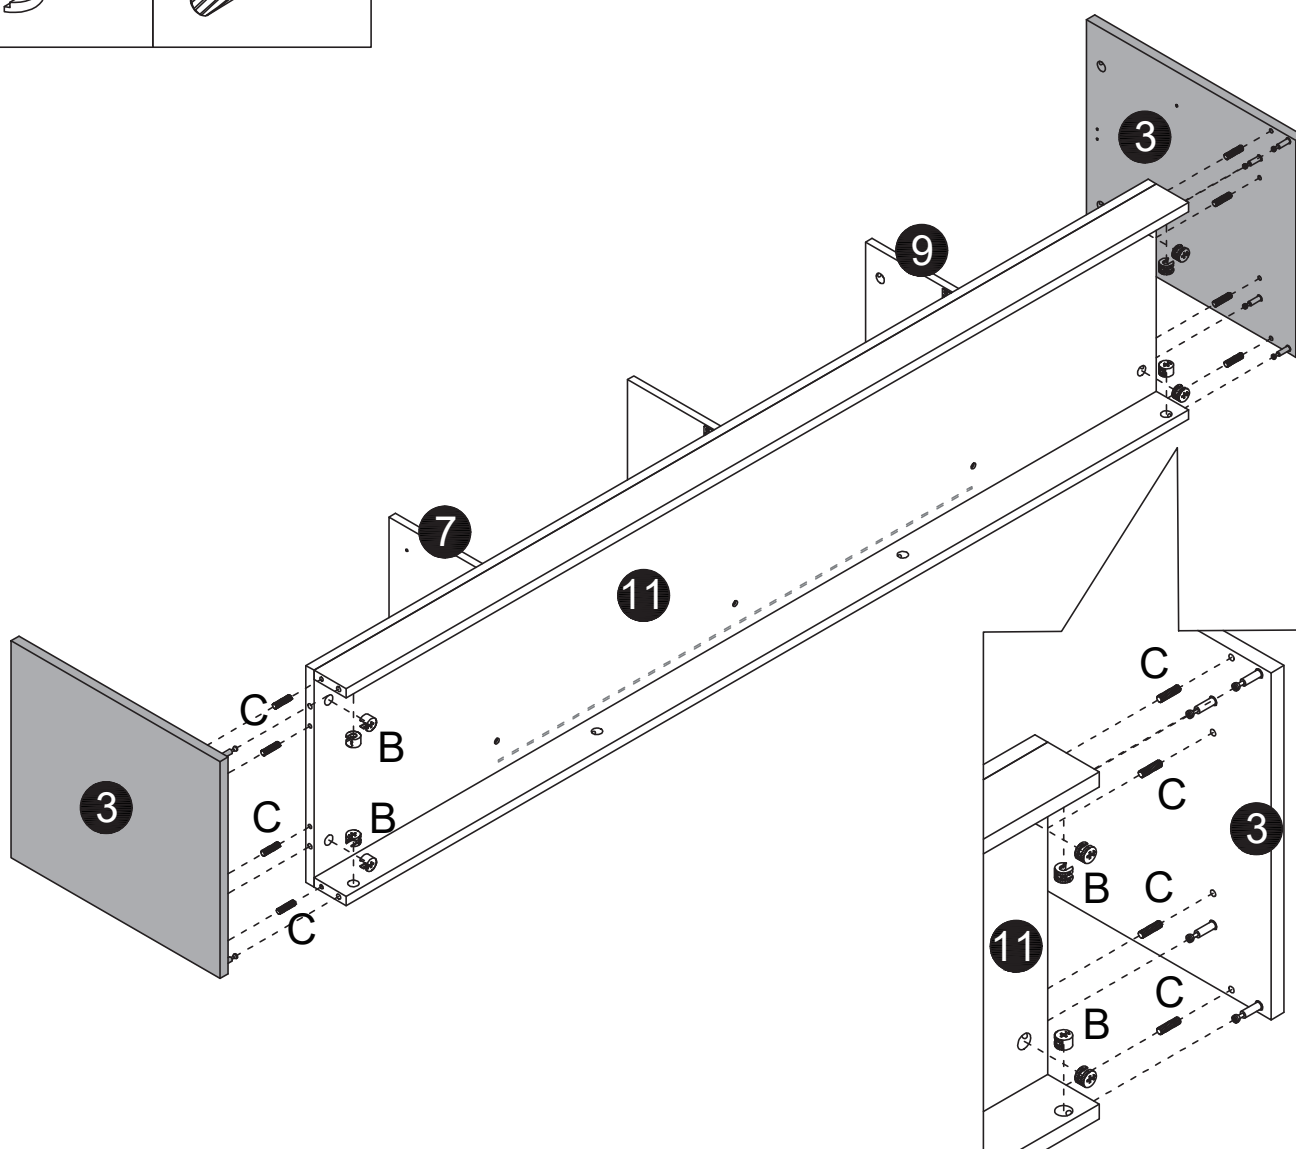

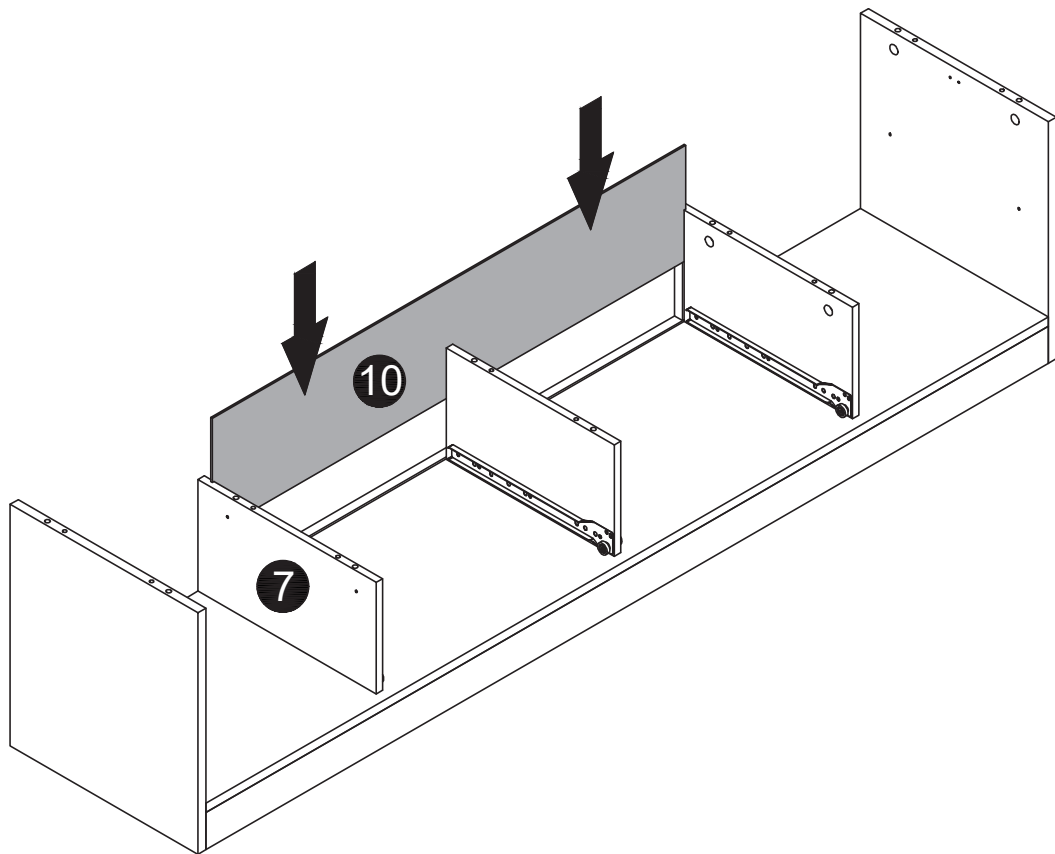

A x6

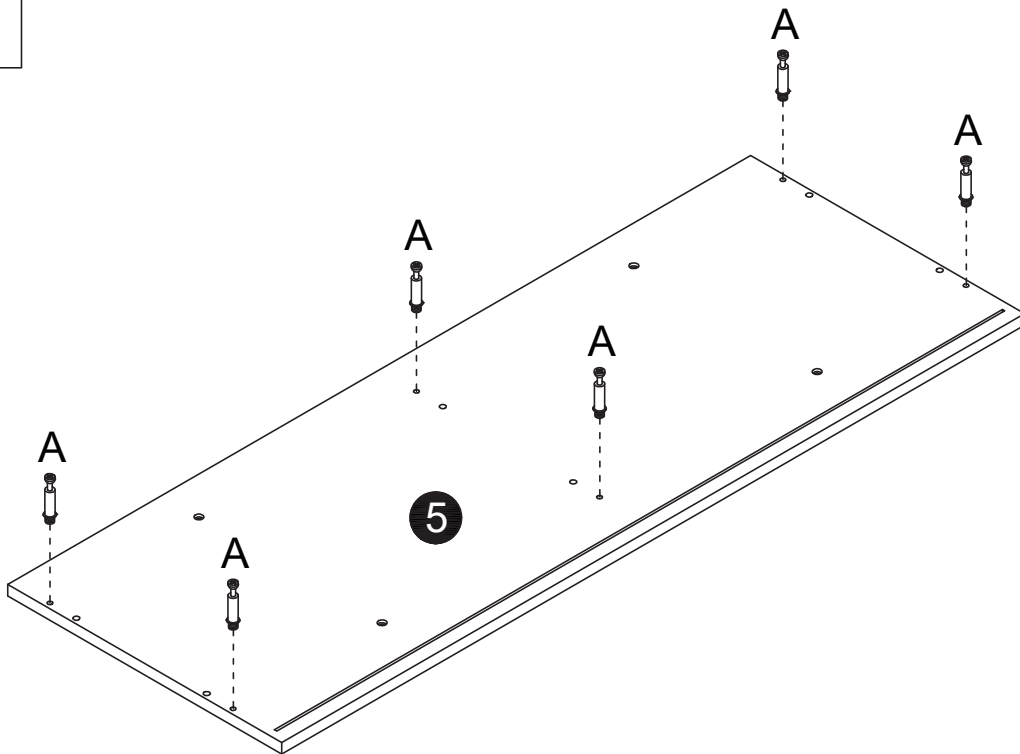


C x4



D x4



Caution : Pay attention to the orientation of the hole on board No. 4.

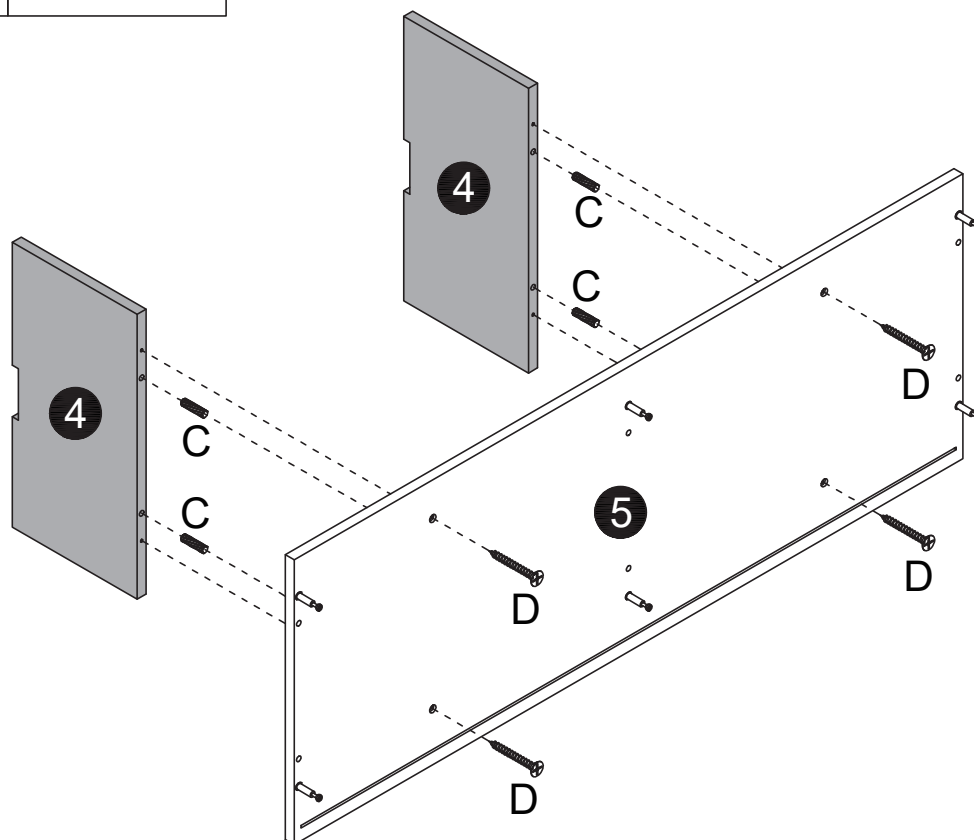


B x6





C x6




Caution : Pay attention to the position of the backplane slot.

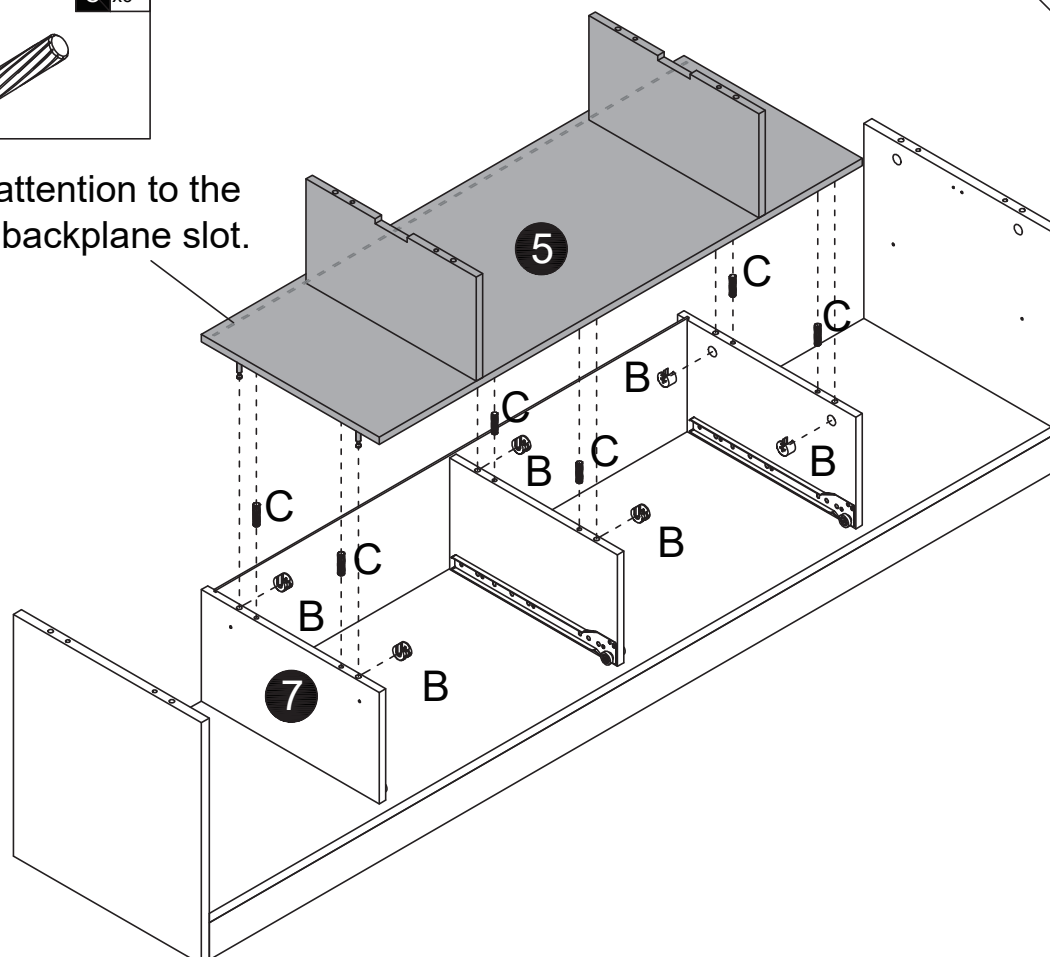

F x8

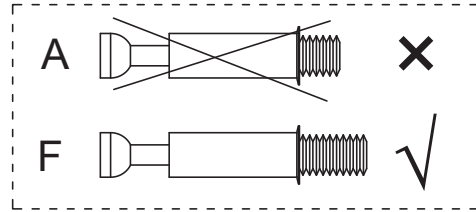


Caution : Need to use the correct part #F instead of part #A.

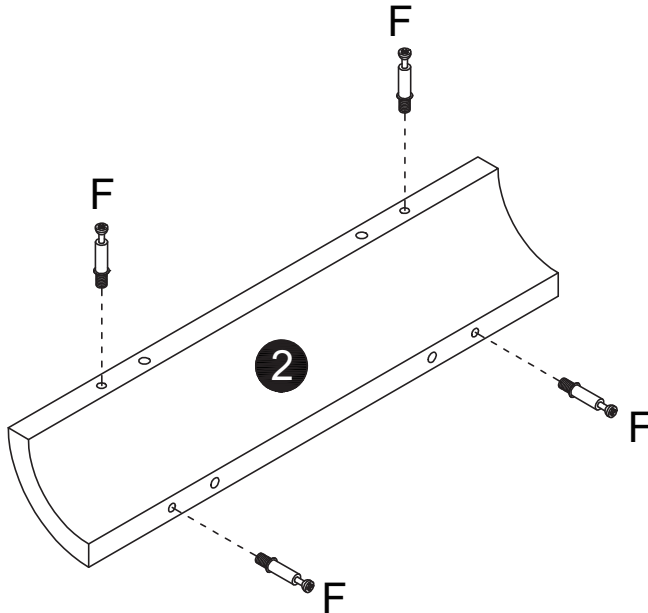

x2


A x4




B x4





C x4

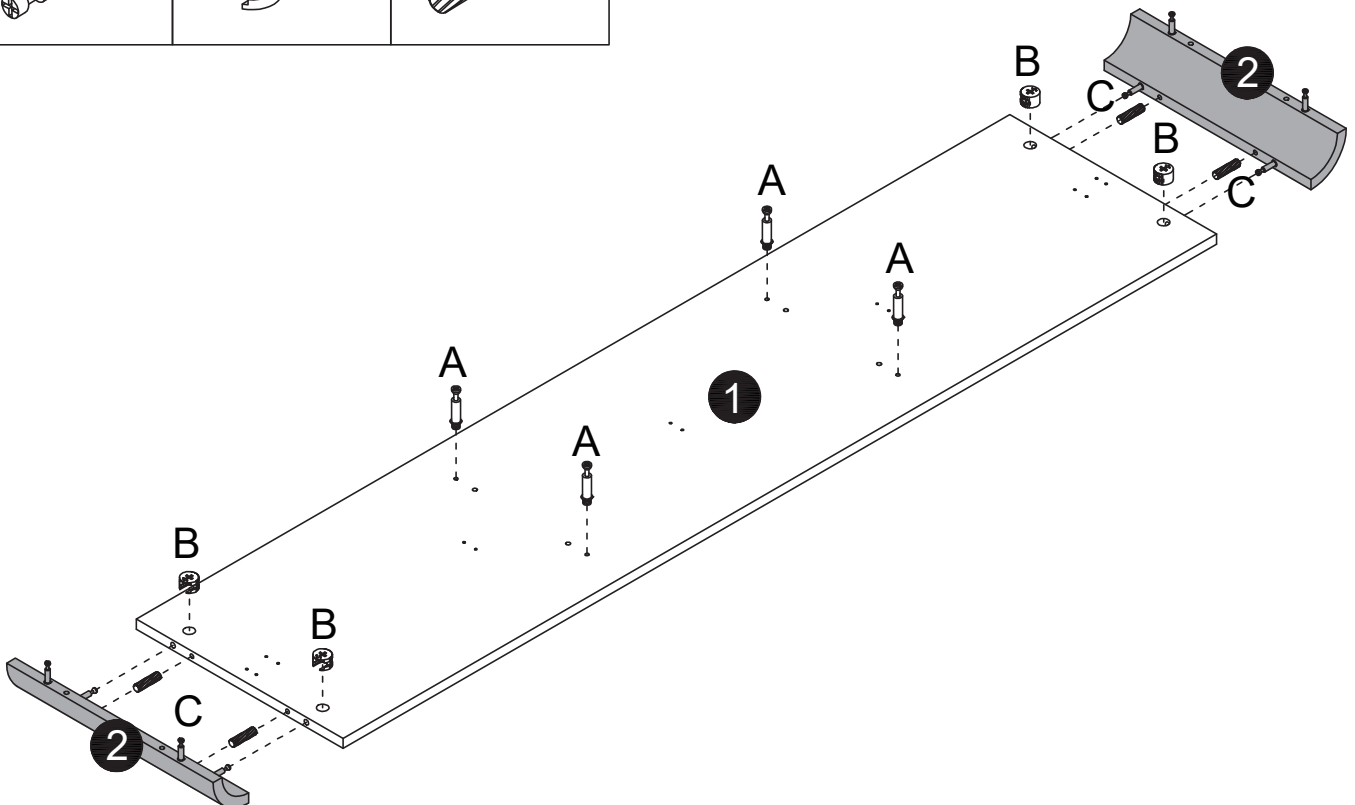

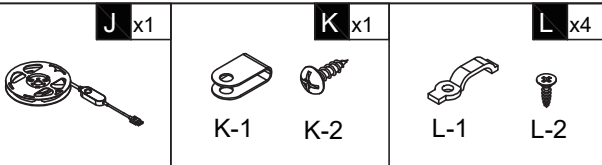


After installation, the light strip switch is located on the left side. If you need to place it on the right side, you can adjust its direction.

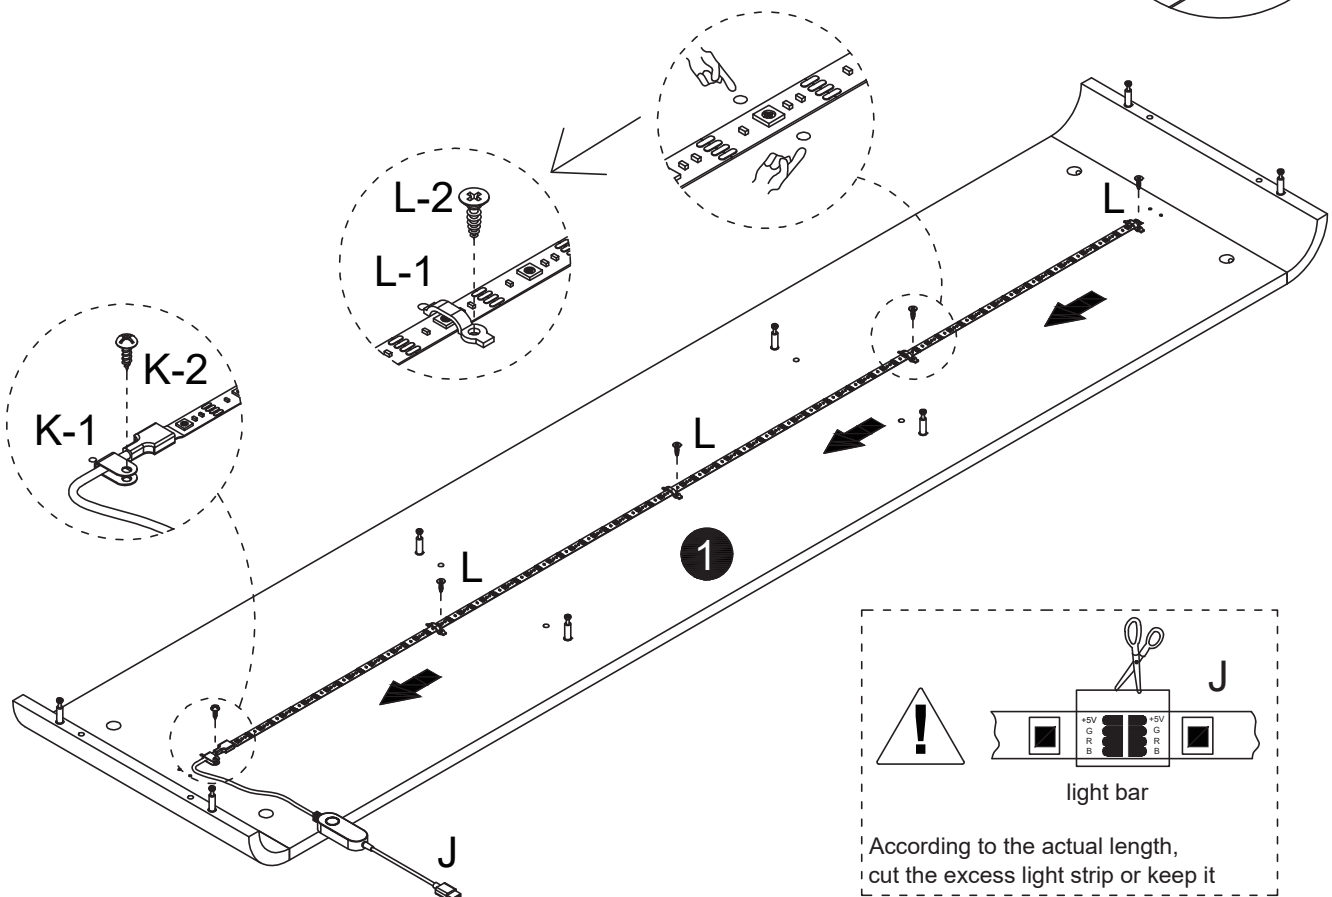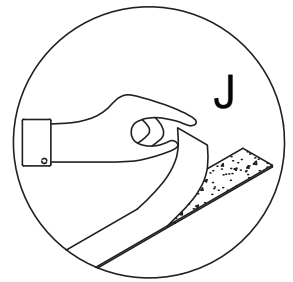

Firstly, based on actual needs, confirm whether the interface of the subsequent light strip J is located on the left or right side of the product. Then mark the subsequent pasting position, first fix accessory K for positioning, then remove the backing adhesive and paste it on board 1, and then fix it with accessory L.






Caution : When pasting the light strip J, do not stick it to the edge position to avoid preventing the installation of the accessories in step 20.

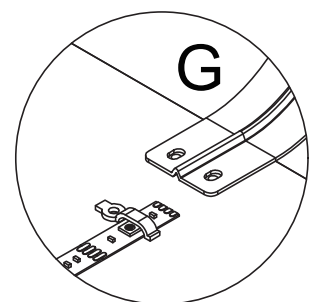

B x8



C x8

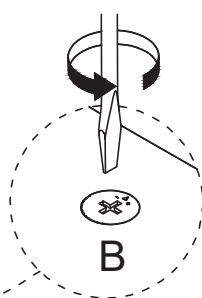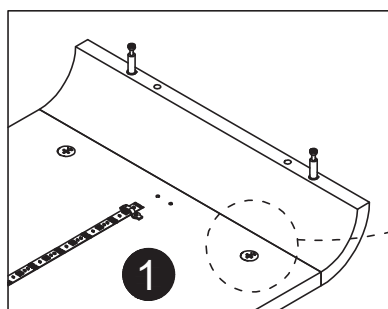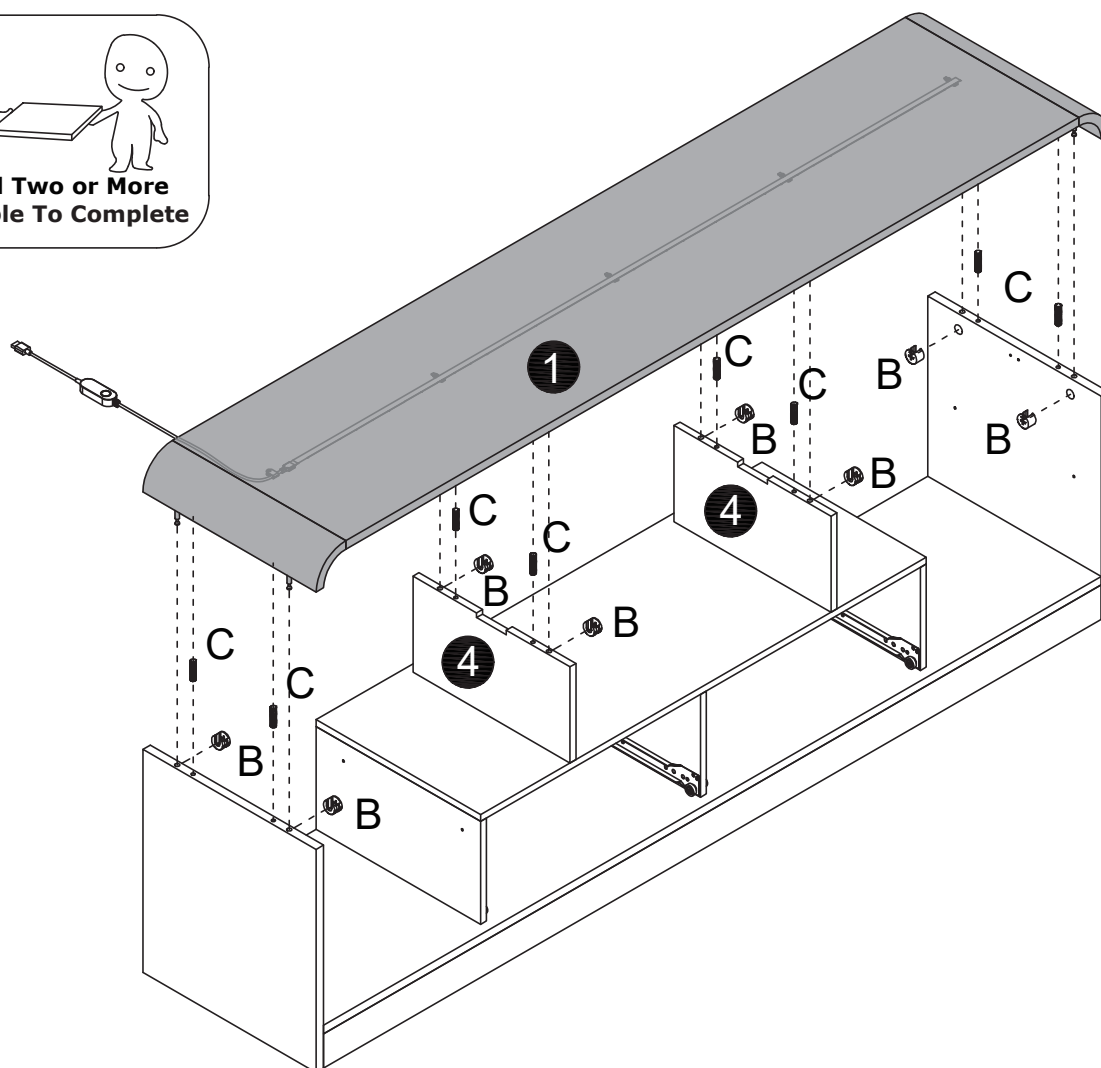


Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

G x2




H x8

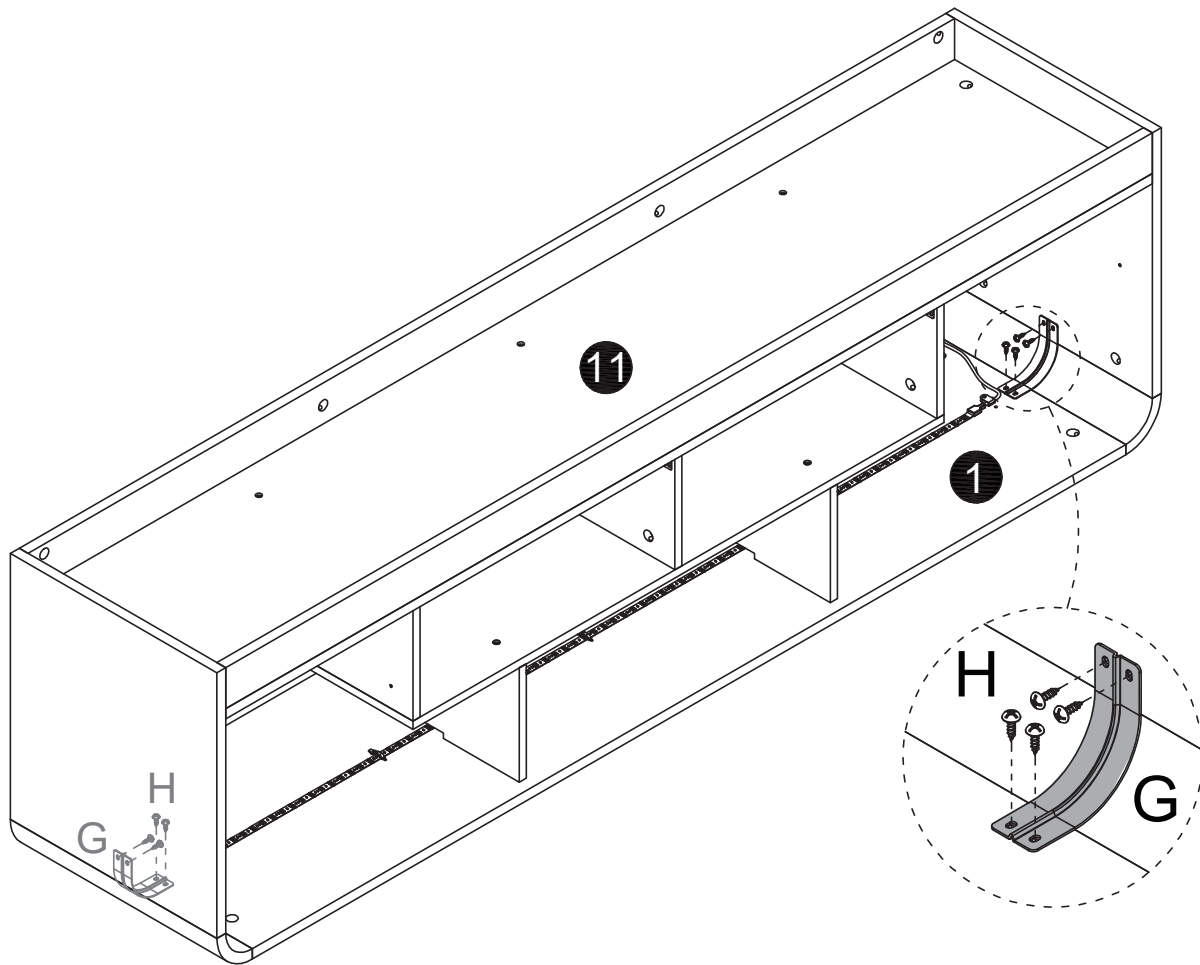


N x8




21

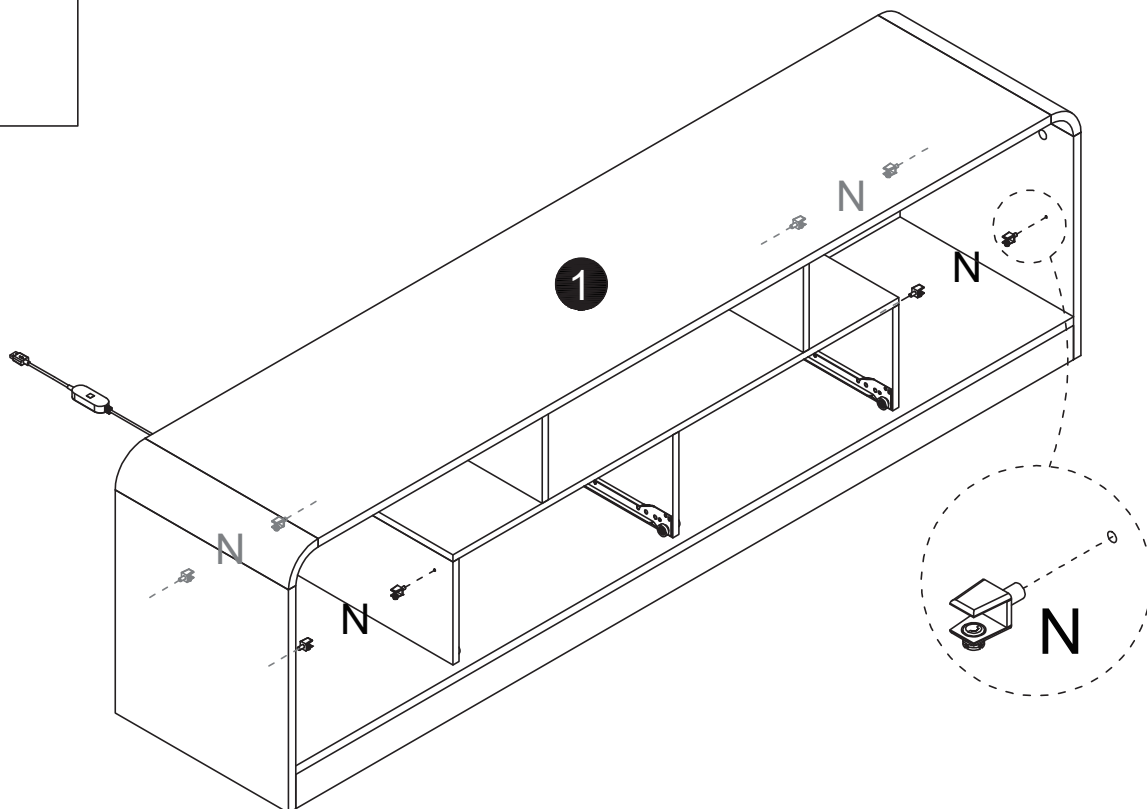

22

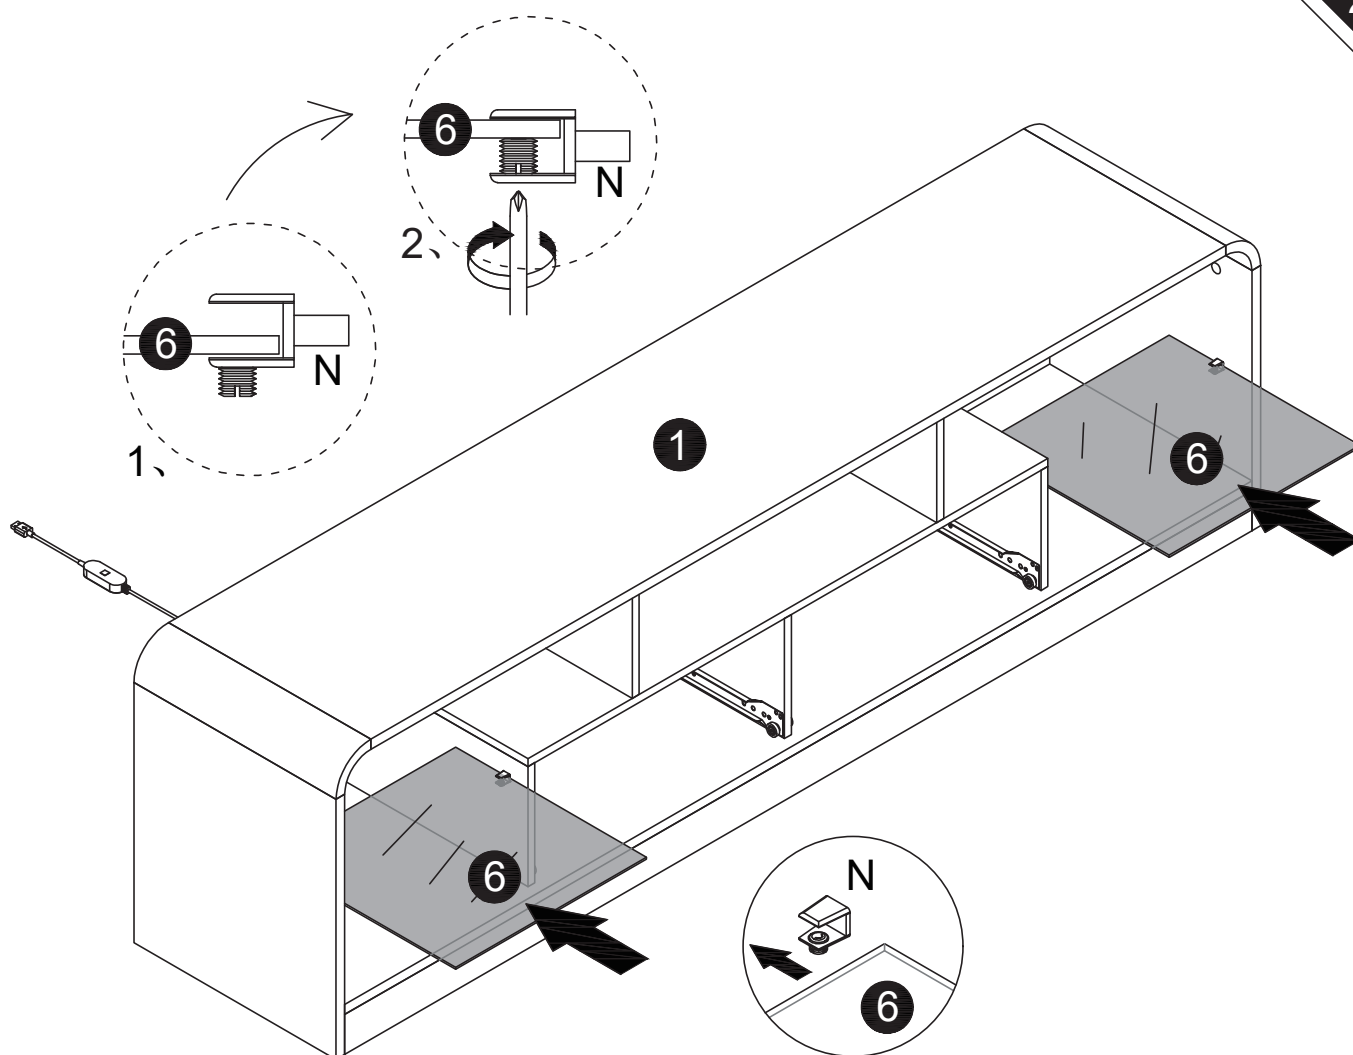

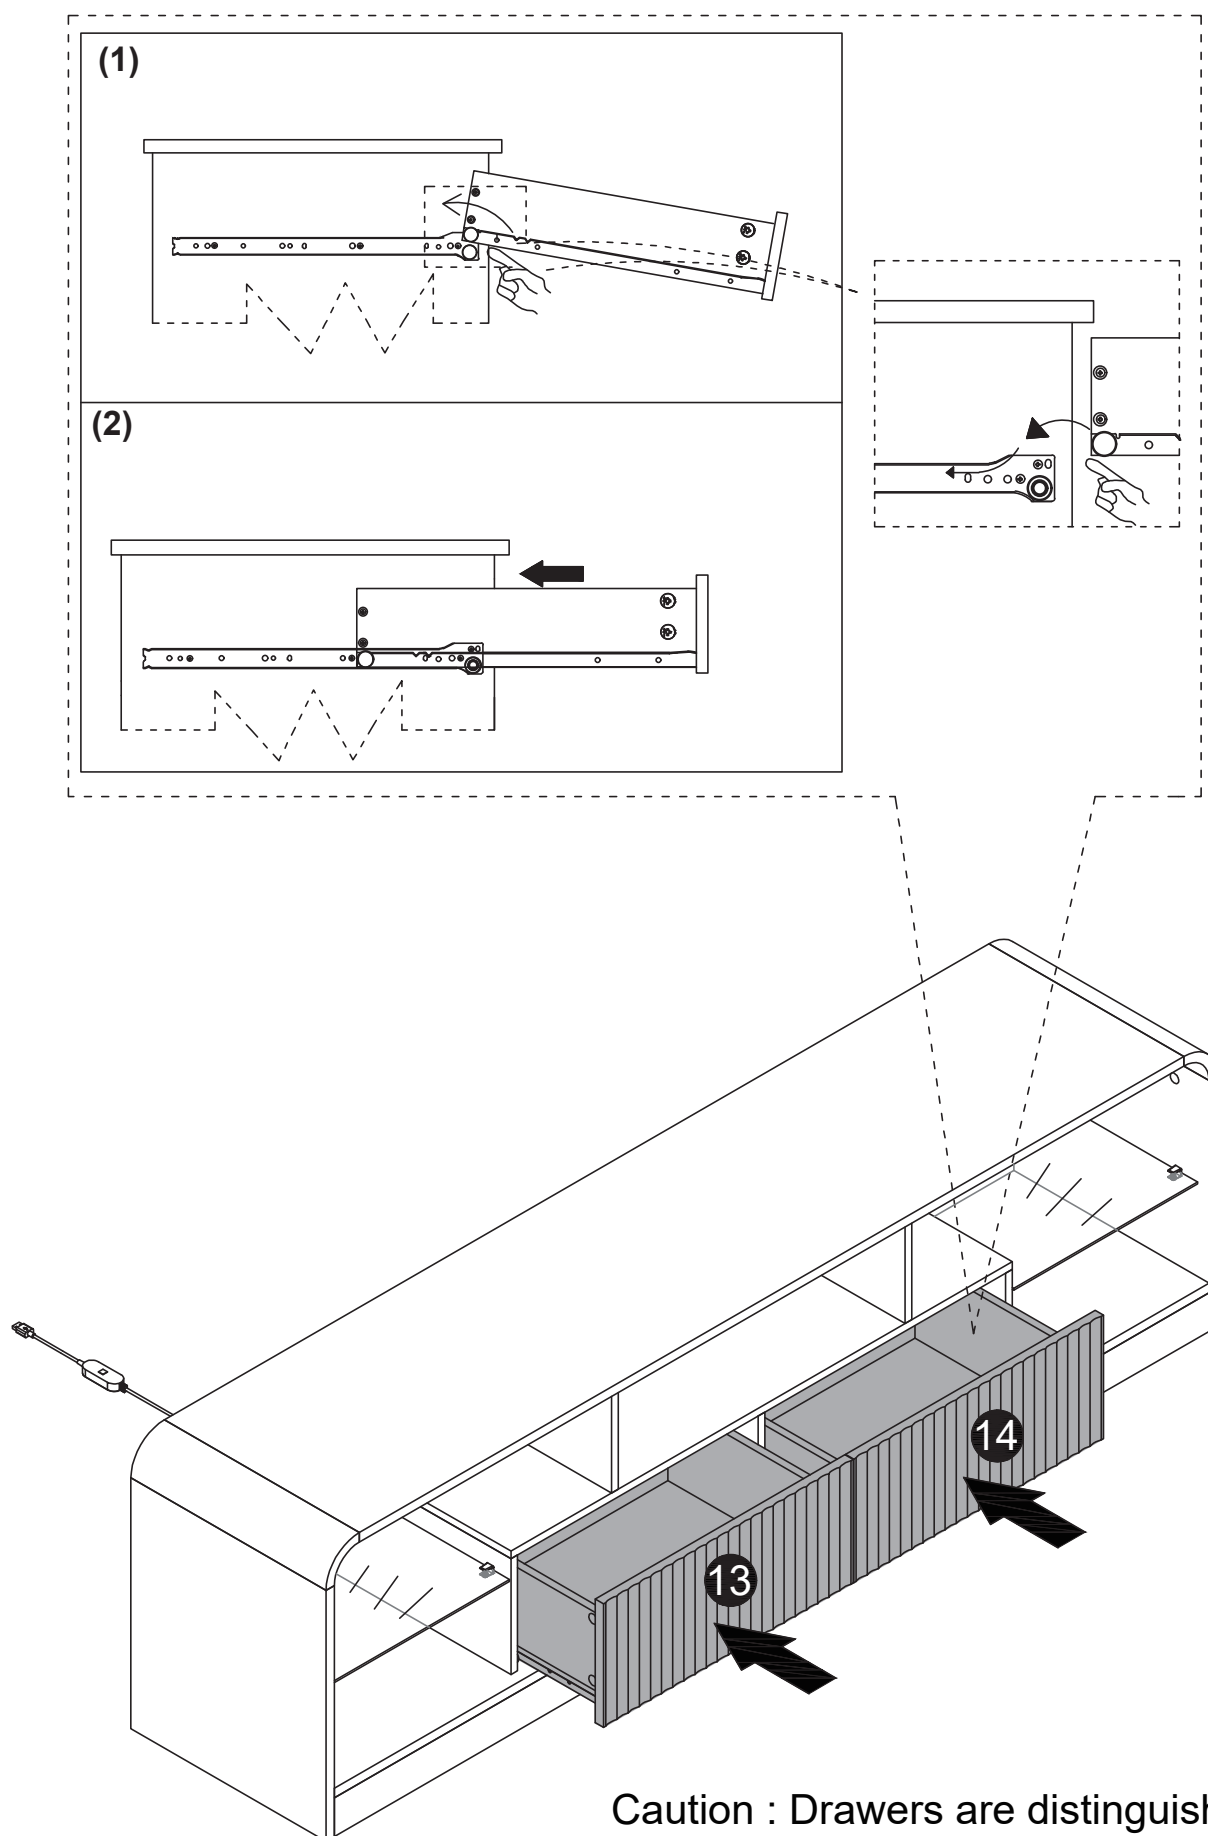

I x8




M x4



M-1





M-2

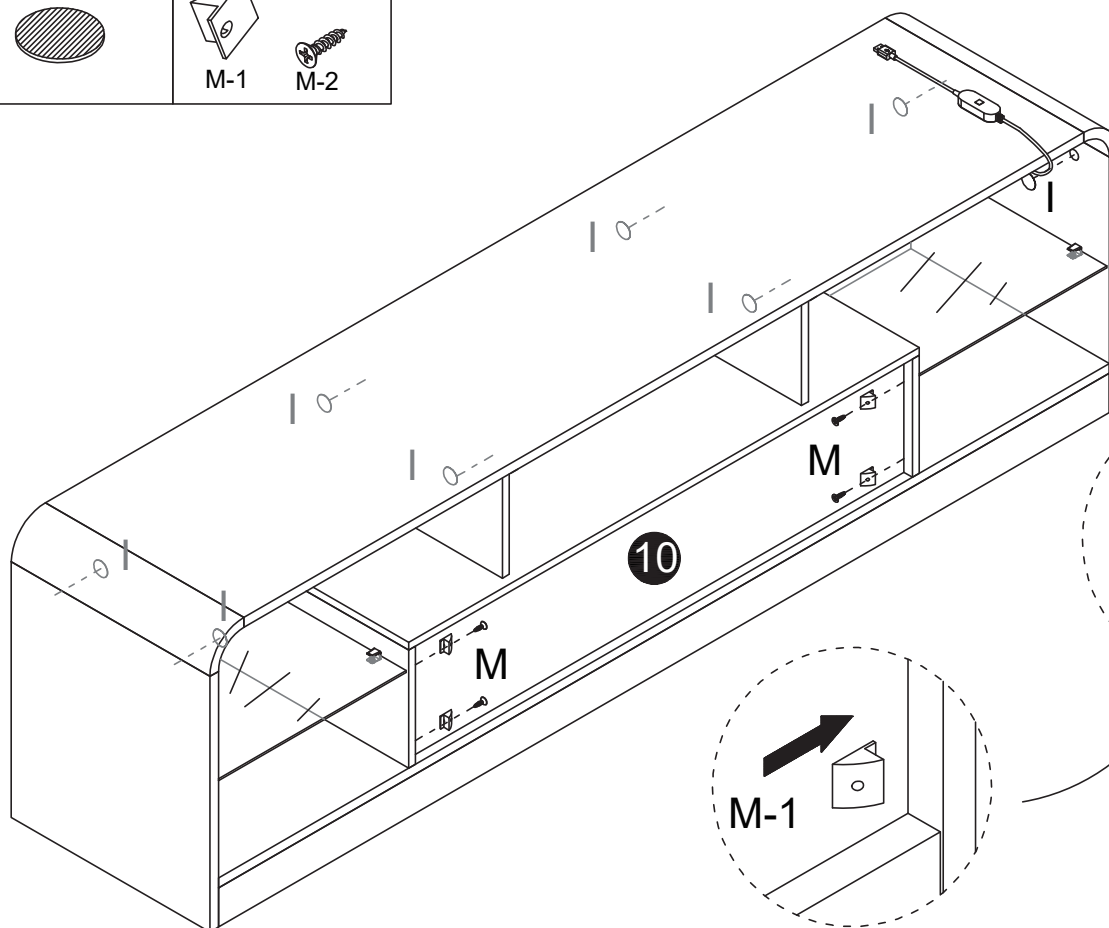

M-2

M-1



O x1



O



J

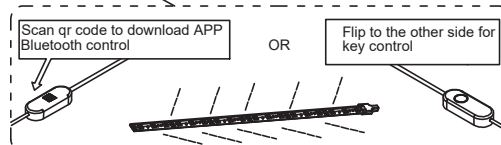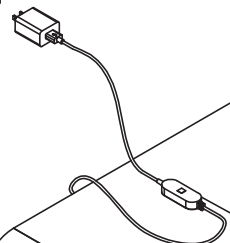

Done