
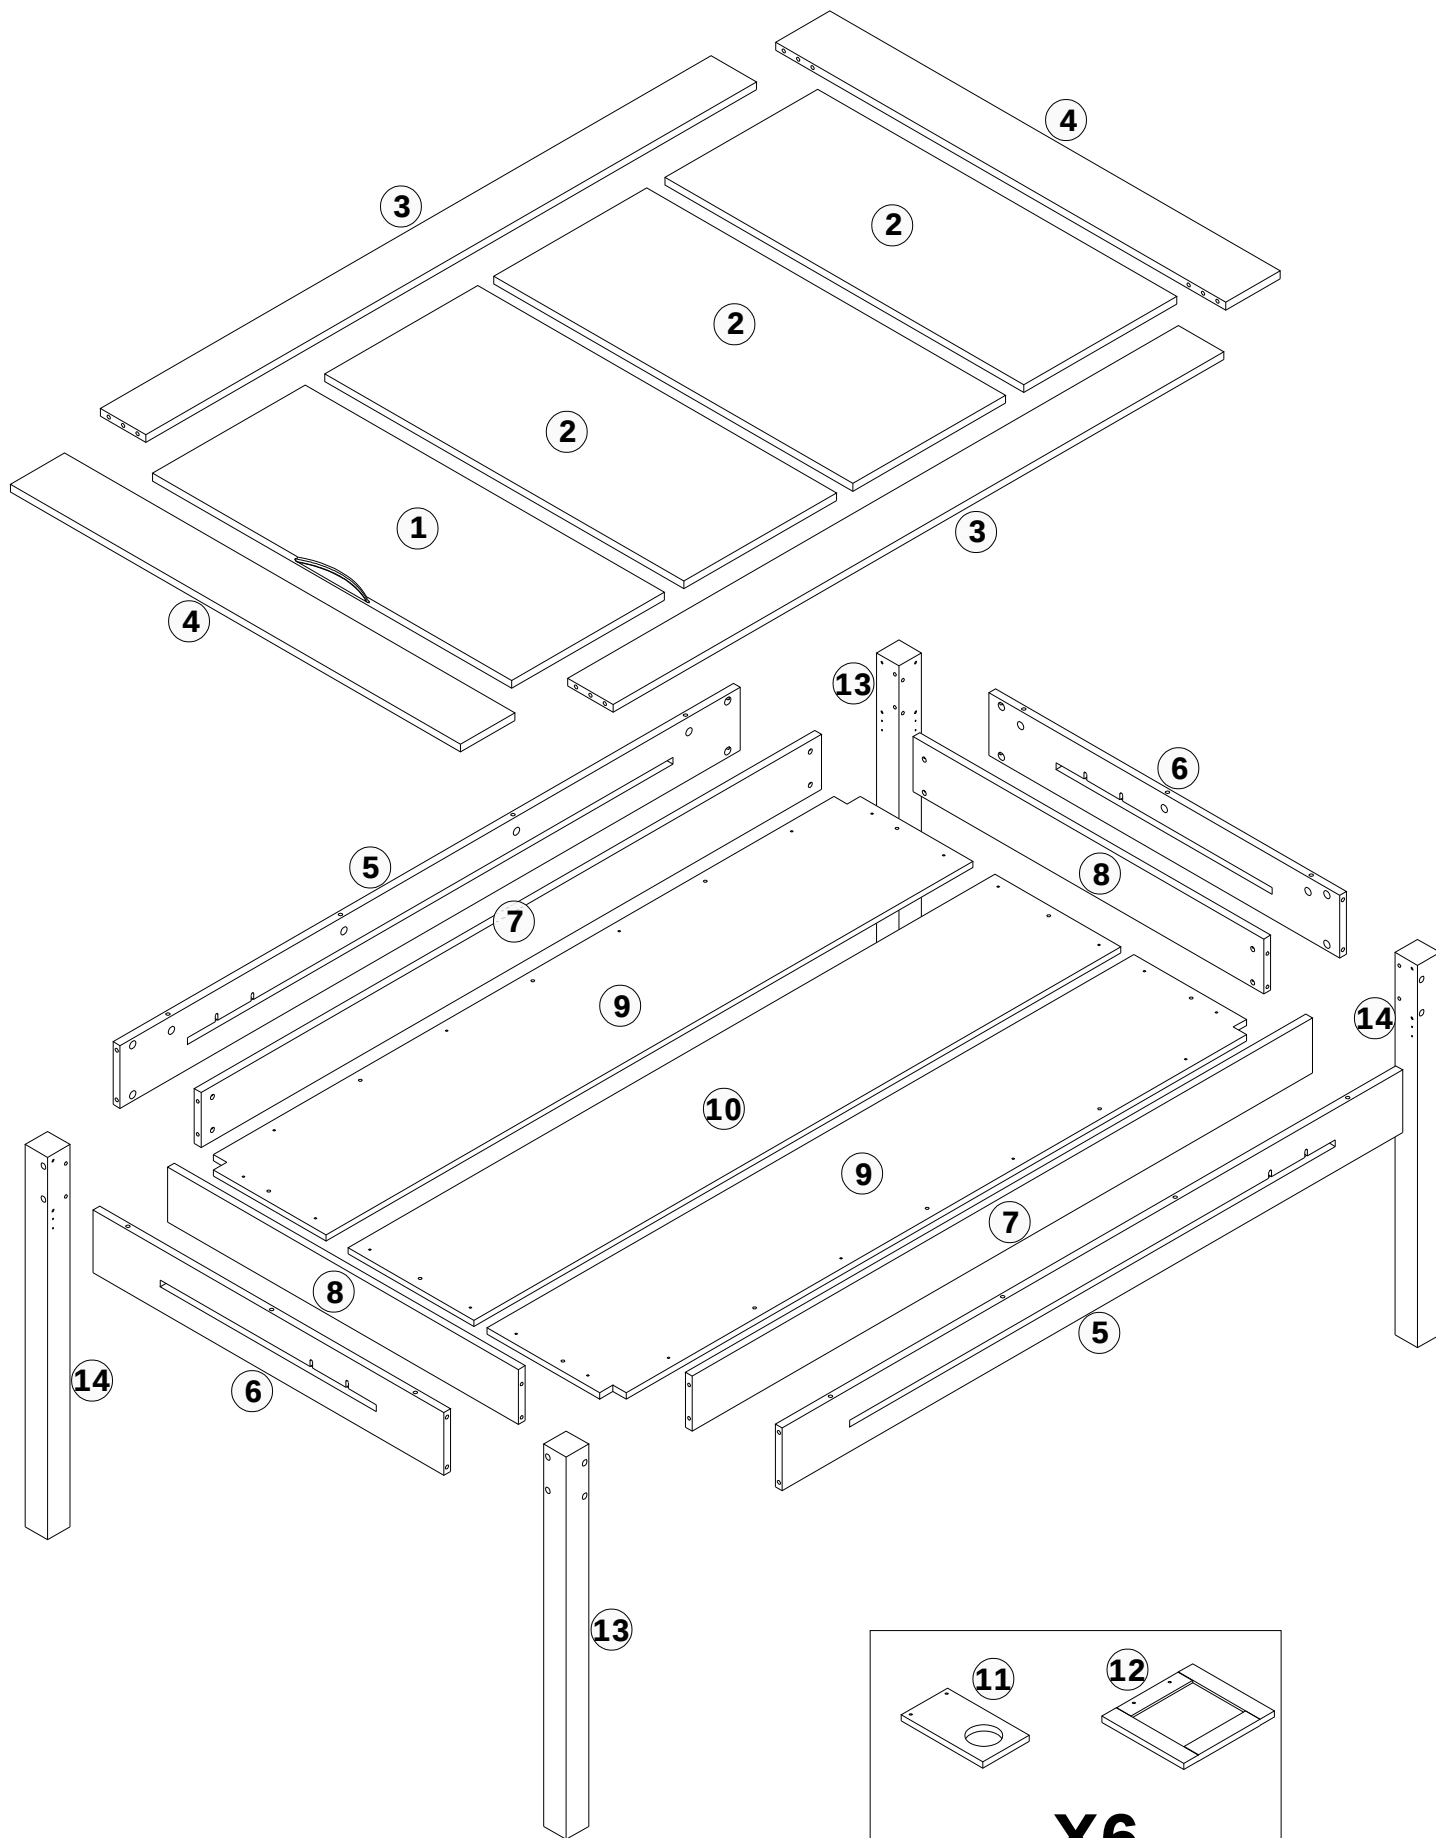
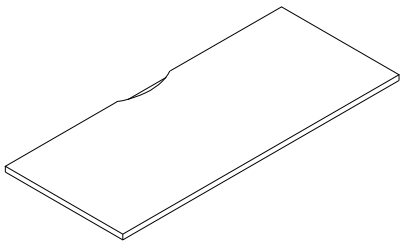
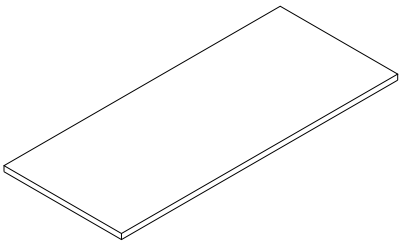
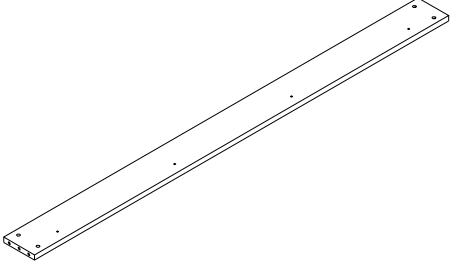
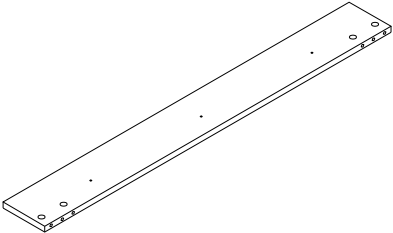
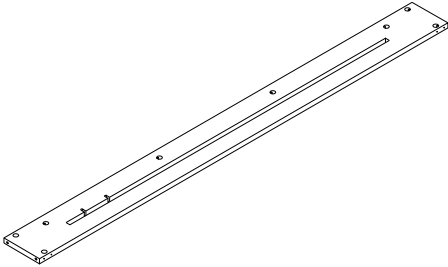
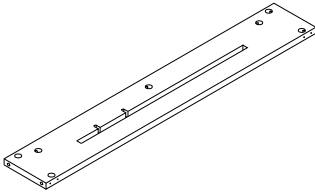
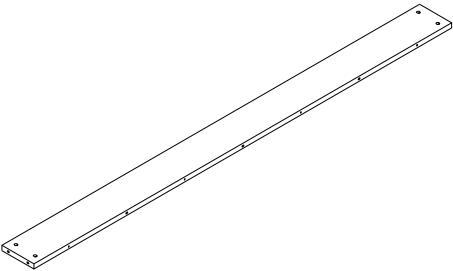
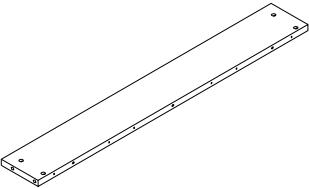
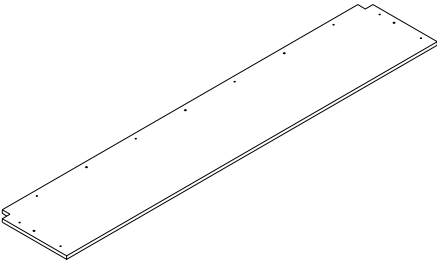
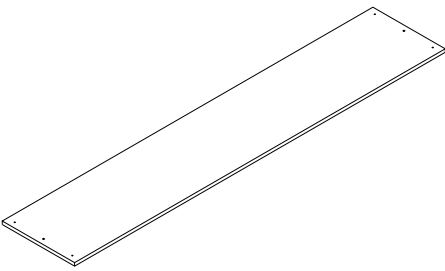
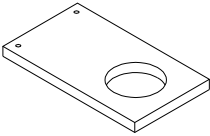
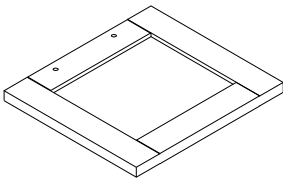
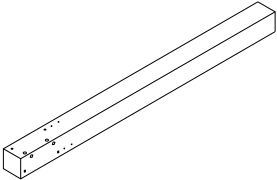










Installation instruction

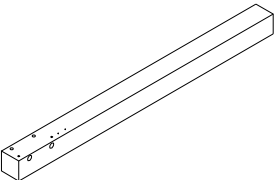

Parts and Operation Elements

					
①	1pc	②	3pcs	③	2pcs
					
④	2pcs	⑤	2pcs	⑥	2pcs
					
⑦	2pcs	⑧	2pcs	⑨	2pcs
					
⑩	1pc	⑪	6pcs	⑫	6pcs
					
⑬	2pcs	⑭	2pcs		





Hardware

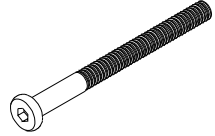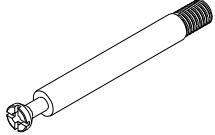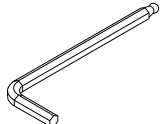 Cam bolt		 Cam lock		 Wood dowel Ø6 x 30mm		 Ø4 x 35mm screw	
A	14+1pcs	B	38+4pcs	C	16+2pcs	D	20+2pcs
 Ø4 x 12mm screw		 Machine screw Ø6 x 70mm		 Barrel nut		 Cam bolt	
E	56+4pcs	F	16pcs	G	24+2pcs	H	24pcs
 Shelf supports				 L fitting		 Metal cup	
J	24+2pcs	K	6pcs	L	1pc	M	6pcs
							
N	8pcs						




SPARE BAG


THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

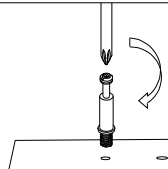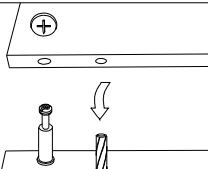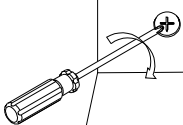		Arrow must face hole 	
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.


1

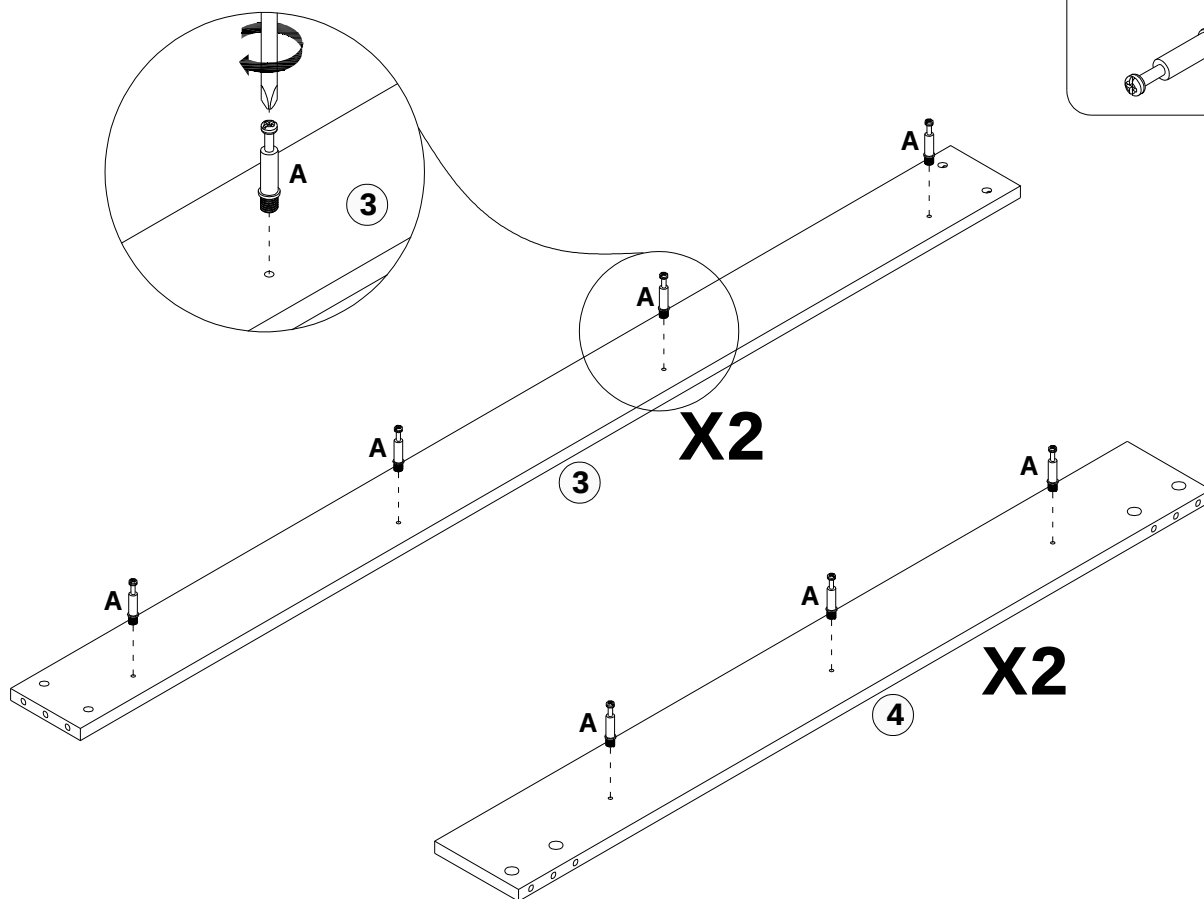

2

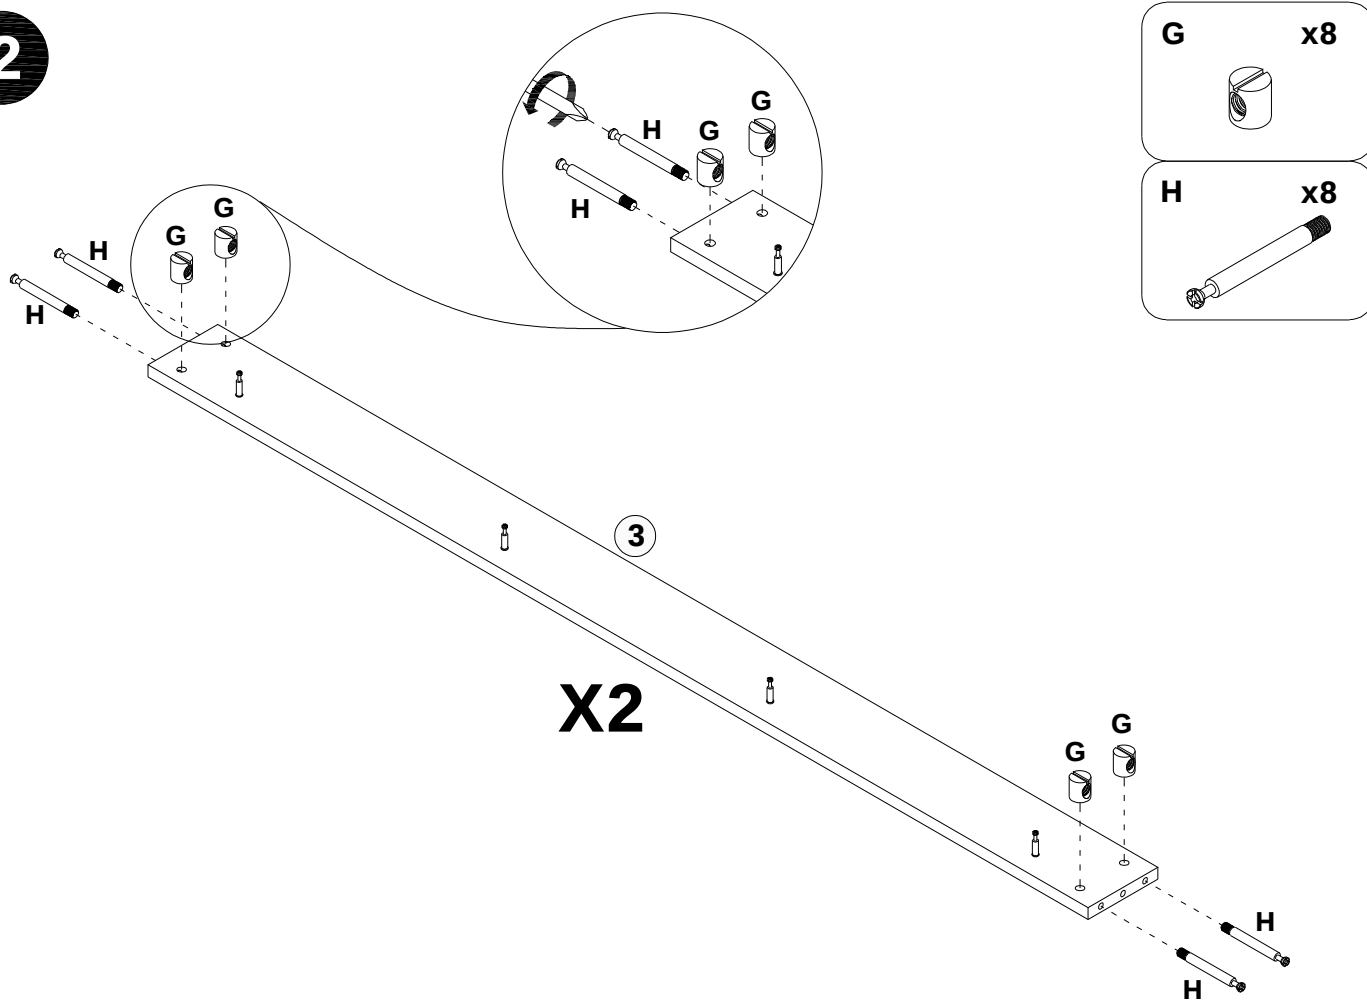


3

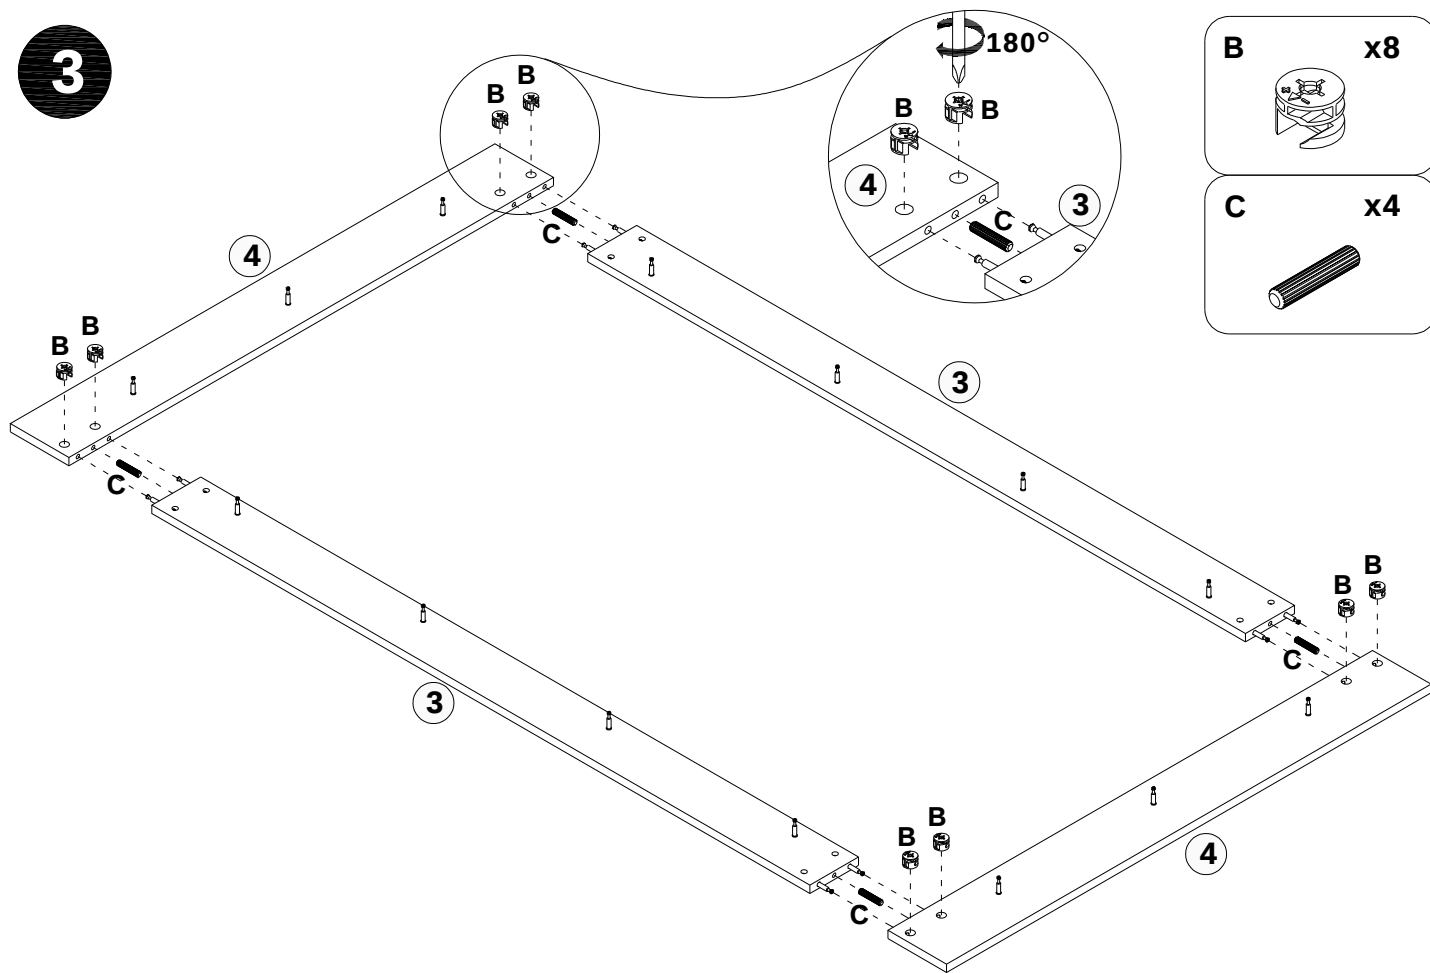


B x8




C x4



4

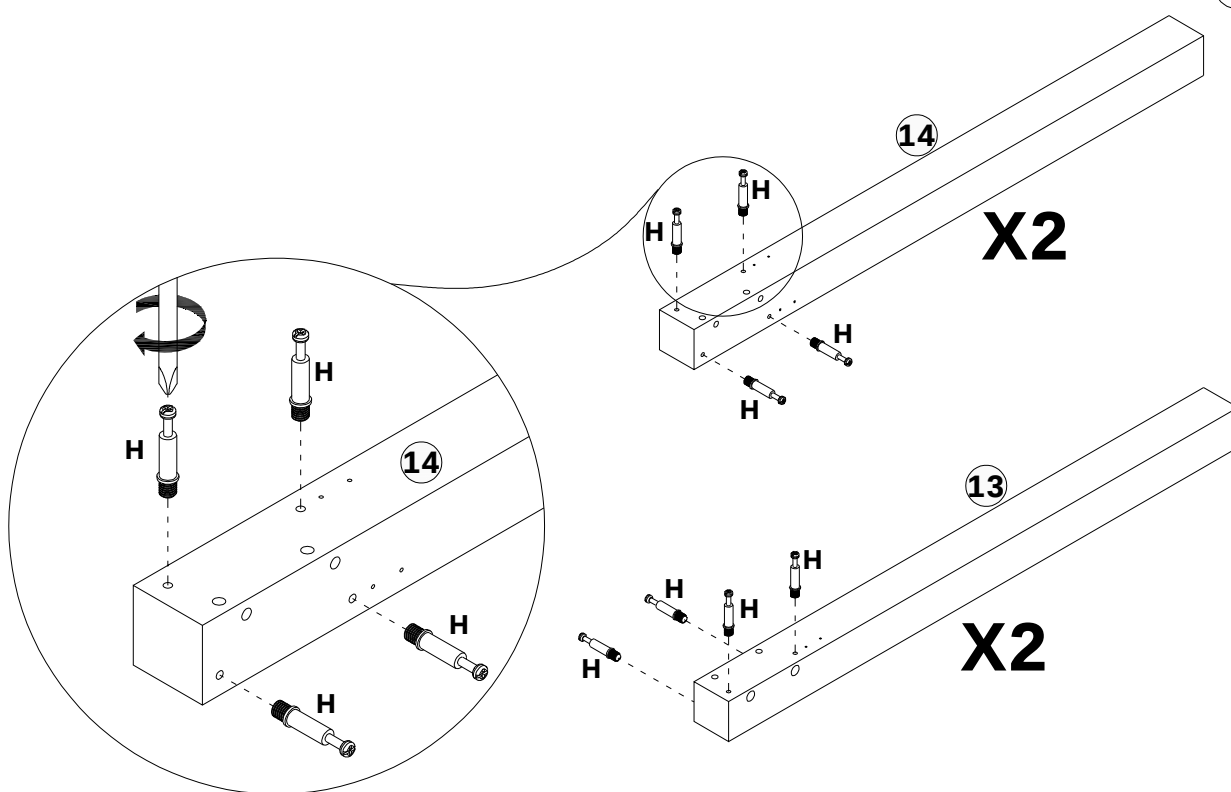


H x16




5

B x8

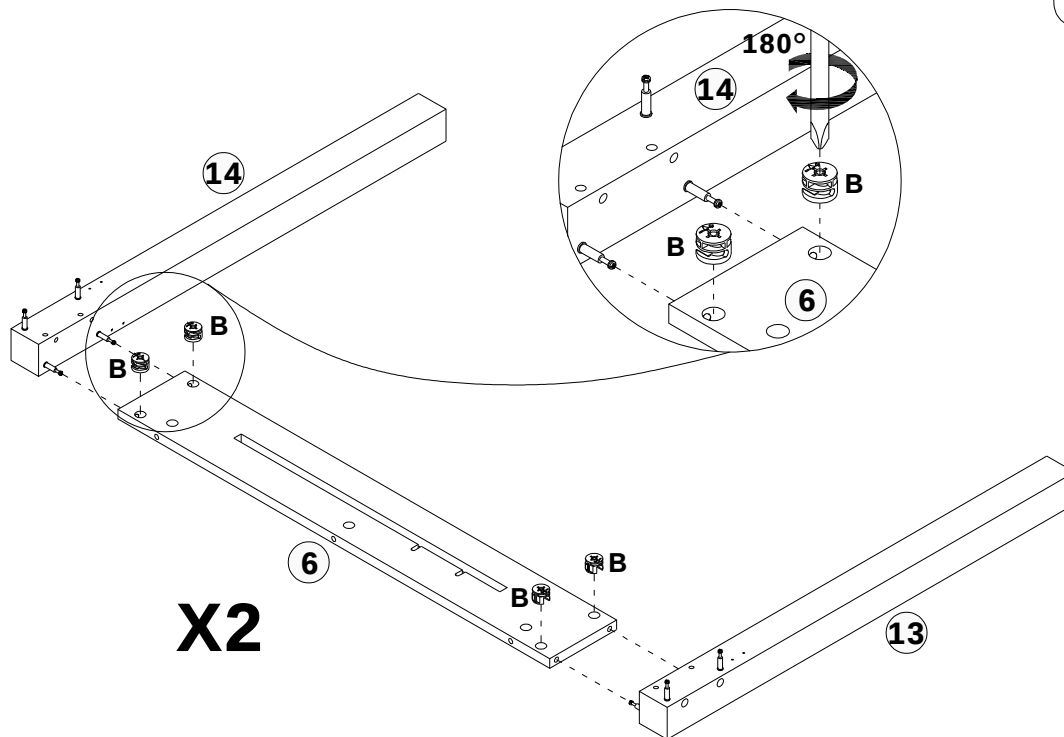


6

B x4

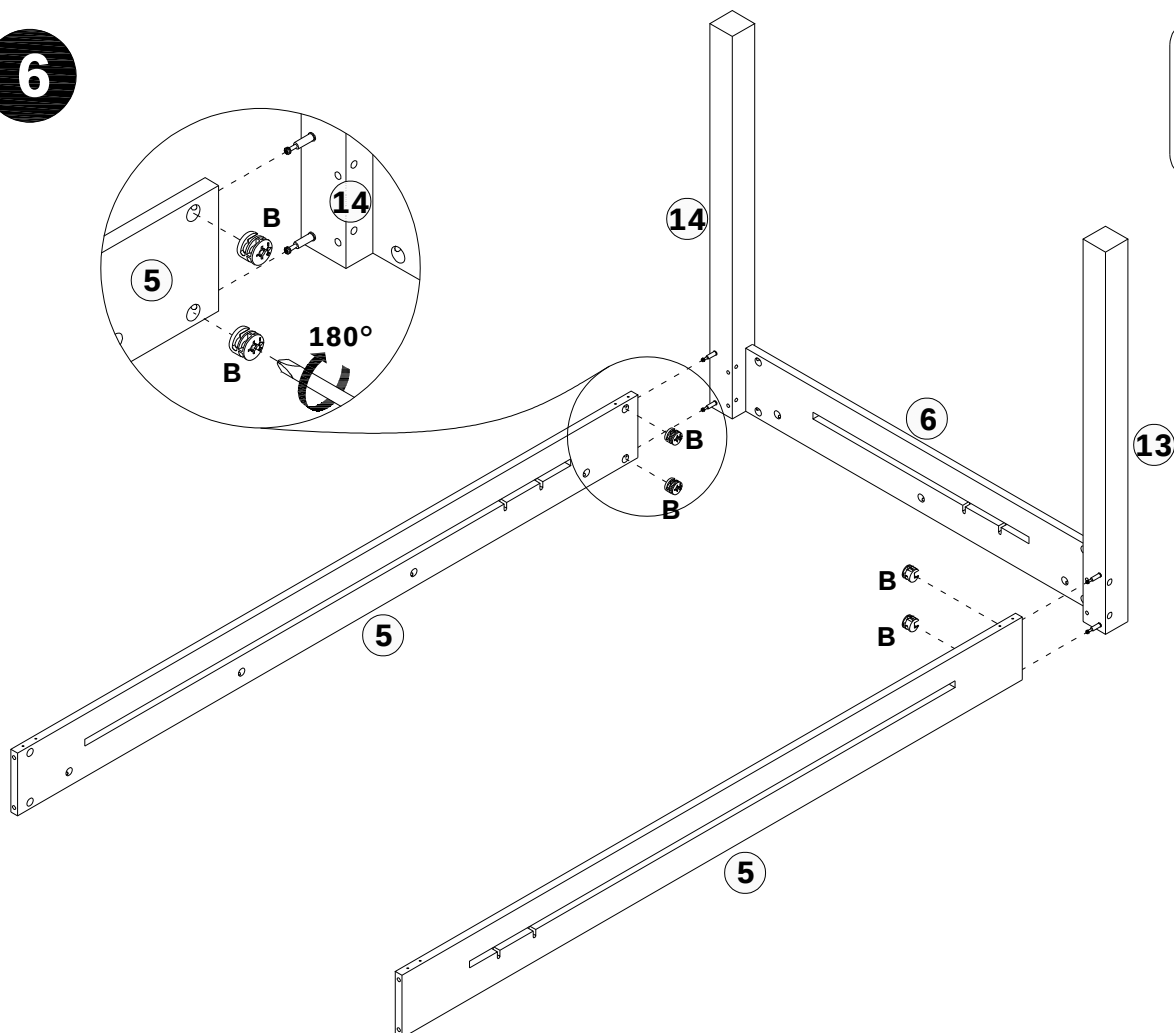

7

B x4


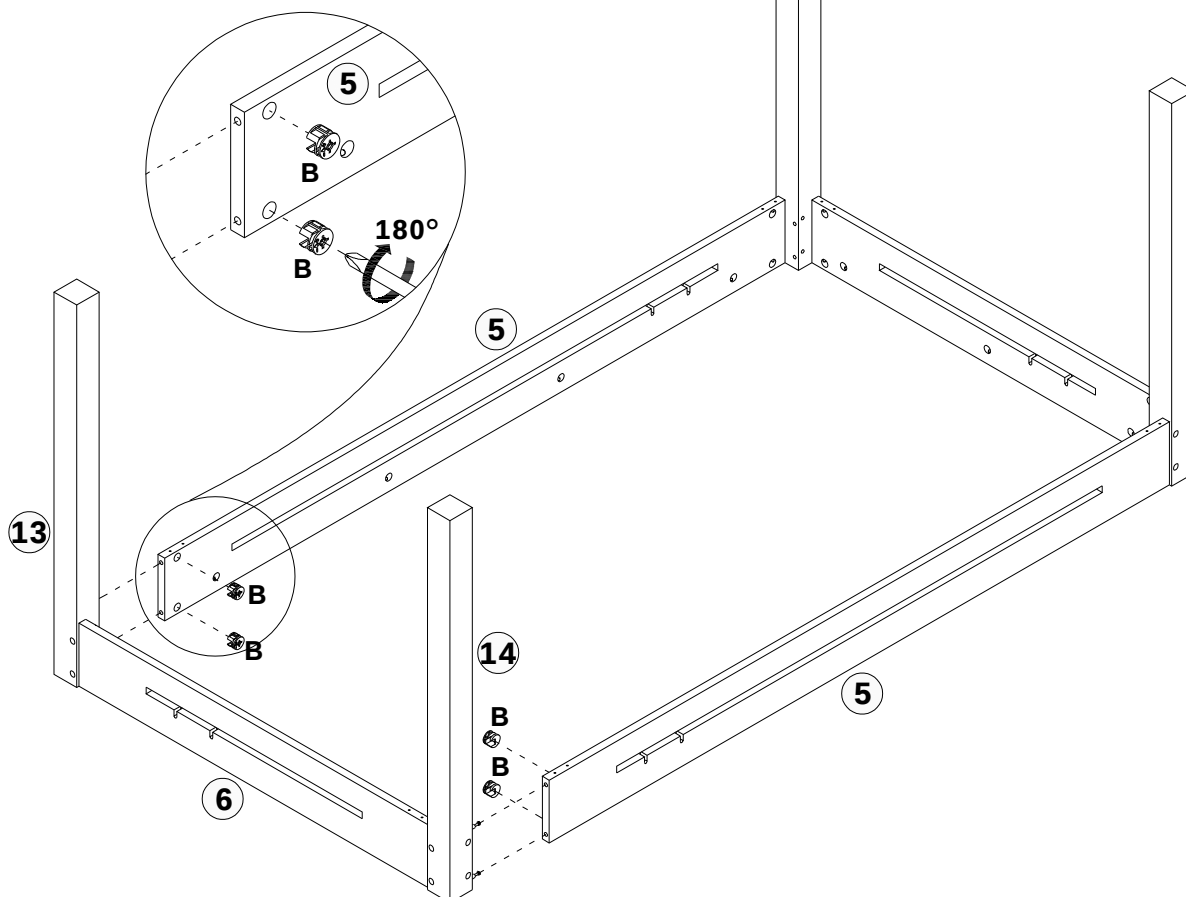


8





E x32




N x8

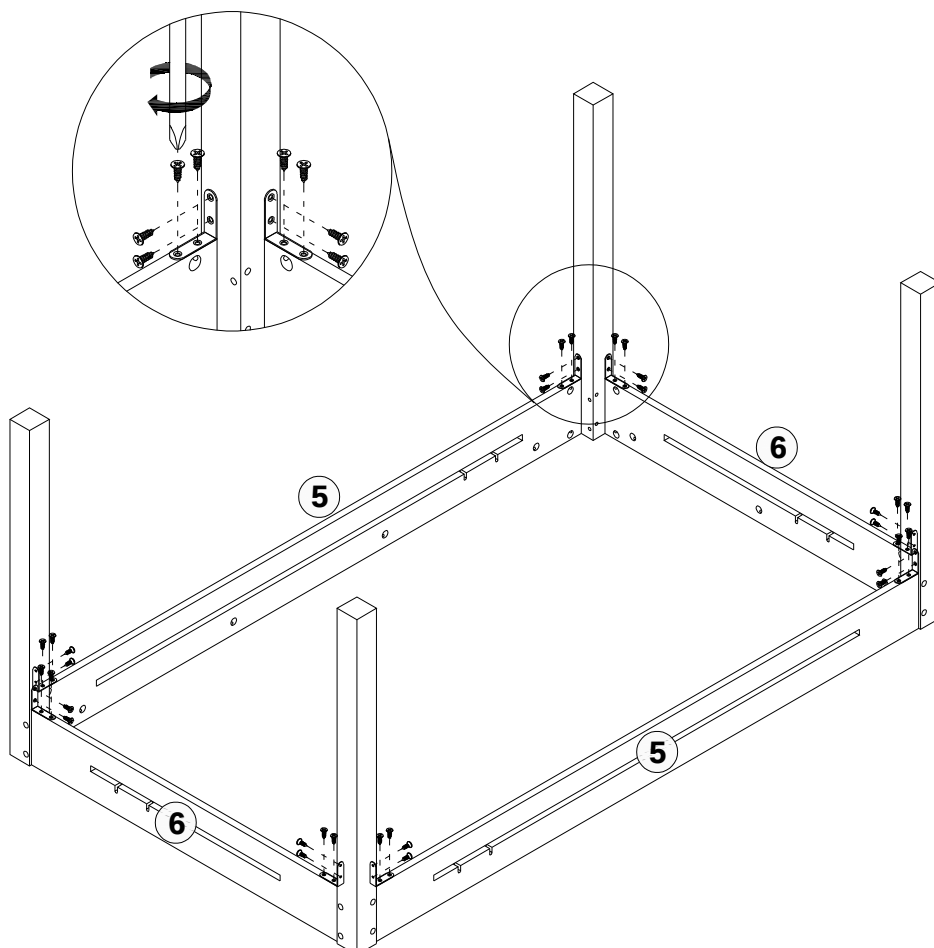


9

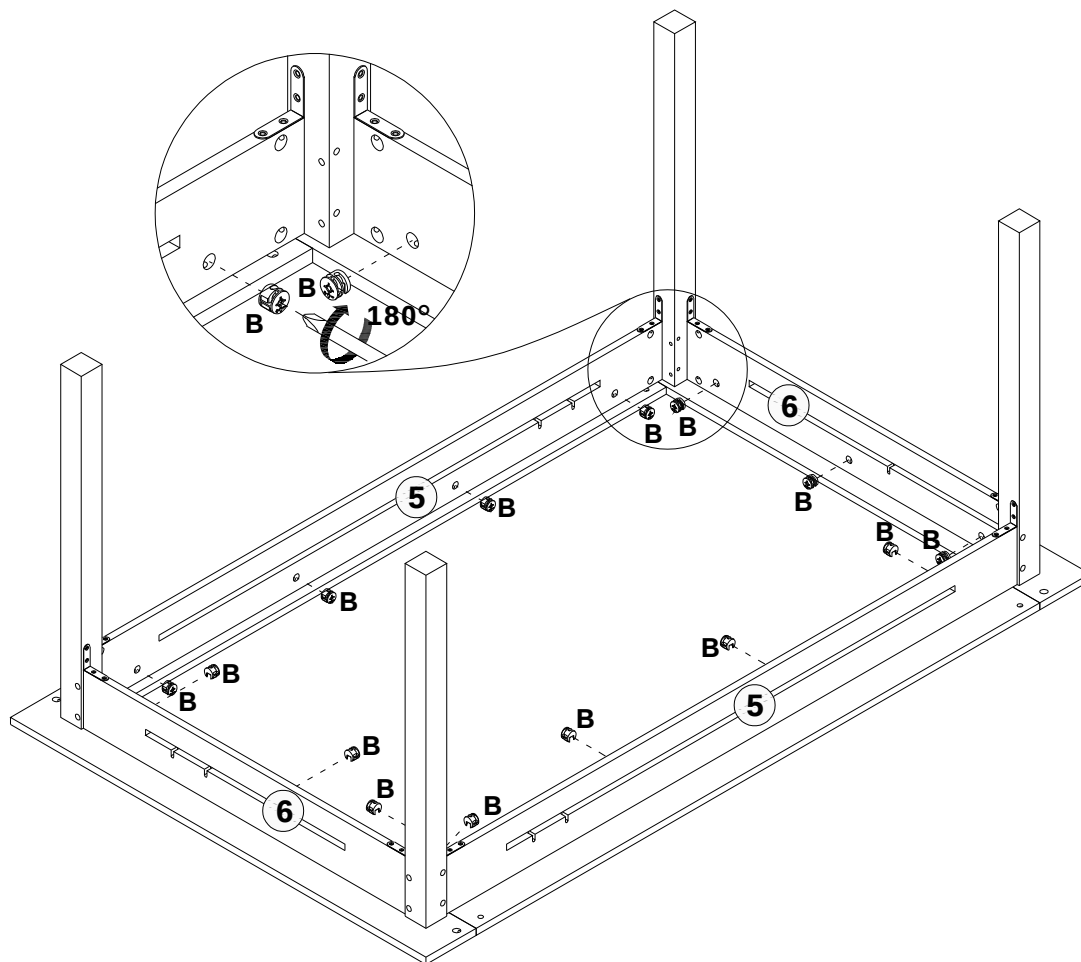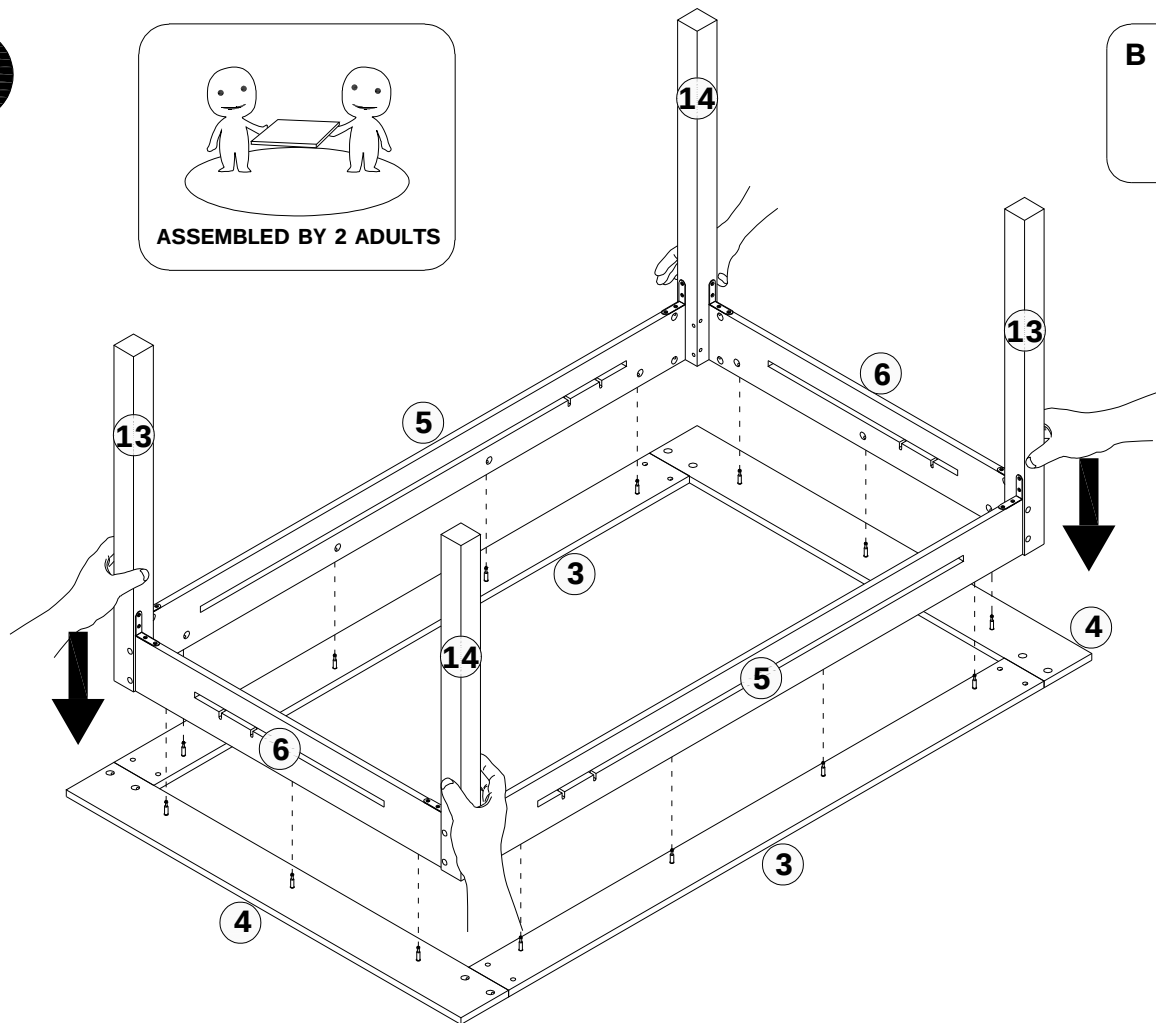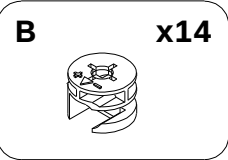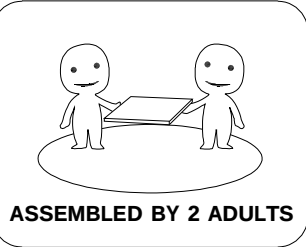

10

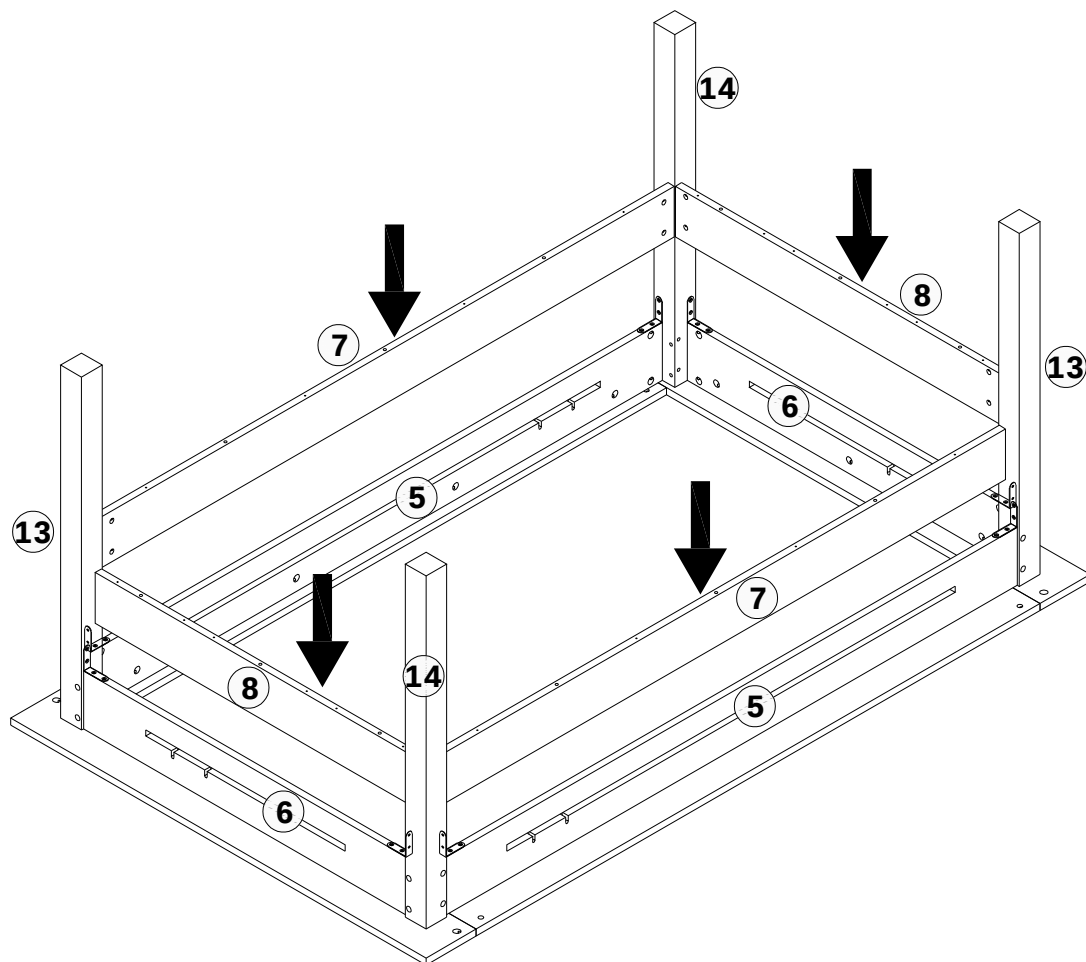


11

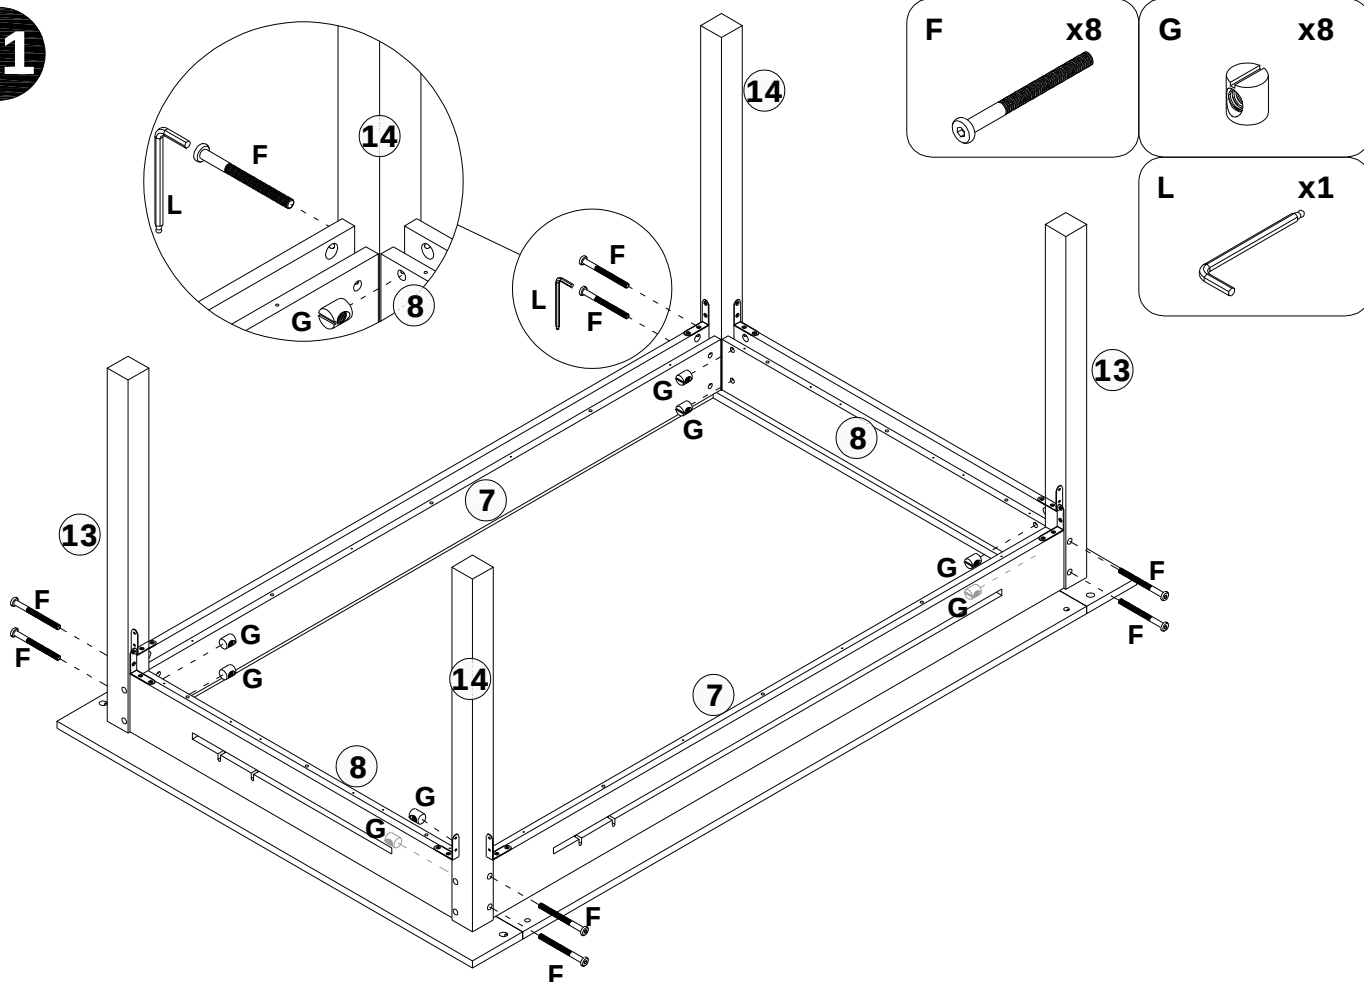

12


F x8

G x8

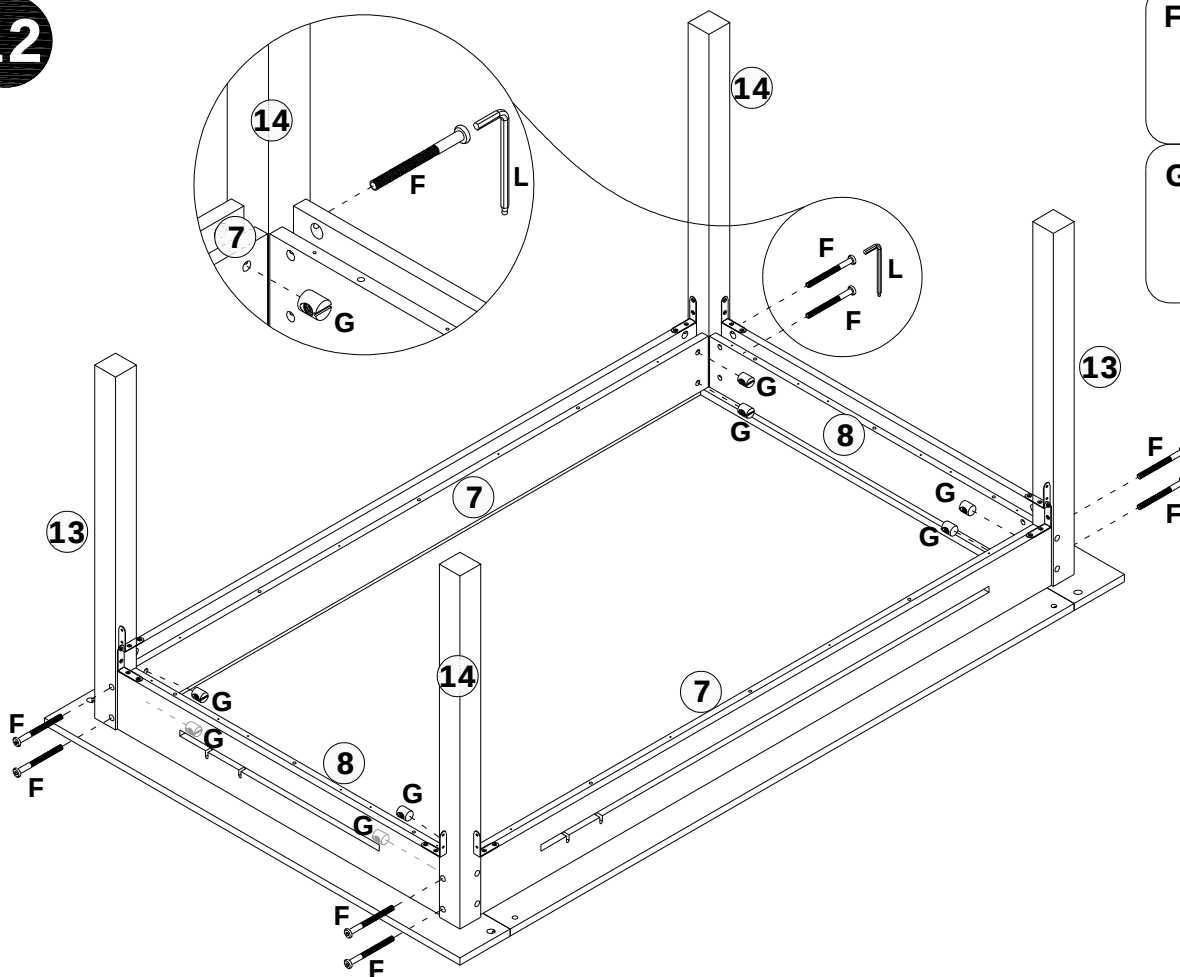


13


C x12

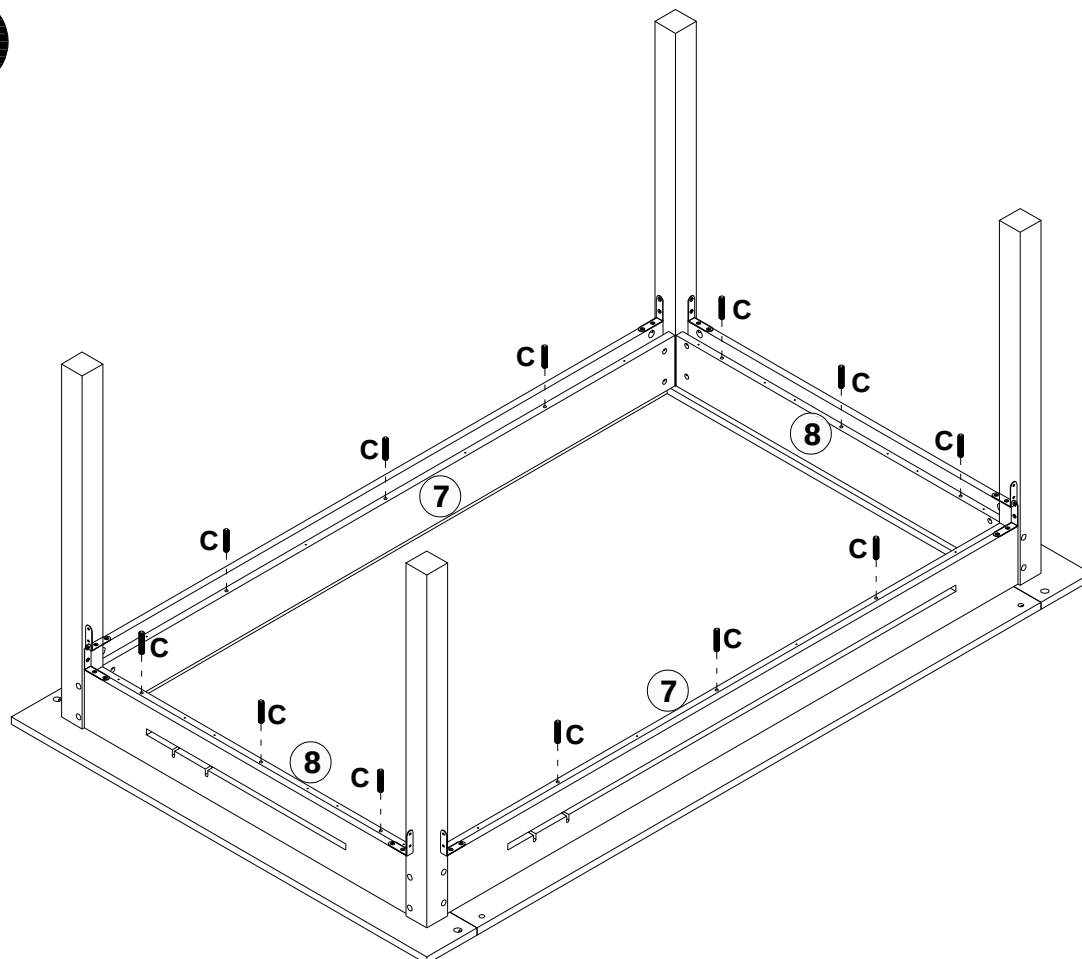


14

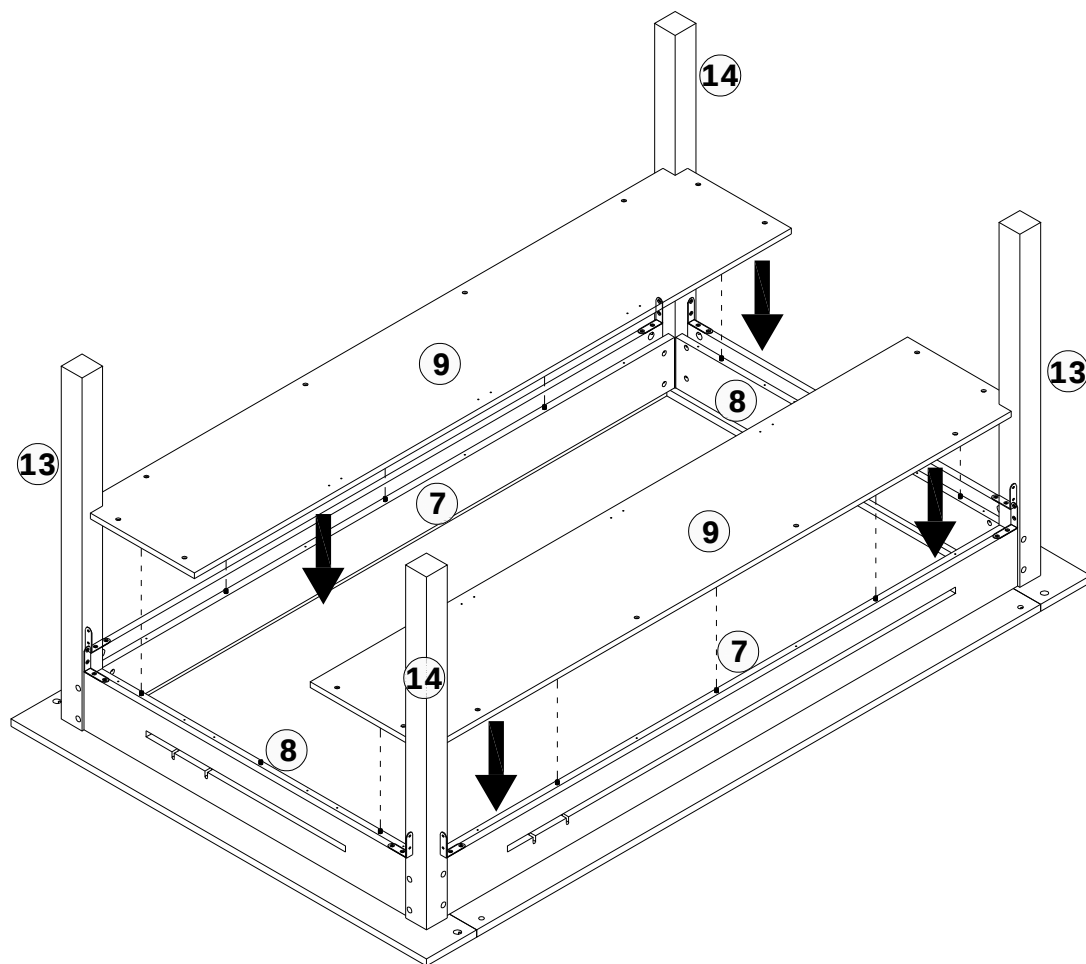


15

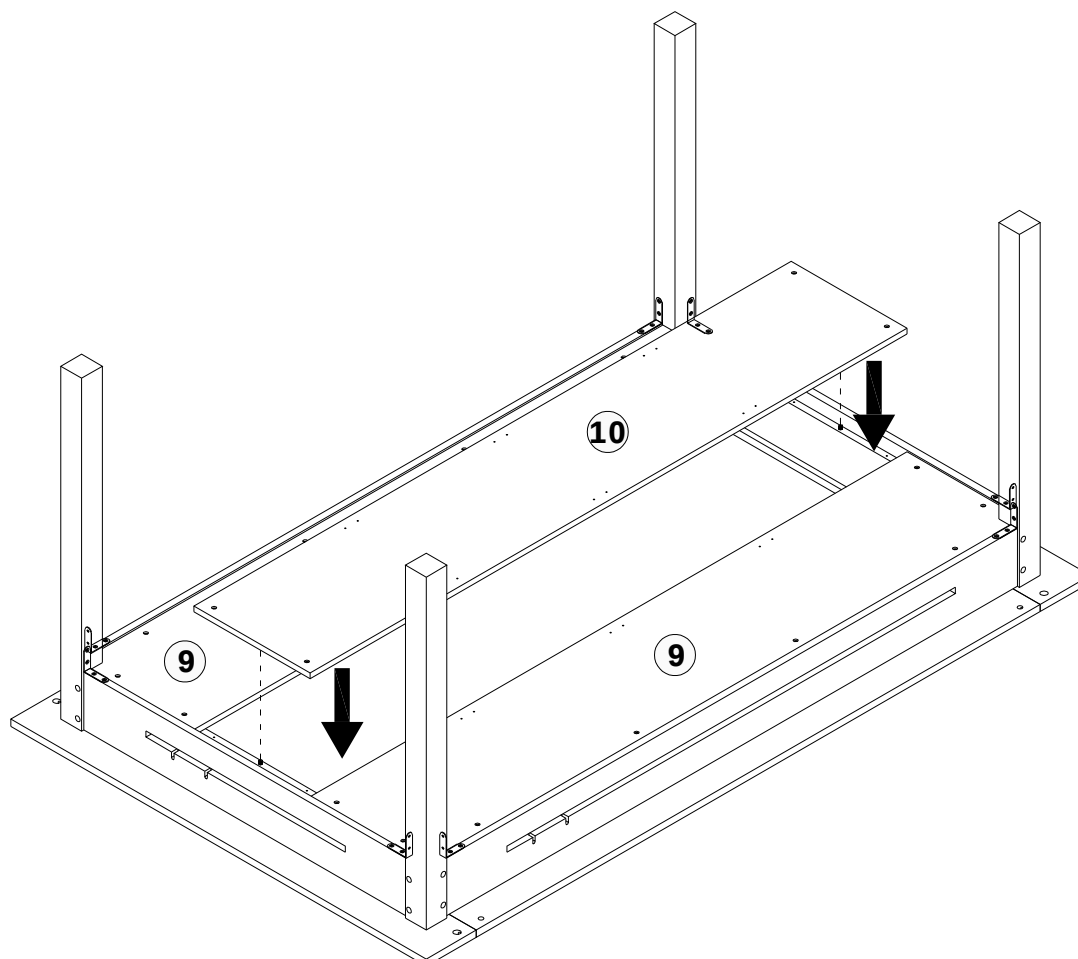


16

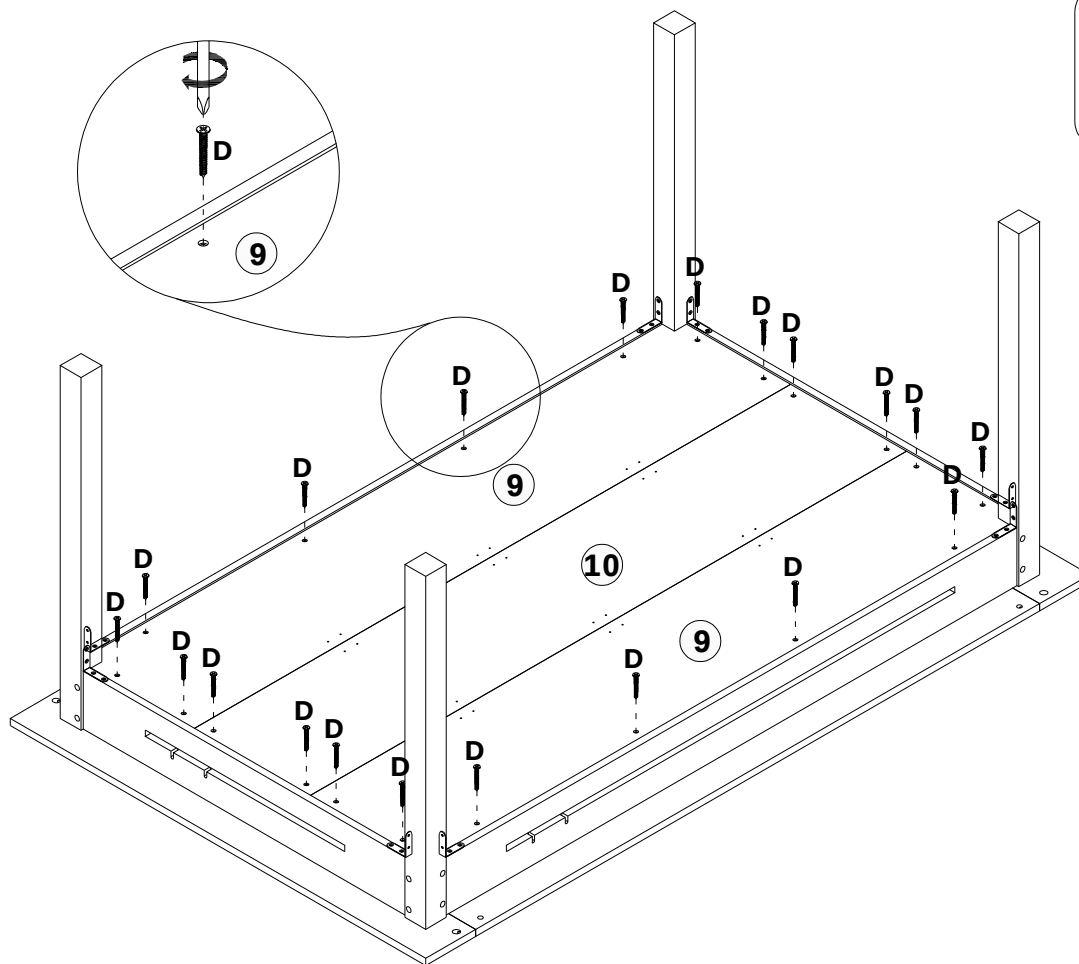

D x20




17

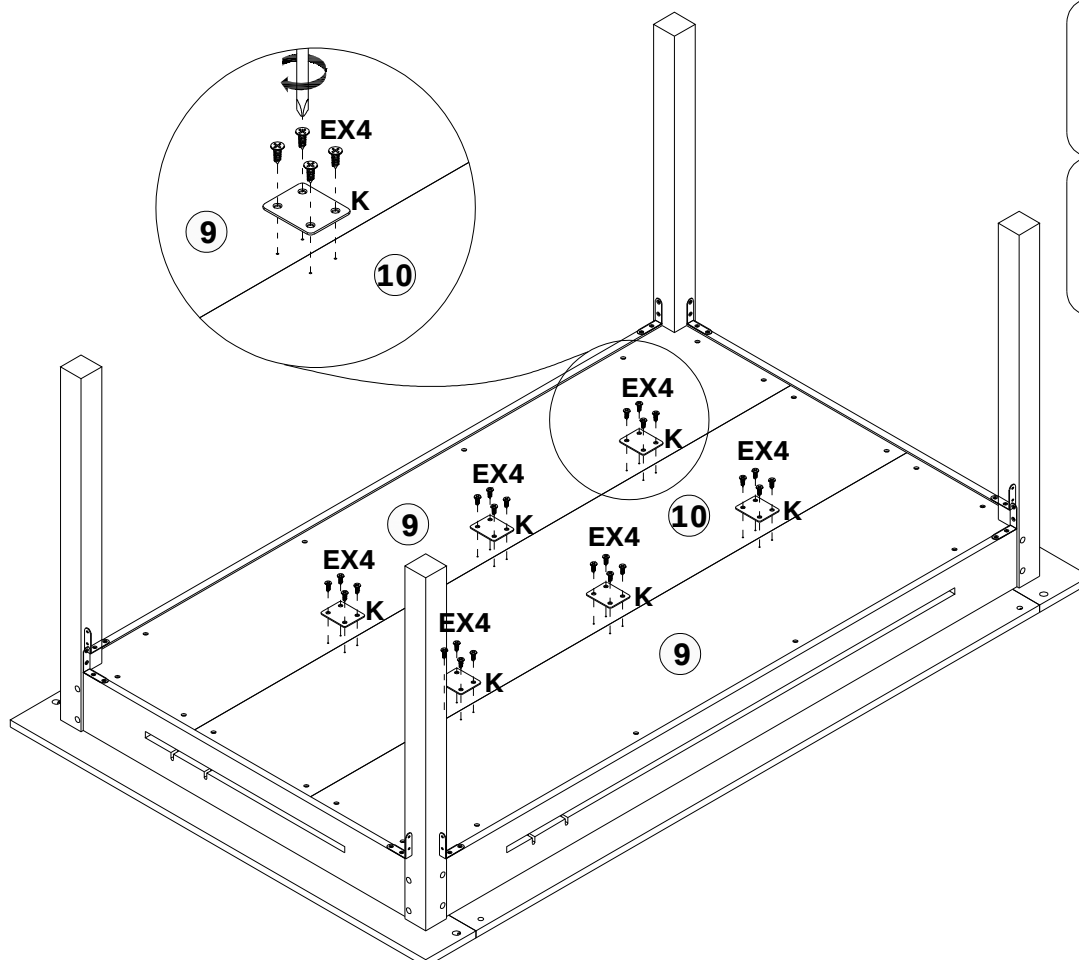


E x24



K x6




18

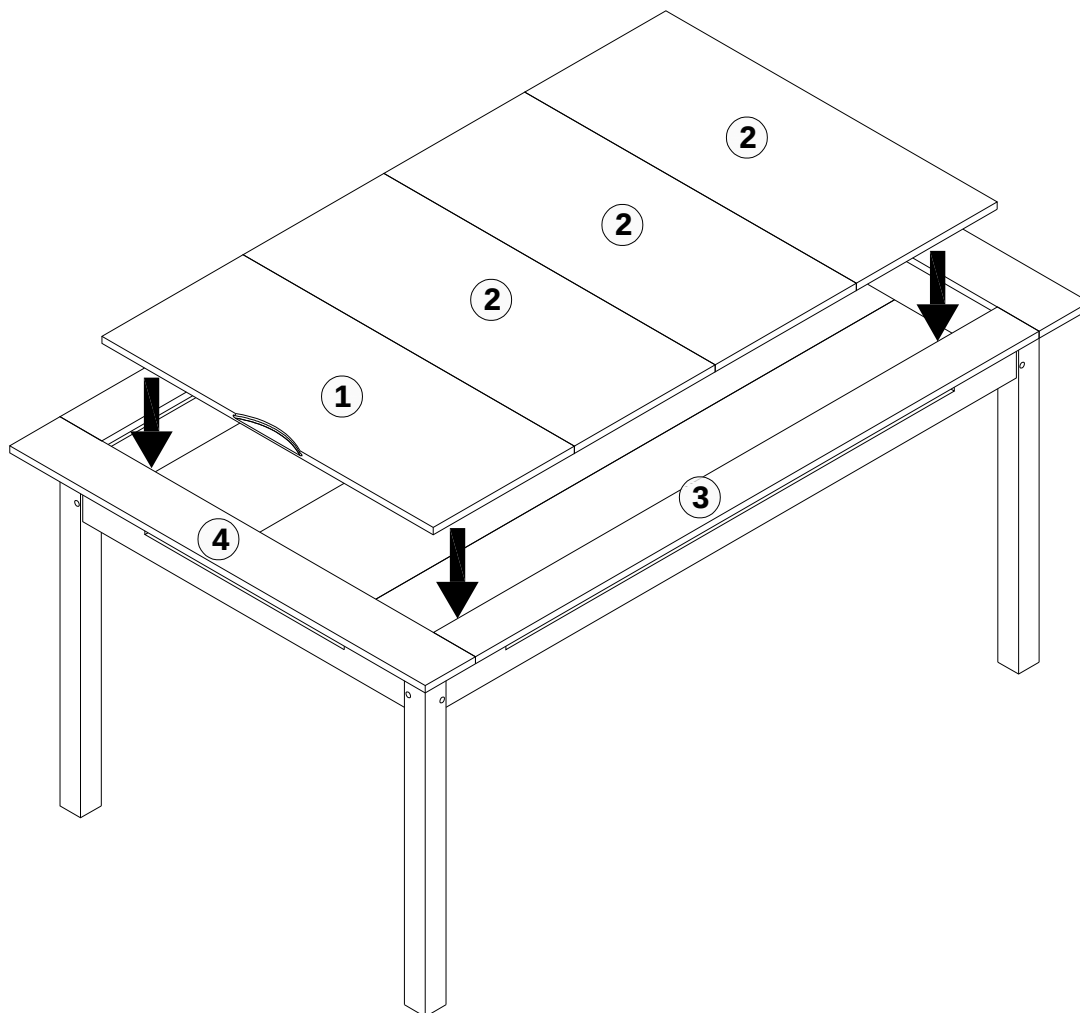


19

J x24


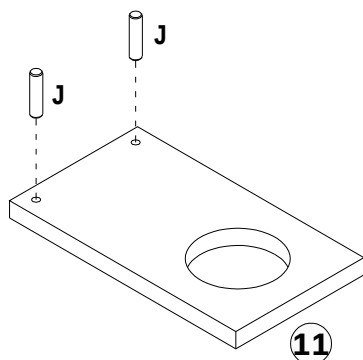


X6

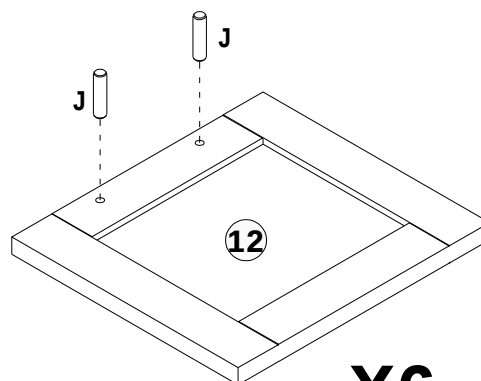

X6

20

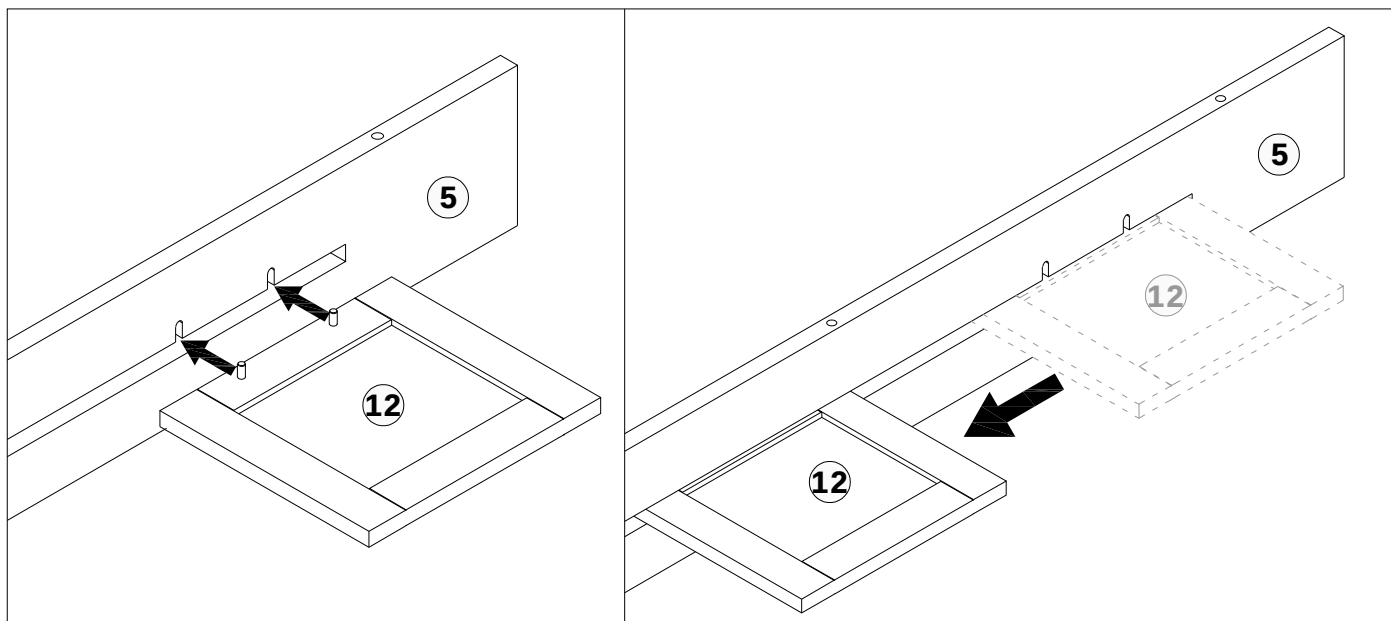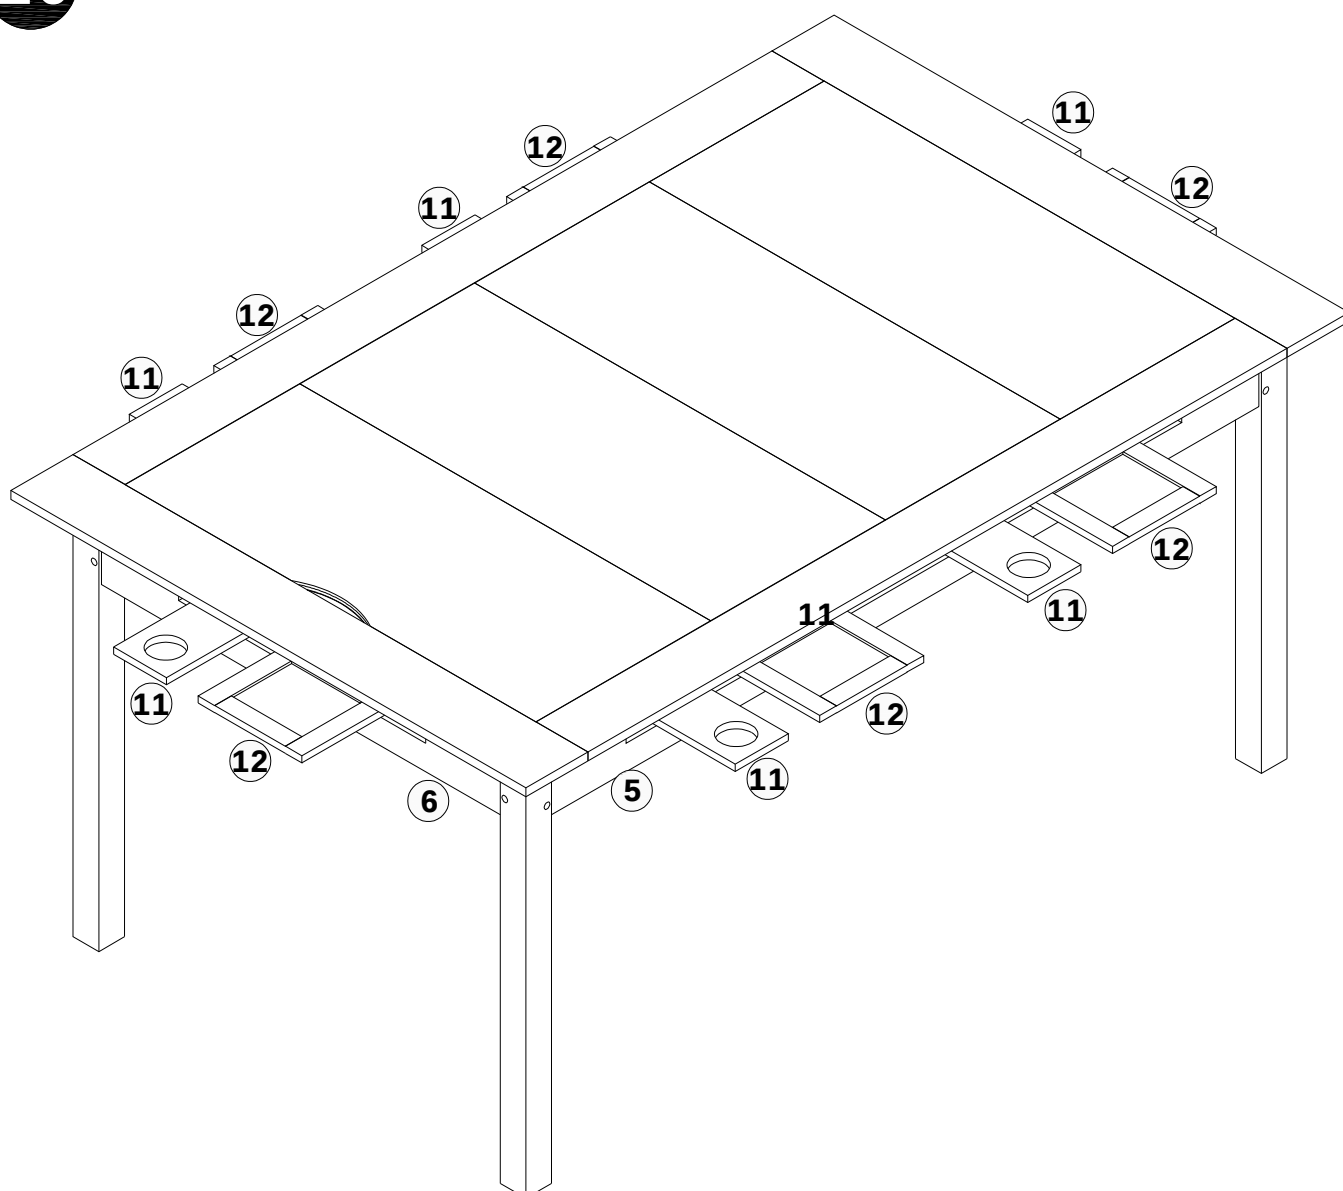

21

M

x6

