




footrest chair

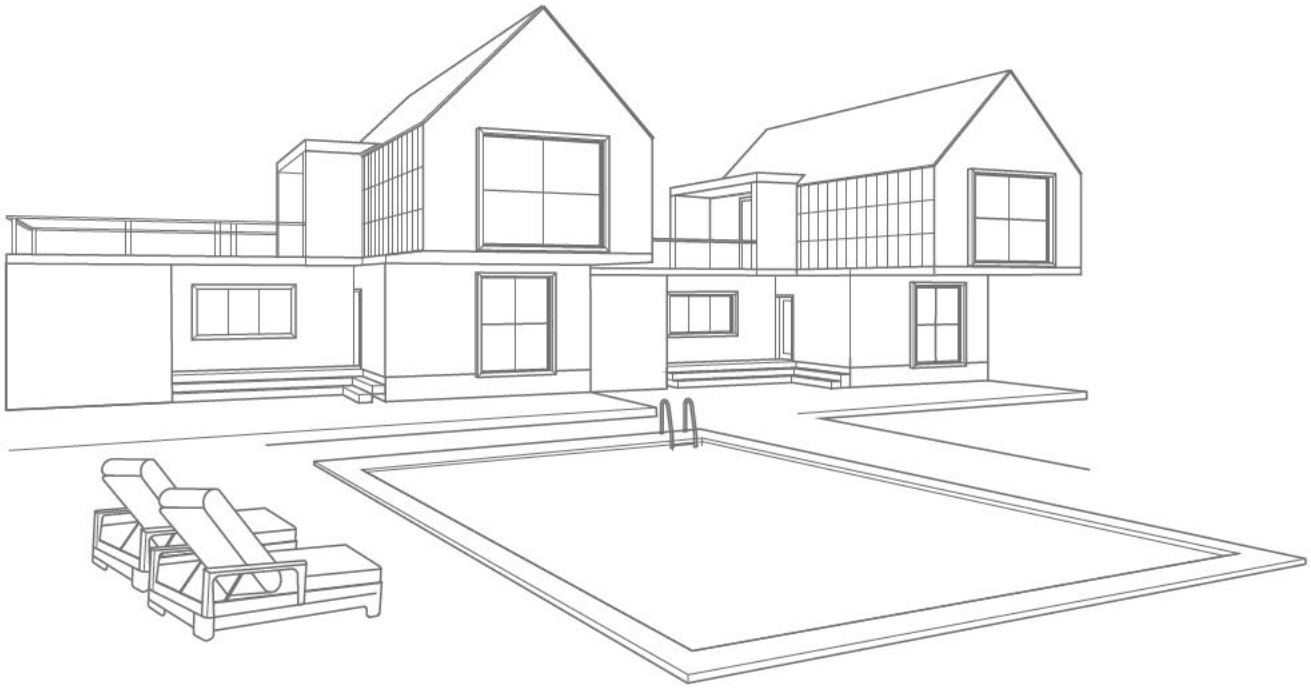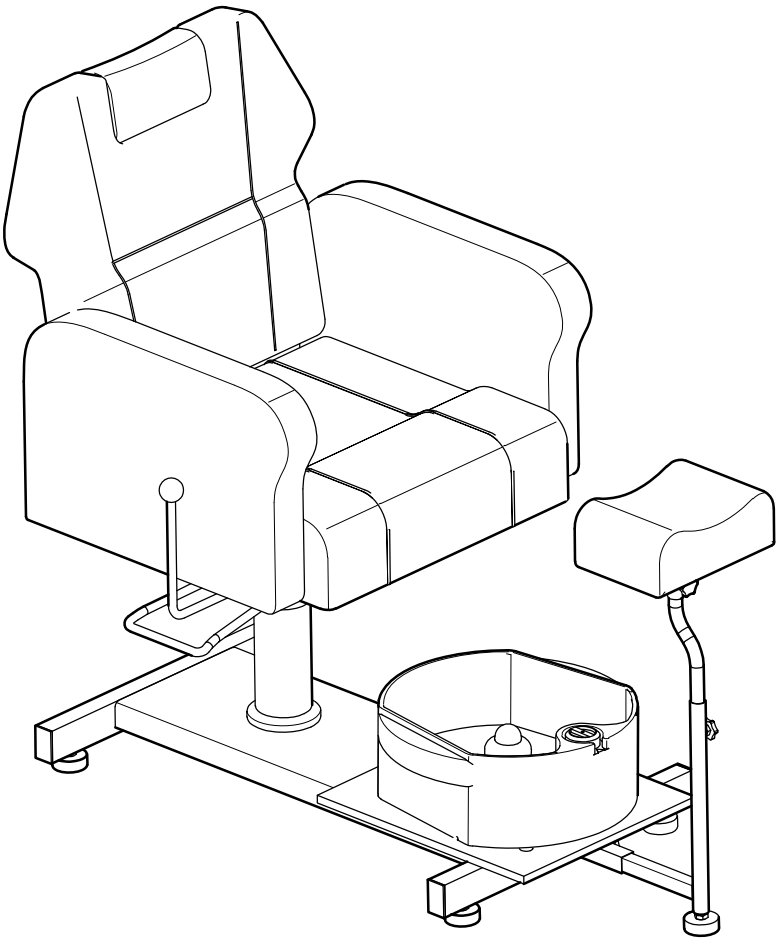

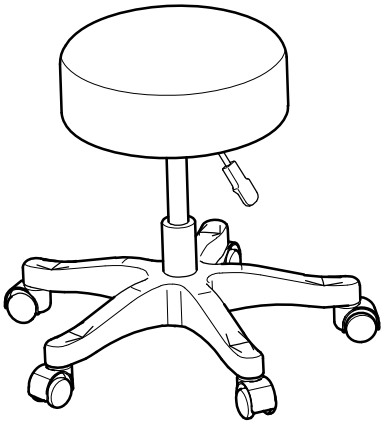

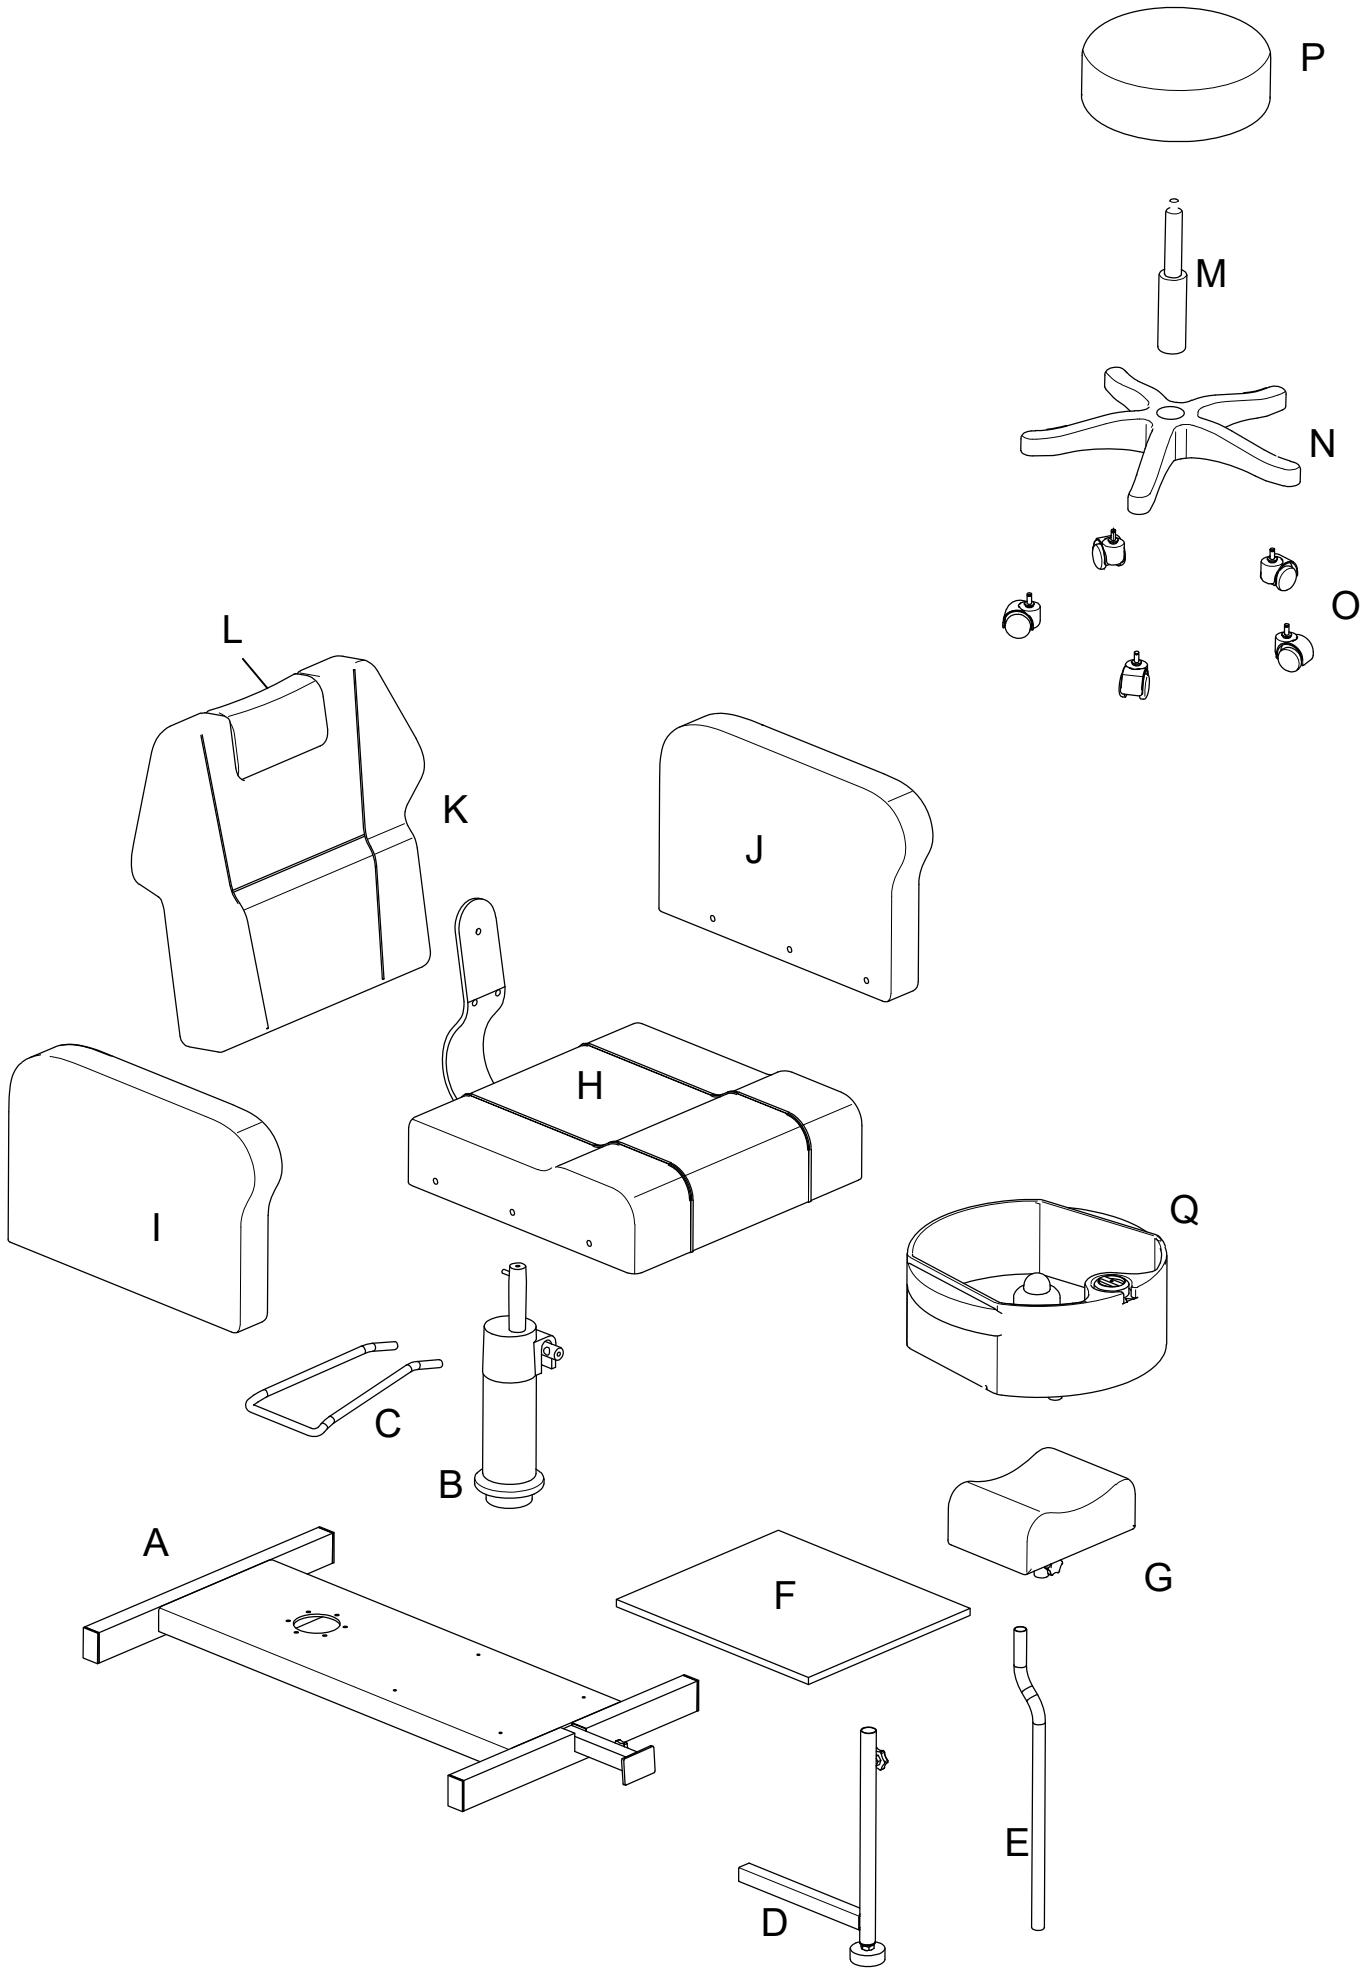


P
M
N
O
L
K
J
H
I
Q
C
B
A
F
G
E
D

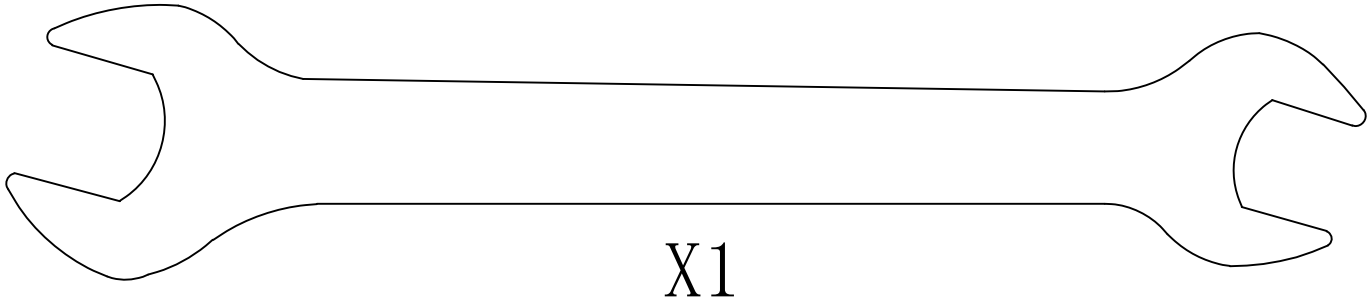

X1

12-10 Open end wrench




X1

M4 Hexagon wrench with a cross




X1

M5 Hexagon wrench with a cross

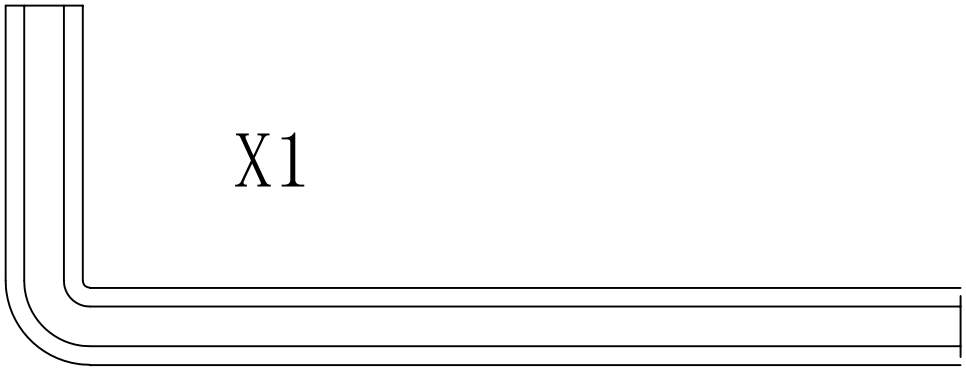

X1

M6 Hexagon wrench with a cross

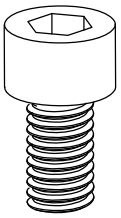


X6

M6x12 Hexagon socket bolt




X4

Φ5x16 screw

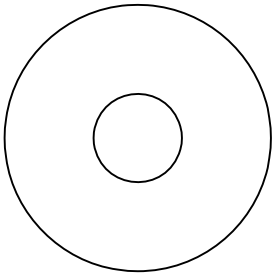


X6

Φ24xΦ8x2 gasket

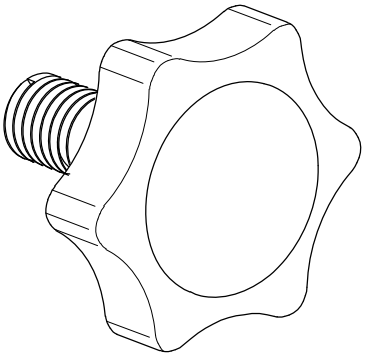


X2

M8 knob

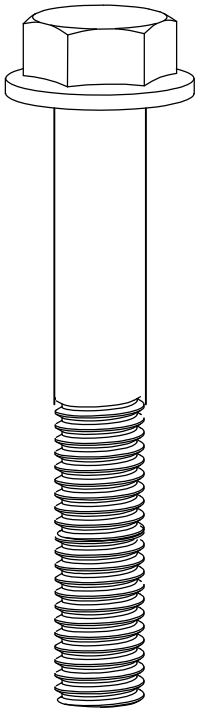

X6


M8x55 bolt

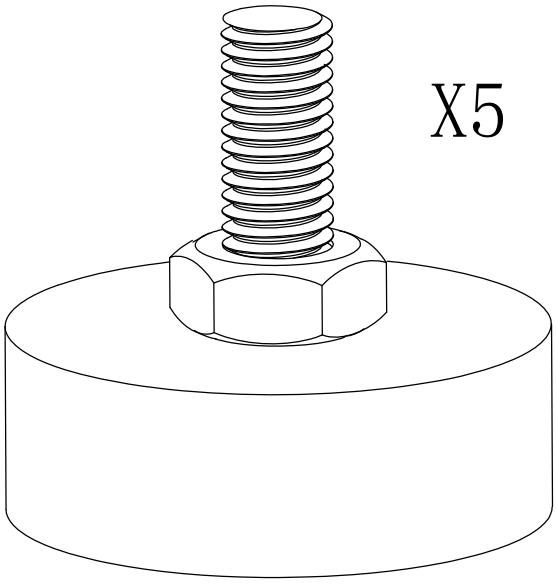


X5

Foot pads

1

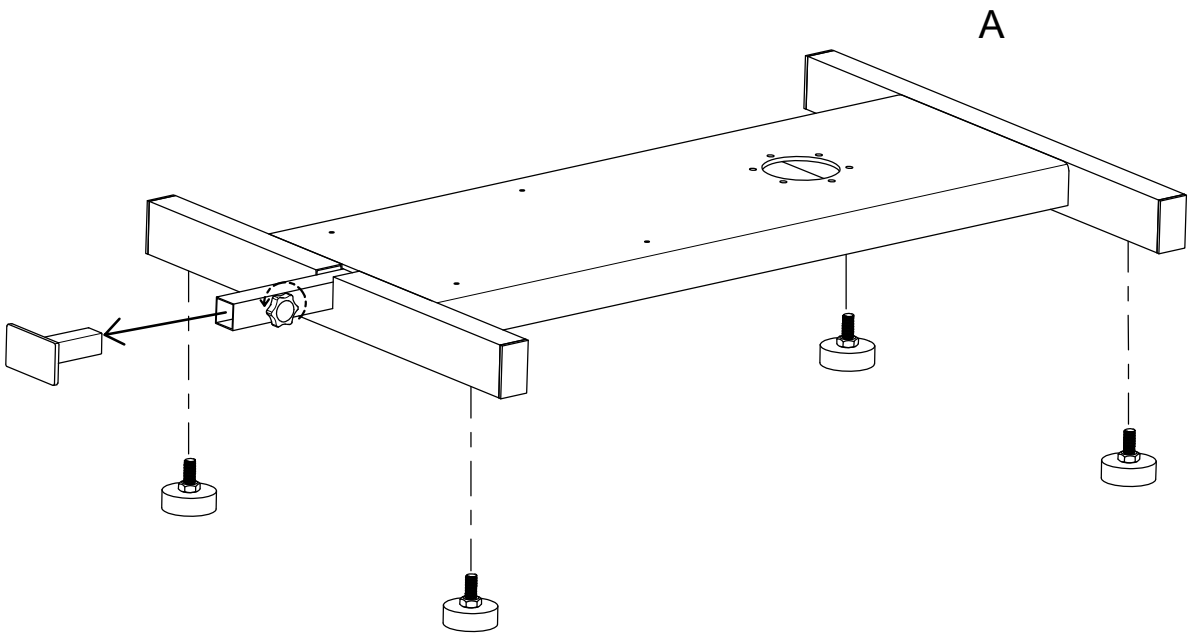


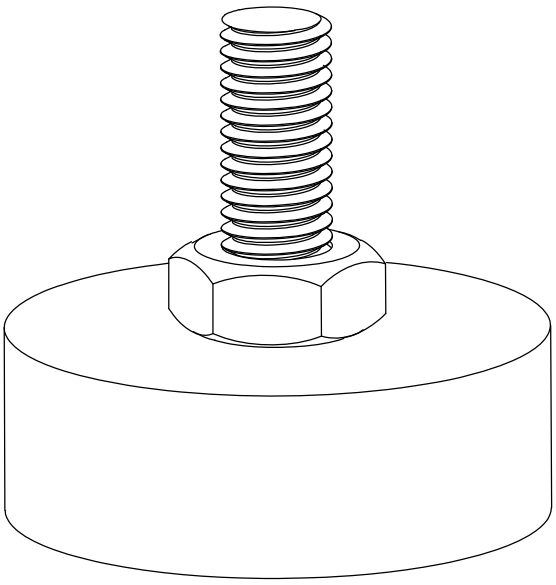


X4


Foot pads


2

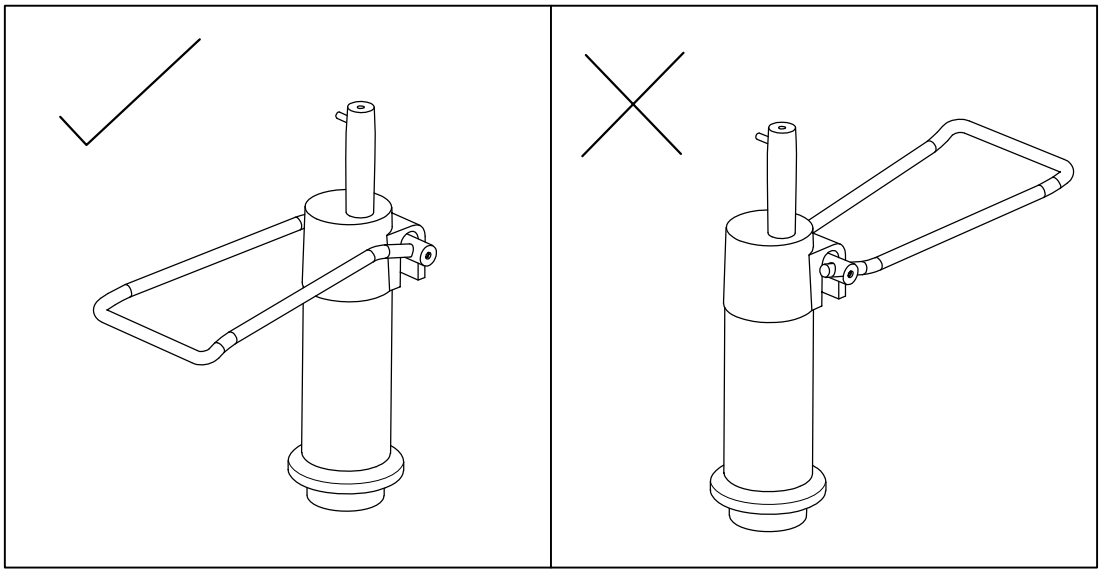

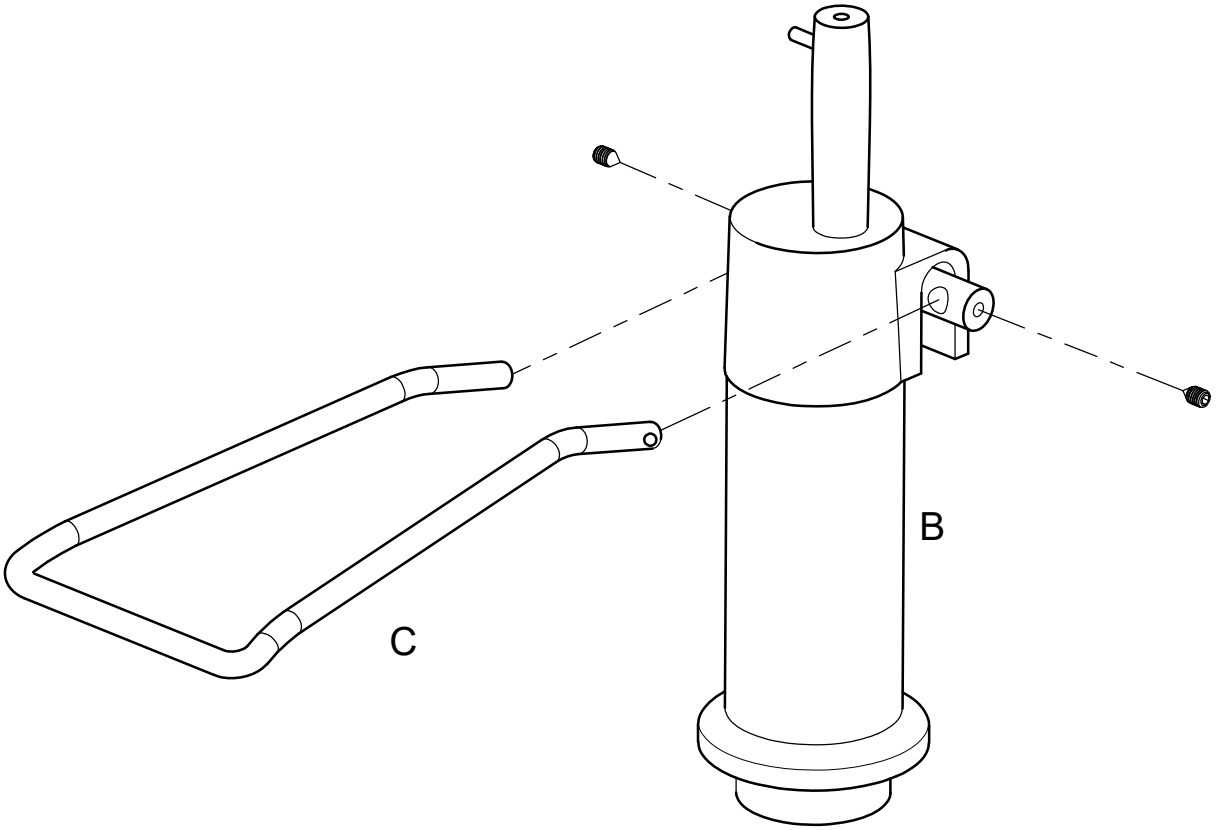


3

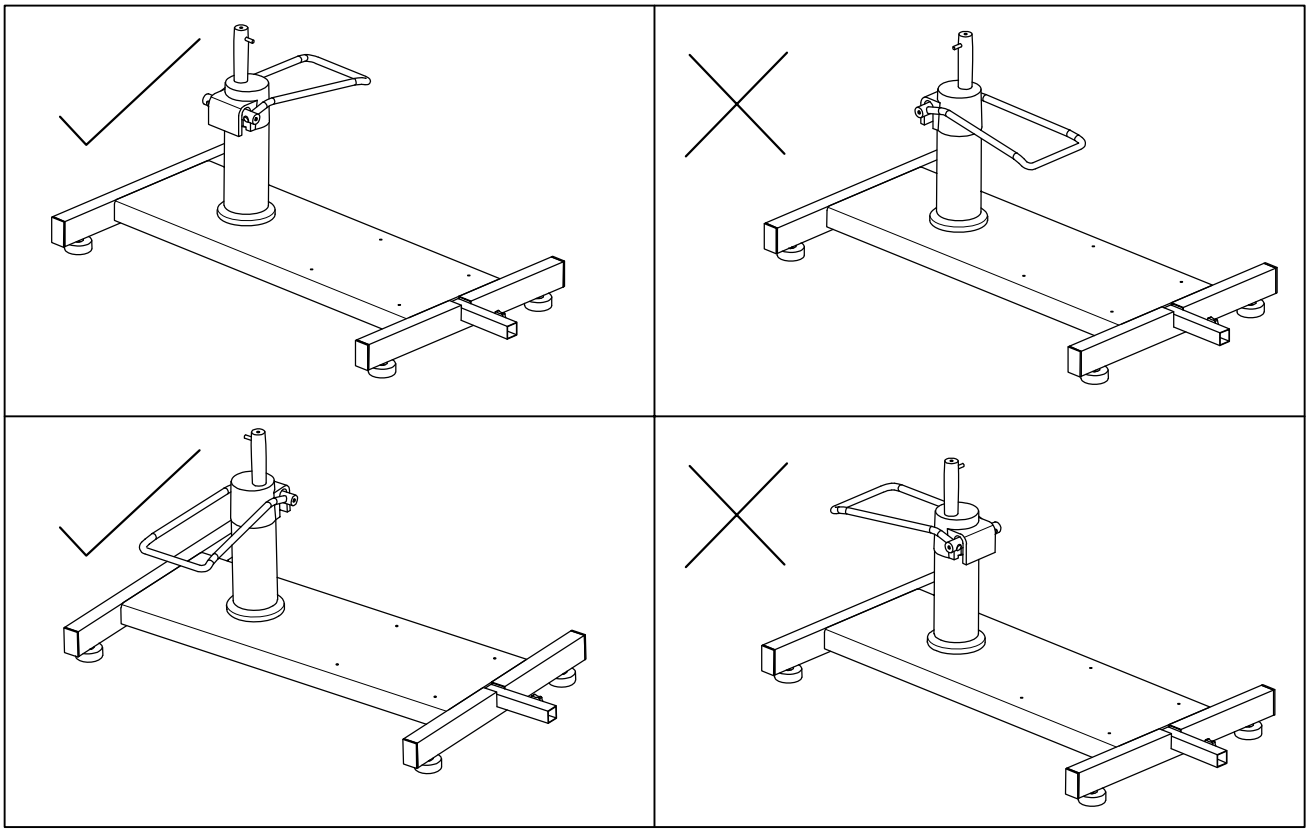


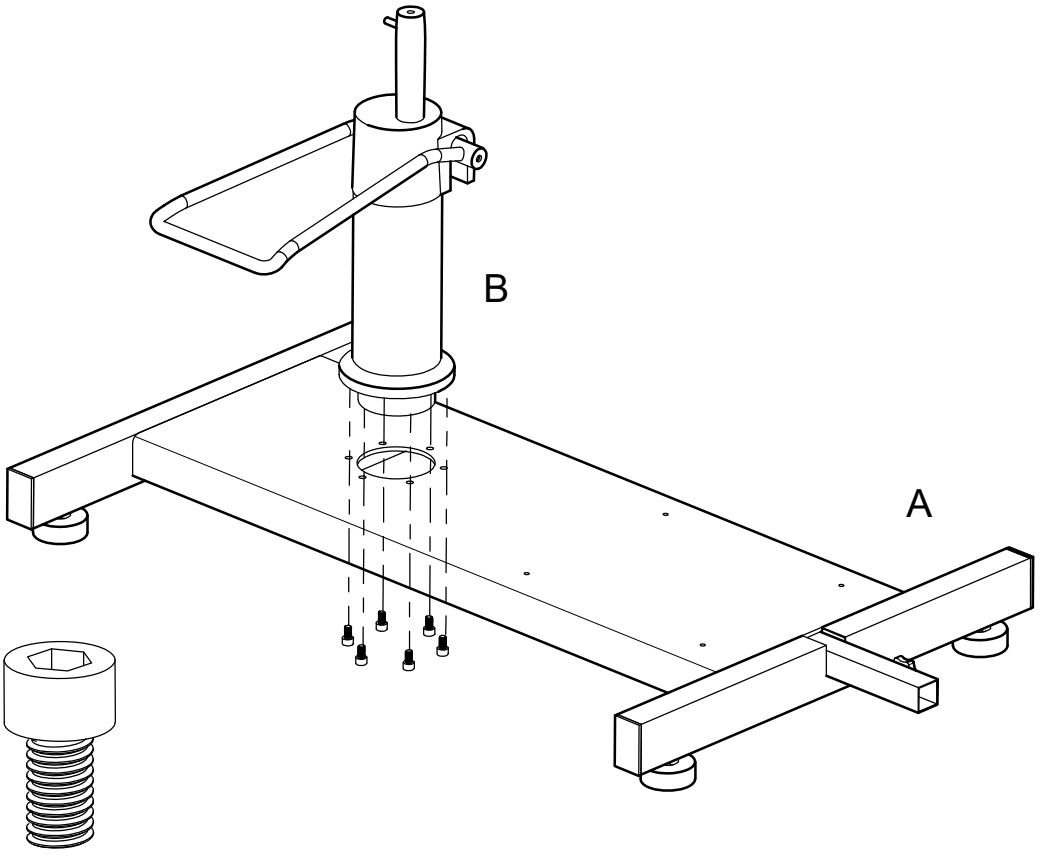

M6x12 Hexagon
socket bolt

4

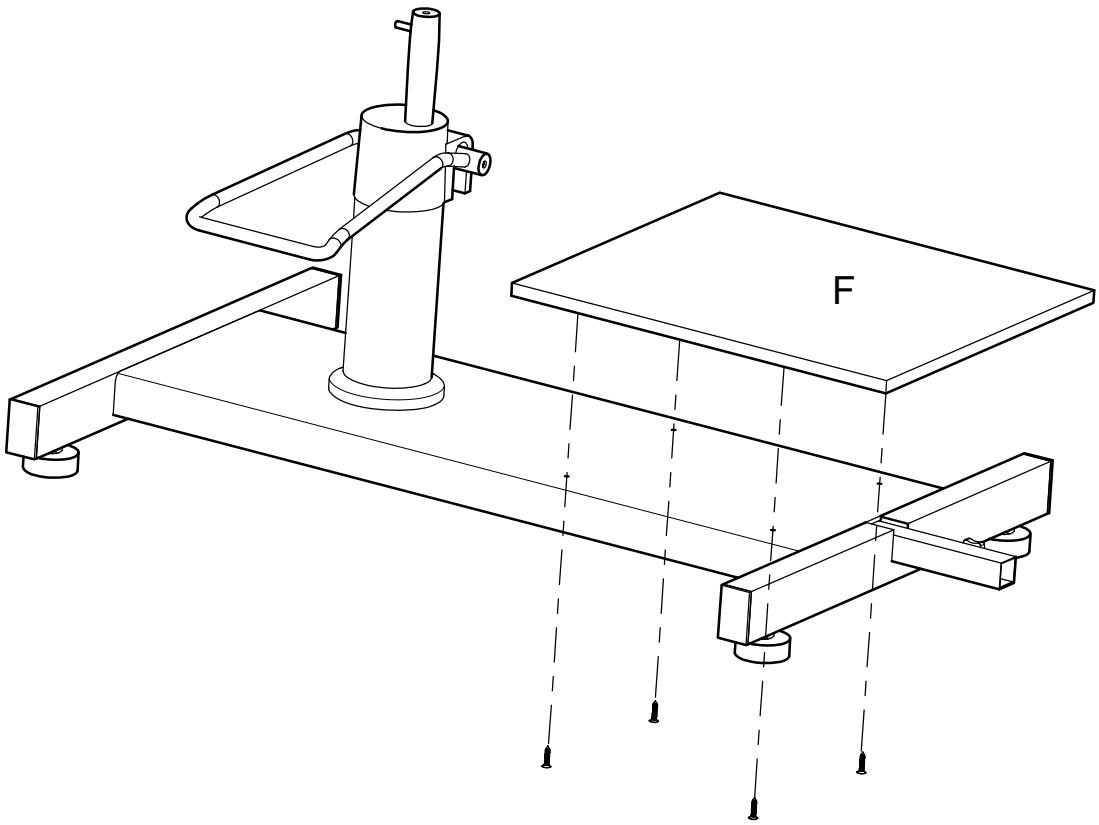




X4


Φ5x16 screw


5

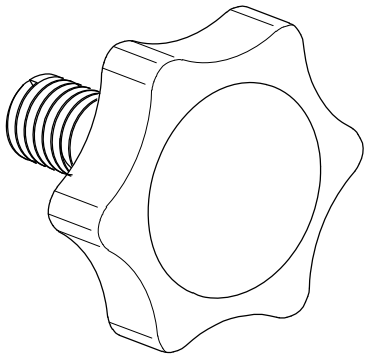

X1

M8 knob

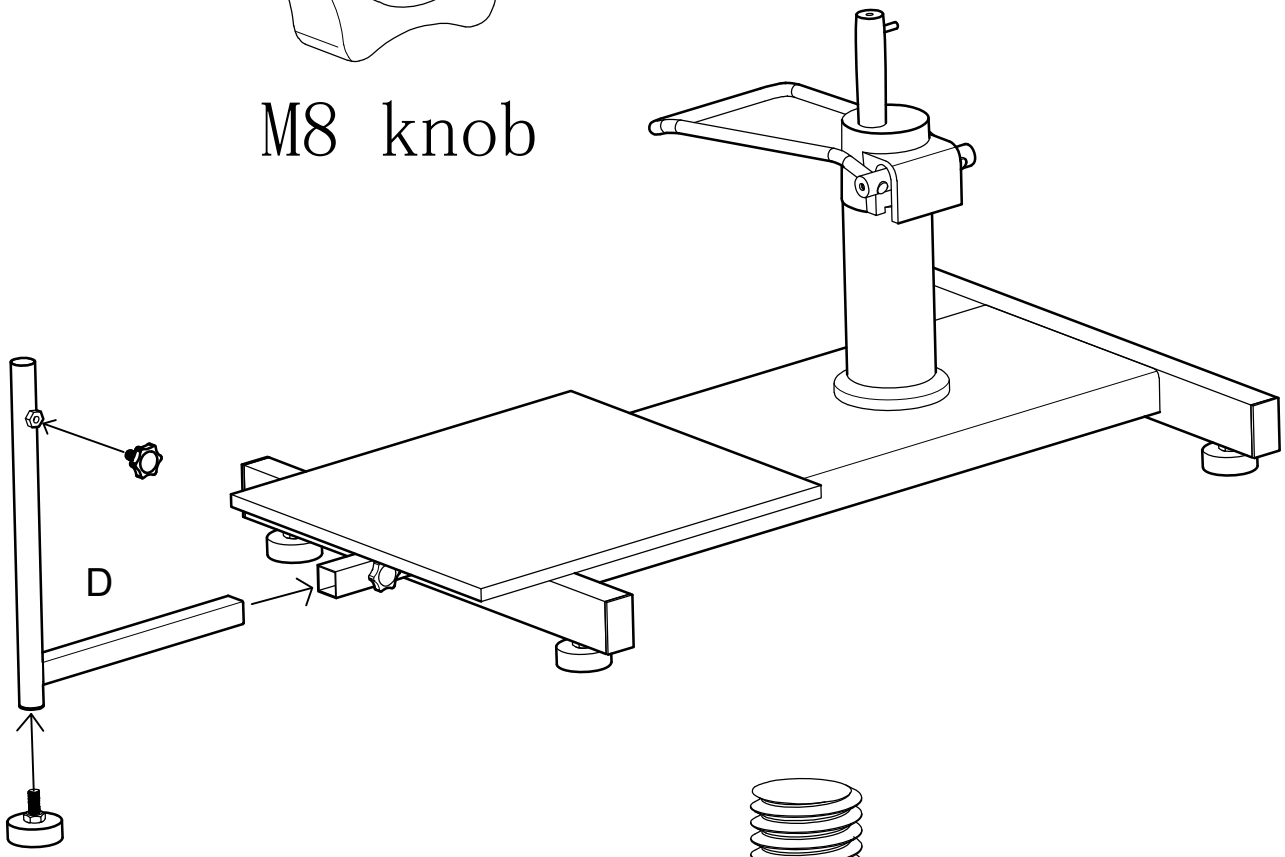


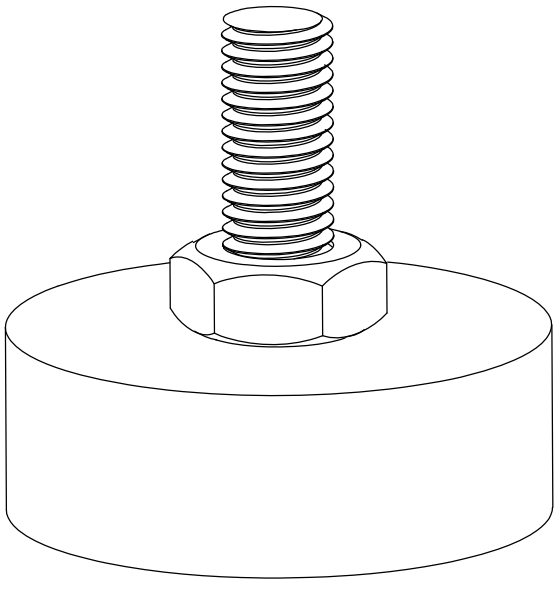

X1

Foot pads


6

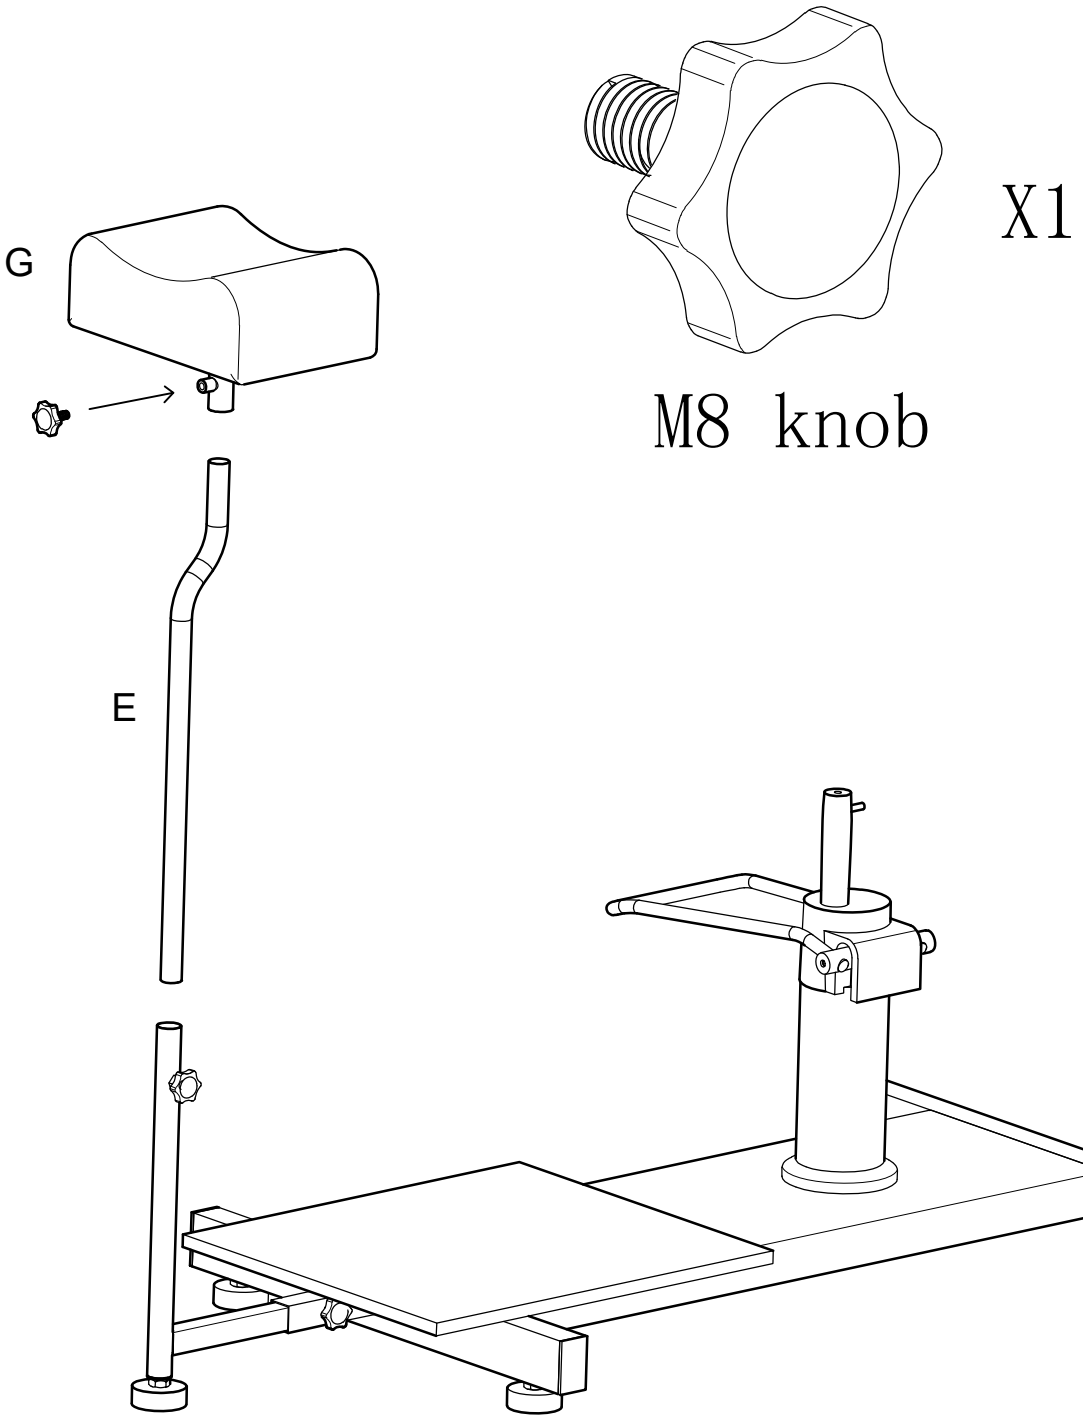


X1

M8 knob

7

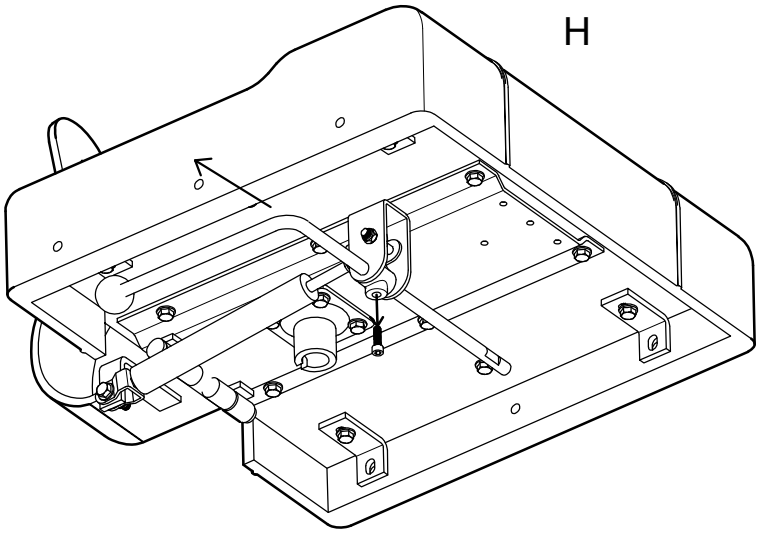



Loosen the bolts and pull out the handle.

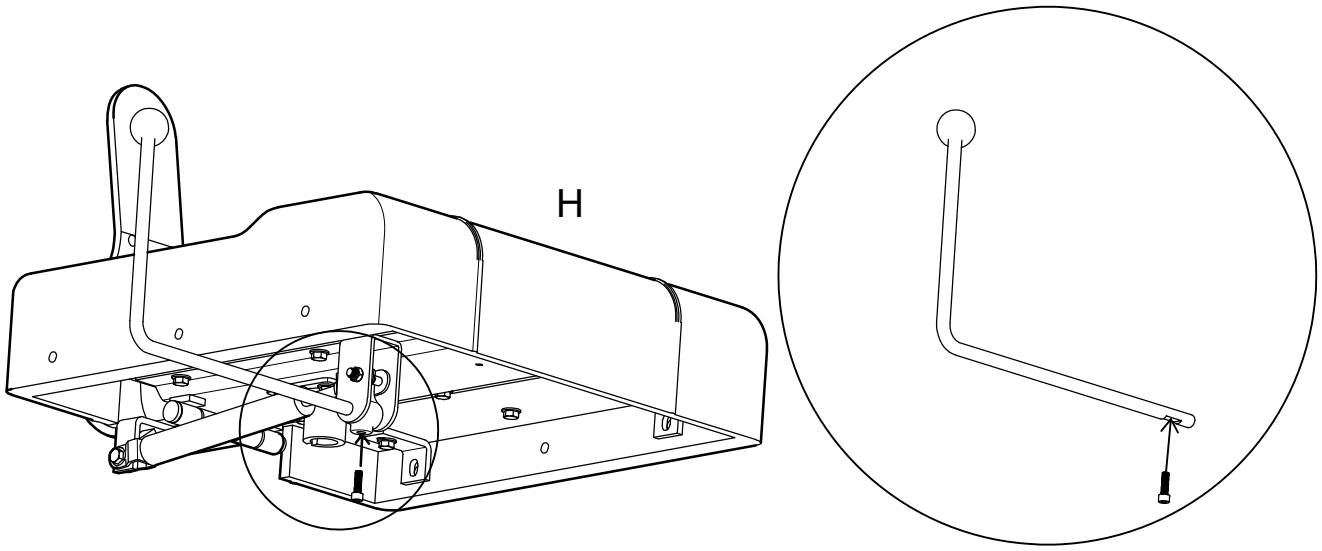


The lever is moved to the appropriate position and the bolt is fixed on the card slot.

8

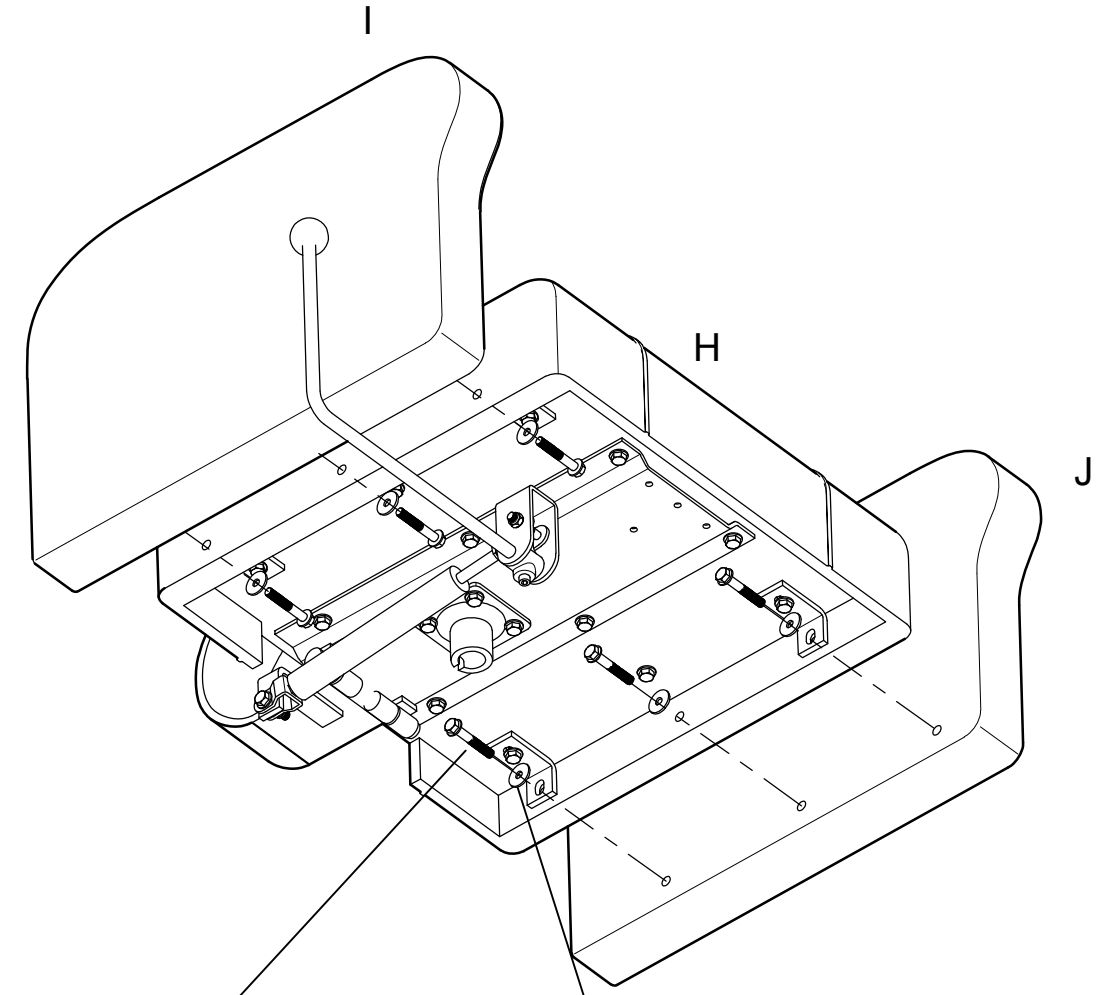

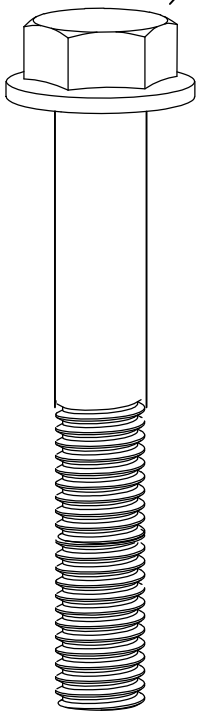

X6

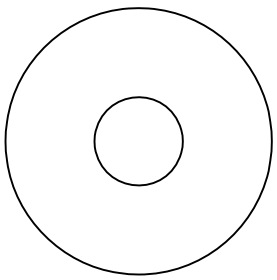


X6


M8x55 bolt


Φ24xΦ8x2 gasket

9

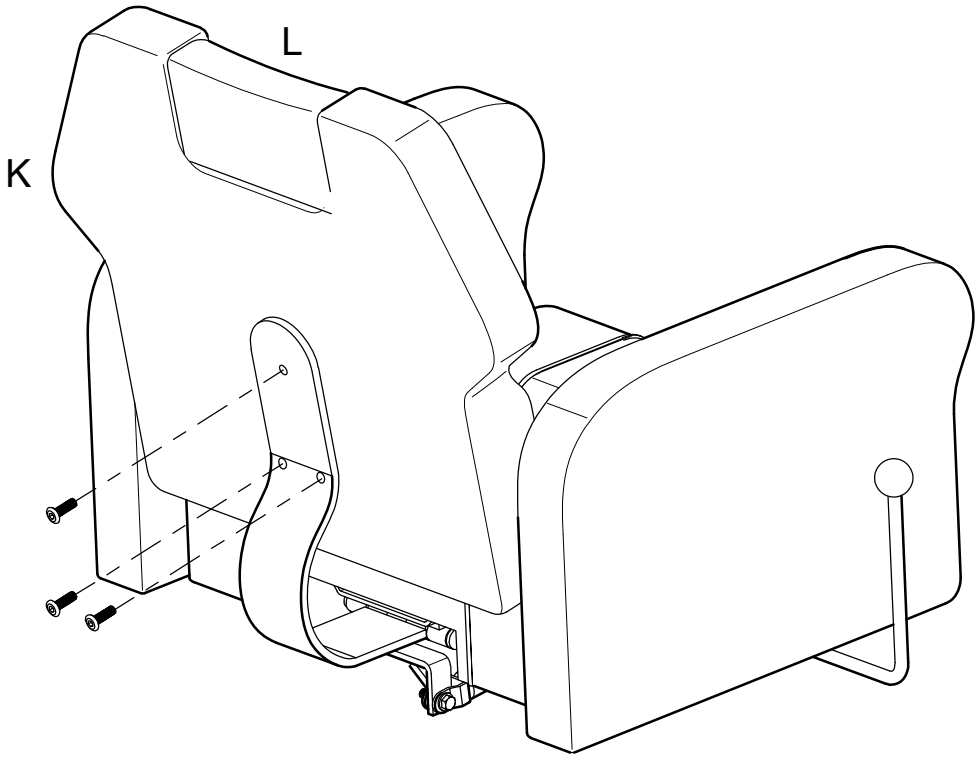


10

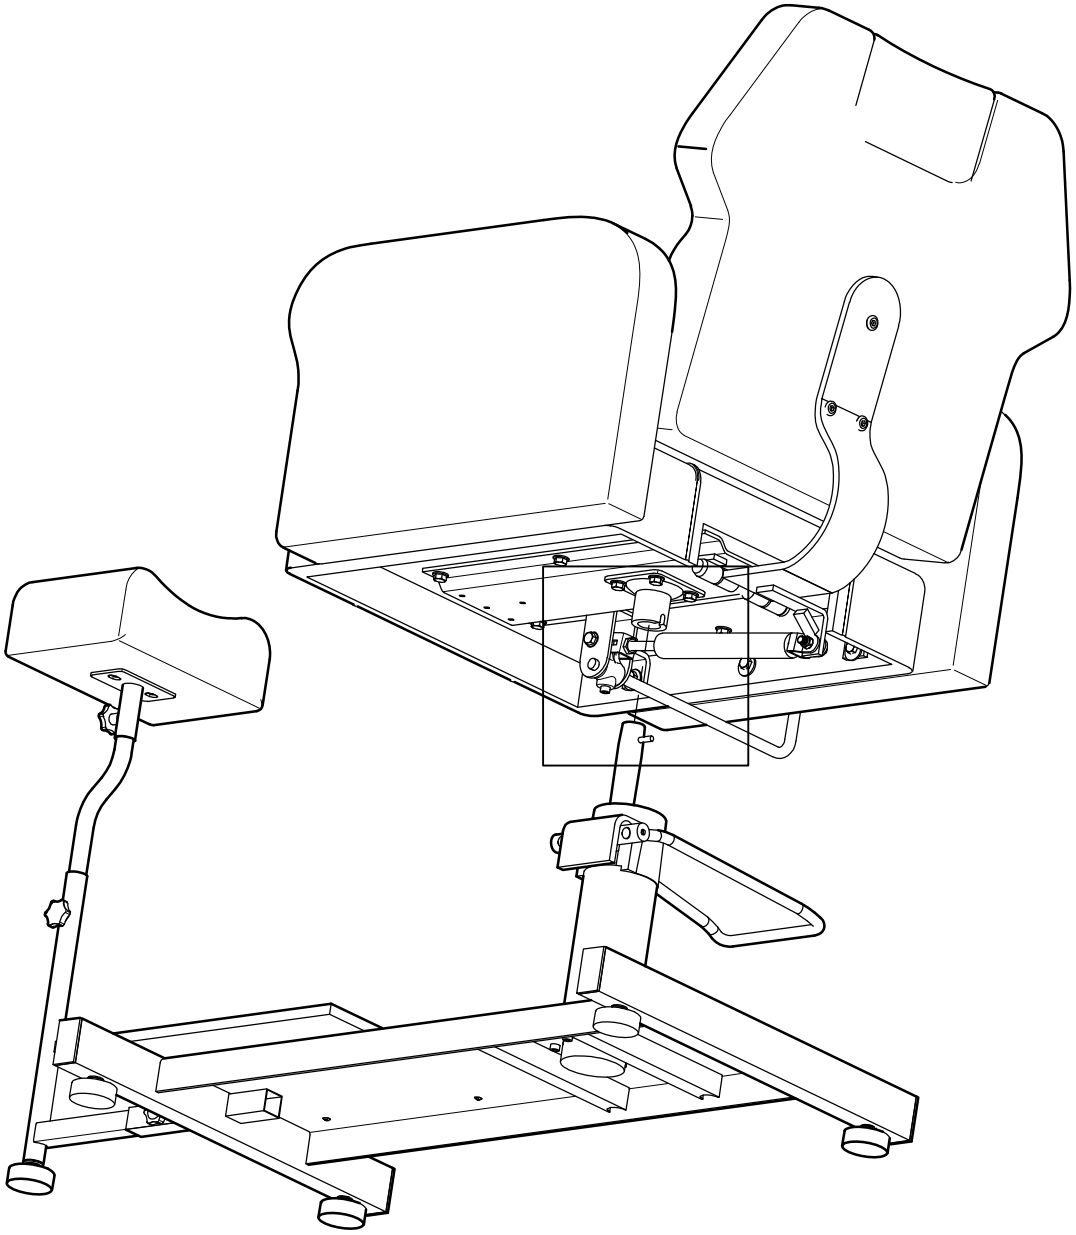


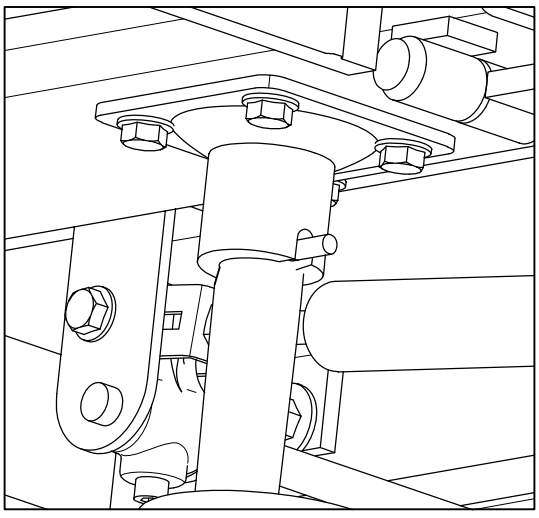


11

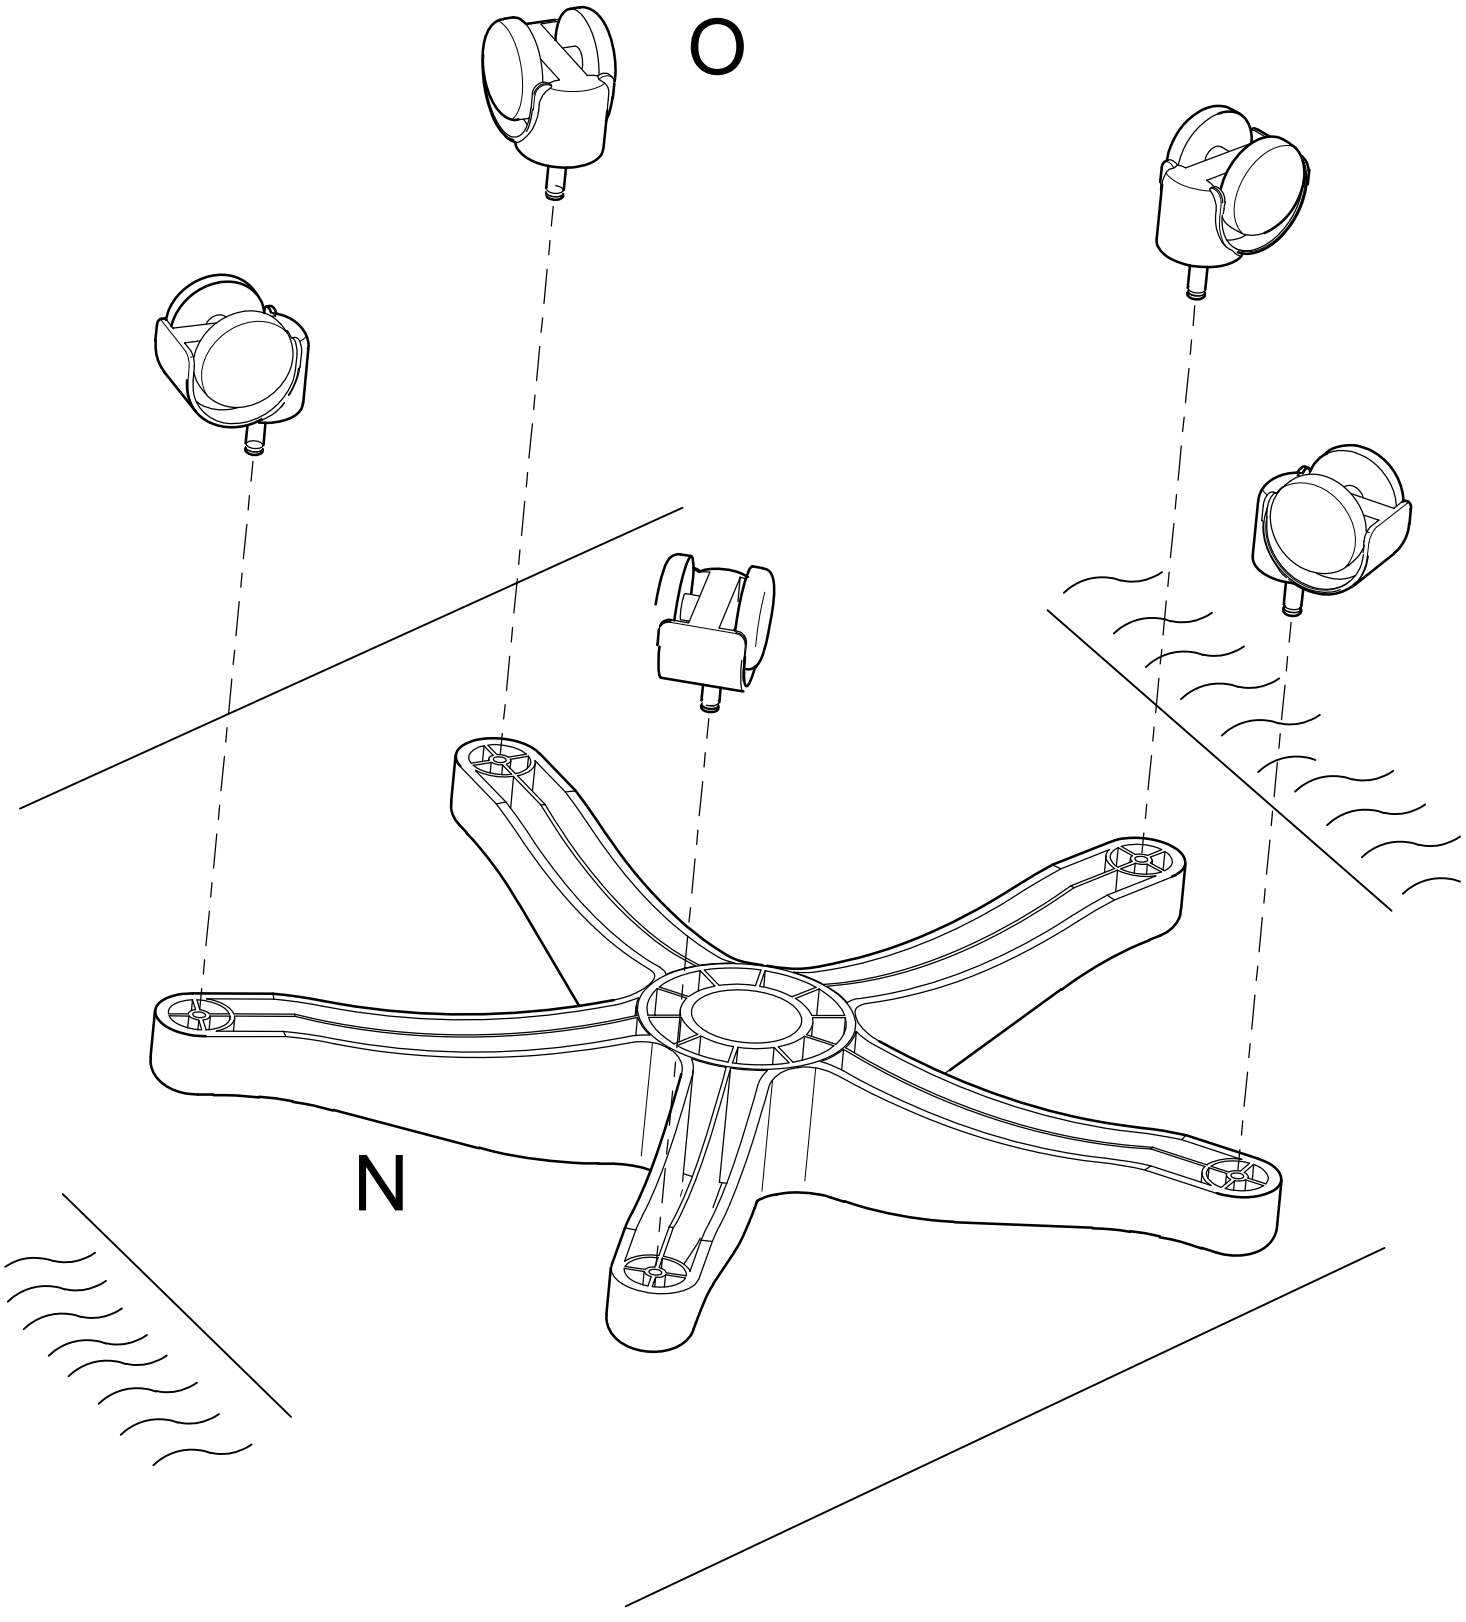

12

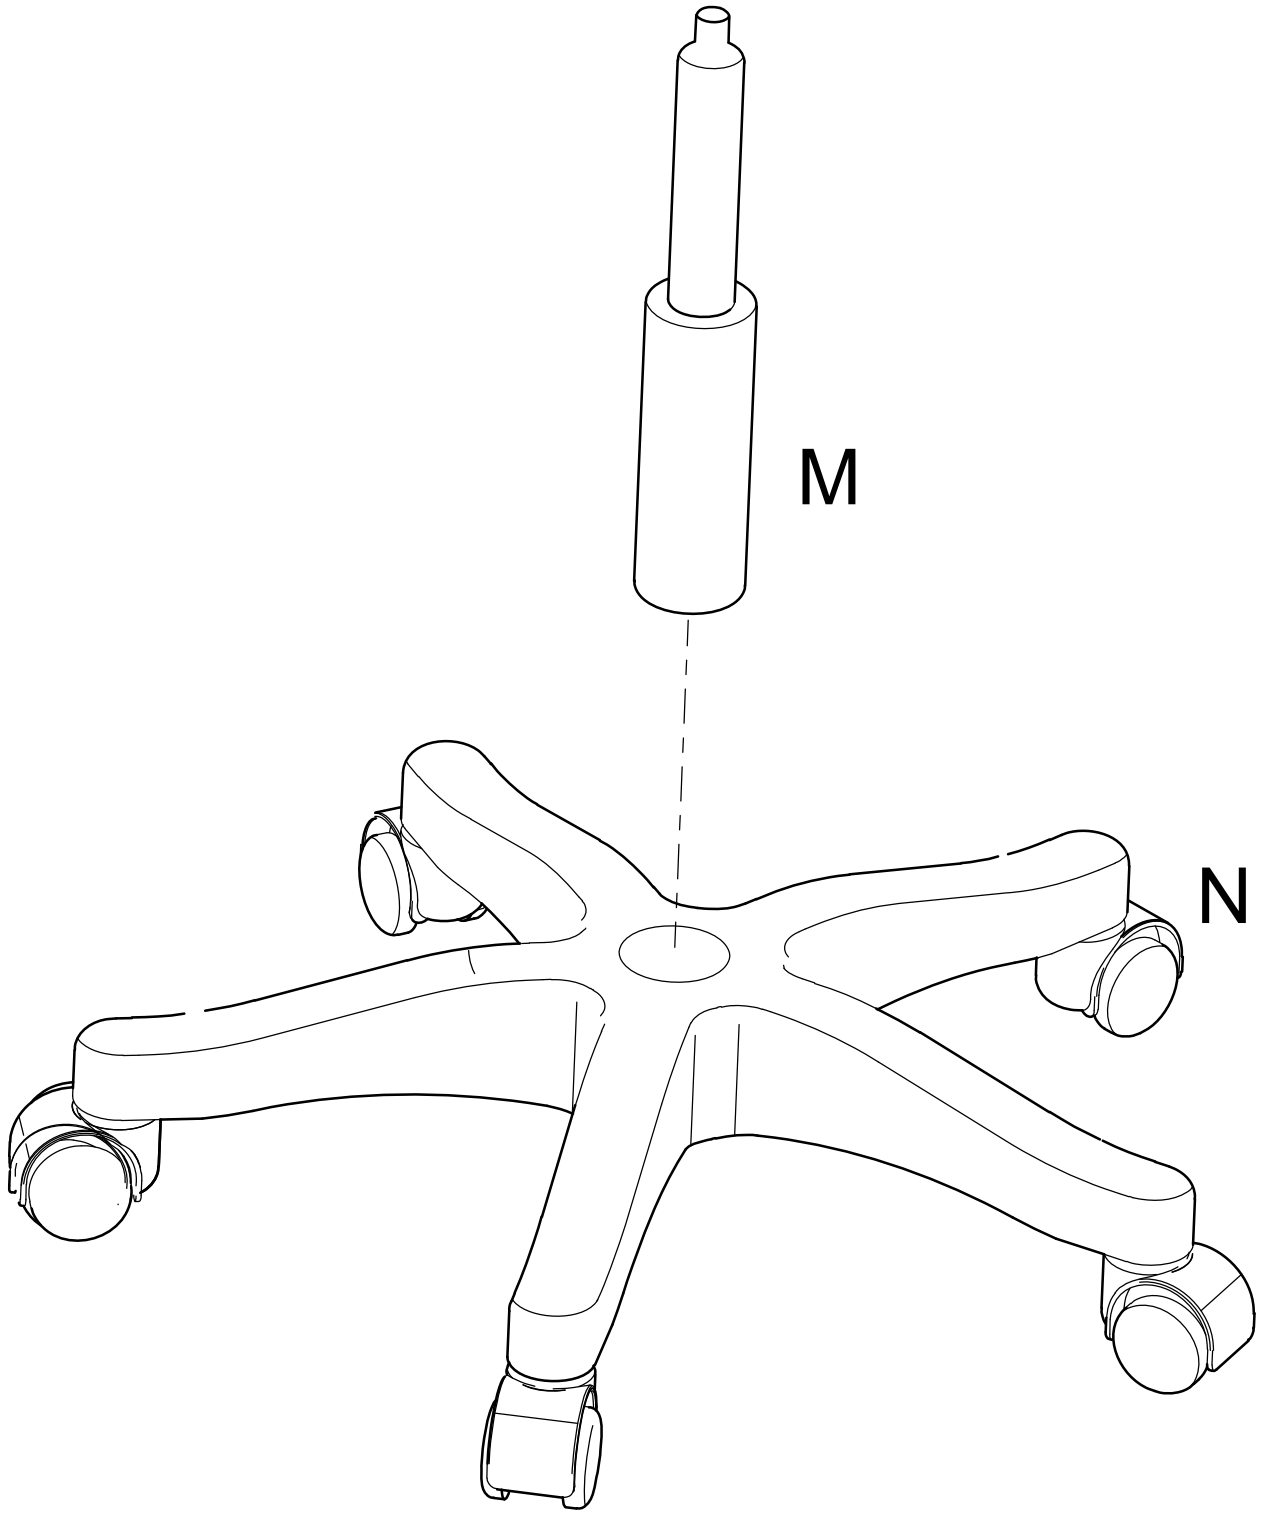

13

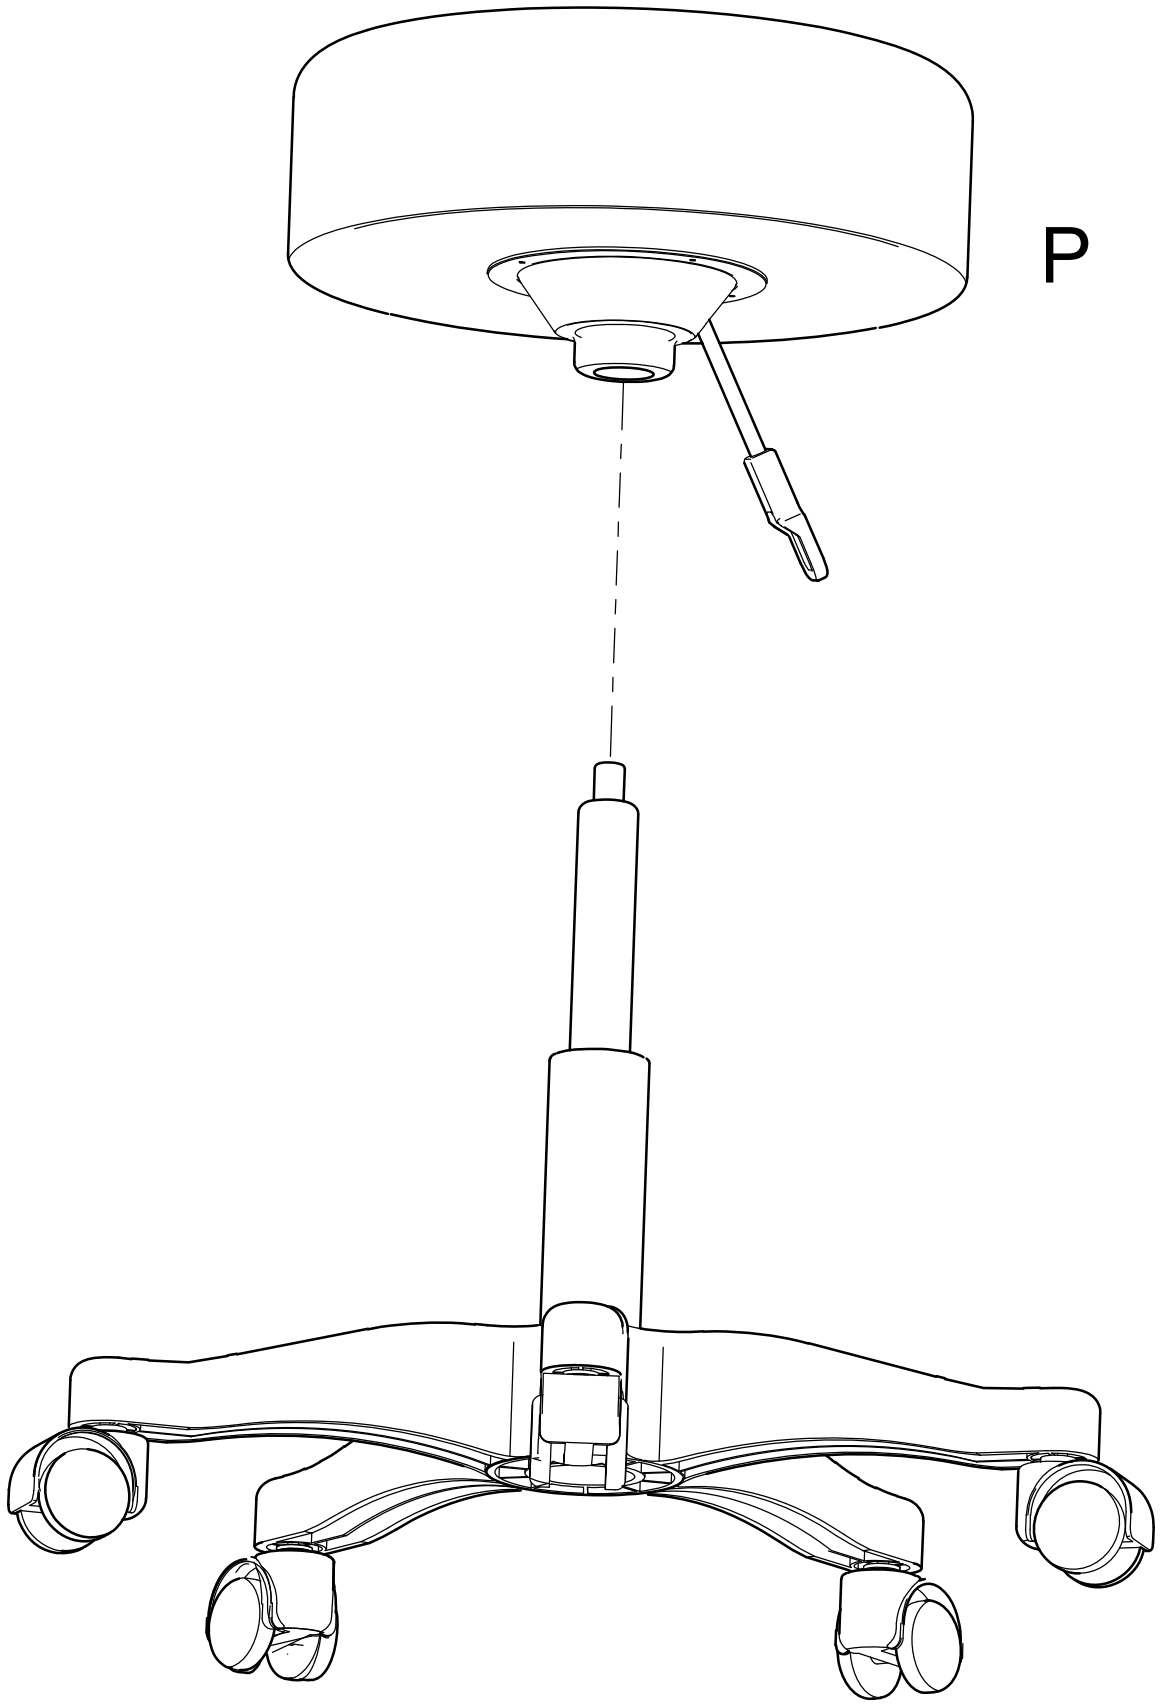

14

