


INSTALLATION STEPS



1 Clean Glass



2 Spray a little soapy water on glass

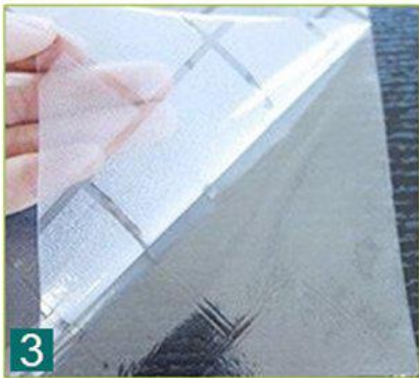

3 Remove transparent protective film



4 Apply film to glass



5 Squeegee away water and air bubbles



6 Cut off margins