



POSITION & PARTS NUMBER

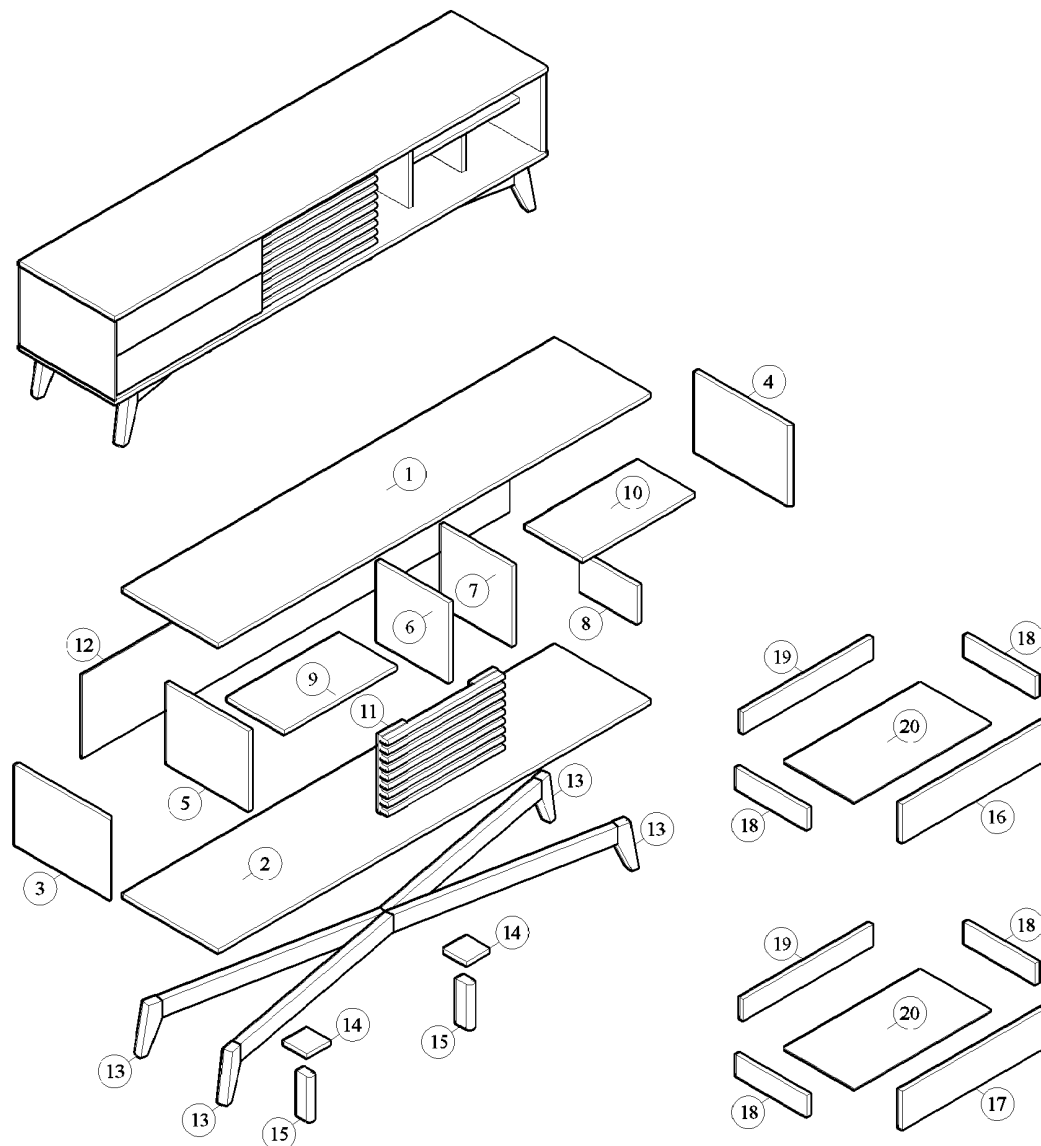


	ACCESSORIES	QUANTITY
A	 MINIFIX M5x24MM	7 PCS
B	 MINIFIX CASING	7 PCS
C	 WOOD DOWEL M8x30MM	32 PCS
D	 SCREW M3.5x16MM	4 PCS
E	 SCREW M4x28MM	8 PCS
F	 SCREW M4x38MM	16 PCS
G	 SCREW M6x50MM	7 PCS
H	 SCREW M7x50MM	8 PCS
I	 SCREW M7x70MM	20 PCS
J	 POWER PIN	20 PCS
K	 WHITE LEG PIN	6 PCS
L	 DRAWER SLIDE 12" SCREW M3.5x12MM	2 SETS 24 PCS
M	 PUSH MAGNET SCREW M3.5x16MM	2 SETS 8 PCS
N	 388 SLIDING ROLLER SCREW M3x12MM	2 SETS 16 PCS
O	 ALUMINIUM V RAIL	1 PC
P	 ALLEN KEY	1 PC

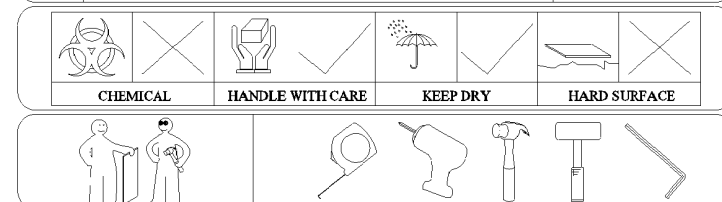


START ASSEMBLY

STEP 1

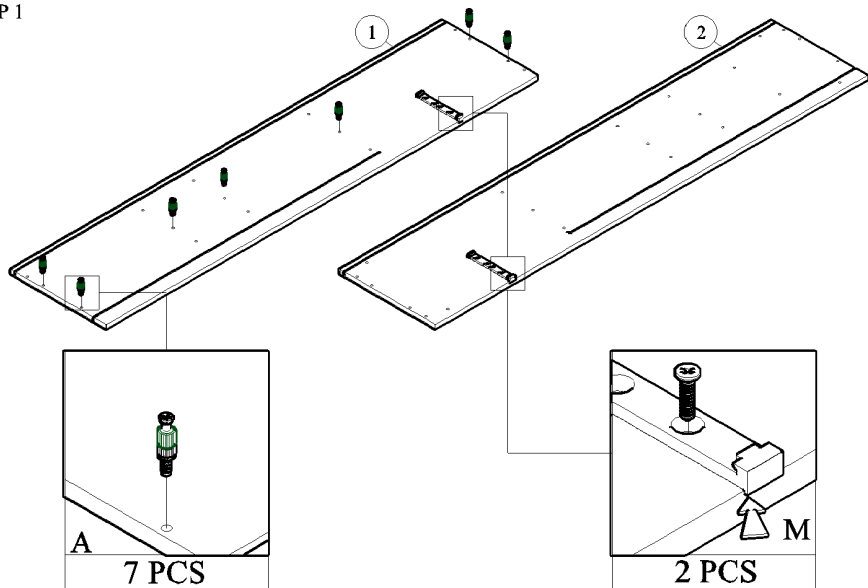


STEP 2

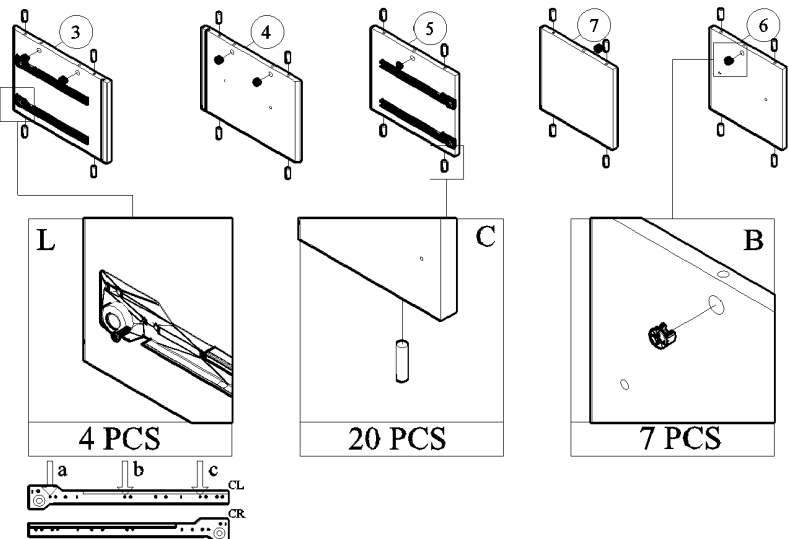


Tie Drawer Slide using screws in holes a, b and c.
CL is for the left side and CR is for the right side.


STEP 3

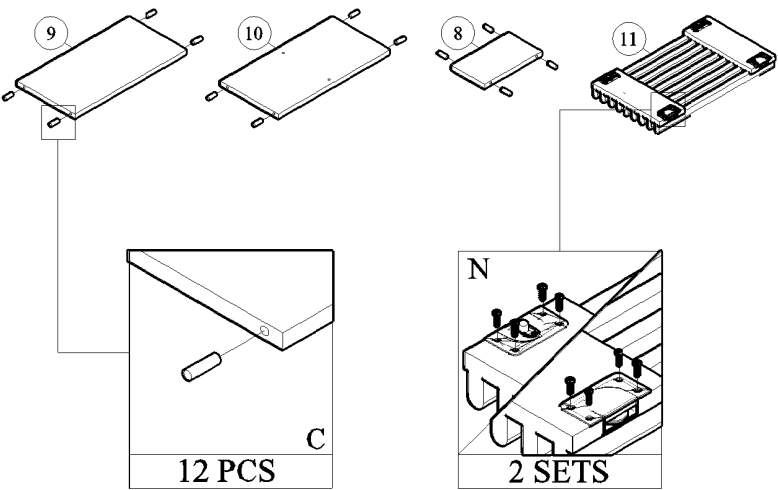


STEP 4

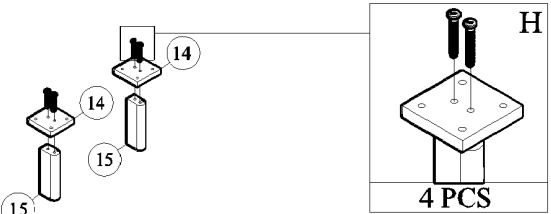


STEP 5

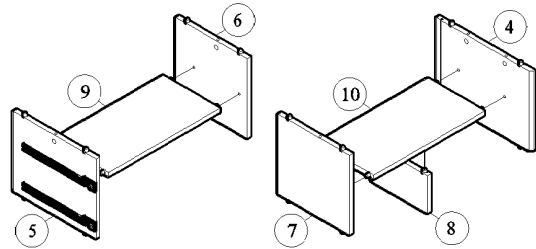


STEP 6

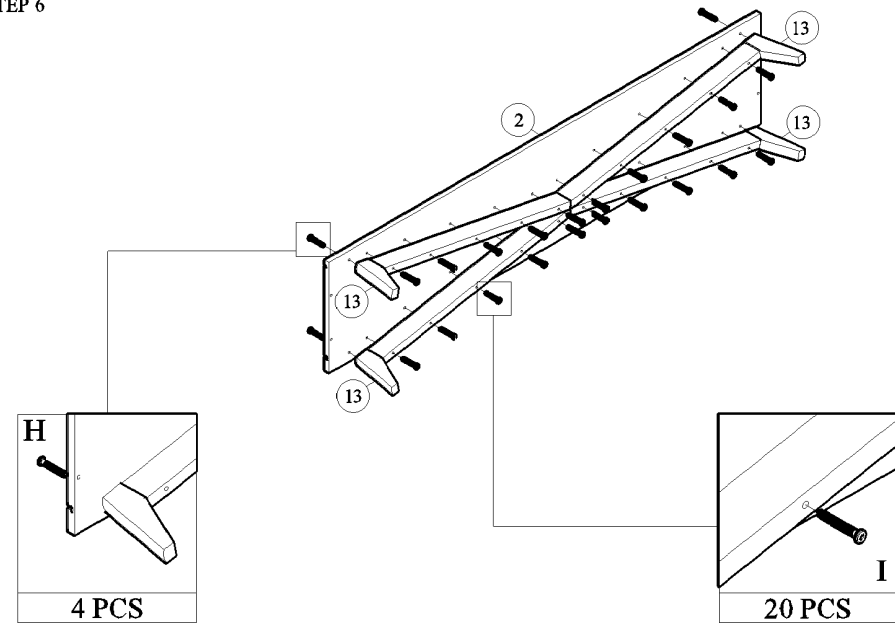


STEP 7

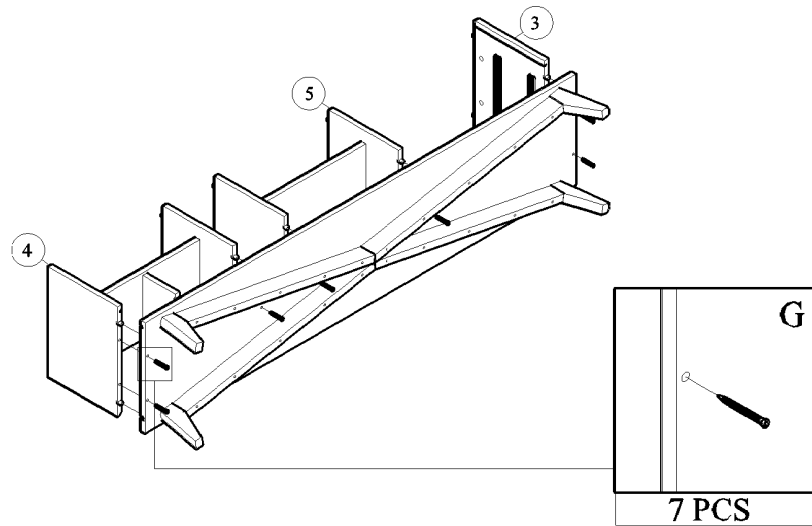


STEP 8

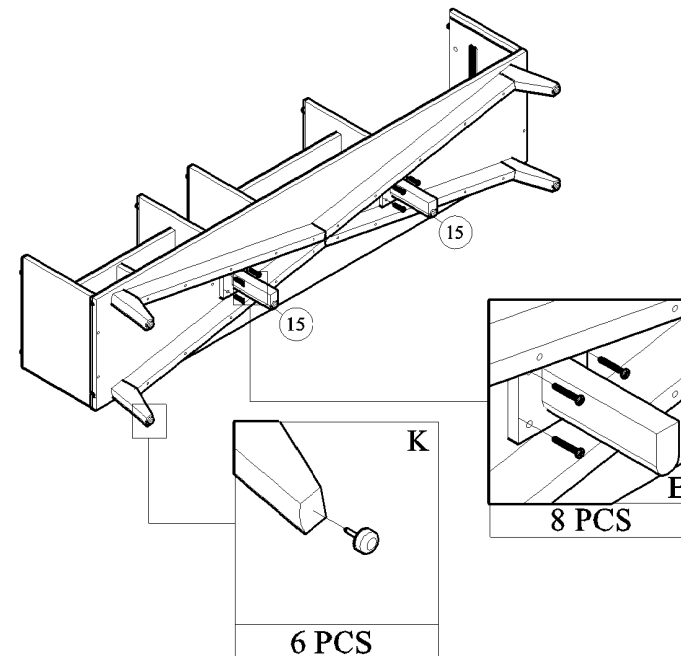


STEP 9

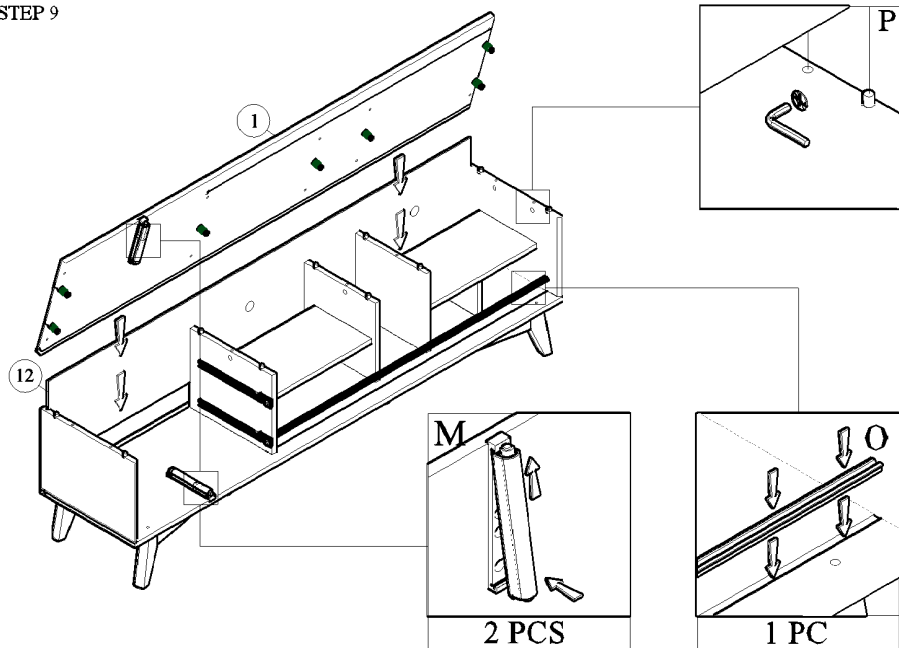


STEP 10

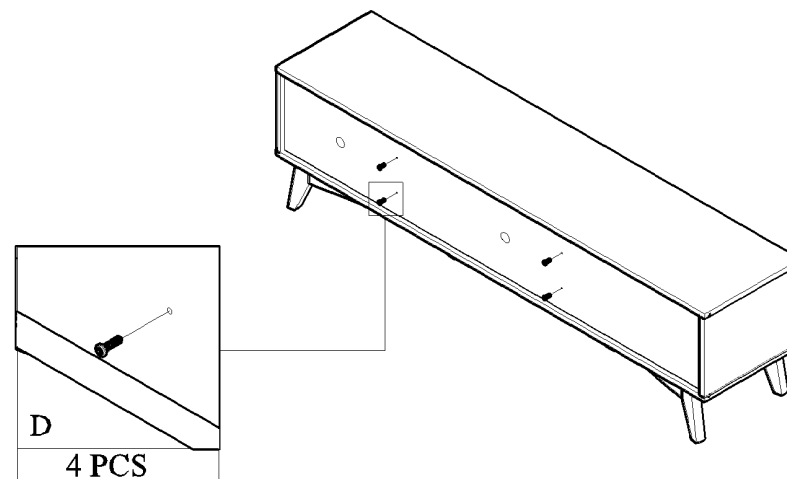


STEP 11

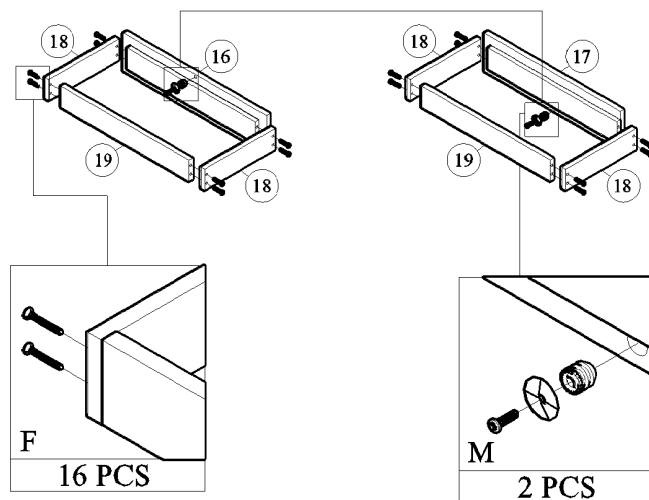

STEP 12

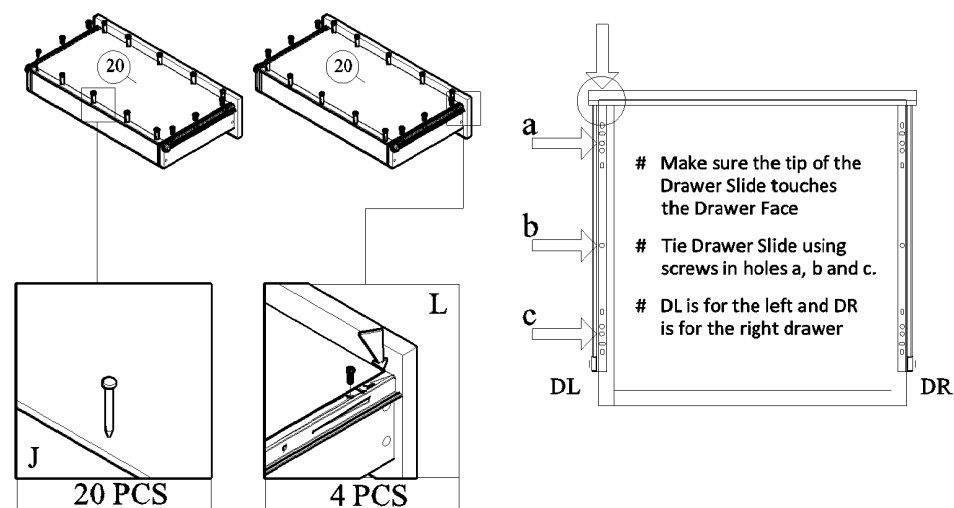

STEP 13

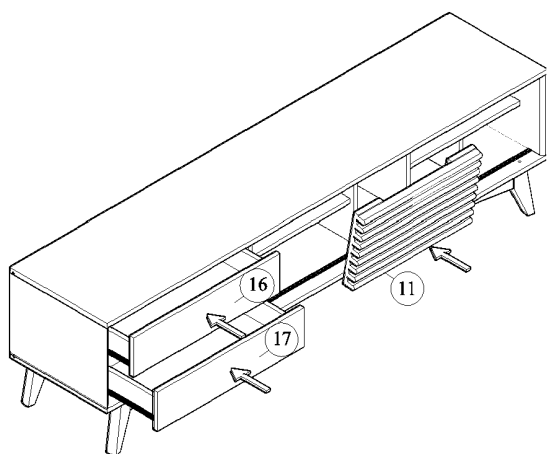

COMPLETED

