








CHICKEN COOPS INSTRUCTIONS


SKU:ZYPC001201

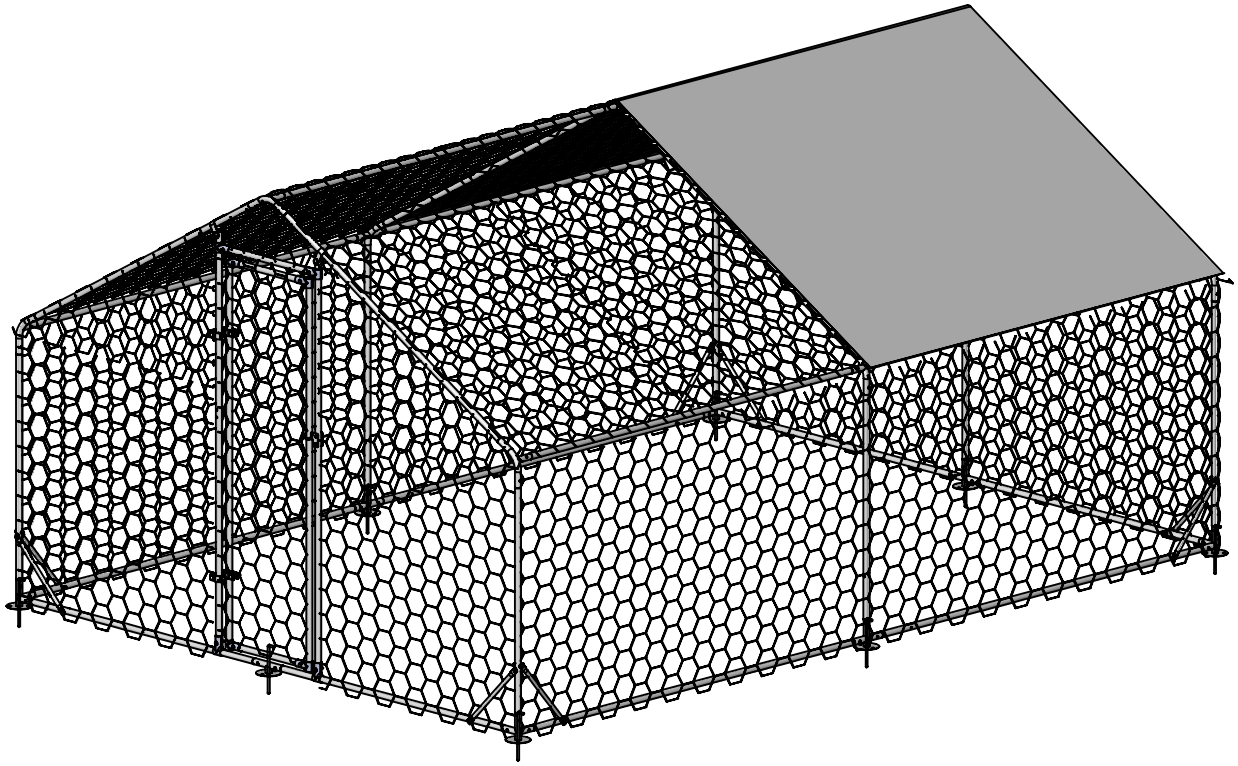


1.Recommend multiple people to assemble.
2.Do not over torque screws an bolts.
3.Do not install on flammable place in case of fire.
4.Use on a flat ground.
5.Gloves must be worn during assembly.

IMPORTANT.RETAIN FOR FUTURE REFERENCE


NO.	PIC	TYB	PCS
1		1364mm	4
2		1919mm	6
3		1919mm	4
4		1049mm	6
5		1505mm	6
6		1715mm	2
7		515mm	1
8		1881mm	1
9		1620mm	2
10		407mm	2
11		385mm	8

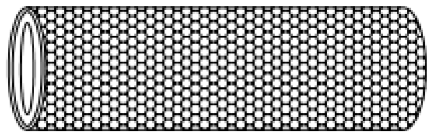


W 1

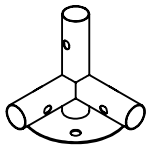


A1 2

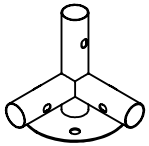


A2 2

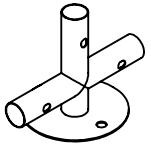


A3 3



A4 1



B1 5




B3 1




C 16



D 2



E1 2



E2 2




F1 1



F2 2




G 8

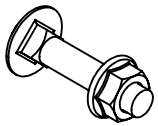

M8*40

L 6

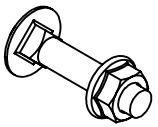

M6*40


K 26



R 12



S 1

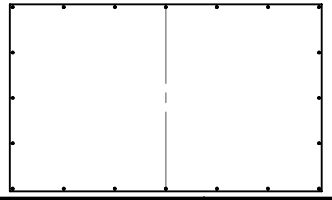


JP 1




U 1




Z 1

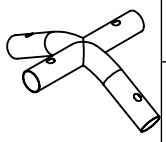


B2 3

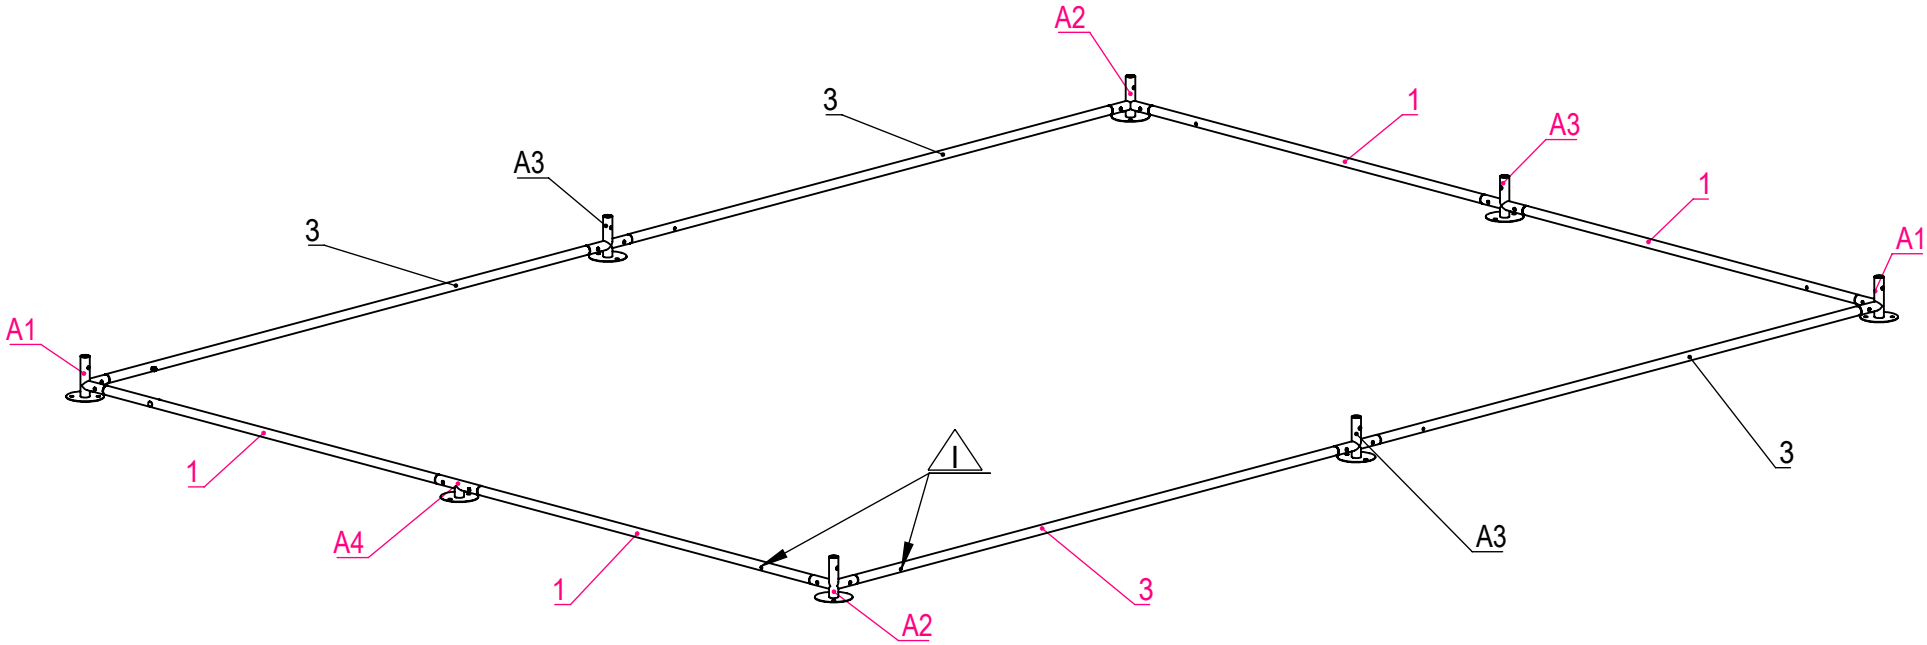

NO.	PCS
A1	2
A2	2
A3	3
A4	1
1	4
3	4

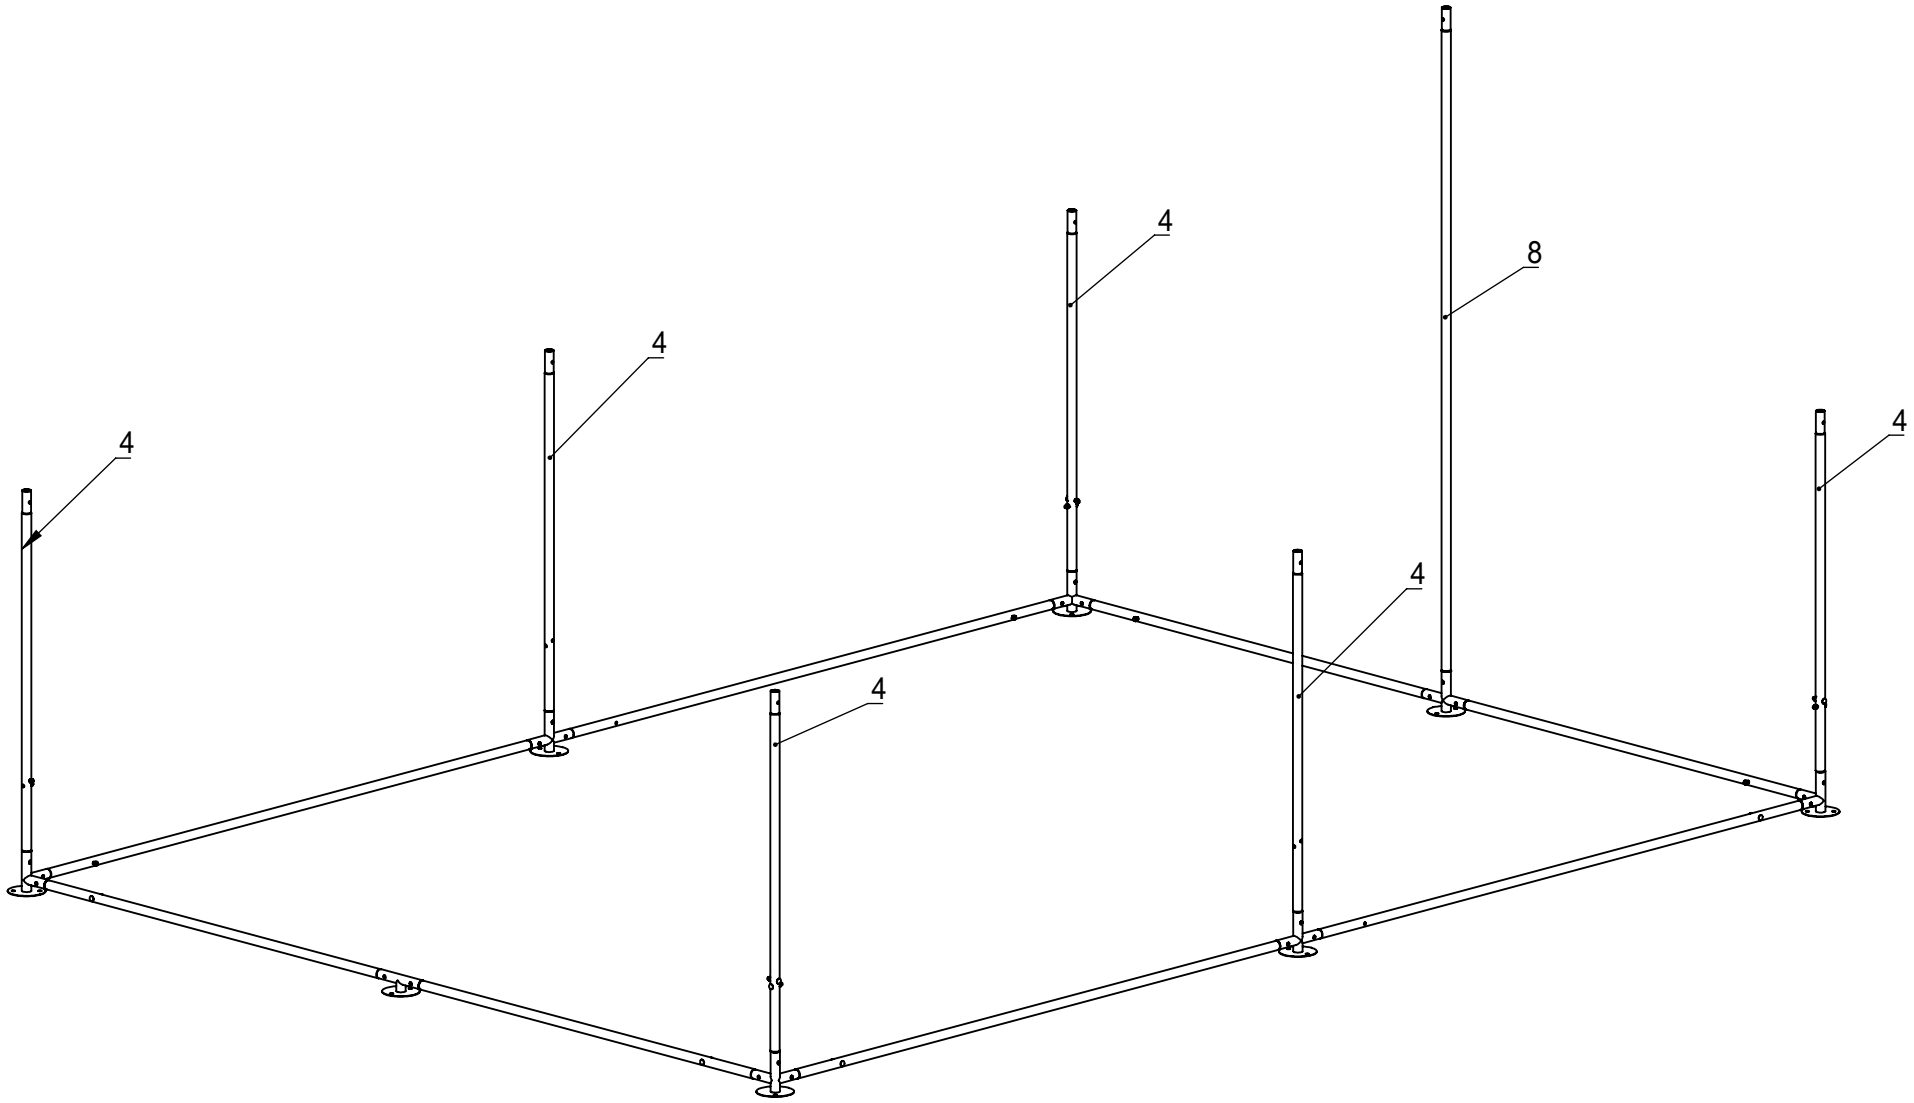


NO.	PCS
4	6
8	1

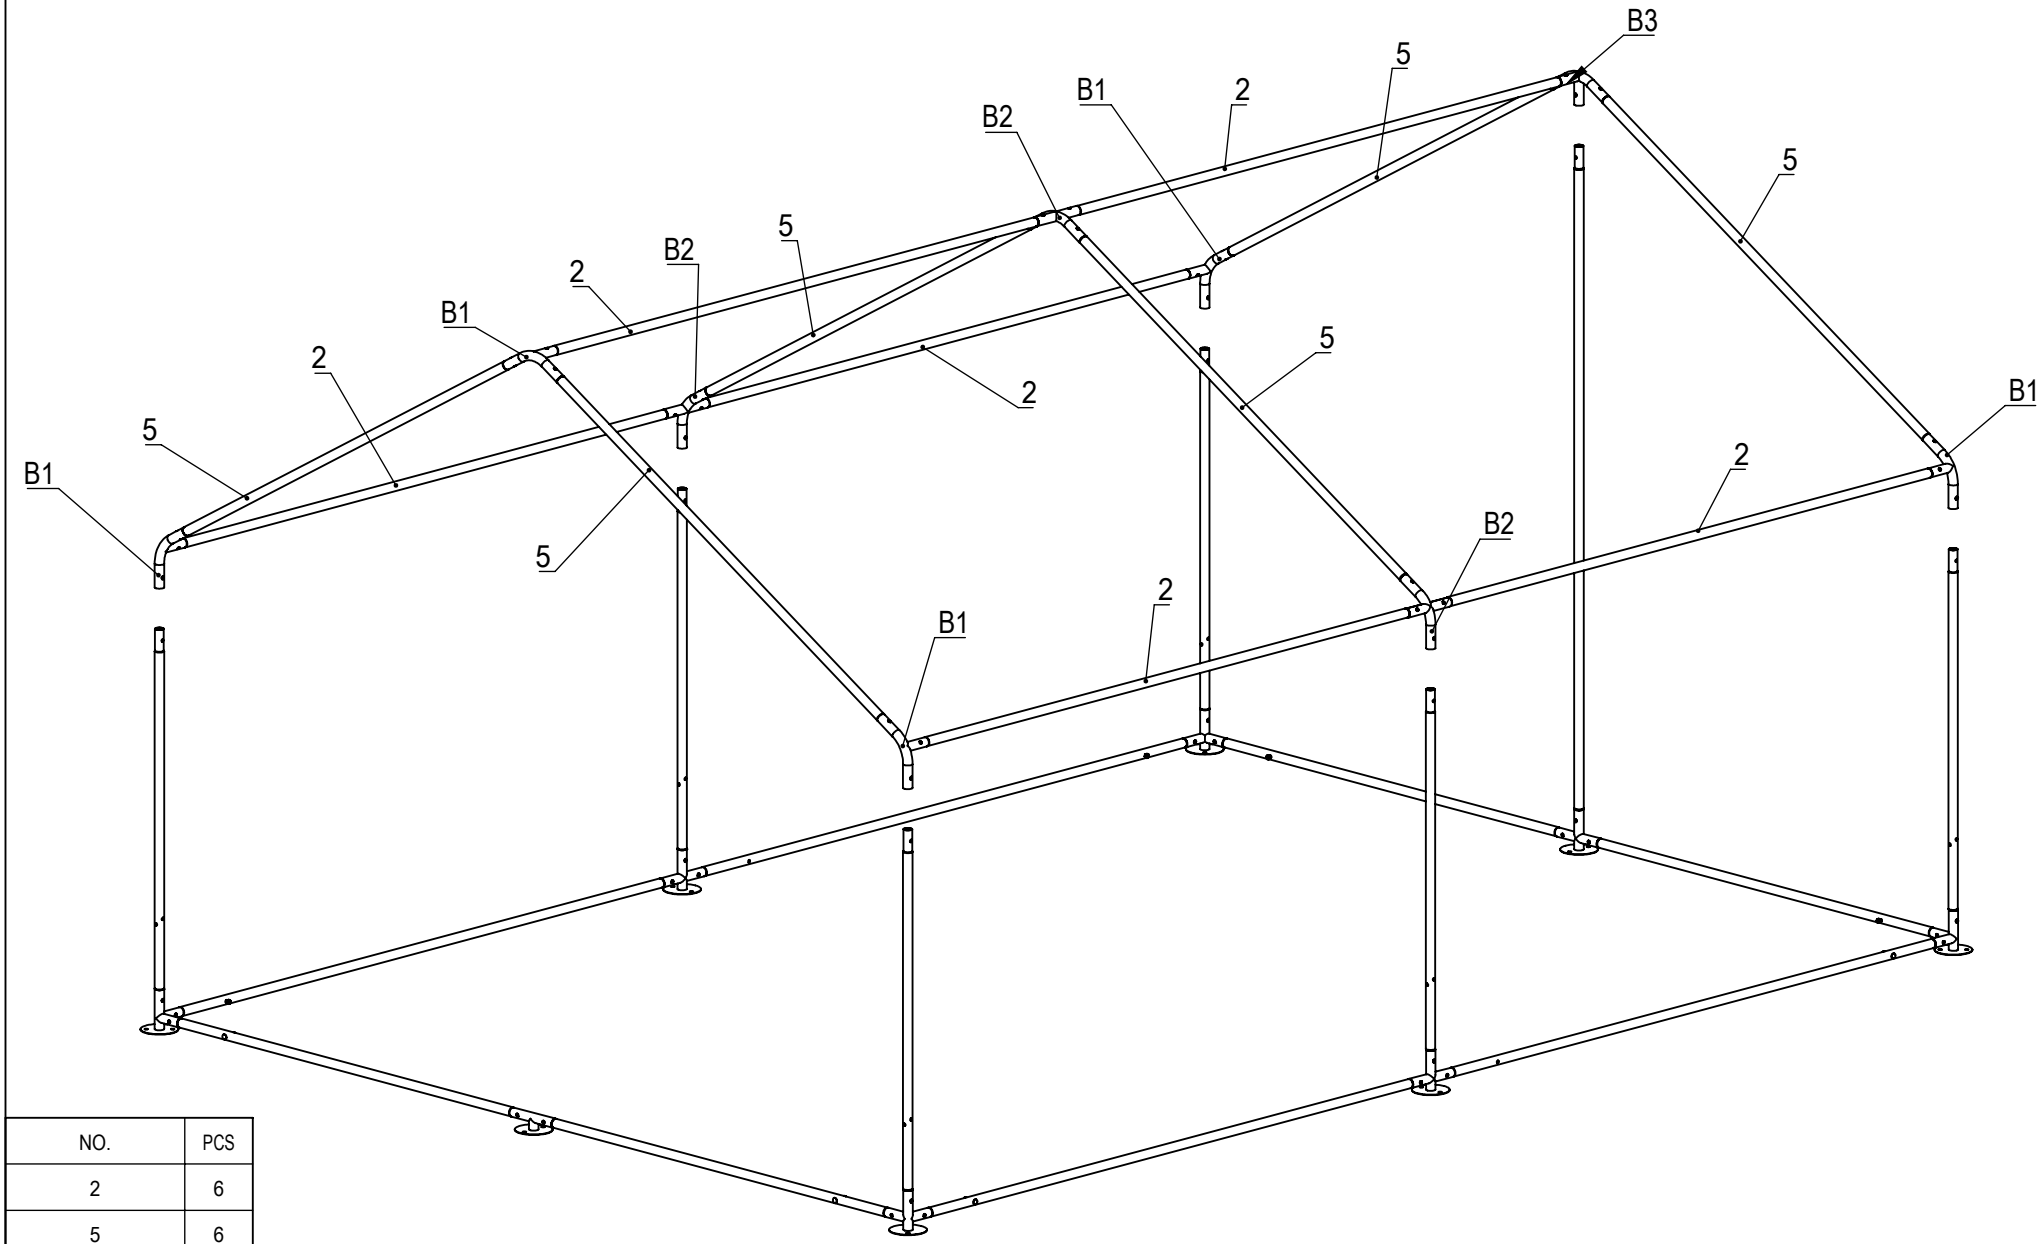


NO.	PCS
2	6
5	6
B1	5
B2	3
B3	1


IX
1 : 7

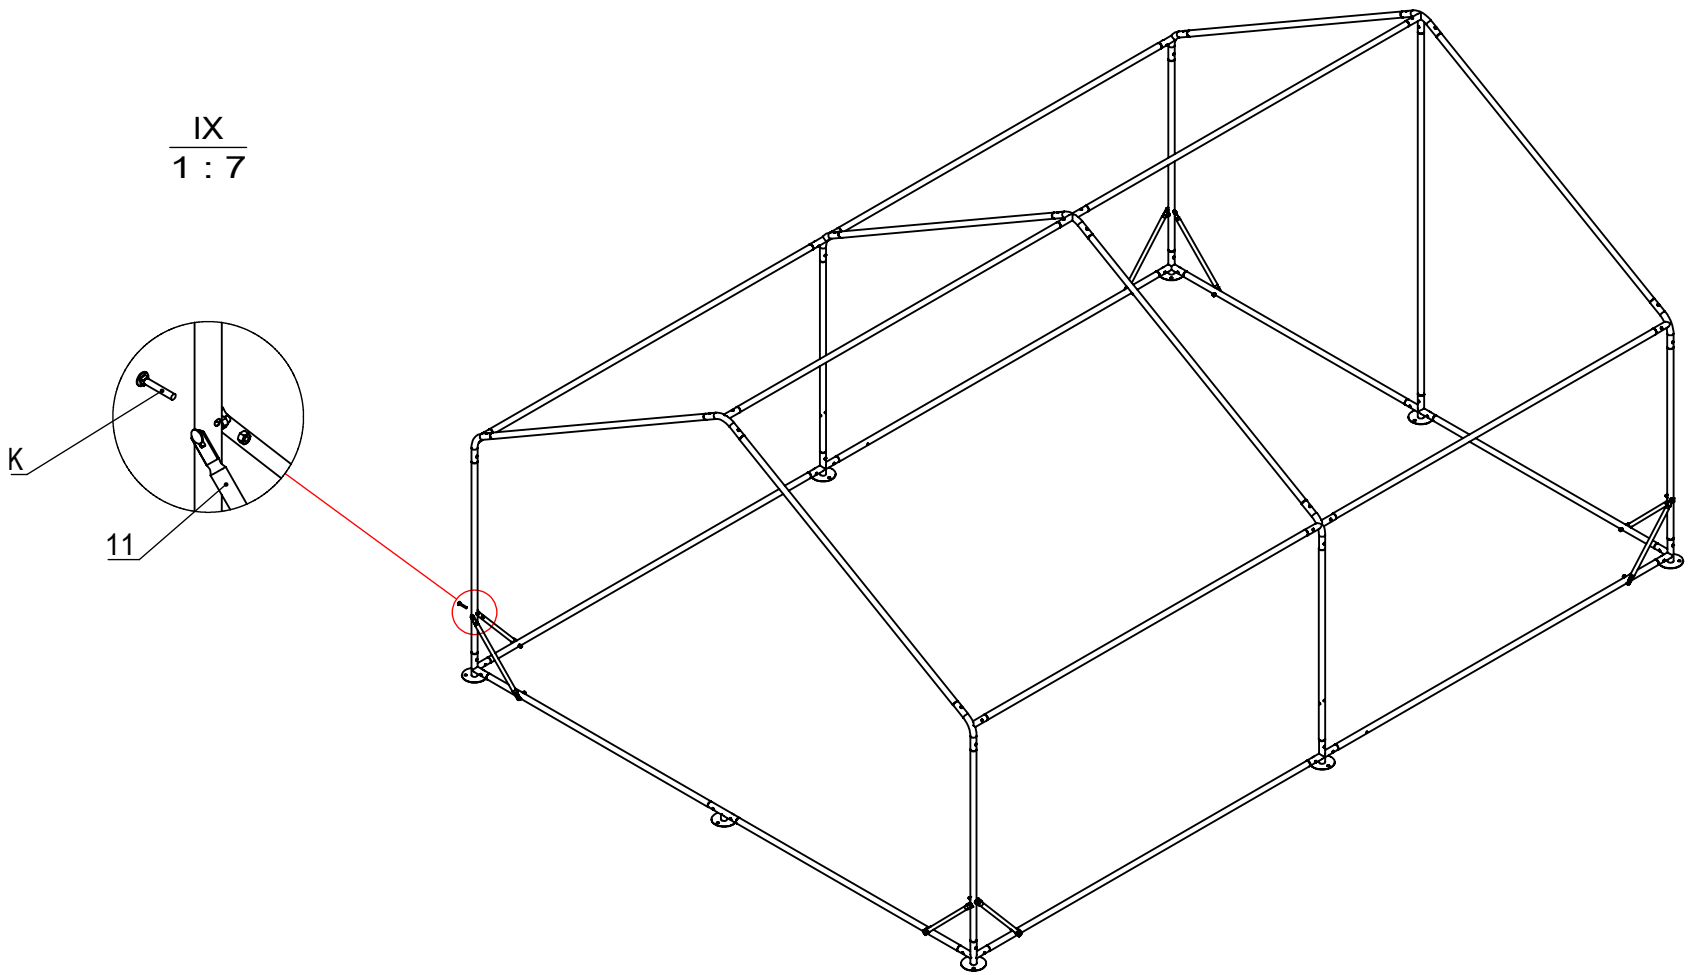







NO.	PCS
11	8
K(M6*40)	16

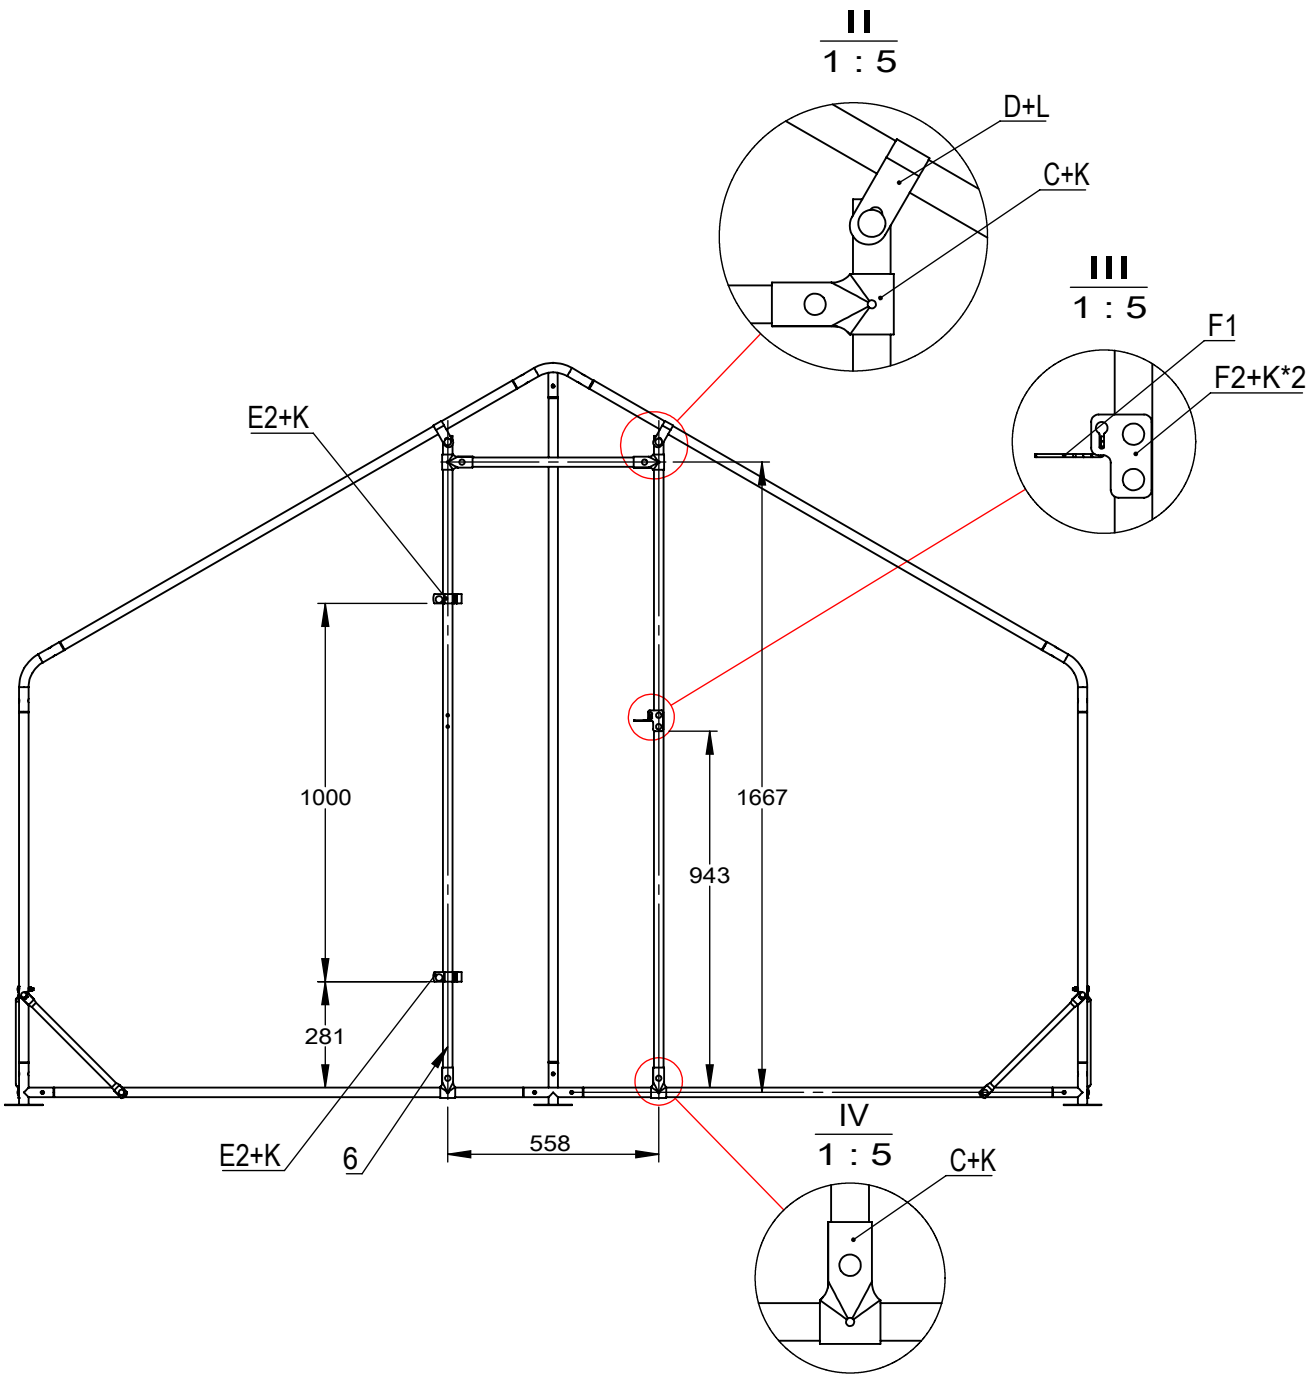



NO.	PCS
D	2
C	8
6	2
7	1
E2	2
F2	2
F1	1
L	4
K	6

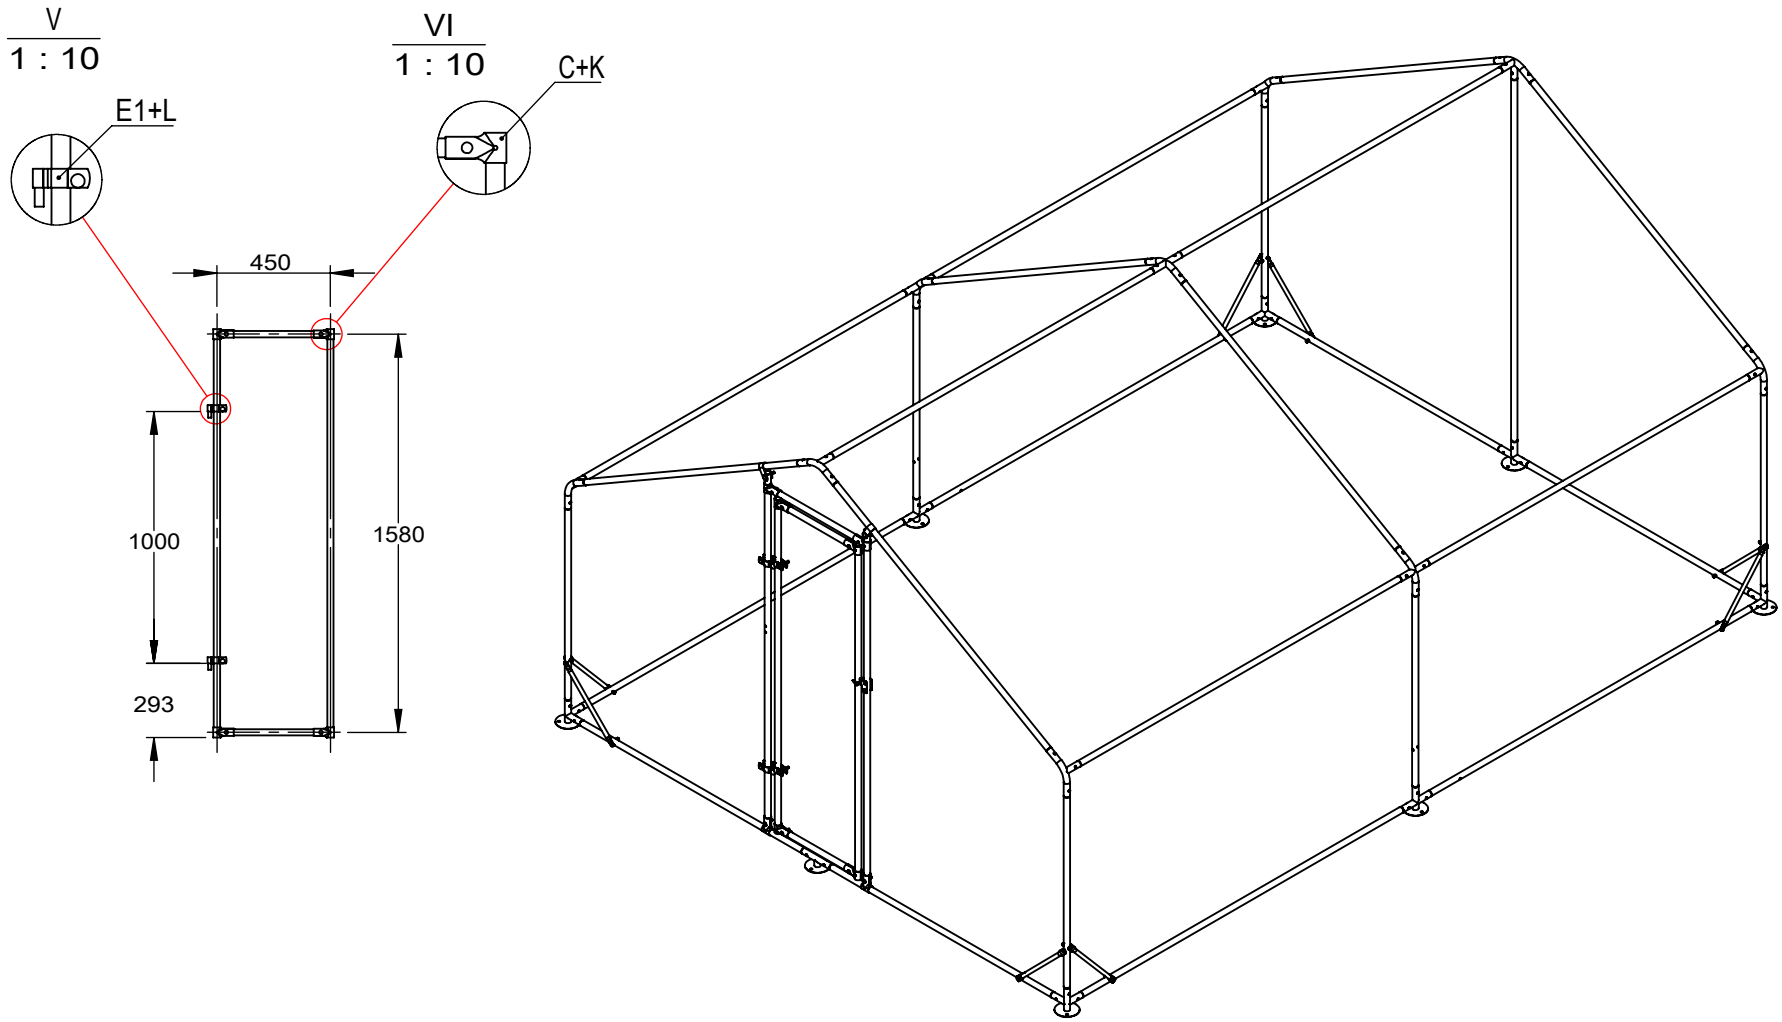



NO.	PCS
C	8
10	2
9	2
E1	2
L	2
K	4

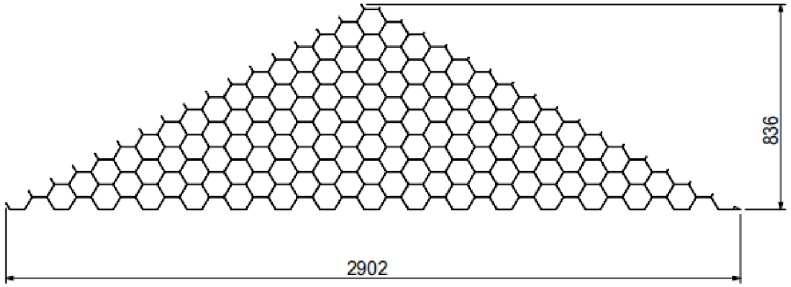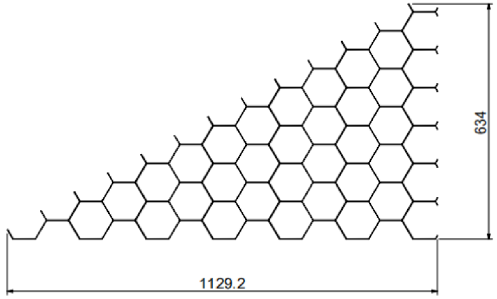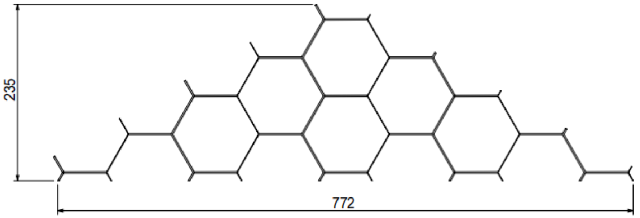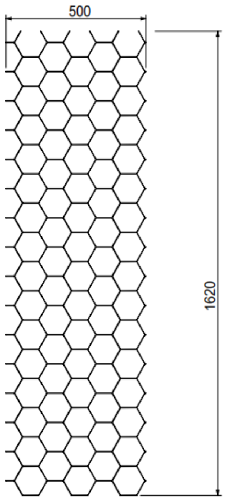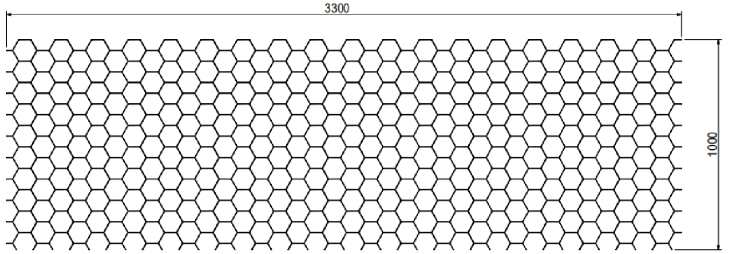
	W2 1		WJ1 1
	WJ2 2		WJ3 1
	WJ4 1		WJ5 4

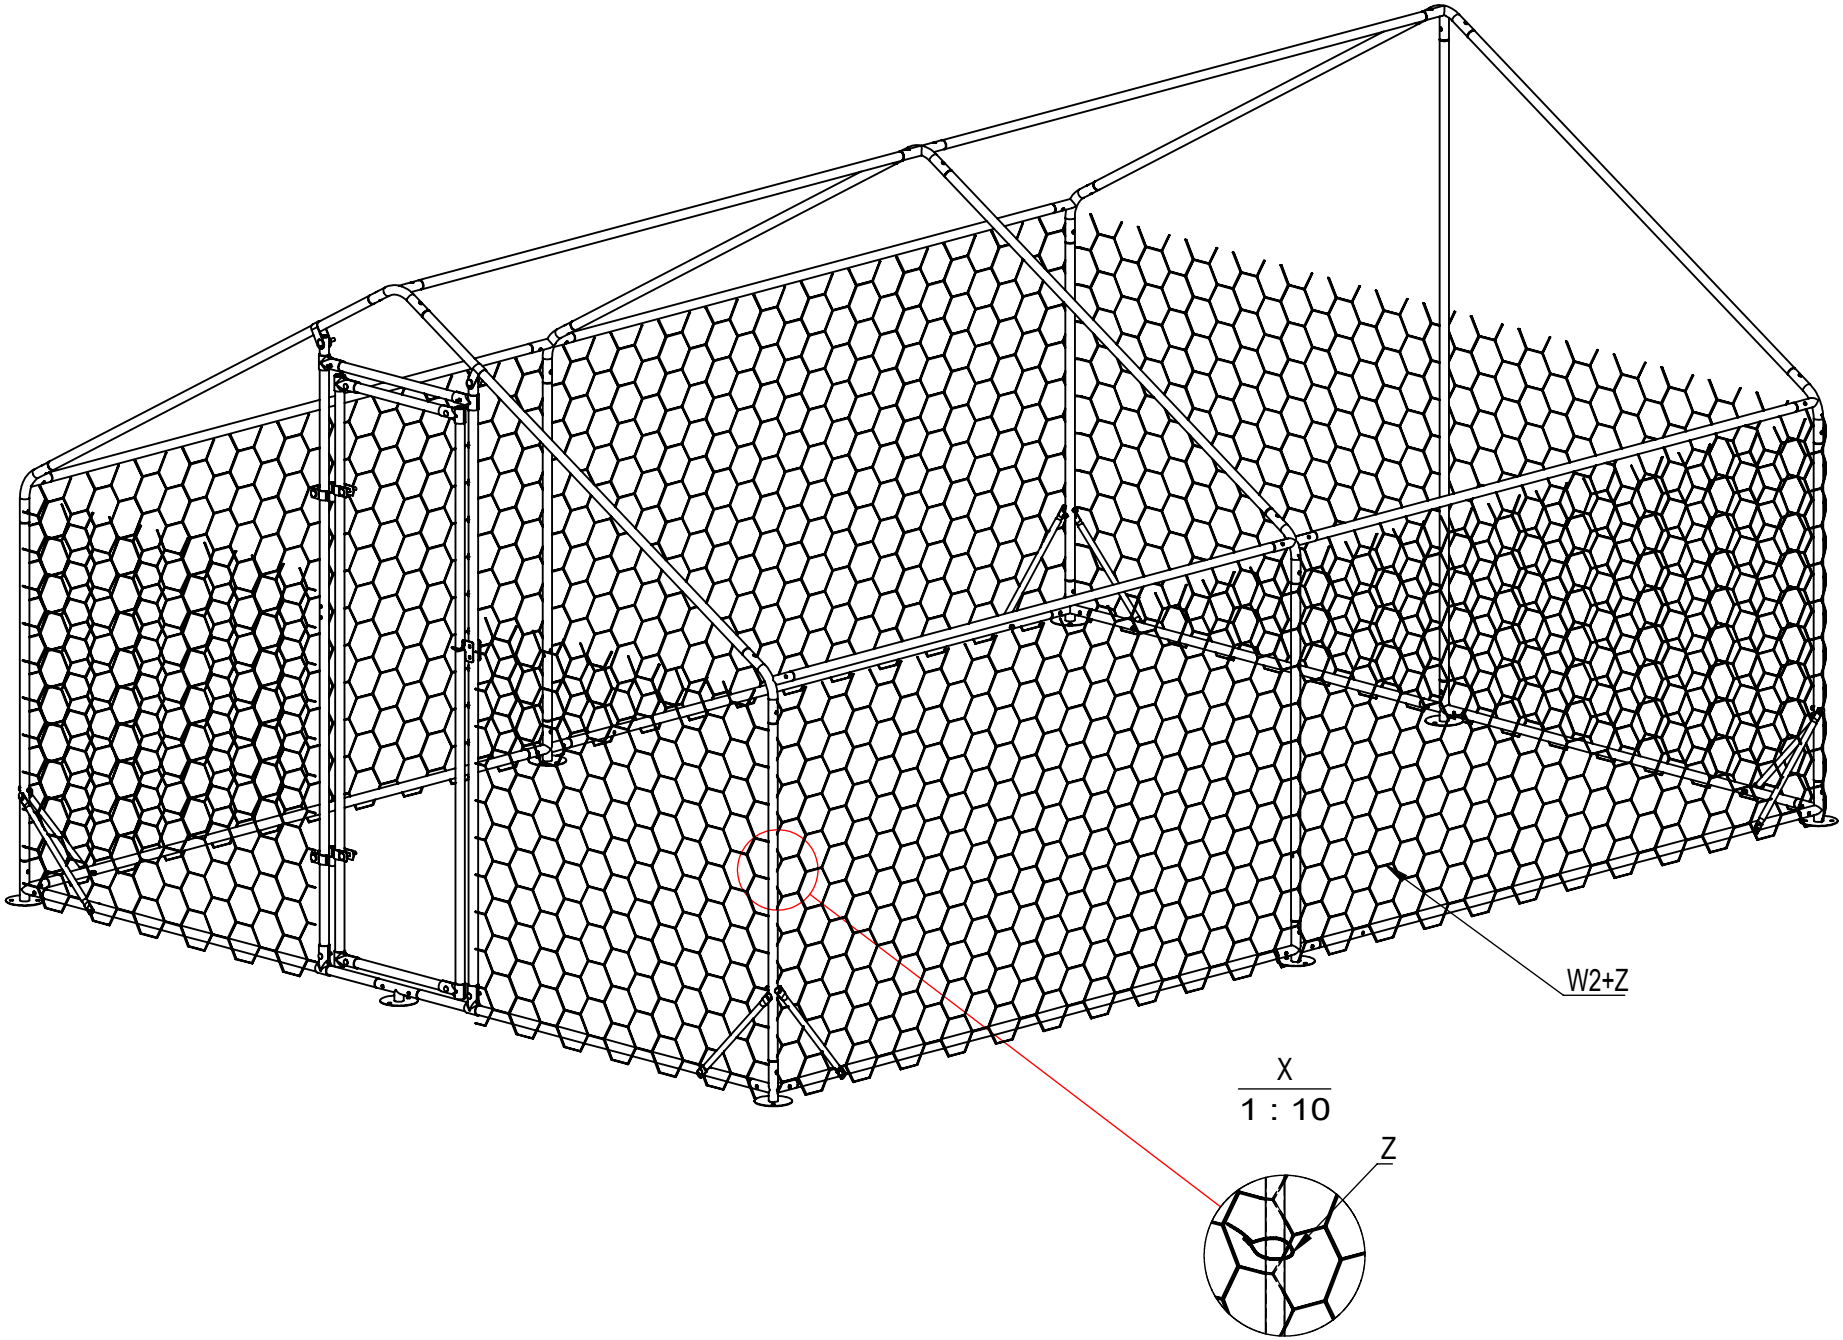

W2+Z
X
1 : 10
Z

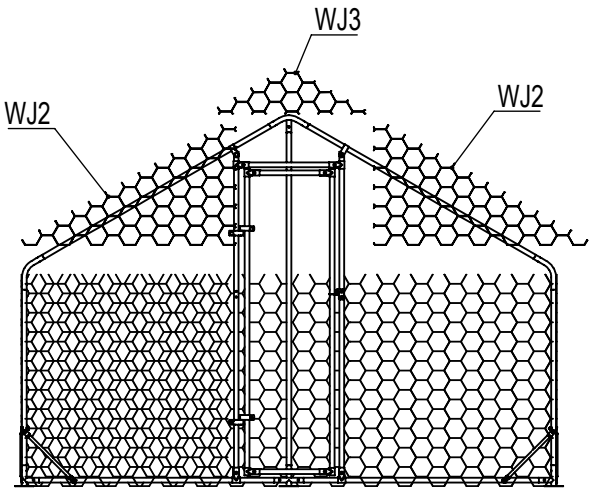
WJ3
WJ2
WJ2

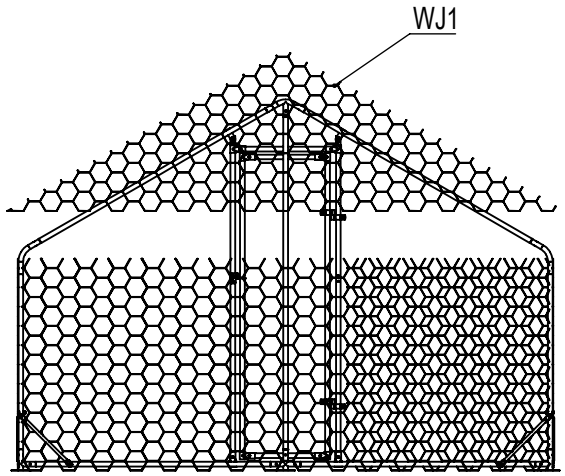
WJ1

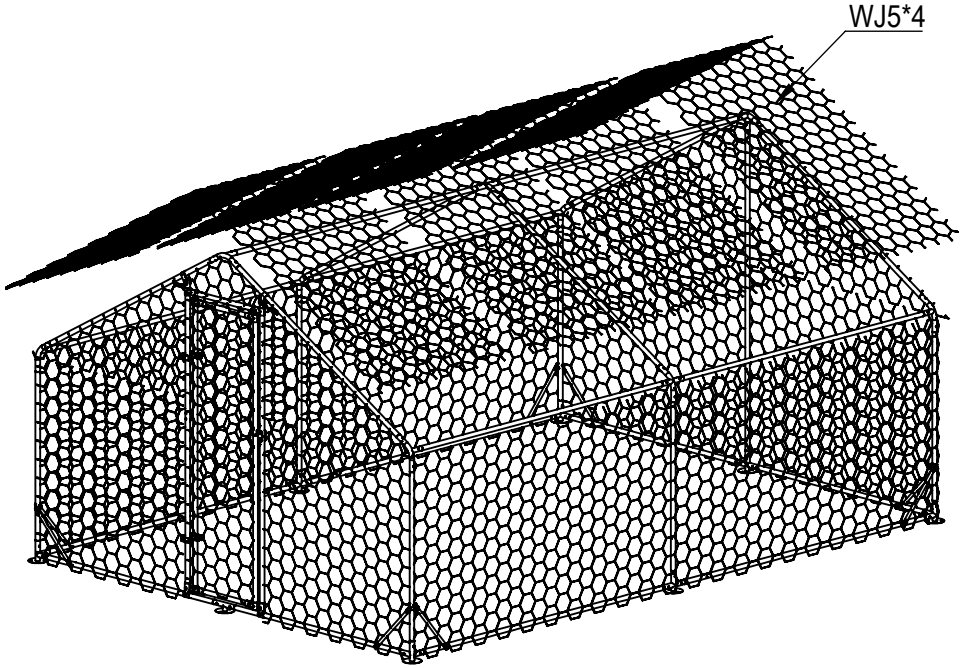
WJ5*4

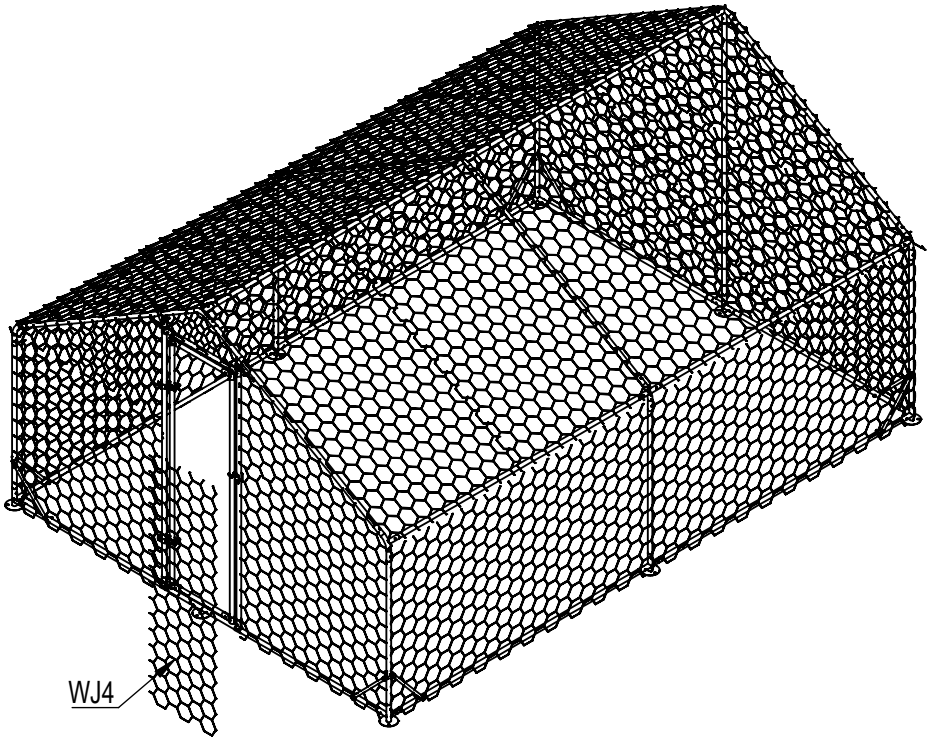
WJ4

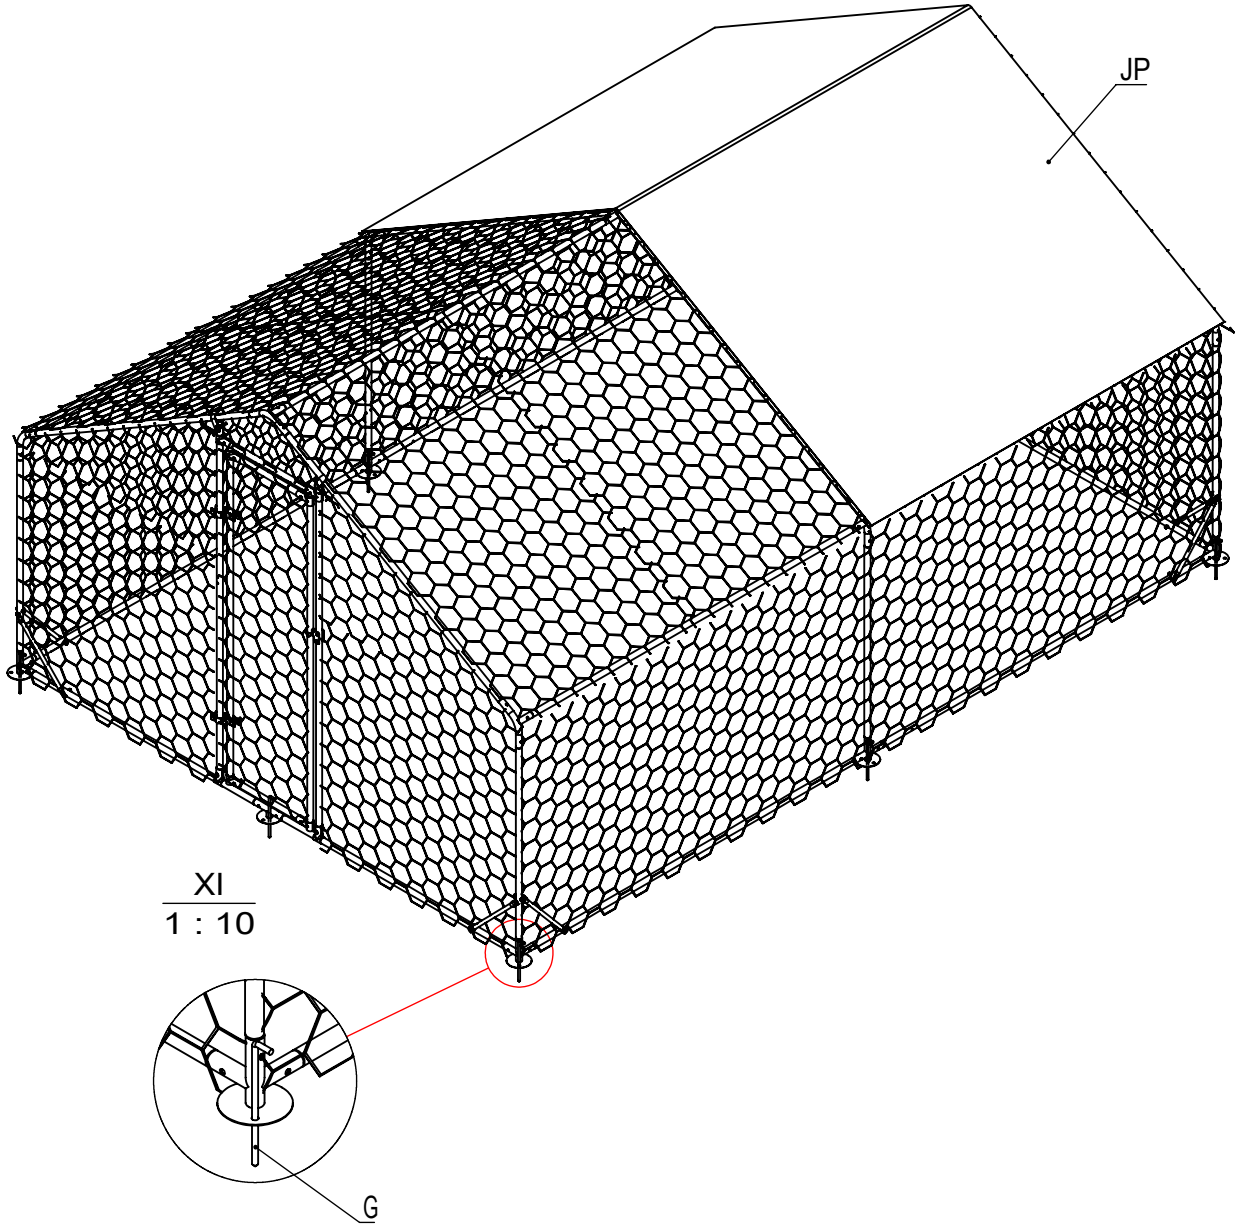

Q



