


**Patented
NO TOOLS
ASSEMBLY**

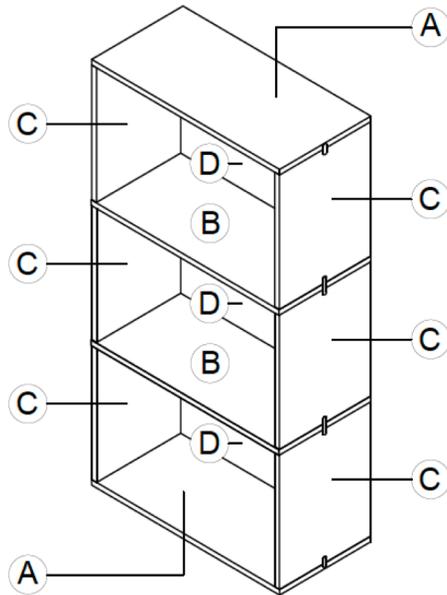

COMPLETED ASSEMBLY

ITEM	DRAWING	DESCRIPTION	QTY	ITEM	DRAWING	DESCRIPTION	QTY	ITEM	DRAWING	DESCRIPTION	QTY
A		PANEL A (ALBANY)	2 PCS	C		PANEL C (ALBANY)	6 PCS	E		DOWEL M8 x 30	24 PCS
					B				CLIP (L20) (ALBANY)	4 PCS	
B		PANEL B (ALBANY)	2 PCS	D		PANEL D (ALBANY)	3 PCS	G		CLIP (L40) (ALBANY)	4 PCS
								H		ANTI TIPPING KIT	1 SET

NOTE : After assembly and placement in desired position, please install the anti tipping kit - please note a screwdriver will be required


CLEANING INSTRUCTION

After assembled, clean and wipe with a damp cloth and water.

ASSEMBLY INSTRUCTIONS


4 TIER LEVEL BY LEVEL BOOKCASE

Step 1

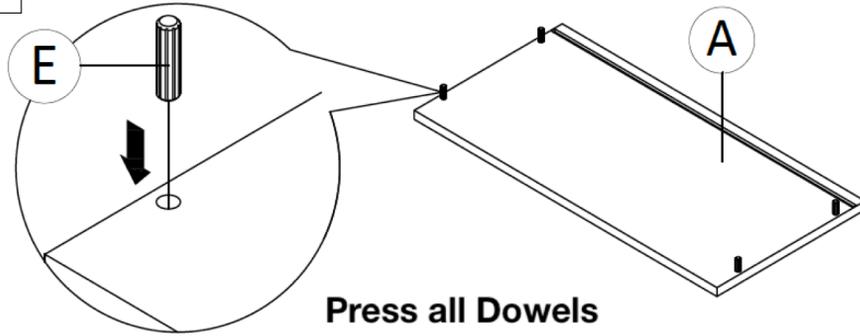


**Press all Dowels
Fully into Positions**

Step 2

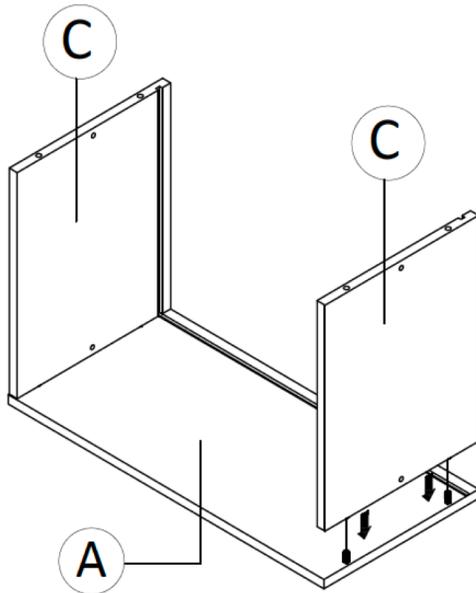

Insert dowels into holes

Step 3

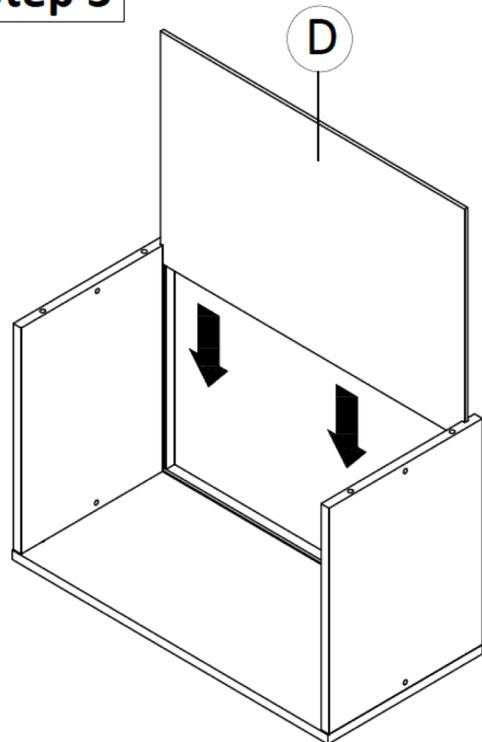

Slide pieces together



NOTE :

CLEANING INSTRUCTION

After assembled, clean and wipe with a damp cloth and water.

ASSEMBLY INSTRUCTIONS

4 TIER LEVEL BY LEVEL BOOKCASE

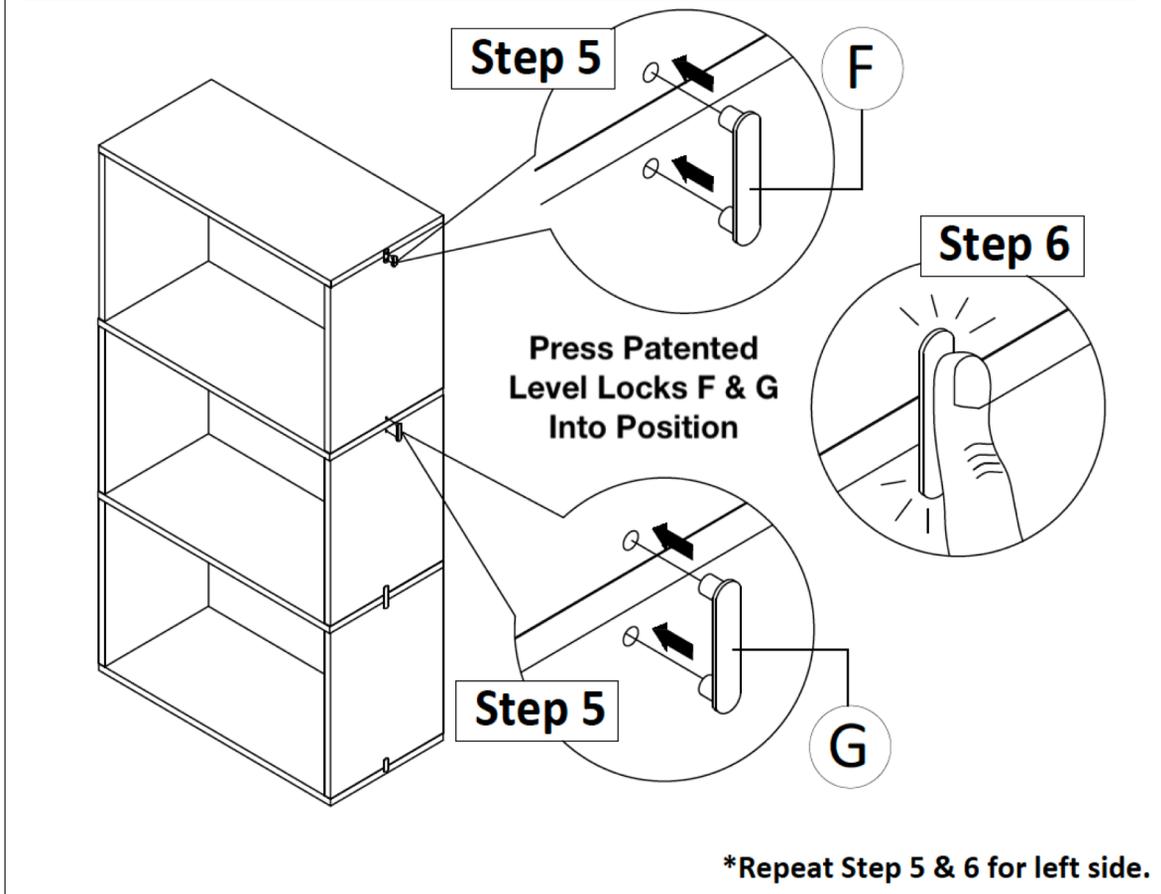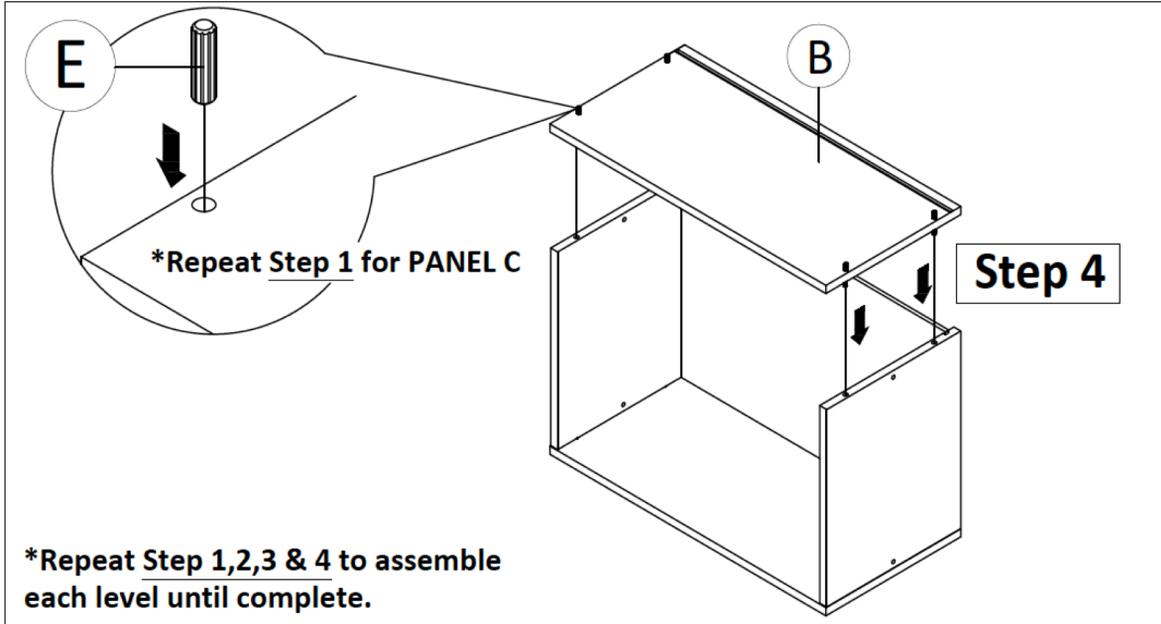

NOTE :

CLEANING INSTRUCTION

After assembled, clean and wipe with a damp cloth and water.