

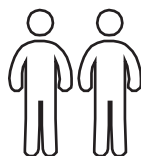







Metal Closet Instructions

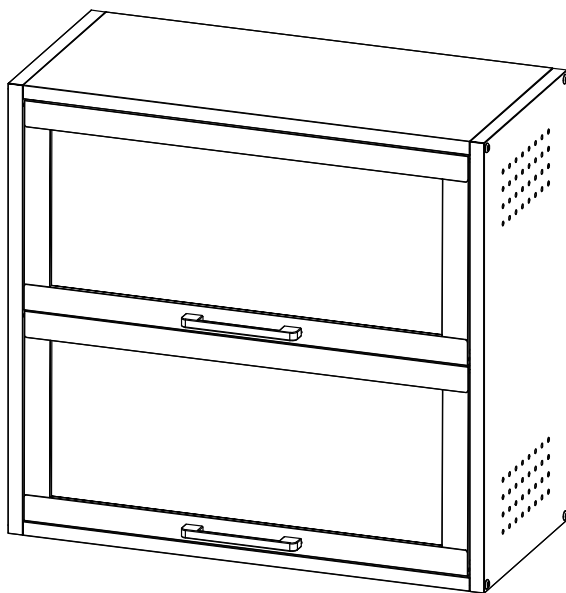


PACKAGE CONTENTS

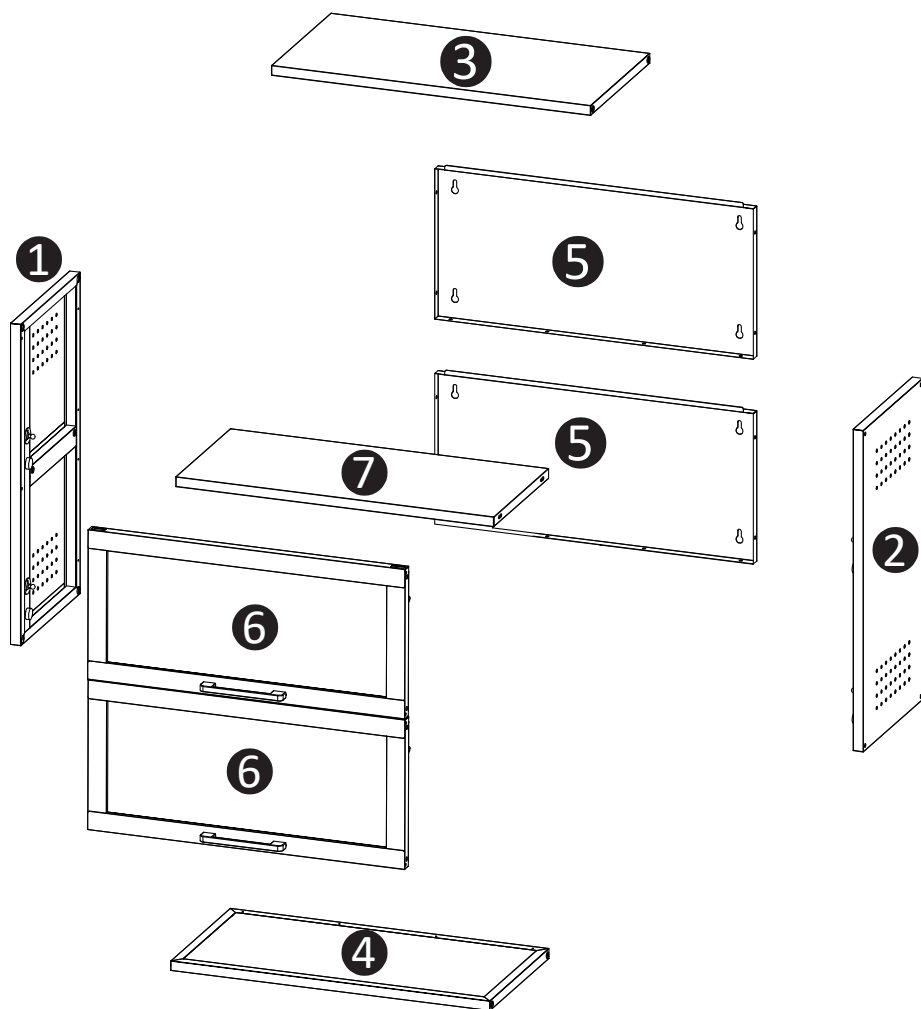






ACCESSORIES

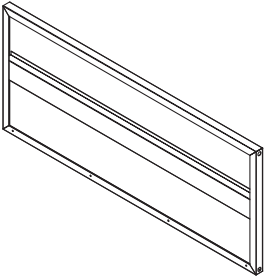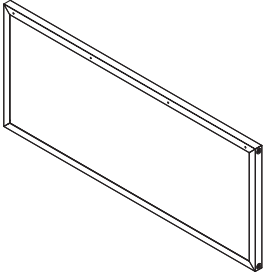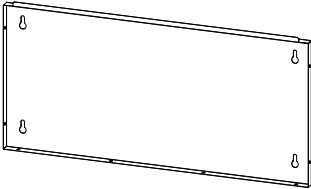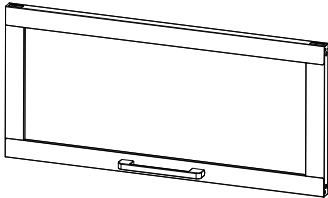1-Left Side Panel	1pc	2-Right Side Panel	1pc
			
3-Top Panel	1pc	4-Bottom Panel	1pc
			
5-Back Panel	2pcs	6-Door	2pcs
			

ACCESSORIES

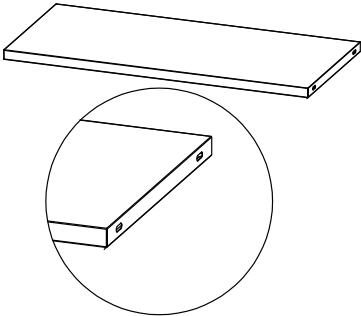
7-Shelf	1pc	
		

ACCESSORIES

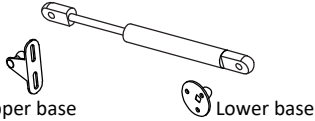
A	Self-Tapping Screw	20pcs	 M4*10
B	M6*40 Screw	8pcs	
C	M4*12 Screw	20pcs	
D	Expansion Bolt	8sets	 M4*30mm M5 M8
E	Hydraulic Rod	4sets	 Upper base Lower base
F	Shaft Pad	8pcs	
G	Handle	2sets	
H	M6*15 Screw	4pcs	
I	Cross screwdriver	1pc	
J	Glove	1pair	

ASSEMBLY

- 1 Fix the side panels, top and bottom panels together with M6*40 screws (Part B).

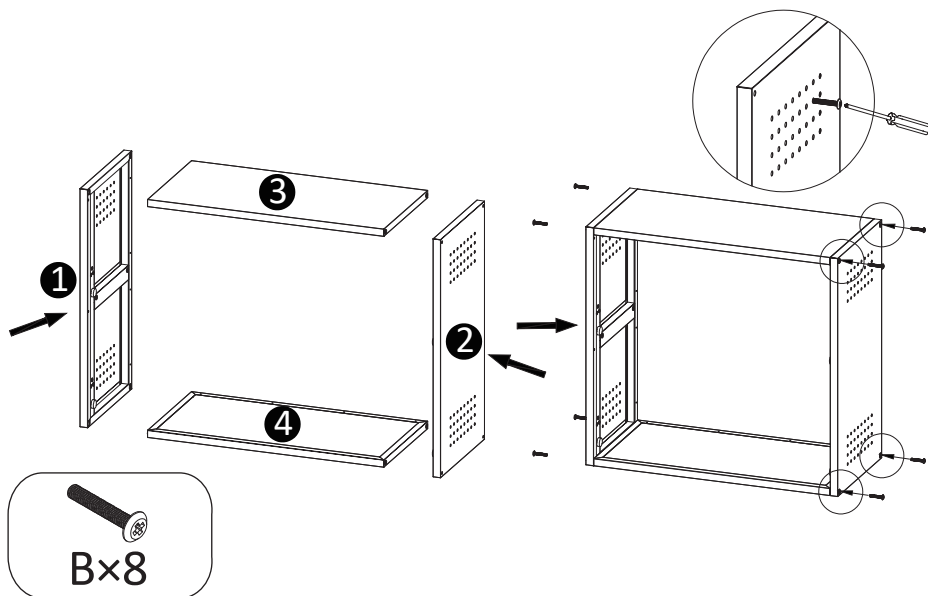


- 2 Place the back panel (Part 5) in the correct direction, fix the back panel with self-tapping screw (Part A).

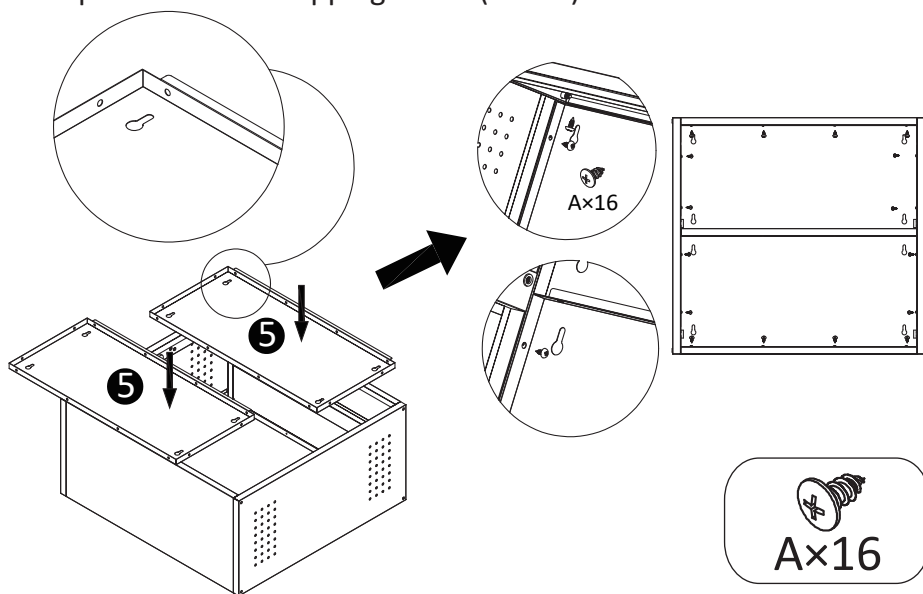


ASSEMBLY

- 3** Place the shelf and make sure to clip it into the buckle on the back panel, then fix shelf and side panel with M6*15 screw (part H).

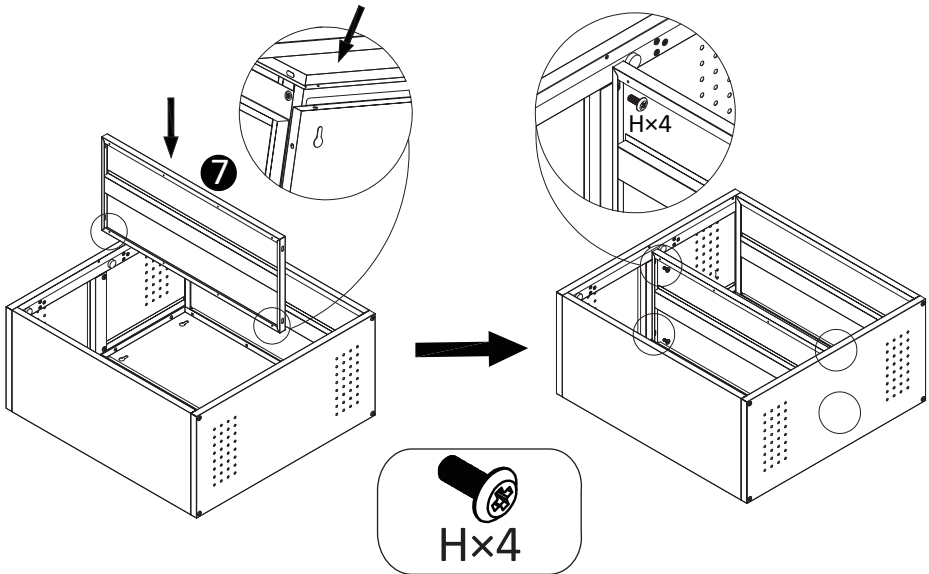


- 4** Fix the shelf and below back panel with self-tapping screwing (Part A).
Install the hydraulic rod lower base (Part E) on the left & side panel with screw (Part C).

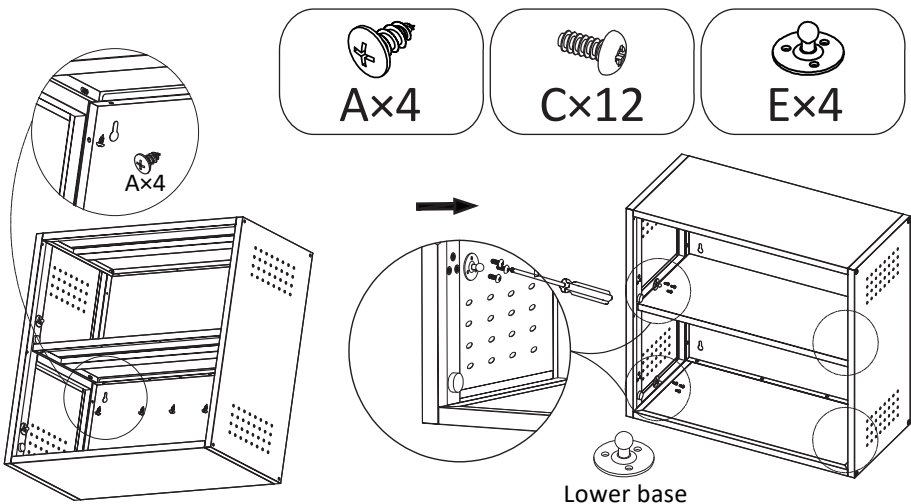


ASSEMBLY

5 Fix the cabinet on the wall with the expansion bolt (Part D).

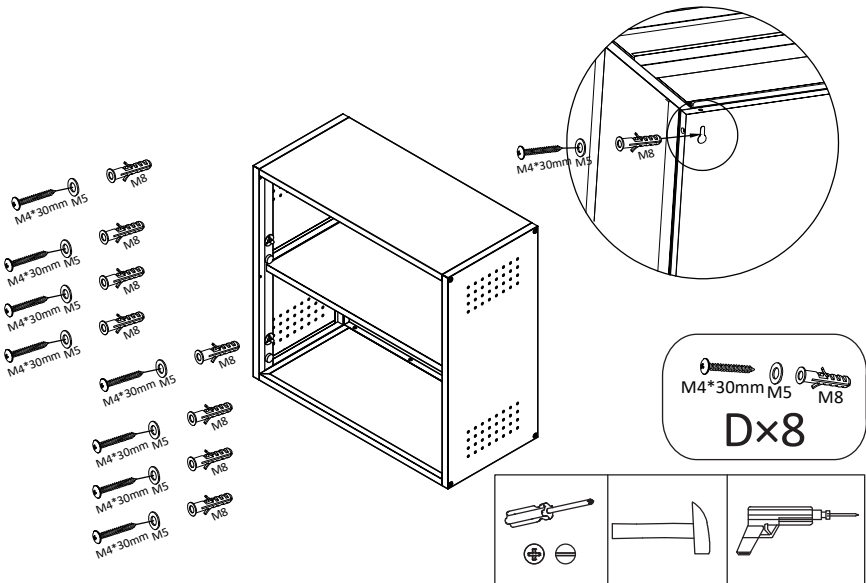


6 Fix the hydraulic rod upper base on the door with screw (Part C).
Install the handle.

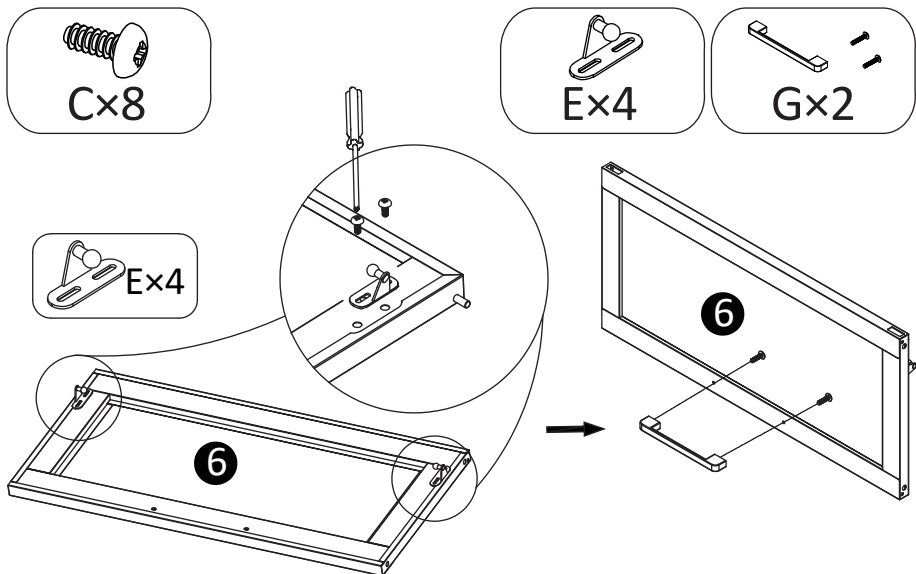


ASSEMBLY

- 7** Put the pad on door shaft, then install the door.

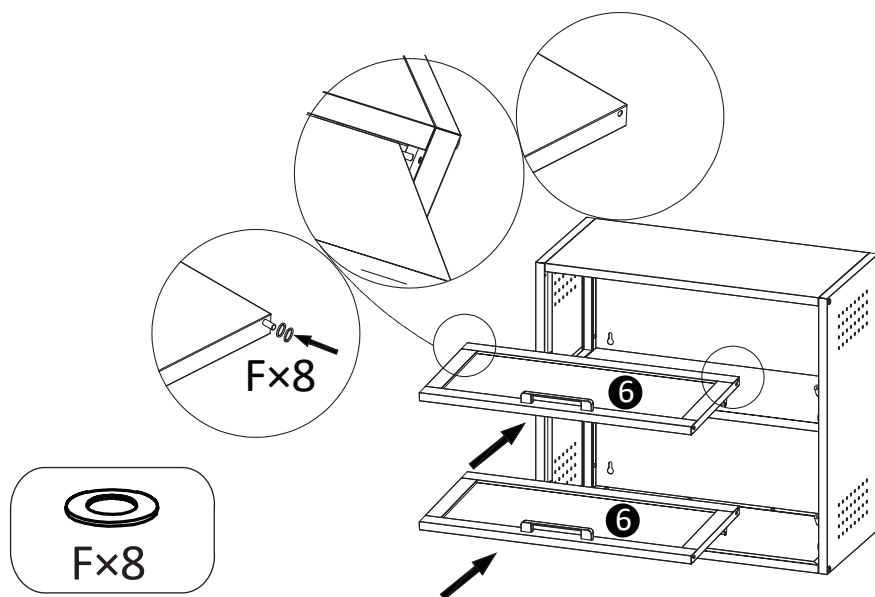

- 8** Install the hydraulic rod on the upper & lower base, according to the corresponding position.

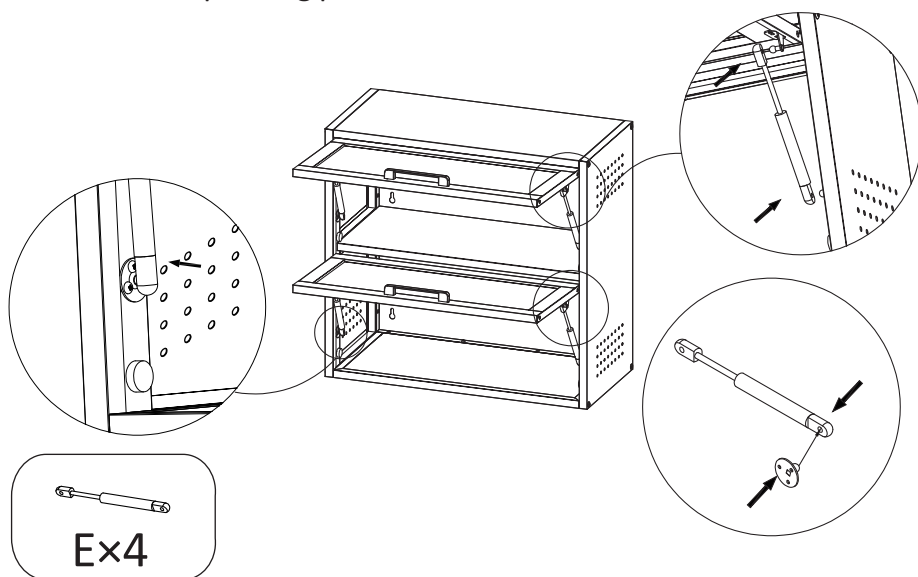

ASSEMBLY

9 Assembly completed.

