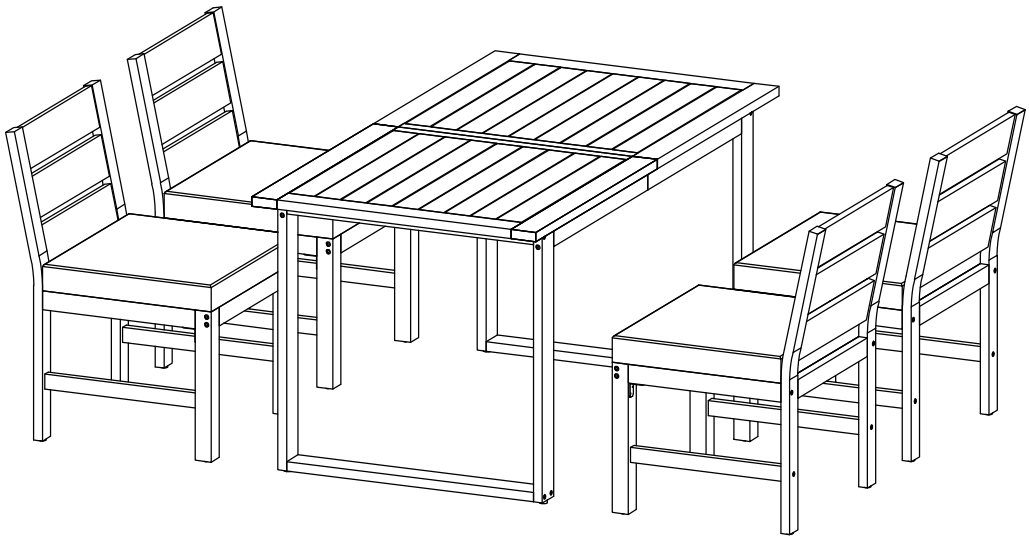
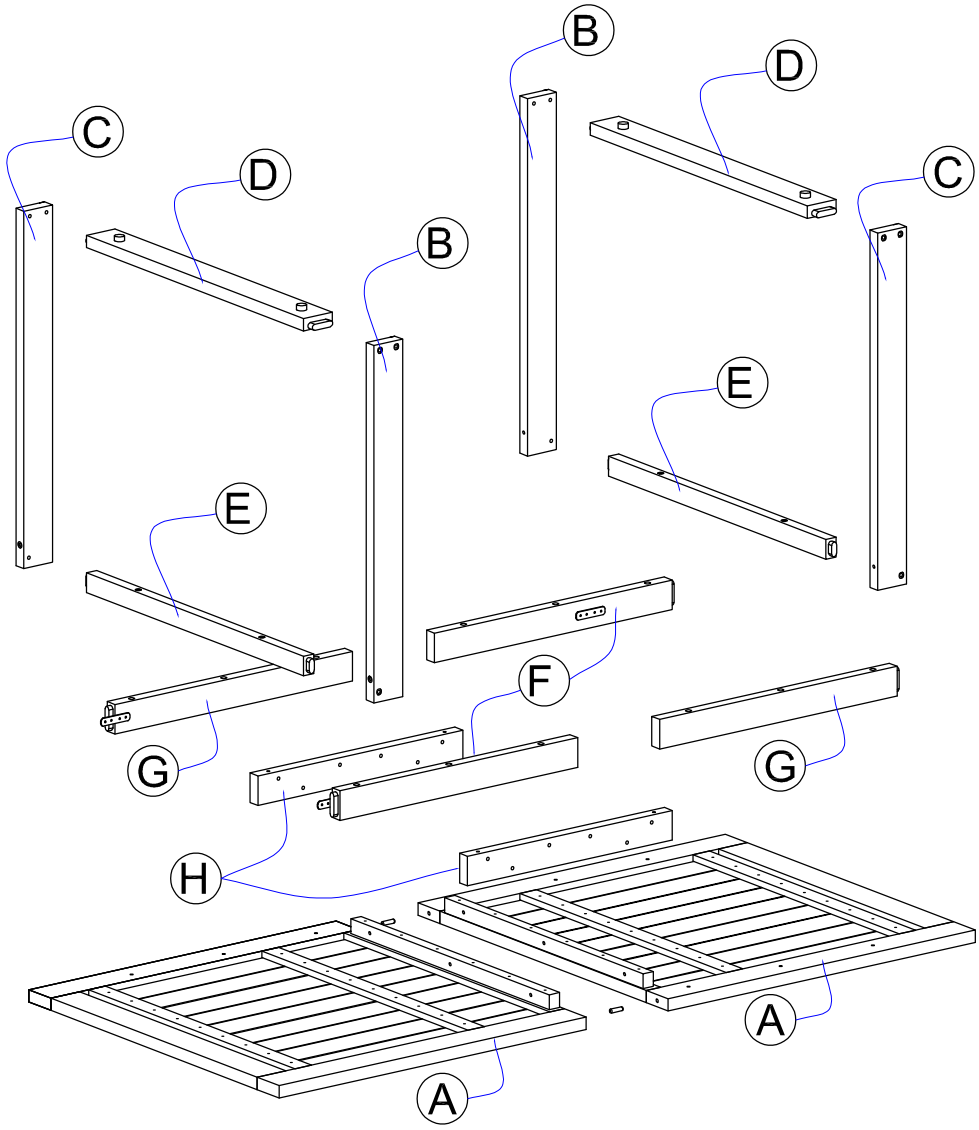
ASSEMBLY INSTRUCTION
WOODEN DINING SET

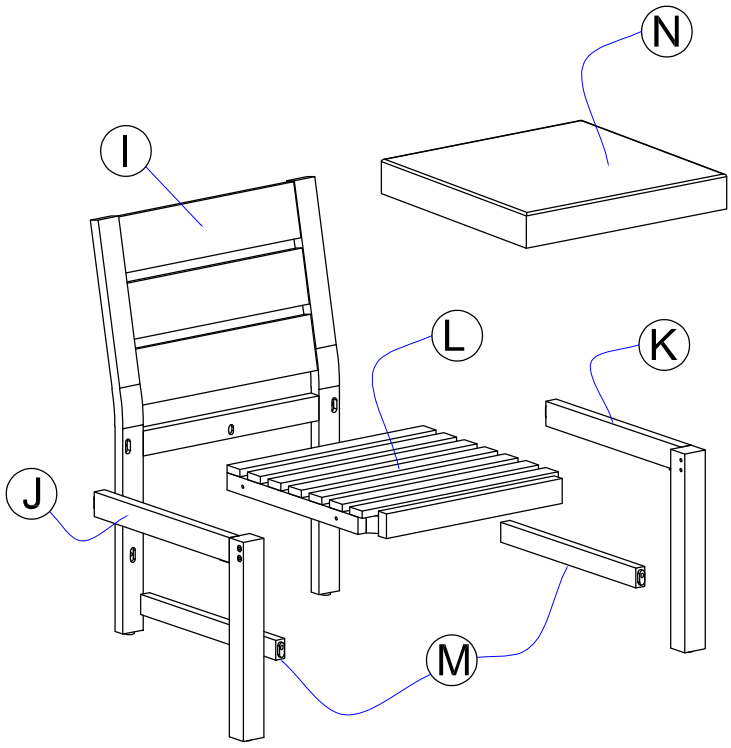


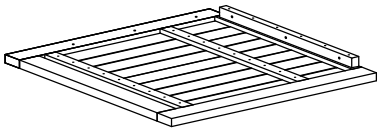







Notice





1. 50% Tighten before fixings all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or more screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are disigned to be relatively larger to provide more space for the adjustment of the screws.






X4




A  2 pcs	B  2 pcs	C  2 pcs
D  2 pcs	E  2 pcs	F  2 pcs
		G  2 pcs
H  2 pcs	I  4 pcs	J  4 pcs
K  4 pcs	L  4 pcs	M  8 pcs
N  4 pcs		



1  SCREW M6*100mm (4pcs)	2  SCREW M6*60mm (36pcs)	3  SCREW M6*50mm (4pcs)
4  SCREW M6*40mm (36pcs)	5  BOLT M6*60mm (12pcs) + EXTRA (1pc)	6  BOLT M6*40mm (3pcs) + EXTRA (1pc)
7  SLEEVE NUT M6*15mm (3pcs) + EXTRA (1pc)	8  SCREW M4*20mm (16pcs)	9  PAT CONNECTER 70*15*2mm (4pcs)
10  ALENKEY M4*80mm (2pcs)	11  SCREW M7*80mm (16pcs)	12  WOODEN PEGS Ø10*30mm (2pcs)
13  PLASTIC FOOT M6 (16pcs)	14  PLASTIC FOOT M8 (4pcs)	15  SCREW DRIVER (NO PROVIDED)




N711P453631

A	B	C	D	E
 2 pcs	 2 pcs	 2 pcs	 2 pcs	 2 pcs



F	G	H
 2 pcs	 2 pcs	 2 pcs



N711P453632

I	J	K
2 pcs 	 2 pcs	 2 pcs

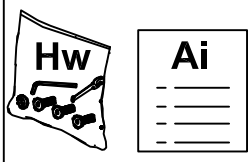
L	M	N	
 2 pcs	 4 pcs	 2 pcs	

N711P453633

I	J	K
2 pcs 	 2 pcs	 2 pcs


L	M	N
 2 pcs	 4 pcs	 2 pcs

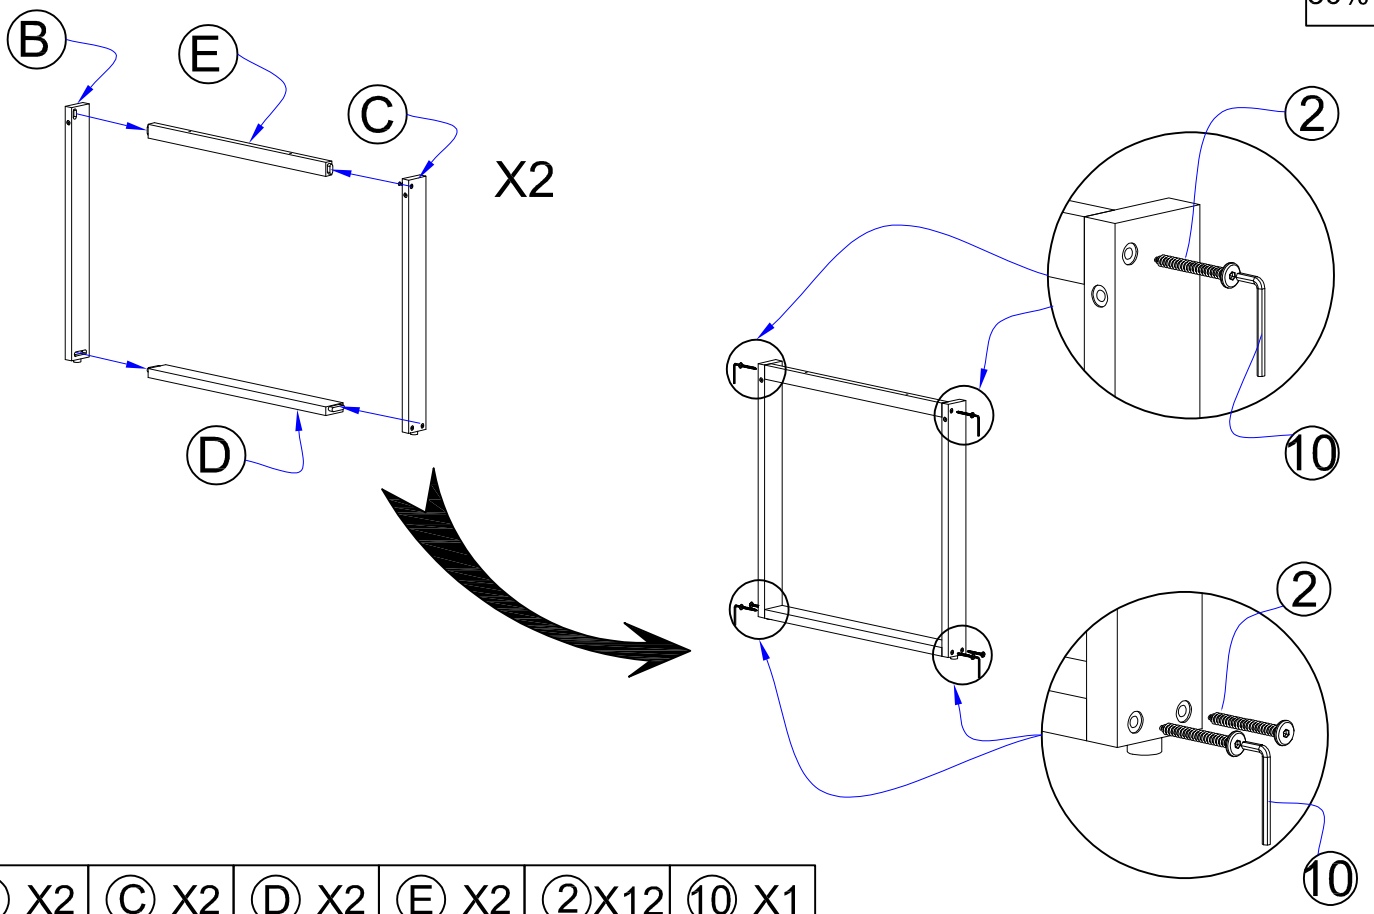Step 1




B X2	C X2	D X2	E X2	2X12	10 X1

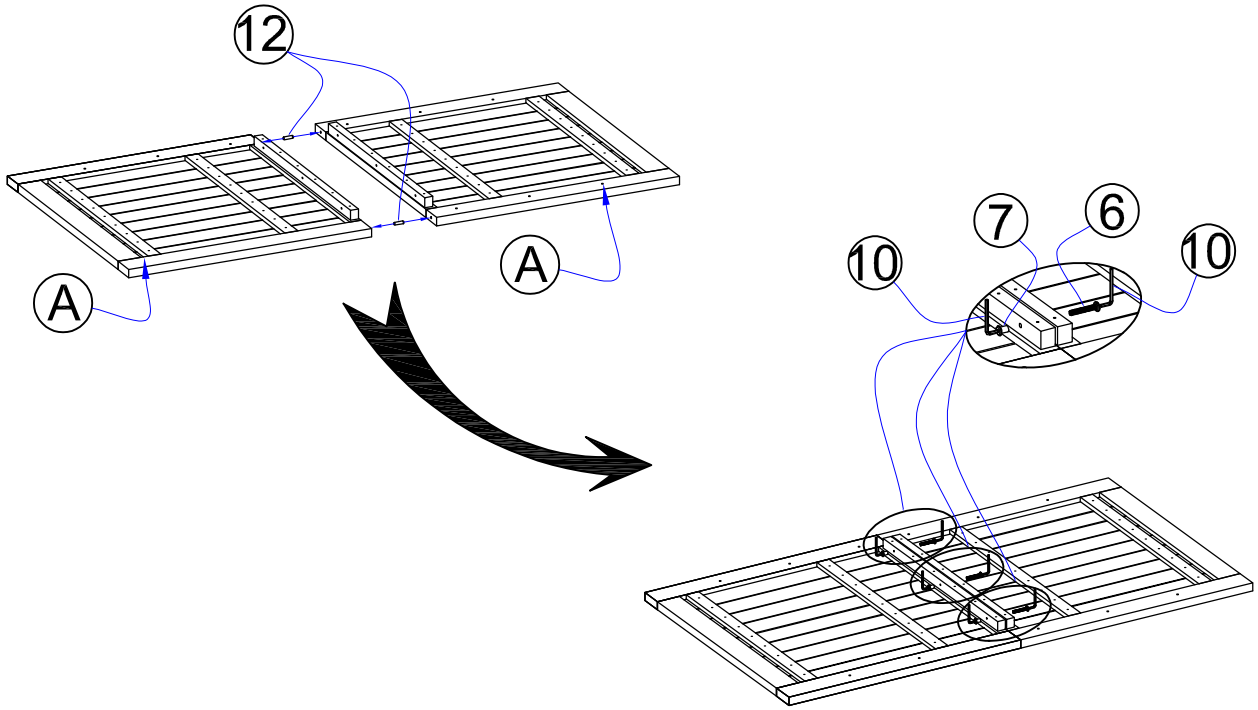Step 2




A X2	12X2	10X2	6 X3	7 X3

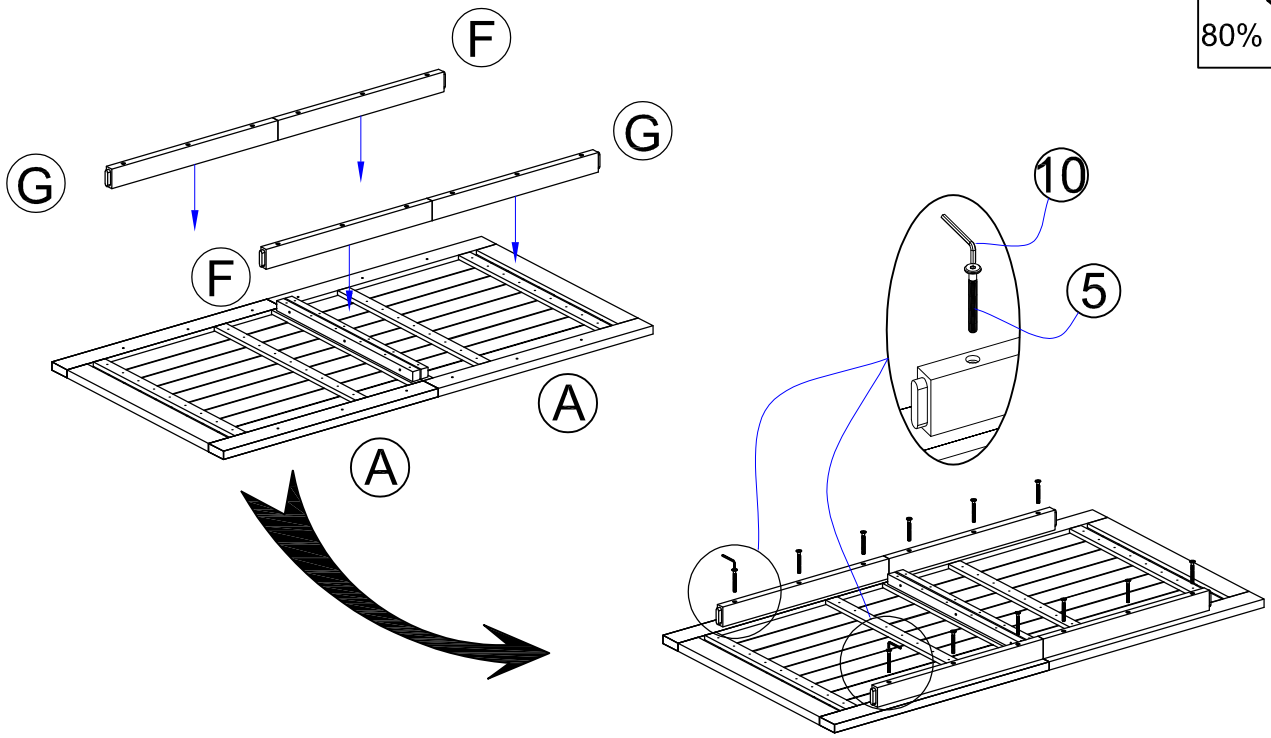Step 3




F X2	G X2	5X12	10 X1	A X2

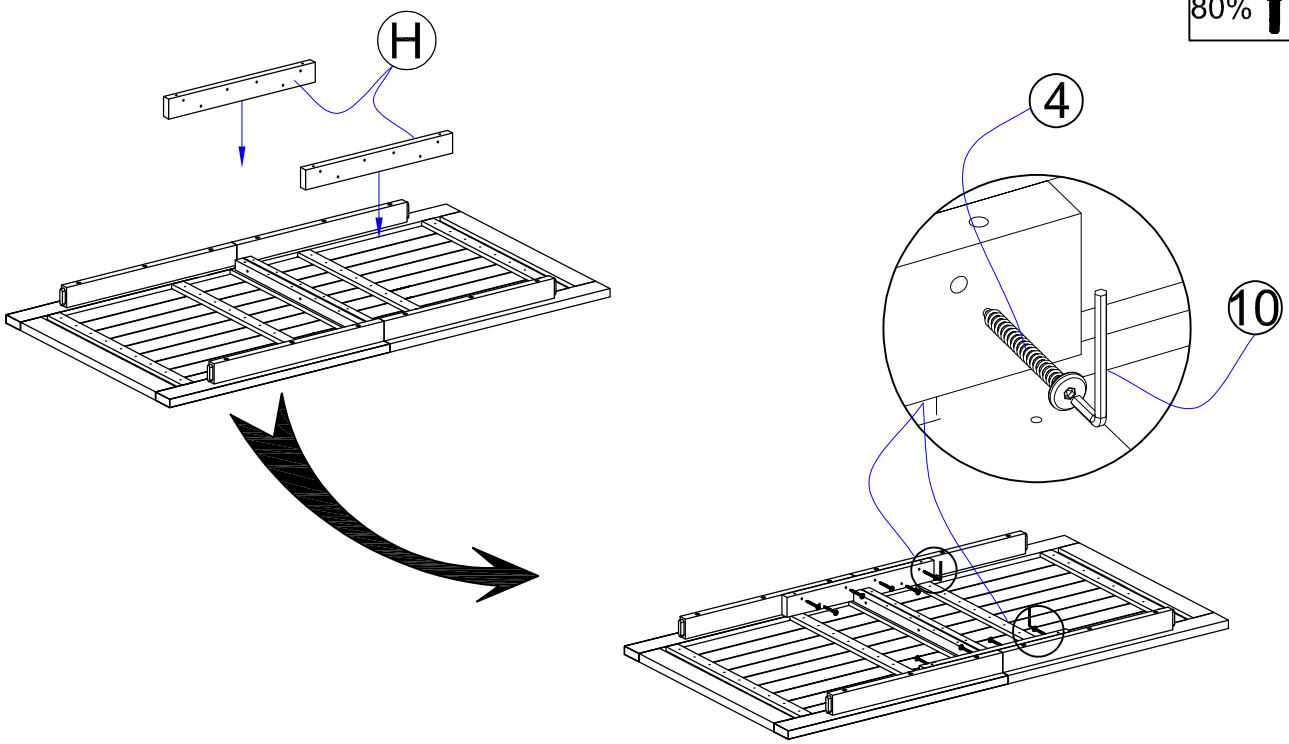Step 4




H X2	4X12	10X1

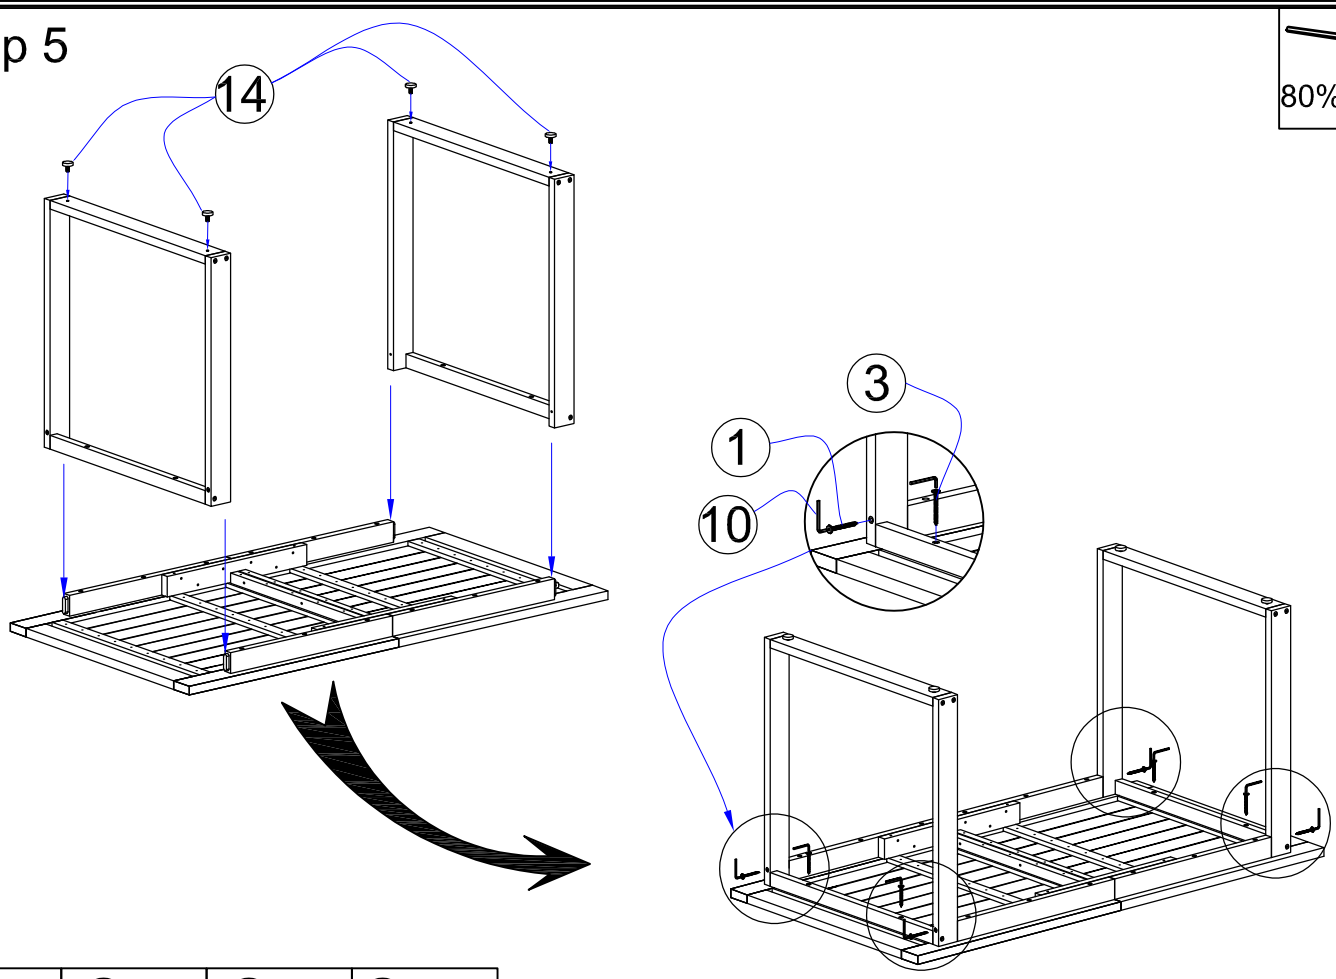Step 5




⑭ X4	①X4	⑩ X1	③ X4

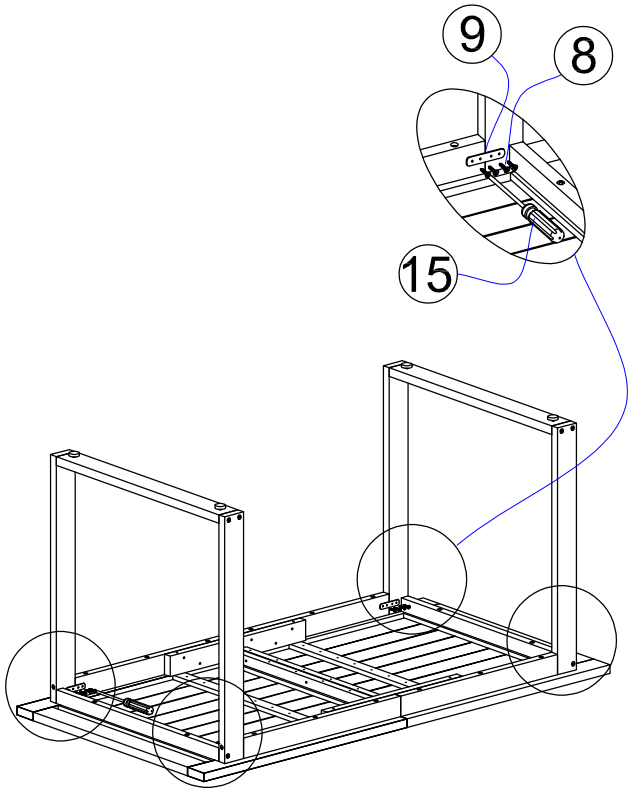Step 6




⑧ X16	⑨ X4

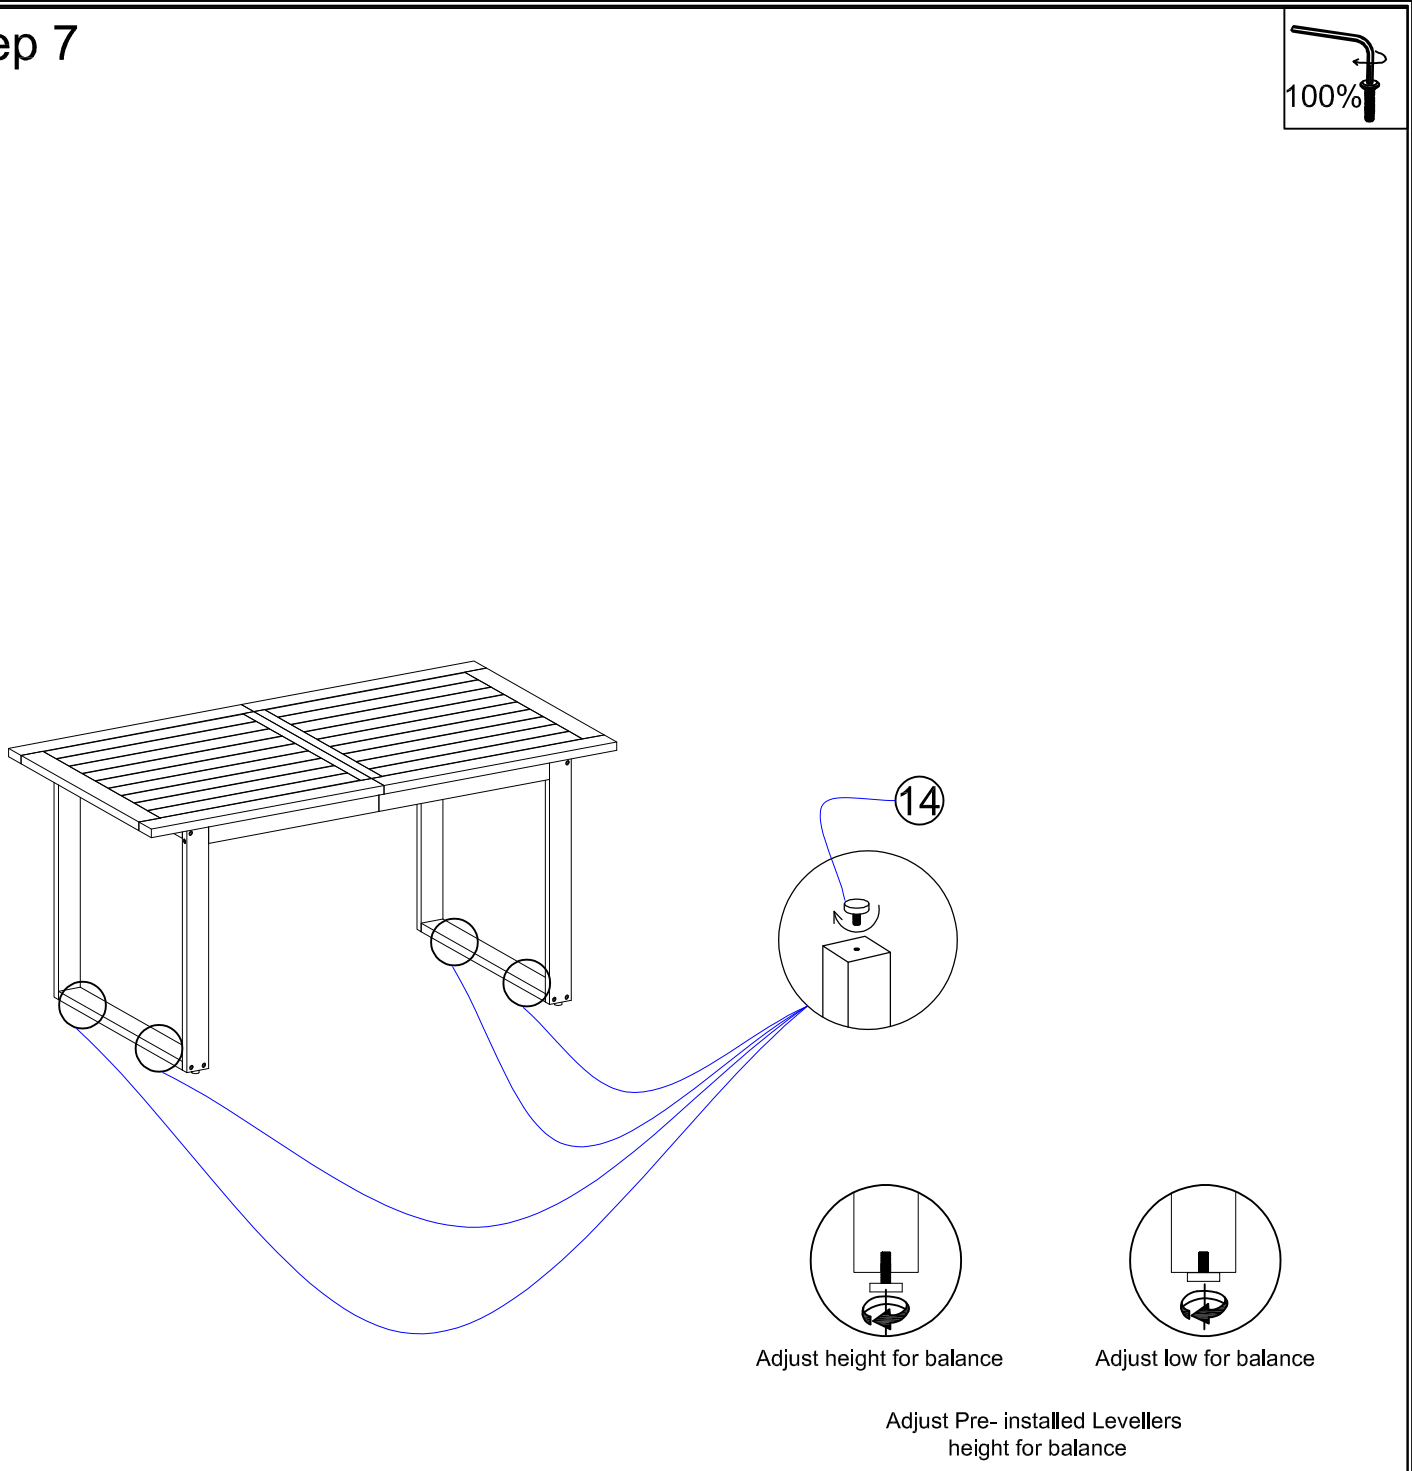Step 7



100%
14
Adjust height for balance
Adjust low for balance
Adjust Pre- installed Levellers
height for balance

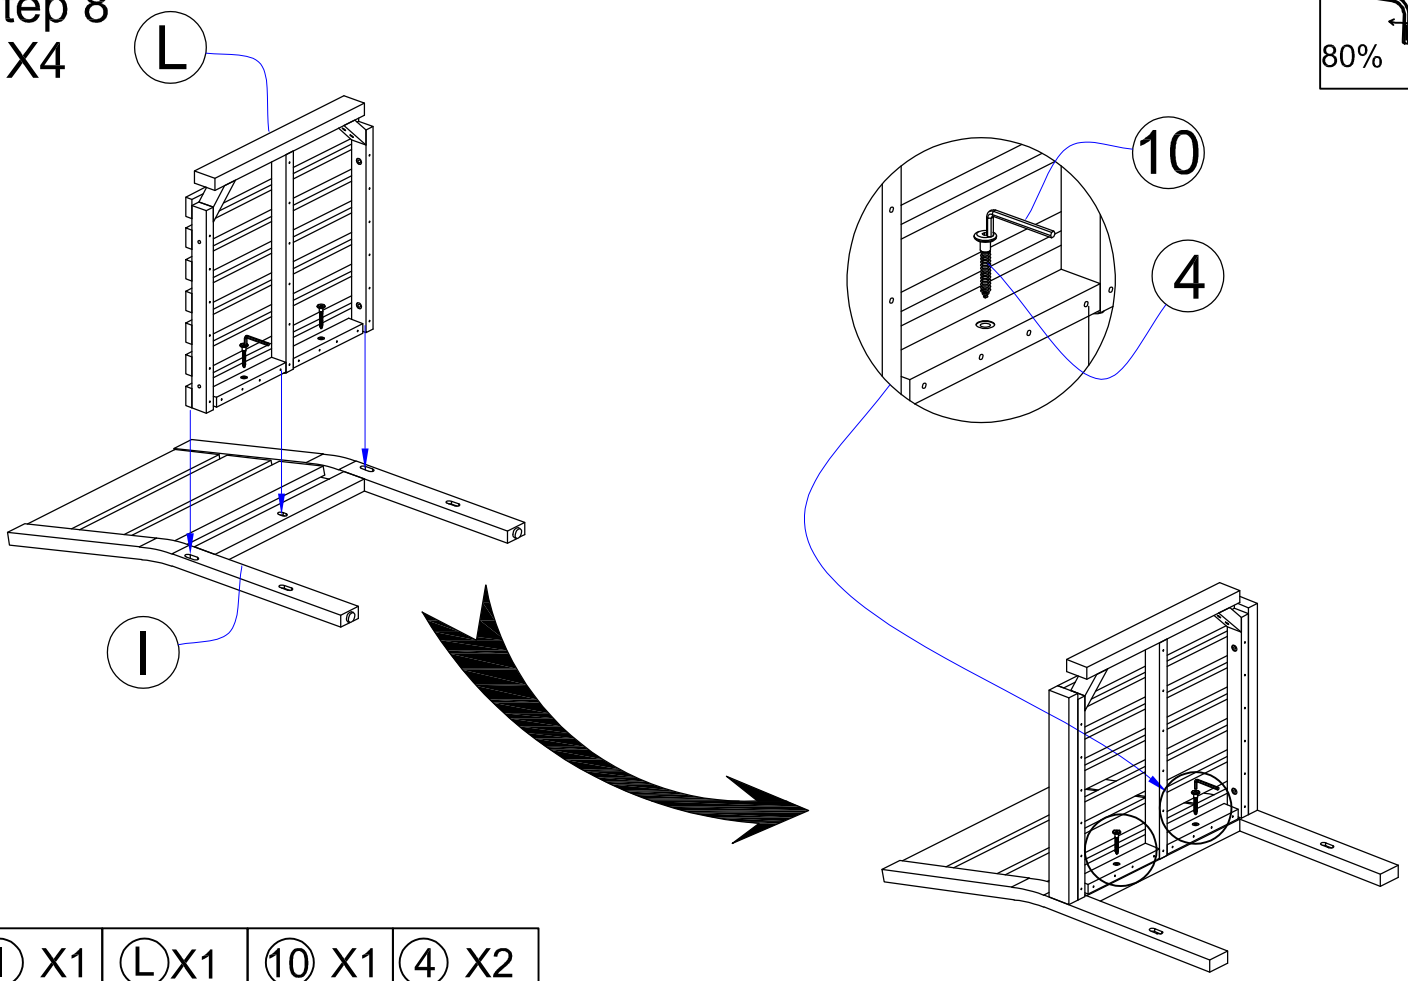Step 8
X4



I X1	L X1	10 X1	4 X2

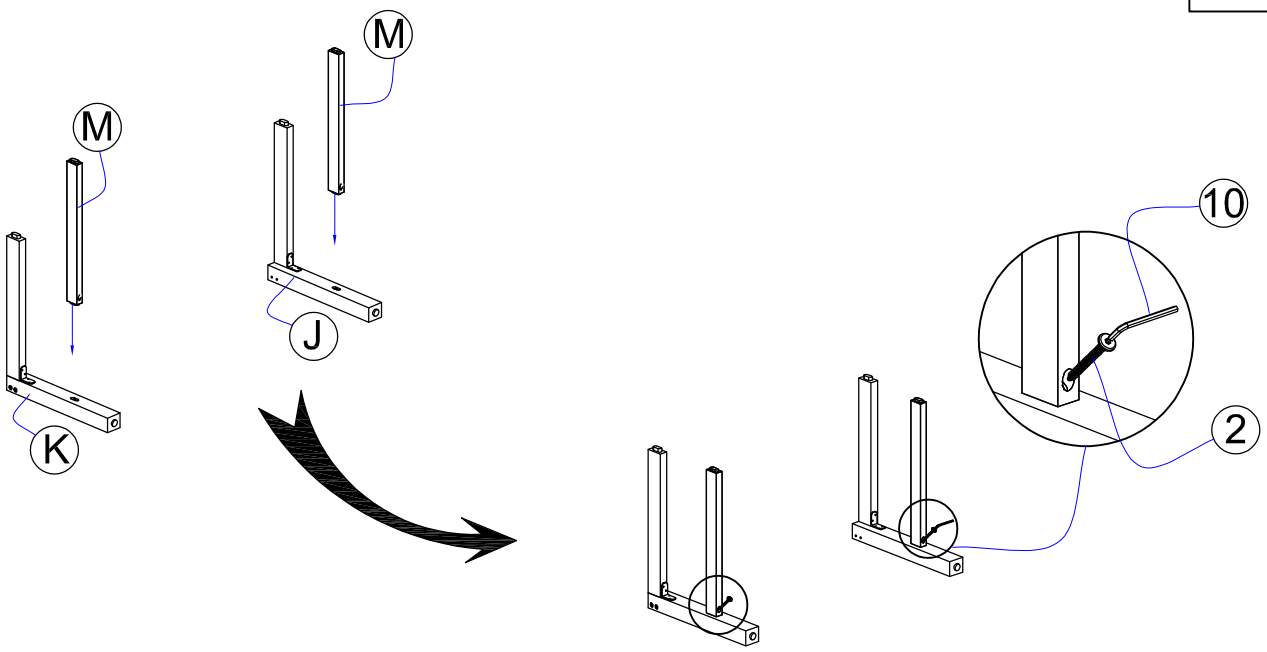
Step 9
X4



J X1	K X1	M X2	10 X1	2 X2

Step 10
X4

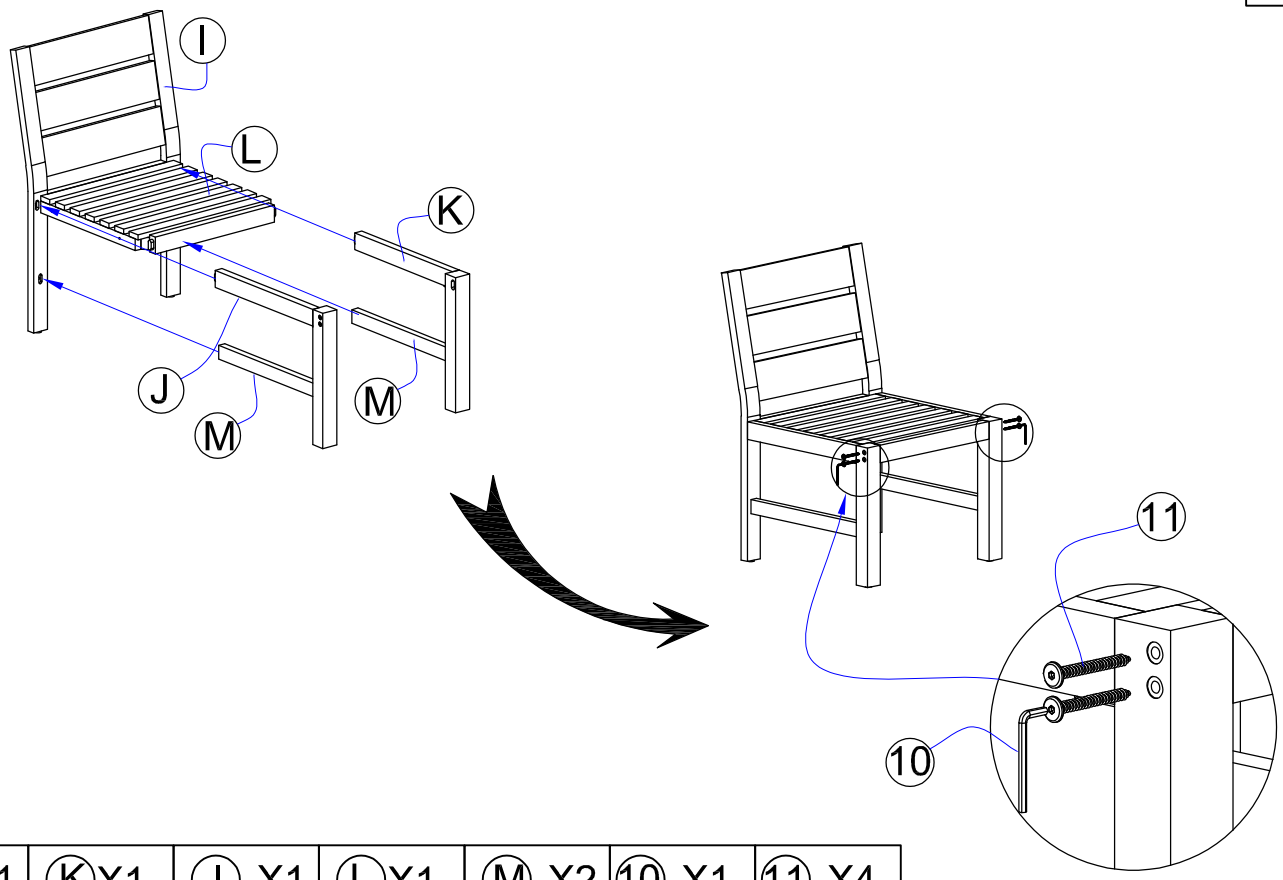
80%



J X1	K X1	I X1	L X1	M X2	10 X1	11 X4

Step 11
X4

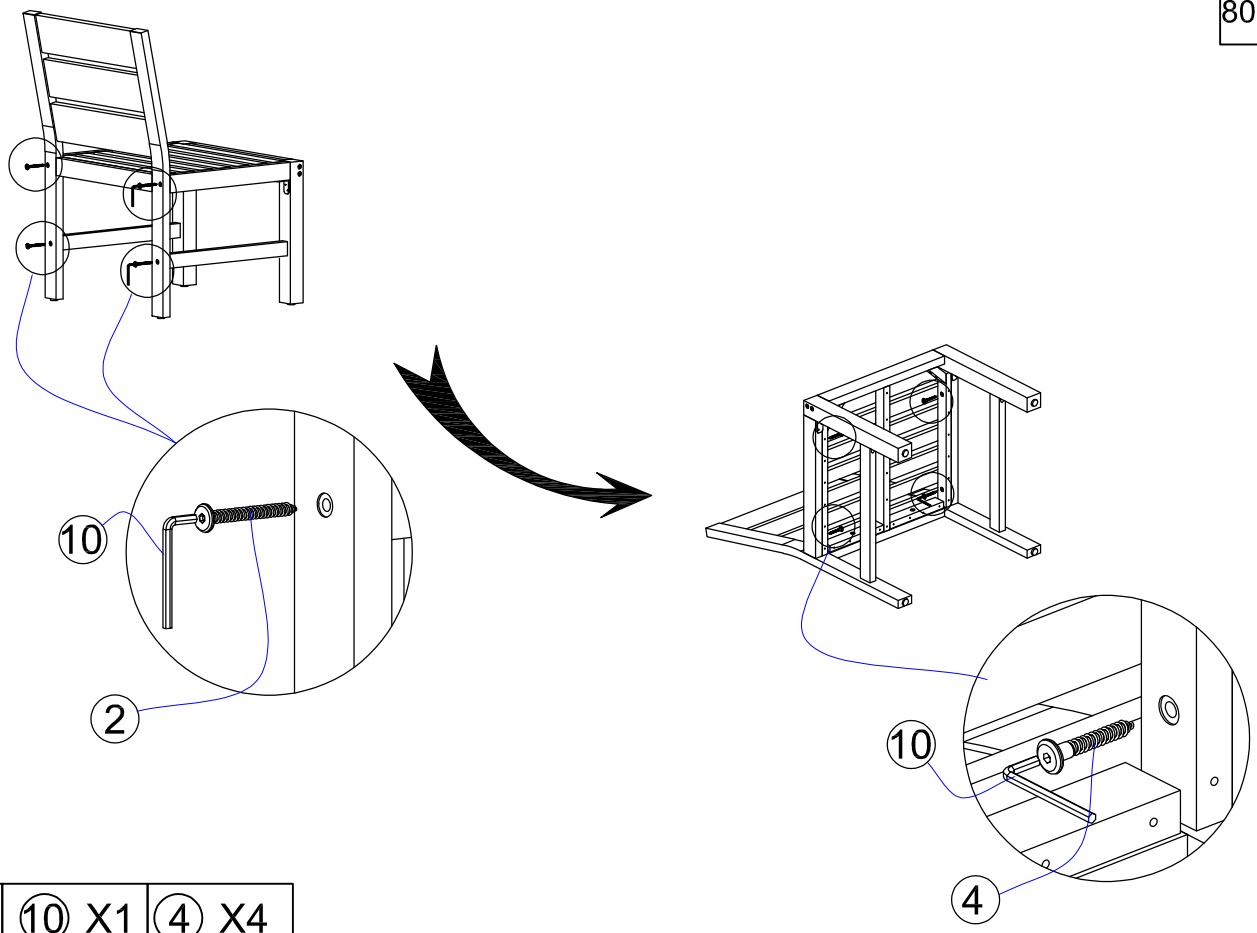
80%




2 X4	10 X1	4 X4


Step 12
X4

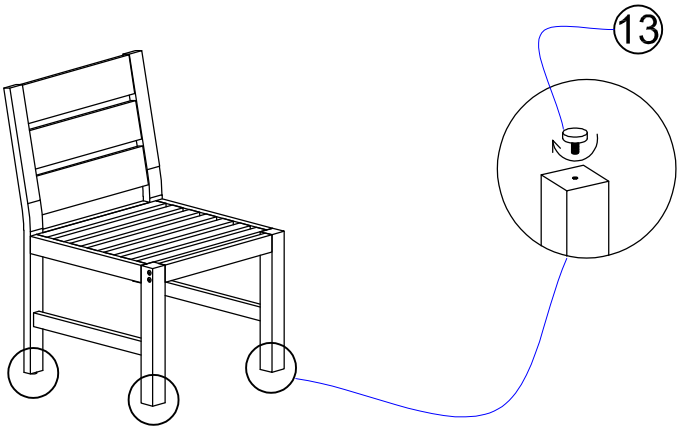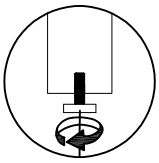80%





Adjust height for balance

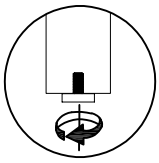


Adjust low for balance

Adjust Pre- installed Levellers
height for balance

13 X4

Step 13
X4

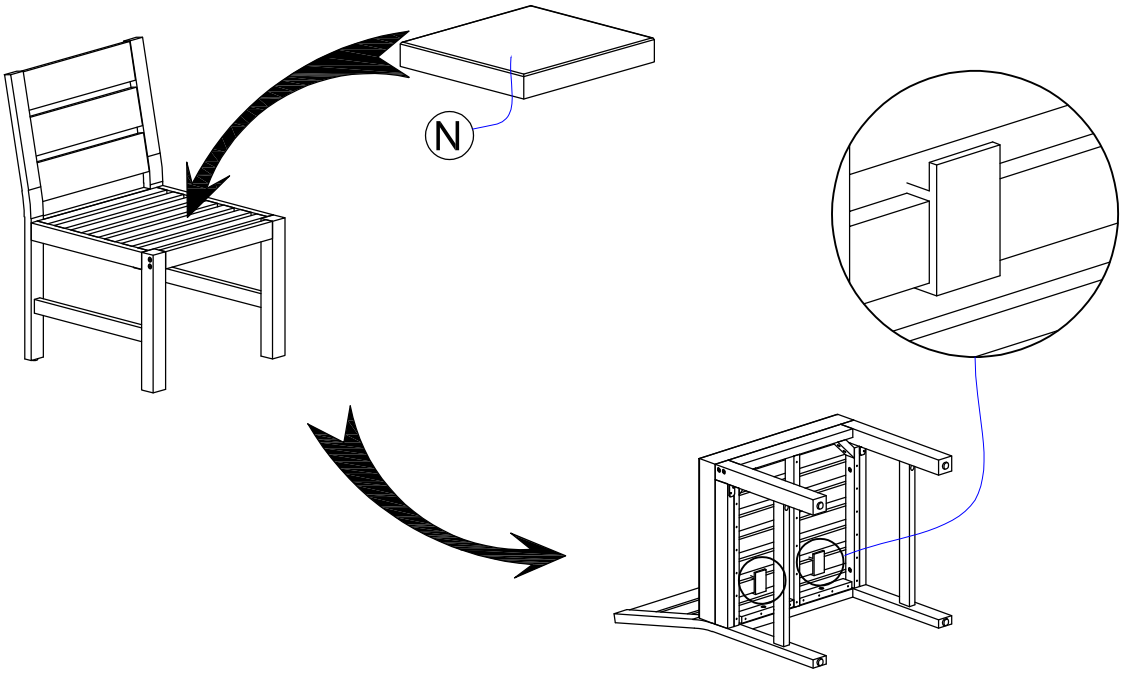100%



N X1

Step 14

X4

